

Nokia 2690 User Guide



XXXXXX
Issue 1



2 Contents

Contents	General information	16	
Safety	5	About your device 16	
Get started	7	Network services 17	
Insert SIM card and battery	7	Shared memory 18	
Remove the SIM card	8	Access codes 19	
Insert a microSD card	8	Nokia support 20	
Remove the microSD card	9	Calls	21
Charge the battery	10	Make and answer a call	21
Antenna	11	Loudspeaker	21
Headset	11	Dialling shortcuts	21
Magnets and magnetic fields	12	Write text	22
Keys and parts	12	Text modes	22
Switch on and off	13	Traditional text input	23
Standby mode	13	Predictive text input	23
Keypad lock	14	Navigate the menus	24
Functions without a SIM card	15	Messaging	24
Applications running in background	15	Text and multimedia messages	24
		E-mail	27



Contents 3

Flash messages	28	Restore factory settings	41
Nokia Xpress audio messages	29	Operator menu	42
Instant messaging	29	Gallery	42
Voice messages	30	Media	43
Message settings	30	Camera and video	43
Contacts	31	FM radio	45
Call log	32	Voice recorder	46
Settings	33	Music player	46
Profiles	33	Applications	47
Tones	33	Organiser	48
Display	34	Alarm clock	48
Date and time	34	Calendar and to-do list	49
Shortcuts	34	Web or Internet	49
Synchronisation and backup	35	Connect to a web service	50
Connectivity	35	SIM services	51
Calls and phone	38	Green tips	51
Voice commands and voice dialling	39		
Enhancements	40		
Configuration	40		

4 Contents

Save energy	51	Certification information	
Recycle	52	(SAR)	60
Learn more	52	Index	62
Accessories	53		
Battery	53		
Battery and charger information	53		
Nokia battery authentication guidelines	54		
Care and maintenance	56		
Recycle	57		
Additional safety information	57		
Small children	57		
Operating environment	57		
Medical devices	58		
Vehicles	58		
Potentially explosive environments	59		
Emergency calls	60		

Safety

Read these simple guidelines. Not following them may be dangerous or illegal. Read the complete user guide for further information.

SWITCH ON SAFELY



Do not switch the device on when wireless phone use is prohibited or when it may cause interference or danger.

ROAD SAFETY COMES FIRST



Obey all local laws. Always keep your hands free to operate the vehicle while driving. Your first consideration while driving should be road safety.

INTERFERENCE



All wireless devices may be susceptible to interference, which could affect performance.

SWITCH OFF IN RESTRICTED AREAS



Follow any restrictions. Switch the device off in aircraft, near medical equipment, fuel, chemicals, or blasting areas.



6 Safety

QUALIFIED SERVICE



Only qualified personnel may install or repair this product.

ACCESSORIES AND BATTERIES

 
 


Use only approved accessories and batteries. Do not connect incompatible products.

WATER-RESISTANCE



Your device is not water-resistant. Keep it dry.




Get started


Insert SIM card and battery

Safe removal. Always switch the device off and disconnect the charger before removing the battery.

 The SIM card and its contacts can be easily damaged by scratches or bending, so be careful when handling, inserting, or removing the card.

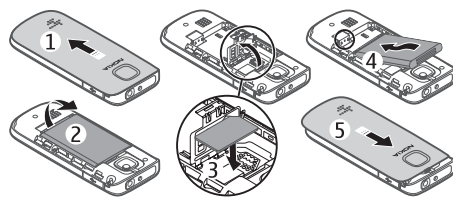

 - 1 Press and slide the back cover towards the bottom of the phone, and remove it (1).
- 2 Remove the battery (2).
- 3 Insert the SIM card into the holder with the contact surface facing down (3).
- 4 Insert the battery (4), and replace the back cover (5).



8 Get started

Remove the SIM card



 
Insert a microSD card

 
Use only compatible microSD cards approved by Nokia for use with this device. Nokia uses approved industry standards for memory cards, but some brands may not be fully compatible with this device. Incompatible cards may damage the card and the device and corrupt data stored on the card.



Your phone supports microSD cards with a capacity of up to 8 GB.

A compatible memory card may be supplied with the device, and may already be inserted in the device. If not, do the following:




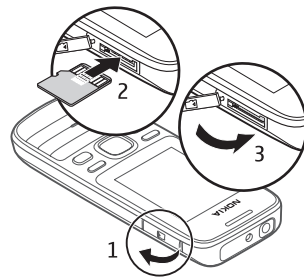

- 1 Open the cover of the memory card slot.
- 2 Insert the card into the memory card slot with the contact surface facing up, and press until it locks into place.
- 3 Close the cover of the memory card slot.


Remove the microSD card

 Important: Do not remove the memory card during an operation when the card is being accessed. Doing so may damage the memory card and the device, and corrupt data stored on the card.



10 Get started

 You can remove or replace the memory card during phone operation without switching the device off, but you need to ensure that no application is currently accessing the memory card.



Charge the battery

Your battery has been partially charged at the factory. If the device indicates a low charge, do the following:

- 1 Connect the charger to a wall outlet.



- 2

Connect the charger to the device.

- 3 When the device indicates a full charge, disconnect the charger from the device, then from the wall outlet.

You do not need to charge the battery for a specific length of time, and you can use the device while it is charging. If the battery is completely discharged, it may take several



minutes before the charging indicator appears on the display or before any calls can be made.

Antenna



Your device may have internal and external antennas. Avoid touching the antenna area unnecessarily while the antenna is transmitting or receiving. Contact with antennas affects the communication quality and may cause a higher power level during operation and may reduce the battery life.

The figure shows the antenna area marked in grey.

Headset

Warning: When you use the headset, your ability to hear outside sounds may be affected. Do not use the headset where it can endanger your safety.

When connecting any external device or any headset, other than those approved by Nokia for use with this device, to

12 Get started



the Nokia AV Connector, pay special attention to volume levels.

Do not connect products that create an output signal as this may cause damage to the device. Do not connect any voltage source to the Nokia AV Connector.


Magnets and magnetic fields

Keep your device away from magnets or magnetic fields.

Keys and parts

1	Earpiece	
2	Display	
3	Selection keys	
4	Navi™ key; hereafter referred to as scroll key	
5	Call key	
6	Keypad	
7	End/Power key 	

 Get started 13

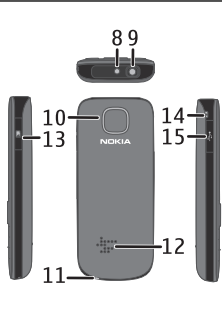
8	Charger connector	
9	Headset connector (3.5 mm)	
10	Camera lens	
11	Microphone	
12	Loudspeaker	
13	Memory card slot	
14	Wrist strap eyelet	
15	Micro USB connector	

Switch on and off


Press and hold the power key.

Standby mode

 When the phone is ready for use, and you have not entered any characters, the phone is in the standby mode.



14 Get started

 
1	Network signal strength	
2	Battery charge level	
3	Network name or operator logo	
4	Functions of selection keys	

The left selection key, **Go to**, allows you to access the functions in your personal shortcut list. When viewing the list, select **Options** > **Select options** to view the available functions, or select **Options** > **Organise** to arrange the functions in your shortcut list.

Keypad lock



 To prevent accidental keypresses, select **Menu**, and press * within 3.5 seconds to lock the keypad.





Get started 15

To unlock the keypad, select **Unlock**, and press * within 1.5 seconds. If the security keyguard is on, enter the security code when requested.

To set the keypad to lock automatically after a preset time when the phone is in the standby mode, select **Menu > Settings > Phone > Automatic keyguard > On**.

To answer a call when the keypad is locked, press the call key. When you end or reject the call, the keypad locks automatically.


 
When the device or keypad is locked, calls may be possible to the official emergency number programmed into your device.


Functions without a SIM card

Some functions of your phone may be used without inserting a SIM card, such as Organiser functions and games. Some functions appear dimmed in the menus and cannot be used.

Applications running in background

 Leaving applications running in the background increases the demand on battery power and reduces the battery life.





16 General information

General information

 
About your device

 
The wireless device described in this guide is approved for use on the (E)GSM 850, 900, 1800, and 1900 MHz networks. Contact your service provider for more information about networks.

When using the features in this device, obey all laws and respect local customs, privacy and legitimate rights of others, including copyrights.

Copyright protection may prevent some images, music, and other content from being copied, modified, or transferred.

Your device may have preinstalled bookmarks and links for third-party internet sites. You may also access other third-party sites through your device. Third-party sites are not affiliated with Nokia, and Nokia does not endorse or assume liability for them. If you choose to access such sites, you should take precautions for security or content.





General information 17

Warning:

To use any features in this device, other than the alarm clock, the device must be switched on. Do not switch the device on when wireless device use may cause interference or danger.



Remember to make back-up copies or keep a written record of all important information stored in your device.


When connecting to any other device, read its user guide for detailed safety instructions. Do not connect incompatible products.

The images in this guide may differ from your device display.

Network services

   To use the device you must have service from a wireless service provider. Many of the features require special network features. These features are not available on all networks; other networks may require that you make specific arrangements with your service provider before you can use the network services. Using network services involves transmission of data. Check with your service provider for details about fees in your home network and when roaming on other networks. Your service provider can give you instructions and explain what charges will





18 General information

apply. Some networks may have limitations that affect how you can use network services. For instance, some networks may not support all language-dependent characters and services.

Your service provider may have requested that certain features be disabled or not activated in your device. If so, these features will not appear on your device menu. Your device may also have a special configuration such as changes in menu names, menu order, and icons. Contact your service provider for more information.

This device supports WAP 2.0 protocols (HTTP and SSL) that run on TCP/IP protocols. Some features of this device, such as multimedia messaging (MMS), browsing, and e-mail application, require network support for these technologies.

Shared memory

The following features in this device may share memory: multimedia messaging (MMS), e-mail application, instant messaging. Use of one or more of these features may reduce the memory available for the remaining features sharing memory. Your device may display a message that the memory is full when you try to use a shared memory feature. In this case, delete some of the information or entries stored in the shared memory features before continuing.



 
Access codes

The security code helps to protect your device against unauthorised use. The preset code is 12345. You can create and change the code, and set the device to request the code. Keep the code secret and in a safe place separate from your device. If you forget the code and your device is locked, your device will require service. Additional charges may apply, and all the personal data in your device may be deleted. For more information, contact a Nokia Care point or your device dealer.

The PIN code supplied with the SIM card protects the card against unauthorised use. The PIN2 code supplied with some SIM cards is required to access certain services. If you enter the PIN or PIN2 code incorrectly three times in succession, you are asked for the PUK or PUK2 code. If you do not have them, contact your service provider.

The module PIN is required to access the information in the security module of your SIM card. The signing PIN may be required for the digital signature. The barring password is required when using the call barring service.

To set how your device uses the access codes and security settings, select **Menu > Settings > Security**.



20 General information

Nokia support

Check www.nokia.com/support or your local Nokia website for the latest version of this guide, additional information, downloads, and services related to your Nokia product.

Configuration settings service

Download free configuration settings such as MMS, GPRS, e-mail, and other services for your phone model at www.nokia.com/support.

Nokia PC Suite

You may find PC Suite and related information on the Nokia website at www.nokia.com/support.

Nokia Care services

NOKIA Care

If you need to contact Nokia Care services, check the list of local Nokia Care contact centres at www.nokia.com/customerservice.

Maintenance

For maintenance services, check your nearest Nokia Care point at www.nokia.com/repair.



Calls

Make and answer a call

To make a call, enter the phone number, including the country code and area code if necessary. Press the call key to call the number. Scroll up to increase or down to decrease the volume of the earpiece or headset during the phone call.

To answer an incoming call, press the call key. To reject the call without answering, press the end key.

Loudspeaker

If available, you may select **Loudsp.** or **Normal** to use the loudspeaker or the earpiece of the phone during a call.

Dialling shortcuts

To assign a phone number to one of the number keys, 2 to 9, select **Menu > Contacts > Speed dials**, scroll to a desired number, and select **Assign**. Enter the desired phone number, or select **Search** and a saved contact.



22 Write text



To switch the speed dialling function on, select **Menu > Settings > Call > Speed dialling > On**.

To make a call using speed dialling, in the standby mode, press and hold the desired number key.

Write text

Text modes

To enter text (for example, when writing messages) you can use traditional or predictive text input.

When you write text, press and hold **Options** to switch between traditional text input, indicated by , and predictive text input, indicated by . Not all languages are supported by predictive text input.

The character cases are indicated by **Abc**, **abc**, and **ABC**.

To change the character case, press **#**. To change from the letter to number mode, indicated by **123**, press and hold **#**, and select **Number mode**. To change from the number to the letter mode, press and hold **#**.

To set the writing language, select **Options > Writing language**.



Traditional text input

Press a number key, 2-9, repeatedly until the desired character appears. The available characters depend on the selected writing language.

If the next letter you want is located on the same key as the present one, wait until the cursor appears, and enter the letter.

 
To access the most common punctuation marks and special characters, press **1** repeatedly. To access the list of special characters, press *****.

Predictive text input

Predictive text input is based on a built-in dictionary to which you can also add new words.

- 1 Start writing a word, using the keys **2** to **9**. Press each key only once for one letter.
- 2 To confirm a word, scroll right or add a space.
 - If the word is not correct, press ***** repeatedly, and select the word from the list.
 - If the **?** character is displayed after the word, the word you intended to write is not in the dictionary. To add the word to the dictionary, select **Spell**. Enter the word using traditional text input, and select **Save**.





24 Navigate the menus

- To write compound words, enter the first part of the word, and scroll right to confirm it. Write the last part of the word, and confirm the word.

3 Start writing the next word.

Navigate the menus

The phone functions are grouped into menus. Not all menu functions or option items are described here.

 
In the standby mode, select **Menu** and the desired menu and submenu. Select **Exit** or **Back** to exit the current level of menu. Press the end key to return to the standby mode directly. To change the menu view, select **Menu > Options > Main menu view**.

Messaging

You can read, write, send, and save text, multimedia, audio, instant, and flash messages, and e-mail. The messaging services can only be used if your network or service provider supports them.

Text and multimedia messages

You can create a message and optionally attach, for example, a picture. Your phone automatically changes a



text message to a multimedia message when a file is attached.

Text messages

Your device supports text messages beyond the limit for a single message. Longer messages are sent as two or more messages. Your service provider may charge accordingly. Characters with accents, other marks, or some language options take more space, and limit the number of characters that can be sent in a single message.

An indicator at the top of the display shows the total number of characters left and the number of messages needed for sending.

 
Before you can send messages, you must save your message centre number. Select **Menu > Messaging > Message settings > Text messages > Message centres > Add centre**, enter a name, and the number from the service provider.

Multimedia messages

A multimedia message can contain text, pictures, and sound or video clips.

Only devices that have compatible features can receive and display multimedia messages. The appearance of a message may vary depending on the receiving device.





26 Messaging

The wireless network may limit the size of MMS messages. If the inserted picture exceeds this limit, the device may make it smaller so that it can be sent by MMS.

 
Important: Exercise caution when opening messages. Messages may contain malicious software or otherwise be harmful to your device or PC.

For availability and subscription to the multimedia messaging service (MMS), contact your service provider. You may also download the configuration settings. See "Nokia support", p. 20.

Create a text or multimedia message

- 1 Select **Menu** > **Messaging** > **Create message** > **Message**.
- 2 To add recipients, scroll to the **To:** field, and enter the recipient's number or e-mail address, or select **Add** to select recipients from the available options. Select **Options** to add recipients and subjects and to set sending options.
- 3 Scroll to the **Text:** field, and enter the message text.
- 4 To attach content to the message, scroll to the attachment bar at the bottom of the display and select the desired type of content.
- 5 To send the message, press **Send**.





Messaging 27

The message type is indicated at the top of the display and changes automatically depending on the content of the message.

Service providers may charge differently depending on the message type. Check with your service provider for details.

 
 
E-mail

 
Access your POP3 or IMAP4 e-mail account with your phone to read, write, and send e-mail. This e-mail application is different from the SMS e-mail function.

Before you can use e-mail, you must have an e-mail account and the correct settings. To check the availability and the settings of your e-mail account, contact your e-mail service provider. You may receive the e-mail configuration settings as a configuration message.

E-mail setup wizard

The e-mail setup wizard starts automatically if no e-mail settings are defined in the phone. To start the setup wizard for an additional e-mail account, select **Menu** > **Messaging** and the existing e-mail account. Select **Options** > **Add mailbox** to start the e-mail setup wizard. Follow the instructions on the display.





28 Messaging

Write and send an e-mail

To write an e-mail, select **Menu > Messaging > Create message > E-mail message**. To attach a file to the e-mail, select **Options > Insert**. To send the e-mail, press the call key. Select the desired account if necessary.

Download e-mail

Important: Exercise caution when opening messages. Messages may contain malicious software or otherwise be harmful to your device or PC.

To select the retrieve mode, select **Menu > Messaging > Message settings > E-mail messages > Edit mailboxes and the desired mailbox, and Downloading settings > Retrieve mode**.

To download e-mail, select **Menu > Messaging** and the desired mailbox; confirm the query for connection if necessary.

Flash messages

Flash messages are text messages that are instantly displayed upon reception.

- 1 To write a flash message, select **Menu > Messaging > Create message > Flash message**.



- 2 Enter the recipient's phone number, write your message (maximum 70 characters), and select **Send**.

Nokia Xpress audio messages

 
Create and send an audio message using MMS in a convenient way.

- 1 Select **Menu > Messaging > Create message > Audio message**. The voice recorder opens.
- 2 Record your message.
- 3 Enter one or more phone numbers in the **To:** field, or select **Add** to retrieve a number.
- 4 To send the message, select **Send**.

Instant messaging

With instant messaging (IM, network service) you can send short text messages to online users. You must subscribe to a service and register with the IM service you want to use. Check the availability of this service, pricing, and instructions with your service provider. The menus may vary depending on your IM provider.

To connect to the service, select **Menu > Messaging > Instant messages** and follow the instructions on the display.



30 Messaging

Voice messages

The voice mailbox is a network service to which you may need to subscribe. For more information, contact your service provider.

Call your voice mailbox

In the standby mode, press and hold **1**.

Edit voice mailbox number

Select **Menu > Messaging > Voice messages > Voice mailbox number**.

 
 
Message settings

 
Select **Menu > Messaging > Message settings** and from the following:

General settings — to save copies of sent messages in your phone, to overwrite old messages if the message memory becomes full, and to set up other preferences related to messages

Text messages — to allow delivery reports, to set up message centres for SMS and SMS e-mail, to select the type of character support, and to set up other preferences related to text messages

Multimedia msgs. — to allow delivery reports, to set up the appearance of multimedia messages, to allow the






reception of multimedia messages and advertisements, and to set up other preferences related to multimedia messages

E-mail messages — to allow e-mail reception, to set the image size in e-mail, and to set up other preferences related to e-mail

 
Service messages — to activate service messages and to set up preferences related to service messages

 
Contacts

Select Menu > Contacts.

You can save names and phone numbers in the phone memory and SIM card memory. In the phone memory, you can save contacts with numbers and text items. Names and numbers saved in the SIM card memory are indicated by .

To add a contact, select **Names > Options > Add new contact**. To add details to a contact, ensure that the memory in use is either **Phone** or **Phone and SIM**. Select **Names**, scroll to the name, and select **Details > Options > Add detail**.





32 Call log

To search for a contact, select **Names**, and scroll through the list of contacts or enter the first letters of the name.

To copy a contact between the phone memory and SIM card memory, select **Names**, scroll to the contact, and select **Options > Copy contact**. In the SIM card memory, you can save only one phone number for each name.

To select the SIM card or phone memory for your contacts, to select how the names and numbers in contacts are displayed, and to view the memory capacity for contacts, select **Settings**.

You can send and receive a person's contact information as a business card from a compatible device that supports the vCard standard. To send a business card, select **Names**, search for the contact whose information you want to send, and select **Details > Options > Send bus. card**.

Call log

To view the information on your calls, messages, data, and synchronisation, select **Menu > Log** and from the available options.



Note: The actual invoice for calls and services from your service provider may vary, depending on network features, rounding off for billing, taxes, and so forth.

Settings

Profiles

Your phone has various setting groups called profiles, which you can customise with ringing tones for different events and environments.

Select **Menu > Settings > Profiles**, the desired profile, and from the following options:

Activate — to activate the selected profile

 
Personalise — to change the profile settings

 
Timed — to set the profile to be active for a certain time. When the time set for the profile expires, the previous profile that was not timed becomes active.

Tones

You can change the tone settings of the selected active profile.

Select **Menu > Settings > Tones**. You can find the same settings in the **Profiles** menu.





34 Settings

Display

To view or adjust the wallpaper, font size, or other features related to the phone display, select **Menu > Settings > Display**.

Date and time

Select **Menu > Settings > Date and time**.

To set the date and time, select **Date and time settings**.

 
To set the formats for date and time, select **Date and time format settings**.

To set the phone to update the time and date automatically according to the current time zone, select **Auto-update of date & time (network service)**.

Shortcuts

With personal shortcuts, you can get quick access to frequently used phone functions. Select **Menu > Settings > My shortcuts**.

To allocate one phone function to the right or left selection key, select **Right selection key** or **Left selection key**.



To select shortcut functions for the scroll key, select **Navigation key**. Scroll to the desired direction, and select **Change** or **Assign** and a function from the list.

Synchronisation and backup

Select **Menu** > **Settings** > **Sync and backup** and from the following:

Phone switch — Synchronise or copy selected data between your phone and another phone using Bluetooth technology.

 
Create backup — Create a backup of selected data to the memory card or to an external device.

Restore from backup — Select a backup file stored on the memory card or on an external device and restore it to the phone. Select **Options** > **Details** for information about the selected backup file.

Data transfer — Synchronise or copy selected data between your phone and another device, PC, or network server (network service).

Connectivity

Your phone has several features that allow you to connect to other devices to transmit and receive data.



36 Settings

Bluetooth wireless technology


Bluetooth technology allows you to connect your phone, using radio waves, to a compatible Bluetooth device within 10 metres (32 feet).

 
This device is compliant with Bluetooth Specification 2.0 + EDR supporting the following profiles: generic access, hands-free, headset, object push, file transfer, dial-up networking, serial port, SIM access, generic object exchange, advanced audio distribution, audio video remote control, and generic audio video distribution. To ensure interoperability between other devices supporting Bluetooth technology, use Nokia approved accessories for this model. Check with the manufacturers of other devices to determine their compatibility with this device.

Features using Bluetooth technology increase the demand on battery power and reduce the battery life.

Set up a Bluetooth connection

Select **Menu** > **Settings** > **Connectivity** > **Bluetooth** and take the following steps:

- 1 Select **My phone's name** and enter a name for your phone.
- 2 To activate Bluetooth connectivity select **Bluetooth** > **On**.  indicates that Bluetooth is active.



- 3 To connect your phone with an audio enhancement, select **Connect to audio enhancements** and the device that you want to connect to.
- 4 To pair your phone with any Bluetooth device in range, select **Paired devices** > **Add new device**.
Scroll to a found device, and select **Add**.
Enter a passcode (up to 16 characters) on your phone and allow the connection on the other Bluetooth device.

If you are concerned about security, turn off the Bluetooth function, or set **My phone's visibility** to **Hidden**. Accept Bluetooth communication only from those you trust.

 
Packet data

General packet radio service (GPRS) is a network service that allows mobile phones to send and receive data over an internet protocol (IP)-based network.

To define how to use the service, select **Menu** > **Settings** > **Connectivity** > **Packet data** > **Packet data connection** and from the following options:

When needed — to establish the packet data connection when an application needs it. The connection is closed when the application is terminated.

Always online — to automatically connect to a packet data network when you switch the phone on



38 Settings

You can use your phone as a modem by connecting it to a compatible PC using Bluetooth technology. For details, see the Nokia PC Suite documentation.

Calls and phone

Select **Menu > Settings > Call**.

To divert your incoming calls, select **Call divert** (network service). For details, contact your service provider.

To make ten attempts to connect the call after an unsuccessful attempt, select **Automatic redial > On**.

To have the network notify you of an incoming call while you are in a call, select **Call waiting > Activate** (network service).

To set whether to show your number to the person you are calling, select **Send my caller ID** (network service).

To set the display language of your phone, select **Menu > Settings > Phone > Language settings > Phone language**.




Voice commands and voice dialling

Use your phone by saying a voice command, and make a phone call by saying a name saved in Contacts.

Voice commands and voice dialling are language-dependent. Voice recognition is not supported in all languages. To see which languages are supported, select **Menu > Settings > Phone > Language settings > Voice recognition language**. To set the recognition language, select the desired language.

 
Note: Using voice tags may be difficult in a noisy environment or during an emergency, so you should not rely solely upon voice dialling in all circumstances.

To train the voice recognition of your phone to your voice, select **Menu > Settings > Phone > Voice recognition > Voice recognition training**.

To activate a voice command for a function, select **Menu > Settings > Phone > Voice recognition > Voice commands**, a feature, and the function.  indicates that the voice command is activated.

To activate the voice command, select **Add**. To play the activated voice command, select **Playback**.

To manage the voice commands, scroll to a function, and select **Options**.



40 Settings

To use voice commands or voice dialling, in the standby mode, press and hold the right selection key. A short tone sounds, and **Speak now** is displayed. Speak the command or the name of the contact you want to dial. If the voice recognition is successful, a list of proposed matches is displayed. The phone plays the voice command of the first match on the list. If it is not the correct command, scroll to another entry.

Enhancements

 
This menu and its various options are shown only if the phone is or has been connected to a compatible mobile enhancement.

Select **Menu > Settings > Enhancements**. Select an enhancement, and an option depending on the enhancement.

Configuration

You can configure your phone with settings that are required for certain services. Your service provider may also send you these settings.

Select **Menu > Settings > Configuration** and from the following options:



Default configuration settings — to view the service providers saved in the phone and set a default service provider

Activate default in all applications — to activate the default configuration settings for supported applications

Preferred access point — to view the saved access points

Device manager settings — to allow or prevent the phone from receiving software updates. This option may not be available, depending on your phone.

 
Personal configuration settings — to manually add new personal accounts for various services and to activate or delete them. To add a new personal account, select **Add new** or **Options > Add new**. Select the service type, and enter the required parameters. To activate a personal account, scroll to it, and select **Options > Activate**.

Restore factory settings

To restore the phone back to factory conditions, select **Menu > Settings > Restore factory sett.** and from the following options:

Restore settings only — to reset all preference settings without deleting any personal data

Restore all — to reset all preference settings and delete all personal data, such as contacts, messages, media files and activation keys



42 Operator menu

Operator menu

 
Access a portal to services provided by your network operator. For more information, contact your network operator. The operator can update this menu with a service message.

 
Gallery

Your phone supports a digital rights management (DRM) system to protect acquired content. Always check the delivery terms of any content and activation key before acquiring them, as they may be subject to a fee.

Digital rights management

Content owners may use different types of digital rights management (DRM) technologies to protect their intellectual property, including copyrights. This device uses various types of DRM software to access DRM-protected content. With this device you can access content protected with WMDRM 10, OMA DRM 1.0, OMA DRM 1.0 forward lock, and OMA DRM 2.0. If certain DRM software fails to protect the content, content owners may ask that such DRM software's ability to access new DRM-protected content be revoked. Revocation may also prevent renewal of such DRM-protected content already in your device. Revocation of such DRM software does not affect the use





of content protected with other types of DRM or the use of non-DRM-protected content.

Digital rights management (DRM) protected content comes with an associated activation key that defines your rights to use the content.

If your device has OMA DRM-protected content, to back up both the activation keys and the content, use the backup feature of Nokia PC Suite.

If your device has WMDRM-protected content, both the activation keys and the content will be lost if the device memory is formatted. You may also lose the activation keys and the content if the files on your device get corrupted. Losing the activation keys or the content may limit your ability to use the same content on your device again. For more information, contact your service provider.


To view the folders, select **Menu > Gallery**.

Media

Camera and video

Your device supports an image capture resolution of 480x640 pixels .



 

44 Media

For faster operation when capturing an image, set the camera to use a lower resolution when a memory card is not inserted.

Capture an image

To use the still image function, select **Menu > Media > Camera**, or if the video function is activated, scroll left or right. To capture an image, select **Capture**.

To zoom in or out in camera mode, scroll up or down.

To activate the self-timer, or to capture images in a fast sequence, select **Options** and the appropriate option.

 
To set the image quality, image resolution, or preview time, select **Options > Settings**.

Record a video clip

To use the video function, select **Menu > Media > Video**. To start recording a video clip, select **Record**.

When recording, lower quality video can be recorded for a greater length of time. To change the quality settings, and to set the maximum length of the video clip, select





Menu > Media > Camera > Options > Settings > Video clip quality, or Video clip length.

FM radio

Select **Menu > Media > Radio** or, in the standby mode, press and hold *.

If you have already saved radio stations, scroll left or right to switch between stations, or press the corresponding number key of the memory location of a desired station.

 
To search for a neighbouring station, press and hold the scroll key left or right.

To save the station to which you are tuned, select **Options > Save station**.

To adjust the volume, scroll up or down.

To leave the radio playing in the background, press the end key. To close the radio, press and hold the end key.





46 Media

Voice recorder

To start recording, select **Menu > Media > Recorder** and the virtual record button on the display.

To listen to the latest recording, select **Options > Play last recorded**. To send the last recording using a multimedia message, select **Options > Send last recorded**.

Music player

Your phone includes a music player for listening to songs or other MP3 or AAC sound files.

Select **Menu > Media > Music player**.

To start or pause playing, press the middle selection key.

To skip to the beginning of the current song, scroll left.

To skip to the previous song, scroll left twice.

To skip to the next song, scroll right.

To rewind, press and hold the scroll key to the left.

To fast-forward, press and hold the scroll key to the right.



To adjust the volume, scroll up or down.

To mute or unmute the music player, press #.

To leave the music player playing in the background, press the end key. To close the music player, press and hold the end key.

Applications

 
Your phone software may include some games and Java applications specially designed for this Nokia phone.

Select **Menu > Applications**.

To launch a game or application, select **Games or Collection**. Scroll to a game or application, and select **Open**.

To view the amount of memory available for game and application installations, select **Options > Memory status**.

To download a game or application, select **Options > Downloads > Game downloads** or **App. downloads**. Your phone supports J2ME™ Java applications. Ensure that



48 **Organiser**

the application is compatible with your phone before downloading it.

Important: Only install and use applications and other software from trusted sources, such as applications that are Symbian Signed or have passed the Java Verified™ testing.

Downloaded applications may be saved in **Gallery** instead of **Applications**.

Organiser

Alarm clock

Select Menu > **Organiser** > **Alarm clock**.

 
To set the alarm on or off, select **Alarm**.

 
To set the time for the alarm, select **Alarm time**.

To set the phone to alert you on selected days of the week, select **Repeat**.

To select or personalise the alarm tone, select **Alarm tone**.

To set the time out for the snooze alert, select **Snooze timeout**.





Web or Internet 49

To stop the alarm, select **Stop**. If you let the phone continue to sound the alarm for a minute or select **Snooze**, the alarm stops for the snooze time-out, then resumes.

Calendar and to-do list

Select **Menu** > **Organiser** > **Calendar**. The current day is framed. If there are any notes set for the day, the day is in bold.

To make a calendar note, scroll to the date, and select **Options** > **Make a note**.

 
To view the day notes, select **View**. To delete all notes in the calendar, select **Options** > **Delete notes** > **All notes**.

To view the to-do list, select **Menu** > **Organiser** > **To-do list**. The to-do list is displayed and sorted by priority. To add, delete, or send a note, to mark the note as done, or to sort the to-do list by deadline, select **Options**.

Web or Internet

You can access various internet services with your phone browser. The appearance of the web pages may vary due to screen size. You may not be able to see all the details on the web pages.





50 Web or Internet

Depending on your phone, the web browsing function may be displayed as Web or Internet in the menu, hereafter referred to as Web.

Important: Use only services that you trust and that offer adequate security and protection against harmful software.

 
For the availability of these services, pricing, and instructions, contact your service provider.

 
You may receive the configuration settings required for browsing as a configuration message from your service provider.

Connect to a web service

To make a connection to the service, select **Menu > Web > Home**; or in the standby mode, press and hold **0**.

After you make a connection to the service, you can start browsing its pages. The function of the phone keys may vary in different services. Follow the text guides on the phone display. For more information, contact your service provider.





SIM services

Your SIM card may provide additional services. You can access this menu only if it is supported by your SIM card. The name and contents of the menu depend on the available services.

Green tips



 
Here are tips on how you can contribute to protecting the environment.

 
Save energy

When you have fully charged the battery and disconnected the charger from the device, remember to also unplug the charger from the wall outlet.

You do not need to charge your battery so often if you do the following:

- Close and disable applications, services, and connections when you are not using them.





52 Green tips

- Decrease the brightness of the screen.
- Set the device to enter the power saver mode after the minimum period of inactivity, if available in your device.
- Disable unnecessary sounds, such as keypad tones. Set the volume of your device to an average level.

Recycle

Did you remember to recycle your old device? 65-80% of the materials in a Nokia mobile phone can be recycled. Always return your used electronic products, batteries, and packaging materials to a dedicated collection point. By doing this, you help prevent uncontrolled waste disposal and promote the recycling of materials. Check how to recycle your Nokia products at www.nokia.com/werecycle or www.nokia.mobi/werecycle.

You may recycle the packaging and user guides at your local recycling scheme.

Learn more

For more information on the environmental attributes of your device, see www.nokia.com/ecodeclaration.



Accessories

Warning:
Use only batteries, chargers, and accessories approved by Nokia for use with this particular model. The use of any other types may invalidate any approval or warranty, and may be dangerous.

For availability of approved accessories, please check with your dealer. When you disconnect the power cord of any accessory, grasp and pull the plug, not the cord.

**Battery
Battery and charger information**

Your device is powered by a rechargeable battery. The battery intended for use with this device is BL-4C. Nokia may make additional battery models available for this device. This device is intended for use when supplied with power from the following chargers: AC-3. The exact charger model number may vary depending on the type of plug. The plug variant is identified by one of the following: E, EB, X, AR, U, A, C, or UB.

The battery can be charged and discharged hundreds of times, but it will eventually wear out. When the talk and

 
standby times are noticeably shorter than normal, replace the battery. Use only Nokia approved batteries, and recharge your battery only with Nokia approved chargers designated for this device. Use of an unapproved battery or charger may present a risk of fire, explosion, leakage, or other hazard.

If a battery is being used for the first time or if the battery has not been used for a prolonged period, it may be necessary to connect the charger, then disconnect and reconnect it to begin charging the battery. If the battery is completely discharged, it may take several minutes before the charging indicator appears on the display or before any calls can be made.

Always switch the device off and disconnect the charger before removing the battery.

Unplug the charger from the electrical plug and the device when not in use. Do not leave a fully charged battery connected to a charger, since overcharging may shorten its lifetime. If left unused, a fully charged battery will lose its charge over time.

Always try to keep the battery between 15°C and 25°C (59°F and 77°F). Extreme temperatures reduce the capacity and



54 Battery

lifetime of the battery. A device with a hot or cold battery may not work temporarily. Battery performance is particularly limited in temperatures well below freezing.

Do not short-circuit the battery. Accidental short-circuiting can occur when a metallic object such as a coin, clip, or pen causes direct connection of the positive (+) and negative (-) terminals of the battery. (These look like metal strips on the battery.) This might happen, for example, when you carry a spare battery in your pocket or purse. Short-circuiting the terminals may damage the battery or the connecting object.

Do not dispose of batteries in a fire as they may explode. Batteries may also explode if damaged. Dispose of batteries according to local regulations. Please recycle when possible. Do not dispose as household waste.

Do not dismantle, cut, open, crush, bend, deform, puncture, or shred cells or batteries. In the event of a battery leak, do not allow the liquid to come in contact with the skin or eyes. In the event of such a leak, flush your skin or eyes immediately with water, or seek medical help.

Do not modify, remanufacture, attempt to insert foreign objects into the battery, or immerse or expose it to water or other liquids.

 
Improper battery use may result in a fire, explosion, or other hazard. If the device or battery is dropped, especially on a hard surface, and you believe the battery has been damaged, take it to a service centre for inspection before continuing to use it.

Use the battery only for its intended purpose. Never use any charger or battery that is damaged. Keep your battery out of the reach of small children.

Nokia battery authentication guidelines

Always use original Nokia batteries for your safety. To check that you are getting an original Nokia battery, purchase it from a Nokia authorised service centre or dealer, and inspect the hologram label using the following steps:

Successful completion of the steps is not a total assurance of the authenticity of the battery. If you have any reason to believe that your battery is not an authentic, original Nokia battery, you should refrain from using it, and take it




to the nearest Nokia authorised service centre or dealer for assistance. If authenticity cannot be verified, return the battery to the place of purchase.

Authenticate hologram

- 1 When you look at the hologram on the label, you should see the Nokia connecting hands symbol from one angle and the Nokia Original Enhancements logo when looking from another angle.



 
- 2 When you angle the hologram left, right, down and up, you should see 1, 2, 3 and 4 dots on each side respectively.

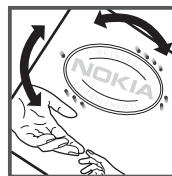

What if your battery is not authentic?

If you cannot confirm that your Nokia battery with the hologram on the label is an authentic Nokia battery, please do not use the battery. Take it to the nearest Nokia authorised service centre or dealer for assistance. The use of a battery that is not approved by Nokia may be dangerous and may result in poor performance and damage to your device and its accessories. It may also invalidate any approval or warranty applying to the device.

 To find out more about original Nokia batteries, see www.nokia.com/battery.




56 Care and maintenance

Care and maintenance

Your device is a product of superior design and craftsmanship and should be treated with care. The following suggestions will help you protect your warranty coverage.

- Keep the device dry. Precipitation, humidity, and all types of liquids or moisture can contain minerals that will corrode electronic circuits. If your device does get wet, remove the battery, and allow the device to dry completely before replacing it.
- Use a soft, clean, dry cloth to clean any lenses, such as camera, proximity sensor, and light sensor lenses.
- Do not use or store the device in dusty, dirty areas. Its moving parts and electronic components can be damaged.
- Do not store the device in hot areas. High temperatures can shorten the life of electronic devices, damage batteries, and warp or melt certain plastics.
- Do not store the device in cold areas. When the device returns to its normal temperature, moisture can form inside the device and damage electronic circuit boards.
- Do not attempt to open the device other than as instructed in this guide.
- Do not drop, knock, or shake the device. Rough handling can break internal circuit boards and fine mechanics.
- Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the device.
- Do not paint the device. Paint can clog the moving parts and prevent proper operation.
- Use only the supplied or an approved replacement antenna. Unauthorised antennas, modifications, or attachments could damage the device and may violate regulations governing radio devices.
- Use chargers indoors.
- Always create a backup of data you want to keep, such as contacts and calendar notes.
- To reset the device from time to time for optimum performance, power off the device and remove the battery.

 These suggestions apply equally to your device, battery, charger, or any accessory. If any device is not working



Additional safety information 57

properly, take it to the nearest authorised service facility for service.

Recycle

Always return your used electronic products, batteries, and packaging materials to a dedicated collection point. This way you help prevent uncontrolled waste disposal and promote the recycling of materials. More detailed information is available from the product retailer, local waste authorities, national producer responsibility organisations, or your local Nokia representative. Check how to recycle your Nokia products at www.nokia.com/werecycle, or if browsing on a mobile device, www.nokia.mobi/werecycle.



The crossed-out wheeled-bin symbol on your product, battery, literature, or packaging reminds you that all electrical and electronic products, batteries, and accumulators must be taken to separate collection at the end of their working life. This requirement applies in the European Union. Do not dispose of these products as unsorted municipal waste. For more environmental information,

see the product Eco-Declarations at www.nokia.com/environment.

Additional safety information

The surface of this device is nickel-free.

Small children

 
Your device and its accessories may contain small parts. Keep them out of the reach of small children.

 
Operating environment

This device meets RF exposure guidelines when used either in the normal use position against the ear or when positioned at least 1.5 centimetres (5/8 inch) away from the body. When a carry case, belt clip, or holder is used for body-worn operation, it should not contain metal and should position the device the above-stated distance from your body.

To transmit data files or messages, this device requires a quality connection to the network. In some cases, transmission of data files or messages may be delayed until such a connection is available. Ensure the above separation distance instructions are followed until the transmission is completed.

Parts of the device are magnetic. Metallic materials may be attracted to





58 Additional safety information

the device. Do not place credit cards or other magnetic storage media near the device, because information stored on them may be erased.

Medical devices

Operation of any radio transmitting equipment, including wireless phones, may interfere with the functionality of inadequately protected medical devices. Consult a physician or the manufacturer of the medical device to determine if they are adequately shielded from external RF energy or if you have any questions. Switch off your device in health care facilities when any regulations posted in these areas instruct you to do so. Hospitals or health care facilities may be using equipment that could be sensitive to external RF energy.

Implanted medical devices

Manufacturers of medical devices recommend that a minimum separation of 15.3 centimetres (6 inches) should be maintained between a wireless device and an implanted medical device, such as a pacemaker or implanted cardioverter defibrillator, to avoid potential interference with the medical device. Persons who have such devices should:

- Always keep the wireless device more than 15.3 centimetres (6 inches) from the medical device when the wireless device is turned on.
- Not carry the wireless device in a breast pocket.
- Hold the wireless device to the ear opposite the medical device to minimise the potential for interference.
- Turn the wireless device off immediately if there is any reason to suspect that interference is taking place.
- Read and follow the directions from the manufacturer of their implanted medical device.

 
If you have any questions about using your wireless device with an implanted medical device, consult your health care provider.

 
Hearing aids

Some digital wireless devices may interfere with some hearing aids. If interference occurs, consult your service provider.

Vehicles

RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles





Additional safety information 59

such as electronic fuel injection systems, electronic antiskid (antilock) braking systems, electronic speed control systems, and air bag systems. For more information, check with the manufacturer, or its representative, of your vehicle or any equipment that has been added.

 
Only qualified personnel should service the device or install the device in a vehicle. Faulty installation or service may be dangerous and may invalidate any warranty that may apply to the device. Check regularly that all wireless device equipment in your vehicle is mounted and operating properly. Do not store or carry flammable liquids, gases, or explosive materials in the same compartment as the device, its parts, or accessories. For vehicles equipped with an air bag, remember that air bags inflate with great force. Do not place objects, including installed or portable wireless equipment in the area over the air bag or in the air bag deployment area. If in-vehicle wireless equipment is improperly installed and the air bag inflates, serious injury could result.

Using your device while flying in aircraft is prohibited. Switch off your device before boarding an aircraft. The use of wireless teledevices in an aircraft may

be dangerous to the operation of the aircraft, disrupt the wireless telephone network, and may be illegal.

Potentially explosive environments

Switch off your device when in any area with a potentially explosive atmosphere, and obey all signs and instructions. Potentially explosive atmospheres include areas where you would normally be advised to turn off your vehicle engine. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death. Switch off the device at refuelling points such as near gas pumps at service stations. Observe restrictions on the use of radio equipment in fuel depots, storage, and distribution areas; chemical plants; or where blasting operations are in progress. Areas with a potentially explosive atmosphere are often, but not always, clearly marked. They include below deck on boats, chemical transfer or storage facilities and areas where the air contains chemicals or particles such as grain, dust, or metal powders. You should check with the manufacturers of vehicles using liquefied petroleum gas (such as propane or butane) to determine if this device can be safely used in their vicinity.





60 Additional safety information

Emergency calls

Important: This device operates using radio signals, wireless networks, landline networks, and user-programmed functions. If your device supports voice calls over the internet (Internet calls), activate both the internet calls and the cellular phone. The device will attempt to make emergency calls over both the cellular networks and through your internet call provider if both are activated. Connections in all conditions cannot be guaranteed. You should never rely solely on any wireless device for essential communications like medical emergencies.

To make an emergency call:

- 1 If the device is not on, switch it on. Check for adequate signal strength. Depending on your device, you may also need to complete the following:
 - Insert a SIM card if your device uses one.
 - Remove certain call restrictions you have activated in your device.
 - Change your profile from offline or flight profile mode to an active profile.

- 2 Press the end key as many times as needed to clear the display and ready the device for calls.
- 3 Enter the official emergency number for your present location. Emergency numbers vary by location.
- 4 Press the call key.

 
 
When making an emergency call, give all the necessary information as accurately as possible. Your wireless device may be the only means of communication at the scene of an accident. Do not end the call until given permission to do so.

 
Certification information (SAR)

This mobile device meets guidelines for exposure to radio waves.

Your mobile device is a radio transmitter and receiver. It is designed not to exceed the limits for exposure to radio waves recommended by international guidelines. These guidelines were developed by the independent scientific organisation ICNIRP and include safety margins designed to assure the protection of all persons, regardless of age and health.

The exposure guidelines for mobile devices employ a unit of measurement known as the Specific Absorption Rate





Additional safety information 61

or SAR. The SAR limit stated in the ICNIRP guidelines is 2.0 watts/kilogram (W/kg) averaged over 10 grams of tissue. Tests for SAR are conducted using standard operating positions with the device transmitting at its highest certified power level in all tested frequency bands. The actual SAR level of an operating device can be below the maximum value because the device is designed to use only the power required to reach the network. That amount changes depending on a number of factors such as how close you are to a network base station. The highest SAR value under the ICNIRP guidelines for use of the device at the ear is 0.66 W/kg.

value reported under this standard during product certification for use at the ear is 0.78 W/kg and when properly worn on the body is 0.81 W/kg.




Use of device accessories may result in different SAR values. SAR values may vary depending on national reporting and testing requirements and the network band. Additional SAR information may be provided under product information at www.nokia.com.

Your mobile device is also designed to meet the requirements for exposure to radio waves established by the Federal Communications Commission (USA) and Industry Canada. These requirements set a SAR limit of 1.6 W/kg averaged over one gram of tissue. The highest SAR





62 Index

Index	
A	
access codes	19
applications	47
audio messages	29
B	
battery	
— charging	10
browser	49
C	
call log	32
calls	21
configuration	40
D	
display	34
E	
e-mail	27
enhancements	40
F	
flash messages	28
G	
games	47
H	
headset	11
I	
IM	29
instant messaging	29
internet	49
K	
keyguard	14
keypad lock	14
keys	12
M	
memory card	8
message centre	
number	25
messaging	24
— audio messages	29
microSD card	8

 

Index 63

N		SIM card 7, 15	
Nokia Care	20	SIM card, removing	8
number mode	22	speed dialling	21
O		T	
offline mode	15	text modes	22
operator menu	42	tones	33
organiser	48	traditional text input	23
P		V	
passwords	19	voice commands	39
PIN code	19	voice dialling	39
predictive text input	23	voice recognition	39
profiles	33	voice recorder	46
S		W	
security code	19	web	49
settings	33	write text	22
— configuration	40		
— date	34		
— display	34		
— factory	41		
— phone	38		
— time	34		
— tones	33		
shortcuts	34		

 

DECLARATION OF CONFORMITY

CE 0434

Hereby, NOKIA CORPORATION declares that this RM-635 product is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC. A copy of the Declaration of Conformity can be found at www.nokia.com/phones/declaration_of_conformity/.

© 2009 Nokia. All rights reserved.

Nokia, Nokia Connecting People, and Navi are trademarks or registered trademarks of Nokia Corporation. Nokia tune is a sound mark of Nokia Corporation. Other product and company names mentioned herein may be trademarks or tradenames of their respective owners.

Reproduction, transfer, distribution, or storage of part or all of the contents in this document in any form without the prior written permission of Nokia is prohibited. Nokia operates a policy of continuous development. Nokia reserves the right to make changes and improvements to any of the products described in this document without prior notice.



Includes RSA BSAFE cryptographic or security protocol software from RSA Security.



Java is a trademark of Sun Microsystems, Inc.

This product is licensed under the MPEG-4 Visual Patent Portfolio License (i) for personal and noncommercial use in connection with information which has been encoded in compliance with the MPEG-4 Visual Standard by a consumer engaged in a personal and noncommercial activity and (ii) for use in connection with MPEG-4 video provided by a licensed video provider. No license is granted or shall be implied for any other use. Additional information, including that related to promotional, internal, and commercial uses, may be obtained from MPEG LA, LLC. See <http://www.mpegla.com>.

TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, UNDER NO

CIRCUMSTANCES SHALL NOKIA OR ANY OF ITS LICENSORS BE RESPONSIBLE FOR ANY LOSS OF DATA OR INCOME OR ANY SPECIAL, INCIDENTAL, CONSEQUENTIAL OR INDIRECT DAMAGES HOWSOEVER CAUSED.

THE CONTENTS OF THIS DOCUMENT ARE PROVIDED "AS IS". EXCEPT AS REQUIRED BY APPLICABLE LAW, NO WARRANTIES OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE MADE IN RELATION TO THE ACCURACY, RELIABILITY OR CONTENTS OF THIS DOCUMENT. NOKIA RESERVES THE RIGHT TO REVISE THIS DOCUMENT OR WITHDRAW IT AT ANY TIME WITHOUT PRIOR NOTICE.

The availability of particular products and applications and services for these products may vary by region. Please check with your Nokia dealer for details and availability of language options.

This device may contain commodities, technology or software subject to export laws and regulations from the US and other countries. Diversion contrary to law is prohibited.

 
The third-party applications provided with your device may have been created and may be owned by persons or entities not affiliated with or related to Nokia. Nokia does not own the copyrights or intellectual property

rights to the third-party applications. As such, Nokia does not take any responsibility for end-user support, functionality of the applications, or the information in the applications or these materials. Nokia does not provide any warranty for the third-party applications. BY USING THE APPLICATIONS YOU ACKNOWLEDGE THAT THE APPLICATIONS ARE PROVIDED AS IS WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW. YOU FURTHER ACKNOWLEDGE THAT NEITHER NOKIA NOR ITS AFFILIATES MAKE ANY REPRESENTATIONS OR WARRANTIES, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO WARRANTIES OF TITLE, MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, OR THAT THE APPLICATIONS WILL NOT INFRINGE ANY THIRD-PARTY PATENTS, COPYRIGHTS, TRADEMARKS, OR OTHER RIGHTS.

FCC/INDUSTRY CANADA NOTICE

Your device may cause TV or radio interference (for example, when using a telephone in close proximity to receiving equipment). The FCC or Industry Canada can require you to stop using your telephone if such interference cannot be eliminated. If you require assistance, contact your local service facility. This device complies with part 15 of the FCC rules.





Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Any changes or modifications not expressly approved by Nokia could void the user's authority to operate this equipment.

xxxxxx/Issue 1 EN

