

Nokia C3-01m User Guide

FCC-Draft
Issue 1

Contents		Back up your pictures and other content to a memory card	14
Safety	5	China Mobile services	15
Get started	6	Telephone	15
Keys and parts	6	Make a call	15
Insert the SIM card and battery	6	View your missed calls	15
Insert or remove a memory card	7	Call the last dialled number	15
Charge the battery	7	Divert calls to your voice mailbox or another phone number	16
Charge the battery over USB	8	Save a number from a received call or message	16
GSM antenna	8	About internet calls	16
Attach a strap	8	Make an internet call	16
Switch it on	9	Make a conference call	17
Network services and costs	9	Allow calls only to certain numbers	17
Access codes	9	Prevent making or receiving calls	17
Switch the device on or off	9	Contacts	18
Lock the keys and screen	9	Save a name and phone number	18
Touch screen actions	10	Use speed dial	18
Touch screen settings	10	Send your contact information	19
Interactive home screen elements	11	Create a contact group	19
Change the volume of a call, song, or video	11	Move or copy contacts to your SIM card	19
Indicators	11	Phonebook manager	20
Copy contacts or pictures from your old device	11	Chinese text input	20
Functions without a SIM card	12	Writing language	20
Use your device offline	12	Switch between input methods	20
Flashlight	12	Pinyin input method	20
Device management	13	Stroke input method	21
Support	13	Phrase input	21
My Nokia	13	Activate predictive English text input	22
Update device software using your PC	13	Traditional text input	22
Restore original settings	13	Predictive text input	22
Organise files	13	Writing text tips	23
Synchronise your calendar and contacts with Ovi by Nokia	14		

Dictionary	23	Ovi by Nokia	35
Handwrite text	24	Access Nokia's Ovi services	36
Messaging	25	About Nokia Ovi Suite	36
Send a message	25	Install Nokia Ovi Suite on your PC	36
Send a message to a group of people	25	Ovi Player	37
Save an attachment	25	Time management	38
View a conversation	26	Change the time and date	38
Listen to voice messages	26	Set an alarm	38
Send an audio message	26	Snooze an alarm	38
Nokia Messaging mail and IM	27	Time your workout	38
About Nokia Messaging mail	27	Set the countdown timer	38
Sign in to a mail account	27	Calendar	39
Send a mail	27	Make a shopping list	39
Read and reply to mail	27	Lunar calendar	39
About Chat	27	Pictures and videos	40
Sign in to a chat service	28	Take a picture	40
Chat with your friends	28	Record a video	40
Hide the Chat application	28	Send a picture or video	41
Personalisation	29	Photos	41
About the home screen	29	Print a picture	41
Add a shortcut to the home screen	29	Music and audio	42
Add your important contacts to the home screen	29	Media player	42
Personalise the Go to menu	29	FM radio	43
Personalise the home screen	30	Use voice recorder	44
Change the look of your device	30	Monternet	45
Create your own profile	30	Web	45
Personalise your tones	30	About the web browser	45
Connectivity	31	Browse the web	45
Bluetooth	31	Clear browsing history	45
USB data cable	33	My favorites	46
Connect to a WLAN	34	Games and applications	47
Nokia's Ovi services	35	About games and applications	47
		Improve your gaming experience	47

4 Contents

Download a game or application	47
About Communities	47
Use the calculator	48
Convert currency and measurements	48
Protect your device	49
Lock your device	49
Password protect your memory card	49
Format a memory card	49
Prepare your device for recycling	49
Green tips	50
Save energy	50
Recycle	50
e100	51
Product and safety information	51
Index	58

Safety

Read these simple guidelines. Not following them may be dangerous or illegal. Read the complete user guide for further information.

SWITCH OFF IN RESTRICTED AREAS



Switch the device off when mobile phone use is not allowed or when it may cause interference or danger, for example, in aircraft, near medical equipment, fuel, chemicals, or blasting areas.

ROAD SAFETY COMES FIRST



Obey all local laws. Always keep your hands free to operate the vehicle while driving. Your first consideration while driving should be road safety.

INTERFERENCE



All wireless devices may be susceptible to interference, which could affect performance.

QUALIFIED SERVICE



Only qualified personnel may install or repair this product.

BATTERIES AND OTHER ACCESSORIES



Use only batteries, chargers and other accessories approved by Nokia for use with this device. Do not connect incompatible products.

KEEP YOUR DEVICE DRY



Your device is not water-resistant. Keep it dry.

 
PROTECT YOUR HEARING




Listen to a headset at a moderate level, and do not hold the device near your ear when the loudspeaker is in use.

Get started

Keys and parts

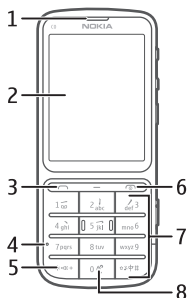

 - 1 Earpiece
- 2 Display
- 3 Call key
- 4 Microphone
- 5 Flashlight key. Press and hold to switch the flashlight on or off.
- 6 End key
- 7 Keypad
- 8 Shortcut to Monternet. Press and hold the key to access Monternet.

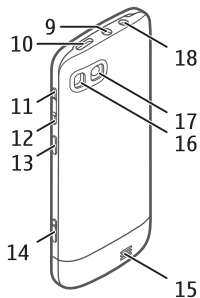

- 9 Nokia AV connector (3.5 mm)
- 10 Micro USB connector
- 11 Volume up key
- 12 Volume down key
- 13 Keylock button
- 14 Camera key
- 15 Loudspeaker
- 16 Camera flash
- 17 Camera lens
- 18 Charger connector

 
Insert the SIM card and battery

Note: Switch the device off and disconnect the charger and any other device before removing any covers. Avoid touching electronic components while changing any covers. Always store and use the device with any covers attached.


This device is intended for use with a BL-5CT battery. Always use original Nokia batteries.

The SIM card and its contacts can be easily damaged by scratches or bending, so be careful when handling, inserting, or removing the card.


- 1 Slide the cover, and remove it. If the battery is inserted, lift the battery out.

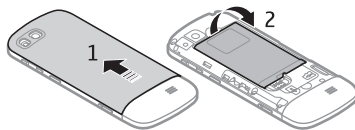

 - 2 Insert a SIM card. Make sure the contact area of the card is facing down.

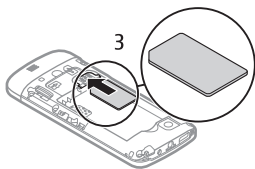

 - 3 Line up the contacts of the battery and the battery compartment, and insert the battery. To replace the back cover, direct the top locking catches toward their slots, and slide the cover, until it locks into place.

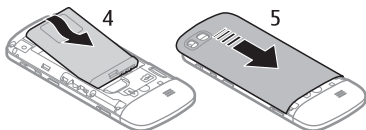


Insert or remove a memory card

Use only compatible memory cards approved by Nokia for use with this device. Incompatible cards may damage the card and the device and corrupt data stored on the card.

Your device supports memory cards with a capacity of up to 16 GB.

 Insert a memory card

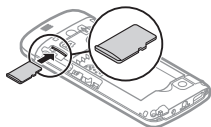

- 1 Remove the back cover.

- 2 Make sure the contact area of the card is facing down. Push the card in, until you hear a click.
- 3 Replace the back cover.

Remove the memory card

Important: Do not remove the memory card when an application is using it. Doing so may damage the memory card and the device, and corrupt data stored on the card.

 
You can remove or replace the memory card without switching the device off.

- 1 Remove the back cover.
- 2 Push the card in, until you hear a click, and pull the card out.
- 3 Replace the back cover.

Charge the battery

Your battery has been partially charged at the factory, but you may need to recharge it before you can switch on your device for the first time.

If the device indicates a low charge, do the following:

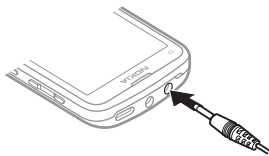

- 1 Connect the charger to a wall outlet.
- 2 Connect the charger to the device.
- 3 When the device indicates a full charge, disconnect the charger from the device, then from the wall outlet.

You do not need to charge the battery for a specific length of time, and you can use the device while it is charging.

If the battery is completely discharged, it may take several minutes before the charging indicator appears on the display or before any calls can be made.

 
If the battery has not been used for a long time, to begin charging, you may need to connect the charger, then disconnect and reconnect it.

Charging the device while listening to the radio may affect the quality of reception.

Charge the battery over USB

Battery low, but you don't have a charger with you? You can use a compatible USB cable to connect to a compatible device, such as a computer.


To avoid breaking the charger connector, be careful when connecting or disconnecting the charger cable.

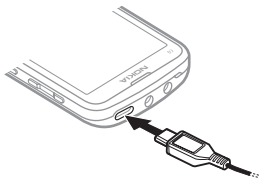

Charging over USB can take longer to start, and may not work if you connect through a non-powered USB hub. Your device charges more quickly when connected to a wall outlet.

If connected to a computer, you can synchronise your device while charging.

 
GSM antenna



The figure shows the GSM antenna area marked in grey.

Avoid touching the antenna area unnecessarily while the antenna is transmitting or receiving. Contact with antennas affects the communication quality and may cause a higher power level during operation and may reduce the battery life.

 Attach a strap

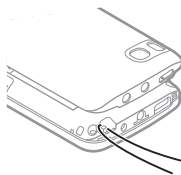

Switch it on

Network services and costs

Your device is approved for use on the GSM 850, 900, 1800, 1900 MHz networks. To use the device, you need a subscription with a service provider.

Using network services and downloading content to your device may result in data traffic costs. Some product features require support from the network, and you may need to subscribe to them.

Access codes

PIN code — This code protects your SIM card against unauthorised use. The PIN code (4 - 8 digits) is usually supplied with the SIM card.

PIN2 code — This code (4 - 8 digits) is supplied with some SIM cards, and is required to access some functions in your device.

If you forget an access code, contact the network service provider whose SIM card is in your device. After three consecutive incorrect PIN or PIN2 code entries, the code is blocked, and you need the PUK code to unblock it.


PUK code and PUK2 code — These codes (8 digits) are required to change a blocked PIN code or PIN2 code, respectively. If the codes are not supplied with the SIM card, contact the network service provider whose SIM card is in your device.

 
IMEI number — This number (15 or 17 digits) is used to identify valid devices in the GSM network. Devices that are, for example, stolen, can be blocked from accessing the network. The IMEI number

for your device can be found under the battery.

Lock code (also known as security code) — The lock code helps you to protect your device against unauthorised use. You can create and change the code, and set the device to request the code. Keep the new code secret and in a safe place separate from your device. If you forget the code and your device is locked, your device will require service. Additional charges may apply, and all the personal data in your device may be deleted. For more information, contact a Nokia Care Point or your device dealer.

Switch the device on or off

Press and hold the power key .

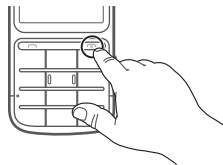


You may be prompted to get the configuration settings from your service provider (network service). For more information, contact your service provider.

Lock the keys and screen

To avoid accidentally making a call when your device is in your pocket or bag, lock the keys and screen of your device.

Press the keylock button .

Unlock the keys and screen

Press the keylock button , and select **Unlock**.

Touch screen actions

 
To interact with the touch screen user interface, tap or tap and hold the touch screen.

Open an application or other screen element

Tap the application or element.

Access item-specific options

Tap and hold the item. A pop-up menu with available options opens.

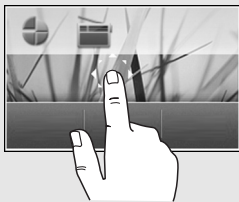


Scroll in a list or menu

Place your finger on the screen, slide it quickly up or down the screen, and then lift your finger. The content of the screen scrolls with the speed and direction it had at the moment of release. To select an item from a scrolling list and to stop the movement, tap the item.



Swipe

 Place a finger on the screen, and steadily slide your finger in the desired direction.

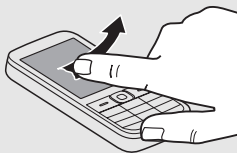

For example, when you are viewing a picture, to view the next picture, swipe left. To quickly browse through your pictures, swipe the screen quickly, and then scroll left or right through the thumbnails.

Touch screen settings

Calibrate the touch screen and activate vibration feedback.

Select **Menu > Settings > Phone > Touch settings**.

Calibrate the touch screen

Select **Scr. calibration**, and follow the instructions.

Activate vibration feedback

Select **Vibration feedb.** > **On**.

When you tap an icon, the device gives a short vibration feedback.

Interactive home screen elements

The home screen elements are interactive. For example, you can change the date and time, set alarms, or write calendar entries directly in the home screen.

**Set an alarm**

Select the clock (1).

View or edit your schedule

Select the date (2).

Change the volume of a call, song, or video

Use the volume keys.

The built-in loudspeaker allows you to speak and listen from a short distance without having to hold the device to your ear.

Activate the loudspeaker during a call

Select **Loudsp..**

Indicators

You have unread messages.



You have unsent, cancelled, or failed messages.



The keypad is locked.



The device does not ring for incoming calls or text messages.



An alarm is set.



The device is registered to the GPRS or EGPRS network.



A GPRS or EGPRS connection is open.



The GPRS or EGPRS connection is suspended (on hold).



Bluetooth is activated.



WLAN is activated.



All incoming calls are diverted to another number.



Calls are limited to a closed user group.



The currently active profile is timed.



A headset is connected to the device.



 
The device is connected to another device, using a USB data cable.

Copy contacts or pictures from your old device

Want to copy important information from your previous compatible Nokia device and start using your new device quickly?

Use the Phone switch application to copy, for example, contacts, calendar entries, and pictures to your new device, free of charge.

Select **Menu** > **Settings** > **Sync & backup**.

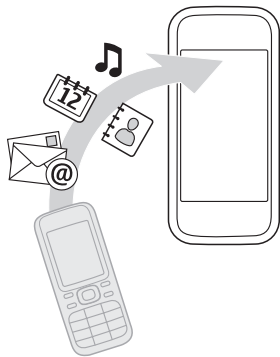

Both devices must have Bluetooth activated.

- 1 Select **Phone switch** > **Copy to this**.
- 2 Select the content to copy and **Done**.
- 3 Select your previous device from the list. If the device is not listed, make sure Bluetooth is activated in the device.
- 4 If the other device requires a passcode, enter the passcode. The passcode, which you can define yourself, must be entered in both devices. The passcode in some devices is fixed. For details, see the user guide of the device.
The passcode is valid only for the current connection.
- 5 If prompted, allow connection and copying requests.

Functions without a SIM card

Some functions of your device may be used without inserting a SIM card, such as

Organiser functions and games. Some functions appear dimmed in the menus and cannot be used.

Use your device offline

In places where you are not allowed to make or receive calls, you can activate the flight profile and play games or listen to music.

Select **Menu** > **Settings** > **Profiles**.

Select **Flight** > **Activate**.

➔ indicates that the flight profile is active.

Tip: You can add a profiles shortcut to the shortcut widget in the home screen.

Warning:

When the flight profile is activated, you cannot make or receive any calls, including emergency calls, or use other features that require network coverage. To make a call, activate another profile.

Flashlight

The camera flash can be used as a flashlight. To switch the flashlight on or off, in the home screen, press and hold *Ⓜ+.

Do not shine the flashlight in anyone's eyes.

Device management

Support

When you want to learn more about how to use your product or you are unsure how your device should function, go to www.nokia.com/support, or using a mobile device, nokia.mobi/support.

If this does not resolve your issue, do one of the following:

- Reboot your device. Switch off the device, and remove the battery. After about a minute, replace the battery, and switch on the device.
- Restore the original factory settings.
- Update your device software.

If your issue remains unsolved, contact Nokia for repair options. Go to www.nokia.com/repair, or in Latin America, www.nokia-latinoamerica.com/centrosdeservicio. Before sending your device for repair, always back up the data in your device.

My Nokia

Select **Menu > Applications > Extras > Collection > My Nokia**.

My Nokia is a free service that regularly sends you text messages containing tips, tricks, and support for your Nokia device. It also allows you to browse the My Nokia site where you can find details about Nokia devices and download tones, graphics, games, and applications.

To use the My Nokia service, it must be available in your country and supported by your service provider. You must sign up

to use the service. Text message charges apply when you send messages to sign up or unsubscribe. For terms and conditions, see the documentation supplied with your device, or go to www.nokia.com/mynokia.

Update device software using your PC

You can use the Nokia Software Updater PC application to update your device software. To update your device software, you need a compatible PC, a high-speed internet connection, and a compatible USB data cable to connect your device to the PC.

To get more information and to download the Nokia Software Updater application, go to www.nokia.com/softwareupdate, or in Latin America, www.nokia-latinoamerica.com/nsu.

Restore original settings

If your device is not working properly, you can reset some settings to their original values.

- 1 End all calls and connections.
- 2 Select **Menu > Settings and Rest. fact. sett. > Settings only**.
- 3 Enter the security code.

This does not affect documents or files stored on your device.

After restoring the original settings, your device switches off and then on again. This may take longer than usual.

Organise files

You can move, copy, delete, or create new files and folders in your device memory or

on the memory card. If you organise your files into their own folders, it might help you find the files in future.

Select **Menu > Applications > Gallery**.

Create a new folder

In the folder where you want to create a sub-folder, select **Options > Add folder**.

Copy or move a file to a folder

Select and hold the file, and from the pop-up menu, select the appropriate option.

Tip: You can also play music or videos, or view pictures in Gallery.

Synchronise your calendar and contacts with Ovi by Nokia

Select **Menu > Settings > Sync & backup**.

- 1 Select **Sync with Ovi > Sync now**.
- 2 Sign in with your Nokia account details. If you do not have an account, sign up for one.
- 3 Follow the instructions.

Back up your pictures and other content to a memory card

Want to make sure you will not lose any important files? You can back up your device memory to a compatible memory card.

Select **Menu > Settings > Sync & backup**.

Select **Create backup**.

Restore a backup

Select **Restore backup**.

China Mobile services

China Mobile services provide you high-quality customer support and enriched online contents, such as music, games, weather forecast, and other services.

The services may use general packet radio service (GPRS). For information on the pricing of GPRS and China Mobile services, contact your network service provider.

Access China Mobile services

Select Menu > China Mobile.

Contact customer support

Select Menu > China Mobile > Customer Services.

The online contents and services may vary depending on your device and your network service provider.

Telephone

Make a call

- 1 Enter the phone number, including the country and area code if necessary.
- 2 Press the call key.

Answer an incoming call

Press the call key.

End a call

Press the end key.

Reject a call

Press the end key.

View your missed calls

In the home screen, you can see when you have missed calls. To view the phone number, select **View**. The caller's name is displayed if stored in the contacts list.

Missed and received calls are logged only if supported by the network, and the device is switched on and within the network service area.

Call back the contact or number

Select the contact or number, and press the call key.

View the missed calls later

Select Menu > Phone Book > Log and Missed calls.

Call the last dialled number

Trying to call someone, but they are not answering? It is easy to call them again.

In the home screen, press the call key, select the number from the list, and press the call key again.

Divert calls to your voice mailbox or another phone number

When you cannot answer, you can divert your calls to your voice mailbox or to another number (network service).

- 1 Select **Menu** > **Settings and Call** > **Call divert**.
- 2 Select **If busy** or **If not answered**.
- 3 Select **Activate** and **To voice mailbox** or **To other number**.

Save a number from a received call or message

Have you received a call or message from a person whose phone number is not yet saved in the contacts list? You can easily save the number to your contacts.

Save a number from a received call

- 1 Select **Menu** > **Phone Book** > **Log and Received calls**.
- 2 Select the number and **Options** > **Save**.
- 3 Enter a name for the contact, and select **Save**.

Save a number from a received message

- 1 Select **Menu** > **Messaging**.
- 2 Select **Conversations** or **Inbox** and a message.
- 3 Press the call key.
- 4 Select the number and **Save**.
- 5 Enter a name for the contact, and select **Save**.

Tip: To add a new number to an existing contact, select the number and **Add to contact**.

About internet calls

You can make and receive calls over the internet (network service). Internet call services may support calls between computers, between mobile devices, and between a VoIP device and a traditional telephone.

Some internet call service providers allow free internet calls. For availability and connectivity costs, contact your internet call service provider.

To make or receive an internet call, you must be in the service area of a WLAN or have a packet data (GPRS) connection in a 3G network, and be signed in to an internet call service.

Make an internet call

When you are signed into an internet call service, you can make internet calls.

For availability and costs of internet calls, contact your internet call service provider.

The Net phone wizard helps you set up your account. Have your account information from your internet call service provider available before you start the wizard.

Set up your internet telephone account

- 1 Make sure a valid SIM card is inserted, and that your device is connected to a WLAN.

- 2 Select **Menu > Settings and Connectivity > Internet phone > Accounts**.
- 3 Select **Add new**.
- 4 Select an account and **Connect**, and follow the instructions.

When the wizard has finished, your account is displayed in the accounts list.

If the internet telephone settings do not work, contact your service provider.

Call a contact

 
- 1 Select **Menu > Phone Book** and a contact.
- 2 Select **Internet call**.

Call a phone number

Enter the phone number, and select **Options > Internet call**.

For emergency calls, only the cellular network is used.

Make a conference call

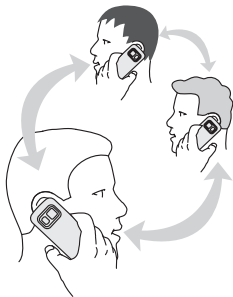

For availability, contact your service provider.

- 1 While in a call, select **Options > More > New call**.
- 2 Enter a phone number, or search for a contact.
- 3 Press the call key.
- 4 When both calls are active, select **Options > Conference**.
- 5 To end the conference call, select **Options > End all calls**.

Allow calls only to certain numbers

With the fixed dialling service (network service), you can restrict calls, and only allow calls to certain phone numbers. For example, you can allow your children to call only family members.

Select **Menu > Settings and Security**.

- 1 Select **Fixed dialling > On**.
- 2 Enter your PIN2 code.
- 3 Add the desired numbers to the list of allowed numbers.

Tip: If you want to send a text message while the fixed dialling service is active, you need to add the message centre number to the list of allowed numbers.

Prevent making or receiving calls

Keep your phone bill under control by preventing certain types of calls (network service). You can prevent, for example, incoming calls while you're abroad.

Select **Menu > Settings and Security**. To prevent calls, you need a barring password from your service provider.

Prevent certain call types

- 1 Select **Call barr. service** and the desired option.
- 2 Select **Activate**, and enter your barring password.

Contacts

Save a name and phone number

Select **Menu > Phone Book**.

Select **Add new**.

Add and edit the details of a contact

- 1 Select **Names** and a contact.
- 2 Select **Details > Options > Add detail**.

Tip: To add a ringing tone, picture, or video for a contact, select the contact and **Options > Add detail > Multimedia**.

Use speed dial

You can quickly call your friends and family when you assign your most-used phone numbers to the number keys of your device.

Select **Menu > Phone Book > Speed dials**.

Assign a phone number to a number key

- 1 Select a number key. 1 is reserved for the voice mailbox.
- 2 Enter a number or search for a contact.

Make a call

In the home screen, press and hold a number key.

Remove or change a phone number assigned to a number key

Select and hold the number key, and from the pop-up menu, select **Delete** or **Change**.

Deactivate speed dialling

Select **Menu > Settings and Call > Speed dialling**.

Send your contact information

Want to send your phone number or mail address to a person you just met? Add your own contact information to your contacts list, and send a business card to the person.

Select **Menu > Phone Book and Names**.

- 1 Select the contacts list entry that contains your information.
- 2 Select **Business card** and the sending type.

Save a received business card

Select **Show > Save**.

Create a contact group

If you add your family members or friends to a contact group, you can easily send a message to all of them at the same time.

Select **Menu > Phone Book**.


- 1 Select **Groups > Add**.
- 2 Enter a name for the group, optionally select an image and a ringing tone, and select **Save**.
- 3 To add contacts to the group, select the group and **Add**.

Move or copy contacts to your SIM card

Want to use your SIM card in another device, but still have access to your contacts? By default, contacts are stored

in the device memory, but you can copy your contacts to a SIM card.

Select **Menu > Phone Book**.

More contacts can be stored in the device memory, and contacts saved on the SIM card can only have one phone number.  indicates a contact stored on the SIM card.

Copy all contacts

Select **Copy contacts > From ph. to SIM**.

Move all contacts

Select **Move contacts > From ph. to SIM**.

Tip: If contacts are stored in both the device memory and on the SIM card, duplicate contacts may be displayed in the contacts list. To display only contacts stored in the device, select **Settings > Memory in use > Phone**.

Phonebook manager

Phonebook manager is a service provided by China Mobile. You can back up or restore your phonebook entries online. For the availability of this service, pricing, and detailed instructions, contact your service provider.

Phonebook manager uses general packet radio service (GPRS). For information on the pricing of GPRS, contact your service provider.

Subscribe to or unsubscribe from the Phonebook manager service

Select Menu > China Mobile > Phonebook mgr. > Enter > .

Back up or restore phonebook entries online

Select Menu > China Mobile > Phonebook mgr. > Enter > .

Search for phonebook entries online

Select Menu > China Mobile > Phonebook mgr. > Enter > Online enquiry.

Chinese text input

Writing language

The available input methods depend on where the device is sold.

This device supports simplified Chinese input methods.

To change the writing language when writing text, press and hold #, and select **Writing lang.** and the desired language.

Switch between input methods

Input method indicators are shown at the top of the display:

Pinyin	pinyin
Stroke	一 丨 丶 ㇇
Uppercase	ABCabc
Lowercase	abc
Number input	123

Not all the methods may be available in all circumstances. Always check the indicator to see which input method is in use.

To switch between the available input methods, press # repeatedly, until the indicator of the desired input method is displayed.

Pinyin input method

Pinyin input

The pinyin symbols are printed on the number keys. You only need to press a key once, regardless of the position of the symbol on the number key. The phone

makes logical combinations of the pinyin symbols.

To input a character using the pinyin input method:

- 1 Press the number key once for each pinyin symbol you want to enter (use "v" for "ü").
- 2 Press **1** repeatedly until the desired tone mark is displayed.
- 3 If necessary, press * repeatedly to highlight the desired pinyin combination.
- 4 Select the desired Chinese character.

Ambiguous Pinyin

With this feature, your phone will tolerate ambiguity of certain pinyin pairs: c/ch, z/zh, s/sh, n/l, r/l, f/h, an/ang, in/ing, and en/eng. To select which ambiguous pinyin pairs to use, when no input symbol or prediction list is displayed, select **Options > More > Ambig. pinyin**.

Stroke input method

The strokes constituting Chinese characters have been divided into five categories: horizontal, vertical, left-falling, dot, and turning. Each category corresponds to a number key from **1** to **5**, respectively.

按鍵	1	2	3	4	5
基本筆劃	一	丨	丿	丶	→

The strokes are classified according to the following table:

數字鍵	基本筆劃	筆劃變形 舉例	例字	說明
1	橫 一	一 ㇀	十、懸 七、冰 羽、輸、泰	提(㇀)歸為橫 基本運筆方向：左 → 右
2	豎 丨	丨 丨	十 了、小、利	豎鉤(丨)歸為豎 基本運筆方向：上 → 下
3	撇 丿	丿 丿	人、川、牛 小、常	基本運筆方向：上 → 左下 (注意撇與提的區別)
4	點 丶	丶 丶	主 心、家 入、邊	捺(丶)歸為點 基本運筆方向： 左上 → 右下 (注意左點也包括在內)
5	折 →	乙 → ㇀ ㇁ ㇂ ㇃ ㇄ ㇅ ㇆ ㇇ ㇈ ㇉	乙 安 口、習、內 除、建 除、建 與、島 鳩、凹 兒、飛 各 以 能、雲、好 獨 代、心	包含各種帶轉折的筆劃 (注意左豎鉤除外)

- 1 In the standard stroke order, press the number keys to input the strokes.
If you are not sure which stroke to use or which category it belongs to, press **6** to substitute that stroke, then continue with the subsequent strokes. A question mark appears in the input area to represent that stroke.
- 2 Select the desired Chinese character.

Phrase input

You may input a phrase of no more than seven Chinese characters at a time.

- 1 Press the relevant number keys to enter the syllable or pinyin initial, or first strokes for the first character of the phrase.
- 2 Press **0** to enter a separator; or, if in the pinyin mode, press **1** repeatedly

to enter the tone mark of the character.

- 3 Enter the syllable or pinyin initial, or first strokes of the next Chinese character.
- 4 Repeat step 2 and 3, if necessary, to enter the syllables or pinyin initials, or first strokes of all the characters in the phrase.
- 5 If in the pinyin mode, press * repeatedly, if necessary, to highlight the pinyin combination you want.
- 6 Scroll through the candidate list, and select the desired phrase.

Not all phrases are stored in your phone. To create a phrase of no more than seven characters, when no input symbol or prediction list is displayed, select **Options > More > User phrases > Add**. When the database becomes full, the new phrase replaces the phrase that has not been accessed for the longest time.

Use a separator to separate pinyin strings for syllables of different characters or the strokes of different characters. When you enter a separator, the phone predicts characters or character strings that can form a phrase with the possible candidates of the combination of pinyin or stroke strings and separators, if any, that you have entered.

Activate predictive English text input

When writing text in English, press and hold #, and select **Prediction on** or **Prediction off**.

Traditional text input

Write a word

Press a number key (2-9) repeatedly, until the desired character is displayed. The available characters depend on the selected writing language. If the next letter is located on the same key, wait until the cursor is displayed or move the cursor forward, and press the key again.

Insert a common punctuation mark

Press **1** repeatedly.

Insert a special character

Press *, and select a character from the list.

Insert a space

Press **0**.

Predictive text input

The built-in dictionary suggests words as you press the number keys. You can also add your own words to the dictionary.

Write a word

Press the number keys (2-9). Press each key once for each letter.

Confirm a word

Scroll right, or to insert a space, press **0**.

Select the correct word

If the proposed word is not correct, press * repeatedly, and select the desired word from the list.

Add a word to the dictionary

If ? is displayed after the word, the word you intended to write is not in the dictionary. To add the word to the dictionary, select **Spell**. Enter the word using traditional text input, and select **Save**.

Write a compound word

Write the first part of the word, and scroll right to confirm it. Write the next part of the word, and confirm again.

Writing text tips**Insert a number when no input symbol is displayed**

Press and hold the desired number key.

Insert a space when there is no candidate or prediction list displayed

Press **0**.

Enter a special character after you have finished entering a word or character

Press *****.

End Chinese character prediction

Select **Back**, or press the relevant keys to start entering new text.

Dictionary

In Dictionary, you can look up a Chinese word for English translation, and look up an English word for Chinese translation.

- 1 Select **Menu > Applications > Dictionary**.
- 2 Switch to the desired input mode if necessary.





- 3 Enter the Chinese or English word.
- 4 Scroll to the desired word in the displayed list of words, and select it to view the translation.

To look up synonyms or antonyms of an English word, select **Options > Synonyms or Options > Antonyms**.

To view the translation of the previous or next word in the displayed list of words, scroll left or right.

Handwrite text

Write your message directly on the screen.

 
- 1 Select **Menu > Messaging > Create message**.
- 2 Select .
- 3 Select the # icon and the desired text input mode (, , or ).
- 4 Draw the desired character in the writing field. The device proposes a character. If it is not the correct character, select the correct one from the proposed matches.



- 1 Writing mode indicator
- 2 Writing field
- 3 Change writing mode
4. Special characters
5. Move cursor

Gestures in Chinese text input mode

Draw gesture 1 for space, 2 for backspace, 3 for enter, or 4 to repeat the last character before the cursor.



Close the handwriting window
Select **Done**.

Messaging

Send a message

Keep in touch with your family and friends with text and multimedia messages. You can attach your pictures, video clips and business cards to your message.

Select Menu > Messaging.

- 1 Select **Create message**.
- 2 To add an attachment, select **Options > Insert object**.
- 3 Write your message, and select **Continue**.
- 4 To enter a phone number or mail address manually, select **Number or mail**. Enter a phone number, or select **Mail**, and enter a mail address.
- 5 Select **Send**.

Tip: To insert a special character or a smiley, select **Options > Insert symbol**.

Sending a message with an attachment may be more expensive than sending a normal text message. For more information, contact your service provider.

You can send text messages that are longer than the character limit for a single message. Longer messages are sent as two or more messages. Your service provider may charge accordingly.

Characters with accents, other marks, or some language options, take more space, and limit the number of characters that can be sent in a single message.

If the item you inserted in a multimedia message is too large for the network, the device may automatically reduce the size.

Only compatible devices can receive and display multimedia messages. Messages may look different in different devices.

Send a message to a group of people

Would you like to send a message to all your family members? If you have assigned them to a group, you can send a message to all of them at the same time.

Select Menu > Messaging.

- 1 Select **Create message**.
- 2 Write your message, and select **Continue**.
- 3 To select a group, select **Contact groups**.
- 4 Select **Send**.

Save an attachment

You can save attachments from multimedia and mail messages to your device.

Select Menu > Messaging.

Save an attachment

- 1 Open the message.
- 2 Select **Options > Save contents**.
- 3 Select the desired file and **Options > Save**.

Save a mail attachment

- 1 Open the mail.
- 2 Select the attachment.
- 3 Select **Save**.

Pictures and videos are saved in Gallery.

View a conversation

You can see the messages you have sent to and received from a particular contact from a single view, and continue the conversation from that view.

Select **Menu** > **Messaging**.

Read a message in a conversation

Select **Conversations**, a conversation, and a message.

Switch to the traditional Inbox view

Select **Options** > **Inbox view**.

Listen to voice messages

When you cannot answer, you can divert calls to your voice mailbox and listen to your messages later.

The voice mailbox is a network service to which you may need to subscribe. For more information, contact your service provider.

Call your voice mailbox

In the home screen, press and hold **1**.



Save your voice mailbox number

- 1 Select **Menu** > **Messaging** > **Voice messages** and **Voice call msgs.** > **Voice mbox. no..**
- 2 Enter your voice mailbox number, and select **OK**.

Send an audio message

Don't have time to write a text message? Record and send an audio message instead!

Select **Menu** > **Messaging**.

- 1 Select **Other messages** > **Audio message**.
- 2 To record your message, select .
- 3 To stop recording, select .
- 4 Select **Continue** and a contact.

Nokia Messaging mail and IM

About Nokia Messaging mail

Select Menu > Messaging > Set up mail.

Access your mail accounts from different providers with your mobile device to read, write, and send mail.

If you do not already have a mail account, you can create a Nokia account, which includes Nokia's Ovi Mail service. For more information, go to www.ovi.com. With your Nokia account, you can access all of Nokia's Ovi services.

Sign in to a mail account

You can sign in to several mail accounts.

Select Menu > Messaging > Set up mail.

- 1 Select your mail service provider.
- 2 Enter your account user name and password.
- 3 If you select **Save password:**, you do not need to enter your password every time you want to access your mail account.
- 4 Select **Sign in**.

To sign in to an additional mail account, select **Add account**.

If you do not have a mail account, you can set up an account for Nokia's Ovi Mail.

Set up Ovi Mail

Select **Ovi Mail** > **Create new address**, and follow the instructions.

Send a mail

Select Menu > Messaging > Set up mail and a mail account.

- 1 Select **Options** > **Compose new**.
- 2 Enter the recipient's mail address and the subject, and write your message.
- 3 To attach a file, for example, a picture, select **Options** > **Attach** > **From Gallery**.
- 4 To take a picture to attach to the mail, select **Options** > **Attach** > **From Camera**.
- 5 Select **Send**.

Read and reply to mail

Select Menu > Messaging > Set up mail and a mail account.

- 1 Select a mail.
- 2 To reply to or forward a mail, select **Options**.

About Chat

Select Menu > Messaging > Chat.

With Chat (network service), you can exchange instant messages with your friends. If you do not have a chat account, you can create a Nokia account, and use Nokia's Ovi Chat.

You can leave the Chat application running in the background while you use other features of your device, and still be notified of new instant messages.

Using the service or downloading content may cause transfer of large amounts of data, which may result in data traffic costs.

Sign in to a chat service

Select **Menu** > **Messaging** > **Chat**.

Sign in to an existing IM account

- 1 Select a chat service.
- 2 Enter your account user name and password.
- 3 Follow the instructions.

Use several chat services at the same time

- 1 Select a chat service, and sign in.
- 2 To switch between chat services, open the corresponding tab.

Chat with your friends

Select **Menu** > **Messaging** > **Chat**.

You can sign in to and chat in several services at the same time. You must separately sign in to each service.

You can have ongoing conversations with several contacts at the same time.

- 1 Select a chat service.
- 2 In your contacts list, select the contact you want to chat with.
- 3 Write your message in the text box at the bottom of the display.
- 4 Select **Send**.

Hide the Chat application

Select **Menu** > **Messaging** > **Chat**.

Select **Hide**.

Your sessions remain active for a period of time, according to your service subscription. When the Chat application is running in the background, you can open

other applications, and later return to Chat without signing in again.

Receive notifications of new messages when the application is hidden

- 1 In the Chat main view, select **Options** > **More** > **Settings**.
- 2 Select the desired notification types and **Save**.

Sign out from IM

Open the Chat application, and select **Options** > **Exit** > **Close**.

All conversations are closed.

Personalisation

About the home screen

In the home screen, you can:

- See notifications of missed calls and received messages
- Open your favourite applications
- Control applications, such as the radio
- Add shortcuts for different features, such as writing a message
- View your favourite contacts, and quickly call, chat, or send messages to them

Add a shortcut to the home screen

Want to open your favourite applications directly from the home screen? You can add shortcuts to your most used features.


- 1 Select and hold the shortcut widget, and from the pop-up menu, select **Select shortcuts**.
- 2 Select the shortcut you want to define, and select the desired item.

Tip: To remove a shortcut, replace it with another.

Tip: You can also add shortcuts to the Go to menu. Select **Go to > Personalise view**.

Add your important contacts to the home screen

Want to quickly call or send messages to your favourite contacts? You can add shortcuts to selected contacts in the home screen.

- 1 Select and hold the Favourite contacts bar.
- 2 Select **Edit favourites**.
- 3 Select a contact icon  and a contact from the list.

The contact needs to be stored in the device memory.

Tip: If a picture is added to the contact, it is displayed in the Favourite contacts bar.

Call or send a message to a contact

Select the contact in the Favourite contacts bar, and from the pop-up menu, select the appropriate option.

Remove a contact from the home screen

- 1 Select and hold the Favourite contacts bar.
- 2 Select **Edit favourites** and the contact you want to remove.

The contact is removed from the Favourite contacts bar, but remains in your contacts list.

Personalise the Go to menu

You can add shortcuts to your most used features.

- 1 Select **Go to > Personalise view**.
- 2 Select a menu item and the desired feature from the list.

To access a feature, select **Go to** and the desired feature.

Personalise the home screen

Want to see your favourite landscape or pictures of your family in the home screen background? You can change this wallpaper, and rearrange items in the home screen, to personalise it to your liking.

Select **Menu** > **Settings** and **Display**.

Change the wallpaper

Select **Wallpaper** and a picture.

Tip: Download more wallpapers from Nokia's Ovi Store. To learn more about Ovi Store, go to www.ovi.com.

Add content to the home screen

Select **Home screen** > **Personalise view**.

Tip: To increase the font size in the Messaging and Contacts applications, when browsing the web, or in the main menu, select **Font size**.

Change the look of your device

With themes, you can change the colours and look of your home screen.

Select **Menu** > **Settings** and **Themes**.

Select **Select theme** > **Themes** and a theme from the list.

Tip: Download more themes from Nokia's Ovi Store. To learn more about Ovi Store, go to www.ovi.com.

Create your own profile

How can you make your device meet your needs at work or college or home? You can create new profiles for different situations, and give them appropriate names.

Select **Menu** > **Settings** > **Profiles**.

- 1 Select **My style 1** or **My style 2**.
- 2 Select **Personalise**, and define your profile settings.
- 3 Enter a name for the profile, and select **OK** > **Save**.

Personalise your tones

You can personalise the ringing, key, and warning tones for each profile.

Select **Menu** > **Settings** and **Tones**.

Change the ringing tone

Select **Ringing tone:** and a ringing tone.

Tip: Download more ringing tones from Nokia's Ovi Store. To learn more about Ovi Store, go to www.ovi.com.

Change the keypad tone volume

Select **Keypad tones:**, and drag the volume bar.

Connectivity

Bluetooth

 
About Bluetooth connectivity

Select Menu > Settings > Connectivity > Bluetooth.

Use Bluetooth to connect wirelessly to compatible devices, such as other mobile devices, computers, headsets, and car kits.

You can also use the connection to send items from your device, transfer files from your compatible PC, and print files with a compatible printer.

Devices with Bluetooth wireless technology do not need to be physically next to one another, as this technology uses radio waves. However, the devices must be within 10 metres (33 feet) of each other, otherwise the connection can break up. Obstructions, such as walls or other electronic devices, can cause interference.

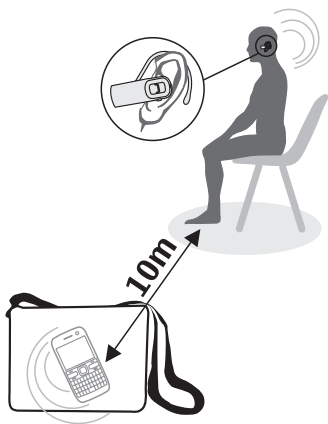

This device is compliant with Bluetooth Specification 2.1 + EDR supporting the following profiles: SIM access, object push, file transfer, headset, handsfree, generic access, serial port, generic object exchange, dial-up networking, device ID, phonebook access, service discovery application, advanced audio distribution, audio video remote control, and generic audio/video distribution. To ensure interoperability between other devices supporting Bluetooth technology, use Nokia approved accessories for this model. Check with the manufacturers of other devices to determine their compatibility with this device.

Note: There may be restrictions on the use of Bluetooth technology in some countries. For example, in France, you are only allowed to use the Bluetooth technology of this product indoors. For more information, contact your local authorities.

Tip: To access Bluetooth settings from the home screen, add a shortcut to the shortcut widget.

Connect to a wireless headset

Want to keep working at your computer during a call? Use a wireless headset. You can also answer a call, even if your device is not directly at hand.

- 1 Select Menu > Settings > Connectivity > Bluetooth and Bluetooth > On.
- 2 Switch the headset on.
- 3 To pair your device and the headset, select Conn. to audio acc..
- 4 Select the headset.

- 5 You may need to enter a passcode. For details, see the user guide of the headset.

Tip: You can set your device to connect automatically to your Bluetooth headset, once you have paired it for the first time.

Send a picture or other content to another device

Use Bluetooth to send business cards, calendar entries, pictures, videos, and other content created by you to your computer, as well as to your friend's compatible devices.

- 1 Select the item to send.
- 2 Select **Options** > **Send** > **Via Bluetooth**.
- 3 Select the device to connect to. If the desired device is not displayed, select **New search**, to search for it. Bluetooth devices within range are displayed.
- 4 If the other device requires a passcode, enter the passcode. The passcode, which you can define yourself, must be entered in both devices. The passcode in some devices is fixed. For details, see the user guide of the device.

The passcode is valid only for the current connection.

Connect to a car kit using remote SIM mode

With remote SIM mode, a compatible car kit can use the SIM card of your device.

Select **Menu** > **Settings** > **Connectivity** > **Bluetooth**.

Before you can activate remote SIM mode, you must first pair your device and the car kit.

- 1 To activate Bluetooth on your device, select **Bluetooth** > **On**.
- 2 Activate Bluetooth in the car kit.
- 3 Follow the instructions on the display of your device.

In remote SIM mode, only the car kit is connected to the cellular network.

To make or receive calls when in remote SIM mode, you need to have a compatible accessory, such as a car kit, connected to your device.

Your device will only allow emergency calls in this mode.

Remote SIM mode is automatically deactivated when the car kit is switched off, for example, when you switch off the car engine.

Manually deactivate remote SIM mode

- 1 Select **Paired devices**.
- 2 Select the car kit, and from the pop-up menu, select **Delete pairing**.

Connect automatically to a paired device

Do you regularly want to connect your device to another Bluetooth device, such as a car kit, headset, or your PC? You can set your device to connect automatically.

Select **Menu** > **Settings** > **Connectivity** > **Bluetooth and Paired devices**.

- 1 Select the device to connect to automatically.
- 2 From the pop-up menu, select **Settings > Auto-connect > Yes**.

Use Bluetooth securely

Do you want to secure who can see your device when using Bluetooth? You can control who can find and connect to your device.

Select **Menu > Settings > Connectivity > Bluetooth**.

Prevent others from detecting your device

Select **Phone visibility > Hidden**.

When your device is hidden, others cannot detect it. However, paired devices can still connect to your device.

Deactivate Bluetooth

Select **Bluetooth > Off**.

Do not pair with or accept connection requests from an unknown device. This helps to protect your device from harmful content.

USB data cable

Copy a picture or other content between your device and a computer

You can use a USB data cable to copy pictures, videos, music, and other content between your device and a compatible computer.

- 1 Use a compatible USB cable to connect your device to a computer.
- 2 Select from the following:

Nokia Ovi Suite — Use this mode if your computer has Nokia Ovi Suite installed.

Media transfer — Use this mode if your computer does not have Nokia Ovi Suite installed. If you want to copy DRM-protected music, or use home entertainment systems or printers, use this mode.

 
Mass storage — Use this mode if your computer does not have Nokia Ovi Suite installed. The device is displayed as a portable device on your computer. If you want to connect your device to other devices, such as a home or car stereo, use this mode.

- 3 Use the file manager of the computer to copy the content.

Copy a picture or other content between your device and a USB memory stick

You can copy pictures from your device to a compatible USB memory stick. Use this to create backups of pictures that you take when travelling.

- 1 Connect a compatible USB OTG adapter cable to the USB port of your device.
- 2 Connect a memory stick to the USB OTG adapter cable.

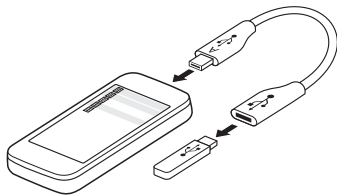

- 3 Select **Menu** > **Applications** > **Gallery**, and select and hold a file or folder.
- 4 Select if you want to copy or move the file or folder.
- 5 Select the target folder.

Connect to a WLAN About WLAN connections

Select **Menu** > **Settings** > **Connectivity** > **WLAN**.

Connect to a wireless local area network (WLAN) and manage your WLAN connections.

Important: Use encryption to increase the security of your WLAN connection. Using encryption reduces the risk of others accessing your data.


Note: Using WLAN may be restricted in some countries. For example, in France, you are only allowed to use WLAN indoors. For more information, contact your local authorities.

Connect to a WLAN at home


To help save data costs, connect to your home WLAN when you are at home and want to browse the web on your device.

Select **Menu** > **Settings** > **Connectivity** > **WLAN**.

Connect for the first time

- 1 To search for your home WLAN, select **Available WLANs**.
- 2 To connect, select your home WLAN.
- 3 If the WLAN is secured , enter the password.


- 4 If you save your home WLAN, you do not always have to search for it in future. Select and hold the WLAN, and from the pop-up menu, select **Save**.

 indicates a saved WLAN.

Connect to your saved home WLAN

- 1 Select **Saved WLANs**.
- 2 Select your home WLAN.

Disconnect from a WLAN

Select the connected WLAN .

Connect to a WLAN on the move


Connecting to a WLAN is a handy way of accessing the internet when not at home. Connect to public WLANs in public places, such as a library or internet café.

Select **Menu** > **Settings** > **Connectivity** > **WLAN**.

You need a password to connect to secured WLANs .

- 1 To search for available WLANs, select **Available WLANs**.
- 2 Select a WLAN.
- 3 If the WLAN is secured, enter the password.

Disconnect from a WLAN

Select the connected WLAN .


Connect to a hidden WLAN

Select **Menu** > **Settings** > **Connectivity** > **WLAN**.

You can connect to a hidden WLAN, if you know the name (SSID) and password.

- 1 To search for available WLANs, select **Available WLANs**.
- 2 Select **(Hidden network)**.
- 3 Enter the name (SSID) and the password.

Disconnect from a WLAN

Select the connected WLAN .


Nokia's Ovi services

Ovi by Nokia


Availability and costs of Nokia's Ovi services

The availability of Nokia's Ovi services may vary by region. Using the services or downloading content may cause transfer of large amounts of data, which may result in data traffic costs. For information about data transmission charges, contact your network service provider.

About Ovi Store


 With Ovi Store, you can download mobile games, applications, videos, pictures, themes, and ringing tones to your device. Some items are free of charge; others you need to pay for with your credit card or in your phone bill. The availability of payment methods depends on your country of residence and your network service provider. Ovi Store offers content that is compatible with your mobile device and relevant to your tastes and location.

About Ovi Contacts

 With Ovi Contacts, you can stay connected to your friends and family, follow what they are up to, and discover new friends in the Ovi community. You can also back up contacts from your device to Ovi.


To use Ovi Contacts, go to www.ovi.com.

About Ovi Mail

 With Ovi Mail, you can easily access your mail from popular webmail providers. If you register for a Nokia

account, you can also get a free mail account from Ovi, and use it on your mobile device or computer. The anti-spam protection helps keep your mailbox in order, and the virus protection increases security.


About Ovi Organiser

 With Ovi Organiser, you can create notes on your noteboard and in your calendar and to-do list to keep track of your everyday life, and save the notes in notebooks in your Nokia account.

You can share your notebooks with your friends and family.


To use Ovi Organiser, go to www.ovi.com.

About Ovi Music

 With Ovi Music, you can purchase and download songs to your device and your computer. To manage your music collection and downloads, you can install Ovi Player on your compatible PC, or use your internet browser to download music.

To start discovering music, go to www.ovi.com.

About Ovi Files

 You can save files on your computer, and access them later with your device using Ovi Files even when your computer is switched off. When you select which folders and files you want to be available, Ovi Files automatically keeps an up-to-date copy stored in a protected online storage. You can also transfer files from your computer to your device, and send files and folders from your computer

without transferring them to your device first.

To learn more about Ovi Files, go to www.ovi.com.

Access Nokia's Ovi services

Select Menu > Applications > Extras > Collection and the desired Ovi service.

Using some of the services or downloading content may cause transfer of large amounts of data, which may result in data traffic costs.

About Nokia Ovi Suite

With the Nokia Ovi Suite PC application, you can manage content on your device and keep it in sync with your computer.

 
For more information, and to download Nokia Ovi Suite, go to www.ovi.com.

Install Nokia Ovi Suite on your PC


You can manage content on your device, and keep it in sync with your computer.

- 1 Use a compatible USB data cable to connect your device to your computer.

Your memory card appears as a removable disk on your PC.

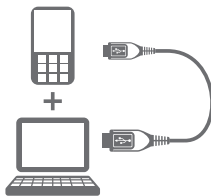


 - 2 On your device, select **Mass storage**.
- 3 On your computer, select **Install Nokia Ovi Suite**.

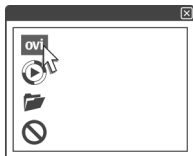

To sample and download millions of songs from Ovi, open the **Ovi Music** tab. To download music, you need to create a Nokia account.

 If the installation window does not open automatically, open the installation file manually. Select **Open folder to view files**, and double-click **Install_Nokia_Ovi_Suite.exe**.

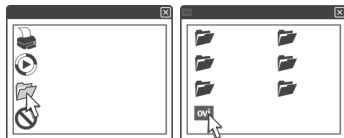

- 4 Follow the instructions.

To learn more about Nokia Ovi Suite, go to www.ovi.com.

Ovi Player

With Nokia Ovi Player, you can play and organise your music, download music from Nokia's Ovi Music, copy songs and playlists between your compatible PC and compatible Nokia mobile devices, and rip and burn your audio CDs.

To manage your music collection, open the **My Music** tab. You can connect several compatible devices to Ovi Player, and view and play music stored on the devices.

Time management

Change the time and date

Select **Menu** > **Settings and Date and time**.

Change the time zone when travelling

- 1 Select **Date & time settings** > **Time zone**.
- 2 Select the time zone of your location and **Save**.

The time and date are set according to the time zone. This makes sure that your device displays the correct sending time of received text or multimedia messages.

For example, GMT -5 denotes the time zone for New York (USA), 5 hours west of Greenwich, London (UK).

Set an alarm

You can use your device as an alarm clock.

Select **Menu** > **Applications** > **Alarm clock**.

- 1 Set the alarm time.
- 2 Select **🔔** to set the alarm.
- 3 To set the alarm to sound, for example, at the same time every day, select **Settings** > **Alarm repeat** > **On** and the days.

Snooze an alarm

When an alarm sounds, you can snooze the alarm. This pauses the alarm for a defined length of time.

When the alarm sounds, select **Snooze**.

Set the length of the snooze time

Select **Menu** > **Applications** > **Alarm clock** and **Settings** > **Snooze time-out**, and select the length of time.

Time your workout

Challenge yourself when running your daily route! Use the stopwatch to time yourself.

Select **Menu** > **Applications** > **Stopwatch**.

Time your laps

- 1 Select **Lap timing** > **Start**.
- 2 Select **Lap** when moving on to the next lap. The lap time is added to the list, and the timer is reset.
- 3 Select **Stop**.

Take intermediate times

- 1 Select **Split timing** > **Start**.
- 2 Select **Split**. The intermediate time is added to the list, and the timer continues running.
- 3 Select **Stop**.

Tip: Want to save your times to compare your results later? Select **Save**, and enter a name.

Hide the stopwatch

Press the end key. To return to the timer, select **Menu** > **Applications** > **Stopwatch** and **Continue**.

Set the countdown timer

Need to quickly set an alarm for a certain amount of time, for example, when

boiling eggs? Use the countdown timer to set the alarm.

Select **Menu > Applications > Countd. timer.**

- 1 Select **Normal timer.**
- 2 Enter a time, and write a note that is displayed when the time expires.
- 3 Select **Start.**

In the home screen, you can see the timer, and how much time is left.

Calendar

Add an appointment

Save your important appointments to your calendar as meeting entries.

Select **Menu > Applications > Calendar.**

- 1 Go to the desired date, and select **Options > Make a note.**
- 2 Select the entry type field **Meeting**, and fill in the fields.

Remember a birthday

Add a reminder for birthdays and other special dates. The reminders are repeated annually.

Select **Menu > Applications > Calendar.**

- 1 Go to the desired date, and select **Options > Make a note.**
- 2 Select the entry type field **Birthday**, and fill in the fields.

Add a task to your to-do list

You can save a to-do note for a task you must do, and add a reminder to your calendar.

Select **Menu > Applications > To-do list.**

- 1 Select **Add**, and fill in the fields.
- 2 To add a reminder, go to the desired to-do note, select **Options > Save to Calendar > Reminder**, and fill in the fields.

Make a shopping list

Shopping lists on paper are easy to lose. If you write them on your device, you always have the list with you! You can also send the list to, for example, a family member.

Select **Menu > Applications > Notes.**

- 1 Select **Add.**
- 2 Enter text in the note field.

Send the list

Open the note, and select **Options > Send note** and the sending method.

Lunar calendar

To use the lunar calendar, the device language must be Chinese.

Select **Menu > Applications > Calendar** and **Options > Month view.**

View lunar details for a day

Select **Options > Lunar calendar.**

Search for a lunar festival

In the lunar day view, select **Lun. fest.**, enter the Gregorian year of the Spring festival, and select the desired lunar festival.

In the lunar day view, select **Options** and from the following:



Solar item — Search for a solar item.

Gregorian to lunar — Convert a Gregorian date to a lunar date.


Lunar to gregorian — Convert a lunar date to a Gregorian date.

Pictures and videos

Take a picture

- 1 In the home screen, press the camera key.
- 2 To zoom in or out, select  or .
- 3 Press the camera key.
The pictures are saved in Gallery.

Activate the camera flash

To set the device to use the flash automatically if there is not enough light, select  > **Flash** > **Automatic**. To set the device to always use the flash, select **Flash on**.

Close the camera

Press the end key.


Keep a safe distance when using the flash. Do not use the flash on people or animals at close range. Do not cover the flash while taking a picture.



Your device supports an image capture resolution of up to 1944x2592 pixels.



Record a video

Besides taking pictures with your device, you can also capture your special moments as videos.

In the home screen, press the camera key.

- 1 To switch from image mode to video mode, if necessary, select  > **Video camera**.
- 2 To start recording, press the camera key.

To zoom in or out, select  or , or use the volume keys.

- 3 Select  to pause and  to stop the recording.

Videos are saved in Gallery.

Close the camera

Press the end key.

Send a picture or video

Share your pictures and videos with friends and family as a multimedia message or through Bluetooth connectivity.

Select Menu > Photos.

Send a picture

- 1 Select the folder containing the picture.
- 2 Select the picture to send, and select **Options** > **Send** and the desired sending method.

You can send several pictures at once. Select **Options** > **Mark**, and mark the pictures.

Send a video

- 1 Select the folder containing the video.
- 2 Mark the video to send. Select **Options** > **Mark**, and mark the video. You can mark several videos to send.
- 3 Select **Options** > **Send marked** and the desired sending method.

Photos

About Photos


Select Menu > Photos.

The Photos application is the place from where you can view all pictures and videos on your device. You can play videos, or browse through pictures, and print out the best shots.

Organise your pictures


You can organise your pictures into folders.

Select Menu > Photos.

- 1 Select **My albums**.
- 2 Select  > **Create album**, and enter a name for the album.
- 3 Select the pictures to add to the album.

Edit a picture

Is the picture you took too dark or not ideally framed? In Photos, you can rotate, flip, crop, and adjust the brightness, contrast, and colours of pictures you have taken.

- 1 Select a picture in My photos, Timeline, or My albums.
- 2 Select  and the desired effect.

Print a picture

You can print your pictures directly using a compatible printer.

- 1 Use a USB data cable or, if supported by the printer, Bluetooth connectivity, to connect your device to a PictBridge compatible printer.
- 2 Select **Media transfer** as the USB connection mode.
- 3 Select the picture to print.
- 4 Select **Options** > **Print**.

Music and audio

Media player

Play a song

Play music stored in the device memory or on the memory card.

Select **Menu > Music > My music**.

Play a song

Select a song from a folder.

To pause playing, select **||**; to resume, select **▶**.

Fast-forward or rewind

Select and hold **▶▶** or **◀◀**.

Close the media player

Press and hold the end key.

Tip: To return to the home screen, and leave the player playing in the background, press the end key.

Play a video

Play videos stored in the device memory or on the memory card.

Select **Menu > Music > My music**.

- 1 Select a video from the folder.
- 2 To pause playback, select **||**; to resume, select **▶**.

Fast-forward or rewind

 
Select and hold **▶▶** or **◀◀**.

Close the media player

Press and hold the end key.

Copy music from your PC

Do you have music on your PC that you want to listen on your device? Use Nokia Ovi Player and a USB data cable to manage and synchronise your music collection.

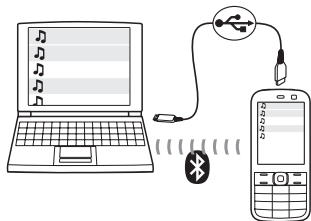

- 1 Use a compatible USB data cable to connect your device to your computer. Make sure a compatible memory card is inserted in your device.
- 2 Select **Media transfer** as the connection mode.
- 3 On your computer, open Nokia Ovi Player. For more information, see the Ovi Player help.

Tip: You can buy music from Nokia's Ovi Music. To learn more, go to www.ovi.com.

Some music files can be protected by digital rights management (DRM) and cannot be played on more than one device.

Change the sound or tone of your music

Did you know you can change the sound or tone of music, to better suit the genre? You can customise profiles for different music styles in the equaliser.

Select **Menu > Music > My music > Go to Media pl. > Options > More > Equaliser.**

Activate an existing sound profile

Select a set and **Activate.**

Create a new sound profile

- 1 Select one of the last two sets in the list.
- 2 Select the sliders, and adjust them.
- 3 Select **Save.**

Connect loudspeakers to your device

Listen to music on your device through compatible loudspeakers (sold separately).

Connect wired loudspeakers

Connect the loudspeakers to the 3.5 mm AV connector in your device.

Connect Bluetooth loudspeakers

- 1 Select **Menu > Settings > Connectivity > Bluetooth and On.**
- 2 Switch the loudspeakers on.
- 3 To pair your device and the loudspeakers, select **Conn. to audio acc..**
- 4 Select the loudspeakers.
- 5 You may need to enter a passcode. For details, see the user guide of the loudspeakers.

 
FM radio

About the FM radio

Select **Menu > Music > Radio.**

You can listen to FM radio stations using your device - just plug in a headset, and select a station!

To listen to the radio, you need to attach a compatible headset to the device. The headset acts as an antenna.

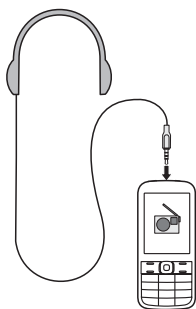

It is not possible to listen to the radio through a Bluetooth headset.

Listen to the radio

Select **Menu > Music > Radio.**

Pause or resume playback

Select **■** or **▶**).

Set the radio to play in the background

Briefly press the end key.

Close the radio

Press and hold the end key.



Tip: To listen to the radio using the headset or the loudspeaker, select **Options > Settings > Play via** and the desired option.

Find and save radio stations

Search for your favourite radio stations, and save them, so you can easily listen to them later.

Select **Menu** > **Music** > **Radio**.

Search for the next available station

Select and hold  or .

Save a station

Select **Options** > **Save station**.

Switch to a saved station

Select  or .

Rename a station

Select and hold the station, and from the pop-up menu, select **Rename**.

Tip: To access a station directly from the saved station list, press the number key that corresponds to the number of the station.

Improve radio reception

If you activate RDS, the radio automatically switches to a frequency that has better reception.

Select **Menu** > **Music** > **Radio**.

- 1 Select **Options** > **Settings** > **RDS** > **On**.
- 2 Select **Auto-frequency** > **On**.

Use voice recorder

You can record sounds from nature, such as birds singing, as well as voice memos or phone conversations.

Select **Menu** > **Applications** > **Voice recorder**.

Record a sound clip

Select .

Stop recording

Select . The recording is saved in the Recordings folder in Gallery.

Record a phone conversation

During a call, select **Options** > **More** > **Record**.

Both parties hear a tone at regular intervals during the recording.

Monternet

Monternet allows you to establish a connection to operator's WAP gateway and access Monternet online contents with your device browser, using general packet radio service (GPRS).

For information on the pricing of GPRS and Monternet, contact your service provider.

Access Monternet

Select Menu > Monternet.

Web

About the web browser

Select Menu > Internet.

You can view web pages on the internet with your device web browser.

To browse the web, you must have an internet access point configured in your device and be connected to a network.

For the availability of these services, pricing, and instructions, contact your service provider.

You may receive the configuration settings required for browsing as a configuration message from your service provider.

Browse the web

Select Menu > Internet.

Tip: If you do not have a flat-rate data plan from your service provider, to save data costs in your phone bill, you can use a WLAN to connect to the internet.

Go to a web page

Select **Go to address**, and enter the address.

Clear browsing history

Select Menu > Internet.

A cache is a memory location that is used to store data temporarily. If you have, or have tried to, access confidential information or a secure service, requiring passwords, clear the cache after each use.

Empty the cache

While browsing a website, select
Options > Tools > Clear the cache.

Clear cookies

While browsing a website, select
Options > Tools > Clear cookies.

Prevent cookies from being stored

Select **Web settings > Security > Cookies.**

My favorites

You can manage images, video clips, and music files, or enter **Applications.**

Select **Menu > Gallery.**

Games and applications

About games and applications

Select **Menu** > **Applications and Extras**.

Your device may contain games or applications. They can be stored in the device memory or on a memory card, and can be arranged in folders.

To view a list of games, select **Games**. To view a list of applications, select **Collection**.

Improve your gaming experience

Activate or deactivate sounds, lights, or vibrations, and improve your gaming experience.

Select **Menu** > **Applications and Extras** > **Options** > **Application sett..**

Download a game or application

You can download games and applications directly to your device.

Select **Menu** > **Applications and Extras** > **Options** > **Downloads**.

Your device supports Java™ ME applications, that have the .jad or .jar file extension. Make sure an application is compatible with your device before downloading.

- 1 Select **App. downloads** or **Game downloads**. A list of available services is displayed.
- 2 Select a service, and follow the instructions.

Tip: Download games and applications from Nokia's Ovi Store. To learn more about Ovi Store, go to www.ovi.com.

About Communities

Select **Menu** > **Applications** > **Extras** > **Collection** > **Communities**, and sign in to your relevant social networking services.

With the Communities application, you can enhance your social networking experience. When signed in to social networking services, such as Facebook or Twitter, you can do the following:

- See your friends' status updates
- Post your own status update
- Instantly share pictures you take with the camera

Only those features that are supported by the social networking service are available.

Using social networking services requires network support. This may involve the transmission of large amounts of data and related data traffic costs. For information about data transmission charges, contact your service provider.

The social networking services are third party services and not provided by Nokia. Check the privacy settings of the social networking service you are using as you may share information with a large group of people. The terms of use of the social networking service apply to sharing information on that service. Familiarise yourself with the terms of use and the privacy practices of that service.

Use the calculator

Select **Menu** > **Applications** > **Calculator**.

- 1 Select **Options** and either the scientific or standard calculator.
- 2 Enter the calculation, and select **=**.

Tip: Use the loan calculator to calculate interest rates, loan periods, or instalments of a loan. To switch to the loan calculator, select **Options**.

Convert currency and measurements About the converter

Select **Menu** > **Applications** > **Extras** > **Collection** > **Converter**.

With the converter, you can convert measures and currencies from one unit to another.

Convert measures

You can convert measures, such as length, from one unit to another, for example, kilometres to miles.

Select **Menu** > **Applications** > **Extras** > **Collection** > **Converter** and **Select**.

- 1 Select a conversion category.
- 2 Select conversion units.
- 3 Enter a value in one of the unit fields. The converted value is automatically displayed in the other unit field.

Convert currency

With the converter, you can quickly convert currencies.

Select **Menu** > **Applications** > **Extras** > **Collection** > **Converter**.

- 1 Select **Select** > **Currency** and a currency pair.
- 2 Enter the amount for one currency. The converted value is displayed automatically.

Set an exchange rate

Select **Menu** > **Applications** > **Extras** > **Collection** > **Converter**.

Before you can convert currency, you must set the exchange rate.

- 1 Select **Options** > **Set exchange rates**.
- 2 Select a currency pair.
- 3 Enter the exchange rate for one of the currencies.

Add a currency pair

You can add additional currency pairs to be converted.

Select **Menu** > **Applications** > **Extras** > **Collection** > **Converter**.

- 1 Select **Options** > **New currency conv..**
- 2 Enter the names of the two currencies, and select **OK**.
- 3 Enter the exchange rate for one of the currencies.

Protect your device

Lock your device

Want to protect your device against unauthorised use? Define a security code, and set your device to lock itself automatically when you're not using it.

Set a personalised security code

- 1 Select **Menu** > **Settings** and **Security** > **Access codes** > **Change sec. code**.
- 2 Enter the preset security code, 12345.
- 3 Enter a new code. A minimum of 5 characters is required, and numbers, symbols, and upper and lower case letters can be used.

Keep the security code secret and in a safe place separate from your device. If you forget the security code and your device is locked, your device will require service. Additional charges may apply, and all the personal data in your device may be deleted. For more information, contact a Nokia Care point or your device dealer.

Activate the security keyguard

Select **Menu** > **Settings** and **Phone** > **Secur. keyguard** > **On**.

The device is locked when the keys and screen are locked. You need the security code to unlock the device.

Password protect your memory card

Want to protect the memory card against unauthorised use? You can set a password to protect the data.

- 1 Select **Menu** > **Applications** > **Gallery**.
- 2 Select and hold the memory card, and from the pop-up menu, select **Mem. card opt.**.
- 3 Select **Set password**, and enter a password.

Keep the password secret and in a safe place, separate from the memory card.

Format a memory card

Want to delete all content from your memory card? When you format a memory card, all the data on it is deleted.

- 1 Select **Menu** > **Applications** > **Gallery**.
- 2 Select and hold the memory card, and from the pop-up menu, select **Mem. card opt.**.
- 3 Select **Format m. card** > **Yes**.

Prepare your device for recycling

If you buy a new device, or otherwise want to dispose of your device, Nokia recommends that you recycle your device. Beforehand, you may want to remove all personal information and content from your device.

Remove all content and restore settings to the original values

- 1 Back up the content you want to keep to a compatible memory card (if available) or to a compatible computer.
- 2 End all calls and connections.
- 3 Select **Menu** > **Settings** and **Rest. fact. sett.** > **All**.

- 4 Your device switches off and then on again. Check carefully that all your personal content, such as contacts, pictures, music, videos, notes, messages, mails, presentations, games, and other installed applications have been removed. Content and information stored on the memory card or SIM card is not removed.

Green tips



Save energy

You do not need to charge your battery so often if you do the following (if available for your device):

- Close applications and data connections, for example, your Bluetooth connection, when not in use.
- Decrease the brightness of the screen.
- Set your device to enter power saver mode after the minimum period of inactivity, if available in your device.
- Deactivate unnecessary sounds, such as key tones.

Recycle

All materials of this device can be recovered as materials and energy. For information on how to recycle your old Nokia products, go to www.nokia.com/wecycle, or using a mobile device, nokia.mobi/wecycle.

Recycle packaging and user guides at your local recycling scheme.

For more information on the environmental attributes of your device, go to www.nokia.com/ecodeclaration.

e100

e100 is a one-stop self-service provided by China Mobile, including the following service channels:

- **Online service centre:** You can subscribe to China Mobile services, check your account balance or user credit, make online payments, and access online services. For more information, go to www.chinamobile.com.
- **10086 hotline:** You can call 10086 to get information on services, promotions, your account balance, service subscriptions, and Monternet.
- **Message service centre:** You can send a text message containing **10086** to the service number 10086 to get information on promotions, account balance, and service subscriptions.
- **WAP service centre:** To subscribe or get information on services, go to the Monternet homepage, and select **WAP service centre**.
- **Self-service machine:** You can pay your phone bill, print call logs, subscribe to services, or get information on the services.

Product and safety information

Battery

Battery and charger information

This device is intended for use with a BL-5CT rechargeable battery. Nokia may make additional battery models available for this device. Always use original Nokia batteries.

This device is intended for use when supplied with power from the following chargers: AC-8. The exact charger model number may vary depending on the type of plug. The plug

variant is identified by one of the following: E, X, AR, U, A, C, K, or B.

The battery can be charged and discharged hundreds of times, but it will eventually wear out. When the talk and standby times are noticeably shorter than normal, you need to replace the battery.

Battery safety

Always switch the device off and disconnect the charger before removing the battery. When you unplug a charger or an accessory, hold and pull the plug, not the cord.

When your charger is not in use, unplug it from the electrical plug and the device. Do not leave a fully charged battery connected to a charger, as overcharging may shorten the battery's lifetime. If left unused, a fully charged battery will lose its charge over time.

Always keep the battery between 15°C and 25°C (59°F and 77°F). Extreme temperatures reduce the capacity and lifetime of the battery. A device with a hot or cold battery may not work temporarily.

Accidental short-circuiting can happen when a metallic object touches the metal strips on the battery, for example, if you carry a spare battery in your pocket. Short-circuiting may damage the battery or the connecting object.

Do not dispose of batteries in a fire as they may explode. Dispose of batteries according to local regulations. Recycle when possible. Do not dispose as household waste.

Do not dismantle, cut, open, crush, bend, puncture, or shred cells or batteries. If a battery leaks, do not let battery liquid touch skin or eyes. If this happens, immediately flush the affected areas with water, or seek medical help.

Do not modify, remanufacture, attempt to insert foreign objects into the battery, or immerse or expose it to water or other liquids. Batteries may explode if damaged.

Use the battery and charger for their intended purposes only. Improper use, or use of unapproved batteries or chargers may present a risk of fire, explosion, or other hazard, and may invalidate any approval or warranty. If you believe the battery or charger is damaged, take it to a service centre for inspection before continuing to use it. Never use a damaged battery or charger. Only use the charger indoors.

Nokia battery authentication guidelines

Always use original Nokia batteries for your safety. To help ensure that you are getting an original Nokia battery,

purchase it from a Nokia authorised service centre or dealer, and check the hologram label.

Authenticate hologram

- 1 Look at the hologram. You should see the Nokia connecting hands symbol from one angle and the Nokia Original Accessories logo from the other angle.



- 2 Angle the hologram left, right, down, and up. You should see 1, 2, 3 and 4 dots on each side respectively.



However, this is not a total assurance of the authenticity of the battery. If you cannot confirm authenticity or if you have any reason to believe that your Nokia battery with the hologram on the label is not an authentic Nokia battery, stop using the battery and take it to the nearest Nokia authorised service centre or dealer.

For additional information, refer to the warranty and reference leaflet included with your Nokia device.

Take care of your device

Handle your device, battery, charger and accessories with care. The following suggestions help you protect your warranty coverage.

- Keep the device dry. Precipitation, humidity, and all types of liquids or moisture can contain minerals that corrode electronic circuits. If your device gets wet, remove the battery, and allow the device to dry.

- Do not use or store the device in dusty or dirty areas. Moving parts and electronic components can be damaged.
- Do not store the device in high temperatures. High temperatures can shorten the life of the device, damage the battery, and warp or melt plastics.
- Do not store the device in cold temperatures. When the device warms to its normal temperature, moisture can form inside the device and damage electronic circuits.
- Do not attempt to open the device other than as instructed in the user guide.
- Unauthorised modifications may damage the device and violate regulations governing radio devices.
- Do not drop, knock, or shake the device. Rough handling can break internal circuit boards and mechanics.
- Only use a soft, clean, dry cloth to clean the surface of the device.
- Do not paint the device. Paint can clog the moving parts and prevent proper operation.
- Switch off the device and remove the battery from time to time for optimum performance.
- Keep your device away from magnets or magnetic fields.
- To keep your important data safe, store it in at least two separate places, such as your device, memory card, or computer, or write down important information.

Recycle

Always return your used electronic products, batteries, and packaging materials to dedicated collection points. This way you help prevent uncontrolled waste disposal and promote the recycling of materials. Check product environmental information and how to recycle your Nokia products at www.nokia.com/werecycle, or with a mobile device, <http://nokia.mobi/werecycle>.

About Digital Rights Management

When using this device, obey all laws and respect local customs, privacy and legitimate rights of others, including copyrights. Copyright protection may prevent you from copying, modifying, or transferring images, music, and other content.

Content owners may use different types of digital rights management (DRM) technologies to protect their intellectual property, including copyrights. This device uses various types of DRM software to access DRM-protected content. With this device you can access content protected with WMDRM 10, OMA DRM 1.0, OMA DRM 1.0 forward lock, and OMA DRM 2.0. If

certain DRM software fails to protect the content, content owners may ask that such DRM software's ability to access new DRM-protected content be revoked. Revocation may also prevent renewal of such DRM-protected content already in your device. Revocation of such DRM software does not affect the use of content protected with other types of DRM or the use of non-DRM-protected content.

Digital rights management (DRM) protected content comes with an associated licence that defines your rights to use the content.

If your device has OMA DRM-protected content, to back up both the licences and the content, use the backup feature of Nokia Ovi Suite.

Other transfer methods may not transfer the licences which need to be restored with the content for you to be able to continue the use of OMA DRM-protected content after the device memory is formatted. You may also need to restore the licences in case the files on your device get corrupted.

If your device has WMDRM-protected content, both the licences and the content will be lost if the device memory is formatted. You may also lose the licences and the content if the files on your device get corrupted. Losing the licences or the content may limit your ability to use the same content on your device again. For more information, contact your service provider.

Some licences may be connected to a specific SIM card, and the protected content can be accessed only if the SIM card is inserted in the device.

Additional safety information

Small children

Your device, its battery and accessories are not toys. They may contain small parts. Keep them out of the reach of small children.

Operating environment

This device meets RF exposure guidelines in the normal use position at the ear or at least 1.5 centimetres (5/8 inch) away from the body. Any carry case, belt clip, or holder for body-worn operation should not contain metal and should position the device the above-stated distance from your body.

To send data files or messages requires a quality connection to the network. Data files or messages may be delayed until such a connection is available. Follow the separation distance instructions until the transmission is completed.

Medical devices

Operation of radio transmitting equipment, including wireless phones, may interfere with the function of inadequately protected medical devices. Consult a physician or the manufacturer of the medical device to determine whether they are adequately shielded from external RF energy. Switch off your device when regulations posted instruct you to do so, for example, in hospitals.

Implanted medical devices

Manufacturers of medical devices recommend a minimum separation of 15.3 centimetres (6 inches) between a wireless device and an implanted medical device, such as a pacemaker or implanted cardioverter defibrillator, to avoid potential interference with the medical device. Persons who have such devices should:

- Always keep the wireless device more than 15.3 centimetres (6 inches) from the medical device.
- Not carry the wireless device in a breast pocket.
- Hold the wireless device to the ear opposite the medical device.
- Turn the wireless device off if there is any reason to suspect that interference is taking place.
- Follow the manufacturer directions for the implanted medical device.

If you have any questions about using your wireless device with an implanted medical device, consult your health care provider.

Hearing

Warning:

When you use the headset, your ability to hear outside sounds may be affected. Do not use the headset where it can endanger your safety.

Some wireless devices may interfere with some hearing aids.

Vehicles

Radio signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles such as electronic fuel injection, electronic antilock braking, electronic speed control, and air bag systems. For more information, check with the manufacturer of your vehicle or its equipment.

Only qualified personnel should install the device in a vehicle. Faulty installation or service may be dangerous and may

invalidate your warranty. Check regularly that all wireless device equipment in your vehicle is mounted and operating properly. Do not store or carry flammable liquids, gases, or explosive materials in the same compartment as the device, its parts, or accessories. Remember that air bags inflate with great force. Do not place your device or accessories in the air bag deployment area.

Switch off your device before boarding an aircraft. The use of wireless devices in an aircraft may be dangerous to the operation of the aircraft and may be illegal.

Potentially explosive environments

Switch off your device in any area with a potentially explosive atmosphere. Obey all posted instructions. Sparks in such areas could cause an explosion or fire resulting in bodily injury or death. Switch off the device at refuelling points such as near gas pumps at service stations. Observe restrictions in fuel depots, storage, and distribution areas; chemical plants; or where blasting operations are in progress. Areas with a potentially explosive atmosphere are often, but not always, clearly marked. They include areas where you would be advised to turn off your vehicle engine, below deck on boats, chemical transfer or storage facilities and where the air contains chemicals or particles such as grain, dust, or metal powders. You should check with the manufacturers of vehicles using liquefied petroleum gas (such as propane or butane) to determine if this device can be safely used in their vicinity.

Emergency calls

Make an emergency call

- 1 Ensure the device is switched on.
- 2 Check for adequate signal strength. You may also need to do the following:
 - Insert a SIM card.
 - Remove call restrictions you have activated for your device, such as call barring, fixed dialling, or closed user group.
 - Ensure your device is not in an offline or flight profile.
 - If the device screen and keys are locked, unlock them.
- 3 To clear the display, press the end key as many times as needed.
- 4 Select Call.
- 5 Enter the official emergency number for your present location. Emergency call numbers vary by location.
- 6 Press the call key.

- 7 Give the necessary information as accurately as possible. Do not end the call until given permission to do so.

Important: Activate both cellular and internet calls, if your device supports internet calls. The device may attempt to make emergency calls both through cellular networks and through your internet call service provider. Connections in all conditions cannot be guaranteed. Never rely solely on any wireless device for essential communications like medical emergencies.

Protect your device from harmful content

Your device may be exposed to viruses and other harmful content. Take the following precautions:

- Be cautious when opening messages. They may contain malicious software or otherwise be harmful to your device or computer.
- Be cautious when accepting connectivity requests, browsing the internet, or downloading content. Do not accept Bluetooth connections from sources you do not trust.
- Only install and use services and software from sources that you trust and that offer adequate security and protection.
- Install antivirus and other security software on your device and any connected computer. Only use one antivirus application at a time. Using more may affect performance and operation of the device and/or computer.
- If you access preinstalled bookmarks and links to third party internet sites, take the appropriate precautions. Nokia does not endorse or assume liability for such sites.

Certification information (SAR)

This mobile device meets guidelines for exposure to radio waves.

Your mobile device is a radio transmitter and receiver. It is designed not to exceed the limits for exposure to radio waves recommended by international guidelines. These guidelines were developed by the independent scientific organisation ICNIRP and include safety margins designed to assure the protection of all persons, regardless of age and health.

The exposure guidelines for mobile devices employ a unit of measurement known as the Specific Absorption Rate or SAR. The SAR limit stated in the ICNIRP guidelines is 2.0 watts/kilogram (W/kg) averaged over 10 grams of tissue. Tests for SAR are conducted using standard operating positions with

the device transmitting at its highest certified power level in all tested frequency bands. The actual SAR level of an operating device can be below the maximum value because the device is designed to use only the power required to reach the network. That amount changes depending on a number of factors such as how close you are to a network base station.

The highest SAR value under the ICNIRP guidelines for use of the device at the ear is 0.87 W/kg.

Use of device accessories may result in different SAR values. SAR values may vary depending on national reporting and testing requirements and the network band. Additional SAR information may be provided under product information at www.nokia.com.

Your mobile device is also designed to meet the requirements for exposure to radio waves established by the Federal Communications Commission (USA) and Industry Canada. These requirements set a SAR limit of 1.6 W/kg averaged over one gram of tissue. The highest SAR value reported under this standard during product certification for use at the ear is 0.99 W/kg and when properly worn on the body is 0.58 W/kg.

DECLARATION OF CONFORMITY

CE 0434 ⓘ

Hereby, NOKIA CORPORATION declares that this RM-662 product is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC. A copy of the Declaration of Conformity can be found at www.nokia.com/phones/declaration_of_conformity/.

© 2010 Nokia. All rights reserved.

Nokia, Nokia Connecting People, Ovi, Nokia Xpress print, Nokia Xpress audio messaging, and Navi are trademarks or registered trademarks of Nokia Corporation. Nokia tune is a sound mark of Nokia Corporation. Other product and company names mentioned herein may be trademarks or tradenames of their respective owners.

Reproduction, transfer, distribution, or storage of part or all of the contents in this document in any form without the prior written permission of Nokia is prohibited. Nokia operates a policy of continuous development. Nokia reserves the right to make changes and improvements to any of the products described in this document without prior notice.



Includes RSA BSAFE cryptographic or security protocol software from RSA Security.



Java and all Java-based marks are trademarks or registered trademarks of Sun Microsystems, Inc.

This product is licensed under the MPEG-4 Visual Patent Portfolio License (i) for personal and noncommercial use in connection with information which has been encoded in compliance with the MPEG-4 Visual Standard by a consumer engaged in a personal and noncommercial activity and (ii) for use in connection with MPEG-4 video provided by a licensed video provider. No license is granted or shall be implied for any other use. Additional information, including that related to promotional, internal, and commercial uses, may be obtained from MPEG LA, LLC. See <http://www.mpegla.com>.

To the maximum extent permitted by applicable law, under no circumstances shall Nokia or any of its licensors be responsible for any loss of data or income or any special, incidental, consequential or indirect damages howsoever caused.

The contents of this document are provided "as is". Except as required by applicable law, no warranties of any kind, either express or implied, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose, are made in relation to the accuracy, reliability or contents of this document. Nokia reserves the right to revise this document or withdraw it at any time without prior notice.

The availability of products, features, applications and services may vary by region. For more information, contact your Nokia dealer or your service provider. This device may contain commodities, technology or software subject to export laws and regulations from the US and other countries. Diversion contrary to law is prohibited.

Nokia does not provide a warranty for or take any responsibility for the functionality, content, or end-user support of third-party applications provided with your device. By using an application, you acknowledge that the application is provided as is. Nokia does not make any representations, provide a warranty, or take any responsibility for the functionality, content, or end-user support of third-party applications provided with your device.

FCC/INDUSTRY CANADA NOTICE

Your device may cause TV or radio interference (for example, when using a telephone in close proximity to receiving equipment). The FCC or Industry Canada can require you to stop using your telephone if such interference cannot be eliminated. If you require assistance, contact your local service facility. This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Any changes or modifications not expressly approved by Nokia could void the user's authority to operate this equipment.

Nokia C3-01m customised for China Mobile

The instructions in this user guide only apply to Nokia C3-01m customised for China Mobile.

The post-sales service point and service content are similar for both customised and other non-customised devices. With regards to the menus and features provided with the device customised for China Mobile, see Monternet or contact China Mobile customer service hotline for more information, post-sales service, and technical support.

Nokia does not provide any warranty on technical support for the services rendered by any network service provider, content provider, or service provider.

For information on the content and pricing of the services provided by China Mobile, contact China Mobile customer service hotline.

Model number: C3-01m

FCC-Draft/Issue 1 EN

Index

A

access codes	9
accounts	27, 28
alarm clock	38, 0, 38
alarms	38, 0, 38
anniversary entries	39
antennas	8
applications	47

B

backing up data	14
battery	
— charging	7, 8
— inserting	6
birthday entries	39
Bluetooth	31, 32, 33
browser	45
<i>See web browser</i>	
business cards	19, 32

C

cable connection	33
cache	45
calculator	48
Calendar	39
calendar	32
calls	
— conference	17
— diverting	16
— internet calls	16
— log	15, 16
— making	15
— restricting	17
camera	
— recording videos	40
— sending pictures and videos	41

— taking pictures	40
charging the battery	7, 8
chat services (IM)	27, 28
China Mobile	
— customer service	15
— services	15
clock	38, 0, 38
connectivity	31, 34
contacts	
— adding	18
— copying	11, 19
— groups	19, 25
— saving	16, 18, 19
— sending	19
— widgets	29
conversations	26
converter	48
copying content	11, 33, 42
countdown timer	38

D

data connections	
— Bluetooth	31
— WLAN	34
date and time	38
device	
— switching on/off	9
dictionary	23
downloads	
— applications	47
— games	47

E

e-mail	
<i>See mail</i>	
e100	51
equaliser	42

F		M	
factory settings, restoring	13	mail	27, 35
file management	13, 49	— accounts	27
flashlight	12	— creating	27
flight profile	12	— reading and replying to	27
FM radio	43, 44	— sending	27
G		— setup	27
games	47	mailbox	
H		— voice	26
handwriting recognition	24	meeting entries	39
home screen	11, 29, 30	memory	49
I		memory card	7, 49
IM (instant messaging)	27, 28	messages	26
images		— attachments	25
<i>See pictures</i>		— audio	26
inbox, messages	26	— sending	25
indicators	11	MMS (multimedia message service)	25
input methods	20	Monternet	45
internet	45	multimedia messages	25
internet calls	16	music	42
K		— copying	42
keyguard	9	My favorites	46
keys and parts	6	My Nokia	13
L		N	
lock code	9, 49	Nokia Messaging	
locking		— chat services (IM)	27
— device	49	— mail	27
— keys	9	Nokia Ovi Suite	36
— screen	9	Nokia support information	13
loudspeaker	11, 43	Nokia's Ovi services	35
lunar calendar	39	Notes	39
		O	
		offline profile	12
		Ovi	35, 36
		Ovi Contacts	35
		Ovi Files	36
		Ovi Mail	35

Ovi Music	36	restoring settings	13
Ovi Organiser	36	ringing tones	30
Ovi Player	37		
Ovi Store	35	S	
Ovi Suite		searching	
See <i>Nokia Ovi Suite</i>		— radio stations	44
		security code	9, 49
		settings	
		— restoring	13
P		shortcuts	11, 29
personalising your device	29, 30	SIM card	12
Phone switch	11	— inserting	6
phonebook manager	20	SMS (short message service)	25
photographs		social networks	47
See <i>pictures</i>		software updates	13
pictures		speed dialling	18
— copying	11, 33	stopwatch	38
— editing	41	strap	8
— organising	41	stroke input	21
— printing	41	support	13
— sending	32, 41	switching device on/off	9
— taking	40	synchronisation	14
— viewing	41		
PIN code	9	T	
PIN2 code	9	taking pictures	
pinyin input	20	See <i>camera</i>	
powering device on/off	9	tasks	39
predictive text input	22	text input	20, 22, 24
printing	41	text messages	25
profiles		themes	30
— creating	30	time and date	38
— personalising	30	tones	30
PUK codes	9	touch screen	10
		transferring content	11, 33, 42
		turning device on/off	9
R			
radio	43, 44	U	
recording		updates	
— calls	44	— device software	13
— sounds	44		
— videos	40		
restoring data	14		

USB charging	8
USB connection	33

V

videos	
— copying	11, 33
— playing	41, 42
— recording	40
— sending	32, 41
voice messages	26
volume	11

W

web	45
web browser	45
— browsing pages	45
— cache	45
— cookies	45
WLAN (wireless local area network)	34