



Nokia X1-00 User Guide

 


555555
Issue 1



2 www.nokia.com/support

| | | | |
|---------------------------------|-----------|---------------------------------------|-----------|
| Contents | | Protect the environment | 22 |
| | | Save energy | 22 |
| | | Recycle | 23 |
| Safety | 3 | Product and safety information | 23 |
| Get started | 5 | Index | 33 |
| Insert the SIM card and battery | 5 | | |
| Insert or remove a memory card | 7 | | |
| Charge the battery | 9 | | |
| Switch on or off | 10 | | |
| Your phone | 11 | | |
| Keys and parts | 11 | | |
| Make and answer a call | 13 | | |
| Text input | 14 | | |
| Message | 15 | | |
| Contacts | 16 | | |
| Multi-phonebook | 17 | | |
| Listen to music | 18 | | |
| FM Radio | 19 | | |
| Flashlight | 21 | | |
| Support | 21 | | |



Safety

Read these simple guidelines. Not following them may be dangerous or illegal. Read the complete user guide for further information.

SWITCH OFF IN RESTRICTED AREAS



Switch the device off when mobile phone use is not allowed or when it may cause interference or danger, for example, in aircraft, near medical equipment, fuel, chemicals, or blasting areas.

ROAD SAFETY COMES FIRST



Obey all local laws. Always keep your hands free to operate the vehicle while driving. Your first consideration while driving should be road safety.

INTERFERENCE

 
 


All wireless devices may be susceptible to interference, which could affect performance.

QUALIFIED SERVICE



Only qualified personnel may install or repair this product.



BATTERIES AND OTHER ACCESSORIES



Use only batteries, chargers and other accessories approved by Nokia for use with this device. Do not connect incompatible products.

KEEP YOUR DEVICE DRY



Your device is not water-resistant. Keep it dry.

PROTECT YOUR HEARING




Listen to a headset at a moderate level, and do not hold the device near your ear when the loudspeaker is in use.



Get started

 
Insert the SIM card and battery

 **Important:** Do not use a mini-UICC SIM card, also known as a micro-SIM card, a micro-SIM card with an adapter, or a SIM card that has a mini-UICC cutout (see figure) in this device. A micro SIM card is smaller than the standard SIM card. This device does not support the use of micro-SIM cards and use of incompatible SIM cards may damage the card or the device, and may corrupt data stored on the card.




The SIM card and its contacts can be easily damaged by scratches or bending, so be careful when handling, inserting, or removing the card.


- 1 Place your finger in the recess at the bottom of the device, and carefully lift and remove the back cover (1).
- 2 If the battery is inserted, lift the battery out (2).




6

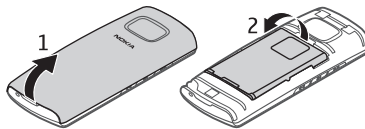 


 - 3 Open the SIM card holder (3). Make sure the contact area is facing down, and insert the SIM card (4). Close the holder.

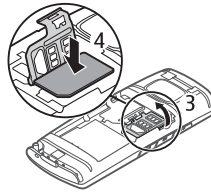


  - 4 Line up the contacts of the battery and the battery compartment, and insert the battery (5). To replace the back cover, direct the top locking catches toward their slots (6), and press down until the cover locks into place (7).





7

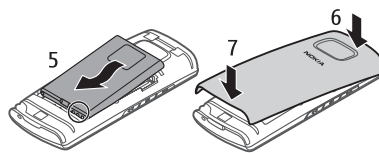 


This phone is intended for use with the BL-5J battery.


Insert or remove a memory card

Use only compatible memory cards approved by Nokia for use with this device. Incompatible cards may damage the card and the device and corrupt data stored on the card.

 Your device supports microSD cards with a capacity of up to 16 GB.




Insert a memory card

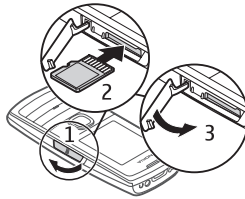 


- 1 Open the cover of the memory card slot.
- 2 Insert the memory card. Push the card in, until it locks into place. Make sure the contact area is facing up.
- 3 Close the slot cover.

You can remove or replace the memory card without switching the device off.

Remove the memory card

 **Important:** Do not remove the memory card when an application is using it. Doing so may damage the memory card and the device, and corrupt data stored on the card.

 - 1 Open the cover of the memory card slot.




- 2 Push the card in gently, until it is released, and pull the card out.
- 3 Close the slot cover.

Charge the battery

Your battery has been partially charged at the factory, but you may need to recharge it before you can switch on your device for the first time.

 
If the device indicates a low charge, do the following:

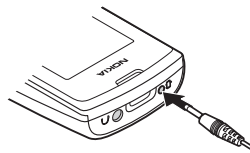

- 1 Connect the charger to a wall outlet.
- 2 Connect the charger to the device.
- 3 When the device indicates a full charge, disconnect the charger from the device, then from the wall outlet.

 Tip: To save energy, unplug the charger when the battery is fully charged.





10

You do not need to charge the battery for a specific length of time, and you can use the device while it is charging.

 
If the battery is completely discharged, it may take several minutes before the charging indicator appears on the display or before any calls can be made.

If the battery has not been used for a long time, to begin charging, you may need to connect the charger, then disconnect and reconnect it.

It may take longer than expected before the device is fully charged, due to the large capacity of the BL-5J battery.





Switch on or off

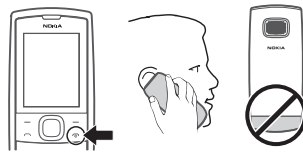

Press and hold the end key.

Use the phone only in its normal operating position.

  
Avoid touching the antenna area unnecessarily while the antenna is transmitting or receiving. Contact with




antennas affects the communication quality and may cause a higher power level during operation and may reduce the battery life.

Your phone

 Keys and parts

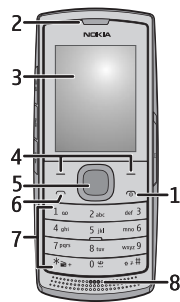


 - 1 End/Power key
- 2 Earpiece
- 3 Display
- 4 Selection keys
- 5 Navi™ key (scroll key)
- 6 Call key





12

 - 7 Keypad
- 8 Microphone

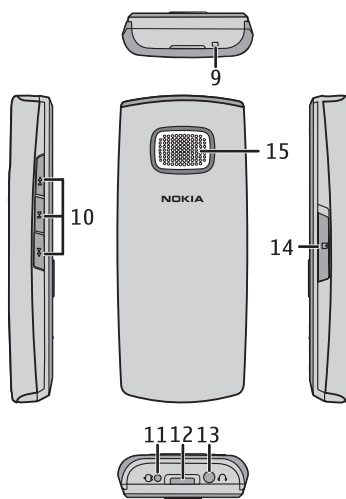

- 9 Wrist strap hole
- 10 Music keys

 

 

- 11 Charger connector
- 12 Flashlight
- 13 Headset connector/Nokia AV Connector (3.5 mm)
- 14 Memory card slot
- 15 Loudspeaker

Make and answer a call**Make a call**

Enter the phone number, including the country code and area code, if necessary, and press the call key.

Answer a call

Press the call key.

End or reject a call

 
Press the end key.

Use the loudspeaker or earpiece

During a call, select Loudsp. or Hands..


Adjust the volume

During a call, scroll left or right to adjust the volume of the earpiece or headset.



Text input
Write text

To enter text, you can use traditional or predictive text input. Not all languages are supported by predictive text input.

Use traditional text input 

Press a key repeatedly until the desired letter is displayed.

Activate predictive text input 

Select **Options** > **Dictionary** and the desired language.

Deactivate predictive text input

Select **Options** > **Dictionary** > **Dictionary off**.

When using predictive text input, press each key once for a single letter. If the desired word is displayed, press **0**, and start writing the next word. If **?** is displayed after the word, the word is not in the dictionary.

Change a word

Press ***** repeatedly until the desired word is displayed.

Add a word

Select **Spell**, enter the word using traditional text input, and select **OK**.

Add a space

Press **0**.

Change text input method

Press **#** repeatedly, and check the indicator at the top of the display.

Add a number

Press and hold the desired number key.

Add a special character

Press ***** when using traditional text input; press and hold ***** when using predictive text input.

Clear a whole message

Select **Options > Clear text**.

You can undo the clearing of a whole message, but only right after you have selected **Clear text**.

Undo clearing of a whole message

Select **Options > Undo clear**.

Message

The message services can only be used if they are supported by your service provider.



You can send text messages that are longer than the character limit for a single message. Longer messages are sent as two or more messages. Your service provider may charge accordingly.

Characters with accents, other marks, or some language options, take more space, and limit the number of characters that can be sent in a single message.

Write and send a message

 
- 1 Select **Menu** > **Messages** > **Create message**.
- 2 Write the message. The message length indicator shows how many characters you can enter in the message.
- 3 Select **Options** > **Send**, enter the recipient's phone number or select it from the contacts list, and select **OK**.

Delete messages

Select **Menu** > **Messages** > **Delete messages** > **All read** or the desired folder.

Contacts

You can save names and phone numbers in the phone and SIM card memory. The contacts list can contain up to 500 contacts, stored in the phone memory.



Search for a contact

Scroll down in the standby mode, enter the first characters or letters of the name, and scroll to the desired contact.

Save contacts to the contacts list

Select Menu > Contacts > Add contact.

Copy contacts between the phone and SIM card memory

Select Menu > Contacts > Copy.

Multi-phonebook

 
Your phone supports up to five separate phonebooks for multiple users. When the multi-phonebook is activated, only the contacts in the active phonebook are visible.

A contact can belong to one or several phonebooks. The contacts in Shared contacts are accessible from all phonebooks.

Select Menu > Contacts > Settings > Multi-Phonebook and the appropriate options.

Activate the multi-phonebook

Select Phonebook style > Multi-Phonebook.



Activate a phonebook

Select **Current phonebook** and the desired phonebook or **Shared contacts**.

Assign a contact to one or more phonebooks

Select **Manage contacts** and the desired contact.

Rename a phonebook

Select **Rename phonebooks** and the desired phonebook.

Listen to music

You can listen to your MP3 music files with the music player.

Select **Menu > Music > Mp3 Music player**.

To play music, you need to store the music files on a memory card.

Start or pause playback


Press ►||.

Skip to the previous song

Press ◀◀.

Skip to the next song

 Press ▶▶.



Change the volume

Scroll left or right.

Set the music player to play in the background

Press the end key.

Close the music player when it is playing in the background

Press and hold the end key.

FM Radio**Listen to the radio**

Enjoy your favourite FM radio stations on the go!

- 1 Attach a compatible headset to the device.
- 2 Select **Menu** > **Music** > **Radio**.

Change the volume

 
Scroll left or right.

Listen using the headset or the loudspeaker

Select **Options** > **Loudspeaker** or **Options** > **Headset**.

Close the radio

Select **Options** > **Switch off**.



Set the radio to play in the background

Press the end key.

Close the radio when it is playing in the background

Press and hold the end key.

Find and save a radio station

Search for your favourite radio stations, and save them, so you can easily listen to them later.

Select **Menu > Music > Radio**.

- 1 Select **Options > Auto tuning**, and scroll up or down.
- 2 To enter a frequency manually, select **Options > Set frequency**.
- 3 To save the found station, select **Options > Save channel**.

 
Rename a station

Go to the station, and select **Options > Rename**.

Delete a station

Go to the station, and select **Options > Delete channel**.





Set the clock radio

Want to wake up to the sound of the radio?

Select **Menu > Music > Radio**.

You need to have saved at least one radio station.

- 1 Select **Options > Clock radio**.
- 2 Set the wake up time.
- 3 Select **OK**.

Flashlight

Turn the flashlight on

Scroll up twice in the standby mode, or select **Menu > Extras > Flashlight > On**.

Turn the flashlight off

 
Scroll up once in the standby mode, or select **Menu > Extras > Flashlight > Off**.

Do not point the flashlight at anyone's eye.

Support

When you want to learn more about how to use your product or you are unsure how your device should






function, go to www.nokia.com/support, or using a mobile device, nokia.mobi/support.

If this does not resolve your issue, do one of the following:

- Reboot your device. Switch off the device, and remove the battery. After about a minute, replace the battery, and switch on the device.
- Restore the original factory settings.

 If your issue remains unsolved, contact Nokia for repair options. Go to www.nokia.com/repair, or in Latin America, www.nokia-latinoamerica.com/centrosdeservicio. Before sending your device for repair, always back up your device data.



Protect the environment

Save energy

You do not need to charge your battery so often if you do the following:

- Close applications and data connections when not in use.
- Deactivate unnecessary sounds, such as key tones.



Recycle

When this device has reached the end of its working life, all of its materials can be recovered as materials and energy. To guarantee the correct disposal and reuse, Nokia co-operates with its partners through a program called We:recycle. For information on how to recycle your old Nokia products and where to find collection sites, go to www.nokia.com/werecycle, or using a mobile device, nokia.mobi/werecycle, or call the Nokia Contact Center.

Recycle packaging and user guides at your local recycling scheme.

For more information on the environmental attributes of your device, go to www.nokia.com/ecodeclaration.

Product and safety information**Network services and costs**

Your device is approved for use on the GSM 850 and 1900 MHz networks. To use the device, you need a subscription with a service provider.

 


 
Using network services and downloading content to your device may result in data traffic costs. Some product features require support from the network, and you may need to subscribe to them.

Take care of your device

Handle your device, battery, charger and accessories with care. The following suggestions help you protect your warranty coverage.

- Keep the device dry. Precipitation, humidity, and all types of liquids or moisture can contain minerals that corrode electronic circuits. If your device gets wet, remove the battery, and allow the device to dry.
- Do not use or store the device in dusty or dirty areas. Moving parts and electronic components can be damaged.
- Do not store the device in high temperatures. High temperatures can shorten the life of the device, damage the battery, and warp or melt plastics.
- Do not store the device in cold temperatures. When the device warms to its normal temperature, moisture can form inside the device and damage electronic circuits.
- Do not attempt to open the device other than as instructed in the user guide.
- Unauthorised modifications may damage the device and violate regulations governing radio devices.
- Do not drop, knock, or shake the device. Rough handling can break internal circuit boards and mechanics.
- Only use a soft, clean, dry cloth to clean the surface of the device.
- Do not paint the device. Paint can clog the moving parts and prevent proper operation.
- Switch off the device and remove the battery from time to time for optimum performance.
- Keep your device away from magnets or magnetic fields.





- To keep your important data safe, store it in at least two separate places, such as your device, memory card, or computer, or write down important information.

Recycle

Always return your used electronic products, batteries, and packaging materials to dedicated collection points. This way you help prevent uncontrolled waste disposal and promote the recycling of materials. Check product environmental information and how to recycle your Nokia products at www.nokia.com/werecycle, or with a mobile device, <http://nokia.mobi/werecycle>.

Batteries and chargers
Battery and charger information

This device is intended for use with a BL-5J rechargeable battery. Nokia may make additional battery models available for this device. Always use original Nokia batteries.

 
 
This device is intended for use when supplied with power from the following chargers: AC-3. The exact charger model number may vary depending on the type of plug. The plug variant is identified by one of the following: E, X, AR, U, A, C, K, or B.

 
The battery can be charged and discharged hundreds of times, but it will eventually wear out. When the talk and standby times are noticeably shorter than normal, you need to replace the battery.

Battery safety

Always switch the device off and disconnect the charger before removing the battery. When you unplug a charger or an accessory, hold and pull the plug, not the cord.

When your charger is not in use, unplug it from the electrical plug and the device. Do not leave a fully charged battery connected to a charger, as overcharging may shorten the battery's lifetime. If left unused, a fully charged battery will lose its charge over time.





Always keep the battery between 15°C and 25°C (59°F and 77°F). Extreme temperatures reduce the capacity and lifetime of the battery. A device with a hot or cold battery may not work temporarily.

Accidental short-circuiting can happen when a metallic object touches the metal strips on the battery, for example, if you carry a spare battery in your pocket. Short-circuiting may damage the battery or the connecting object.

Do not dispose of batteries in a fire as they may explode. Dispose of batteries according to local regulations. Recycle when possible. Do not dispose as household waste.

Do not dismantle, cut, open, crush, bend, puncture, or shred cells or batteries. If a battery leaks, do not let battery liquid touch skin or eyes. If this happens, immediately flush the affected areas with water, or seek medical help.

Do not modify, remanufacture, attempt to insert foreign objects into the battery, or immerse or expose it to water or other liquids. Batteries may explode if damaged.

Use the battery and charger for their intended purposes only. Improper use, or use of unapproved batteries or chargers may present a risk of fire, explosion, or other hazard, and may invalidate any approval or warranty. If you believe the battery or charger is damaged, take it to a service centre for inspection before continuing to use it. Never use a damaged battery or charger. Only use the charger indoors.

 
Additional safety information

Emergency calls

Make an emergency call

- 1 Ensure the device is switched on.
- 2 Check for adequate signal strength. You may also need to do the following:
 - Insert a SIM card.
 - Remove call restrictions you have activated for your device, such as call barring, fixed dialling, or closed user group.





- Ensure your device is not in an offline or flight profile.
- 3 To clear the display, press the end key as many times as needed.
 - 4 Enter the official emergency number for your present location. Emergency call numbers vary by location.
 - 5 Press the call key.
 - 6 Give the necessary information as accurately as possible. Do not end the call until given permission to do so.



Important: Activate both cellular and internet calls, if your device supports internet calls. The device may attempt to make emergency calls both through cellular networks and through your internet call service provider. Connections in all conditions cannot be guaranteed. Never rely solely on any wireless device for essential communications like medical emergencies.

Small children

Your device, its battery and accessories are not toys. They may contain small parts. Keep them out of the reach of small children.

 
Medical devices

Operation of radio transmitting equipment, including wireless phones, may interfere with the function of inadequately protected medical devices. Consult a physician or the manufacturer of the medical device to determine whether they are adequately shielded from external RF energy. Switch off your device when regulations posted instruct you to do so, for example, in hospitals.

Implanted medical devices

Manufacturers of medical devices recommend a minimum separation of 15.3 centimetres (6 inches) between a wireless device and an implanted medical device, such as a pacemaker or implanted cardioverter defibrillator, to avoid potential interference with the medical device. Persons who have such devices should:






- Always keep the wireless device more than 15.3 centimetres (6 inches) from the medical device.
- Not carry the wireless device in a breast pocket.
- Hold the wireless device to the ear opposite the medical device.
- Turn the wireless device off if there is any reason to suspect that interference is taking place.
- Follow the manufacturer directions for the implanted medical device.

If you have any questions about using your wireless device with an implanted medical device, consult your health care provider.

Accessibility solutions

Nokia is committed to making mobile phones easy to use for all individuals, including those with disabilities. For more information, visit the Nokia website at www.nokiaaccessibility.com.

 
Hearing

 
 **Warning:**
When you use the headset, your ability to hear outside sounds may be affected. Do not use the headset where it can endanger your safety.

Some wireless devices may interfere with some hearing aids.

Operating environment

This device meets RF exposure guidelines in the normal use position at the ear or at least 1.0 centimetre (3/8 inch) away from the body. Any carry case, belt clip, or holder for body-worn operation should not contain metal and should position the device the above-stated distance from your body.





To send data files or messages requires a quality connection to the network. Data files or messages may be delayed until such a connection is available. Follow the separation distance instructions until the transmission is completed.

Vehicles

 
 
Radio signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles such as electronic fuel injection, electronic antilock braking, electronic speed control, and air bag systems. For more information, check with the manufacturer of your vehicle or its equipment.

 
Only qualified personnel should install the device in a vehicle. Faulty installation or service may be dangerous and may invalidate your warranty. Check regularly that all wireless device equipment in your vehicle is mounted and operating properly. Do not store or carry flammable liquids, gases, or explosive materials in the same compartment as the device, its parts, or accessories. Remember that air bags inflate with great force. Do not place your device or accessories in the air bag deployment area.

Switch off your device before boarding an aircraft. The use of wireless devices in an aircraft may be dangerous to the operation of the aircraft and may be illegal.

Potentially explosive environments

Switch off your device in any area with a potentially explosive atmosphere. Obey all posted instructions. Sparks in such areas could cause an explosion or fire resulting in bodily injury or death. Switch off the device at refuelling points such as near gas pumps at service stations. Observe restrictions in fuel depots, storage, and distribution areas; chemical plants; or where blasting operations are in progress. Areas with a potentially explosive atmosphere are often, but not always, clearly marked. They include areas where you would be advised to turn off your vehicle engine, below deck on boats, chemical transfer or storage facilities and where the air contains chemicals or particles such as grain, dust, or metal powders. You should check with the manufacturers of vehicles using liquefied petroleum gas (such as propane or butane) to determine if this device can be safely used in their vicinity.





Certification information (SAR)

This mobile device meets guidelines for exposure to radio waves.

 
 
Your mobile device is a radio transmitter and receiver. It is designed not to exceed the limits for exposure to radio waves recommended by international guidelines. These guidelines were developed by the independent scientific organisation ICNIRP and include safety margins designed to assure the protection of all persons, regardless of age and health.

 
The exposure guidelines for mobile devices employ a unit of measurement known as the Specific Absorption Rate or SAR. The SAR limit stated in the ICNIRP guidelines is 2.0 watts/kilogram (W/kg) averaged over 10 grams of tissue. Tests for SAR are conducted using standard operating positions with the device transmitting at its highest certified power level in all tested frequency bands. The actual SAR level of an operating device can be below the maximum value because the device is designed to use only the power required to reach the network. That amount changes depending on a number of factors such as how close you are to a network base station.

The highest SAR value under the ICNIRP guidelines for use of the device at the ear is 0.72 W/kg.

Use of device accessories may result in different SAR values. SAR values may vary depending on national reporting and testing requirements and the network band. Additional SAR information may be provided under product information at www.nokia.com.

Your mobile device is also designed to meet the requirements for exposure to radio waves established by the Federal Communications Commission (USA) and Industry Canada. These requirements set a SAR limit of 1.6 W/kg averaged over one gram of tissue. The highest SAR value reported under this standard during product certification for use at the ear is 1.01/kg and when properly worn on the body is 0.61 W/kg.





Copyright and other notices

© 2011 Nokia. All rights reserved.

Nokia, Nokia Connecting People, and X1-00 are trademarks or registered trademarks of Nokia Corporation. Nokia tune is a sound mark of Nokia Corporation. Other product and company names mentioned herein may be trademarks or tradenames of their respective owners.

Reproduction, transfer, distribution, or storage of part or all of the contents in this document in any form without the prior written permission of Nokia is prohibited. Nokia operates a policy of continuous development. Nokia reserves the right to make changes and improvements to any of the products described in this document without prior notice.

To the maximum extent permitted by applicable law, under no circumstances shall Nokia or any of its licensors be responsible for any loss of data or income or any special, incidental, consequential or indirect damages howsoever caused.

 
The contents of this document are provided "as is". Except as required by applicable law, no warranties of any kind, either express or implied, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose, are made in relation to the accuracy, reliability or contents of this document. Nokia reserves the right to revise this document or withdraw it at any time without prior notice.

The availability of products, features, applications and services may vary by region. For more information, contact your Nokia dealer or your service provider. This device may contain commodities, technology or software subject to export laws and regulations from the US and other countries. Diversion contrary to law is prohibited.

FCC/INDUSTRY CANADA NOTICE



Your device may cause TV or radio interference (for example, when using a telephone in close proximity to receiving equipment). The FCC or Industry Canada can require you to stop using your telephone if such interference cannot be eliminated. If you





require assistance, contact your local service facility. This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Any changes or modifications not expressly approved by Nokia could void the user's authority to operate this equipment.

  555555/Issue 1 EN



| | |
|-------------------|------------------------------|
| Index | N |
| A | Nokia support information 21 |
| alarm 21 | P |
| B | powering device on/off 10 |
| battery 5 | R |
| — charging 9 | radio 19, 20, 21 |
| C | recycling 22 |
| clock radio 21 | S |
| F | searching |
| flashlight 21 | — radio stations 20 |
| FM radio 19, 20 | SIM card 5 |
| K | support 21 |
| keys and parts 11 | switching device on/off 10 |
| M | T |
| memory card 7 | Text input 14 |
| music 18 | text input 14 |
| | turning device on/off 10 |