


## Nokia 6282 User Guide

---

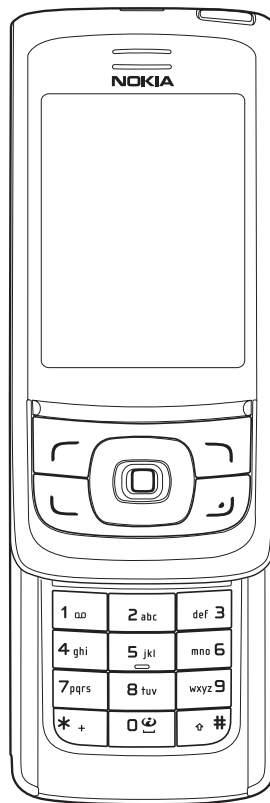

#### DECLARATION OF CONFORMITY

We, NOKIA CORPORATION declare under our sole responsibility that the product RM-79 is in conformity with the provisions of the following Council Directive: 1999/5/EC.

A copy of the Declaration of Conformity can be found from [http://www.nokia.com/phones/declaration\\_of\\_conformity/](http://www.nokia.com/phones/declaration_of_conformity/).

# CE434



The crossed-out wheeled bin means that within the European Union the product must be taken to separate collection at the product end-of life. This applies to your device but also to any enhancements marked with this symbol. Do not dispose of these products as unsorted municipal waste.

PART NO. 9243964, Issue 1  
Copyright © 2005 Nokia. All rights reserved.

Reproduction, transfer, distribution or storage of part or all of the contents in this document in any form without the prior written permission of Nokia is prohibited.

Nokia, Nokia 6282, and Nokia Connecting People are trademarks or registered trademarks of Nokia Corporation. Other product and company names mentioned herein may be trademarks or tradenames of their respective owners.

Nokia tune is a sound mark of Nokia Corporation.

Bluetooth is a registered trademark of Bluetooth SIG, Inc.



Includes RSA BSAFE cryptographic or security protocol software from RSA Security.



Java is a trademark of Sun Microsystems, Inc.

This product is licensed under the MPEG-4 Visual Patent Portfolio License (i) for personal and noncommercial use in connection with information which has been encoded in compliance with the MPEG-4 Visual Standard by a consumer engaged in a personal and noncommercial activity and (ii) for use in connection with MPEG-4 video provided by a licensed video provider. No license is granted or shall be implied for any other use. Additional information including that relating to promotional, internal and commercial uses may be obtained from MPEG LA, LLC. See <http://www.mpegla.com>.

Nokia operates a policy of continuous development. Nokia reserves the right to make changes and improvements to any of the products described in this document without prior notice. Under no circumstances shall Nokia be responsible for any loss of data or income or any special, incidental, consequential or indirect damages howsoever caused.

The contents of this document are provided "as is". Except as required by applicable law, no warranties of any kind, either express or implied, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose, are made in relation to the accuracy, reliability or contents of this document. Nokia reserves the right to revise this document or withdraw it at any time without prior notice.

The availability of particular products may vary by region. Please check with the Nokia dealer nearest to you.

#### EXPORT CONTROLS

This device may contain commodities, technology or software subject to export laws and regulations from the US and other countries. Diversion contrary to law is prohibited.

#### FCC INDUSTRY CANADA NOTICE

Your device may cause TV or radio interference (for example, when using a telephone in close proximity to receiving equipment). The FCC or Industry Canada can require you to stop using your telephone if such interference cannot be eliminated. If you require assistance, contact your local service facility. This device complies with part 15 of the FCC rules. Operation is subject to the condition that this device does not cause harmful interference. Any changes or modifications not expressly approved by Nokia could void the user's authority to operate this equipment.

## Contents

---

<b>For your safety</b> .....	<b>6</b>	Chat session options.....	31
<b>General information</b> .....	<b>9</b>	Set your availability.....	32
Access codes.....	9	Log off service.....	32
Configuration settings service.....	10	<b>7. Messaging</b> .....	<b>33</b>
Download content and applications	11	Text messages (SMS).....	33
Nokia support on the Web.....	11	SmartChip messages.....	34
<b>1. Get started</b> .....	<b>12</b>	Multimedia messages.....	35
Install the SmartChip and battery.	12	Memory full.....	38
Install a memory card.....	13	Folders.....	38
Charge the battery.....	14	Voice mail.....	38
Switch the phone on and off.....	15	Info messages.....	39
Open the keypad.....	16	Service commands.....	39
Proper operating position.....	16	Delete messages.....	39
<b>2. Your phone</b> .....	<b>17</b>	Message settings.....	39
Keys and parts.....	17	<b>8. Recent calls</b> .....	<b>42</b>
Standby mode.....	18	<b>9. MEdia Net</b> .....	<b>43</b>
Keypad lock (keyguard).....	21	Basic operations.....	43
<b>3. Call functions</b> .....	<b>22</b>	Set up browsing.....	43
Make a voice call.....	22	Connect to a service.....	44
Answer or decline a voice call.....	23	Browse pages.....	44
Options during a voice call.....	24	Bookmarks.....	45
<b>4. Write text</b> .....	<b>25</b>	Appearance settings.....	46
Settings.....	25	Security settings.....	47
Predictive text input.....	26	Download settings.....	47
Traditional text input.....	26	Service inbox.....	48
<b>5. Navigate the menus</b> .....	<b>27</b>	Cache memory.....	48
<b>6. Instant messaging (IM) ...</b>	<b>28</b>	Browser security.....	49
Register with an IM service.....	28	<b>10. Operator menu</b> .....	<b>51</b>
Icons and menu items.....	28	<b>11. Games &amp; Apps</b> .....	<b>51</b>
IM menus.....	29	Games.....	51
Log in.....	29	Collection.....	52
Begin an IM session.....	30	<b>12. My Stuff</b> .....	<b>54</b>
Receive and reply to messages.....	30	Format memory card.....	54
Return to chat session.....	31	<b>13. Address Book</b> .....	<b>55</b>
Contacts.....	31	Find a contact.....	55

Save names and phone numbers ...	55	<b>16.Multimedia .....</b>	<b>78</b>
Save numbers and text items .....	55	Camera .....	78
Copy contacts .....	56	Media player .....	79
Edit contact details.....	56	Music player.....	80
Delete contacts .....	56	Radio .....	81
Business cards .....	57	Voice recorder .....	83
Settings .....	57	Equalizer .....	84
Groups.....	57	Stereo widening.....	84
Speed dialing .....	57	<b>17.Audio messages .....</b>	<b>85</b>
Service and my numbers .....	58	Create an audio message .....	85
<b>14.Settings .....</b>	<b>59</b>	Receive an audio message.....	85
Profiles.....	59	<b>18.PC connectivity .....</b>	<b>86</b>
Themes.....	59	Nokia PC Suite.....	86
Tones .....	59	EGPRS, HSCSD, and CSD.....	86
Display .....	60	Data communication applications .	86
Time and date.....	61	<b>19.Battery information .....</b>	<b>87</b>
My shortcuts.....	61	Charging and discharging.....	87
Connectivity .....	62	Nokia battery authentication	
Call.....	69	guidelines.....	88
Phone .....	70	<b>Care and maintenance .....</b>	<b>90</b>
Enhancements .....	71	<b>Additional safety information</b>	<b>91</b>
Configuration.....	71	<b>Index.....</b>	<b>96</b>
Security .....	72		
Restore device .....	73		
<b>15.Tools .....</b>	<b>74</b>		
Alarm clock.....	74		
Calendar .....	75		
To-do list.....	76		
Notes.....	76		
Countdown timer .....	76		
Stopwatch .....	77		

For your safety

## For your safety

---

Read these simple guidelines. Not following them may be dangerous or illegal.  
Read the complete user guide for further information.



### SWITCH ON SAFELY

Do not switch the phone on when wireless phone use is prohibited or when it may cause interference or danger.



### ROAD SAFETY COMES FIRST

Obey all local laws. Always keep your hands free to operate the vehicle while driving. Your first consideration while driving should be road safety.



### INTERFERENCE

All wireless phones may be susceptible to interference, which could affect performance.



### SWITCH OFF IN HOSPITALS

Follow any restrictions. Switch the phone off near medical equipment.



### SWITCH OFF IN AIRCRAFT

Follow any restrictions. Wireless devices can cause interference in aircraft.



### SWITCH OFF WHEN REFUELING

Do not use the phone at a refueling point. Do not use near fuel or chemicals.



### SWITCH OFF NEAR BLASTING

Follow any restrictions. Do not use the phone where blasting is in progress.



### USE SENSIBLY

Use only in the normal position as explained in the product documentation. Do not touch the antenna unnecessarily.



### QUALIFIED SERVICE

Only qualified personnel may install or repair this product.



### ENHANCEMENTS AND BATTERIES

Use only approved enhancements and batteries. Do not connect incompatible products.

## For your safety



### WATER-RESISTANCE

Your phone is not water-resistant. Keep it dry.



### BACK-UP COPIES

Remember to make back-up copies or keep a written record of all important information stored in your phone.



### CONNECTING TO OTHER DEVICES

When connecting to any other device, read its user guide for detailed safety instructions. Do not connect incompatible products.



### EMERGENCY CALLS

Ensure the phone is switched on and in service. Press the end key as many times as needed to clear the display and return to the start screen. Enter the emergency number, then press the call key. Give your location. Do not end the call until given permission to do so.

## About your device

The wireless device described in this guide is approved for use on the GSM 850, 1800, and 1900 networks, and the WCDMA 1900 network. Contact your service provider for more information about networks.


When you use the features in this device, obey all laws and respect privacy and legitimate rights of others.

When you take and use images or video clips, obey all laws and respect local customs as well as privacy and legitimate rights of others.



**Warning:** To use any features in this device, other than the alarm clock, the device must be switched on. Do not switch the device on when wireless device use may cause interference or danger.

## Network services

To use the phone you must have service from a wireless service provider. Many of the features in this device depend on features in the wireless network to function. These network services may not be available on all networks or you may have to make specific arrangements with your service provider before you can utilize network services. Your service provider may need to give you additional instructions for their use and explain what charges will apply. Some networks may have limitations that affect how you can use network services. For instance, some networks may not support all language-dependent characters and services. Network services are designated in this guide by .

#### For your safety

Your service provider may have requested that certain features be disabled or not activated in your device. If so, they will not appear on your device menu. Your device may also have been specially configured. This configuration may include changes in menu names, menu order, and icons. Contact your service provider for more information.

This device supports WAP 2.0 protocols (HTTP and SSL) that run on TCP/IP protocols. Some features of this device, such as multimedia messaging (MMS), browsing, e-mail application, instant messaging, remote synchronization, and content downloading using the browser or MMS, require network support for these technologies.

#### ■ Shared memory

The following features in this device may share memory: my stuff, address book, text messages, multimedia messages, instant messages, e-mail, calendar, to-do notes, Java™ games and applications, and note application. Use of one or more of these features may reduce the memory available for the remaining features sharing memory. For example, saving many Java applications may use all of the available memory. Your device may display a message that the memory is full when you try to use a shared memory feature. In this case, delete some of the information or entries stored in the shared memory features before continuing. Some of the features, such as text messages, may have a certain amount of memory specially allotted to them in addition to the memory shared with other features.

#### ■ Enhancements

##### A few practical rules about accessories and enhancements.

- Keep all accessories and enhancements out of the reach of small children.
- When you disconnect the power cord of any accessory or enhancement, grasp and pull the plug, not the cord.
- Check regularly that enhancements installed in a vehicle are mounted and are operating properly.
- Installation of any complex car enhancements must be made by qualified personnel only.



## General information

---

### ■ Access codes

#### Security code

The security code (5 to 10 digits) helps to protect your phone against unauthorized use. The preset code is 12345. To change the code, and to set the phone to request the code, see "Security," p. 72.

If you enter an incorrect security code five times in succession, the phone ignores further entries of the code. Wait for 5 minutes, and enter the code again.

#### PIN codes

The personal identification number (PIN) code and the universal personal identification number (UPIN) code (4 to 8 digits) help to protect your SmartChip against unauthorized use. See "Security," p. 72. The PIN code is usually supplied with the SmartChip. Set the phone to request the PIN code each time the phone is switched on.

The PIN2 code (4 to 8 digits) may be supplied with the SmartChip and is required for some functions.

The module PIN is required to access the information in the security module. See "Security module," p. 49. The module PIN is supplied with the SmartChip if the SmartChip has a security module in it.

The signing PIN is required for the digital signature. See "Digital signature," p. 50. The signing PIN is supplied with the SmartChip if the SmartChip has a security module in it.

## General information

### PUK codes

The personal unblocking key (PUK) code and the universal personal unblocking key (UPUK) code (8 digits) is required to change a blocked PIN code and UPIN code, respectively. The PUK2 code is required to change a blocked PIN2 code.

If the codes are not supplied with the SmartChip, contact your service provider for the codes.

### Restricting password

The restricting password (4 digits) is required when you use the [Call restrictions](#). See "Security," p. 72. You can obtain the password from your service provider.

If you enter an incorrect restricting password three times in succession, the password is blocked. Contact your service provider or network operator.

## ■ Configuration settings service

Before you use multimedia messaging, instant messaging, e-mail, synchronization, streaming, and the browser, you must have the proper configuration settings on your phone. You may receive the settings directly as a configuration message, which you save to your phone. For more information on availability, contact your network operator, service provider, or nearest authorized Nokia dealer.

When you have received the settings as a configuration message, and the settings are not automatically saved and activated, [Configuration settings received](#) is displayed.

To save the received settings, select [Show](#) > [Save](#). If the phone requests [Enter settings' PIN](#); enter the PIN code for the settings, and select [OK](#). To receive the PIN code, contact the service provider that supplies the settings.

If no settings are saved yet, these settings are saved and set as default configuration settings. Otherwise, the phone asks [Activate saved configuration settings?](#)

To discard the received settings, select [Show](#) > [Discard](#).

## ■ Download content and applications

You may be able to download content, such as themes, tones, and video clips, to the phone (network service). Select the download function (for example, in the *My Stuff* menu). To access the download function, see the respective menu descriptions. For availability of different services, pricing, and tariffs, contact your service provider.



**Important:** Use only services that you trust and that offer adequate security and protection against harmful software.

## ■ Nokia support on the Web

Check [www.nokiausa.com/support](http://www.nokiausa.com/support) or your local Nokia Web site for the latest version of this guide, additional information, downloads, and services related to your Nokia product.

On the Web site, you can get information on the use of Nokia products and services. If you need to contact customer service, check the list of local Nokia Care contact centers at [www.nokiausa.com/customerservice](http://www.nokiausa.com/customerservice).

For maintenance services, check your nearest Nokia Care services location at [www.nokiausa.com/repair](http://www.nokiausa.com/repair).

## 1. Get started

---

### ■ Install the SmartChip and battery

Always switch the device off and disconnect the charger before removing the battery.


Keep all SmartChips out of the reach of small children.

For availability and information on using SmartChip services, contact your SIM card vendor. This may be the service provider, network operator, or other vendor.


This device is intended for use with the BP-6M battery.

The SmartChip and its address book can easily be damaged by scratches or bending, so be careful when handling, inserting, or removing the card.


1. With the back of the phone facing you, slide the back cover to remove it from the phone (1).

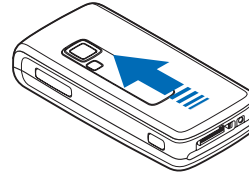

2. To remove the battery, lift it as shown (2).

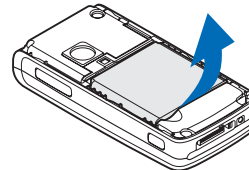


3. To release the SmartChip holder, gently pull the locking clip of the card holder, and open it (3).

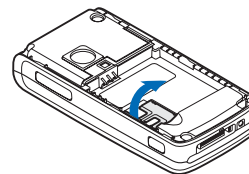


## Get started

4. Insert the SmartChip into the SmartChip holder (4). Make sure that the SmartChip is properly inserted and that the gold-colored contact area on the card is facing downwards.


Close the SmartChip holder, and press it until it snaps into position.

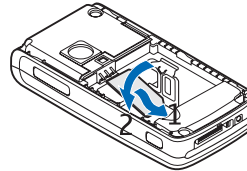

5. Replace the battery (5). See "Nokia battery authentication guidelines," p. 88.

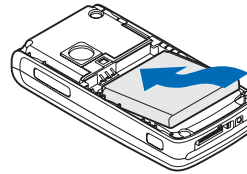

6. Slide the back cover into place (6).

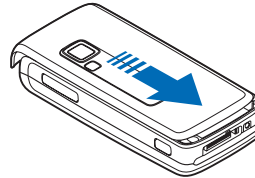

### ■ Install a memory card

Use only compatible miniSD cards with this device. Other memory cards, such as reduced size MMCs, do not fit in the memory card slot and are not compatible with this device. Using an incompatible memory card may damage the memory card as well as the device, and data stored on the incompatible card may be corrupted.



You can use a memory card to extend the memory of *My Stuff*. See "My Stuff," p. 54.


You can insert or change the memory card without switching the phone off.

## Get started



**Important:** Do not remove the memory card in the middle of an operation when the card is being accessed. Removing the card in the middle of an operation may damage the memory card as well as the device, and data stored on the card may be corrupted.

To insert the memory card, open the memory card holder as shown (1). Make sure that the memory card is properly inserted and that the gold-colored contact area on the card is facing upwards (2). Place the memory card in the card holder (3). Close the memory card holder.

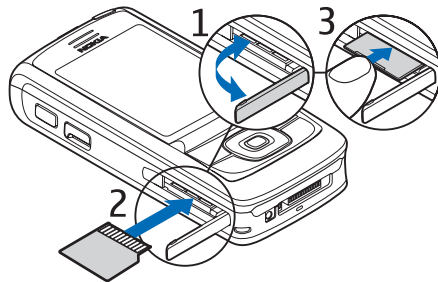

You can use the memory card to save your multimedia files, such as video clips, sound files, and images, in *My Stuff*.

To format the memory card, see "Format memory card," p. 54.

## ■ Charge the battery

Check the model number of any charger before use with this device. This device is intended for use when supplied with power from the AC-1, AC-3, AC-4, or DC-4 charger.




**Warning:** Use only batteries, chargers, and enhancements approved by Nokia for use with this particular model. The use of any other types may invalidate any approval or warranty, and may be dangerous.

For availability of approved enhancements, please check with your dealer. When you disconnect the power cord of any enhancement, grasp and pull the plug, not the cord.

## Get started

1. Connect the charger to a wall socket.
2. Connect the lead from the charger to the charging adapter (1), and the adapter to the socket on the bottom of your phone (2).

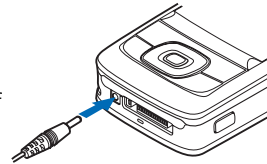

If the battery is completely discharged, it may take a few minutes before the charging indicator appears on the display or before any calls can be made.

The charging time depends on the charger and the battery charge.

### ■ Switch the phone on and off




**Warning:** Do not switch the phone on when wireless phone use is prohibited or when it may cause interference or danger.

Press and hold the power key as shown.

If the phone asks for a PIN or UPIN code, enter the code, and select **OK**.

You can switch on the phone in demo mode without a SmartChip inserted. In this mode all bearer-independent features are available, for example, you can make emergency calls.

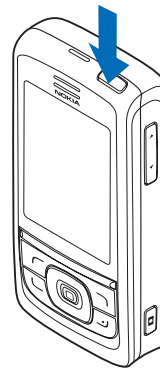

### Plug and play service

When you switch on your phone for the first time, and the phone is in the standby mode, you may be asked to get the configuration settings from your service provider (network service). Confirm or decline the query. See [Connect to serv. support](#) in "Configuration," p. 71 and "Configuration settings service," p. 10.

Get started

### ■ Open the keypad

To open the keypad, slide the phone as shown.



### ■ Proper operating position

Use the phone only in its proper operating position.

Your device has an internal antenna.



**Note:** As with any other radio transmitting device, do not touch the antenna unnecessarily when the device is switched on. Contact with the antenna affects call quality and may cause the device to operate at a higher power level than otherwise needed. Avoiding contact with the antenna area when operating the device optimizes the antenna performance and the battery life.







## 2. Your phone

### ■ Keys and parts


- Power key (1)
- Volume key (2)
- Mirror (3)
- Camera lens (4)
- Camera key (5)

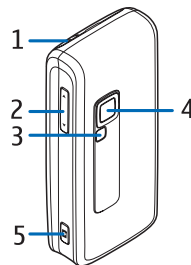

- Earpiece (6)
- Left, middle, and right selection keys (7)
- 4-way navigation key (8)
- Call key (9)
- End key (10)
- Number keys (11)

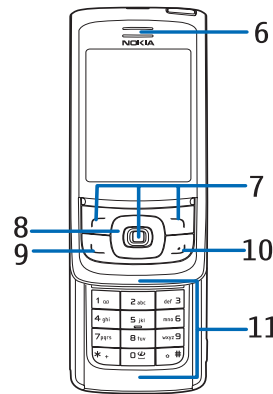

- Voice recorder key (12)
- Infrared (IR) port (13)
- Memory card slot (14)
- Charger connector (15)
- Enhancements connector (16)

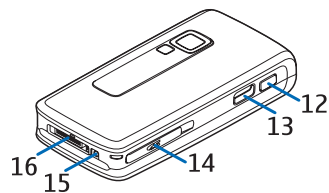


Your phone

## ■ Standby mode

When the phone is ready for use, and you have not entered any characters, the phone is in the standby mode.


- Network signal strength (1)
- Battery charge level (2)
- Indicators (3)
- The network name or the operator logo (4)
- Clock (5)
- Active standby (6).  
See "Active standby," p. 18.
- Left selection key (7) is **Go to** or a shortcut to a function. See "Left selection key," p. 61.
- Middle selection key (8) mode is **Menu**.
- Right selection key (9) may be **Names** to access the list of contacts in the *Address Book* menu, an operator-specific name to access an operator-specific Web site, or a shortcut to a function that you selected. See "Right selection key," p. 61.

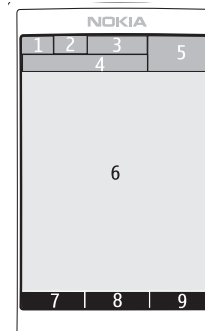

## Active standby

In active standby the phone can display separate content item windows, such as shortcuts (1), audio functions (2), the calendar (3), and a user note (4). To select whether the active standby is shown, see *Active standby* in "Standby settings," p. 60.

When the active standby is idle, to access the menu structure, select **Menu** (5). To access the features in active standby, press the navigation key up or down.

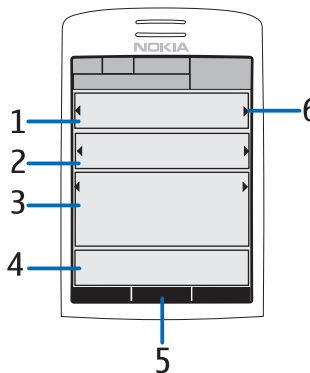

To change the key used to access the navigation mode, see [Enabling active standby](#) in "Standby settings," p. 60. When the arrow indicators (6) are shown, you can scroll the item left and right.

### Active standby navigation choices

In the active standby navigation mode, the following choices are available:

[Shortcut bar](#)—To select a shortcut, scroll left or right to the desired function, using navigation key, and select it.

To change or organize the shortcuts when in the active standby navigation mode, select [Options](#) > [Active standby](#) > [Options](#) > [Personalize](#) > [Options](#) > [Select links](#) or [Organize links](#).

[Audio applications](#)—To switch on the radio or the music player, scroll to and select it. To change a track in the music player or a channel in the radio, scroll left or right. To start the radio channel search, scroll and hold left or right.

[Calendar](#)—To view today's notes, select the desired one. To view the notes for the previous or next days, scroll left or right.

[My note](#)—To enter a note, select the content window, write your note, and save it.

[Countdown timer](#)—To start the countdown timer, select the content item. The remaining time with a note is shown.

[General indicators](#)—To show standby indicators, such as date, cell info display, info messages, and closed user group index. The date is shown if the calendar is not selected as active standby content.

### Standby mode shortcuts

- To access the list of dialed numbers, press the call key once. See "Make a voice call," p. 22.
- To call your voice mailbox (network service) when you have saved your voice mailbox number in the phone, press and hold 1.
- To connect to a browser service, press and hold 0.














## Your phone










- To set shortcut functions for the navigation key, see [Navigation key](#) in "My shortcuts," p. 61.
- To change the profile, briefly press the power key to open the list of profiles. Scroll to the desired profile, and select it.

## Power saver

To set the power saving function *On*, see [Power saver](#) in "Display," p. 60.

## Indicators

-  You have unread messages in the [Inbox](#) folder.
-  You have unsent, canceled, or failed messages in the [Outbox](#) folder.
-  The phone logged a missed call.
-  Your phone is connected to the instant messaging service, and the availability status is online or offline.
-  You received one or several instant messages, and you are connected to the instant messaging service.
-  The keypad is locked.
-  The phone does not ring for an incoming call or text message. See also "Tones," p. 59.
-  The alarm clock is set to *On*.
-  The countdown timer is running.
-  The stopwatch is running in the background.
-  The phone is registered to a GPRS, EGPRS, or WCDMA network.
-  A packet data connection is established.
-  The packet data connection is suspended (on hold), for example, if there is an incoming or outgoing call during a packet data dial-up connection.

-  A 3G network coverage area is detected.
-  When the infrared connection is activated, the indicator is shown continuously.
-  A Bluetooth connection is active.
-  If you have two phone lines, the second phone line is selected.
-  All incoming calls are forwarded to another number.
-  The loudspeaker is activated, or the music stand is connected to the phone.
-  Calls are limited to a closed user group.
-  The timed profile is selected.
-  A headset, hands-free, loopset, or music stand enhancement is connected to the phone.

### ■ Keypad lock (keyguard)

To prevent the keys from being accidentally pressed, select **Menu**, and press \* within 3.5 seconds to lock the keypad; or close the slide, and select **Lock**.

To unlock the keypad, open the slide, or select **Unlock** > **OK**. If the slide is open, select **Unlock**, and press \* within 1.5 seconds. If the *Security keyguard* is set *On*, select **Unlock**, press \*, and enter the security code.

To answer a call when the keyguard is on, press the call key. When you end or decline the call, the keypad automatically locks.

For *Automatic keyguard* and *Security keyguard*, see "Phone," p. 70.

When the keyguard is on, calls still may be possible to the official emergency number programmed into your device.

## 3. Call functions

---

### ■ Make a voice call

1. Enter the phone number, including the area code.  
For international calls, press \* twice for the international prefix (the + character replaces the international access code), enter the country code, the area code without the leading 0, if necessary, and the phone number.
2. To call the number, press the call key.
3. To end the call, or to cancel the call attempt, press the end key.  
To end the call by closing the slide, see [Slide call handling](#) in "Call," p. 69.

To find a name or phone number that you have saved in [Address Book](#), see "Find a contact," p. 55. Press the call key to call the number.

To access the list of phone numbers you have most recently called or attempted to call, in the standby mode, press the call key once.

To call the number, scroll to the number or name you want, and press the call key.

### Speed dialing

Assign a phone number to one of the speed dialing keys, 2 to 9. See "Speed dialing," p. 57. Call the number in either of the following ways:

- Press the speed dialing key, then the call key.
- If [Speed dialing](#) is set to [On](#), press and hold a speed dialing key until the call begins. See "Call," p. 69.

### Enhanced voice dialing

To make a phone call, select and hold [Names](#) and say the name of the contact you wish to call. The phone will automatically associate a virtual voice tag with each contact.

### Make a voice dialing call

If an application is sending or receiving data using a packet data connection, end the application before you use voice dialing.

Voice commands are language-dependent. To set the language, see [Voice playback language](#) in "Phone," p. 70.



**Note:** Using voice tags may be difficult in a noisy environment or during an emergency, so you should not rely solely upon voice dialing in all circumstances.

1. In the standby mode, press and hold the right selection key. A short tone is played, and *Speak now* is displayed.  
If you are using a compatible headset with the headset key, press and hold the headset key to start the voice dialing.
2. Say the voice command clearly. If the voice recognition is successful, a list with matches is shown. The phone plays the voice command of the match on the top of the list. After about 1.5 seconds, the phone dials the number; or if the result is not the correct one, scroll to another entry, and select to dial the entry.

Using voice commands to carry out a selected phone function is similar to voice dialing. See [Voice commands](#) in "My shortcuts," p. 61.

### ■ Answer or decline a voice call

To answer a call, press the call key. To answer the call by opening the slide, see also [Slide call handling](#) in "Call," p. 69.

To mute the tone before you answer the call, select [Silence](#).

To end the call or decline a call, press the end key.

### Call waiting

During a call, to answer the waiting call, press the call key. The first call is put on hold. To end the active call, press the end key.

To activate the [Call waiting](#) function, see "Call," p. 69.

## Call functions

### ■ Options during a voice call

Many of the options that you can use during a call are network services. For availability, contact your network operator or service provider.

Call options are *Mute* or *Unmute*, *Address book*, *Menu*, *Lock keypad*, *Record*, *Loudspeaker*, or *Handset*.

Network services options are *Answer*, *Decline*, *Hold* or *Unhold*, *New call*, *Add to conference*, *End call*, *End all calls*, and the following:

*Touch tones*—to send tone strings

*Swap*—to switch between the active call and the call on hold

*Transfer calls*—to connect a call on hold to an active call and disconnect yourself

*Conference*—to make a conference call that allows up to five persons to take part in a conference call

*Private call*—to discuss privately in a conference call







**Warning:** Do not hold the device near your ear when the loudspeaker is in use, because the volume may be extremely loud.



## 4. Write text

---

You can enter text (for example, when writing messages) using traditional or predictive text input. To use traditional text input, press a number key, 1 to 9, repeatedly until the desired character appears. In predictive text input you can enter a letter with a single keypress.


 
When you write text,  or  appears at the top left of the display, indicating predictive text input, and  appears, indicating traditional text input. **Abc**, **abc**, or **ABC** appears next to the text input indicator, indicating the character case. To change the character case, press #.  indicates number mode. To change from the letter to number mode, press and hold #, and select *Number mode*.

### ■ Settings

To set the writing language while writing text, select **Options** > *Writing language*.

When writing text, select **Options** > *Prediction settings*.

To set predictive text input on or revert to traditional text input, select *Prediction* > *On* or *Off*.

To select the prediction type, select *Prediction type* > *Normal* or *Word suggestions*. If you select *Normal*, indicated with , the phone predicts the word on the basis of the characters you entered. If you select *Word suggestions*, indicated with , the phone predicts and completes the word before you enter all the characters.

To quickly set predictive text input on or off when writing text, press # twice, or select and hold **Options**.

Write text

## ■ Predictive text input

Predictive text input allows you to write text quickly using the phone keypad and a built-in dictionary.

1. Start writing a word using the 2 to 9 keys. Press each key only once for one letter. The phone displays \* or the letter if it separately has a meaning as a word. The entered letters are displayed underlined.

If you selected *Word suggestions* as prediction type, the phone starts to predict the word you are writing. After you enter a few letters, and if these entered letters are not a word, the phone tries to predict longer words. Only the entered letters are displayed underlined.

To insert a special character, press and hold \*, or select **Options** > *Insert symbol*. Scroll to a character, and select **Insert**.

2. When you finish writing the word and it is correct, to confirm it, press 0 to add space.

If the word is not correct, press \* repeatedly, or select **Options** > *Matches*. When the word that you want appears, select **Use**.

If the ? character is displayed after the word, the word you intended to write is not in the dictionary. To add the word to the dictionary, select **Spell**. Complete the word (traditional text input is used), and select **Save**.

## ■ Traditional text input

Press a number key, 1 to 9, repeatedly until the desired character appears. Not all characters available under a number key are printed on the key. The characters available depend on the selected writing language. See "Settings," p. 25.

If the next letter you want is located on the same key as the present one, wait until the cursor appears, or briefly press any of the navigation keys and enter the letter.

To access the most common punctuation marks and special characters, press the 1 key. For more characters, press \*.

## 5. Navigate the menus

---

The phone offers you an extensive range of functions, which are grouped into menus.

1. To access the menu, select **Menu**.

To change the menu view, select **Options** > *Main menu view* > *List*, *Grid*, *Grid with labels*, or *Tab*.

To rearrange the menu, scroll to the menu you want to move, and select **Options** > *Organize* > **Move**. Scroll to where you want to move the menu, and select **OK**. To save the change, select **Done** > **Yes**.

2. Scroll through the menu, and select an option (for example, *Settings*).
3. If the selected menu contains further submenus, select the one that you want (for example, *Call settings*).
4. To return to the previous menu level, select **Back**. To exit the menu, select **Exit**.

The menus, submenus, and setting options are numbered. To access some of them, use their shortcut number.

To access the menu, select **Menu**. Enter quickly, within 2 seconds, the shortcut number of the menu function you want to access. To access the menu functions in menu level 1, enter 0 and 1.

## 6. Instant messaging (IM)



Instant messages are short messages exchanged in real time with friends and family, regardless of whether they are using their IM-capable phone or a PC, as long as they all use the same IM service. With IM, you can see who is offline, busy, and who is online and available to chat.

Before you can use IM, you must subscribe to the service. To check the availability and costs and to subscribe to the service, contact your wireless network operator, and the IM service provider from whom you receive your unique ID, password, and settings.



**Note:** Depending on both your IM service provider and your wireless service provider, you may not have access to all of the features described in this guide and your menus may be different.

### ■ Register with an IM service

Before you can use IM, you must register with an IM service to obtain a user name and password. You can obtain a user name and password by registering over the Internet (using your computer) with the IM service provider you have selected. During the registration process, you will have the opportunity to create the user name and password of your choice. For more information about signing up for IM services, contact your wireless service provider or an IM service provider.

### ■ Icons and menu items

Each IM service provider has its own unique interface, so the IM menu items, menu display text, and icons on your phone may appear differently for each IM service. If you have questions about the differences in the various IM service providers' menu text and icons, contact your wireless service provider for more information.

## ■ IM menus

### Offline menu

When you select *IM* from your phone menu, a list of available IM services is displayed. Select the desired IM service to access the offline menu options: *Login*, *Saved conversations*, and *Settings*. Depending on the IM service provider you are using, these may not be the exact menu items displayed.

### Online menu

After you log into IM, the following IM online options may appear: *Conversations*, *IM contacts*, *Add contact*, *Create group*, *Saved conversations*, *Availability*, *Settings*, *Blocked list*, *Logout*. Depending on the IM service provider you are using, these may not be the exact menu items displayed.

## ■ Log in

1. Select *Menu > IM >* and the service you want to log into.
2. If not automatically displayed, enter your user name and password.
3. Select *Login*.

Depending on your IM service, you may not need to enter your user name and password manually every time you log in.

You can choose to save your password so you do not have to enter it each time you sign in, or you can choose to log in automatically and skip the log in menu when you select the IM application.

## Instant messaging (IM)

### ■ Begin an IM session

You can send instant messages to anyone if you have the person's user name and you use the same IM service. As the conversation progresses, the most recent message appears at the bottom of the menu, causing the previous messages to move up one level (some IM services may do this in the opposite direction).

If you want to chat with a person, you must first add that person to [IM contacts](#). See "Contacts," p. 4.

To begin an IM session, do the following:

1. From the [IM](#) online menu, select [IM contacts](#).
2. Select a contact who is online.

A conversation menu is opened, and the contact's name is displayed at the top.

3. Enter a message. When you finish the message, select [OK](#).

### ■ Receive and reply to messages

If you have an active chat open and receive an instant message from the contact or group member with whom you are chatting, the new message is displayed on the conversation menu in the sequence in which they are received. Select [Write](#) to reply.

If you receive an instant message when you have the IM application open but do not have an active chat open, a menu appears showing you have a new instant message with the name of the sender. Select [Open](#) to open the conversation menu with that contact's new message displayed. To reply, select [Write](#), enter a message, and select [OK](#).

If you receive an instant message when you are logged in to the IM service but do not have the IM application open on your phone, a message is displayed telling you that a new IM message has been received. Select [Start](#) to open the IM application, and view the new message.

## ■ Return to chat session

From the *IM* online menu, select *Conversations*. This list displays all IM conversations and group chats in which you are currently participating. To view a conversation or continue chatting, select a group name or contact name.

## ■ Contacts

You can add the names of contacts with whom you interact frequently by IM to the contacts list.

### Add a new contact

To add a contact during an IM session, select **Menu** > *Add contact* > **OK**. Enter a nickname and select **OK**.

To add a new contact from the *IM* online menu, select **Menu** > *Add contact*. Enter the contact's user name for the IM service, and select **OK**. Enter a nickname for the contact, and select **OK**.

### Remove a contact

From the *IM* online menu, select *IM contacts* and the contact you wish to remove, and select **Menu** > *Remove contact* > **OK**.

## ■ Chat session options

You can save, view, rename, or delete a chat session.

To save a chat session, while you have the conversation open, select **Menu** > *Save*, edit the name if desired, and select **OK**.

To view a saved chat session, from the *IM* online menu, select **Menu** > *Saved conversations*. Scroll to the desired conversation name, and select *Open*.

To rename a saved chat session, from the *IM* online menu, select **Menu** > *Saved conversations*. Scroll to the desired conversation name, and select **Menu** > *Rename*. Rename the conversation, and select **OK**.

## Instant messaging (IM)

To delete a saved chat session, from the *IM* online menu, select **Menu** > *Saved conversations*. Scroll to the desired conversation name, and select **Menu** > *Delete* > **OK**.

### ■ Set your availability

You can determine if other users can tell whether you are available or not. From the *IM* online menu, highlight your name at the top of the menu, and select **Menu** > *Available for all*, *Available for contacts*, or *Appear offline*.

### ■ Log off service

#### Exit IM

From the *IM* online menu, you can exit the IM application but still be connected to the IM service. Select *Back* until the *IM* online menu appears; then select *Exit*. If you open *IM* again, you do not need to log in again.

You can receive instant messages and chat invitations from your contacts when using your phone for other purposes, such as playing a game. If you are connected to your IM service, but you have not used your IM application for some time, you may be automatically disconnected from the IM service. The next time you open the IM application, you must log in again.

#### Log out of IM

To disconnect from the IM service, you must log out from the online menu.

You are taken to the IM service provider list, where you can exit the IM application or select an IM service and log in again.

From the *IM* online menu, select *Logout* > **OK**.



## 7. Messaging

---



You can read, write, send, and save text, multimedia, e-mail, and audio messages. All messages are organized into folders.

### ■ Text messages (SMS)

With the short message service (SMS) you can send and receive text messages, and receive messages that can contain pictures (network service).

Before you can send any text or SMS e-mail message, you must save your message center number. See "Message settings," p. 39.

To check SMS e-mail service availability and to subscribe to the service, contact your service provider. To save an e-mail address in *Address Book*, see "Save numbers and text items," p. 55.

Your device supports the sending of text messages beyond the character limit for a single message. Longer messages is sent as a series of two or more messages. Your service provider may charge accordingly. Characters that use accents or other marks, and characters from some language options like Chinese, take up more space limiting the number of characters that can be sent in a single message.

At the top of the display, you can see the message length indicator counting backwards from the maximum number of characters supported by the phone.

### Write and send SMS messages


1. Select **Menu** > *Messaging* > *New message* > *Text*.
2. Enter the recipient's phone number in the *To:* field. To retrieve a phone number from *Address Book*, select **Add** > *Contact*. To send the message to multiple recipients, add the desired contacts one by one. To send the message to persons in a group, select *Contact group* and the desired group. To retrieve the contacts to which you recently sent messages, select **Add** > *Recently used*.

## Messaging

3. Scroll down, and write your message in the *Message:* field. See "Write text," p. 25.  
To insert a template into the message, select **Options** > *Use template*.
4. To send the message, select **Send**; or press the call key. See "Send a multimedia message," p. 36.

### Read and reply to an SMS message

*1 message received*, or the number of new messages with *N messages received* are shown when you have received a message.

1. To view a new message, select **Show**. To view it later, select **Exit**.  
To read the message later, select **Menu** > *Messaging* > *Inbox*. If more than one message is received, select the message you want to read.  is shown if you have unread messages in *Inbox*.
2. To view the list of available options while reading a message, select **Options**. You can, for example, select to copy text from the beginning of a message to your phone calendar as a reminder note.
3. To reply to a message, select **Reply** > *Text*, *Multimedia*, or *Audio message*.  
To send a text message to an e-mail address, enter the e-mail address in the *To:* field.  
Scroll down, and write your message in the *Message:* field. See "Write text," p. 25.  
If you want to change the message type for your reply message, select **Options** > *Change message type*.
4. To send the message, select **Send**; or press the call key.

### ■ SmartChip messages

SmartChip messages are text messages that are saved to your SmartChip. You can copy or move those messages to the phone memory, but not vice versa. Received messages are saved to the phone memory.

To read SmartChip messages, select **Menu** > *Messaging* > **Options** > *SmartChip messages*.

## ■ Multimedia messages



**Note:** Only devices that have compatible features can receive and display multimedia messages. The appearance of a message may vary depending on the receiving device.

To check availability and to subscribe to the multimedia messaging network service, contact your network operator or service provider. See "Multimedia message," p. 41.

A multimedia message can contain text, sound, pictures, video clips, a business card, and a calendar note. If the message is too large, the phone may not be able to receive it. Some networks allow text messages that include an Internet address where you can view the multimedia message.

Multimedia messaging supports the following formats:

- Picture: .jpeg, .gif, animated .gif, .wbmp, .bmp, and .png
- Sound: scalable polyphonic MIDI (SP-MIDI), AMR audio, and monophonic ringing tones
- Video clips: .3gp format with H.263 or MPEG video (QCIF resolution), and WB or AMR audio

The phone may not support all variations of the file formats.

You cannot receive multimedia messages during a call, a game, another Java application, or an active browsing session over GSM data. Because delivery of multimedia messages can fail for various reasons, do not rely solely upon them for essential communications.

### Write a multimedia message

The wireless network may limit the size of MMS messages. If the inserted picture exceeds this limit, the device may make it smaller so that it can be sent by MMS.

1. Select **Menu** > **Messaging** > **New message** > **Multimedia**.
2. Enter your message.

Your phone supports multimedia messages that contain several pages (slides). A message can contain a calendar note and a business card as attachments. A slide can contain text, one image, and one

## Messaging

sound clip; or text and a video clip. To insert a slide in the message, select **New**; or select **Options** > **Insert** > **Slide**.

To insert a file in the message, select **Insert** or **Options** > **Insert**.

You can fetch images and video clips from the *My Stuff*, or to take them directly from the viewfinder, select **Options** > **Insert** > **New Image** or **New video clip**.

3. To view the message before sending it, select **Options** > **Preview**.
4. Enter the recipient's phone number in the *To:* field. To retrieve a phone number from *Address Book*, select **Add** > **Contact**. To send the message to multiple recipients, add the desired contacts one by one. To send the message to persons in a group, select **Contact group** and the desired group. To retrieve the contacts to which you recently sent messages, select **Add** > **Recently used**.

### Send a multimedia message

Copyright protections may prevent some images, music (including ringing tones), and other content from being copied, modified, transferred, or forwarded.

When you finish writing your message, to send the message, select **Send**, or press the call key. The phone saves the message in the *Outbox* folder, and the sending starts. If you select **Save sent messages** > **Yes**, the sent message is saved in the *Sent* folder. See "General," p. 39.



**Note:** When the phone sends the message, the animated 📬 is shown. This is an indication that the message has been sent by your device to the message center number programmed into your device. This is not an indication that the message has been received at the intended destination. For more details about messaging services, check with your service provider.

It takes more time to send a multimedia message than to send a text message. While the message is being sent, you can use other functions on the phone. If an interruption occurs while the message is being sent, the phone tries to resend the message a few times. If these attempts fail, the message remains in the *Outbox* folder. You can try to resend it later.

### Cancel message sending

When the phone is saving a message in the *Outbox* folder, *Sending message* or *Sending messages* is displayed. To cancel the text message sending, select **Cancel**.


To cancel the sending of the multimedia messages in the *Outbox* folder, scroll to the desired message, and select **Options** > *Cancel sending*.

### Read and reply to a multimedia message



**Important:** Exercise caution when opening messages. Multimedia message objects may contain malicious software or otherwise be harmful to your device or PC.

*Multimedia message received* or the number of new messages with *N messages received* is shown when you receive a new multimedia message.

1. To read the message, select **Show**. To view it later, select **Exit**.  
To read the message later, select **Menu** > *Messaging* > *Inbox*. Scroll to the message that you want to view, and select it.  is shown if you have unread messages in *Inbox*.
2. To view the whole message if the received message contains a presentation, select **Play**.  
To view the files in the presentation or the attachments, select **Options** > *Objects* or *Attachments*.
3. To reply to the message, select **Options** > *Reply* > *Text*, *Multimedia*, or *Audio message*. Write the reply message.  
If you want to change the message type for your reply message, select **Options** > *Change message type*. The new message type may not support all the content that you have added.
4. To send the message, select **Send**; or press the call key. See "Send a multimedia message," p. 36.

## Messaging

### ■ Memory full

When you are receiving a message, and the memory for the messages is full, *Memory full. Unable to receive messages.* is shown. To first delete old messages, select **OK** > **Yes** and the folder. Scroll to the desired message, and select **Delete**. If one or more messages are marked, select **Mark**. Mark all the messages you want to delete, and select **Options** > *Delete marked*.

### ■ Folders

The phone saves received messages in the *Inbox* folder.

Messages that have not yet been sent are saved in the *Outbox* folder.

To set the phone to save the sent messages in the *Sent* folder, see *Save sent messages* in "General," p. 39.

To save the message that you are writing and want to send later in the *Drafts* folder, select **Menu** > *Messaging* > *Drafts*.


You can move your messages to the *Saved items* folder. To organize your *Saved items* subfolders, select **Menu** > *Messaging* > *Saved items* > *Saved messages* or a folder you added. To add a new folder for your messages, select **Options** > *Add folder*. To delete or rename a folder, scroll to the desired folder, and select **Options** > *Delete folder* or *Rename folder*.

Your phone has templates. To create a new template, save or copy a message as a template. To access the template list, select **Menu** > *Messaging* > *Saved items* > *Templates*.

### ■ Voice mail

The voice mailbox is a network service and you may need to subscribe to it. For more information and for your voice mailbox number, contact your service provider.

To call your voice mailbox, select **Menu** > *Messaging* > *Voice mail* > *Listen to voice mails*. To enter, search for, or edit your voice mailbox number, select *Voice mailbox number*.

If supported by the network,  indicates new voice mails. To call your voice mailbox number, select **Listen**.

## ■ Info messages

With the *Info messages* network service, you can receive messages on various topics from your service provider. To check availability, topics, and the relevant topic numbers, contact your service provider.

## ■ Service commands

Select **Menu** > *Messaging* > *Service commands*. Write and send service requests (also known as USSD commands), such as activation commands for network services, to your service provider.

## ■ Delete messages

To delete messages one by one, select **Menu** > *Messaging* > *Delete messages* > *By message* and the folder from which you want to delete messages. Scroll to the desired message, and select **Delete**. If one or more messages are marked, select **Mark**. Mark all the messages you want to delete, and select **Options** > *Delete marked*.

To delete all messages from a folder, select **Menu** > *Messaging* > *Delete messages* > *By folder* and the folder from which you want to delete the messages. Depending on the folder, the phone asks if you want to delete the messages. To delete, select **Yes**. Otherwise, if the folder contains unread messages or messages which are waiting to be sent, the phone asks whether you want to keep them. To keep these messages, select **Yes**.

To delete all messages from all folders, select **Menu** > *Messaging* > *Delete messages* > *All messages* > **Yes**.

## ■ Message settings

### General

General settings are common for text and multimedia messages.

Select **Menu** > *Messaging* > *Message settings* > *General settings* and from the following options:

*Save sent messages* > **Yes**—to set the phone to save the sent messages in the *Sent* folder

## Messaging

*Overwriting in Sent folder > Allowed*—to set the phone to overwrite the old sent messages with the new ones when the message memory is full. This setting is shown only if you set *Save sent messages > Yes*.

*Font size*—to select the font size used in messages

*Graphical smileys > Yes*—to set the phone to replace character-based smileys with graphical ones

### **Text message and SMS e-mail**

The text message settings affect the sending, receiving, and viewing of messages.

Select **Menu > Messaging > Message settings > Text** and from the following options:

*Delivery reports > On*—to ask the network to send delivery reports about your messages (network service)

*Message centers > Add center*—to set the phone number and name of the message center that is required for sending text messages. You receive this number from your service provider. If you select *SmartChip msg. center*, you can view the SmartChip message center information.

*Message center in use*—to select the message center in use

*E-mail message centers > Add center*—to set the phone numbers and name of the e-mail center for sending SMS e-mails. If you select *SmartChip e-mail center*, you can view the SmartChip e-mail center information.

*E-mail center in use*—to select the SMS e-mail message center in use

*Use packet data > Yes*—to set GPRS or WCDMA as the preferred SMS bearer

*Character support > Full*—to select all characters in the messages to be sent as viewed

*Reply via same center > Yes*—to allow the recipient of your message to send you a reply using your message center (network service)



### **Multimedia message**

The message settings affect the sending, receiving, and viewing of multimedia messages.

You may receive the configuration settings for multimedia messaging as a configuration message. See "Configuration settings service," p. 10. You can also enter the settings manually. See "Configuration," p. 71.

Select [Menu](#) > [Messaging](#) > [Message settings](#) > [Multimedia](#) and from the following options:

[Delivery reports](#) > [On](#)—to ask the network to send delivery reports about your messages (network service)

[Default slide timing](#)—to define the default time between slides in multimedia messages

[Incoming multimed. msgs.](#)—to allow the reception of multimedia messages automatically, manually after being prompted, or to decline the reception. This setting is not shown if [Allow multimedia receipt](#) is set to [No](#).

[Allow advertisements](#)—to receive or decline advertisements. This setting is not shown if [Allow multimedia receipt](#) is set to [No](#), or [Incoming multimed. msgs.](#) is set to [Reject](#).

[Configuration settings](#) > [Configuration](#)—only the configurations that support multimedia messaging are shown. Select a service provider, [Default](#), or [Personal configuration](#) for multimedia messaging. Select [Account](#) and a multimedia messaging service account contained in the active configuration settings.

## 8. Recent calls

---



To view the information on your calls, select **Menu** > *Recent Calls* > *Missed calls*, *Calls received*, or *Calls made*. To view your recent missed and received calls and the dialed numbers chronologically, select *Recent calls*. To view the contacts to whom you most recently sent messages, select *Message recipients*.

To view the approximate information on your recent communications, select **Menu** > *Recent Calls* > *Call time*, *Packet data counter*, or *Packet data timer*.

To view how many text and multimedia messages you have sent and received, select **Menu** > *Recent Calls* > *Message counter*.



**Note:** The actual invoice for calls and services from your service provider may vary, depending on network features, rounding off for billing, taxes, and so forth.



**Note:** Some timers, including the life timer, may be reset during service or software upgrades.

## 9. MEdia Net

---



You can access various mobile Internet services with your phone browser.



**Important:** Use only services that you trust and that offer adequate security and protection against harmful software.

Check the availability of these services, pricing, tariffs, and instructions with your service provider.

With the phone browser you can view the services that use wireless markup language (WML) or extensible hypertext markup language (XHTML) on their pages. Appearance may vary due to screen size. You may not be able to view all details of the Internet pages.

### ■ Basic operations

1. Save the service settings that are required to access the service that you want to use. See "Set up browsing," p. 43.
2. Make a connection to the service. See "Connect to a service," p. 44.
3. Start browsing the pages of the service. See "Browse pages," p. 44.
4. When you finish browsing, end the connection to the service. To disconnect, see "Options while browsing," p. 45.

### ■ Set up browsing

You may receive the configuration settings required for browsing as a configuration message from the network operator or service provider that offers the service that you want to use. See "Configuration settings service," p. 10. You can also enter all the configuration settings manually. See "Configuration," p. 71.

## ■ Connect to a service

Ensure that the correct configuration settings of the service that you want to use are activated.

 
 
1. To select the settings for connecting to the service, select **Menu** > *MEdia Net* > *Settings* > *Configuration settings*.
2. Select *Configuration*. Only the configurations that support browsing service are shown. Select a service provider or *Default* for browsing. See "Set up browsing," p. 43.
3. Select *Account* and a browsing service account contained in the active configuration settings.
4. Select *Display terminal window* > *Yes* to perform manual user authentication for intranet connections.

Make a connection to the service in one of the following ways:

- Select **Menu** > *MEdia Net* > *MEdia Net Home* ; or in the standby mode, press and hold 0.
- To select a bookmark of the service, select **Menu** > *MEdia Net* > *Bookmarks*.
- To select the last URL, select **Menu** > *MEdia Net* > *Last web address*.
- To enter the address of the service, select **Menu** > *MEdia Net* > *Go to*. Enter the address of the service, and select **OK**.

## ■ Browse pages

After you make a connection to the service, you can start browsing its pages. The function of the phone keys may vary in different services. Follow the text guides on the phone display. For more information, contact your service provider.

If packet data is selected as the data bearer,  is shown on the top left of the display during browsing. If you receive a call or a text message, or make a call during a packet data connection,  is shown on the top right of the display to indicate that the packet data connection is suspended (on hold). After a call the phone tries to reconnect the packet data connection.

### **Browse with phone keys**

To browse through the page, scroll in any direction.

To select a highlighted item, press the call key, or select [Select](#).

To enter letters and numbers, press the 0 to 9 keys. To enter special characters, press \*.

### **Options while browsing**

Select from the following options:

[MEdia Net](#)—to return to your start page

[Shortcuts](#)—to open a new list of options that are specific to the page. This option is only available if the page contains shortcuts.

[Add bookmark](#)—to save the page as a bookmark

[Bookmarks](#)—to access the list of bookmarks. See "Bookmarks," p. 45.

[Page options](#)—to show the list of options for the active page

[History](#)—to get a list showing the last visited URLs

[Other options](#)—to show a list of other options

[Reload](#)—to reload and update the current page

[Quit](#)—to disconnect from a service

The service provider may also offer other options.

### **Direct calling**

The browser supports functions that you can access while browsing. You can make a phone call, send touch tones while a voice call is in progress, and save a name and a phone number from a page.

### **■ Bookmarks**

You can save page addresses as bookmarks in the phone memory.

1. While browsing, select [Options](#) > [Bookmarks](#); or in the standby mode, select [Menu](#) > [MEdia Net](#) > [Bookmarks](#).
2. Scroll to a bookmark, and select it, or press the call key to make a connection to the page associated with the bookmark.

## M E d i a N e t

3. Select **Options** to view, edit, delete, or send the bookmark; to create a new bookmark; or to save the bookmark to a folder.

Your device may have some bookmarks loaded for sites not affiliated with Nokia. Nokia does not warrant or endorse these sites. If you choose to access them, you should take the same precautions, for security or content, as you would with any Internet site.

### **Receive a bookmark**

When you have received a bookmark that is sent as a bookmark, *1 bookmark received* is displayed. To save the bookmark, select **Show** > **Save**. To view or delete the bookmark, select **Options** > **View** or **Delete**. To discard the bookmark directly after you have received the bookmark, select **Exit** > **OK**.

### **■ Appearance settings**

While browsing, select **Options** > **Other options** > **Appearance settings**, or in the standby mode, select **Menu** > **MEDIA Net** > **Settings** > **Appearance settings** and from the following options:

**Text wrapping** > **On**—to set the text to continue on the next line on the display. If you select **Off**, the text is abbreviated.

**Font size** > **Small font**, **Normal font**, or **Large font**—to set the font size

**Show images** > **No**—to hide pictures on the page. This can speed up the browsing of pages that contain a lot of pictures.

**Alerts** > **Alert for unsecure conn.** > **Yes**—to set the phone to alert when a secure connection changes to an unsecure one during browsing

**Alerts** > **Alert for unsecure items** > **Yes**—to set the phone to alert when a secure page contains an unsecure item. These alerts do not guarantee a secure connection. For more information, see "Browser security," p. 49.

**Character encoding** > **Content encoding**—to select the encoding for the browser page content

*Character encoding* > *Unicode (UTF-8) web add.* > *On*—to set the phone to send a URL as a UTF-8 encoding. You may need this setting when you access a Web page created in foreign language.

*Screen size* > *Full* or *Small*—to set the screen layout

*JavaScript* > *Enable*—to enable the Java scripts

## ■ Security settings

### Cookies

A cookie is data that a site saves in the cache memory of your phone. Cookies are saved until you clear the cache memory. See "Cache memory," p. 48.

While browsing, select *Options* > *Other options* > *Security* > *Cookie settings*; or in the standby mode, select *Menu* > *MEdia Net* > *Settings* > *Security settings* > *Cookies*. To allow or prevent the phone from receiving cookies, select *Allow* or *Reject*.

### Scripts over secure connection

You can select whether to allow the running of scripts from a secure page. The phone supports WML scripts.

While browsing, to allow the scripts, select *Options* > *Other options* > *Security* > *WMLScript settings*; or in the standby mode, select *Menu* > *MEdia Net* > *Settings* > *Security settings* > *WMLScripts in sec. conn.* > *Allow*.

## ■ Download settings

To automatically save all downloaded files in *My Stuff*, select *Menu* > *MEdia Net* > *Settings* > *Downloading settings* > *Automatic saving* > *On*.

## ■ Service inbox

The phone is able to receive service messages (pushed messages) sent by your service provider (network service). Service messages are notifications (for example, news headlines), and they may contain a text message or an address of a service.

To access the *Service inbox* in the standby mode, when you have received a service message, select **Show**. If you select **Exit**, the message is moved to the *Service inbox*. To access the *Service inbox* later, select **Menu** > *MEdia Net* > *Service inbox*.

To access the *Service inbox* while browsing, select **Options** > *Other options* > *Service inbox*. Scroll to the message you want, and to activate the browser and download the marked content, select **Retrieve**. To display detailed information on the service notification or to delete the message, select **Options** > *Details* or *Delete*.

### Service inbox settings

Select **Menu** > *MEdia Net* > *Settings* > *Service inbox settings*.

To set whether you want to receive service messages, select *Service messages* > *On* or *Off*.

To set the phone to receive service messages only from content authors approved by the service provider, select *Message filter* > *On*. To view the list of the approved content authors, select *Trusted channels*.

To set the phone to automatically activate the browser from the standby mode when the phone has received a service message, select *Automatic connection* > *On*. If you select *Off*, the phone activates the browser only after you select **Retrieve** when the phone has received a service message.

## ■ Cache memory

A cache is a memory location that is used to store data temporarily. If you have tried to access or have accessed confidential information requiring passwords, empty the cache after each use. The information or services you have accessed is stored in the cache.



To empty the cache while browsing, select [Options](#) > [Other options](#) > [Clear the cache](#); in the standby mode, select [Menu](#) > [MEdia Net](#) > [Clear the cache](#).

## ■ Browser security

Security features may be required for some services, such as online banking or shopping. For such connections you need security certificates and possibly a security module, which may be available on your SmartChip. For more information, contact your service provider.

### Security module

The security module improves security services for applications requiring a browser connection, and allows you to use a digital signature. The security module may contain certificates as well as private and public keys. The certificates are saved in the security module by the service provider.

To view or change the security module settings, select [Menu](#) > [Settings](#) > [Security](#) > [Security module settings](#).

### Certificates




**Important:** Even if the use of certificates makes the risks involved in remote connections and software installation considerably smaller, they must be used correctly in order to benefit from increased security. The existence of a certificate does not offer any protection by itself; the certificate manager must contain correct, authentic, or trusted certificates for increased security to be available. Certificates have a restricted lifetime. If Expired certificate or Certificate not valid yet is shown even if the certificate should be valid, check that the current date and time in your device are correct.

Before changing any certificate settings, you must make sure that you really trust the owner of the certificate and that the certificate really belongs to the listed owner.

There are three kinds of certificates: server certificates, authority certificates, and user certificates. You may receive these certificates from your service provider. Authority certificates and user certificates may also be saved in the security module by the service provider.

## M E d i a N e t

To view the list of the authority or user certificates downloaded into your phone, select [Menu](#) > [Settings](#) > [Security](#) > [Authority certificates](#) or [User certificates](#).


 is displayed during a connection, if the data transmission between the phone and the content server is encrypted.

The security icon does not indicate that the data transmission between the gateway and the content server (or place where the requested resource is stored) is secure. The service provider secures the data transmission between the gateway and the content server.

### Digital signature

You can make digital signatures with your phone if your SmartChip has a security module. Using the digital signature can be the same as signing your name to a paper bill, contract, or other document.

To make a digital signature, select a link on a page, for example, the title of the book you want to buy and its price. The text to sign is shown, which may include the amount and date.

Check that the header text is [Read](#) and that the digital signature icon  is shown.

If the digital signature icon does not appear, there is a security breach, and you should not enter any personal data such as your signing PIN.

To sign the text, read all of the text first, and select [Sign](#).

The text may not fit within a single screen. Therefore, make sure to scroll through and read all of the text before signing.

Select the user certificate you want to use. Enter the signing PIN (see "Access codes," p. 9), and select [OK](#). The digital signature icon disappears, and the service may display a confirmation of your purchase.

## 10. Operator menu

---

This menu lets you access a portal to services provided by your network operator. The name and the icon depend on the operator. For more information, contact your network operator. If this menu is not shown, the other menu numbers change accordingly.

## 11. Games & Apps

---



### ■ Games

Your phone software includes some games.

#### Launch a game

Select **Menu** > *Games & Apps* > *Games*. Scroll to the desired game, and select **Open**, or press the call key.

For options related to a game, see "Some application options," p. 52.

#### Game downloads

Select **Menu** > *Games & Apps* > **Options** > *Downloads* > *Game downloads*. The list of available bookmarks is shown. Select *More bookmarks* to access the list of bookmarks in the *MEdia Net* menu; see "Bookmarks," p. 45.



**Important:** Only install and use applications and other software from sources that offer adequate security and protection against harmful software.

#### Game settings

To set sounds, lights, and shakes for the game, select **Menu** > *Games & Apps* > **Options** > *Application settings*.

## ■ Collection

Your phone software includes some Java applications.

### Launch an application

Select **Menu** > *Games & Apps* > *Collection*. Scroll to an application, and select **Open**, or press the call key.

### Some application options

*Delete*—to delete the application from the phone

*Details*—to give additional information about the application

*Update version*—to check if a new version of the application is available for download from *MEdia Net* (network service)

*Web page*—to provide further information or additional data for the application from an Internet page (network service). It is only shown if an Internet address has been provided with the application.

*Application access*—to restrict the application from accessing the network. Different categories are shown. Select in each category one of the available permissions.

### Download an application

Your phone supports J2ME™ Java applications. Make sure that the application is compatible with your phone before downloading it.



**Important:** Only install and use applications and other software from sources that offer adequate security and protection against harmful software.

You can download new Java applications in different ways:

- Select **Menu** > *Games & Apps* > **Options** > *Downloads* > *Application downloads*, and the list of available bookmarks is shown. Select *More bookmarks* to access the list of bookmarks in the *MEdia Net* menu. See "Bookmarks," p. 45.

For the availability of different services, pricing, and tariffs, contact your service provider.

- Use the game download function. See "Game downloads," p. 51.
- Use the Nokia Application Installer from PC Suite to download the applications to your phone.

Your device may have some bookmarks loaded for sites not affiliated with Nokia. Nokia does not warrant or endorse these sites. If you choose to access them, you should take the same precautions, for security or content, as you would with any Internet site.

### Calculator

The calculator in your phone adds, subtracts, multiplies, divides, calculates the square and the square root, and converts currency values.



**Note:** This calculator has limited accuracy and is designed for simple calculations.

Select **Menu** > *Games & Apps* > *Collection*, scroll to *Calculator*, and select **Open**.

When 0 is displayed on the screen, enter the first number in the calculation. Press # for a decimal point. Select **Options** > *Add, Subtract, Multiply, Divide, Square, Square root, or Change sign* by using the up/down navigation key. Enter the second number. For a total, select **Equals**. To start a new calculation, first select and hold **Clear**.

### **Convert currency**

Select **Menu** > *Games & Apps* > *Collection*, scroll to *Calculator*, and select **Open**.

To save the exchange rate, select **Options** > *Exchange rate*. Select either of the displayed options. Enter the exchange rate, press # for a decimal point, and select **OK**. The exchange rate remains in the memory until you replace it with another one. To perform the currency conversion, enter the amount to be converted, select **Options**, and either of the displayed options.



**Note:** When you change base currency, you must enter the new rates because all previously set exchange rates are set to zero.

## 12. My Stuff

---



In this menu you can manage graphics, images, audio, and tones. These files are arranged in folders.

Your phone supports an activation key system to protect acquired content. Always check the delivery terms of any content and activation key before acquiring them, as they may be subject to a fee.

If a miniSD memory card is inserted in the phone, some of the files stored in *My Stuff* can be stored on the memory card. You can store images, themes, graphics, tones, video clips, and sound clips in *My Stuff*.

To manage the files and folders, do the following:

1. Select **Menu** > *My Stuff*. A list of folders is shown. If a memory card is inserted in the phone, the folder *Memory card, (unformatted)*, or the name of the memory card is shown.
2. Scroll to the desired folder. To view a list of files in the folder, select **Open**. For the available options, select **Options**.
3. Scroll to the file you want to view, and select **Open**. For the available options, select **Options**.

Copyright protections may prevent some images, music (including ringing tones), and other content from being copied, modified, transferred or forwarded.

### ■ Format memory card

To format a new memory card, select **Menu** > *My Stuff*. Scroll to the memory card folder, and select **Options** > *Format memory card*.


## 13. Address Book

---



You can save names and phone numbers (contacts) in the phone memory and in the SmartChip memory.

The phone memory may save contacts with additional details, such as various phone numbers and text items. You can also save an image or a video clip for a limited number of contacts. You can also use the video clip saved with a contact as a tone for the contact.

The SmartChip memory can save names with one phone number attached to them. The contacts saved in the SmartChip memory are indicated by .

### ■ Find a contact

 
Select [Menu](#) > [Address Book](#) > [Names](#). Scroll through the list of contacts, or enter the first characters of the name for which you are searching.

### ■ Save names and phone numbers

Names and numbers are saved in the used memory. To save a name and phone number, select [Menu](#) > [Address Book](#) > [Names](#) > [Options](#) > [Add new contact](#). Enter the last name, first name, and the phone number.

### ■ Save numbers and text items

In the phone memory for contacts, you can save different types of phone numbers and short text items per name.

The first number you save is automatically set as the primary number, and it is indicated with a frame around the number type indicator (for example, ). When you select a name from contacts (for example, to make a call), the primary number is used unless you select another number.

## Address Book

1. Make sure that the memory in use is *Phone* or *Phone and SmartChip*.
2. Find the contact to which you want to add a new number or text item, and select **Details** > **Options** > *Add detail*.
3. To add a number, select *Number* and a number type.  
To add another detail, select a text type, an image or a video clip from *My Stuff*, or a new image.  
To change the number type, scroll to the desired number, and select **Options** > *Change type*. To set the selected number as the primary number, select *Set as default*.
4. Enter the number or text item; to save it, select **Save**.

### ■ Copy contacts

Find the contact you want to copy, and select **Options** > *Copy*. You can copy names and phone numbers from the phone contact memory to the SmartChip memory or vice versa. The SmartChip memory can save names with one phone number attached to them.

### ■ Edit contact details

Find the contact you want to edit, and select **Details**. To edit a name, number, text item, or to change the image, select **Options** > *Edit*. You cannot edit an ID when it is on the *IM contacts* list.

### ■ Delete contacts

To delete all the contacts and the details attached to them from the phone or SmartChip memory, select **Menu** > *Address Book* > *Delete all contacts* > *From phone memory* or *From SmartChip*. Confirm with the security code.

To delete a contact, find the desired contact, and select **Options** > *Delete contact*.

To delete a number, text item, or an image attached to the contact, find the contact, and select **Details**. Scroll to the desired detail, and select **Options** > *Delete* > *Delete number*, *Delete detail*, or *Delete image*. Deleting an image from contacts does not delete it from *My Stuff*.



## ■ Business cards

You can send and receive a person's contact information from a compatible device that supports the vCard standard as a business card.

To send a business card, find the contact whose information you want to send, and select **Details** > **Options** > *Send business card* > *Via multimedia*, *Via text message*, *Via infrared*, or *Via Bluetooth*.

When you receive a business card, select **Show** > **Save** to save the business card in the phone memory. To discard the business card, select **Exit** > **Yes**.

## ■ Settings

Select **Menu** > *Address Book* > *Settings* and from the following options:

*Memory in use*—to select the SmartChip or phone memory for your contacts. Select *Phone and SmartChip* to recall names and number from both memories. In that case, when you save names and numbers, they are saved in the phone memory.

*Address book view*—to select how the names and numbers in *Address Book* are displayed

*Name display*—to select whether the contact's first or last name is displayed first

*Font size*—to set the font size for the list of contacts

*Check memory*—to view the free and used memory capacity

## ■ Groups

Select **Menu** > *Address Book* > *Groups* to arrange the names and phone numbers saved in the memory into caller groups with different tones and group images.

## ■ Speed dialing

To assign a number to a speed dialing key, select **Menu** > *Address Book* > *Speed dial list*, and scroll to the speed dialing number that you want.

## Address Book

Select **Assign**, or if a number has already been assigned to the key, select **Options > Change**. Select **Find** and the contact you want to assign. If the *Speed dialing* function is off, the phone asks whether you want to activate it. See also *Speed dialing* in "Call," p. 69.

To make a call using the speed dialing keys, see "Speed dialing," p. 22.

### ■ Service and my numbers

Select **Menu > Address Book** and from the following options:

*Service numbers*—to call the service numbers of your service provider if the numbers are included on your SmartChip (network service)

*My numbers*—to view the phone numbers assigned to your SmartChip. This is only shown if the numbers are included on your SmartChip.

## 14. Settings

---



### ■ Profiles

Your phone has various setting groups, called profiles, for which you can customize the phone tones for different events and environments.

Select **Menu** > **Settings** > **Set profile** and the desired profile. Select from the following options:

**Activate**—to activate the selected profile

**Customize**—to customize the profile. Select the setting you want to change, and make the changes.

**Timed**—to set the profile to be active until a certain time up to 24 hours, and set the end time. When the time set for the profile expires, the previous profile that was not timed becomes active.

### ■ Themes

A theme contains many elements for personalizing your phone, such as wallpaper, screen saver, color scheme, and a tone.

Select **Menu** > **Settings** > **Set theme** and from the following options:

**Select theme**—to set a theme in your phone. A list of folders in **My Stuff** opens. Open the **Themes** folder, and select a theme.

**Themes**—to open a list of links to download more themes

### ■ Tones

You can change the settings of the selected active profile.

Select **Menu** > **Settings** > **Tones** > **Incoming call alert, Tone, Ringing volume, Vibrating alert, Message alert tone, IM alert tone, Keypad tones, or Other tones**. You can find the same settings in the **Set profile** menu; see "Profiles," p. 59.

To set the phone to ring only upon calls from phone numbers that belong to a selected caller group, select **Alert for**. Scroll to the caller group you want or **All calls**, and select **Mark**.

## Settings

### ■ Display

With display settings you can customize your phone display view.

#### Standby settings

Select **Menu** > **Settings** > **Display** > **Standby mode settings** and from the following options:

**Active standby** > **My active standby**—to display the active standby.

Select **Options** and from the following options:

- **Personalize**—to change the content
- **Organize**—to reorganize the content on the display
- **Enabling active standby**—to change the key for accessing the navigation mode. The same setting is also in the **My shortcuts** menu. See "Enabling active standby," p. 62.

**Wallpaper**—to set your phone to display an image or a slide as wallpaper when the phone is in the standby mode. Select **Wallpapers** > **Image** or **Slide set**, an image or a slide from **My Stuff**, and **Options** > **Set as wallpaper**. To download more graphics, select **Graphics**.

**Standby font color**—to select the color for the texts on the display in the standby mode

**Cell info display** > **On**—to receive information from the network operator depending on the network cell used (network service)

#### Screen saver

To select a screen saver from **My Stuff**, select **Menu** > **Settings** > **Display** > **Screen saver** > **Screen savers** > **Image**, **Slide set**, **Video clip**, or **Open camera**. To download more screen savers, select **Graphics**.

To select the time after which the screen saver is activated, select **Time-out**. To activate the screen saver, select **On**.

#### Power saver

To save some battery power, select **Menu** > **Settings** > **Display** > **Power saver**. A digital clock is displayed when no function of the phone is used for a certain time.

### Font size

To set the font size for reading and writing messages, and viewing the address book and Web pages, select **Menu** > *Settings* > *Display* > *Font size*.

### ■ Time and date

To change the time and date settings, and to set the phone to show or hide the time and date in the standby mode, select **Menu** > *Settings* > *Set time/date* > *Clock, Date*, or *Auto-update of date/time* (network service).

### ■ My shortcuts

With personal shortcuts you get quick access to often used functions of the phone.

### Left selection key

To select a function from the list for the left selection key, select **Menu** > *Settings* > *My shortcuts* > *Left selection key*. See also "Standby mode," p. 18.

To activate a function in the standby mode if the left selection key is **Go to**, select **Go to** and the desired function on your personal shortcut list. Select **Options** and from the following options:

*Select options*—to add a function to the shortcut list, or to remove one. Scroll to the function, and select **Mark** or **Unmark**.

*Organize*—to rearrange the functions on your personal shortcut list. Scroll to the function you want to move, and select **Move**. Scroll to where you want to move the function, and select **OK**.

### Right selection key

To select a function from the list for the right selection key, select **Menu** > *Settings* > *My shortcuts* > *Right selection key*. See also "Standby mode," p. 18.

## Settings

### **Navigation key**

 
To select shortcut functions for the scroll keys, select **Menu** > **Settings** > **My shortcuts** > **Navigation key**. Scroll to the desired key, select **Change** and a function from the list. To remove a shortcut function from the key, select **(empty)**. To reassign a function for the key, select **Assign**. See "Standby mode shortcuts," p. 19.

### **Enabling active standby**

To select the key used to access the active standby navigation mode, select **Menu** > **Settings** > **My shortcuts** > **Enabling active standby** > **Navigation key up**, **Navigation key down**, or **Navigation key up/down**.

### **Voice commands**

You can call contacts and carry out phone functions by saying voice commands. Voice commands are language-dependent. To set the language, see **Voice playback language** in "Phone," p. 70.

To select the phone functions to activate with a voice commands, select **Menu** > **Settings** > **My shortcuts** > **Voice commands** and a folder. Scroll to a function.  indicates that the voice tag is activated. To activate the voice tag, select **Add**. To play the activated voice command, select **Play**. To use voice commands, see "Enhanced voice dialing," p. 22.

To manage the voice commands, scroll to a phone function, and select from the following options:

**Edit** or **Remove**—to change or deactivate the voice command of the selected function

**Add all** or **Remove all**—to activate or deactivate voice commands to all functions in the voice commands list. **Add all** or **Remove all** is not shown if all voice commands are active or inactive.

### **■ Connectivity**

You can connect the phone to a compatible device using an infrared, Bluetooth wireless technology, or USB data cable (CA-53 or DKU-2)

connection. You can also define the settings for packet data dial-up connections.

### **Bluetooth wireless technology**

This device is compliant with Bluetooth Specification 2.0 supporting the following profiles: hands-free, headset, object push profile, file transfer profile, dial-up networking profile, SmartChip access profile, serial port profile, and human interface device profile. To ensure interoperability between other devices supporting Bluetooth technology, use Nokia approved enhancements for this model. Check with the manufacturers of other devices to determine their compatibility with this device.

There may be restrictions on using Bluetooth technology in some locations. Check with your local authorities or service provider.


Features using Bluetooth technology, or allowing such features to run in the background while using other features, increase the demand on battery power and reduce the battery life.

Bluetooth technology allows you to connect the phone to a compatible Bluetooth device within 10 meters (32 feet). Since devices using Bluetooth technology communicate using radio waves, your phone and the other devices do not need to be in direct line-of-sight, although the connection can be subject to interference from obstructions such as walls or from other electronic devices.

### **Set up a Bluetooth connection**

Select [Menu](#) > [Settings](#) > [Connectivity](#) > [Bluetooth](#) and from the following options:

[Bluetooth](#) > [On](#) or [Off](#)—to activate or deactivate the Bluetooth function.

 indicates an active Bluetooth connection.

[Search for audio enhanc.](#)—to search for compatible Bluetooth audio devices. Select the device that you want to connect to the phone.

[Paired devices](#)—to search for any Bluetooth device in range. Select [New](#) to list any Bluetooth device in range. Scroll to a device, and select [Pair](#). Enter the Bluetooth passcode of the device to associate (pair) the device to your phone. You must only give this passcode when you connect to

## Settings

the device for the first time. Your phone connects to the device, and you can start data transfer.

### Bluetooth wireless connection

Select [Menu](#) > [Settings](#) > [Connectivity](#) > [Bluetooth](#). To check which Bluetooth connection is currently active, select [Active devices](#). To view a list of Bluetooth devices that are currently paired with the phone, select [Paired devices](#).

Select [Options](#) to access available options depending on the status of the device and the Bluetooth connection. Select [Connect](#) > [Assign short name](#) or [Auto-conn. without conf.](#)

### Bluetooth settings

To define how your phone is shown to other Bluetooth devices, select [Menu](#) > [Settings](#) > [Connectivity](#) > [Bluetooth](#) > [Bluetooth settings](#) > [My phone's visibility](#) or [My phone's name](#).

Operating the phone in hidden mode is a safer way to avoid malicious software. Do not accept Bluetooth connectivity from sources you do not trust.

As another alternative, switch off the Bluetooth functionality. This will not affect other functionalities of the phone.

### Infrared

You can set up the phone to send and receive data through its infrared (IR) port. To use an IR connection, the device with which you want to establish a connection must be IrDA compliant. You can send or receive data to or from a compatible phone or data device (for example, a computer) through the IR port of your phone.

Do not point the IR (infrared) beam at anyone's eye or allow it to interfere with other IR devices. This device is a Class 1 laser product.

When sending or receiving data, ensure that the IR ports of the sending and receiving devices are pointing at each other and that there are no obstructions between the devices.


To activate the IR port of your phone, select [Menu](#) > [Settings](#) > [Connectivity](#) > [Infrared](#).




To deactivate the IR connection, select **Menu** > **Settings** > **Connectivity** > **Infrared**. When the phone displays *Deactivate infrared?*, select **Yes**.

If data transfer is not started within 2 minutes after the activation of the IR port, the connection is canceled and must be started again.

#### IR connection indicator

When  is shown continuously, the IR connection is activated, and your phone is ready to send or receive data through its IR port.

When  blinks, your phone is trying to connect to the other device, or a connection has been lost.

#### Packet data

WCDMA and general packet radio service (GPRS) are network services that allow mobile phones to send and receive data over an Internet protocol (IP)-based network. WCDMA and GPRS are data bearers that enable wireless access to data networks such as the Internet.


 
Enhanced GPRS (EGPRS) is similar to GPRS but enables faster connections. For more information on availability of EGPRS and data transfer speed, contact your network operator or service provider.

The applications that may use WCDMA or (E)GPRS are MMS, video streaming, browsing sessions, e-mail, remote SyncML, Java application downloading, and the PC dial-up.



When you have selected GPRS as a data bearer, the phone uses EGPRS instead of GPRS if this is available in the network. You cannot select between EGPRS and GPRS, but for some applications you may be able to select GPRS or **GSM data** (circuit switched data, CSD).

#### Packet data connection

Select **Menu** > **Settings** > **Connectivity** > **Packet data** > **Packet data connection**, and from the following options:

**Always online**—to set the phone to automatically register to a packet data network when you switch on the phone.  or  indicates that the packet data service is available.

## Settings

If you receive a call or a text message, or make a call during a packet data connection,  or  indicates that the packet data connection is suspended (on hold).

*When needed*—to register and establish a packet data connection when an application using packet data needs it, and to close the connection when you end the application.

### Packet data settings

You can connect the phone using Bluetooth wireless technology, infrared, or USB data cable connection to a compatible PC and use the phone as a modem to enable EGPRS connectivity from the PC.

To define the settings for EGPRS connections from your PC, select **Menu** > *Settings* > *Connectivity* > *Packet data* > *Packet data settings* > *Active access point*, and activate the access point you want to use. Select *Edit active access point* > *Alias for access point*, enter a name to change the access point settings, and select **OK**. Select *Packet data access point*, enter the access point name (APN) to establish a connection to an EGPRS network, and select **OK**.

You can also set the EGPRS dial-up service settings (access point name) on your PC using the Nokia Modem Options software. See "Nokia PC Suite," p. 86. If you have set the settings both on your PC and on your phone, the PC settings are used.

### **Data transfer**

Synchronize your calendar, address book data, and notes with another compatible device (for example, a mobile phone), a compatible PC, or a remote Internet server (network service).

#### **Partner list**

To copy or synchronize data from your phone, the name of the device and the settings must be in the list of partners in transfer contacts. If you receive data from another device (for example, a compatible mobile phone), the partner is automatically added to the list, using the contact data from the other device. *Server synchronization* and *PC synchronization* are the original items in the list.

To add a new partner to the list (for example, a new device), select **Menu** > *Settings* > *Connectivity* > *Data transfer* > **Options** > *Add transfer contact* > *Phone synchronization* or *Phone copy*, and enter the settings according to the transfer type.

To edit the copy and synchronize settings, select a contact from the partner list and **Options** > *Edit*.

To delete a partner, select a contact from the partner list and **Options** > *Delete*, and confirm *Delete transfer contact?*. You cannot delete *Server synchronization* or *PC synchronization*.

### **Data transfer with a compatible device**

For synchronization, Bluetooth wireless technology or IR is used. The other device is in the standby mode.

To start data transfer, select **Menu** > *Settings* > *Connectivity* > *Data transfer* and the transfer partner from the list other than *Server synchronization* or *PC synchronization*. According to the settings, the selected data is copied or synchronized. The other device also must be activated for receiving data.

## Settings

### Data transfer without SmartChip

Your phone allows data transfer when the SmartChip is not inserted.

Switch on your phone with no SmartChip inserted, and select **Transfer** and from the following options:

*Send data*—to select a contact, other than *Server synchronization* and *PC synchronization*, from the partner list to transfer data from your phone. The phone starts a synchronization or copy session.

*Receive data* > *Via Bluetooth* or *Via infrared*—to receive data from the other phone

### Synchronize from a compatible PC

Before you synchronize data from calendar, notes, and address book from a compatible PC, you must install the Nokia PC Suite software of your phone on the PC. Use Bluetooth wireless technology, IR, or a USB data cable for the synchronization, and start the synchronization from the PC.

### Synchronize from a server

To use a remote Internet server, you must subscribe to a synchronization service. For more information and the settings required for this service, contact your service provider. You may receive the settings as a configuration message. See "Configuration settings service," p. 10 and "Configuration," p. 71.

If you have saved data on the remote Internet server, to synchronize your phone, start the synchronization from your phone.

Select **Menu** > *Settings* > *Connectivity* > *Data transfer* > *Server synchronization*. Depending on the settings, select *Initializing synchronization* or *Initializing copy*.

Synchronizing for the first time or after an interrupted synchronization may take up to 30 minutes to complete, if the address book or calendar are full.

### **USB data cable**

You can use the USB data cable to transfer data between the memory card inserted in the phone and a compatible PC or a printer supporting PictBridge. You can also use the USB data cable with Nokia PC Suite.

To activate the memory card for data transfer or picture printing, connect the USB data cable; when the phone displays *USB data cable connected. Select mode.*, select **OK**. Select from the following modes:

*Default mode*—to use the cable for PC Suite

*Printing*—to print pictures directly from the phone using a compatible printer

*Data storage*—to activate the memory card for data transfer

To change the USB mode, select **Menu** > *Settings* > *Connectivity* > *USB data cable* > *Default mode*, *Printing*, or *Data storage*.

### **Call**

Select **Menu** > *Settings* > *Call settings* and from the following options:

*Call forwarding*—to forward your incoming calls (network service). You may not be able to forward your calls if some call restricting functions are active. See *Call restrictions* in "Security," p. 72.

*Anykey answer* > *On*—to answer an incoming call, briefly press any key, except the power key, the left and right selection keys, or the end key

*Automatic redial* > *On*—to make a maximum of 10 attempts to connect the call after an unsuccessful call attempt

*Speed dialing* > *On*—to dial the names and phone numbers assigned to the speed dialing keys 2 to 9, press and hold the corresponding number key

*Call waiting* > *Activate*—to have the network notify you of an incoming call while you have a call in progress (network service). See "Call waiting," p. 23.

*Summary after call* > *On*—to briefly display the approximate duration and cost (network service) of the call after each call

## Settings

*Send my caller ID > Yes*—to show your phone number to the person you are calling (network service). To use the setting agreed upon with your service provider, select *Set by network*.

*Line for outgoing calls*—to select the phone line 1 or 2 for making calls if supported by your SmartChip (network service)

*Slide call handling*—to set the phone to answer calls when you open the slide, or end the calls when you close it

## ■ Phone

Select *Menu > Settings > Phone settings* and from the following options:

*Language settings*—to set the display language of your phone, select *Phone language*. If you select *Automatic*, the phone selects the language according to the information on the SmartChip.

To select the USIM card language, select *SmartChip language*.

To set a language for the voice playback, select *Voice playback language*. See "Make a voice dialing call," p. 23 and *Voice commands* in "My shortcuts," p. 61.

*Security keyguard*—to set the phone to ask for the security code when you unlock the keyguard. Enter the security code, and select *On*.

*Automatic keyguard*—to set the keypad of your phone to lock automatically after a preset time delay when the phone is in the standby mode and no function of the phone has been used. Select *On*, and set the time.

When the keyguard is on, calls still may be possible to the official emergency number programmed into your device.

*Welcome note*—to write the note you would like to be shown briefly when the phone is switched on

*Network mode > Dual mode, UMTS, or GSM* — to select the type of network to use

*Operator selection > Automatic*—to set the phone to automatically select one of the cellular networks available in your area. With *Manual* you can select a network that has a roaming agreement with your home network operator.

*Help text activation*—to select whether the phone shows help texts

## ■ Enhancements

This menu is shown only if the phone is or has been connected to a compatible mobile enhancement.

Select **Menu** > *Settings* > *Enhancements*. Depending on the enhancement, you can select some of the following options:

*Default profile*—to select the profile that you want to be automatically activated when you connect to the selected enhancement

*Automatic answer*—to set the phone to answer an incoming call automatically after 5 seconds. If *Incoming call alert* is set to *Beep once* or *Off*, automatic answer is off.

*Ignition detector* > *On*—to automatically switch off the phone about 20 seconds after you switch off the car ignition, when the phone is connected to the full car kit

## ■ Configuration

You can configure your phone with settings that are required for certain services to function correctly. The services are multimedia messaging, instant messaging, synchronization, e-mail application, streaming, and browser. Your service provider may also send you these settings. See "Configuration settings service," p. 10.

For information on availability and the appropriate configuration settings, contact your network operator or service provider.

Select **Menu** > *Settings* > *Configuration* and from the following options:

*Default config. settings*—to view the service providers saved in the phone. Scroll to a service provider, and select **Details** to view the applications that the configuration settings of this service provider support. To set the configuration settings of the service provider as default settings, select **Options** > *Set as default*. To delete configuration settings, select *Delete*.

## Settings

*Activ. default in all apps.*—to activate the default configuration settings for supported applications

*Preferred access point*—to view the saved access points. Scroll to an access point, and select **Options** > *Details* to view the name of the service provider, data bearer, and packet data access point or GSM dial-up number.

*Connect to serv. support*—to download the configuration settings from your service provider if this is supported by the service provider

*Personal config. settings*—to add new personal accounts for various services, and to activate or delete them. To add a new personal account if you have not added any, select **Add new**; otherwise, select **Options** > *Add new*. Select the service type, and select and enter each of the required parameters. The parameters differ according to the selected service type. To delete or activate a personal account, scroll to it, and select **Options** > *Delete* or *Activate*.

## ■ Security

When security features that restrict calls are in use (such as call restricting, closed user group, and fixed dialing) calls still may be possible to the official emergency number programmed into your device.

Select **Menu** > *Settings* > *Security* and from the following options:

*PIN code request*—to set the phone to ask for your PIN code every time the phone is switched on. Some SmartChips do not allow the code request to be turned off.

*Fixed dialing*—to restrict your outgoing calls to selected phone numbers if this function is supported by your SmartChip

*Security level* > *Phone*—to set the phone to ask for the security code whenever a new SmartChip is inserted into the phone. If you select *Memory*, the phone asks for the security code when the SmartChip memory is selected, and you want to change the memory in use.

*Access codes*—to change the security code, PIN code, PIN2 code, or restricting password

*Code in use*—to select whether the PIN code or UPIN code should be active



[Authority certificates](#) or [User certificates](#)—to view the list of the authority or user certificates downloaded into your phone. See "Certificates," p. 49.

[Security module settings](#)—to view [Security module details](#), activate [Module PIN request](#), or change the module PIN and signing PIN. See also "Access codes," p. 9.

### ■ Restore device

To reset some of the menu settings to their original values, select [Menu](#) > [Settings](#) > [Reset device](#). Enter the security code. The data you have entered or downloaded, such as names and phone numbers saved in [Address Book](#), are not deleted.

## 15. Tools

---



### ■ Alarm clock

You can set the phone to alarm at a desired time. Select **Menu** > **Tools** > **Alarm clock**.

To set the alarm, select **Alarm time**, enter the alarm time, and select **OK**. To change the alarm time when the alarm time is set, select **On**.

To set the phone to alert you on selected days of the week, select **Repeat alarm**.

To select the alarm tone or set a radio channel as the alarm tone, select **Alarm tone**. If you select the radio as an alarm tone, connect the headset to the phone. The phone uses the last channel you listened to as the alarm, and the alarm plays through the loudspeaker. If you remove the headset or switch off the phone, the default alarm tone replaces the radio.

To set a snooze time-out, select **Snooze time-out** and the time.

### Stop the alarm

The phone sounds an alert tone, and flashes **Alarm!** and the current time on the display, even if the phone was switched off. To stop the alarm, select **Stop**. If you let the phone continue to sound the alarm for a minute or select **Snooze**, the alarm stops for the time you set in **Snooze time-out**, then resumes.

If the alarm time is reached while the device is switched off, the device switches itself on and starts sounding the alarm tone. If you select **Stop**, the device asks whether you want to activate the device for calls. Select **No** to switch off the device or **Yes** to make and receive calls. Do not select **Yes** when wireless phone use may cause interference or danger.





 
## ■ Calendar

Select [Menu](#) > [Tools](#) > [Calendar](#).


The current day is indicated by a frame in the month view. If there are any notes set for the day, the day is in bold type, and the beginning of the note is shown below the calendar. To view the day notes, select [View](#). To view a week, select [Options](#) > [Week view](#). To delete all notes in the calendar, select the month or week view, and select [Options](#) > [Delete all notes](#).

Other options for the calendar day view can make a note; delete, edit, move, or repeat a note; copy a note to another day; send a note with Bluetooth technology; or send a note to the calendar of another compatible phone as a text message or multimedia message. In [Settings](#) you can set the date, time, time zone, date or time format, date separator, default view, or the first day of the week. In the [Auto-delete notes](#) option you can set the phone to delete old notes automatically after a specified time.

### Make a calendar note

Select [Menu](#) > [Tools](#) > [Calendar](#). Scroll to the date you want, and select [Options](#) > [Make a note](#) and one of the following note types:  [Meeting](#),  [Call](#),  [Birthday](#),  [Memo](#), or  [Reminder](#). Fill in the fields for the note.

### Note alarm

The phone beeps, and displays the note. With a call note  on the display, to call the displayed number, press the call key. To stop the alarm and to view the note, select [View](#). To stop the alarm for 10 minutes, select [Snooze](#).

To stop the alarm without viewing the note, select [Exit](#).

## Tools

### ■ To-do list

To save a note for a task that you must do, select **Menu** > **Tools** > **To-do list**.

To make a note if no note is added, select **Add**; otherwise, select **Options** > **Add**. Write the note, select **Save** and the priority, and set the deadline and alarm for the note.

To view a note, scroll to it, and select **View**.

You can also select an option to delete the selected note and delete all the notes that you have marked as done. You can sort the notes by priority or by deadline, send a note to another phone as a text message or a multimedia message, save a note as a calendar note, or access the calendar.

While viewing a note, you can also select an option to edit the deadline or priority for the note, or mark the note as done.

### ■ Notes

To write and send notes, select **Menu** > **Tools** > **Notes**.

To make a note if no note is added, select **Add**; otherwise, select **Options** > **Make a note**. Write the note, and select **Save**.

Other options include deleting and editing a note. While editing a note, you can also exit the text editor without saving the changes. You can send the note to compatible devices through IR, Bluetooth wireless technology, text message, or a multimedia message. If the note is too long to be sent as a text message, the phone asks you to delete the appropriate number of characters from your note.

### ■ Countdown timer

Select **Menu** > **Tools** > **Countdown timer**. Enter the alarm time in hours, minutes, and seconds, and select **OK**. If you wish, write your own note text that is displayed when the time expires. To start the countdown timer, select **Start**. To change the countdown time, select **Change time**. To stop the timer, select **Stop timer**.

If the alarm time is reached when the phone is in the standby mode, the phone sounds a tone and flashes the note text if it is set or *Countdown completed*. To stop the alarm, press any key. If no key is pressed, the alarm automatically stops within 30 seconds. To stop the alarm and delete the note text, select *Exit*. To restart the countdown timer, select *Restart*.

## ■ Stopwatch

You can measure time, take intermediate times, or take lap times using the stopwatch. During timing, the other functions of the phone can be used. To set the stopwatch timing in the background, press the end key.

Using the stopwatch or allowing it to run in the background when using other features increases the demand on battery power and reduces the battery life.

Select *Menu > Tools > Stopwatch* and from the following options:

*Split timing*—to take intermediate times. To start the time observation, select *Start*. Select *Split* every time that you want to take an intermediate time. To stop the time observation, select *Stop*.

To save the measured time, select *Save*.

To start the time observation again, select *Options > Start*. The new time is added to the previous time. To reset the time without saving it, select *Reset*.

To set the stopwatch timing in the background, press the end key.

*Lap timing*—to take lap times. To set the stopwatch timing in the background, press the end key.

*Continue*—to view the timing that you have set in the background

*Show last time*—to view the most recently measured time if the stopwatch is not reset

*View times* or *Delete times*—to view or delete the saved times

## 16. Multimedia



### ■ Camera

You can take photos or record video clips with the built-in 1 megapixel camera. The camera produces pictures in .jpg format and video clips in .3gp format, and you can zoom up to eight times.

#### Take a photo


1. To open the camera viewfinder, select **Menu** > **Multimedia** > **Camera**.

If **Video** is selected as the default mode, select **Options** > **Still image**.

To zoom in or out, press the volume key up or down.

To take up to four photos in quick succession, select **Options** > **Img. sequence on**. The higher the resolution, the fewer photos you can take sequentially.

2. Turn the phone counterclockwise (1), and to take a photo, press the camera key (2), or select **Capture**. If you take sequential photos, select **Sequence**. The phone saves the photo in **My Stuff** > **Images** or unless you set the phone to use the memory card for saving the photos.

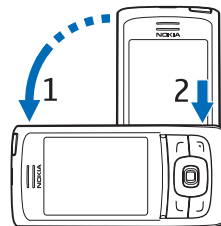

3. To take another photo, select **New**; to send the photo as a multimedia message, select **Options** > **Send**.

To activate the camera, press the camera key. To activate video, press and hold the camera key.

### Record a video clip

Select **Menu** > *Multimedia* > *Camera* > **Options** > *Video* > **Record**. To pause the recording, select **Pause**; to resume the recording, select **Continue**. To stop the recording, select **Stop**. The phone saves the recording in *My Stuff* > *Video clips*. To change the folder for saving the recordings, see "Camera settings," p. 79.

### Camera settings

Select **Menu** > *Multimedia* > *Camera* > **Options** > *Settings*. You can define *Image quality*, *Image size*, *Video clip quality*, *Video clip length*, *Camera sounds*, *Default title*, *Image and video storage*, and *Default mode*. In *Image and video storage* you can select the folder or memory card to save your photos and video clips.

### ■ **Media player**

With the media player you can view, play, and download files, such as images, audio, video, and animated images. You can also view compatible streaming videos from a network server (network service).

Select **Menu** > *Multimedia* > *Media player* > *Open My Stuff*, *Bookmarks*, *Go to*, or *Media downloads*.

### Set up the phone for a streaming service

You may receive the configuration settings required for streaming as a configuration message from the network operator or service provider. See "Configuration settings service," p. 10. You can also enter the settings manually. See "Configuration," p. 71.

To activate the settings, do the following:

1. Select **Menu** > *Multimedia* > *Media player* > *Streaming settings*.
2. Select *Configuration*. Only the configurations that support streaming are shown. Select a service provider, *Default*, or *Personal configuration* for streaming.
3. Select *Account* and a streaming service account contained in the active configuration settings.





## Multimedia

 
### ■ Music player

Your phone includes a music player for listening to music tracks, recordings, or other .mp3, .mp4, or .aac format sound files that you have transferred to the phone with the Nokia Audio Manager application. .mp3 and .aac format files are stored in the memory card or in the *My Stuff* folders. Music files saved in the *Music files* folder and in another location, such as a folder of the memory card, are automatically detected and added to the default track list.


 
#### Play the music tracks transferred to the phone



1. Select **Menu** > *Multimedia* > *Music player*. The details of the first track on the default track list are shown.


To use the graphical keys , , , or  on the display, scroll left or right to the desired key, and select it.

2. To play a track, scroll to the track that you want, and select .

To adjust the volume level, use the volume keys on the side of the phone.

To skip to the beginning of the next track, select . To skip to the beginning of the previous track, select  twice.

To rewind the current track, select and hold . To fast forward the current track, select and hold . Release the key at the position you want.

3. To stop the playing, select .



**Warning:** Listen to music at a moderate level. Continuous exposure to high volume may damage your hearing. Do not hold the device near your ear when the loudspeaker is in use, because the volume may be extremely loud.

#### Music player settings

In the *Music player* menu, the following options may be available:

*Play via bluetooth*—to make a connection to an audio enhancement using a Bluetooth connection



*Track list*—to view all the tracks available on the track list. To play a track, scroll to the desired track, and select **Play**.

Select **Options** > *Refresh all tracks* or *Change track list* to refresh the track list (for example, after adding new tracks to the list) or to change the track list that is shown when you open the *Music player* menu, if several track lists are available in the phone.

*Play options* > *Random* > *On*—to play the tracks in the track list in random order. Select *Repeat* > *Current track* or *All tracks* to play the current track or the entire track list repeatedly.

*Media equalizer*—to open the list of media equalizer sets. See "Equalizer," p. 84.

*Loudspeaker* or *Headset*—to listen to the music player through the loudspeaker or a compatible headset connected to the phone

When using a headset, to skip to the next track, press the headset key.

*Send*—to send the selected file using MMS, Bluetooth wireless technology, or an IR connection

*Music downloads*—to connect to a browser service related to the current track. This function is only available when the address of the service is included in the track.

*Check memory*—to view the free and used memory capacity

## ■ Radio

The FM radio depends on an antenna other than the wireless device antenna. A compatible headset or enhancement needs to be attached to the device for the FM radio to function properly.



 



**Warning:** Listen to music at a moderate level. Continuous exposure to high volume may damage your hearing. Do not hold the device near your ear when the loudspeaker is in use, because the volume may be extremely loud.

Select **Menu** > *Multimedia* > *Radio*.



To use the graphical keys ▲, ▼, ◀, or ▶ on the display, scroll left or right to the desired key, and select it.

## Multimedia

### Save radio channels

 1. To start the channel search, select and hold  or . To change the radio frequency in 0.05 MHz steps, briefly press  or .
2. To save the channel to a memory location, 1 to 9, press and hold the corresponding number key. To save the channel to a memory location from 10 to 20, press briefly 1 or 2, and press and hold the desired number key, 0 to 9.
3. Enter the name of the channel, and select **OK**.

### Listen to the radio

  
Select **Menu** > *Multimedia* > *Radio*. To scroll to the desired channel, select  or , or press the headset key. To select a radio channel location, briefly press the corresponding number keys. To adjust the volume, press the volume keys.

Select from the following options:

*Turn off*—to turn off the radio

*Save station*—to enter a channel name and save the new channel



**Note:** This feature may not be available in your product due to your subscription .

*Stations*—to select the list of saved channels. To delete or rename a channel, scroll to the desired channel, and select **Options** > *Delete station* or *Rename*.

*Mono output* or *Stereo output*—to listen to the radio in monophonic sound or in stereo

*Loudspeaker* or *Headset*—to listen to the radio using the loudspeaker or headset. Keep the headset connected to the phone. The lead of the headset functions as the radio antenna.

*Set frequency*—to enter the frequency of the desired radio channel

You can normally make a call or answer an incoming call while listening to the radio. During the call, the volume of the radio is muted.

 
 

 
 
When an application using a packet data or HSCSD connection is sending or receiving data, it may interfere with the radio.

## ■ Voice recorder

You can record pieces of speech, sound, or an active call, and save them in *My Stuff* or a memory card. This is useful when recording a name and phone number to write down later.

The recorder cannot be used when a data call or GPRS connection is active.

### Record sound

1. Select **Menu** > *Multimedia* > *Voice recorder*.  
To use the graphical keys , , or  on the display, scroll left or right to the desired key, and select it.
2. To start the recording, select . To start the recording during a call, select **Options** > *Record*. While recording a call, all parties to the call hear a faint beeping sound about every 5 seconds. When recording a call, hold the phone in the normal position near to your ear.
3. To end the recording, select . The recording is saved in *My Stuff* > *Audio*.
4. To listen to the latest recording, select **Options** > *Play last recorded*.
5. To send the last recording using IR, Bluetooth, or a multimedia message, select **Options** > *Send last recorded*.

### List of recordings

Select **Menu** > *Multimedia* > *Voice recorder* > **Options** > *Audio list*. The list of folders in the *My Stuff* is shown. Open *Audio* to see the list with recordings. Select **Options** to select options for files in the *My Stuff*. See "My Stuff," p. 54.

### Define a storage folder

To use another folder than *Audio* as the default folder in *My Stuff*, select **Menu** > *Multimedia* > *Voice recorder* > **Options** > *Select memory*. Scroll to a folder, and select **Set**.

## Multimedia

### ■ Equalizer

You can control the sound quality when using the music player by amplifying or diminishing frequency bands.

Select **Menu** > *Multimedia* > *Equalizer*.

To activate a set, scroll to one of the equalizer sets, and select **Activate**.

To view, edit, or rename a selected set, select **Options** > *View*, *Edit*, or *Rename*. Not all sets can be edited or renamed.

### ■ Stereo widening

To enhance the sound that is available in stereo with a wider stereo effect, select **Menu** > *Multimedia* > *Stereo widening* > *On*.

## 17. Audio messages



With this menu, use the multimedia message service to create and send a voice message in a convenient way. Multimedia messaging service must be activated before you can use audio messages.

### ■ Create an audio message

1. Select **Menu** > **Messaging** > **New message** > **Audio message**. The recorder opens. To use the recorder, see "Voice recorder," p. 83.
2. To view the available options, select **Options**.
3. Enter the recipient's phone number in the **To:** field. To retrieve a phone number from **Address Book**, select **Add** > **Contact**. To send the message to multiple recipients, add the desired contacts one by one. To send the message to persons in a group, select **Contact group** and the desired group. To retrieve the contacts to which you recently sent messages, select **Add** > **Recently used**.
4. To send the message, select **Send**.

### ■ Receive an audio message

When your phone receives audio messages, the number of messages and the text **N messages received** is shown. To open the message, select **Play**; or if more than one message is received, select **Show** > **Play**. To listen to the message later, select **Exit**. Select **Options** to see the available options.

## 18. PC connectivity

---

You can send and receive e-mail, and access the Internet when your phone is connected to a compatible PC through an IR, Bluetooth, or USB data cable connection. You can use your phone with a variety of PC connectivity and data communications applications.

### ■ Nokia PC Suite

With Nokia PC Suite you can synchronize address book, calendar, notes, and to-do notes between your phone and the compatible PC or a remote Internet server (network service). You may find more information and PC Suite on the Nokia Web site at [www.nokiausa.com/support](http://www.nokiausa.com/support).

### ■ EGPRS, HSCSD, and CSD

With your phone you can use the enhanced GPRS (EGPRS), general packet radio service (GPRS), high-speed circuit switched data (HSCSD), and circuit switched data (CSD, *GSM data*) data services.

For availability and subscription to data services, contact your network operator or service provider.

The use of HSCSD services consumes the phone battery faster than normal voice or data calls. You may need to connect the phone to a charger for the duration of data transfer.

See "Packet data settings," p. 66.

### ■ Data communication applications

For information on using a data communication application, refer to the documentation provided with it.

Making or answering phone calls during a computer connection is not recommended, as it might disrupt the operation.

For better performance during data calls, place the phone on a stationary surface with the keypad facing downward. Do not move the phone by holding it in your hand during a data call.

## 19. Battery information

---

### ■ Charging and discharging

Your device is powered by a rechargeable battery. The full performance of a new battery is achieved only after two or three complete charge and discharge cycles. The battery can be charged and discharged hundreds of times, but it will eventually wear out. When the talk and standby times are noticeably shorter than normal, replace the battery. Use only Nokia approved batteries, and recharge your battery only with Nokia approved chargers designated for this device.

If a replacement battery is being used for the first time or if the battery has not been used for a prolonged period, it may be necessary to connect the charger and then disconnect and reconnect it to start the charging.

Unplug the charger from the electrical plug and the device when not in use. Do not leave fully charged battery connected to a charger, since overcharging may shorten its lifetime. If left unused, a fully charged battery will lose its charge over time.

If the battery is completely discharged, it may take a few minutes before the charging indicator appears on the display or before any calls can be made.

Use the battery only for its intended purpose. Never use any charger or battery that is damaged.

Do not short-circuit the battery. Accidental short-circuiting can occur when a metallic object such as a coin, clip, or pen causes direct connection of the positive (+) and negative (-) terminals of the battery. (These look like metal strips on the battery.) This might happen, for example, when you carry a spare battery in your pocket or purse. Short-circuiting the terminals may damage the battery or the connecting object.

Leaving the battery in hot or cold places, such as in a closed car in summer or winter conditions, will reduce the capacity and lifetime of the battery. Always try to keep the battery between 15°C and 25°C (59°F and 77°F). A device with a hot or cold battery may not work temporarily, even when the battery is fully charged. Battery performance is particularly limited in temperatures well below freezing.

Do not dispose of batteries in a fire as they may explode. Batteries may also explode if damaged. Dispose of batteries according to local regulations. Please recycle when possible. Do not dispose as household waste.

## Battery information



### ■ Nokia battery authentication guidelines

Always use original Nokia batteries for your safety. To check that you are getting an original Nokia battery, purchase it from an authorized Nokia dealer, look for the Nokia Original Enhancements logo on the packaging, and inspect the hologram label using the following steps:

Successful completion of the four steps is not a total assurance of the authenticity of the battery. If you have any reason to believe that your battery is not an authentic original Nokia battery, you should refrain from using it and take it to the nearest authorized Nokia service point or dealer for assistance. Your authorized Nokia service point or dealer will inspect the battery for authenticity. If authenticity cannot be verified, return the battery to the place of purchase.

#### Authenticate hologram

1. When looking at the hologram on the label, you should see the Nokia connecting hands symbol from one angle and the Nokia Original Enhancements logo when looking from another angle.
2. When you angle the hologram left, right, down, and up, you should see 1, 2, 3, and 4 dots on each side respectively.
3. Scratch the side of the label to reveal a 20-digit code, for example, 12345678919876543210. Turn the battery so that the numbers are facing upwards. The 20-digit code reads starting from the number at the top row followed by the bottom row.
4. Confirm that the 20-digit code is valid by following the instructions at [www.nokia.com/batterycheck](http://www.nokia.com/batterycheck).

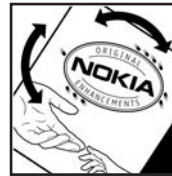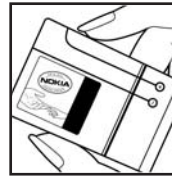



## Battery information

### What if your battery is not authentic?

If you cannot confirm that your Nokia battery with the hologram on the label is an authentic Nokia battery, please do not use the battery. Take it to the nearest authorized Nokia service point or dealer for assistance. The use of a battery that is not approved by the manufacturer may be dangerous and may result in poor performance and damage to your device and its enhancements. It may also invalidate any approval or warranty applying to the device.

To find out more about original Nokia batteries, visit [www.nokia.com/battery](http://www.nokia.com/battery).

## Care and maintenance

---

Your device is a product of superior design and craftsmanship and should be treated with care. The suggestions below will help you protect your warranty coverage.

- Keep the device dry. Precipitation, humidity and all types of liquids or moisture can contain minerals that will corrode electronic circuits. If your device does get wet, remove the battery and allow the device to dry completely before replacing it.
- Do not use or store the device in dusty, dirty areas. Its moving parts and electronic components can be damaged.
- Do not store the device in hot areas. High temperatures can shorten the life of electronic devices, damage batteries, and warp or melt certain plastics.
- Do not store the device in cold areas. When the device returns to its normal temperature, moisture can form inside the device and damage electronic circuit boards.
- Do not attempt to open the device other than as instructed in this guide.
- Do not drop, knock, or shake the device. Rough handling can break internal circuit boards and fine mechanics.
- Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the device.
- Do not paint the device. Paint can clog the moving parts and prevent proper operation.
- Use a soft, clean, dry cloth to clean any lenses (such as camera, proximity sensor, and light sensor lenses).
- Use only the supplied or an approved replacement antenna. Unauthorized antennas, modifications, or attachments could damage the device and may violate regulations governing radio devices.
- Use chargers indoors.
- Always create a backup of data you want to keep (such as address book and calendar notes) before sending your device to a service facility.

All of the above suggestions apply equally to your device, battery, charger, or any enhancement. If any device is not working properly, take it to the nearest authorized service facility for service.

## Additional safety information

---

Your device and its enhancements may contain small parts. Keep them out of the reach of small children.

### ■ Operating environment

Remember to follow any special regulations in force in any area, and always switch off your device when its use is prohibited or when it may cause interference or danger. Use the device only in its normal operating positions. This device meets RF exposure guidelines when used either in the normal use position against the ear or when positioned at least 2.2 centimeters (7/8 inches) from the body. When a carry case, belt clip or holder is used for body-worn operation, it should not contain metal and should position the device the above-stated distance from your body.

To transmit data files or messages, this device requires a quality connection to the network. In some cases, transmission of data files or messages may be delayed until such a connection is available. Ensure the above separation distance instructions are followed until the transmission is completed.

Parts of the device are magnetic. Metallic materials may be attracted to the device. Do not place credit cards or other magnetic storage media near the device, because information stored on them may be erased.

### ■ Medical devices

Operation of any radio transmitting equipment, including wireless phones, may interfere with the functionality of inadequately protected medical devices. Consult a physician or the manufacturer of the medical device to determine if they are adequately shielded from external RF energy or if you have any questions. Switch off your device in health care facilities when any regulations posted in these areas instruct you to do so. Hospitals or health care facilities may be using equipment that could be sensitive to external RF energy.

## Additional safety information

### Pacemakers

Pacemaker manufacturers recommend that a minimum separation of 15.3 centimeters (6 inches) be maintained between a wireless phone and a pacemaker to avoid potential interference with the pacemaker. These recommendations are consistent with the independent research by and recommendations of Wireless Technology Research. Persons with pacemakers should do the following:

- Always keep the device more than 15.3 centimeters (6 inches) from the pacemaker
- Not carry the device in a breast pocket
- Hold the device to the ear opposite the pacemaker to minimize the potential for interference.

If you suspect interference, switch off your device, and move the device away.

### Hearing aids

Some digital wireless devices may interfere with some hearing aids. If interference occurs, consult your service provider.

### ■ Vehicles

RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles such as electronic fuel injection systems, electronic antiskid (antilock) braking systems, electronic speed control systems, an air bag systems. For more information, check with the manufacturer or its representative of your vehicle or any equipment that has been added.

Only qualified personnel should service the device, or install the device in a vehicle. Faulty installation or service may be dangerous and may invalidate any warranty that may apply to the device. Check regularly that all wireless device equipment in your vehicle is mounted and operating properly. Do not store or carry flammable liquids, gases, or explosive materials in the same compartment as the device, its parts, or enhancements. For vehicles equipped with an air bag, remember that air bags inflate with great force. Do not place objects, including installed or portable wireless equipment in the area over the air bag or in the air bag deployment area. If in-vehicle wireless equipment is improperly installed and the air bag inflates, serious injury could result.

Using your device while flying in aircraft is prohibited. Switch off your device before boarding an aircraft. The use of wireless teledevices in an aircraft may be dangerous to the operation of the aircraft, disrupt the wireless telephone network, and may be illegal.

## Additional safety information

### ■ Potentially explosive environments

Switch off your device when in any area with a potentially explosive atmosphere and obey all signs and instructions. Potentially explosive atmospheres include areas where you would normally be advised to turn off your vehicle engine. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death. Switch off the device at refueling points such as near gas pumps at service stations. Observe restrictions on the use of radio equipment in fuel depots, storage, and distribution areas; chemical plants; or where blasting operations are in progress. Areas with a potentially explosive atmosphere are often but not always clearly marked. They include below deck on boats, chemical transfer or storage facilities, vehicles using liquefied petroleum gas (such as propane or butane), and areas where the air contains chemicals or particles such as grain, dust, or metal powders.

### ■ Emergency calls



**Important:** Wireless phones, including this device, operate using radio signals, wireless networks, landline networks, and user-programmed functions. Because of this, connections in all conditions cannot be guaranteed. You should never rely solely on any wireless device for essential communications like medical emergencies.

#### To make an emergency call:

1. If the device is not on, switch it on. Check for adequate signal strength.  
Some networks may require that a valid SmartChip is properly inserted in the device.
2. Press the end key as many times as needed to clear the display and ready the device for calls.
3. Enter the official emergency number for your present location. Emergency numbers vary by location.
4. Press the call key.

If certain features are in use, you may first need to turn those features off before you can make an emergency call. Consult this guide or your service provider for more information.

When making an emergency call, give all the necessary information as accurately as possible. Your wireless device may be the only means of communication at the scene of an accident. Do not end the call until given permission to do so.

## Additional safety information

### ■ Certification information (SAR)

This mobile device meets guidelines for exposure to radio waves

Your mobile device is a radio transmitter and receiver. It is designed not to exceed the limits for exposure to radio waves recommended by international guidelines. These guidelines were developed by the independent scientific organisation ICNIRP and include safety margins designed to assure the protection of all persons, regardless of age and health.

The exposure guidelines for mobile devices employ a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit stated in the ICNIRP guidelines is 2.0 watts/kilogram (W/kg) averaged over 10 grams of tissue. Tests for SAR are conducted using standard operating positions with the device transmitting at its highest certified power level in all tested frequency bands. The actual SAR level of an operating device can be below the maximum value because the device is designed to use only the power required to reach the network. That amount changes depending on a number of factors such as how close you are to a network base station. The highest SAR value under the ICNIRP guidelines for use of device type RM-79 at the ear is 0.52 W/kg

Use of device accessories and enhancements may result in different SAR values. SAR values may vary depending on national reporting and testing requirements and the network band. Additional SAR information may be provided under product information at [www.nokia.com](http://www.nokia.com).

Your mobile device is also designed to meet the requirements for exposure to radio waves established by the Federal Communications Commission (USA) and Industry Canada. These requirements set a SAR limit of 1.6 W/kg averaged over 1 gram of tissue. The highest SAR value reported under this standard during product certification for use at the ear for device type RM-79 is 0.96 W/kg and when properly worn on the body is 1.08 W/kg. Information about this device model can be found at <http://www.fcc.gov/oet/fccid> by searching the equipment authorization system using FCC ID: QTKRM-79.

Additional safety information

■ Technical Information

Feature	Specification
<b>Weight</b>	115 g (4 oz) with BP-6M Li-Ion 900 mAh battery
<b>Size</b>	Volume: 91 cm <sup>3</sup> (5.6 in <sup>3</sup> ) Length: 99 mm (3.9 in) Width: 46 mm (1.8 in) Thickness: 21 mm (0.8 in)
<b>Frequency range</b>	RM-79 Nokia 6282 GSM 850 824–849 MHz (TX) 869–894 MHz (RX) GSM 1800 1710–1785 MHz (TX) 1805–1865 MHz (RX) GSM and WCDMA1900 1850–1910 MHz (TX) 1930–1990 MHz (RX)
<b>Transmitter output power</b>	Up to 2 W
<b>Battery voltage</b>	3.7 V dc
<b>Number of channels</b>	299
<b>Operating times(GSM)</b> <b>Operating times (WCDMA)</b>	Standby time: up to 250 hours Talk time: up to 4 hours Standby time: up to 250 hours Talk time: up to 3 hours
<b>Operating temperature</b>	15°C to + 25°C (59°F to + 77°F)

## Index

---

### A

- access codes 9
- active standby 60, 62
- alarm clock 74
- applications 51
- audio 83
- audio messages 85

### B

- battery
  - authentication 88
  - charging 87
  - discharging 87
  - install 12
- bluetooth
  - set up connection 63
  - settings 64
  - wireless technology 63
- bookmarks 45
- browser 43
- browser security 47
- business cards 57

### C

- cache memory 48
- calculator 53
- calendar 75
- call
  - key 17
  - log 42
  - recent 42
  - settings 69
  - waiting 23
- camera 78
- camera key 17
- certificates 49
- charge level 18
- charger connector 17
- charging 87
- configuration settings 71
- connectivity 86
- cookies 47
- countdown timer 76

### D

- data
  - cable 69
  - transfer 67
- data communication 86
- decline call 23
- digital signature 50
- discharging 87
- download applications 52

### E

- earpiece 17
- emergency calls 93
- end key 17
- enhancements 71
- enhancements connector 17
- equalizer 84

### F

- folders 38

### G

- games 51
- groups 57

### I

- IM
  - chat session 31
  - log in 29
  - log off 32
  - messaging 30
  - overview 28
- indicators 20
- info messages 39
- infrared 64
- install
  - battery 12
  - SmartChip 12
- instant messaging, see IM
- IR port 17



**M**

- mail,voice 38
- maintenance 90
- MEdia Net 43
- media player 79
- memory card
  - format 54
  - install 13
  - slot 17
- message
  - center number 33
  - counter 42
  - templates 38
- messages
  - audio 85
  - folders 38
  - info 39
  - instant 28
  - multimedia 35
  - text 33
  - voice 38
- multimedia messages 35, 36
- music player 80
- mute ringing tones 23
- my numbers 58
- my stuff 54

**N**

- navigation key 17
- network services 7
- notes 76

**O**

- overview 35

**P**

- packet data 65, 86
- PC Suite 86
- phone settings 70
- PIN code 9
- plug and play service 15
- power
  - key 17
  - on and off 15
  - saver 60
- profiles 59
- PUK code 10

**R**

- radio 81
- recorder 83
- restore factory settings 73
- ringing tones 59

**S**

- safety 91
  - certification information (SAR) 94
  - emergency calls 93
  - explosive environments 93
  - guidlines 6
  - hearing aids 92
  - medical devices 91
  - pacemakers 92
  - vehicles 92
- screen saver 60
- security
  - code 9
  - settings 72
- selection keys 17
- send 36
- service commands 39
- settings
  - call 69
  - camera 79
  - configuration 71
  - enhancements 71
  - phone 70
  - restore factory 73
  - security 72
- shortcuts 19
- signal strength 18
- SmartChip
  - installation 12
  - messages 34
- SMS e-mail 34
- special characters 26
- speed dialing 22, 57
- stereo widening 84
- stopwatch 77
- switch on and off 15
- synchronize
  - from PC 68
  - from server 68

**T**

- templates 34

## **I n d e x**

text  
  entry 25  
  messages 33  
themes 59  
timer 76  
to-do list 76  
tones 59  
tools 74

## **U**

unlock keypad 21  
USB data cable 69

## **V**

vibrating alert 59  
video

  camera 79  
voice  
  commands 62  
  dialing 22  
  mail 38  
  mailbox 38  
  recorder 83  
  recorder key 17  
volume key 17

## **W**

wallpaper 59, 60  
Web 43  
write 35  
writing language 25

**Index**

Notes