 


RM-900



 
Issue 1 EN





Psst...

This guide isn't all there is...
For the online user guide, even
more info, user guides in
another language, and
troubleshooting help, go to
www.nokia.com/support.




Contents

Psst...	2	Help and support	30
Safety	4	Feature-specific information	32
Get started	6	Product and safety information	39
Make or answer a call	20	Copyrights and other notices	47
Send a message	21		
Save a name and phone number	23		
Share your content using Slam	24		
Connect to a Wi-Fi network	25		
Browse the web	26		
Software updates	28		
Update your phone software	29		
3			


Safety

Read these simple guidelines. Not following them may be dangerous or illegal. For further info, read the complete user guide.

 **SWITCH OFF IN RESTRICTED AREAS**
Switch the device off when mobile phone use is not allowed or when it may cause interference or danger, for example, in aircraft, in hospitals or near medical equipment, fuel, chemicals, or blasting areas. Obey all

instructions in restricted areas.

 **ROAD SAFETY COMES FIRST**
Obey all local laws. Always keep your hands free to operate the vehicle while driving. Your first consideration while driving should be road safety.

 **INTERFERENCE**
All wireless devices may be susceptible to interference, which could affect performance.

 **QUALIFIED SERVICE**
Only qualified personnel may install or repair this product.

 **BATTERIES, CHARGERS, AND OTHER ACCESSORIES**
Use only batteries, chargers, and other accessories approved by Nokia for use with this device. Do not connect incompatible products.



KEEP YOUR DEVICE DRY

 
Your device is not water-resistant. Keep it dry.



PROTECT YOUR HEARING

To prevent possible hearing damage, do not listen at high volume levels for long periods. Exercise caution when holding your device near your ear while the loudspeaker is in use.





Get started
Keys and parts

 
..



11



6





- 1 Charger connector
- 2 Micro-USB connector
- 3 Headset connector (3.5 mm)
- 4 Volume/Zoom keys
- 5 Lock/Power key
- 6 Microphone
- 7 Back key
- 8 Touch screen
- 9 Camera lens
- 10 Back cover release button

The antenna area is highlighted.

Avoid touching the antenna area while the antenna is in use. Contact with antennas affects the communication quality and may reduce battery life due to higher power level during operation.

7





Insert SIM and battery

-COVERS-CHANGEABLE-LI.

 


 
 
1. Press the release button at the back of the phone, and carefully lift and remove the back cover. #unique_25/
unique_25_Connect_42_S



2. If the battery is in the phone, lift it out. #unique_25/
unique_25_Connect_42_S
-SIM-CARD-REMOVAL-LI.

8






3. Open the SIM holder, and place the SIM in the holder. Make sure the contact area is face down.#unique_25/unique_25_Connect_42_S-MICRO-SIM on page 36.

4. Line up the battery contacts, and push the battery in.

 
5. Replace the back cover.



Nokia
Confidential
Linh Hai Song
CERTIFICATION
23-Jan-2013
© 2013 Nokia



 6. To switch on, press and hold the power key until the phone vibrates.

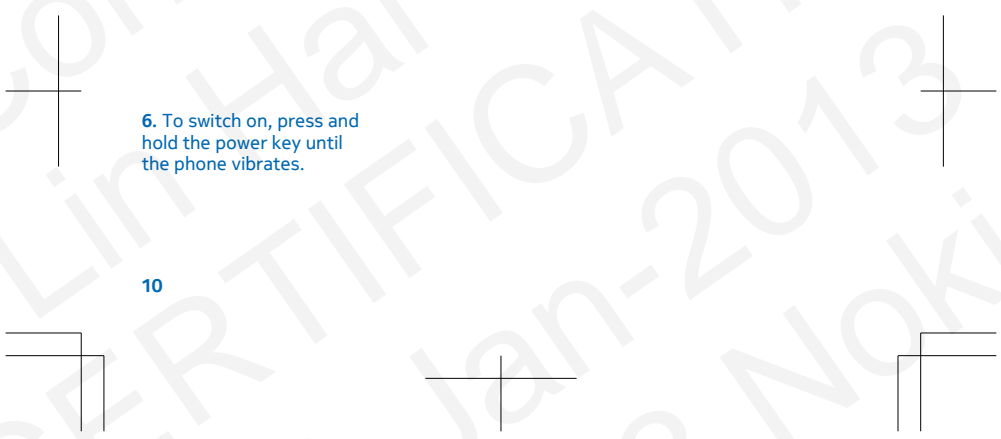



Insert a memory card



 
1. Remove the back cover.
 2. Push the card in with the contact area face up until it locks into place.
 3. To remove the card, push the card in until it's free. #unique_25/
unique_25_Connect_42_S -MEMCARD-COMPATIBLE on page 33.
3. To remove the card, push the card in until it's free. #unique_25/
unique_25_Connect_42_S -MEMCARD-REMOVING on page 34.

 




Charge the battery

- 1. Plug the charger into a wall outlet.
- 2. Connect the charger to the phone. #unique_25/
unique_25_Connect_42_S
-BATTERY-DISCHARGED
on page 32
- 3. Battery full? Unplug the charger first from the phone, then from the wall outlet.

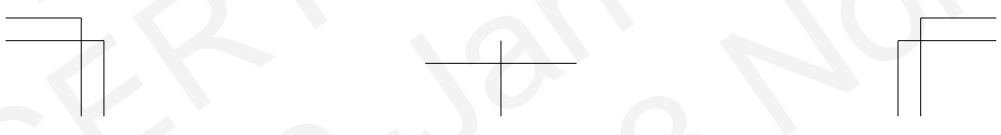




Touch screen actions





1. To open an app or other item, tap the app or item.
#unique_25/
unique_25_Connect_42_s
-touch-screen-
protection.

2. To switch a setting on or off, tap the switch.

   3. To see more options, tap and hold an item.








4. To swipe, steadily slide your finger in the desired direction.

5. To see more options, swipe up from the bottom of the screen if you can see a blue line there.

   6. To close an app or go back to the home screen, swipe in from the left or right of the screen.






7. To see notifications and change settings, swipe down from the top of the screen. To close the menu, swipe up.

8. To scroll, slide your finger quickly up or down, and lift your finger.

9. To zoom, slide two fingers apart or together on the screen.

 ★ **Tip:** For more info on touch screen actions, see **Tutorial**.





Lock the keys and screen

 
an app on the lock screen, you can swipe over the notification to unlock the phone and open the app.

 


1. Press the power key.

2. To unlock, press the power key, then swipe in from the left or right of the screen.

★ Tip: You can also press the back key and swipe .If there's a notification from






Switch between views

Swipe left or right to switch between the home screens.

- Easily keep up with what you've been doing lately, and check what's happening next in your calendar.
- In the apps menu, you can open apps. You can rearrange your apps and shortcuts as you like.

★ **Tip:** You don't have to navigate long paths to, for example, switch your phone to silent mode. Simply swipe down from the top of the screen, and change the setting.

 Your phone has two home screens: one for recent activity, and another one for apps.

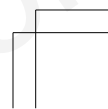

Check your latest activity

In the apps menu, swipe left or right to switch to view your latest activity. Here, you can see the following:

 
- Apps you've opened recently, grouped by date
- Your upcoming calendar events. Swipe down at the top of the activity list to see what you've got planned next.

- Your latest messages, missed calls, recent music, and more

★ **Tip:** You can easily pause or resume the currently playing song directly from the list.

Clear all activity
Tap and hold an item, and tap **Clear all**.


Copy contacts from your old phone

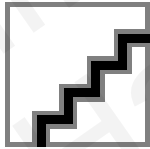

Get all your contacts to your new phone in one go.

Your old phone must have Bluetooth, and the contacts must be stored in


the phone memory, not on the SIM.

1. On both your new and old phone, switch Bluetooth on.
2. On your new phone, tap .
3. Swipe up from the bottom of the screen, and tap **Import contacts > Other device**.
4. Move the phones close to each other. When the phones are connected via

Bluetooth, the contacts transfer starts.

If your contacts are written in a language that is not supported by your new phone, the contact info may not show correctly.

Make or answer a call


1. Tap .
2. Type in the phone number.

To type in the + character, used for international calls, tap * twice.

The + character only works from abroad. The + character may not work in all regions. In this case, enter the international access code directly.

3. Tap .

20

4. To end the call, tap .
5. When someone calls you, swipe down to answer.


★ **Tip:** Is your friend's voice too loud or quiet? Press the volume keys to change the volume.

Swap between calls
Tap .

Decline a call
Swipe up, and tap .

Silence a call

When someone calls you, swipe up.


★ **Tip:** After silencing the call, you can quickly send a text message. Tap , and write your message.

Send a message



With text and multimedia messages, you can quickly contact your friends and family.


1. Tap  > .

2. To add a contact as a recipient, tap . To type in a phone number, tap **Add recipient**. You can add more than one recipient.

 
3. Write your message in the text box.


★ **Tip:** To add a smiley, tap .


4. To add an attachment, such as a photo or video, tap .

★ **Tip:** You can also take a new photo while writing your message. Tap  > **Camera**, take a photo, and tap **Done**.

If the item you insert in a multimedia message is too large for the network, the device may automatically reduce the size.

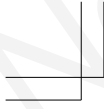

 5. Tap  #unique_25/
unique_25_Connect_42_S
-MMS-COMPATIBILITY on
page 34 #unique_25/
unique_25_Connect_42_S
-MESSAGES-LENGTH on
page 34

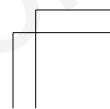

Save a name and phone number



Add new contacts to your phone.

1. Tap **+**.
2. Swipe up from the bottom of the screen, and tap **Add contact**.

3. Write the name, number, and other details.

Edit the details of a contact

Tap the contact, and swipe up from the bottom of the screen. Then tap **Edit**, and edit the details, such as the mail address or ringtone.

Add more details

When editing a contact, swipe up from the bottom

of the screen, tap **Add details** and tap a detail.

Share your content using Slam



Share your content easily with Slam.

1. Switch Bluetooth on in both phones.
2. Make sure the phones are visible to others.


3. Tap, for example, a photo, and **< > Slam via Bluetooth.**
4. Move your phone close to the other phone.
5. **Slam** searches for the nearest phone, and sends the item to it.

Connect to a Wi-Fi network



To help save on data costs, you can use a Wi-Fi network to connect to the internet, whether you're at home or at a library or internet café.


1. Tap .
2. Switch **Wi-Fi to On**.
3. To connect, tap the network you want.
4. If the connection is secured, type in the password.

Connect to the previously used Wi-Fi network
Swipe down from the top of the screen, and tap .

Add a new network

Make sure Wi-Fi is on, tap **Add new network**, and type in the required info.

Close the Wi-Fi connection

Swipe down from the top of the screen, and tap .

Browse the web



Catch up on the news, and visit your favourite websites on the go.

★ **Tip:** If your network service provider doesn't charge you a fixed fee for


data transfer, to save on data costs, use a Wi-Fi network to connect to the internet.

 
1. Tap .
2. Write the web address in the address bar, and tap .

★ **Tip:** To search the internet, write a search word in the address bar. If asked, select your default search engine.

Zoom in or out


Place two fingers on the screen, and slide your fingers apart or together.

★ **Tip:** To view the page in a single column of larger, readable text and pictures without having to zoom in, swipe up from the bottom of the screen, tap **More >##settings**, and switch **Column view** to **On** .

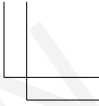

Share a web page
When browsing, swipe up from the bottom of the screen, and tap **##share** and how you want to share.

 ★ **Tip:** Follow your data usage with the Counters app.

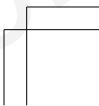


Software updates

▲ Warning: If you install a software update, you cannot use the device, even to make emergency calls, until the installation is completed and the device is restarted.

Before starting the update, connect a charger or make sure the device battery has enough power.

After the update, go to www.nokia.com/support to get your new user guide.

 Update your phone software

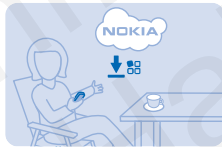

You can update your phone software wirelessly. You can also set your phone to automatically check for updates.

1. Tap > Phone update.

★ **Tip:** To quickly go to updates, when your phone notifies you of an update, swipe down from the top of the screen, and swipe the update notification right.

2. To download and install an update, tap **Updated**, and follow the instructions shown on the phone.

The update may take several minutes. If you encounter problems, contact your network service provider.

Your network service provider may send updates over the air directly to your phone. For more info on this network service, contact your network service provider.

Help and support

- Troubleshooting info
- Discussions
- News on apps and downloads
- Software update info
- Further details about features and technologies, and the compatibility of devices and accessories

Troubleshooting and discussions may not be available in all languages.

If your phone isn't responding

Do the following:

- Switch the phone off, and remove the battery. After about a minute, put the battery back in, and switch the phone on.
- Update your phone software.

- **Reset your phone.** This restores the factory settings, and erases all your personal content, including apps you've purchased and downloaded..

If your issue remains unsolved, contact your network service provider or Nokia for repair options. Before sending your phone for repair, always back up your data,

Nokia
Confidential
Lirio Song
CERTIFICATION
23-Jan-2013
© 2013 Nokia

as all personal data in your phone may be deleted.

For additional product support info, see the warranty and reference leaflet included with your Nokia device.

★ **Tip:** If you need to identify your phone, to view the unique IMEI number of the phone, dial ***#06#**.

Feature-specific information

The images in this guide may differ from your device screen.

Avoid touching the antenna area while the antenna is in use. Contact with antennas affects the communication quality and may reduce battery life due to higher power level during operation.

 
If the battery is completely discharged, it

may take several minutes before the charging indicator is displayed or before any calls can be made.

Operating the device in hidden mode is a safer way to avoid malicious software. Do not accept Bluetooth connection requests from sources you do not trust. You can also switch the Bluetooth

function off when you are not using it.

When using this device, obey all laws and respect local customs, privacy and legitimate rights of others, including copyrights. Copyright protection may prevent you from copying, modifying, or transferring images, music, and other content.




Flight mode closes connections to the mobile network and switches your phone's wireless features off. Comply with the instructions and safety requirements given by, for example, an airline, and any applicable laws and regulations. Where allowed, you can connect to a Wi-Fi network to, for example, browse the internet or switch


Bluetooth on in flight mode.


Before starting the update, connect a charger or make sure the device battery has enough power.

 The + character only works from abroad. The + character may not work in all regions. In this case, enter the international access code directly.

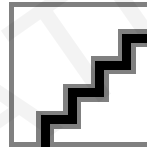

  Use only compatible memory cards approved for use with this device. Incompatible cards may damage the card and the device and corrupt data stored on the card.





❗ **Important:** Do not remove the memory card when an app is using it. Doing so may damage the memory card and the device and corrupt data stored on the card.

 
Using services or downloading content may cause transfer of large amounts of data, which may result in data traffic costs.

 
 
You can send text messages that are longer than the character limit for a single message. Longer messages are sent as two or more messages. Your service provider may charge accordingly. Characters with accents, other marks, or some language options, take more space, and limit the number of characters that

can be sent in a single message.

If the item you insert in a multimedia message is too large for the network, the device may automatically reduce the size.

Only compatible devices can receive and show multimedia messages. Messages may look





different in different devices.

 
Nokia may use personal data for certain uses relating to this service, as detailed in the Nokia privacy policy or other applicable terms.

For info on Nokia Service terms and Privacy policy, go to www.nokia.com/privacy.

The personal unblocking key (PUK) code and the universal personal unblocking key (UPUK) code (8 digits) are required to change a blocked PIN code and UPIN code, respectively. The PUK2 code (8 digits) is required to change a blocked PIN2 code. These codes are not supplied with the SIM card. Contact

your local service provider for the codes.

Do not connect products that create an output signal, as this may damage the device. Do not connect any voltage source to the audio connector. If you connect an external device or headset, other than those approved for use with this device, to the audio connector, pay special



attention to volume levels.

Important: This device is designed to be used with a mini-UICC SIM card, also known as a micro-SIM card only. A micro-SIM card is smaller than the standard SIM card. Use of incompatible SIM cards may damage the card or the device, and may corrupt data stored on the card.

 
Important: To prevent damage to the SIM card, always remove the battery before you insert or remove the card.

Note: Switch the device off and disconnect the charger and any other device before removing any covers. Avoid touching electronic components while changing any covers. Always store and use the

device with any covers attached.

Some of the accessories mentioned in this user guide may be sold separately.

The social networking services are third-party services and not provided by Nokia. Check the privacy settings of the social networking service you are using as you may



share info with a large group of people. The terms of use of the social networking service apply to sharing info on that service. Familiarise yourself with the terms of use and the privacy practices of that service.

Nokia does not provide a warranty for or take any responsibility for the functionality, content, or end-user support of third-

 
party apps provided with your device. By using an app, you acknowledge that the app is provided as is. Nokia does not make any representations, provide a warranty, or take any responsibility for the functionality, content, or end-user support of third-party apps provided with your device.

For additional product support info, see the

warranty and reference leaflet included with your Nokia device.

A cache is a memory location that is used to store data temporarily. If you have, or have tried to, access confidential info or a secure service, requiring passwords, clear the cache after each use.

Important: Use encryption to increase the






security of your Wi-Fi connection. Using encryption reduces the risk of others accessing your data.

Note: Using Wi-Fi may be restricted in some countries. For example, in France, you are only allowed to use Wi-Fi indoors. For more info, contact your local authorities.

 Warning: If you install a software update, you cannot use the device, even to make emergency calls, until the installation is completed and the device is restarted.



Product and safety information

Network services and costs

You can only use your device on the GSM 850 and 1900 MHz networks. You need a subscription with a service provider. Using some features and downloading content require a network connection and may result in data costs. You may also need to subscribe to some features.

Emergency calls

1. Make sure the device is switched on.
2. Check for adequate signal strength.

You may also need to do the following:

- Put a SIM card in the device.
- Switch the call restrictions off in your device, such as call barring, fixed dialling, or closed user group.
- Make sure the flight profile is not activated.
- If the device screen and/or keys are locked, unlock them.

3. Press the back key repeatedly, until the home screen is shown.

4. To open the dialler, select 

5. Type in the official emergency number for your present location. Emergency call numbers vary by location.

6. Select 

7. Give the necessary info as accurately as possible. Do not end the call until given permission to do so.

Important: Activate both cellular and internet calls, if your phone supports internet calls. The phone may attempt to make emergency calls both

through cellular networks and through your internet call service provider. Connections in all conditions cannot be guaranteed. Never rely solely on any wireless phone for essential communications like medical emergencies.

Battery and charger info
Use your device only with an original BL-4U rechargeable battery. Nokia may make additional battery models available for this device. Charge your device with AC-11 charger. Charger plug type may vary.

Battery safety
Always switch the device off and unplug the charger before removing the battery. To unplug a charger or an accessory, hold and pull the plug, not the cord. When your charger is not in use, unplug it. Do not leave a fully charged battery connected to a charger, as overcharging may shorten the battery's lifetime. If left unused, a fully charged battery will lose its charge over time. Always keep the battery between 15°C and 25°C (59°F and 77°F). Extreme temperatures reduce the

capacity and lifetime of the battery. A device with a hot or cold battery may not work temporarily. Accidental short-circuiting can happen when a metallic object touches the metal strips on the battery. This may damage the battery or the other object. Do not dispose of batteries in a fire as they may explode. Obey local regulations. Recycle when possible. Do not dispose as household waste. Do not dismantle, cut, crush, bend, puncture, or otherwise damage the battery in any way. If a battery leaks, do not let liquid touch skin or eyes. If this

happens, immediately flush the affected areas with water, or seek medical help. Do not modify, attempt to insert foreign objects into the battery, or immerse or expose it to water or other liquids. Batteries may explode if damaged.

Use the battery and charger for their intended purposes only. Improper use, or use of unapproved or incompatible batteries or chargers may present a risk of fire, explosion, or other hazard, and may invalidate any approval or warranty. If you believe the battery or charger is damaged,

take it to a service centre before continuing to use it. Never use a damaged battery or charger. Only use the charger indoors.

Additional safety information

Small children
Your device and its accessories are not toys. They may contain small parts. Keep them out of the reach of small children.

Medical devices
Operation of radio transmitting equipment, including wireless phones, may interfere with inadequately

shielded medical devices' function. Consult a physician or the medical device's manufacturer to determine if it is adequately shielded from external radio energy.

Implanted medical devices
To avoid potential interference, manufacturers of implanted medical devices recommend a minimum separation of 15.3 centimetres (6 inches) between a wireless device and the medical device. Persons who have such devices should:

- Always keep the wireless device more than 15.3

centimetres (6 inches) from the medical device.

- Not carry the wireless device in a breast pocket.
- Hold the wireless device to the ear opposite the medical device.
- Switch the wireless device off if there is any reason to suspect that interference is taking place.
- Follow the manufacturer directions for the implanted medical device.

If you have any questions about using your wireless device with an implanted medical device, consult your health care provider.

Accessibility solutions

Nokia is committed to making mobile phones easy to use for all individuals, including those with disabilities. For more information, visit the Nokia website at www.nokiaaccessibility.com.

Hearing

▲ Warning: When you use the headset, your ability to hear outside sounds may be affected. Do not use the headset where it can endanger your safety. Some wireless devices may interfere with some hearing aids.

Protect your device from harmful content

Your device may be exposed to viruses and other harmful content. Take the following precautions:

- Be cautious when opening messages. They may contain malicious software or otherwise be harmful to your device or computer.
- Be cautious when accepting connectivity requests, browsing the internet, or downloading content. Do not accept Bluetooth connections from sources you do not trust.

- Only install and use services and software from sources that you trust and that offer adequate security and protection.
- Install antivirus and other security software on your device and any connected computer. Only use one antivirus app at a time. Using more may affect performance and operation of the device and/or computer.
- If you access preinstalled bookmarks and links to third party internet sites, take the appropriate precautions. Nokia does not endorse or

assume liability for such sites.

Operating environment

This device meets radio frequency exposure guidelines in the normal use position at the ear or at least 1.5 centimetres (5/8 inch) away from the body. Any carry case, belt clip, or holder for body-worn operation should not contain metal and should position the device the above-stated distance from your body. The sending of data files or messages requires a quality network connection and may

be delayed until such a connection is available. Follow the separation distance instructions until the sending is completed.

Parts of the device are magnetic. Metallic materials may be attracted to the device. Do not place credit cards or other magnetic storage media near the device, because information stored on them may be erased.

Vehicles

Radio signals may affect improperly installed or inadequately shielded electronic systems in vehicles.

For more info, check with the manufacturer of your vehicle or its equipment. Only qualified personnel should install the device in a vehicle. Faulty installation may be dangerous and invalidate your warranty. Check regularly that all wireless device equipment in your vehicle is mounted and operating properly. Do not store or carry flammable or explosive materials in the same compartment as the device, its parts, or accessories. Do not place your device or accessories in the air bag deployment area.

Potentially explosive environments
Switch your device off in potentially explosive environments, such as near petrol pumps. Sparks may cause an explosion or fire resulting in injury or death. Note restrictions in areas with fuel; chemical plants; or where blasting operations are in progress. Areas with a potentially explosive environment may not be clearly marked. These usually are areas where you are advised to switch your engine off, below deck on boats, chemical transfer or storage

facilities, and where the air contains chemicals or particles. Check with the manufacturers of vehicles using liquefied petroleum gas (such as propane or butane) if this device can be safely used in their vicinity.

Certification information (SAR)

This mobile device meets guidelines for exposure to radio waves.

Your mobile device is a radio transmitter and receiver. It is designed not to exceed the limits for exposure to radio waves recommended by


international guidelines. These guidelines were developed by the independent scientific organisation ICNIRP and include safety margins designed to assure the protection of all persons, regardless of age and health. The exposure guidelines for mobile devices employ a unit of measurement known as the Specific Absorption Rate or SAR. The SAR limit stated in the ICNIRP guidelines is 2.0 watts/kilogram (W/kg) averaged over 10 grams of tissue. Tests for SAR are conducted using standard operating positions with the device transmitting at

its highest certified power level in all tested frequency bands. The actual SAR level of an operating device can be below the maximum value because the device is designed to use only the power required to reach the network. That amount changes depending on a number of factors such as how close you are to a network base station. The highest SAR value under the ICNIRP guidelines for use of the device at the ear is 0.52 W/kg. Use of device accessories may result in different SAR values. SAR values may vary depending on

national reporting and testing requirements and the network band. Additional SAR information may be provided under product information at www.nokia.com. Your mobile device is also designed to meet the requirements for exposure to radio waves established by the Federal Communications Commission (USA) and Industry Canada. These requirements set a SAR limit of 1.6 W/kg averaged over one gram of tissue. The highest SAR value reported under this standard during product certification for use at the ear



 is 1.00 W/kg and when properly worn on the body is 0.62 W/kg.

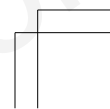

Copyrights and other notices

© 2012 Nokia. All rights reserved. Nokia, Nokia Care, and Nokia Connecting People are trademarks or registered trademarks of Nokia Corporation. Nokia tune is a sound mark of Nokia Corporation. Other product and company names mentioned herein may be trademarks or tradenames of their respective owners. Downloading of maps, games, music and videos and uploading of images and videos may involve

transferring large amounts of data. Your service provider may charge for the data transmission. The availability of particular products, services and features may vary by region. Please check with your local Nokia dealer for further details and availability of language options. Reproduction, transfer, distribution, or storage of part or all of the contents in this document in any form without the prior written permission of Nokia is prohibited. Nokia operates a policy of continuous development. Nokia reserves the right to

make changes and improvements to any of the products described in this document without prior notice.



Includes RSA BSAFE cryptographic or security protocol software from RSA Security.



Oracle and Java are registered trademarks of Oracle and/or its affiliates.

The Bluetooth word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by Nokia is under license. This product is licensed under the MPEG-4 Visual Patent Portfolio License (i) for personal and noncommercial use in connection with information which has been encoded in compliance with the MPEG-4 Visual Standard by a consumer engaged in a personal and noncommercial activity and (ii) for use in connection with MPEG-4 video provided by a licensed video provider. No license is granted

or shall be implied for any other use. Additional information, including that related to promotional, internal, and commercial uses, may be obtained from MPEG LA, LLC. See www.mpegla.com. To the maximum extent permitted by applicable law, under no circumstances shall Nokia or any of its licensors be responsible for any loss of data or income or any special, incidental, consequential or indirect damages howsoever caused. The contents of this document are provided "as is". Except as

required by applicable law, no warranties of any kind, either express or implied, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose, are made in relation to the accuracy, reliability or contents of this document. Nokia reserves the right to revise this document or withdraw it at any time without prior notice. Reverse engineering of software in the device is prohibited to the extent permitted by applicable law. Insofar as this user guide contains any limitations on

Nokia's representations, warranties, damages and liabilities, such limitations shall likewise limit any representations, warranties, damages and liabilities of Nokia's licensors. The availability of products, features, apps and services may vary by region. For more info, contact your Nokia dealer or your service provider. This device may contain commodities, technology or software subject to export laws and regulations from the US and other countries. Diversion contrary to law is prohibited.

**FCC/INDUSTRY CANADA/
MEXICO NOTICE**
This device complies with part 15 of the FCC rules and Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Any changes or modifications not expressly approved by Nokia could void the user's authority to operate this equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a

particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

- Consult the dealer or an experienced radio/TV technician for help.