 


Nokia 2255 User Guide

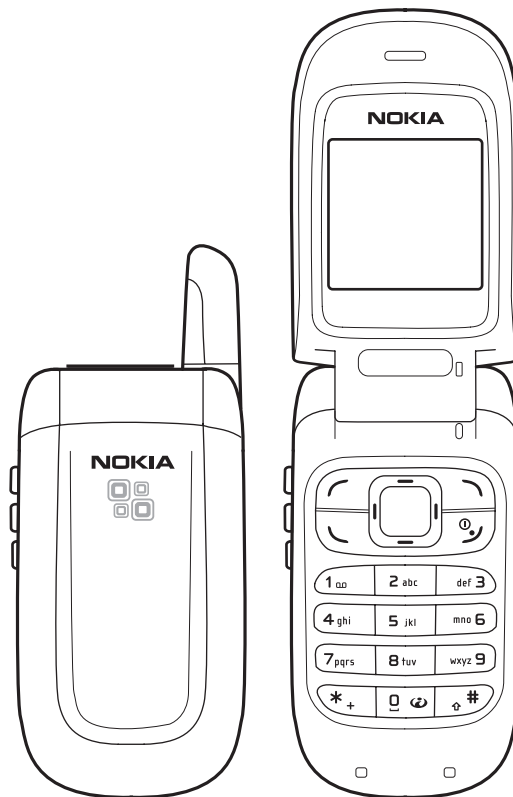

LEGAL INFORMATION

Part No. 9239371, Issue No. 1

Copyright © 2005 Nokia. All rights reserved.

Nokia, Nokia Connecting People, Nokia 2255, and the Nokia Original Enhancements logos are trademarks or registered trademarks of Nokia Corporation. Other company and product names mentioned herein may be trademarks or trade names of their respective owners.

US Patent No 5889770 and other pending patents. T9 text input software Copyright ©1999-2005. Tegic Communications, Inc. All rights reserved.



Includes RSA BSAFE cryptographic or security protocol software from RSA Security.

The information contained in this user guide was written for the Nokia 2255 product. Nokia operates a policy of ongoing development. Nokia reserves the right to make changes to any of the products described in this document without prior notice.

UNDER NO CIRCUMSTANCES SHALL NOKIA BE RESPONSIBLE FOR ANY LOSS OF DATA OR INCOME OR ANY SPECIAL, INCIDENTAL, AND CONSEQUENTIAL OR INDIRECT DAMAGES HOWSOEVER CAUSED. THE CONTENTS OF THIS DOCUMENT ARE PROVIDED "AS IS." EXCEPT AS REQUIRED BY APPLICABLE LAW, NO WARRANTIES OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE MADE IN RELATION TO THE ACCURACY AND RELIABILITY OR CONTENTS OF THIS DOCUMENT. NOKIA RESERVES THE RIGHT TO REVISE THIS DOCUMENT OR WITHDRAW IT AT ANY TIME WITHOUT PRIOR NOTICE.

EXPORT CONTROLS

This device may contain commodities, technology, or software subject to export laws and regulations from the U.S. and other countries. Diversion contrary to law is prohibited.

FCC/INDUSTRY CANADA NOTICE

Your phone may cause TV or radio interference (for example, when using a telephone in close proximity to receiving equipment). The FCC or Industry Canada can require you to stop using your telephone if such interference cannot be eliminated. If you require assistance, contact your local service facility. This device complies with part 15 of the FCC rules. Operation is subject to the condition that this device does not cause harmful interference.

Contents

For your safety	4
1. Phone at a glance	9
2. Set up your device	13
3. Text entry	18
4. Messages	20
5. Call log.....	25
6. Contacts	27
7. Settings	29
8. Tools and games.....	37
9. Extras	39
10. Enhancements.....	42
11. Battery information	43
Care and maintenance	46
Additional safety information	47

For your safety

For your safety

Read these simple guidelines. Not following them may be dangerous or illegal.
Read the complete user guide for further information.



SWITCH ON SAFELY

Do not switch the device on when wireless phone use is prohibited or when it may cause interference or danger.



ROAD SAFETY COMES FIRST

Obey all local laws. Always keep your hands free to operate the vehicle while driving. Your first consideration while driving should be road safety.



INTERFERENCE

All wireless devices may be susceptible to interference, which could affect performance.



SWITCH OFF IN HOSPITALS

Follow any restrictions. Switch the phone off near medical equipment.



SWITCH OFF IN AIRCRAFT

Follow any restrictions. Wireless devices can cause interference in aircraft.



SWITCH OFF WHEN REFUELING

Do not use the phone at a refueling point. Do not use near fuel or chemicals.



SWITCH OFF NEAR BLASTING

Follow any restrictions. Do not use the phone where blasting is in progress.



USE SENSIBLY

Use only in the normal position as explained in the product documentation. Do not touch the antenna unnecessarily.



QUALIFIED SERVICE

Only qualified personnel may install or repair this product.



ENHANCEMENTS AND BATTERIES

Use only approved enhancements and batteries. Do not connect incompatible products.

For your safety



WATER-RESISTANCE

Your device is not water-resistant. Keep it dry.



BACKUP COPIES

Remember to make backup copies or keep a written record of all important information stored in your phone.



CONNECTING TO OTHER DEVICES

When connecting to any other device, read its user guide for detailed safety instructions. Do not connect incompatible products.



EMERGENCY CALLS

Ensure the phone is switched on and in service. Press the end key as many times as needed to clear the display and return to the start screen. Enter the emergency number, then press the call key. Give your location. Do not end the call until given permission to do so.

About your device

The wireless device described in this guide is approved for use on the CDMA 800 network. Contact your service provider for more information about networks.

When using the features in this phone, obey all laws and respect privacy and legitimate rights of others.



Warning: To use any features in this phone, other than the alarm clock, the phone must be switched on. Do not switch the phone on when wireless phone use may cause interference or danger.

Network services

To use the phone you must have service from a wireless service provider. Many of the features in this device depend on features in the wireless network to function. These network services may not be available on all networks or you may have to make specific arrangements with your service provider before you can utilize network services. Your service provider may need to give you additional instructions for their use and explain what charges will apply. Some networks may have limitations that affect how you can use network services. For instance, some networks may not support all language-dependent characters and services. See "Network feature settings," p. 34.

Your service provider may have requested that certain features be disabled or not activated in your device. If so, they will not appear in your device menu. Your device may also have been specially configured. This configuration may include

F o r y o u r s a f e t y

changes in menu names, menu order, and icons. Contact your service provider for more information.

Welcome

Congratulations on your purchase of the Nokia 2255 mobile phone. Your phone provides many functions that are practical for daily use, such as a hands-free speakerphone, alarm clock, calculator, calendar, and more. To personalize your device, you can set your favorite ring tones.

■ Register your device

 
Make sure to register your phone at www.warranty.nokiausa.com, or call 1-888-NOKIA-2U (1-888-665-4228) so that we can serve your needs better if you need to call a customer center, or to have your phone repaired.

■ Get help

Find your device label

We recommend that you have the following information available before contacting the Nokia Customer Care Center or the service provider. The information is on the type label (1) on the back of the phone under the battery:

- Model number Nokia 2255
- Phone type and FCC ID
- International mobile equipment identity (IMEI), or electronic serial number (ESN)

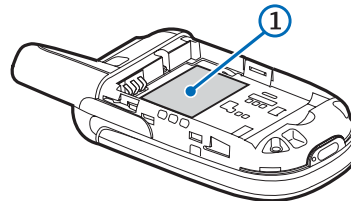

Do not remove or deface the label.

Nokia support and contact information

Check www.nokiausa.com/support or your local Nokia Web site for the latest version of this guide, additional information, downloads and services related to your Nokia product.

If you have questions on the use of Nokia products and services, and want to contact customer service, check the list of local Nokia Care contact centers at www.nokia.com/customerservice.

W e l c o m e

For maintenance services, check your nearest Nokia Care services location at www.nokia.com/repair.

Accessibility solutions

Nokia is committed to making mobile phones easy to use for all individuals, including those with disabilities. For more information visit the Web site at www.nokiaaccessibility.com.

1. Phone at a glance

 
■ Open the fold

To use the phone, you must open the fold. Do not try to open the fold more than the hinge allows.

To close the fold, push from the top part of the device, not from the hinge.

■ Phone keys, indicators, and connectors


- Earpiece and loudspeaker (1)
- Display screen (2)
- Left selection key (3)
- Volume keys (4)
- Flashlight key (5)
- Call key (6)
- Keypad (7)
- Charger connector (8)—under the rubber cover
- Headset connection (9)—under the rubber cover
- 4-way scroll key (10)
- Right selection key (11)
- End and power key (12)
- Flashlight lens (13)
- Microphone (14)

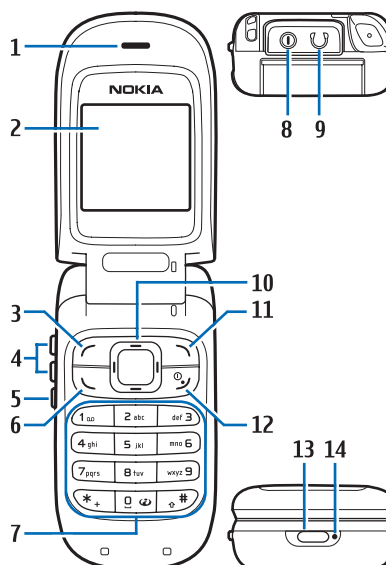

Phone at a glance

■ The start screen

 The start screen is home base and indicates your phone is in the standby mode.

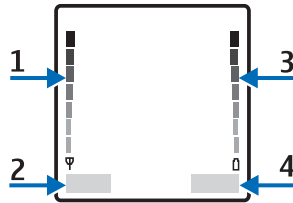

Signal strength (1)—A higher bar indicates a stronger network signal.

Menu (2)—Press the left selection key to view menus.

Battery level (3)—A higher bar indicates more power in the battery.

Right selection key (4)—Press to access menu shortcuts. See "My menu settings," p. 36.

■ Quick keys

In the standby mode, use the quick keys as follows:

- Scroll up to access the call register.
- Scroll down to access the contacts list.
- Scroll left to write a text message.
- Scroll right to access the month view. See "Calendar," 40.
- Press the call key to access a list of previously dialed numbers.
- Briefly press the end key to access a list of profiles. See "Profiles," p. 30.






 










■ Indicators and icons

Depending on your wireless service provider and the model number of your device, some or all of the following indicators and icons may appear in the standby mode.

✉ You have new text messages. See "Text entry," p. 18.

☎ You have new voice messages. See "Voice messages," p. 23.

🔒 Device keypad is locked. See "Lock the keypad (keyguard)," p. 17.

-  Device is set to the silent profile. See "Profiles," p. 30.
-  Alarm clock is set to on. See "Alarm clock," p. 37.
-  Countdown timer is running. See "Countdown timer," p. 41.
-  Stopwatch timer is running in the background. See "Stopwatch," p. 41.
-  Integrated hands-free is active. See "Loudspeaker," p. 16.
-  Timed profile is selected. See "Profiles," p. 30.
-   or  An enhancement is connected to the device. See "Enhancements," p. 42.
-  Voice privacy encryption is active in the network.
-  or  Location info sharing is set to emergency or on. See "Emergency calls," p. 49.
-  You are in a digital network. See "Network services," p. 5.
-  You are in an analog network. See "Network services," p. 5.
-  You are in a 1XRTT network. See "Network services," p. 5.
-  You are roaming outside your home network.

■ Device menus

Device features are grouped according to function and are accessed through the main menus. Each main menu contains submenus and lists from which you can select or view items and customize device features. Use the scroll method to access these menus and submenus.

Scroll method

1. Select *Menu* in the standby mode.
2. Scroll up or down to the menu you want, and select it.
3. If the menu contains submenus, scroll to the menu you want, and select it.

Press the end key to exit a main menu or submenu.

Shortcuts

The menus, submenus, and setting options are numbered. These numbers are called shortcuts.

Phone at a glance

In the standby mode, select *Menu*; then, within 3 seconds, press the numbered keys associated with the menu function to view or activate it. Repeat for submenus.

 
2. Set up your device

■ The antenna

Your device has a fixed antenna located towards the top of the phone with the fold closed. Hold the phone with the antenna area pointed up and over your shoulder.

As with any other radio transmitting device, do not touch the antenna unnecessarily when the device is switched on. Contact with

the antenna affects call quality and may cause the phone to operate at a higher power level than otherwise needed. Avoiding contact with the antenna area when operating the phone optimizes the antenna performance and the battery life.

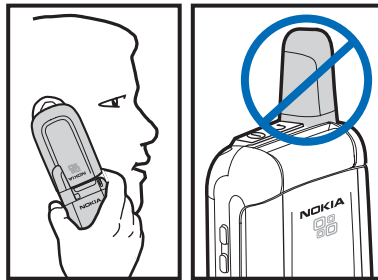

■ UIM card slot

Your phone has a UIM (SIM) card slot built into the mechanics. However, the UIM is not functional in this phone model. Avoid placing anything into the UIM card slot.

■ Insert the battery

 


Note: Always switch off the power and disconnect the charger and any other device before removing the cover. Avoid touching electronic components while changing the cover. Always store and use the device with the cover attached.


Always use original Nokia batteries. See Battery information, 43.

Set up your device


Slide the back cover off to remove it (1).

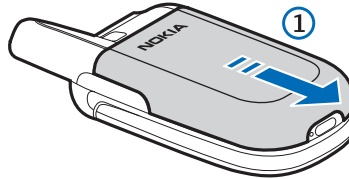

 Insert the battery so that the gold-colored connectors on the battery align with the connectors on the device (2).

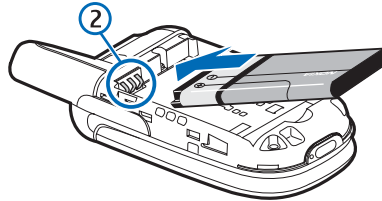

 
Replace the back cover: align the catches (3) together, and slide the cover (4) forward.

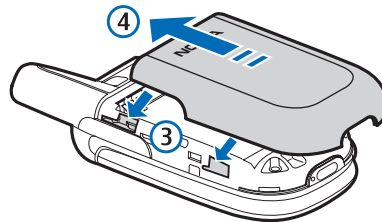

Charge the battery

1. Plug the charger transformer into a standard ac outlet.
2. Open the rubber cover located at the top of the phone. Connect the charger plug into the connector in the device.

 The battery indicator bar starts scrolling. When the battery is fully charged, the bar stops scrolling.

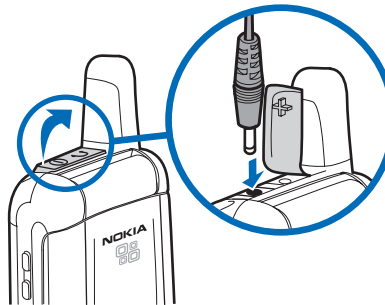

3. Disconnect the charger from the device and the ac outlet.

■ Switch on or off



Warning: Do not switch the device on when wireless phone use is prohibited, or when it may cause interference or danger.

The on-off function for this device is combined with the end key. To switch the device on or off, press and hold the end key. When you switch off the device, the profiles list is displayed before the device switches off.

When you switch the device on, it may request a lock code. Enter the code and select *OK*. The preset lock code is 1234. For information about device codes, see Security settings, 33.

■ Make a call

Use the keypad

- Open the device, and enter the phone number, including the area code.
To delete a character to the left of the cursor, select *Clear*.
- Press the call key. Press the volume keys to adjust the volume during the call.
- Press the end key, or close the fold to end the call or to cancel the call attempt.

Use the contacts list

To enter a number into the contacts list, in the standby mode, select *Menu > Contacts*, and enter the name and phone number. See Contact list options, 27.

In the standby mode, scroll down to find the name or number you want. Press the call key to call the number.

Redialing a number

To redial one of the last 20 phone numbers that you have called, press the call key, scroll to the desired name or number, and press the call key again.

1-touch dialing

1-touch dialing must be switched on before you can use it. To switch it on, select *Menu > Contacts > 1-touch dialing > On*.

Set up your device

You can set keys 2–9 as 1-touch dialing keys. After you assign a number to a key, press and hold the key in standby mode to make a call, or press the number and the call key.

Assign a number to a key

1. Select *Menu* > *Contacts* > *1-touch dialing* > *Edit*.
2. Scroll to the desired key, and select *Assign*. If a phone number is already assigned, select *Options* to view, change, or delete the assignment.
3. Select *Assign to SMS* for text messaging or *Assign to call* for voice calls.

■ Answer calls

Answer a call

Open the fold and press the call key. If you do not press the call key, the call goes to your voice mailbox. To reject a call without answering it, open the fold and quickly close it, or press the end key.

Adjust the volume during a call

To increase or decrease the volume during a call, press the top or bottom of the volume key. When adjusting the volume, a bar chart indicates the volume level.

Loudspeaker



Warning: Do not hold the device near your ear when the loudspeaker is in use because the volume may be extremely loud.

- To activate the loudspeaker during a call, select *Loudspeaker* and close the fold.
- To deactivate the loudspeaker during a call, open the fold and select *Handset*.

The loudspeaker is deactivated when a call (or call attempt) ends or when certain enhancements are connected.

Options during a call

Select *Options* during a call to access in-call functions. Many of these are network services. Check with your wireless service provider for more information.

■ Voice mail

Voice mail is a network service. For more information, and to receive your voice mailbox number, contact your service provider.

To listen to your voice mail, press and hold 1. You may need to enter the number when calling for the first time. To save the voice mailbox number, see [Save voice mailbox number](#), 23.

To forward calls to your voice mailbox, see [Call settings](#), 31.

■ Number screening



You can set your device to screen calls and messages from specific numbers. When you receive a call from a screened number, there is no ringing tone or vibration, regardless of the selected profile. You can screen up to 10 numbers. Screened messages are stored in [Menu > Messages > Screened messages](#). See [Screened messages](#), 22. Use the [No. screening](#) contact list option to enter a number for screening. See [Contact list options](#), 27.

■ Lock the keypad (keyguard)

The keypad lock protects the device from accidental key presses. To lock or unlock the keypad, press the left selection key and quickly press *. Keyguard is not activated when you close the fold.

To answer a call when the keyguard is on, press the call key. When you end or decline the call, the keypad automatically relocks. When the keyguard is on, calls still may be possible to the official emergency number programmed into your phone.

3. Text entry

You can enter text and numbers two ways: traditional text input indicated with , or predictive text input indicated with .

■ Traditional text input

- Press a key once to insert the first letter on the key, twice for the second letter, etc. If you pause briefly, the last letter in the display is accepted and your device awaits the next entry.
- To add a letter that is on the same key as the previous letter, scroll up or down (or wait for the cursor to appear), and enter the next letter.

Tips for writing text

- Press 0 to enter a space and 1 to enter a period (.).
- To move the cursor left or right, scroll left or right.
- To delete the character to the left of the cursor, select *Clear*. To clear the screen, select and hold *Clear*.
- To switch between letters and numbers, press and hold #.
- To enter a number, press and hold the desired key.
- To enter a special character, press and hold *, scroll to the character you want, and select *Insert*. In traditional text entry, you can also enter some punctuation marks and other special characters by pressing 1 repeatedly.
- To switch between upper and lower case or between traditional and predictive text, press # repeatedly, and check the indicator at the top of the display.

■ Predictive text input

Predictive text input allows you to write messages quickly using your keypad and the built-in dictionary. It is much faster than traditional text entry.

Activate or deactivate

To activate predictive text, at any text entry screen, select *Options* > *Predictive text* and the desired language.

To revert to traditional text entry, select *Options* > *Predictive text* > *Prediction off*.

Text entry

- For each letter of the word that you want to spell, press the corresponding key on your keypad only once, even if the letter you want is not the first letter on the key. The device guesses the word you are trying to spell.
- If a displayed word is not correct, press * to see other matches.
- Press 0 to enter a space and begin writing the next word.
- If ? appears after a word, select *Spell*, enter the word using traditional text entry, and select *OK*.
- Press 1 to insert a period into your message.
- Press and hold * to display special characters. Press * again to cycle through all available characters.
- Press # to switch predictive text on or off and to use predictive text in various modes.

4. Messages



If you have subscribed to a messaging service through your wireless provider, you can send and receive messages to compatible devices that also subscribe to a compatible message service.

■ Write messages


1. In the standby mode, select *Menu* > *Messages* > *Create message*, and enter the message.
The number of available characters are shown on the top right of the display.
2. Select *Options* to access other functions.
3. Select *Options* > *Send*, to enter the recipient's phone number, and *Find* to find it in contacts. Select *OK*.

You can also select *Options* > *Sending options* > *Send to many*, *Send to list*, *Send to e-mail*, or *Add callback no.*



Note: When sending messages, your device may display *Message sent*. This is an indication that the message has been sent by your device to the message centre number programmed into your device. This is not an indication that the message has been received at the intended destination. For more details about messaging services, check with your service provider.

Read messages (Inbox)

When you receive text messages in the standby mode, the number of new messages and the new message icon () are shown on the display.

1. Select *Show* to display the messages.
To display the messages later, press *Exit*. When you want to read the message, select *Menu* > *Messages* > *Inbox* and the message you want to read.
2. Scroll up and down to browse through the message.
While reading the message, select *Options* for other functions.

Receive MIDI ring tones

Copyright protections may prevent some images, music (including ring tones) and other content from being copied, modified, transferred or forwarded.

When the device receives a ring tone message, it displays a ring tone alert message. Select *Show* to view the ring tone message, or view the *Inbox* if multiple ring tones are available. Select *Exit* to return to the standby mode and discard the ring tone. To retrieve a waiting ring tone, select *Retrieve*. The message is stored in the *Inbox*.

Select *Options* when viewing the waiting ring tone message for the following functions:

Play—Plays the ring tone for your review.

Save—Saves the ring tone to the *Downloaded tones* folder.

Save & activate—Saves the ring tone to the *Downloaded tones* folder and uses it as the device ring tone.

Delete—Removes the waiting ring tone message without downloading it.

Open tones—Opens the *Downloaded tones* folder for you to view. This option only appears when at least one ring tone is saved.

Details—Displays information about the waiting ring tone, such as the sender's name or number.

Send items and drafts

The *Sent items* folder stores copies of the messages that you have sent. The *Drafts* folder stores messages that you saved while you were writing them. To save a message while writing, select *Options > Save message*.

While viewing a message, select *Options* for other functions.

Distribution lists

If you need to send messages frequently to a fixed group of recipients, you can define a distribution list and use it to send a message. You can define up to 6 distribution lists, each with up to 10 recipients. The device sends a text message to each recipient separately.

Define a distribution list

1. In the standby mode, select *Menu > Messages > Distribution lists*. Highlight an empty list and select *Options > Add list*.

Messages

2. Enter a name for the list, and select *OK*.
3. To add contacts to this list, select *Options > View list > Options > Add contact* and the contact or contacts to be added to the list.
4. When you have added your contacts, select *Back*.

Send a message to a distribution list

1. In the standby mode, select *Menu > Messages > Create message*.
2. Select *Options > Sending options > Send to list*, the desired distribution list, then *OK*.

If a message is not sent to one or more recipients, a report is displayed listing the number of failures, successful sendings, and names not found. Scroll to and select each category.

- Names in the not found group are names in the distribution list that have been deleted from the phone book. Select *Remove* to remove them from the distribution list.
- Select *Resend* to resend the message to the failed recipients.
- Select *View* to view the list of failed recipients.

Screened messages

To view screened messages, in the standby mode, select *Menu > Messages > Screened messages* and the desired message. While viewing the message:

- To delete this message, select *Options > Delete*.
- To delete the number from the screened numbers list, select *Options > Delete from list*. For information on number screening, see Contact list options, 27.
- To view the details of a screened message, select *Options > Details*.

Delete messages

In the standby mode, select *Menu > Messages > Delete messages > All read, Inbox, Drafts, Sent items, or Screened msgs*. Select *OK* at the prompt.

Message counter

1. Select *Menu > Messages > Message counter*.
2. Scroll down to view the numbers of sent and received messages.

3. To reset message counters, select *Clear counters* and the counter that you want to reset.

The *Message counter* submenu is also located under the *Call log* main menu.

Message settings

Select *Menu* > *Messages* > *Message settings* and one of the following:

Templates—View, edit, or delete preset message templates.

Smileys—Use preset smileys, such as :-), in messages. You can also edit and delete the existing smileys and create new smileys.

Callback number—Include a callback number to your messages.

Signatures—Add a signature file to your messages. Select signature text to create or edit your signature. Select *Include sig.* > *On* or *Off* to set automatic signature insertion on or off.

Delivery reports—Request the network to send delivery reports for your sent messages (network service). Select *On* or *Off*.

No. screening—View the screened numbers list, or add a number to the list. See Contact list options, 27.

Voice messages

Voice mailbox is a network feature. When you receive a voice message, your device displays a notification and may beep or vibrate. If you receive more than one message, your device shows the number of messages received.

Save voice mailbox number

1. In the standby mode, select *Menu* > *Messages* > *Voice mailbox* > *Voice mailbox number*.
2. If the box is empty, enter the voice mailbox area code and number, and select *OK*.

Listen to your voice messages

Dial your voice mailbox number using one of these methods: dial the number using the keypad, press and hold 1, or select *Listen* if there is a notification message in the display.

In the standby mode, select *Menu* > *Messages* > *Voice mailbox* > *Listen to voice messages*.

Messages

When you connect and the prerecorded greeting begins, follow the automated instructions to listen to your voice messages.

Clear voice mail icon

You can clear the voice mail notification from the display. Select [Menu](#) > [Messages](#) > [Voice mailbox](#) > [Clear voice mail icon](#) to clear the voice mail icon from the start screen and set the number of voice mail messages to 0.

5. Call log



Call log records the phone numbers of missed, received, and dialed calls, the approximate length of your calls, and the number of sent and received messages. For call log to work properly, the following conditions must be met:

- You must be in a digital network, your service provider must support caller ID, and it must be enabled in the device.
- Your calls cannot be blocked.
- Your device must be on and within the service area or in a compatible network if roaming.

■ Check missed, received, or dialed calls

1. In the standby mode, select *Menu > Call log > Missed calls, Received calls, or Dialed numbers*.
2. Scroll through the list of numbers and highlight your selection.
3. Select *Options* and one of the following:
 - View number*—View the number. (The caller's name and number must be stored in the contact list.)
 - Call*—Dial the number from the call log.
 - Card call*—Dial the sequence for your calling card with the phone number. Select a card from the list. To enter information for a card, see "Call settings," p. 31.
 - Send message*—Send a text message to the person who called you or whom you called.
 - Send number*—Send the phone number as a message to a compatible device.
 - Time of call*—Show the time when the call was connected.
 - Edit*—Edit the number and save it with a name to your phone book.
 - Save*—Enter a name for the number and save both to your phone book.
 - Delete*—Erase the number from the call list.
 - Add to scm. list*—Add number to list of screened numbers.

Call log

■ Delete recent call list

You cannot undo this operation.

Select *Menu* > *Call log* > *Delete recent call lists* > *All*, *Missed*, *Received*, or *Dialed*.

■ Call timers

Your device tracks the approximate amount of time you spend on each call.



Note: The actual invoice for calls and services from your service provider may vary, depending upon network features, rounding off for billing, taxes, and so forth.

Select *Menu* > *Call log* > *Call timers* and one of the following:

Duration of last call—Show the approximate duration of the last call.

Duration of received calls—Show the approximate duration of all received calls.

Duration of dialed calls—Show the approximate duration of all calls dialed.

Duration of all calls—Show the approximate duration of all calls that have been made and received since you reset the timers.

Clear timers—Clear all call timers for the currently selected phone number. (Your device includes separate timers for each number used.) You need to enter your security code to clear timers. This action cannot be undone.



Note: Some timers may be reset during service or software upgrades.

■ Message counter

The *Message counter* menu is also located under *Messages*. See *Messages*, 20.

6. Contacts


You can save names and device numbers in device memory. The device memory can store up to 200 names.

■ Contacts options

To access contacts options, in the standby mode, select *Menu > Contacts*.

■ Search for a name and phone number

1. In the standby mode, select *Menu > Contacts > Find*.
2. Enter the first one or more characters of the name, and scroll to find the name.
3. To call the contact, press the call key.
4. Select *Details > Options* and the action you want to apply to the contact.

If the name or phone number is saved in device internal memory,  is displayed.

■ Contact list options

The following options are available in the *Contacts* menu:

Find—Search for a name in the contacts list.

Add name—Saves names and phone numbers in the phone book.

Delete—Delete names and phone numbers from the phone book one by one, or all at once.

Settings—Modify the contacts settings.

1-touch dialing—Activate the 1-touch dialing feature, and edit the numbers assigned to the 1-touch dialing keys.

No. screening—View the screened numbers list, or add a number to the list. To add a number, select *Menu > Contacts > No. screening > Options > Add number*, enter the number, and select *OK*. To delete a number from this list, select the number and *Options > Delete from list*.

C o n t a c t s

■ Contacts settings

In the standby mode, select *Contacts* > *Settings* and one of the following:

Contacts view—Specify how names and numbers are shown in contacts list.

Memory status—Check how many names and phone numbers are already saved and how many can still be saved in each phone book.

7. Settings



In this menu, you can adjust various phone settings. To reset some menu settings to their default values, select [Restore factory set](#).

■ Tone settings

From this menu, you can adjust the ringing volume, keypad tones, and other tone settings for the currently active profile. See [Personalize a profile](#), 30.

Select [Menu](#) > [Settings](#) > [Tone settings](#) and one of the following:

[Ringing tone](#)—Set the tone that you hear when you receive a call.

[Ringing volume](#)—Set the volume level for the ringing and message alert tones.

[Tone for no caller ID](#)—Assign a specific ring tone to incoming calls for which the caller ID is unknown or unavailable. This ring tone can also be switched on ([Special](#)) or off ([Default](#)).

[Vibrating alert](#)—Set the device to vibrate when you receive a call or a text message. The vibrator does not operate when the device is connected to a charger.

[Message alert tone](#)—Set the tone that you hear when you receive a message.

[Keypad tones](#)—Set the volume for keypad tones.

[Warning tones](#)—Set the device to sound tones (for example, when the battery is almost discharged).

■ Display settings

Select [Menu](#) > [Settings](#) > [Display settings](#) and one of the following:

[Themes](#)—Choose a theme to customize the appearance of your device display screen. Themes control the display background, the wallpaper, and the appearance of the signal and battery bars in the standby mode. Scroll to the desired theme, and select [Options](#) and one of the following:

- [Activate](#) > [For current profile](#) or [For all profiles](#).
- [Preview](#)—View the appearance of the theme.
- [Edit](#)—Select the wallpaper, the menu background, and the signal and battery bars.

Settings

Menu view > *List* or *Grid*—Set the main menu display format.

Power saver clock—Set the device to show the digital clock and all the main display icons as a screen saver. The displayed icons indicate missed calls, keypad lock, silent mode, and received messages.

Backlight time—Select whether the backlights are switched on for 15 seconds (*Normal*), for 30 seconds (*Extended*), or not at all (*Off*). Even if the backlight is set to off, it stays on for 15 seconds when the device is switched on.

Brightness—Scroll left and right to modify the brightness of the display.

■ Profiles

You can customize the device for different events and environments. After you have personalized a profile, you can activate the profile whenever you want to use it.

Activate

In the standby mode, select *Menu* > *Settings* > *Profiles*, the desired profile, then *Activate*. You can also briefly press the end key to scroll through and activate a profile.

Personalize a profile

In the standby mode, select *Menu* > *Settings* > *Profiles*, the desired profile, then *Customize*. Select the option you want and follow the prompts.

You can change the settings of the currently selected profile in this menu or in *Tone settings* (see Tone settings, 29) and *Display settings* (see Display settings, 29).

Set a timed profile

Timed profiles can be used to prevent missed calls. For example, you attend an event that requires your device be set to *Silent* before the event starts, but you forget to return it to *Normal* until long after the event. During this time, you have missed several calls because the ringing tone was silent.

You can set a timed profile to expire after any length of time up to 24 hours. When the profile expires, your device automatically returns to the default profile.

1. In the standby mode, select *Menu* > *Settings* > *Profiles*, the desired profile, then *Timed*

2. Enter the time for the profile to expire, and select *OK*.

The profile you set for expiration is now active and appears in the standby mode along with a small clock icon.

■ Time settings

Select *Menu > Settings > Time settings* and one of the following:

Clock—Set the device to show or hide the current time in the standby mode, adjust the time, and select the 12- or 24-hour time format. If the battery was removed from the device, you may need to set the time and date again.

Date setting—Set the date. If the battery was removed from the device, you may need to set the date again.

Auto-update of date and time—Set the device to update the date and time from the network when you turn the device on (network service). If the clock in your device is 30 seconds or more off the network time, the device will be updated automatically to reflect the network time. Select *On*, *Confirm first*, or *Off*. If you select *Confirm first*, the network requests confirmation before updating the time. You can accept or decline the update.

The automatic update of date and time does not change the time you have set for the alarm clock or the reminder notes. Updating may cause some alarms to expire without sounding.

■ Call settings

Select *Menu > Settings > Call settings* and one of the following:

Fold call handling—Set your device for *Delayed answering*, *Instant answering*, or *Off*.

Automatic redial—Set your device to redial up to 10 times after an unsuccessful call attempt. Select *On* or *Off*.

Call summary—Switch the report of approximate call time *On* or *Off* after calling.

No. screening—Assign number to screen.

Auto. serv. upd.—Automatically update call settings.

Calling card—Set your device to use your calling card. To enter the calling card information, select *Menu > Settings > Call settings > Calling card > Options > Add new* or *Edit* select your card sequence type, and enter the information. Select *OK* to confirm. Select *Card name*, enter the card name, and select *OK*. For information on making a call, see "Calling cards," p.32.

Settings

Int. dial. prefix—Stores an international dialing prefix (this feature is carrier dependent). Enter the international dialing prefix, and select *OK*. To use the prefix, in the standby mode, press * twice to use +, and enter the phone number.

In-call timer—Switch the display of call time *On* or *Off* while calling.

Calling cards

If you use a calling card for long distance calls, save the calling card number in your phone. The phone can store up to four calling cards. Contact your calling card company for more information.

Save information

1. In the standby mode, select *Menu* > *Settings* > *Call settings* > *Calling card*.
2. Enter your lock code, and select *OK*. See "Security settings," p. 33.
3. Scroll to one of the four card memory locations, and select *Options* > *Edit* > *Dialing sequence*.
4. Select one of the following sequence types:
 - Access no. + phone no. + card no.*—Dial the 1-800 access number, phone number, then enter the card number (plus PIN if required).
 - Access no. + card no. + phone no.*—Dial the 1-800 access number, card number (plus PIN if required), then enter the phone number.
 - Prefix + phone no. + card no.*—Dial the prefix (numbers that must precede the phone number) and phone number, then enter the card number (plus PIN if required).
5. Enter the required information (access number or prefix and card number), and select *OK* to confirm your entries.
6. Select *Card name* > enter the card name > *OK*.

Make calls

After you have saved your calling card information in your phone, make a call with your calling card.

1. In the standby mode, select *Menu* > *Settings* > *Call settings* > *Calling card*.
2. Enter your security code, and select *OK*. See "Security settings," p. 33.
3. Scroll to the calling card of your choice, select *Options* > *Select* > *OK*.

4. Press the end key to return to the standby mode and enter the phone number, including any prefix (such as 0 or 1) that your calling card may require when you make a calling card call. See your calling card for instructions.
5. Press and hold the call key for a few seconds until *Card call* is displayed.
6. When you hear the tone or system message, select *OK*.

■ Phone settings

Select *Menu* > *Settings* > *Phone settings* and one of the following:

Language—Select a language for the display texts.

Automatic keyguard—Select *On* when *Set delay* appears, enter the time, and select *OK*. You can set the time from 10 seconds to 60 minutes. To deactivate the automatic keyguard, select *Off*. It may be possible to dial the emergency number programmed into your device when the keyguard is on.

Touch tones—Select the tones that sound when you press the keys on your keypad: *Touch tone length* or *Manual touch tones*.

Start-up tone—Switch the tone *On* or *Off* that sounds when the device is switched on.

Welcome note—Enter a message that will be shown briefly on the display when the device is switched on.

Banner—Set the device to display the operator logo (*Default*) or your own message (*Customize*) when the device is in the idle state. This is a carrier-dependent feature.

■ Security settings

Your device uses codes to help prevent unauthorized use:

The security code protects your phone from unauthorized outgoing calls or unauthorized access to information stored in the device. The preset code is 12345.

When security features that restrict calls are in use (such as call restriction), calls still may be possible to the official emergency number programmed into your device.

Select *Menu* > *Settings* > *Security settings* and one of the following:

Call restrictions—Lets you restrict incoming and outgoing calls.

Security level—Not sure what this does. TBD

Settings

Phone lock—Protects your device from unauthorized calls or unauthorized access to information. To select **Phone lock**, enter the lock code, and press **OK**. Select **Off** to immediately switch the phone lock off, **Lock now** to immediately lock the device, or **On power-up** to lock the device the next time you turn it on. When the phone is locked, calls still may be possible to the official emergency number programmed into your phone.

Allowed number when phone is locked—Lets you dial specific numbers when the device is locked. To access this feature, enter the lock code, and press **OK**. Select **Allowed number when phone is locked** > **Assign**, enter the desired number, and press **OK**.

Change lock code—Lets you change the lock code. To select **Change lock code**, enter the lock code, and press **OK**. Enter your new lock code (4 characters), and press **OK**. Enter the new lock code again for verification, and press **OK**.

Voice privacy—Lets you protect the privacy of your current phone conversation from other callers placing phone calls on your network. Select **On** or **Off**.

■ Network settings

You can set your device to roam or search for another network when you are not in your home area. Your device is set to search for the most cost-effective network. These options are carrier dependent and may differ from those described.

In the standby mode, select **Menu** > **Settings** > **Network settings** > **Network**. Select **Home only** to make and receive calls in your home area only, or **Automatic** to search for service in another digital network. The roaming rate applies when not in the home service area. Press **OK**, if necessary, to confirm the activation.

Network feature settings

Store a feature code

Feature codes can be set for **Call forwarding**, **Call waiting**, and **Send my caller ID with next call** network services.

1. In the standby mode, select **Menu** > **Settings** > **Network settings** > **Network feature setting** and an option.
2. Select an option within that service. For example, **Call forwarding** > **Forward all voice calls** > **Activate**.

3. At the *Feature code*: prompt, enter the appropriate feature code (5 characters or less).

You can enter other feature codes, or press the end key to return to the standby mode. When you enter a network feature code, the feature is visible in the *Call settings* menu.

Call forward

Call forward tells your network to redirect incoming calls to another number. Call forward is a network service and may not work the same in all networks, so contact your wireless provider for availability.

1. In the standby mode, select *Menu > Settings > Call settings > Call settings* and one of the following options:
 - Call forwarding*—Diverts all calls to the number you specify.
 - Forward if busy*—Diverts incoming calls when you are in a call.
 - Forward if not answered*—Divert incoming calls to another number if you are unable to answer. You can set a delay before forwarding takes place.
 - Cancel all call forwarding*—Cancel any call forwarding options you have set. This option does not require that you perform step 2.
2. Select *Activate > OK* to enter the number to which calls are forwarded or *Cancel*.

Call waiting

If your wireless provider supports this feature, call waiting notifies you of an incoming call even while you are in a call. You can then accept, decline, or ignore the incoming call.

1. In the standby mode, select *Menu > Settings > Call settings > Call waiting > Activate, Cancel, or Cancel for next call* and enter a number at the prompt.
2. During a call, select *Answer*, or press the call key to answer the waiting call, and put the first call on hold.
3. Press the end key to end the active call and the held call.

Send my caller ID

If your wireless service provider supports this feature, you can prevent your number from appearing on the receiving party caller ID.

In the standby mode, select *Menu > Settings > Call settings > Send my caller ID with next call* and the number you are calling at the prompt. This feature allows

Settings

you to display your number on the receiving party's caller ID for the next call only.

Own number selection

To view your own phone number, in the standby mode, select *Menu* > *Settings* > *Network settings* > *My number selection*.

■ **My menu settings**

When you press the right selection key in the standby mode, the device displays a list of shortcuts to various functions. To define the functions to be shown in this list, select *Menu* > *Settings* > *R. navigation key settings* and one of the following:

Select options—Scroll to each function that you want as a shortcut, and select *Mark*. The functions are listed in the shortcut list in the order you select them. When you have selected all desired functions, select *Back* > *Yes*. To exit the menu without saving, select *Back* twice.

Organize—Scroll to the function you want to move. Select *Move* and the moving option that you want. When you are finished organizing functions, select *Back* > *Yes* to save the changes. To exit the menu without saving, select *Back* twice.

■ **Restore factory settings**

You can reset some of the menu settings to their original values.

1. In the standby mode, select *Menu* > *Settings* > *Restore factory set*.
2. Enter the lock code (the default lock code is 1234), and select *OK*.

The names and phone numbers saved in the phone book are not deleted.

8. Tools and games

■ Alarm clock



You can set the alarm to sound at the time you want just once or repeatedly (for example, every working day). Select *Menu > Alarm clock* and one of the following options:

Alarm time—Enter the time for the alarm, and select *OK*.

Alarm tone—Choose the tone for the alarm.

Repeat alarm—Select *Alarm once* to set the alarm to sound only once, or *Repeat alarm* to select the days on which you want the alarm to sound.

When the alarm sounds, press the end key to stop it. If you select *Snooze*, the alarm stops and rings again in 10 minutes.

If the alarm time is reached while the device is switched off, the device switches itself on and starts sounding the alarm tone. If you select *Stop*, the device asks whether you want to activate the device for calls. Select *No* to switch off the device, or select *Yes* to make and receive calls. Do not select *Yes* when wireless device use may cause interference or danger.

■ Radio

Listen to music at a moderate level. Continuous exposure to high volume may damage your hearing. Do not hold the device near your ear when the loudspeaker is in use, because the volume may be extremely loud.

Your device has a built-in FM radio that you can play through a headset. With your headset connected, select *Menu > Radio*. If you are playing the radio for the first time, the radio selects the default channel, 87.50 MHz; otherwise, the radio plays the last channel you selected.

To tune to a channel using automatic tuning, select *Options > Auto-tuning*, and scroll up to activate it. To manually tune to a specific channel, select *Options > Manual tuning*, and scroll up or down to the desired channel. To switch off the radio, select *Options > Turn off*, or press the end key.

Tools and games

■ Reminders



You can save short text notes with an alarm. The alarm is activated when the set date and time is reached.

Select *Menu > Reminders > Add new, View all, Calendar, Delete, or Alarm tone.*

When the reminder time is reached, to stop the alarm, press the end key. If you select *Postp.*, the alarm sounds again in 10 minutes.

While viewing a reminder, you can select *Options > Delete or Edit.*

■ Games



The device has several games. Each game is provided with a brief help text.

To play a game, select *Menu > Games* and the desired game. Select *Instructions* for an explanation of how to play the game and how to use the other options.

To set the game settings, select *Games > Settings > Game sounds or Shakes.*

When *Warning tones* is off, there may be no sound even if *Game sounds* is on.

When *Vibrating alert* is off, the device does not vibrate even if *Shakes* is on.

9. Extras

■ Calculator

The device is provided with a calculator that can also be used for approximate currency conversions.

Select *Menu* > *Extras* > *Calculator*.



Note: This calculator has limited accuracy and is designed for simple calculations.

Make a calculation

1. Enter the first number in the calculation.

Press a number key (1–9) to insert a digit. Press # to insert a decimal point.

Select *Clear* to delete the last digit. To change the sign, press *.

Scroll up or down to select between +, -, x, and /.

2. Enter the second number in your calculation, and select *Equals*.

Select *Clear* to clear the display for a new calculation.

■ Converter

You can convert values between different units of measure.



Note: This converter has limited accuracy and is designed for simple calculations.

To perform a conversion, in the standby mode, select *Menu* > *Extras* > *Converter* > *Temperature, Weight, Length, Area, Volume, Currency, or My conversions* and the unit for conversion. Enter a value to convert. To reverse the conversion, scroll up or down.

Select *Menu* > *Extras* > *Converter* > *Last 5 conversions* to display the last five conversions performed.

To enter your own conversion, select *Menu* > *Extras* > *Converter* > *My conversions*. Select an empty conversion combination and follow the prompts to enter the units and factor value.

Extras

Currency converter

To save the exchange rate, select *Menu > Extras > Converter > Currency > Convert > In foreign*; or *In domestic*. Enter the value (press # for a decimal point), and select *OK*.

To make the conversion, enter the currency amount to be converted, and select *Currency > To home* or *To foreign*.

■ Spreadsheet

The spreadsheet lets you calculate your expenses on a daily or monthly basis. The daily spreadsheet can total expenses for up to a month, and the monthly spreadsheet can total expenses for up to a year.

1. Select *Menu > Extras > Spreadsheet > Daily account* or *Monthly account*, and scroll to highlight various cells in the spreadsheet.
2. With a cell highlighted, select *Options* and one of the following:
 - Edit*—Edit an expense value, an expense category name, or the spreadsheet name (depending on where the cursor is when you select *Options*).
 - Add row* or *Delete row*—Add a new expense category or delete an existing expense category.
 - Delete all data*—Erase all the data in the current view.
 - Set row value*—Insert the same value for each day or month on the selected expense category.
 - Save*—Save the spreadsheet. If you modify a spreadsheet and then try to exit without saving, the device prompts you to save.
 - View details*—View the details of the selected cell. To view details you can also press and hold #.
 - Synchronize*—Synchronize the values from a daily spreadsheet to the corresponding month in a monthly spreadsheet. This option is available only under *Monthly account*.

■ Calendar

To view a calendar for the current month, scroll right, or select *Menu > Extras > Calendar*.

Scroll to go to another date. Select *OK* or *Back* to exit the calendar.

 
■ Countdown timer

Timer accuracy is not the same as that of a professional instrument. therefore, Nokia advises against its use for official competitions or any other event in which a high-precision device would be required to establish exact times.

You can set an alarm to sound after a period of lapsed time.

1. Select *Menu* > *Extras* > *Countd. tim.*
2. Enter the countdown time (hh:mm), and select *OK*.
3. Enter a note for the countdown, if desired, and select *OK*.

While the timer is running, you can select *Menu* > *Extras* > *Countd. tim.* > *Change time* or *Stop timer*.

When the timer is running,  is shown in the standby mode. When the alarm time is reached, a tone sounds, the display flashes, and the alarm note appears. Press any key to stop the alarm.

■ Stopwatch

The stopwatch can be used for time measurement, such as in sports.

Using the stopwatch or allowing it to run in the background when using other features increases the demand on battery power and reduces the battery life.

1. Select *Menu* > *Extras* > *Stopwatch* > *Start* to start timing.
2. Select *Stop* to stop timing.
3. When the timing is stopped, select *Options* > *Start*, *Reset*, or *Exit*.
If you select *Start*, timing continues from the previous stop time. *Reset* stops the current timing and sets the time to zero.

To set the timing to continue in the background, select and hold *Back*.

While the time is running,  flashes in the standby mode.

Using the stopwatch or allowing it to run in the background when using other features increases the demand on battery power and reduces the battery life.

10. Enhancements

Check the model number of any charger before use with this device. This device is intended for use when supplied with power from charger ACP-7, or other compatible charger.



Warning: Use only batteries, chargers, and enhancements approved by Nokia for use with this particular model. The use of any other types may invalidate any approval or warranty, and may be dangerous.

For availability of approved enhancements, please check with your dealer. When you disconnect the power cord of any enhancement, grasp and pull the plug, not the cord. See also Insert the battery, 13 and Charge the battery, 14.

A few practical rules about accessories and enhancements.

- Keep all accessories and enhancements out of the reach of small children.
- When you disconnect the power cord of any accessory or enhancement, grasp and pull the plug, not the cord.
- Check regularly that enhancements installed in a vehicle are mounted and are operating properly.
- Installation of any complex car enhancements must be made by qualified personnel only.

Power

- Standard 970 mAh Li-Ion Battery (BL-5C)
- Standard Travel Charger (ACP-7)
- Travel Charger (ACP-12)
- Charger (AC-1)

Audio

- Headset (HS-9)

Car

- Headrest handsfree (BHF-4)

11. Battery information

This section provides information about batteries, chargers, safety guidelines and technical information. Be aware that the information in this section is subject to change as batteries and chargers change.

■ Charging and discharging batteries

Your device is powered by a rechargeable battery. The full performance of a new battery is achieved only after two or three complete charge and discharge cycles. The battery can be charged and discharged hundreds of times but it will eventually wear out. When the talk and standby times are noticeably shorter than normal, replace the battery. Use only Nokia approved batteries, and recharge your battery only with Nokia approved chargers designated for this device.

If a replacement battery is being used for the first time or if the battery has not been used for a prolonged period, it may be necessary to connect the charger then disconnect and reconnect it to begin charging the battery.

Unplug the charger from the electrical plug and the device when not in use. Do not leave a fully charged battery connected to a charger, since overcharging may shorten its lifetime. If left unused, a fully charged battery will lose its charge over time.

Use the battery only for its intended purpose. Never use any charger or battery that is damaged.

Do not short-circuit the battery. Accidental short-circuiting can occur when a metallic object such as a coin, clip, or pen causes direct connection of the positive (+) and negative (-) terminals of the battery. (These look like metal strips on the battery.) This might happen, for example, when you carry a spare battery in your pocket or purse. Short-circuiting the terminals may damage the battery or the connecting object.

Leaving the battery in hot or cold places, such as in a closed car in summer or winter conditions, will reduce the capacity and lifetime of the battery and its ability to charge. Always try to keep the battery between 59°F and 77°F (15°C and 25°C). A device with a hot or cold battery may not work temporarily, even when the battery is fully charged. Battery performance is particularly limited in temperatures well below freezing.

Battery information

Do not dispose of batteries in a fire, as they may explode. Batteries may also explode if damaged. Do not provoke short circuits. Do not dispose as household waste. Dispose of batteries according to local regulations. Please recycle when possible.

■ Nokia battery authentication guidelines

Always use original Nokia batteries for your safety. To check that you are getting an original Nokia battery, purchase it from an authorized Nokia dealer, look for the Nokia Original Enhancements logo on the packaging, and inspect the hologram label using the following steps.

 
Successful completion of the following steps is not a total assurance of the authenticity of the battery. If you have any reason to believe that your battery is not an authentic original Nokia battery, refrain from using it and take it to the nearest authorized Nokia service point or dealer for assistance. Your authorized Nokia service point or dealer will inspect the battery for authenticity.

If authenticity cannot be verified, return the battery to the place of purchase.

Authenticate hologram




1. When looking at the hologram label, you should see the Nokia connecting hands symbol from one angle and the Nokia Original Enhancements logo when looking from another angle.

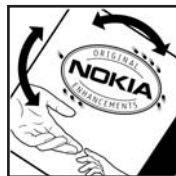

2. When you angle the hologram to the left, right, down, and up, you should see 1, 2, 3, and 4 dots on each side, respectively.

 Battery information

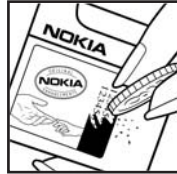

3. Scratch the side of the label to reveal a 20-digit code, for example, 12345678919876543210. Turn the battery so that the numbers are facing upwards. The 20-digit code reads starting from the number at the top row followed by the bottom row.
4. Confirm that the 20-digit code is valid by following the instructions at www.nokia.com/batterycheck.

To authenticate the code by text message, enter the 20-digit code, for example 12345678919876543210, and send to +61 427151515.

National and international operator charges will apply.

You should receive a message indicating whether the code can be authenticated.

What if your battery is not authentic?

If you cannot confirm that your Nokia battery with the hologram label is an authentic Nokia battery, please do not use the battery. Take it to the nearest authorized Nokia service point or dealer for assistance. The use of a battery that is not approved by the manufacturer may be dangerous and may result in poor performance and damage to your device and its enhancements. It may also invalidate any approval or warranty applying to the device.

To find out more about original Nokia batteries visit www.nokia.com/battery.

■ Charging times

The following charging times are approximate with the BL-5C 970 mAh Li-Ion battery:

Travel Charger (ACP-12): up to 1 hour 45 minutes

Standard Travel Charger (ACP-7): up to 3 hours 45 minutes

■ Talk and standby times

Operation times are estimates only and depend on signal strength, network conditions, user habits (device use, features used, and number of idle hand-off), battery age and condition (including charging habits), temperatures to which the battery is exposed, and many other factors.

Talk time: XXX up to 3.5 hours

Standby time: XXX up to 7.5 days

Care and maintenance

Your device is a product of superior design and craftsmanship and should be treated with care. The suggestions below will help you protect your warranty coverage.

- Keep the device and all of its parts and accessories out of the reach of small children.
- Keep the device dry. Precipitation, humidity and all types of liquids or moisture can contain minerals that will corrode electronic circuits. If your device does get wet, remove the battery and allow the device to dry completely before replacing it.
- Do not use or store the device in dusty, dirty areas. Its moving parts and electronic components can be damaged.
- Do not store the device in hot areas. High temperatures can shorten the life of electronic devices, damage batteries, and warp or melt certain plastics.
- Do not store the device in cold areas. When the device returns to its normal temperature, moisture can form inside the device and damage electronic circuit boards.
- Do not attempt to open the device other than as instructed in this guide.
- Do not drop, knock, or shake the device. Rough handling can break internal circuit boards and fine mechanics.
- Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the device.
- Do not paint the device. Paint can clog the moving parts and prevent proper operation.
- Use only the supplied or an approved replacement antenna. Unauthorized antennas, modifications, or attachments could damage the device and may violate regulations governing radio devices.
- Use chargers indoors.
- Always create a backup of data you want to keep, such as contacts and calendar notes, before sending your device to a service facility.

All of the above suggestions apply equally to your device, battery, charger, or any enhancement. If any device is not working properly, take it to the nearest authorized service facility for service.

Additional safety information

■ Operating environment

Remember to follow any special regulations in force in any area and always switch off your device when its use is prohibited or when it may cause interference or danger. Use the device only in its normal operating positions. This device meets RF exposure guidelines when used either in the normal use position against the ear or when positioned at least 1.5 centimeters (5/8 inch) away from the body. When a carry case, belt clip, or holder is used for body-worn operation, it should not contain metal and should position the device at least 1.5 centimeters (5/8 inch) away from your body.

In order to transmit data files or messages, this device requires a quality connection to the network. In some cases, transmission of data files or messages may be delayed until such a connection is available. Ensure the above separation distance instructions are followed until the transmission is completed.

Your device and its enhancements may contain small parts. Keep them out of the reach of small children.

■ Medical devices

Operation of any radio transmitting equipment, including wireless phones, may interfere with the functionality of inadequately protected medical phones. Consult a physician or the manufacturer of the medical device to determine if they are adequately shielded from external RF energy or if you have any questions. Switch off your phone in health care facilities when any regulations posted in these areas instruct you to do so. Hospitals or health care facilities may be using equipment that could be sensitive to external RF energy.

Pacemakers

Pacemaker manufacturers recommend that a minimum separation of 15.3 centimeters (6 inches) be maintained between a wireless phone and a pacemaker to avoid potential interference with the pacemaker. These recommendations are consistent with the independent research by and recommendations of Wireless Technology Research. To minimise the potential for interference, persons with pacemakers should do the following:

- Always keep the phone more than 15.3 centimeters (6 inches) from the pacemaker
- Not carry the phone in a breast pocket

Additional safety information

- Hold the phone to the ear opposite the pacemaker to minimise the potential for interference

If you suspect interference, switch off your device, and move the device away.

Hearing aids

Some digital wireless phones may interfere with some hearing aids. If interference occurs, consult your service provider.

■ Vehicles

RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles such as electronic fuel injection systems, electronic antiskid (antilock) braking systems, electronic speed control systems, air bag systems. For more information, check with the manufacturer or its representative of your vehicle or any equipment that has been added.

Only qualified personnel should service the phone, or install the phone in a vehicle. Faulty installation or service may be dangerous and may invalidate any warranty that may apply to the phone. Check regularly that all wireless phone equipment in your vehicle is mounted and operating properly. Do not store or carry flammable liquids, gases, or explosive materials in the same compartment as the phone, its parts, or enhancements. For vehicles equipped with an air bag, remember that an air bag inflates with great force. Do not place objects, including installed or portable wireless equipment in the area over the air bag or in the air bag deployment area. If in-vehicle wireless equipment is improperly installed and the air bag inflates, serious injury could result.

Using your device while flying in aircraft is prohibited. Switch off your device before boarding an aircraft. The use of wireless teledevices in an aircraft may be dangerous to the operation of the aircraft, disrupt the wireless telephone network, and may be illegal.

■ Potentially explosive environments

Switch off your phone when in any area with a potentially explosive atmosphere and obey all signs and instructions. Potentially explosive atmospheres include areas where you would normally be advised to turn off your vehicle engine. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death. Switch off the phone at refueling points such as near gas pumps at service stations. Observe restrictions on the use of radio equipment in fuel depots, storage, and distribution areas, chemical plants or where blasting operations are in progress. Areas with a potentially explosive atmosphere are often but not always clearly marked. They include below deck on boats, chemical

Additional safety information

transfer or storage facilities, vehicles using liquefied petroleum gas (such as propane or butane), and areas where the air contains chemicals or particles such as grain, dust or metal powders.

■ Emergency calls

Important: Wireless phones, including this phone, operate using radio signals, wireless networks, landline networks, and user-programmed functions. Because of this, connections in all conditions cannot be guaranteed. You should never rely solely on any wireless phone for essential communications like medical emergencies.

To make an emergency call, do the following:

1. If the phone is not on, switch it on. Check for adequate signal strength.
2. Press the end key as many times as needed to clear the display and ready the phone for calls.
3. Enter the official emergency number for your present location. Emergency numbers vary by location.
4. Press the call key.

If certain features are in use, you may first need to turn those features off before you can make an emergency call. Consult this guide or your service provider for more information.

When making an emergency call, give all the necessary information as accurately as possible. Your wireless device may be the only means of communication at the scene of an accident. Do not end the call until given permission to do so.

■ Certification Information (SAR)

THIS NOKIA RM-97 DEVICE MEETS THE GOVERNMENT'S REQUIREMENTS FOR EXPOSURE TO RADIO WAVES.

Your mobile device is a radio transmitter and receiver. It is designed not to exceed the limits for exposure to radio waves recommended by international guidelines. These guidelines were developed by the independent scientific organization ICNIRP and include safety margins designed to assure the protection of all persons, regardless of age and health.

The exposure guidelines for mobile devices employ a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit stated in the ICNIRP guidelines is 2.0 watts/kilogram (W/kg) averaged over 10 grams of tissue. Tests for SAR are conducted using standard operating positions with the device transmitting at its highest certified power level in all tested frequency bands. The actual SAR level of an operating device can be below the maximum value

Additional safety information

because the device is designed to use only the power required to reach the network. That amount changes depending on a number of factors such as how close you are to a network base station. The highest SAR value under the ICNIRP guidelines for use of the device at the ear is 0.78 W/kg.

Use of device accessories and enhancements may result in different SAR values. SAR values may vary depending on national reporting and testing requirements and the network band. Additional SAR information may be provided under product information at www.nokia.com.

Your mobile device is also designed to meet the requirements for exposure to radio waves established by the Federal Communications Commission (USA) and Industry Canada. These requirements set a SAR limit of 1.6 W/kg averaged over one gram of tissue. The highest SAR value reported under this standard during product certification for use at the ear is 1.24 W/kg and when properly worn on the body is 1.13 W/kg. Information about this device model can be found at <http://www.fcc.gov/oet/fccid> by searching the equipment authorization system using FCC ID QMNRM-97.

■ Technical information

Dimensions:

- Length: 80 mm (3.15 inches)
- Width: 42 mm (1.65 inches)
- Thickness: 22 mm (0.87 inch)

Weight: 80 g with BL-5C

Wireless network: 800 mHz

Volume: 72 cc

Frequency range (Tx): 824.70–848.37 MHz

Frequency range (Rx): 869.70–893.37 MHz

Index

Numerics 1–touch dialing 18
 Access codes 37
 accessory settings 36
 activate predictive text 21
 alarm clock 40
 antenna 16
 auto-update 34
 battery authentication 47
 charging 17
 charging times 48
 inserting 16
 removing 16
 talk and standby times 48
 calculator 42
 calendar 43
 call duration 31
 call forward 38
 call log 30
 Call settings 34
 calling cards 35
 calls answering 19
 in-call options 19
 making 18
 care and maintenance 49
 certification information (SAR) 52
 charger connecting 17
 times 48
 contact list options 23
 contacts 23
 contacts list search 23
 settings 24
 converter 44
 countdown timer 43
 currency converter 42
 customer care 10
 Display settings 32
 distribution lists 26
 drafts 26
 duration of calls 31
 Emergency calls 52
 enhancement settings 36
 ESN 10
 exchange rate 42
 FCC information 52
 feature codes 38
 FM radio 40
 Games 41
 Help 10
 IMEI 10
 Keyguard 20
 Loudspeaker 19
 Message counter 31
 messages distribution lists 26
 drafts 26
 read 25
 screened 27
 sent items 26
 voice messages 28
 write text messages 25
 MIDI ring tones 26
 model number 10
 month view 43
 my menu settings 39
 Network Services 9
 number screening 20
 off switch 18
 on switch 18
 Phone settings 36
 phone type 10
 predictive text 21
 predictive text activation 21
 profiles 33
 Quick keys 13
 Radio 40
 read message 25
 restore factory settings 39
 ring tone, receiving 26
 Safety 7
 important safety information 50
 screened messages 27
 screening calls 20
 scrolling 14
 search contacts 23
 security settings 37
 sent items 26
 settings 32
 call 34
 display 32
 my menu 39
 profiles 33
 tone 32
 shortcuts 15
 spreadsheet 42
 standby time 48
 stopwatch 44
 switch phone off 18
 switch phone on 18
 Talk and standby times 48
 talk time 48
 technical information 53
 text entry 21
 text input predictive text 21
 traditional 21
 text messages 25
 text writing tips 21
 time settings 34
 timed profiles 33
 tone settings 32
 View missed calls 30
 voice mail 20
 voice messages 28
 voicemail 28
 volume adjusting 19
 using the loudspeaker 19
 Warranty 10
 write messages 25
 writing tips 21