 


## Nokia Bluetooth Headset BH-301

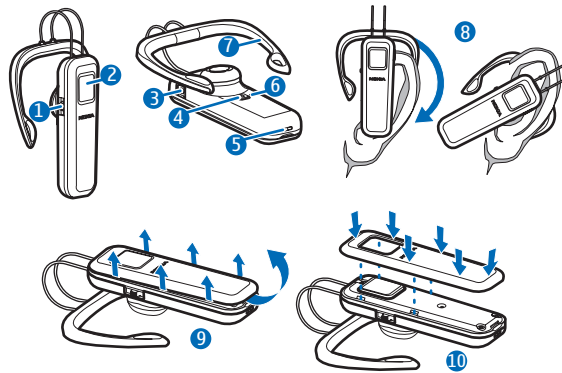

9251888/1

ENGLISH

DECLARATION OF CONFORMITY

Hereby, NOKIA CORPORATION declares that this HS-51W product is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC. A copy of the Declaration of Conformity can be found at [http://www.nokia.com/phones/declaration\\_of\\_conformity/](http://www.nokia.com/phones/declaration_of_conformity/).

**CE 0434**



The crossed-out wheeled bin means that within the European Union the product must be taken to separate collection at the product end-of-life. Do not dispose of these products as unsorted municipal waste. For more information, see product Eco-Declaration or country specific information at [www.nokia.com](http://www.nokia.com).

© 2006 Nokia. All rights reserved.

Reproduction, transfer, distribution, or storage of part or all of the contents in this document in any form without the prior written permission of Nokia is prohibited.

Nokia and Nokia Connecting People are registered trademarks of Nokia Corporation. Other product and company names mentioned herein may be trademarks or tradenames of their respective owners. Bluetooth is a registered trademark of Bluetooth SIG, Inc.

Nokia operates a policy of ongoing development. Nokia reserves the right to make changes and improvements to any of the products described in this document without prior notice.

To the maximum extent permitted by applicable law, under no circumstances shall Nokia or any of its licensors be responsible for any loss of data or income or any special, incidental, consequential or indirect damages howsoever caused.

The contents of this document are provided "as is". Except as required by applicable law, no warranties of any kind, either express or implied, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose, are made in relation to the accuracy, reliability or contents of this document. Nokia reserves



## ENGLISH



the right to revise this document or withdraw it at any time without prior notice. The availability of particular products may vary by region. Please check with your Nokia dealer for details. Unauthorized changes or modifications to this device may void the user's authority to operate the equipment.

**Export Controls**  
This device may contain commodities, technology or software subject to export laws and regulations from the US and other countries. Diversion contrary to law is prohibited.

## Introduction

 
 
 
The Nokia Bluetooth Headset BH-301 allows you to make and receive calls while on the move. You can use the headset with compatible phones that support Bluetooth wireless technology.

Read this user guide carefully before using the headset. Also read the user guide for your phone, which provides important safety and maintenance information. Keep all accessories and enhancements out of reach of small children.

### Bluetooth wireless technology

Bluetooth wireless technology allows you to connect compatible devices without cables. A Bluetooth connection does not require that the phone and the headset be in line of sight, but both devices should be within 10 meters (30 feet) of each other. Connections may be subject to interference from obstructions, such as walls, or other electronic devices.

The headset complies with the Bluetooth Specification 2.0 + EDR





## ENGLISH



that supports the Headset Profile 1.1 and Hands-Free Profile 1.5. Check with the manufacturers of other devices to determine their compatibility with this headset.

There may be restrictions on using Bluetooth technology in some locations. Check with your local authorities or service provider.

### Get started

The headset contains the following parts shown on the title page: volume key (1), answer/end key (2), charger connector (3), power key (4), microphone (5), indicator light (6), and earhook (7).

Before using the headset, you must charge the battery and pair the headset with a compatible phone.

Parts of the headset are magnetic. Metallic materials may be attracted to the headset. Do not place credit cards or other magnetic storage media near the headset, because information stored on them may be erased.

### Chargers

 
 
 
Check the model number of any charger before using it with this headset. The headset is intended for use with the AC-3, AC-4, and DC-4 chargers.



**Warning:** Use only chargers approved by Nokia for use with this particular headset.

The use of any other types may invalidate any approval or warranty and may be dangerous.

For availability of approved enhancements, please check with your dealer. When you disconnect the power cord of any enhancement, grasp and pull the plug, not the cord.



**ENGLISH**

**Charge the battery**

The headset has an internal, nonremovable, rechargeable battery. Do not attempt to remove the battery from the headset, as you may damage the headset.

1. Connect the charger to a wall outlet.
2. Connect the charger cable to the charger connector on the headset. The red indicator light is on while charging. It may take a while before charging starts. If charging does not start, connect the charger again and retry. Charging the battery fully may take up to 2 hours.
3. When the battery is fully charged, the red indicator light turns off. Disconnect the charger from the headset and the wall outlet.

The fully charged battery has power for up to 7 hours of talk-time or up to

200 hours of standby time. However, the talk and standby times may vary when the headset is used with different mobile phones or other compatible Bluetooth devices, usage settings, usage styles, and environments.

When battery power is low, the headset sounds a series of beeps and the red indicator light starts to flash.

**Switch the headset on or off**

To switch on, press and hold the power key until the green indicator light starts to flash.

To switch off, press and hold the power key until the red indicator light is displayed briefly.

**Pair the headset**

1. Switch on your phone and the headset.



**ENGLISH**



2. Activate the Bluetooth feature on the phone, and set the phone to search for Bluetooth devices.
3. Select the headset from the list of found devices.
4. Enter the passcode **0000** to pair and connect the headset to your phone. In some phones you may need to make the connection separately after pairing. You only need to pair the headset with your phone once.

phone menu where you can view the currently paired Bluetooth devices. To disconnect the headset from your phone, switch off the headset or disconnect it in the Bluetooth menu of your phone.

To connect the headset to your phone, make the connection in the Bluetooth menu of your phone. To set your phone to connect with the headset automatically when the headset is switched on, change your paired device settings in the Bluetooth menu.

If the pairing is successful, the headset beeps and appears in the

**Basic use**

**Wear the headset**

Slide the headset around your ear, and point it toward your mouth (8).

**Change the cover**

To remove the current cover, lift it from the headset starting from the microphone end (9). To attach a new cover, carefully press it into place (10).



ENGLISH

**Call handling**

To make a call, use your phone in the normal way when the headset is connected to your phone.

If your phone supports last number redialing with the headset, press the answer/end key twice briefly while no call is in progress.

To answer or end a call, press the answer/end key. To reject the call, briefly press the answer/end key twice.

To switch the call between the headset and a compatible Nokia

phone, press and hold the answer/end key.

To adjust the headset volume, press the volume key up or down.

**Clear the settings or reset the headset**

To clear the settings, press and hold the power key and the answer/end key over 10 seconds.

To reset the headset if it does not function properly, although it is charged, plug the headset into a charger, and briefly press the power key and the answer/end key at the same time.

**Battery information**

Your headset is powered by a rechargeable battery. The battery can be charged and discharged hundreds of times, but it will eventually wear out. Recharge your battery only with Nokia

approved chargers designated for this headset.

Unplug the charger from the electrical plug and the headset when not in use. Do not leave a fully charged battery

## ENGLISH

connected to a charger, since overcharging may shorten its lifetime. If left unused, a fully charged battery will lose its charge over time.

Never use any charger that is damaged.

Leaving the headset in hot or cold places, such as in a closed car in summer or winter conditions, will reduce the capacity and lifetime of the battery.

Always try to keep the battery between 15°C and 25°C (59°F and 77°F). A headset

with a hot or cold battery may not work temporarily, even when the battery is fully charged. Battery performance is particularly limited in temperatures well below freezing.

Do not dispose of batteries in a fire as they may explode. Batteries may also explode if damaged. Dispose of batteries according to local regulations. Please recycle when possible. Do not dispose of household waste.

## Care and maintenance

Your device is a product of superior design and craftsmanship and should be treated with care. The following suggestions will help you protect your warranty coverage.

- Keep the device dry. Precipitation, humidity, and all types of liquids or moisture can contain minerals that will corrode electronic circuits. If your device does get wet, allow it to dry completely.

- Do not use or store the device in dusty, dirty areas. Its moving parts and electronic components can be damaged.
- Do not store the device in hot areas. High temperatures can shorten the life of electronic devices, damage batteries, and warp or melt certain plastics.





ENGLISH



- Do not store the device in cold areas. When the device returns to its normal temperature, moisture can form inside the device and damage electronic circuit boards.
- Do not attempt to open the device.
- Do not drop, knock, or shake the device. Rough handling can break internal circuit boards and fine mechanics.
- Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the device.
- Do not paint the device. Paint can clog the moving parts and prevent proper operation.

All of the above suggestions apply equally to your device, battery, charger, or any enhancement. If any device is not working properly, take it to the nearest authorized service facility for service.

