




myPDFmanuals

You can read the recommendations in the user guide, the technical guide or the installation guide for MIELE G 575 DISHWASHER. You'll find the answers to all your questions on the MIELE G 575 DISHWASHER in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual MIELE G 575 DISHWASHER
User guide MIELE G 575 DISHWASHER
Operating instructions MIELE G 575 DISHWASHER
Instructions for use MIELE G 575 DISHWASHER
Instruction manual MIELE G 575 DISHWASHER

Miele

Operating Instructions

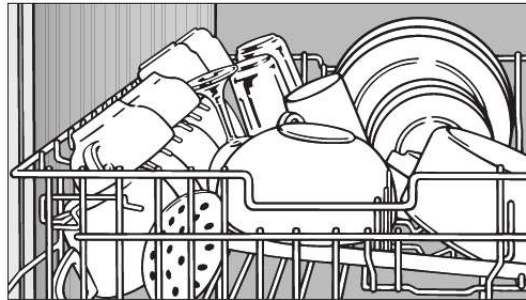

Dishwasher
G 1262

To prevent accidents
and appliance damage
read these instructions
before
installation or use.

en - US, CA

M.-Nr. 07 768 790



[Your user manual](#)
[MIELE G 575 DISHWASHER](#)

Manual abstract:

For best results follow these tips: ^ For lowest energy consumption you may connect the dishwasher to a cold water source. ^ For fastest possible wash times, with slightly higher energy consumption, connect the dishwasher to a hot water source. ^ Make full use of the baskets without overloading for the most economical washing. ^ Use the correct amount of detergent and rinse aid. Detergent dosage is dependent upon the amount of soiling and type of dishware being washed. See the "Program Guide" for more information. ^ When using powder or gel detergent, reduce the amount to 2/3 of the normal amount when washing a small load. ^ Choose a program that best suits the degree of soiling and the type of dishes being washed. ^ For small loads select "Express". 9

Before using for the first time To open the door To close the door ^ Push the baskets in.

^ Lift the door and push until it clicks into position. ^ Pull the handle to open the door. If the door is opened during operation, the dishwasher will stop running. Once the door is closed the program will continue. 10 Before using for the first time Water softener Every dishwasher is tested before leaving the factory.

Any water remaining in the machine is from the final factory test and does not indicate that the machine has been used. To achieve good cleaning results, the dishwasher needs soft water. Hard water results in calcium deposits on dishware and in the dishwasher. If your tap water hardness is above 4 °d (4 gr/gal [US]), the water should be softened. The water softener must be filled with dishwasher salt for reactivation.

If using "Tab" products which include salt, you should still add salt to the machine to achieve optimal cleaning results. Your local water authority will be able to advise you of the water hardness level in your area. The dishwasher must be programmed to correspond to the water hardness in your area. If the hardness of your local supply is constantly lower than 4 °d (4 gr/gal [US]), you do not need to add water softener salt. However the water hardness level must still be programmed. In areas where the water hardness fluctuates (example 37 - 50 °d [39 52 gr/gal]) always program the machine to the higher value (in this example 50 °d [52 gr/gal]). If there is a fault, it will help the service technician to know the hardness of your local water supply. ^ Please note your water hardness: °d (gr/gal) The water hardness was programmed to 15 °d (16 gr/gal) by factory default 11 Before using for the first time Programming the water softener To exit the programming mode at any time, turn the dishwasher off with the "o" button. ^ Turn the dishwasher off with "o". ^ Press and hold the "Program" and "g" buttons simultaneously.

Hold the program button until the lower right program indicator lights. If it does not come on, start over. ^ Press the "Options" button twice. The "Tab" indicator flashes twice in intervals. "p 1 5" flashes in the time display. A water hardness setting of 15 °d is set (factory default). The set value is indicated in the time indicator following "p" (see table)..



[Your user manual](#)
[MIELE G 575 DISHWASHER](#)