

WORKSTATION COMPUTER

RW11

User's Guide
(Preliminary Version)

Notice

The company reserves the right to revise this publication or to change its contents without any notice. Information contained herein is for reference only and does not constitute a commitment on the part of the manufacturer or any subsequent vendor. They assume no responsibility or liability for any errors or inaccuracies that may appear in this publication nor are they in anyway responsible for any loss or damage resulting from the use (or misuse) of this publication.

Any of the software described in this manual is sold or licensed "as is". Should the programs prove defective following purchase, the buyer (and not the manufacturer, its distributor, or its dealer) assumes the entire cost of all necessary servicing, repair and any incidental or consequential damages resulting from any software defects.

Brand and product names mentioned in this publication may or may not be copyrights and/or registered trademarks of their respective companies. They are mentioned for identification purposes only and are not intended as an endorsement of that product or its manufacturer.

Copyright © 2015 MilDef Crete Inc.

Trademarks

All other brand and product names are trademarks or registered trademarks of their respective companies.

Revision History:

Revision	Date	Changes	Author
----------	------	---------	--------

FCC (Federal Communications Commission) Statement

This equipment has been tested and found to comply with the limits for a Class B digital device pursuant part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses, and radiates radio frequency energy. If not being installed and used in accordance with the instructions, it may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Re-orient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- This device may not cause harmful interference.
- This device must accept any interference received, including interference that may cause undesired operation.



FCC Caution:

To assure continued compliance, any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment. (Example - use only shielded interface cables when connecting to computer or peripheral devices).

Radiation Exposure Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

Regulatory Information/ Disclaimers

Installation and use of this computer must be in strict accordance with the instructions included in the user documentation provided with the product. Any changes or modifications (including the antennas) made to this device that are not expressly approved by the manufacturer may void the user's authority to operate the equipment.

The manufacturer is not responsible for any radio or television interference caused by unauthorized modification of this device, or the substitution of the connecting cables and equipment other than manufacturer specified. It is the responsibility of the user to correct any interference caused by such unauthorized modification, substitution or attachment. Manufacturer and its authorized resellers or distributors will assume no liability for any damage or violation of government regulations arising from failing to comply with these guidelines.

CE

Products with the CE Marking comply with both the EMC Directive (2004/108/EC) and the Low Voltage Directive (2006/95/EC) issued by the Commission of the European Community.

Compliance with these directives implies conformity to the following European Norms:

EN55032 CISPR 32 Radio Frequency Interference

EN55024 EN61000-4-2, EN61000-4-3, EN61000-4-4, EN61000-4-5,
EN61000-4-6, EN61000-4-8, EN61000-4-11, EN61000-3-2,
EN61000-3-3, Generic Immunity Standard

LVD EN 60950-1:2006+A11:2009+A1:2010+A12 :2011+A2:2013

R&TTE (CE) Manual Regulatory Requirement

WLAN - IEEE 802.11a/b/g/n

802.11a/b/g/n Restrictions:

European standards dictate maximum radiated transmit power of 100mW EIRP and frequency range 2.400-2.4835 GHz.

CE Declaration of Conformity



It is confirmed to comply with the requirements set out in the Council Directive on the approximation of the laws of the member states relating to Electromagnetic Compatibility (2004/108/EC), Low-voltage Directive (2006/95/EC), the Amendment Directive (93/68/EEC), and the procedures given in European Council Directive (99/5/EC and 2004/108/EC).

The equipment was passed, and the equipment test was performed according to the following European standards:

EN 300 328 V1.9.1 (2015)

EN 301 893 V1.8.1 (2015)

EN 301 489-1 V1.9.2 (2011)

EN 301 489-3 V1.6.1 (2013)

EN 301 489-17 V2.2.1 (2012)

EN62311 2008

EN300440-1 V1.6.1 2010

EN300440-2 V1.4.1 2010

UL, TÜV

AC Adapter (TÜV includes **LVD EN60950**)

Power Conservation

This computer consumes much less power than conventional computers. However, power consumption may be further reduced by configuring the Power Management Setup.

It is recommended to enable power-saving functions when operating this computer, as Power Management functions do not impact system performance while saving power.

Power Safety

There are specific power requirements for this computer:

- Only use an approved power adapter for this computer.
- There is a 3-prong grounded plug of the power adapter. The third prong serves as Ground and is an important safety feature. If a compatible outlet is not available, consult qualified electricians for installation.
- When unplugging the power cord, please be sure to unplug from the plug head instead of pulling from the wire.
- Make sure the socket and any other extension cords you use can support the total current load of all the connected devices.
- Before cleaning the computer, make sure it is disconnected from any external power supplies.



Warning:

Before any upgrade procedures, make sure the power is turned off, and all the cables are disconnected. Also, it is advisable to remove your battery in prevent from turning the computer on accidentally.

Battery Precautions

- Only use batteries designed for this computer. Wrong and incompatible batteries may cause explosion, leakage or damage to the computer.
- Do not remove the battery from the computer while it is powered on.
- Do not continuously use a battery that has been dropped, or that appears damaged (e.g. bent or twisted) in any way. Even if the computer is able to continuously work with a damaged battery, the circuit damage may occur and possibly cause fire.
- Always use the computer's system or charger to recharge the battery. Incorrect recharging may cause the battery to explode.
- Do not try to repair a battery pack by yourself. Refer to any battery pack repair or replacement, please contact with to your service representative or qualified service personnel.
- Please dispose damaged battery promptly and carefully. Explosion or leakage may occur, if the battery is exposed to fire, improperly handled or discarded.



Battery Disposal & Caution:

The product that you have purchased contains a rechargeable battery. The battery is recyclable. At the end of its service life, under various state and local laws, it may be illegal to dispose of this battery into the municipal waste stream. Check with your local solid waste officials for details in your area for recycling options or proper disposal. Danger of explosion may possibly occur, if the battery is incorrectly replaced. Replace only with the same or the equivalent battery recommended by the manufacturer. Discard the used battery according to the manufacturer's instructions.

Environmental Information, Material Safety & Recycling

All materials used in the manufacturing of this equipment are recyclable or environmentally friendly.

Please recycle the packing materials in accordance to local regulations at the end of the product's service life.

Notice:

- The equipment may contain insignificant amount of hazardous substances for health and environment below control level.
- To avoid spreading such substances into the eco system, and to minimize the pressure on the natural environment, you are encouraged to use the appropriate take-back for reusing or recycling most of the materials in a safe way after the product's service life.
- The crossed-bin symbol indicates proper disposal is required.
- For more information on collection, reuse and recycling, please consult the local or regional waste administration for more information.
- You can also contact your dealer for more information on the environmental details of the equipment.
- The symbol of the crossed-out wheeled bin indicates that the product (electrical and electronic equipment) should not be placed in municipal waste. Please check local regulations for disposal of electronic products.



TABLE OF CONTENTS

CHAPTER ONE - GETTING STARTED	1
UNPACKING	1
QUICK OPERATION	2
APPEARANCE OVERVIEW	3
CHAPTER TWO - OPERATING INFORMATION	8
WORKPLACE	8
RUGGEDNESS	8
INSTALLING OPERATING SYSTEM	9
BOOT UP AND POST	9
SHUT DOWN	9
SLEEP/HIBERNATE	10
TOUCHPAD	11
KEYBOARD	12
MANAGING SOLID STATIC DRIVE (SSD)	13
RTC	13
WIRELESS DEVICES (OPTION)	14
CHAPTER THREE - MANAGING POWER	18
AC ADAPTER	18
BATTERY	19
POWER CONSERVATION	21
SUPPORTING ACPI	21
USB FAST CHARGING	22
CHAPTER FOUR - BIOS SETUP	23
MAIN MENU	23
ADVANCED MENU	24
TRUSTED COMPUTING SUB-MENU	26
SATA CONFIGURATION SUB-MENU	27
SATA CONFIGURATION SUB-MENU SELECTIONS	27
INTEL (R) RAPID START TECHNOLOGY SUB-MENU	28
USB CONFIGURATION SUB-MENU	28

USB CONFIGURATION SUB-MENU SELECTIONS.....	29
SUPER IO CONFIGURATION SUB-MENU.....	30
RF DEVICE CONTROL CONFIGURATION SUB-MENU.....	31
EC THERMAL CONTROL SUB-MENU	32
AC IN BOOT SUB-MENU	32
USB CHARGE CONTROL SUB-MENU.....	33
INTEL SMART CONNECT TECHNOLOGY SUB-MENU.....	33
INTEL 82579LM GIGABIT NETWORK CONNECTION SUB-MENU.....	34
NETWORK STACK CONFIGURATION SUB-MENU.....	35
CHIPSET MENU	36
PCH-IO CONFIGURATION SUB-MENU	36
PCI EXPRESS CONFIGURATION SUB-MENU.....	37
USB CONFIGURATION SUB-MENU	37
PCH AZALIZ CONFIGURATION SUB-MENU	38
BOOT MENU	39
BOOT MENU SELECTIONS	39
SECURITY MENU	42
SAVE & EXIT MENU	43

CHAPTER FIVE - DRIVERS AND APPLICATIONS 44

CHIPSET.....	44
VGA.....	45
AUDIO.....	46
INTEL ME	47
INTEL RAPID STORAGE TECHNOLOGY	48
WIRELESS POWER MANAGER.....	49
TOUCH PAD	50
TURBO BOOST MONITOR	51
GIGABIT LAN.....	52
2ND GIGABIT LAN (OPTION)	53
WiFi (OPTION).....	54
BLUETOOTH (OPTION)	55
GPS (OPTION)	56
TPM (OPTION)	57


USB3.0 (FOR WINDOWS 7)	58
CHAPTER SIX - SPECIFICATIONS	59
PLATFORM.....	59
CPU	59
PCH	59
MEMORY	59
GRAPHIC	59
DISPLAY	59
KEYBOARD	59
TOUCHPAD	60
STORAGE	60
I/O PORTS.....	60
POWER	61
SYSTEM UNIT DIMENSIONS AND WEIGHT	61
MATERIALS AND RECYCLING	62
CASE	62
ENVIRONMENTAL SPECIFICATIONS	62
CERTIFICATIONS	62
CHAPTER SEVEN - OPTIONAL DEVICES	63
COMMUNICATION.....	63
MEMORY	63
BVA MODULE.....	63
TRUST PLATFORM MODULE (TPM).....	63
CHAPTER EIGHT - MAINTENANCE AND SERVICE	64
CLEANING.....	64
TROUBLESHOOTING.....	64
RMA SERVICE	65

Chapter One - Getting Started

Unpacking

The following components are shipped along with your computer. If any component is missing or damaged, please notify the dealer immediately.

- Computer Unit
- AC Adapter
- AC Power Cord
- Utility DVD
- Quick Guide

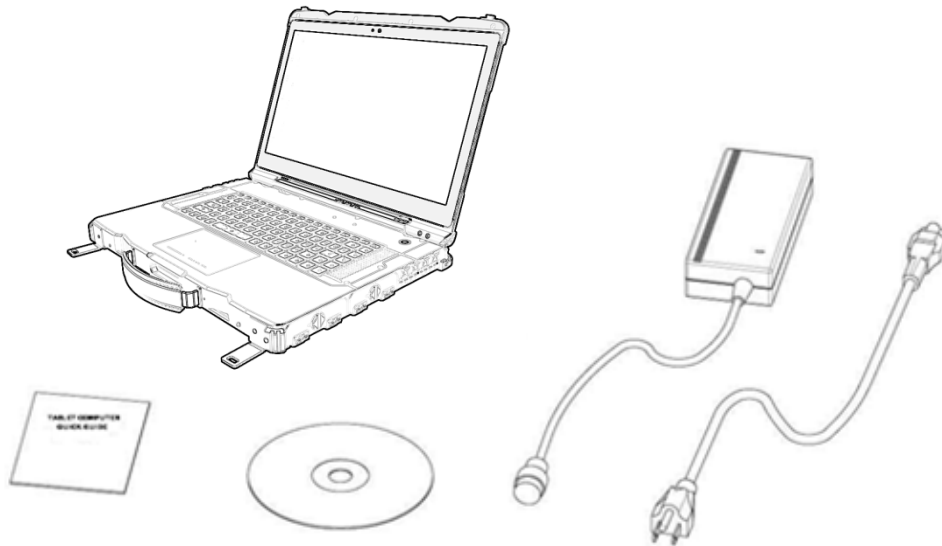

Quick Operation


- Loosen the battery screw, remove the battery insulation sheet, and mount the battery.
- Connect the AC adapter with the computer and start charging the battery for at least 10 minutes.
- Turn ON the computer by pressing the power switch.

Note:

- *Drivers or applications installation may be necessary for further operation.*

Appearance Overview

LCD Panel Open

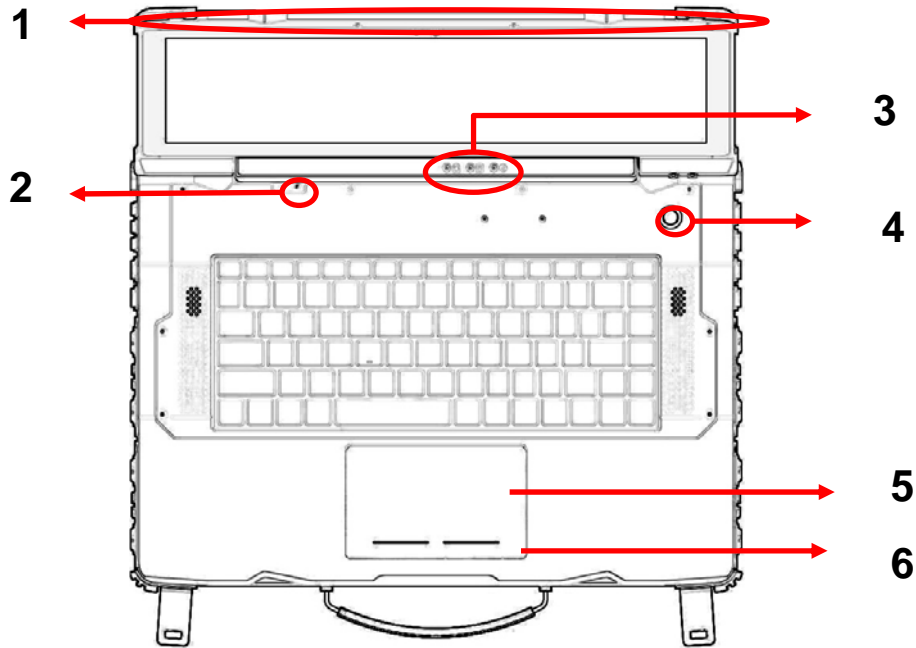


1. Embedded Antennas (Optional):
GPS, WiFi/Bluetooth x 2
2. Embedded Mic
3. LED Indicators

	Power Indicator (Dual LED): Green (Power) Flashing Green (S3)		Charger/Battery low: Orange (Charging) / Flashing Orange (Battery low)
	SSD/Heater Indicator: Green (SSD) / Orange (Heater)		

4. Power Button
5. Touchpad
6. Touchpad Right and Left buttons


Note:
 ➤ For details, please refer to "Touchpad" section.

Right View

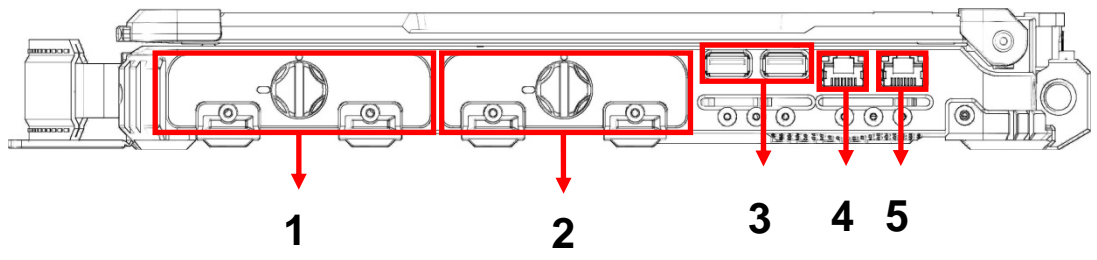


- 1. Battery pack
- 2. Optional 3rd~4th SATAII SSD
- 3. USB 2.0 x 2
- 4. Optional GLAN x 1
- 5. GLAN x 1

Left View

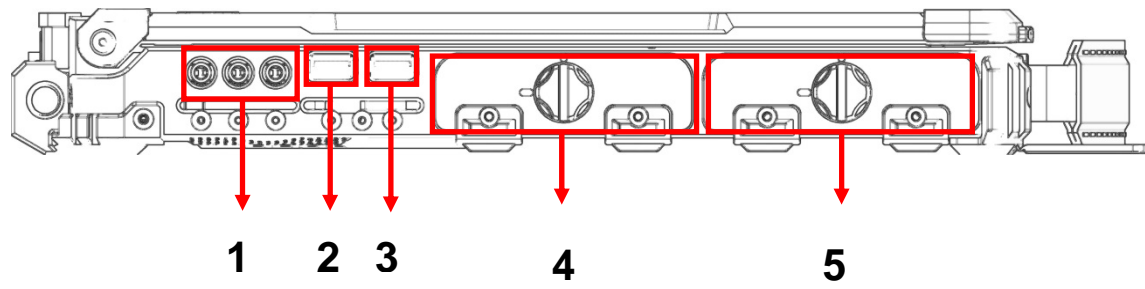


- 1. Audio/Line-in/Microphone
- 2. USB 3.0
- 3. USB 3.0 (USB Battery Charging)
- 4. Standard 1st SATAIII SSD
Optional 2nd SATAIII SSD
- 5. Battery pack

Rear View

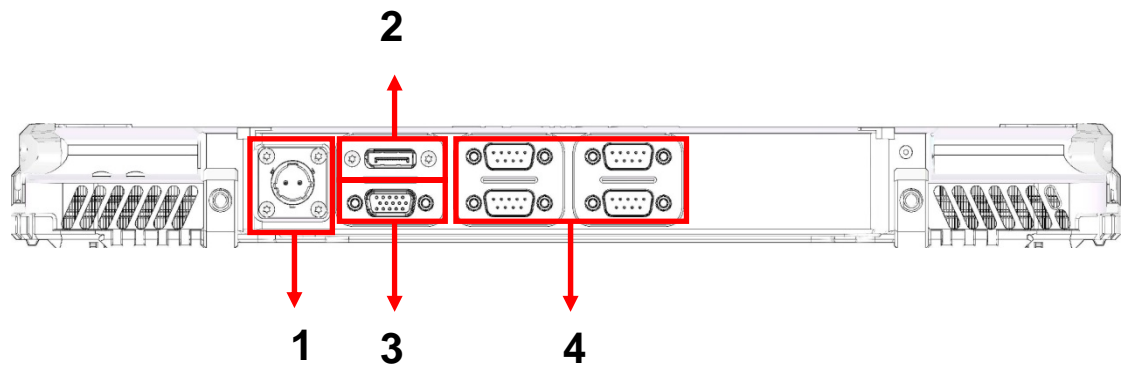

- 1. DC-In Conn. (Military 2 pin conn.)
- 2. Display port
- 3. VGA port
- 4. Serial DB9 x 4

Bottom View

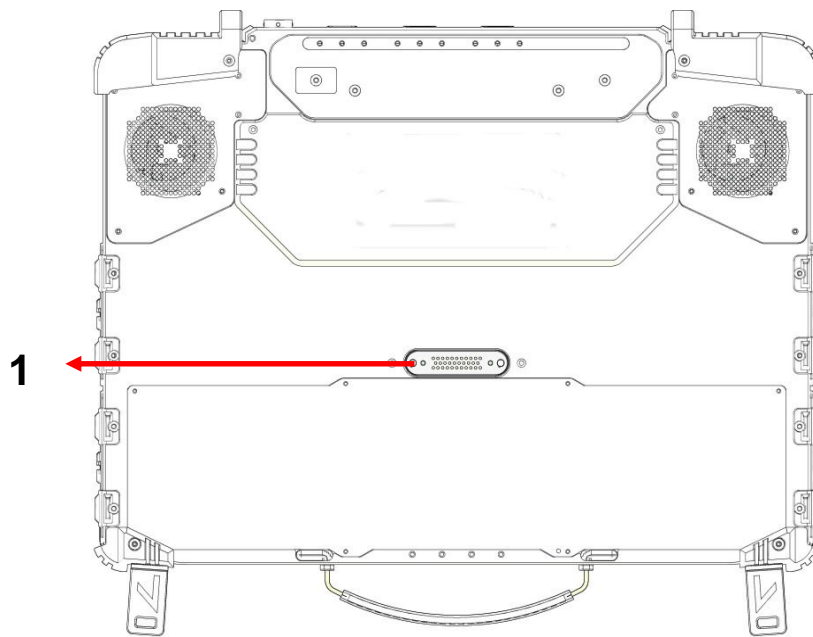

1. Multi Bay port

Chapter Two - Operating Information

Workplace

A clean and moisture-free environment is preferred. Make room for air circulation. Remember to avoid areas from:

- Sudden or extreme changes in temperature.
- Extreme heat.
- Strong electromagnetic fields (near television set, motor rotation area, etc.).
- Dust or high humidity.

If it is necessary to work in a hostile environment, please regularly maintain your computer by cleaning dust, water, and etc. to keep it in an optimal condition.

Ruggedness

This computer is designed with rugged features such as vibration, shock, dust, and rain/ water protection. However, it is still necessary to provide appropriate protection while operating in harsh environments.

The computer is also designed to withstand rainfall from top with mild wind blowing only. Please keep the keyboard facing up, i.e. normal operating direction, to maintain water resistance. NEVER immerse the unit in water, or spray water at an upside-down system. Doing so may cause permanent damage.

All connectors will be corroded if being exposed to water or moisture. Corrosion is accelerated if the power is ON. Please take proper water-resistant measures for cable connections. The DC jack and cables are sealed and may be operated with water splashing while attached. All port covers should be in place when no cable is attached.

Installing Operating System

Your computer is designed to operate with Microsoft Windows 7 / 8.1 / Windows Server 2012 Operating System. Please connect your computer with an external USB-interface drive, such as an ODD or a USB thumb drive, and start the OS installation.

Note:

➤ *Windows Server 2012 with limitations.*

Boot Up and POST

Boot up

The computer turns ON and loads the operating system (such as Windows) into the system memory. This start-up procedure is called “boot up”.

The ROM BIOS Power on Self-Test (POST)

Each time when the computer powers on, it automatically performs a self-test of its memory and hardware devices.

Shut down

Directly click “Shut down” from your OS to turn OFF the power of your computer. Before shutting down, please do remember to save any unfinished works and close your applications to prevent your SSD from suffering possible data loss or damage. “Shut down” will turn OFF power of your computer. If you want to start your computer again, you need to turn it ON again by pressing the power button.

Force Shut Down

In the event that your computer hangs or stops responding, you can perform a force shut down by pressing and holding the power button for 4~5 seconds. Please note that any unsaved work or data will be lost this way.

Sleep/Hibernate

Sleep

Under “Sleep” mode, the system will temporarily save your work into the computer’s RAM. If you want to start your computer again, please press the power button to resume. Under Windows 8.1, you can enter this mode by directly clicking:


Move the cursor to the upper-right or lower-right corner of the screen, and then click “Settings” => Click “Power” => Click “Sleep”.


Hibernate

Under “Hibernate” mode, the system will save your work into SSD. If you want to start your computer again, you need to press the power button. Under Windows 8, you can enter “Hibernate” mode by directly clicking:

Move the cursor to the upper-right or lower-right corner of the screen, and then click “Settings” => Click “Power” => Click “Hibernate”.

Touchpad

The touchpad can be either a multi-touch capacitive type or a single resistive type. It can be enabled/disabled by pressing **[Fn] + [F12]**, and a disable icon  will be shown on system tray when it is disabled. For usage details, please see the following table.

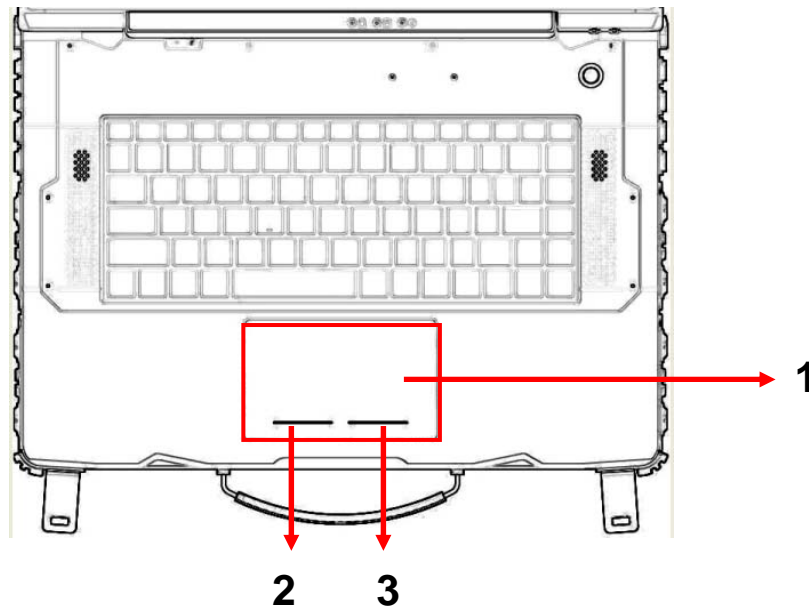

No.	Item	Description
1.	Touchpad	For functions like click, scroll, and swipe
2.	Left-click button	Similar to left button of mouse
3.	Right-click button	Similar to right button of mouse

Note:

- For capacitive multi-touch type, please install the touchpad driver for complete functions. Without installing the driver, you can still use single-touch functions, but the functions of multi-touch and touchpad icons on system tray are not available. In addition, if the driver is not installed, the touchpad disable status will not be remembered after S3/S4/reboot/turn off.

Keyboard

The keyboard is functionally equivalent to a full size desktop keyboard. A sample layout is shown as below.



Function Key Combinations

Key	Description
[Fn] + [F3]	Decrease LCD brightness
[Fn] + [F4]	Increase LCD brightness
[Fn] + [F5]	Mute
[Fn] + [F6]	Volume down
[Fn] + [F7]	Volume up
[Fn] + [F9]	Decrease keyboard backlight
[Fn] + [F10]	Increase keyboard backlight
[Fn] + [F12]	Touchpad lock

Managing Solid Static Drive (SSD)

The computer allows you to install at most four 2.5" type/ 7mm height standard **SATAII/III interface** SSDs. For standard, you can install 1st SATAIII SSD; for option, you can install 2nd SATAIII SSD, and 3rd~4th SATAII SSDs.

For creating and setting up RAID, please use the Intel® RST (Rapid Storage Technology) to support RAID 0, 1, 5, 10 configurations. The following provides the steps to use RAID function:

1. Insert the required number of SSDs for RAID 0, 1, 5, 10, respectively.
2. Power on the computer, and press [F2] to enter BIOS.
3. Select **Advanced menu => SATA Configuration => SATA Mode Selection => RAID**
4. Restart your computer, and press [ctrl + I] when the option ROM screen appears during POST.
5. Now, you can setup RAID configuration following the on-screen instructions. Or, you can refer to the User Guide of Intel® Rapid Storage Technology on the Intel official website.

Note:

- *It is recommended to use the same capacity size SSDs to configure RAID volume.*

RTC

Battery backed up RTC (Real Time Clock/Calendar) is built in an on-board CMOS (Complementary Metal Oxide Semiconductor) chip. The RTC keeps track of the time and date while the computer is off. The CMOS chip also stores system setup information.

RTC battery is also recharged when AC adapter is attached. Recharge the computer approximately once per month to ensure RTC operation.

Wireless Devices (Option)

For your ease of operations, you can turn on/off your wireless devices through the proprietary software application - “**Device Power Manager**”.

Note:

- *Depending on the configuration of your computer, Device Power Manager menu may be shown differently from the screenshots provided in this section.*
- *When you adjust User Account Control (UAC), a security feature in Windows, the setting value of Device Power Manager will be affected. So, once there is any adjustment in UAC, please uninstall Device Power Manager and reinstall it again.*

Wireless LAN

1. Driver & Application Installation

- a. Install the Chipset Driver first. Read from the Utility DVD and find the directory listed in the readme file to finish installation.
- b. Then, install the Device Power Manager application. Read from the Utility DVD and find the directory listed in the readme file to finish installation.

2. Launch the Device Power Manager

After launching the utility, please click “Wireless LAN” for enabling the Wireless LAN function (click again to disable).

Once the Wireless LAN function starts up, the wireless device LED indicator will turn on (color blue) and the Wireless LAN icon will appear in the OS accordingly.

Bluetooth

1. Driver & Application Installation

- a. Install the Bluetooth driver first. Read from the Utility DVD and find the directory listed in the readme file to finish installation.
- b. Install the Device Power Manager application. Read from the Utility DVD and find the directory listed in the readme file to finish installation.

2. Launch the Device Power Manager

After launching the utility, please click “Bluetooth” to enable the Bluetooth function (click again to disable). Once the Bluetooth function starts up, the wireless LED indicator (color blue) will turn on and the Bluetooth icon will show up in the operating system accordingly.

GPS

1. Driver & Application Installation

- a. Install the Device Power Manager application:
Read from the Utility DVD and find the directory listed in the readme file to finish installation.

- b. Install the GPS driver:
GPS (Driver): Read from the Utility DVD and find the directory listed in the readme file to finish installation.

Note:

Wireless devices can be turned ON/OFF through BIOS. Once a device is turned off through BIOS, its button displayed on the Device Power Manager will turn out to be yellow with a prohibition marker. For example, the following illustration shows that GPS device is disabled through BIOS. To turn on, please enter into BIOS and enable the functions. For more information on BIOS setting, please refer to [RF Device Control Configuration Sub-Menu](#) section.

Chapter Three - Managing Power

AC Adapter

The AC adapter performs two functions:

- It powers the computer from an external AC source.
- It charges the computer battery.

The adapter automatically detects the AC line voltage (100V or 240V) and adjusts accordingly.

The following are recommended when using the AC adapter:

- Use a properly grounded AC outlet.
- Use one AC outlet exclusively for the computer. Having other appliances on the same line may cause interference.
- Use a power strip with built-in surge protection.

Connecting the AC adapter:

- Plug the AC cord to the adapter.
- Plug the other end of the AC cord into the wall outlet. Make sure the green LED on the adapter turns on.
- Attach the DC plug into the power jack of the computer; turn the lock ring clockwise to secure it.

AC Adapter Indicator:

The green LED indicates that AC power is ready.

Note:

- *To ensure system stability, please connect your computer to an external power source when operating at -20 °C ambient temperature.*

Battery

The power source will automatically switch to battery when the external power source (AC adapter or optional vehicle adapter) is disconnected.

Battery Low

When the battery is nearly exhausted, the computer gives the following “Battery Low” warnings:

- Windows battery low warning (when operating system is Windows).
- The battery charger LED flashes.

Once the Battery Low warning occurs, please:

- Save and close the files you are currently working on.
- Plug in the AC adapter to recharge the battery.

Charging the Battery

There are two battery packs in the computer; the one on the left side of the computer is the primary battery, and on the right side is secondary battery. When the computer is connected to AC adapter, primary battery will be charged first, and then secondary battery. When the computer is discharging, secondary will be discharged first, and then primary one.

Plug in the AC adapter or vehicle adapter to start the battery charging. If the battery is already full, the sense circuitry will stop high current charge within several minutes.


The LED Indicator turns ON when the battery is charging and turns OFF when the battery charge is completed.

Note:

- *The battery packs are not hot swappable. Please connect to the AC adapter if you want to remove primary and secondary batteries. Otherwise, unsaved data and files will be lost.*

Battery Gauge

You may check battery status from battery gauge in Windows. Click the power/battery icon to reveal the battery gauge window.

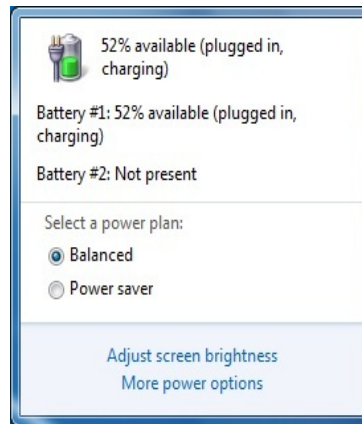

Battery Power Saving Tips

The computer comes with an intelligent power-saving feature. You may extend the battery life by:

- Setup power saving functions in Operating System Power Management options (e.g. Windows Power Options).
- Lower the intensity of the display by brightness control.
- Use standby option when computer is temporarily not in use.
- Shut down the computer when it will not be for a long-time use.

Replacing Battery

When the battery is nearly exhausted, there are two ways to keep your computer working. Connect the AC adapter and the power cord designed for the computer to start charging is one method; directly replace a charged battery designed for the computer may be the other one.

Note:

- *Always remember to turn OFF the power before replacing the battery.*

Power Conservation

This computer consumes much less power than conventional computers. However, power consumption may be reduced by configuring the Power Management Setup properly.

It is recommended the power saving functions to be enabled even when not running on battery power. Power Management will not degrade performance while saving power.

Supporting ACPI

Your computer supports ACPI (Advanced Configuration and Power Interface) for power management. With ACPI and an ACPI-compliant operating system such as Windows, the feature will allow you to reduce the power consumption for energy saving. By supporting ACPI, the AC adapter LED and the Power indicator LED will show in different ways. The followings are the detailed description.

Sleep:

AC adapter LED is ON (while connecting with power)

Power LED indicator is flashing; other LED indicators are OFF

Under Hibernation:

AC adapter LED is ON (while connecting with power)

Power LED indicator is OFF; other LED indicators are OFF

Shutdown:

AC adapter LED is ON (while connecting with power)

Power LED indicator is OFF; other LED indicators are OFF

USB Fast charging

Your computer supports USB fast charging feature, enabling to quickly charge your fast-charging compatible devices. But note, fast charging is not supported for all power modes. The following table shows details for USB Charging information:

Mode		USB3.0 Charging Features
Power off	AC	Fast charging supports
	Battery	No charging
Power on	AC	Normal charging
	Battery	Normal charging
S3	AC	Fast charging supports
	Battery	Fast charging supports

Note:

- *When enable USB fast charging from USB CHARGE control in BIOS, please cold boot your computer to enable the function.*

Chapter Four - BIOS Setup

Press **[F2]** at boot up to enter BIOS setup. Use arrow keys to select options and **[+/-]** to modify them. When finished, move to **“Exit”** and press **[Enter]** then confirm save by pressing **[Y]**.

Main Menu

Aptio Setup Utility					
Main	Advanced	Chipset	Boot	Security	Save & Exit
BIOS Information BIOS Vendor Core Version Compliancy Project Version Build Date and Time EC Version				Choose the system default language	
System Language [English]				→←: Select Screen ↑↓: Select Item Enter: Select -/+: Change Opt. F1: General Help F2: Previous Values F3: Optimized Defaults F4: Save & Exit ESC: Exit	
System Date [Mon 05/20/2013] System Time [16:19:20]					
Access Level Administrator					

Note:

- *The contents may vary depending on computer configurations.*
- *You can check your BIOS/EC Version on the main menu.*
- *Incorrect settings may cause system malfunction. To correct it, restore the Optimized Defaults with F3.*

Main Menu Selections

You can make the following selections on the Main Menu. Use the sub-menus for other selections.

Feature	Options	Description
System Date	MM/DD/YYYY	Set the Date. Use Tab to switch between Date elements
System Time	HH:MM:SS	Set the Time. Use Tab to switch between Time elements.

Advanced Menu

Aptio Setup Utility	
Main	Advanced
<ul style="list-style-type: none"> ▶ Trusted Computing ▶ SATA Configuration ▶ Intel (R) Rapid Start Technology ▶ USB Configuration ▶ Super IO Configuration ▶ RF Device Control ▶ EC Thermal Control ▶ AC IN BOOT Control ▶ USB CHARGE Control ▶ Intel (R) Smart Connect Technology ▶ Intel (R) 82579LM Gigabit Network Connection 	<p>Trusted Computing Setting</p> <hr/> <p>→←: Select Screen ↑↓: Select Item Enter: Select -/+: Change Opt. F1: General Help F2: Previous Values F3: Optimized Defaults F4: Save & Exit ESC: Exit</p>

Advanced Menu Selections

You can make the following selections on the Advanced Menu.

Feature	Options	Description
Trusted Computing	Disabled Enabled	TPM Support
SATA Configuration	SATA Mode Selection SATA Test Mode Aggressive LPM Support SATA Controller Speed	SATA Mode Selection: IDE/AHCI/RAID SATA Test Mode: Enabled/Disabled Aggressive LPM Support: Enabled/Disabled SATA Controller Speed: Gen1/Gen2/Gen3
Intel (R) Rapid Start Technology	Disabled Enabled	Allows the system to skip certain tests while booting. This will decrease the time needed to boot the system.
USB Configuration	Disabled Enabled	Legacy USB Support USB3.0 Support XHCI Hand-off EHCI Hand-off Generic Storage Device 0.00
Super IO Configuration	Serial Port 0 Configuration Serial Port 1 Configuration Serial Port 2 Configuration Serial Port 3 Configuration	Set Parameters of Serial Port 0 (COMA)
RF Device Control	Disabled Enabled	GPS/BLUETOOTH/WLAN
EC Thermal Control		Thermal cooling trip point
AC IN BOOT Control	Disabled Enabled	
USB CHARGE Control	Disabled Enabled	

Feature	Options	Description
Intel Smart Connect Technology	Disabled Enabled	Intel Smart Connect Technology Settings
Intel 82579LM Gigabit Network Connection	NIC Configuration Blink LEDs (range 0/15 seconds) Link Status	Configure Gigabit Ethernet device parameters

Trusted Computing Sub-Menu

Advanced		Aptio Setup Utility
Configuration Security Device Support	[Disabled]	Enables or Disables BIOS support for security device. O.S. will not show Security Device. TCG EFI protocol and INT1A interface will not be available.
Current Status Information SUPPORT TURNED OFF		→←: Select Screen ↑↓: Select Item Enter: Select -/+ : Change Opt. F1: General Help F2: Previous Values F3: Optimized Defaults F4: Save & Exit ESC: Exit

SATA Configuration Sub-Menu

Aptio Setup Utility		
Advanced		
SATA Mode Selection	[AHCI]	Determine how SATA controller(s) operate.
SATA Test Mode	[Disabled]	
Aggressive LPM Support	[Enabled]	
SATA Controller Speed	[Gen3]	
Serial ATA Port 0	HGST HTS725050 (500.1GB)	→←: Select Screen ↑↓: Select Item Enter: Select -/+ : Change Opt. F1: General Help F2: Previous Values F3: Optimized Defaults F4: Save & Exit ESC: Exit
Software Preserve	SUPPORTED	
Serial ATA Port 0	Empty	
Software Preserve	Unknown	
Serial ATA Port 0	Empty	
Software Preserve	Unknown	

SATA Configuration Sub-Menu Selections

You can make the following selections on the SATA configuration sub-menu.

Feature	Options	Description
SATA Mode Selection	IDE AHCI RAID	
SATA Test Mode	Disabled Enabled	Enable or Disable Test Mode
Aggressive LPM Support	Disabled Enabled	Enable PCH to aggressively enter link power state.
SATA Controller Speed	Gen1 Gen2 Gen3	Indicate the maximum speed the SATA controller can support.

Intel (R) Rapid Start Technology Sub-Menu

Advanced		Aptio Setup Utility
Intel (R) Rapid Start Technology	[Disabled]	Enable or disable Intel (R) Rapid Start Technology
		→←: Select Screen ↑↓: Select Item Enter: Select -/+ : Change Opt. F1: General Help F2: Previous Values F3: Optimized Defaults F4: Save & Exit ESC: Exit

USB Configuration Sub-Menu

Advanced		Aptio Setup Utility
USB Configuration		Enables Legacy USB support. AUTO option disables legacy support if no USB devices are connected. Disable option will keep USB devices available only for EFI applications
USB Devices: 2 Hubs		→←: Select Screen ↑↓: Select Item Enter: Select -/+ : Change Opt. F1: General Help F2: Previous Values F3: Optimized Defaults F4: Save & Exit ESC: Exit
Legacy USB Support	[Enabled]	
USB3.0 Support	[Enabled]	
XHCI Hand-off	[Enabled]	
EHCI Hand-off	[Enabled]	

USB Configuration Sub-Menu Selections

You can make the following selections on the USB configuration sub-menu.

Feature	Options	Description
Legacy USB enabled	Disabled Enabled Auto	Enables Legacy USB support. AUTO option disables legacy support if no USB devices are connected. DISABLE option will keep USB devices available only for EFI applications.
USB3.0 Support	Disabled Enabled	Enable/Disable USB3.0 (XHCI) Controller support.
XHCI Hand-off	Disabled Enabled	This is a workaround for OSES without XHCI hand-off support. This XHCI ownership change should be claimed by XHCI driver.
EHCI Hand-off	Disabled Enabled	This is a workaround for OSES without EHCI hand-off support. This EHCI ownership change should be claimed by EHCI driver.

Super IO Configuration Sub-Menu

Advanced		Aptio Setup Utility
<p>Super IO configuration</p> <p>Super IO Chip IT8760</p> <ul style="list-style-type: none"> ▶ Serial Port 0 Configuration ▶ Serial Port 1 Configuration ▶ Serial Port 2 Configuration ▶ Serial Port 3 Configuration 	<p>Set Parameters of Serial Port 0 (COMA)</p> <hr/> <p>→←: Select Screen ↑↓: Select Item Enter: Select -/+: Change Opt. F1: General Help F2: Previous Values F3: Optimized Defaults F4: Save & Exit ESC: Exit</p>	

Super IO Configuration Sub-Menu Selections

You can make the following selections on the IT8783F super IO configuration sub-menu.

Feature	Options	Description
Serial Port	Disabled Enabled	Enable or Disable Serial Port (COM)
Change Settings	Auto IO=3F8h; IRQ=4; IO=3F8h; IRQ=3,4,5,6,7,10,11,12; IO=2F8h; IRQ=3,4,5,6,7,10,11,12; IO=3E8h; IRQ=3,4,5,6,7,10,11,12; IO=2E8h; IRQ=3,4,5,6,7,10,11,12;	Select an optimal setting for Super IO device.

RF Device Control Configuration Sub-Menu

Advanced		Aptio Setup Utility
RF Device Control		RF Device Control Setting
GPS STATUS GPS	Present [Enabled]	→←: Select Screen ↑↓: Select Item Enter: Select -/+ : Change Opt. F1: General Help F2: Previous Values F3: Optimized Defaults F4: Save & Exit ESC: Exit
BT STATUS BLUETOOTH	Present [Enabled]	
WLAN STATUS WLAN	Present [Enabled]	

RF Device Control Configuration Sub-Menu Selections

You can make the following selections on the RF Security Control sub-menu.

Feature	Options	Description
GPS	Disabled Enabled	RF Device Control Setting
BLUETOOTH	Disabled Enabled	RF Device Control Setting
WLAN	Disabled Enabled	RF Device Control Setting

EC Thermal Control Sub-Menu

Advanced		Aptio Setup Utility
EC Thermal Control		EC Thermal Control Setting
Thermal cooling trip point	[87 C]	
		→←: Select Screen ↑↓: Select Item Enter: Select -/+: Change Opt. F1: General Help F2: Previous Values F3: Optimized Defaults F4: Save & Exit ESC: Exit

AC IN BOOT Sub-Menu

Advanced		Aptio Setup Utility
AC IN BOOT Control		AC IN BOOT Setting
AC IN BOOT Control	[Disabled]	
		→←: Select Screen ↑↓: Select Item Enter: Select -/+: Change Opt. F1: General Help F2: Previous Values F3: Optimized Defaults F4: Save & Exit ESC: Exit

USB CHARGE Control Sub-Menu

Advanced		Aptio Setup Utility
USB CHARGE Control		USB CHARGE Setting
USB CHARGE Control	[Disabled]	→←: Select Screen ↑↓: Select Item Enter: Select -/+: Change Opt. F1: General Help F2: Previous Values F3: Optimized Defaults F4: Save & Exit ESC: Exit

Note:

- After enabling USB fast charge function, please cold boot your computer.

Intel Smart Connect Technology Sub-Menu

Advanced		Aptio Setup Utility
ISCT Configuration		Enable/Disable ISCT Configuration
ISCT Configuration	[Disabled]	→←: Select Screen ↑↓: Select Item Enter: Select -/+: Change Opt. F1: General Help F2: Previous Values F3: Optimized Defaults F4: Save & Exit ESC: Exit

Intel 82579LM Gigabit Network Connection Sub-Menu

Advanced		Aptio Setup Utility
PORT CONFIGURATION MENU NIC Configuration Blink LEDs (range 0-15 seconds) 0		Click to configure the network device port
PORT CONFIGURATION INFORMATION UEFI Driver: Intel PRO/1000 5.0.12 Adapter PBA: FFFFFFF-OFF Chip Type: Intel PCH2 PCI Device ID: 1502 PCI Bus:Device:Function: 0:25:0 Link Status: [Disconnected] Factory MAC Address: 88:88:88:88:87:88		→←: Select Screen ↑↓: Select Item Enter: Select -/+ : Change Opt. F1: General Help F2: Previous Values F3: Optimized Defaults F4: Save & Exit ESC: Exit

INTEL 82579LM Gigabit Network Connection Sub-Menu Selections

You can make the following selections on the RF Security Control sub-menu.

Feature	Options	Description
NIC Configuration	LINK Speed	Change link speed and duplex for current port.
Blink LEDs (range 0-15 seconds)		Blink LEDs for the specified duration (up to 15 seconds).

Network Stack Configuration Sub-Menu

Advanced		Aptio Setup Utility
Network Stack	[Enabled]	Wait time to press ESC key to abort the PXE boot
Ipv4 PXE Support	[Enabled]	
Ipv6 PXE Support	[Enabled]	
PXE boot wait time	0	
		→←: Select Screen ↑↓: Select Item Enter: Select -/+ : Change Opt. F1: General Help F2: Previous Values F3: Optimized Defaults F4: Save & Exit ESC: Exit

Network Stack Configuration Sub-Menu Selections

You can make the following selections on the Network stack configuration sub-menu.

Feature	Options	Description
PXE boot wait time	0~5	Wait time to press ESC key to abort the PXE boot

Note:

- The value of PXE boot wait time can be set from 0~5.

Chipset Menu

Aptio Setup Utility					
Main	Advanced	Chipset	Boot	Security	Save & Exit
<ul style="list-style-type: none"> ▶ PCH-IO Configuration ▶ System Agent (SA) Configuration 			PCH Parameter		
			→←: Select Screen ↑↓: Select Item Enter: Select -/+ : Change Opt. F1: General Help F2: Previous Values F3: Optimized Defaults F4: Save & Exit ESC: Exit		

PCH-IO Configuration Sub-Menu

Aptio Setup Utility	
Chipset	
Intel PCH RC Version 1.6.0.0 Intel PCH SKU Name QM77 Intel PCH Rev ID 04/C1	PCI Express Configuration settings
<ul style="list-style-type: none"> ▶ PCI Express Configuration ▶ USB Configuration ▶ PCH Azalia Configuration PCH LAN Controller [Enabled] Wake on LAN [Enabled]	→←: Select Screen ↑↓: Select Item Enter: Select -/+ : Change Opt. F1: General Help F2: Previous Values F3: Optimized Defaults F4: Save & Exit ESC: Exit

PCI Express Configuration Sub-Menu

Advanced		Aptio Setup Utility
PCI Express Configuration PCI Express Clock Gating [Enabled] DMI Link ASPM Control [Enabled] DMIO Link Extended Synch Control [Disabled] PCIe-USB Glitch W/A [Disabled] Subtractive Decode [Disabled]		Enable or disable PCI Express Clock Gating for each root port
<ul style="list-style-type: none"> ▶ PCI Express Root Port 1 ▶ PCI Express Root Port 2 ▶ PCI Express Root Port 3 ▶ PCI Express Root Port 4 ▶ PCI Express Root Port 5 PCIe Port 6 is assigned to LAN ▶ PCI Express Root Port 7 ▶ PCI Express Root Port 8 		→←: Select Screen ↑↓: Select Item Enter: Select -/+ : Change Opt. F1: General Help F2: Previous Values F3: Optimized Defaults F4: Save & Exit ESC: Exit

USB Configuration Sub-Menu

Advanced		Aptio Setup Utility
USB Configuration XHCI Pre-Boot Driver [Enabled] xHCI Mode [Smart Auto] <ul style="list-style-type: none"> HS Port #1 Switchable [Enabled] HS Port #2 Switchable [Enabled] HS Port #3 Switchable [Enabled] HS Port #4 Switchable [Enabled] xHCI Streams [Enabled] EHCI1 [Enabled] EHCI2 [Enabled] USB Ports Per-Port Disable Control [Disabled]		Enable or disable XHCI Pre-Boot Driver support
		→←: Select Screen ↑↓: Select Item Enter: Select -/+ : Change Opt. F1: General Help F2: Previous Values F3: Optimized Defaults F4: Save & Exit ESC: Exit

PCH Azalix Configuration Sub-Menu

Advanced		Aptio Setup Utility
PCH Azalia Configuration		Control Detection of the Azalia device.
Azalia	[Auto]	→←: Select Screen ↑↓: Select Item Enter: Select -/+ : Change Opt. F1: General Help F2: Previous Values F3: Optimized Defaults F4: Save & Exit ESC: Exit
Azalia Docking Support	[Disabled]	
Azalia PME	[Disabled]	
Azalia Interbal HDMI Codec	[Enabled]	
Azalia HDMI codec Port B	[Enabled]	
Azalia HDMI codec Port C	[Enabled]	
Azalia HDMI codec Port D	[Enabled]	

Boot Menu

Aptio Setup Utility					
Main	Advanced	Chipset	Boot	Security	Save & Exit
Boot mode select		[UEFI]	Select boot mode LEGACY/UEFI		
FIXED Boot ORDER Priorities			→←: Select Screen ↑↓: Select Item Enter: Select -/+ : Change Opt. F1: General Help F2: Previous Values F3: Optimized Defaults F4: Save & Exit ESC: Exit		
Boot Option #1		[Hard Disk: Windows B...]			
Boot Option #2		[CD/DVD]			
Boot Option #3		[USB Hard Disk]			
Boot Option #4		USB CD/DVD]			
Boot Option #5		[USB Key]			
Boot Option #6		[USB Floppy]			
Boot Option #7		[Network]			
▶ CSM parameters					
▶ UEFI Hard Disk Drive BBS Priorities					
▶ UEFI NETWORK Drive BBS Priorities					

The system will try to boot from device on top then the 2nd and so on. If there is more than one device in each category, only the device on top of sub-menu can boot up.

Boot Menu Selections

You can make the following selections on the Boot menu.

Feature	Options	Description
Boot mode select	LEGACY UEFI	Select boot mode LEGACY/UEFI
Boot Option #1	Hard Disk: Windows Boot Manager CD/DVD USB Hard Disk USB CD/DVD USB Key USB Floppy Network Disabled	Sets the system boot order

Boot Option #2	Hard Disk: Windows Boot Manager CD/DVD USB Hard Disk USB CD/DVD USB Key USB Floppy Network Disabled	Sets the system boot order
Boot Option #3	Hard Disk: Windows Boot Manager CD/DVD USB Hard Disk USB CD/DVD USB Key USB Floppy Network Disabled	
Boot Option #4	Hard Disk: Windows Boot Manager CD/DVD USB Hard Disk USB CD/DVD USB Key USB Floppy Network Disabled	
Boot Option #5	Hard Disk: Windows Boot Manager CD/DVD USB Hard Disk USB CD/DVD USB Key USB Floppy Network Disabled	
Boot Option #6	Hard Disk: Windows Boot Manager CD/DVD USB Hard Disk USB CD/DVD USB Key USB Floppy Network Disabled	

Boot Option #7	Hard Disk: Windows Boot Manager CD/DVD USB Hard Disk USB CD/DVD USB Key USB Floppy Network Disabled	
CSM parameters	Launch CSM Boot option filter Launch PXE OpROM policy Launch Storage OpROM policy Launch Video OpROM policy Other PCI device ROM priority	OpROM execution, boot options filter, etc
UEFI Hard Disk Drive BBS Priorities	Boot Option #1 [Windows Boot Manager] Boot Option #2 [Windows Boot Manager]	Sets the system boot order
UEFI NETWORK Drive BBS Priorities	Boot Option #1 [UEFI: IP6 Intel] Boot Option #2 [UEFI: IP4 Intel]	Sets the system boot order

Note:

- *IPv6 is supported only under UEFI mode, while IPv4 can be supported under both UEFI and Legacy mode.*

Security Menu

Aptio Setup Utility							
Main	Advanced	Chipset	Boot				
			Security				
			Save & Exit				
<p>Password Description</p> <p>If ONLY the Administrator's password is set, then this only limits access to Setup and is only asked for when entering Setup.</p> <p>If ONLY the User's password is set, then this is a power on password and must be entered to boot or enter Setup. In Setup the User will have Administrator rights.</p> <p>The password length must be in the following range;</p> <table border="0"> <tr> <td>Minimum length</td> <td style="text-align: center;">3</td> </tr> <tr> <td>Maximum length</td> <td style="text-align: center;">20</td> </tr> </table> <p>Administrator Password User Password</p> <p>Secure Boot menu</p> <p>HDD Security Configuration: PO: INTEL SSDSC2</p>			Minimum length	3	Maximum length	20	<p>Set Administrator Password</p> <hr/> <p>→←: Select Screen ↑↓: Select Item Enter: Select -/+ : Change Opt. F1: General Help F2: Previous Values F3: Optimized Defaults F4: Save & Exit ESC: Exit</p>
Minimum length	3						
Maximum length	20						

Save & Exit Menu

Aptio Setup Utility					
Main	Advanced	Chipset	Boot	Security	Save & Exit
Save Changes and Exit Discard Changes and Exit Save Changes and Reset Discard Changes and Reset				Exit system setup after saving the changes	
Save Options Save Changes Discard Changes Restore Defaults Save as User Defaults Restore User Defaults				→←: Select Screen ↑↓: Select Item Enter: Select -/+: Change Opt. F1: General Help F2: Previous Values F3: Optimized Defaults F4: Save & Exit ESC: Exit	
Boot Override Windows Boot Manager					

Chapter Five - Drivers and Applications

(Preliminary info)

The Utility DVD includes all the drivers for the installed devices in your computer. Please consult the dealer if there is any driver missing. Also, through Device Manager in Windows, you are able to perform "Driver Update" or check if there are still drivers for the devices needed to be installed. Please check the readme file on Utility DVD to get the latest information before installing device drivers.

Note:

- *Please install the chipset driver first.*
- *If the system requests for reboot after installing drivers, please reboot your computer first before installing other drivers.*

Chipset

Windows 8.1/Ultimate 64-bit:

Run "infinst_autol.exe" in the directory of "\\Drivers\\Chipset\\Windows 8_1", and then follow the instructions to install.

Windows 8.1/Ultimate 32-bit:

Run "infinst_autol.exe" in the directory of "\\Drivers\\Chipset\\Windows 8_1", and then follow the instructions to install.

Windows 8/Ultimate 64-bit:

Run "infinst_autol.exe" in the directory of "\\Drivers\\Chipset\\Windows 8", and then follow the instructions to install.

Windows 8/Ultimate 32-bit:

Run "infinst_autol.exe" in the directory of "\\Drivers\\Chipset\\Windows 8", and then follow the instructions to install.

Windows7/Ultimate 64-bit:

Run "Setup.exe" in the directory of "\\Drivers\\Chipset\\Windows 7", and then follow the instructions to install.

Windows7/Ultimate 32-bit:

Run "Setup.exe" in the directory of "\\Drivers\\Chipset\\Windows 7", and then follow the instructions to install.

VGA

Windows 8.1/Ultimate 64-bit:

Run "Setup.exe" in the directory of "\\Drivers\VGA(Intel_HD4000)\Windows 8_1 (64-bit)\win64_153322", and then follow the instructions to install.

Windows 8.1/Ultimate 32-bit:

Run "Setup.exe" in the directory of "\\Drivers\VGA(Intel_HD4000)\Windows 8_1 (32-bit)\win64_153322", and then follow the instructions to install.

Windows 8/Ultimate 64-bit:

Run "Setup.exe" in the directory of "\\Drivers\VGA(Intel_HD4000)\Windows 8 (64-bit)\Win64_15313", and then follow the instructions to install.

Windows 8/Ultimate 32-bit:

Run "Setup.exe" in the directory of "\\Drivers\VGA(Intel_HD4000)\Windows 8 (32-bit)\Win32_15313", and then follow the instructions to install.

Windows 7/Ultimate 64-bit:

Run "Setup.exe" in the directory of "\\Drivers\VGA(Intel_HD4000)\Windows 7 (64-bit)\Win64_15319", and then follow the instructions to install.

Windows 7/Ultimate 32-bit:

Run "Setup.exe" in the directory of "\\Drivers\VGA(Intel_HD4000)\Windows 7 (32-bit)\Win32_15319", and then follow the instructions to install.

Audio

Windows 8.1/Ultimate 64-bit:

Run "Setup.exe" in the directory of "\\Drivers\Audio\Windows 7_8_8.1\Win7_Win8_Win81_R273", and then follow the instructions to install.

Windows 8.1/Ultimate 32-bit:

Run "Setup.exe" in the directory of "\\Drivers\Audio\Windows 7_8_8.1\6777_PG360_Win8_Win7_Vista_XP", and then follow the instructions to install.

Windows 8/Ultimate 64-bit:

Run "Setup.exe" in the directory of "\\Drivers\Audio\Windows 7_8\6777_PG360_Win8_Win7_Vista_XP", and then follow the instructions to install.

Windows 8/Ultimate 32-bit:

Run "Setup.exe" in the directory of "\\Drivers\Audio\Windows 7_8\6777_PG360_Win8_Win7_Vista_XP", and then follow the instructions to install.

Windows 7/Ultimate 64-bit:

Run "Setup.exe" in the directory of "\\Drivers\Audio\Windows 7_8\6777_PG360_Win8_Win7_Vista_XP", and then follow the instructions to install.

Windows 7/Ultimate 32-bit:

Run "Setup.exe" in the directory of "\\Drivers\Audio\Windows 7_8\6777_PG360_Win8_Win7_Vista_XP", and then follow the instructions to install.

Intel ME

Windows 8.1/Ultimate 64-bit:

Run "Setup.exe" in the directory of "\\Drivers\\Intel_ME_8.1\\Windows 7_8_8.1", and then follow the instructions to install.

Windows 8.1/Ultimate 32-bit:

Run "Setup.exe" in the directory of "\\Drivers\\Intel_ME_8.1\\Windows 7_8_8.1", and then follow the instructions to install.

Windows 8/Ultimate 64-bit:

Run "Setup.exe" in the directory of "\\Drivers\\Intel_ME_8.1\\Windows 7_8", and then follow the instructions to install.

Windows 8/Ultimate 32-bit:

Run "Setup.exe" in the directory of "\\Drivers\\Intel_ME_8.1\\Windows 7_8", and then follow the instructions to install.

Windows 7/Ultimate 64-bit:

Run "Setup.exe" in the directory of "\\Drivers\\Intel_ME_8.1\\Windows 7_8", and then follow the instructions to install.

Windows 7/Ultimate 32-bit:

Run "Setup.exe" in the directory of "\\Drivers\\Intel_ME_8.1\\Windows 7_8", and then follow the instructions to install.

Intel Rapid Storage Technology

Windows 8.1/Ultimate 64-bit:

Run "SetupRST.exe" in the directory of "Drivers\Intel Rapid Storage Technology\Windows 7_8_81\12.9", and then follow the instructions to install.

Windows 8.1/Ultimate 32-bit:

Run "SetupRST.exe" in the directory of "Drivers\Intel Rapid Storage Technology\Windows 7_8_81\12.9", and then follow the instructions to install.

Windows 8/Ultimate 64-bit:

Run "SetupRST.exe" in the directory of "Drivers\Intel Rapid Storage Technology\Windows 7_8", and then follow the instructions to install.

Windows 8/Ultimate 32-bit:

Run "SetupRST.exe" in the directory of "Drivers\Intel Rapid Storage Technology\Windows 7_8", and then follow the instructions to install.

Windows 7/Ultimate 64-bit:

Run "SetupRST.exe" in the directory of "Drivers\Intel Rapid Storage Technology\Windows 7_8", and then follow the instructions to install.

Windows 7/Ultimate 32-bit:

Run "SetupRST.exe" in the directory of "Drivers\Intel Rapid Storage Technology\Windows 7_8", and then follow the instructions to install.

Wireless Power Manager

Windows 8.1/Ultimate 64-bit:

Run "setup.exe" in the directory of "\\Utilities\10_0_2_5\", and then follow the instructions to install.

Windows 8.1/Ultimate 32-bit:

Run "setup.exe" in the directory of "\\Utilities\10_0_2_5\", and then follow the instructions to install.

Windows 8/Ultimate 64-bit:

Run "setup.exe" in the directory of "\\Utilities\10_0_2_5\", and then follow the instructions to install.

Windows 8/Ultimate 32-bit:

Run "setup.exe" in the directory of "\\Utilities\10_0_2_5\", and then follow the instructions to install.

Windows 7/Ultimate 64-bit:

Run "setup.exe" in the directory of "\\Utilities\10_0_2_5\", and then follow the instructions to install.

Windows 7/Ultimate 32-bit:

Run "setup.exe" in the directory of "\\Utilities\10_0_2_5\", and then follow the instructions to install.

Touch Pad

Windows 8.1/Ultimate 64-bit:

Run "Setup.exe" in the directory of "\\Drivers\Touch Pad (ETD)\Windows 7_8_8.1\ETD11.10.13.6_ps2drv_WHQL", and then follow the instructions to install.

Windows 8.1/Ultimate 32-bit:

Run "Setup.exe" in the directory of "\\Drivers\Touch Pad (ETD)\Windows 7_8_8.1\ETD11.10.13.6_ps2drv_WHQL", and then follow the instructions to install.

Windows 8/Ultimate 64-bit:

Run "Setup.exe" in the directory of "\\Drivers\Touch Pad (ETD)\Windows 7_8\ETD11.10.13.6_ps2drv_WHQL", and then follow the instructions to install.

Windows 8/Ultimate 32-bit:

Run "Setup.exe" in the directory of "\\Drivers\Touch Pad (ETD)\Windows 7_8\ETD11.10.13.6_ps2drv_WHQL", and then follow the instructions to install.

Windows 7/Ultimate 64-bit:

Run "Setup.exe" in the directory of "\\Drivers\Touch Pad (ETD)\Windows 7_8\ETD11.10.13.6_ps2drv_WHQL", and then follow the instructions to install.

Windows 7/Ultimate 32-bit:

Run "Setup.exe" in the directory of "\\Drivers\Touch Pad (ETD)\Windows 7_8\ETD11.10.13.6_ps2drv_WHQL", and then follow the instructions to install.

Turbo Boost Monitor

Windows 8.1/Ultimate 64-bit:

Run "Setup.exe" in the directory of "\\Drivers\\Turbo Boost Monitor\\Windows 7_8_8.1", and then follow the instructions to install.

Windows 8.1/Ultimate 32-bit:

Run "Setup.exe" in the directory of "\\Drivers\\Turbo Boost Monitor\\Windows 7_8_8.1", and then follow the instructions to install.

Windows 8/Ultimate 64-bit:

Run "Setup.exe" in the directory of "\\Drivers\\Turbo Boost Monitor\\Windows 7_8", and then follow the instructions to install.

Windows 8/Ultimate 32-bit:

Run "Setup.exe" in the directory of "\\Drivers\\Turbo Boost Monitor\\Windows 7_8", and then follow the instructions to install.

Windows 7/Ultimate 64-bit:

Run "Setup.exe" in the directory of "\\Drivers\\Turbo Boost Monitor\\Windows 7_8", and then follow the instructions to install.

Windows 7/Ultimate 32-bit:

Run "Setup.exe" in the directory of "\\Drivers\\Turbo Boost Monitor\\Windows 7_8", and then follow the instructions to install.

Gigabit LAN

Windows 8.1/Ultimate 64-bit:

Run "PROWinx64.exe" in the directory of "\\Drivers\\Intel_82579LM\\Windows 8_1 (64-bit)", and then follow the instructions to install.

Windows 8.1/Ultimate 32-bit:

Run "PROWinx32.exe" in the directory of "\\Drivers\\Intel_82579LM\\Windows 8_1 (32-bit)", and then follow the instructions to install.

Windows 8/Ultimate 64-bit:

Run "PROWinx64.exe" in the directory of "\\Drivers\\Intel_82579LM\\Windows 8 (64-bit)", and then follow the instructions to install.

Windows 8/Ultimate 32-bit:

Run "PROWinx32.exe" in the directory of "\\Drivers\\Intel_82579LM\\Windows 8 (32-bit)", and then follow the instructions to install.

Windows 7/Ultimate 64-bit:

Run "PROWinx64.exe" in the directory of "\\Drivers\\Intel_82579LM\\Windows 7 (64-bit)", and then follow the instructions to install.

Windows 7/Ultimate 32-bit:

Run "PROWin32.exe" in the directory of "\\Drivers\\Intel_82579LM\\Windows 7 (32-bit)", and then follow the instructions to install.

2nd Gigabit LAN (Option)

Windows 8/Ultimate 64-bit:

Run "PROWinx64.exe" in the directory of "\\Drivers\Intel_82574L\Windows 8 (64-bit)", and then follow the instructions to install.

Windows 8/Ultimate 32-bit:

Run "PROWin32.exe" in the directory of "\\Drivers\Intel_82574L\Windows 8 (32-bit)", and then follow the instructions to install.

Windows 7/Ultimate 64-bit:

Run "PROWinx64.exe" in the directory of "\\Drivers\Intel_82574L\Windows 7 (64-bit)", and then follow the instructions to install.

Windows 7/Ultimate 32-bit:

Run "PROWin32.exe" in the directory of "\\Drivers\Intel_82574L\Windows 7 (32-bit)", and then follow the instructions to install.

Note:

- *Intel 82574 driver supports Windows 7/Windows 8.*

WiFi (Option)

Windows 8.1/Ultimate 64-bit:

Run "Wireless_15.6_De64.exe" in the directory of "\\Drivers\Mini PCI-E WiFi 6235\Windows 8_1 (64-bit)", and then follow the instructions to install.

*: Then into the "Wireless Power Manager" to turn on the WLAN device.

Windows 8.1/Ultimate 32-bit:

Run "Wireless_15.6_De32.exe" in the directory of "\\Drivers\Mini PCI-E WiFi 6235\Windows 8_1 (32-bit)", and then follow the instructions to install.

*: Then into the "Wireless Power Manager" to turn on the WLAN device.

Windows 8/Ultimate 64-bit:

Run "Wireless_15.6_De64.exe" in the directory of "\\Drivers\Mini PCI-E WiFi 6235\Windows 8 (64-bit)", and then follow the instructions to install.

*: Then into the "Wireless Power Manager" to turn on the WLAN device.

Windows 8/Ultimate 32-bit:

Run "Wireless_15.6_De32.exe" in the directory of "\\Drivers\Mini PCI-E WiFi 6235\Windows 8 (32-bit)", and then follow the instructions to install.

*: Then into the "Wireless Power Manager" to turn on the WLAN device.

Windows 7/Ultimate 64-bit:

Run "Wireless_15.3.1_Ds64.exe" in the directory of "\\Drivers\Mini PCI-E WiFi 6235\Windows 7 (64-bit)", and then follow the instructions to install.

*: Then into the "Wireless Power Manager" to turn on the WLAN device.

Windows 7/Ultimate 32-bit:

Run "Wireless_15.3.1_Ds32.exe" in the directory of "\\Drivers\Mini PCI-E WiFi 6235\Windows 7 (32-bit)", and then follow the instructions to install.

*: Then into the "Wireless Power Manager" to turn on the WLAN device.

Bluetooth (Option)

Windows 8.1/Ultimate 64-bit:

*: First into the "Wireless Power Manager" to turn on the Bluetooth device.
Run "BT_2.6.1211_e64.exe" in the directory of "\\Drivers\Bluetooth\Windows 8_1 (64-bit)", and then follow the instructions to install.

Windows 8.1/Ultimate 32-bit:

*: First into the "Wireless Power Manager" to turn on the Bluetooth device.
Run "BT_2.6.1211_e32.exe" in the directory of "\\Drivers\Bluetooth\Windows 8_1 (32-bit)", and then follow the instructions to install.

Windows 8/Ultimate 64-bit:

*: First into the "Wireless Power Manager" to turn on the Bluetooth device.
Run "BT_2.6.1211_e64.exe" in the directory of "\\Drivers\Bluetooth\Windows 8 (64-bit)", and then follow the instructions to install.

Windows 8/Ultimate 32-bit:

*: First into the "Wireless Power Manager" to turn on the Bluetooth device.
Run "BT_2.6.1211_e32.exe" in the directory of "\\Drivers\Bluetooth\Windows 8 (32-bit)", and then follow the instructions to install.

Windows 7/Ultimate 64-bit:

*: First into the "Wireless Power Manager" to turn on the Bluetooth device.
Run "BT_2.2_s64.exe" in the directory of "\\Drivers\Bluetooth\Windows 7 (64-bit)", and then follow the instructions to install.

Windows 7/Ultimate 32-bit:

*: First into the "Wireless Power Manager" to turn on the Bluetooth device.
Run "BT_2.2_s32.exe" in the directory of "\\Drivers\Bluetooth\Windows 7 (32-bit)", and then follow the instructions to install.

GPS (Option)

Windows 8.1/Ultimate 64-bit:

*: First into the "Wireless Power Manager" to turn on the GPS device.
Run "ubloxGnss_sensor_windows_3264_v2.1.0.5.exe" in the directory of "\Drivers\GPS(u-blox)\Windows 7_8_8.1", and then follow the instructions to install.

Windows 8.1/Ultimate 32-bit:

*: First into the "Wireless Power Manager" to turn on the GPS device.
Run "ubloxGnss_sensor_windows_3264_v2.1.0.5.exe" in the directory of "\Drivers\GPS(u-blox)\Windows 7_8_8.1", and then follow the instructions to install.

Windows 8/Ultimate 64-bit:

*: First into the "Wireless Power Manager" to turn on the GPS device.
Run "ubloxGnss_sensor_windows_3264_v2.1.0.5.exe" in the directory of "\Drivers\GPS(u-blox)\Windows 7_8", and then follow the instructions to install.

Windows 8/Ultimate 32-bit:

*: First into the "Wireless Power Manager" to turn on the GPS device.
Run "ubloxGnss_sensor_windows_3264_v2.1.0.5.exe" in the directory of "\Drivers\GPS(u-blox)\Windows 7_8", and then follow the instructions to install.

Windows 7/Ultimate 64-bit:

*: First into the "Wireless Power Manager" to turn on the GPS device.
Run "ubloxGnss_sensor_windows_3264_v2.1.0.5.exe" in the directory of "\Drivers\GPS(u-blox)\Windows 7_8", and then follow the instructions to install.

Windows 7/Ultimate 32-bit:

*: First into the "Wireless Power Manager" to turn on the GPS device.
Run "ubloxGnss_sensor_windows_3264_v2.1.0.5.exe" in the directory of "\Drivers\GPS(u-blox)\Windows 7_8", and then follow the instructions to install.

TPM (Option)

Windows 8.1/Ultimate 64-bit:

*: First into the "BIOS" to turn on the TPM device.

Run "Setup.exe" in the directory of "\\Drivers\TPM\Windows 7_8_8.1", and then follow the instructions to install.

Windows 8.1/Ultimate 32-bit:

*: First into the "BIOS" to turn on the TPM device.

Run "Setup.exe" in the directory of "\\Drivers\TPM\Windows 7_8_8.1", and then follow the instructions to install.

Windows 8/Ultimate 64-bit:

*: First into the "BIOS" to turn on the TPM device.

Run "Setup.exe" in the directory of "\\Drivers\TPM\Windows 7_8", and then follow the instructions to install.

Windows 8/Ultimate 32-bit:

*: First into the "BIOS" to turn on the TPM device.

Run "Setup.exe" in the directory of "\\Drivers\TPM\Windows 7_8", and then follow the instructions to install.

Windows 7/Ultimate 64-bit:

*: First into the "BIOS" to turn on the TPM device.

Run "Setup.exe" in the directory of "\\Drivers\TPM\Windows 7_8", and then follow the instructions to install.

Windows 7/Ultimate 32-bit:

*: First into the "BIOS" to turn on the TPM device.

Run "Setup.exe" in the directory of "\\Drivers\TPM\Windows 7_8", and then follow the instructions to install.

USB3.0 (For Windows 7)

Windows 7/Ultimate 64-bit:

Run "Setup.exe" in the directory of "\Drivers\USB3.0\Windows 7\Intel(R) USB 3.0 eXtensible Host Controller Driver PV(HF7) 1.0.7.248", and then follow the instructions to install.

Windows 7/Ultimate 32-bit:

Run "Setup.exe" in the directory of "\Drivers\USB3.0\Windows 7\Intel(R) USB 3.0 eXtensible Host Controller Driver PV(HF7) 1.0.7.248", and then follow the instructions to install.

Note:

- *USB3.0 driver is required when RW11 installs Windows 7.*

Chapter Six - Specifications

Platform

- Intel® Chief River Platform

CPU

- Intel® Core™ i7-3610QE 2.3GHz Processor with Turbo Boost Technology up to 3.3 (6MB Intel® Smart Cache Memory)

PCH

- Mobile Intel® QM77 Express Chipset

Memory

- DDR3L, up to 32GB
- SO-DIMM x 4

Graphic

- Intel® HD Graphics 4000
- Optional nVIDIA® GeForce® GT950M 2GB discrete graphic add-on card

Display

- Type: 15.6" TFT LCD FHD (1920 x 1080)
- Brightness: 800 nits (typ.)
- AG Glass
- Optical Bonding
- Optional Capacitive touch screen

Keyboard

- 87-Key LED backlight membrane keyboard with integrated numeric

Touchpad

- Type:
 - Multi-touch Capacitive Touchpad
 - Single Resistive Touchpad

Storage

- Standard: 1st SATAIII SSD (Left side)
- Optional:
 - 2nd SATAIII SSD (Left side)
 - 3rd~4th SATAII SSD (Right side)

I/O Ports

Left:

- USB 3.0 x 1 (with fast charging)
- USB 3.0 x 1
- Microphone (Mini Jack) x 1
- Audio output (Mini Jack) x 1
- Line-in Jack (Mini Jack) x 1

Right:

- USB 2.0 x 2
- GLAN x 1
- Optional 2nd GLAN x 1

Rear:

- DC-in Connector x 1 (Military 2-pin)
- Display port x 1
- VGA x 1
- Serial DB9 x 4 (Default: COM1~4)

Bottom:

- D/U port x 1

Note:

- 1 x USB3.0 with USB-IF BC V1.2 for 1.5A fast charger
- The DockUnder port will be installed under the base. Signals include:
PCI-e x 1, USB3.0 x 1, USB2.0 x 1, +VA, +V3.3A, +5S, +V_{Bata},
+USB5V3, GND

Power

Battery Pack(BRWB3A):

- Type: Lithium Ion battery
- Capacity: 10.8V 5800mAh x 2
- Dimension: **TBD**
- Weight: 330g (**TBD**)

AC Adapter:

- AC Input: 100 - 240V
- Frequency: 50/60Hz
- DC Output: 19V/10.5A
- Maximum Power: 200 Watts

DC-in:

- Standard DC-in 19V
- Optional DC-in 12~32V

System Unit Dimensions and Weight

- Dimensions (mm):
392 (L) x 300 (W) x 42.5 (H) (with Bumper)
382 (L) x 295 (W) x 38.5 (H) (without Bumper)
- Weight: 4.7kg

Note:

- *Weight includes battery pack x2 & SSD x1 (Battery pack 330g, SSD 61g)*
- *Weight varies depending on system configurations.*

Materials and Recycling

(Preliminary info.)

Materials of the computer are as follows:

- Plastic Case: Recyclable UL grade PC + ABS GE C2800 or C6200
- Aluminum Case: AL6061T6
- Bracket: Aluminum 5052, Steel with nickel plating, stainless steel S304
- Cushion Pad/Button: Natural Rubber
- PCB: FR-4, UL 94V0
- Battery: Rechargeable Li-polymer
- Packing: Carton- Recycled/Recyclable Paper (unbleached)
Cushion- Recyclable EPE
Quick Guide- Recycled/Recyclable Paper

Please recycle the parts according to the local regulations.

Case

- CNC milled Aluminum
- Black/Nato Green

Environmental Specifications

- | | | |
|----------------|------------------------------------|-----------|
| ● Temperature: | Std. -20 ~ +60°C (-4 ~ +140°F) | operating |
| | Opt. -30 ~ +60°C (-22 ~ +140°F) | operating |
| ● Humidity: | -40 ~ +70°C (-40 ~ +158°F) | storage |
| | 5~95% Non-condensing | operating |
| ● Altitude: | 95% maximum | storage |
| | 0 ~ 4,572 meters (0 ~ 15,000 feet) | operating |

Note:

- Add heater on MB/LCD for optional operating temperature. *(TBD)*

Certifications

CE, FCC, WEEE, REACH, RoHS2.0, IP65, MIL-STD-810G, MIL-STD-461F

Chapter Seven - Optional Devices

Communication

- WiFi/Bluetooth:
 - Intel® Centrino® Advanced-AC 7260, Dual Band
 - Board Form Factor: PCIe Half Mini Card
 - Wi-Fi Certified: 802.11 ac/a/b/g/n
 - Bluetooth: Supports BT 2.1, 2.1+EDR, 3.0, 3.0+HS, 4.0 (BLE)
 - Interface: PCIe (WiFi)/USB (BT)
- GPS: u-blox Neo-M8N GPS/GLONASS (USB interface)

Memory

The memory card will expand your memory to facilitate better system performance. Industrial grade DDR3L SO-DIMM x 4 are available, supporting 4GB or 8GB DDR3L 1600 memory.

BVA Module

BVA, Built-in Adapter, is an optional module installed in the computer. The module features in converting power from car lighters or truck batteries to DC +19V, conveniently for operating the computer in vehicles without worrying about power shortage.

Trust Platform Module (TPM)

There is an optional Trust Platform Module (TPM) equipped with the computer for users to strengthen the data and information security.

With TPM, users are able to encrypt the folders and files directly and make the important file be more secure and be with an additional protection. In other words, your TPM-encrypted files are basically protected with two layers. Even if your TPM-encrypted files are hacked, the files can not to be read without passwords and TPM chipset.

Chapter Eight - Maintenance and Service

Cleaning

ALWAYS turn OFF the power, unplug the power cord and remove the battery before cleaning.

The exterior of the system and display may be wiped with a clean, soft, and lint-free cloth. If there is difficulty removing dirt, apply non-ammonia, non-alcohol based glass cleaner to the cloth and wipe.

An air gun is recommended for cleaning water and dust. For salty water please clean with fresh water then blow-dry with an air gun. Be sure not to turn the computer upside-down while there is water being applied.

Troubleshooting

Should the computer fail to function properly, the troubleshooting steps below may be followed.

- Check AC/vehicle adapter, battery, and the power source.
- Minimize the configuration, i.e. remove extra peripherals and devices.
- Remove the software suspected.
- Set BIOS fail-safe default.
- Re-install operating system and application software.

RMA Service

If troubleshooting steps are unsuccessful, consult your dealer for RMA.

Shipping instructions:

1. Remove any personal disks or other media.
2. Use the original shipping container and packing materials, if possible.
3. If the original packing materials are not available, wrap the equipment with soft material (e.g. PU/PE form) then put the wrapped equipment into a hard cardboard shipping box.
4. Include a sheet with the following information: (Note: Please keep a copy of this sheet for your records)
 - Name
 - Address
 - Unit serial number
 - Place and date of purchase or the original invoice number
 - Date of failure
 - A DETAILED Description of the problems you have encountered
 - A list of the hardware/software configuration, if applicable.
5. Clearly mark the outside of the shipping box with the RMA #. If RMA # is not present on the shipping box, receiving will be unable to identify it and it might be returned.
6. Unless prior arrangements have been made, the customer is responsible for all shipping costs. Unauthorized use of the company's shipping accounts is not permitted.