 




# OPERATOR'S MANUAL

**Cat. No.  
C12-28 DCR**

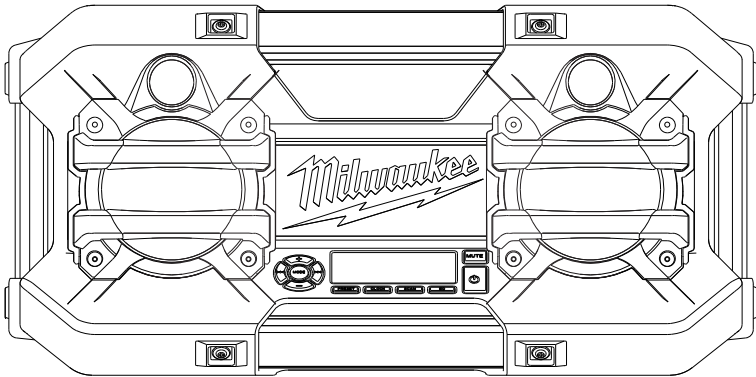






## **Job Site Radio**

***TO REDUCE THE RISK OF INJURY, USER MUST READ AND UNDERSTAND OPERATOR'S MANUAL.***



## SYMBOLGY

	To reduce the risk of injury, user must read operator's manual.
<b>V</b>	Volts
	Alternating Current
<b>A</b>	Amps
<b>Hz</b>	Hertz
	Double Insulated
	Presence of important operating instructions.
	Caution. Risk of electric shock.



## SPECIFICATIONS

Cat. No.	AC Volts	AC Amps
<b>C12-28 DCR</b>	220-240V	1

## EXTENSION CORDS

Double insulated tools can use a three wire extension cord. As the distance from the supply outlet increases, you must use a heavier gauge extension cord. Using extension cords with inadequately sized wire causes a serious drop in voltage, resulting in loss of power and possible tool damage. Refer to the table shown to determine the required minimum wire size.

When using more than one extension cord to make up the total length, be sure each cord contains at least the minimum wire size required. If you are using one extension cord for more than one tool, add the nameplate amperes and use the sum to determine the required minimum wire size.

	<b>CAUTION</b> <b>RISK OF ELECTRIC SHOCK</b> <b>DO NOT OPEN</b>	
<p>CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.</p>		

 
 
 
 


The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

## FUNCTIONAL DESCRIPTION

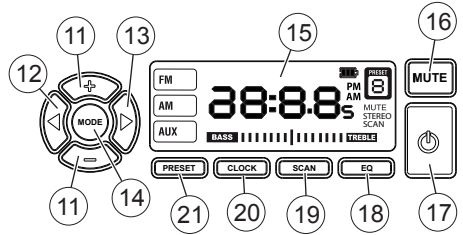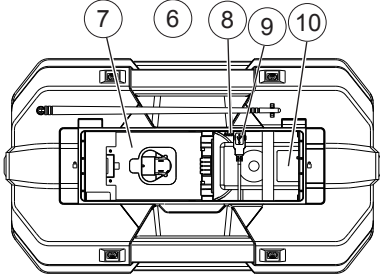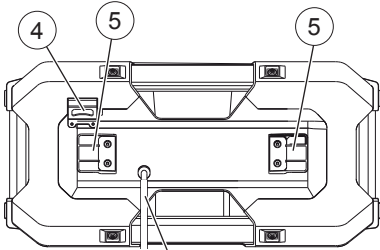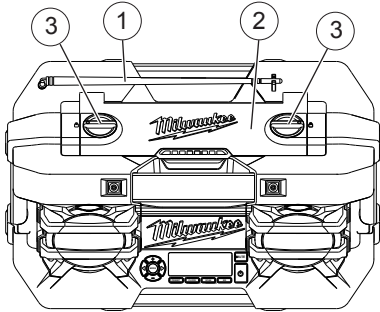

1. Antenna
2. Battery/auxiliary compartment
3. Compartment latches
4. Bottle opener
5. Cord wrap
6. Cord
7. Battery bays
8. Stereo AUX jack
9. USB power outlet
10. AUX storage
11. Volume control
12. Seek/adjust down
13. Seek/adjust up
14. Mode button
15. Display
16. Mute button
17. On/off button
18. EQ button
19. Scan button
20. Clock button
21. Preset button
22. Backup-battery compartment (not shown)

## ASSEMBLY

 
**⚠ WARNING** Recharge only with the charger specified for the battery. For specific charging instructions, read the operator's manual supplied with your charger and battery.

### Inserting/Removing Battery Pack

Turn the compartment latches to unlock and open the battery/auxiliary compartment.

Insert the battery pack by sliding it into the appropriate battery bay.

To remove the battery pack, pull the battery pack off of the bay.

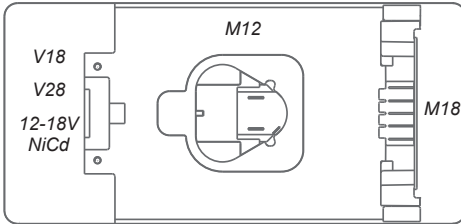

### Battery Indicator

When the radio is powered by a battery pack, the battery indicator is displayed.

 Battery pack installed

 Charge battery pack/Battery pack not installed

### Battery Pack Protection

To protect the life of the battery pack, the radio will shut off when the battery's charge becomes too low. If this happens, remove the battery pack and charge it according to the charger's instructions.

### Installing an Auxiliary Device

Open the Auxiliary Compartment to connect an MP3 player, CD player, or other audio device using the stereo auxiliary jack. Small devices (less than 63.5mm wide, 127mm high, and 15.88mm thick) can be stored in the compartment during use.

### USB Power Outlet

This jack can be used to charge a cell phone, power a CD player or any other device that uses less than 500 mA of DC electrical current. CHARGING WILL ONLY OCCUR WHEN THE RADIO IS PLUGGED INTO AN OUTLET. USB POWER OUTLET WILL NOT CHARGE WHEN THE RADIO IS RUNNING OFF OF A BATTERY PACK.

**NOTE:** Any device that uses more than 500 mA of DC electrical current will trip a self-resetting function and disable the output.



**⚠ WARNING** Batteries may leak chemicals or may explode if used incorrectly. The following care should be taken to prevent such an incident:

 
- Make sure the positive (+) and negative (-) battery terminals are positioned correctly.
- Do not mix new and old batteries together, or mix different types of batteries.
- Do not try to recharge non-rechargeable batteries.

If chemicals from the batteries come in contact with your skin, wash them off immediately with water. If chemicals leak onto the radio, clean the radio completely.

### Changing Back-up Batteries

To hold station presets and clock time when the battery pack is removed and the radio is unplugged, 2 AA batteries are required.

1. Remove battery pack and unplug radio.
2. Remove the screw and battery cover.
3. Insert two (2) AA batteries according to matching positive (+) and negative (-) marks.
4. Replace the battery cover and screw.

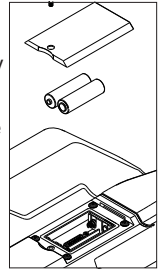


## OPERATION

**⚠ WARNING** Always remove battery pack before changing or removing accessories. Only use accessories specifically recommended for this radio. Others may be hazardous.

**⚠ WARNING** To reduce the risk of fire or electric shock, do not expose this radio to rain or moisture.

### Turning On/Off

Plug the cord into an appropriate AC outlet or install a suitable battery pack.

Press the Power  button to turn the radio on and off. The radio station (frequency) is displayed. To display the time, press the CLOCK button.

### Volume

Use the  $-/+$  to increase or decrease the volume. To instantly silent the radio, press the MUTE button. To return to the set volume, press the MUTE button again.

## Setting the Clock

1. Press and hold the CLOCK button until the hour begins to flash.
2. Use the ◀▶ buttons to change the hour.
3. Press the CLOCK button again. Use the ◀▶ to change the minutes.
4. Press the CLOCK button again to save.

## EQ Adjustment

To manually adjust the Bass/Treble sound, press the EQ button. Set the bass sound using the ◀▶ buttons. Press the EQ button again to set the treble sound, using the ◀▶ buttons.

## Selecting Band

Push the MODE button to select AM, FM, or AUX.

## Tuning (Seeking and Scanning)

Press and hold the ◀▶ buttons to SEEK through the band. When a station is found, the SEEK will stop. Use the SCAN button to continue through the stations, pausing at each.

## PRESET Stations


To **set** the PRESET stations:

1. Tune to desired station.
2. Press and hold the PRESET button until the PRESET indicator on the display begins to flash.
3. Use the ◀▶ buttons to select the PRESET location for the station. Ten locations (0-9) are available.
4. Press the PRESET button to save the location. To **tune** to a PRESET station: Press and release the PRESET button to step through the PRESET stations.

## Using the Stereo AUX Jack


1. Open the Battery/Auxiliary Compartment
2. Plug the auxiliary device into the Stereo AUX jack.
3. Use the MODE button to select AUX.
4. Start the auxiliary device.

## MAINTENANCE

 **WARNING** To reduce the risk of injury, always unplug the charger and remove the battery pack from the charger or tool before performing any maintenance. Never disassemble the tool, battery pack or charger. Contact **milwaukee®** dealer or service centre.

## Maintaining Tool

Keep your tool, battery pack and charger in good repair by adopting a regular maintenance program. If the tool does not start or operate at full power with a fully charged battery pack, clean the contacts on the battery pack. If the tool still does not work properly, return the tool, charger and battery pack, to your local authorised **TISCO®** dealer or service centre

 **WARNING** To reduce the risk of personal injury and damage, never immerse your tool, battery pack or charger in liquid or allow a liquid to flow inside them.

## Cleaning

Clean dust and debris from charger and tool vents. Keep tool handles clean, dry and free of oil or grease. Use only mild soap and a damp cloth to clean the tool, battery pack and charger since certain cleaning agents and solvents are harmful to plastics and other insulated parts. Some of these include gasoline, turpentine, lacquer thinner, paint thinner, chlorinated cleaning solvents, ammonia and household detergents containing ammonia. Never use flammable or combustible solvents around tools.

## Repairs

For repairs, return the tool, battery pack and charger to your local authorised **TISCO®** dealer or service centre for assistance.

## ACCESSORIES

 **WARNING** Always remove battery pack before changing or removing accessories. Only use accessories specifically recommended for this tool. Others may be hazardous.

For a complete listing of accessories refer to your **MILWAUKEE®** Electric Tool catalogue or go online to [milwaukee.tools.com.au](http://milwaukee.tools.com.au) or [milwaukee.tools.co.nz](http://milwaukee.tools.co.nz)

To contain a catalogue, contact your local authorised **TISCO®** dealer or service centre.



**WARRANTY - AUSTRALIA and NEW ZEALAND**

Please refer to the Techtronic Industries Pty. Ltd. Warranty Terms and Conditions for **MILWAUKEE®** products and accessories which is supplied with the tool or kit. This warranty applies only to product purchased from an authorised **MILWAUKEE®** dealer in Australia or New Zealand.

**AUSTRALIA AND NEW ZEALAND  
MILWAUKEE® Service**

**MILWAUKEE®** prides itself in producing a premium quality product that is Nothing But Heavy Duty®. Your satisfaction with our products is very important to us! If you encounter any problems with the operation of this tool, please contact your authorised **MILWAUKEE®** dealer or service centre.

**Milwaukee Electric Tool Corporation**

13135 West Lisbon Road, Brookfield, Wisconsin U.S.A. 53005

**Milwaukee Electric Tool Corporation (Australia)**

Techtronic Industries (Australia) Pty. Ltd.  
Doncaster, Victoria, Australia, 3108

**Milwaukee Electric Tool Corporation (New Zealand)**

Techtronic Industries (New Zealand) Pty. Ltd.  
Mangere, Auckland, New Zealand, 2022