

Prepared by: 刘强龙

Date: 2022.9.9

 
 
Model: SM50B

SIZE: 160*95 mm

USER MANUAL

Model:SM50B

5"HD Video
Baby Monitor

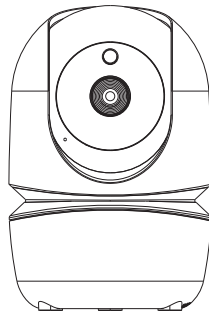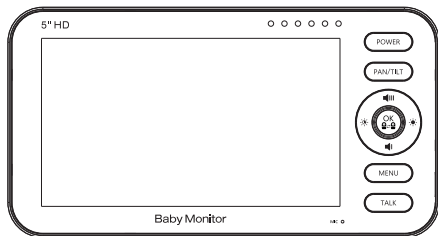


Catch Every Precious Moment Of Your Baby

1.Warning and Safety Instructions

Follow these safety precautions to prevent fire, injury or damage to the product.

Read and keep instructions: it is very important that you read all the safety and operating

 Warnings:

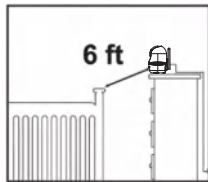

STRANGULATION HAZARD: Children can become entangled in cords. Make sure the **monitor, camera** and mains adapter cables are kept out of reach of you baby and other young children at all times, at least 6 feet away.

CHOKING HAZARD: This product contains small parts which may cause choking. Exercise care when unpacking and assembling the product and keep the small parts away from children.

RISK OF SUFFOCATION: Keep all packaging materials and protective foils out of reach of children.

DANGER FROM POWER CORDS: To avoid possible danger from power cords, the cords should be secured and never be hung on or near the crib. Never place the **camera or monitor** inside your baby's crib, bed or playpen.

DO NOT DROP OR THROW ROUGHLY: Baby monitor is a high-quality electronic device which must be handled with care.

AVOID MOISTURE: The product should not be exposed to rain, moisture, or splashing. Never use or place the product in or near moisture or water.

THIS PRODUCT CANNOT REPLACE ADULT SUPERVISION: Your video monitor is designed to be an aid and should not be used as a substitute for responsible and proper adult supervision of a child.

VENTILATION: This product should not be used on bed, sofa, rug or similar surface that may block the ventilation or speaker openings, and not be placed in an enclosed area, such as a bookcase or drawer that may impede air flow.

Never cover the product with clothes, towels, blankets or any other item.

THIS PRODUCT IS NOT A TOY: It should be kept out of children's reach.

KEEP AWAY FROM SOURCES OF HEAT: This unit should not be exposed to direct heat sources such as a candle, stove, radiator, heat register or other appliance that emit heat. The unit should not be left in direct sunlight.

BATTERY: Before you use the product, we recommend you fully charge the battery of the camera, so that it continues to work if you disconnect it from the power supply to carry it to another location.

INSTALLATION LOCATION: The installation location plays an important role in ensuring proper operation. Therefore, maintain a distance of at least 5 feet from other electronic equipment, such as microwave ovens or Wi-Fi routers, otherwise they could cause interference. If this occurs, put the monitor and camera to another location.

RANGE: Range of all baby monitor is always measured in an open space. The actual range may be shortened due to environmental obstacles (such as concrete walls).

DAMAGE REQUIRING SERVICE: This product should be serviced by qualified personnel only.

DO NOT TRY TO OPEN AND REPAIR THE PRODUCT: If you have any problems with the product, please contact the authorized distributor. In case of unusual noises or smells originating from the device, immediately disconnect the product from the power outlet and contact authorized. If the product becomes dirty, use a lightly damp soft cloth to wipe surfaces, taking care to not allow water into any openings.

IMPORTANT: This baby monitor is designed only for hearing the baby's voice and seeing the images of the baby. This product is not a medical device and should not be used as a substitute for responsible adult supervision. It is important that you regularly check on your baby personally.

1.2 Safty Instructions for AC Power Adapter

The adapter should not be exposed to direct heat sources such as a candle, stove, radiator, heat register or other appliance that emit heat.

During continual use, the power adapters may become warm to the touch. This is normal and should not be a cause of concern. Examine intactness of the power cord and its plug.

The adapter must be handled with care: Do not handle roughly, drop or throw.

When removing the power adapter from the wall outlet, hold and pull from the receptacle.

Do not pull on the cable itself or bend the cable as that will put additional stress on the cable and could lead to damages.

Do not touch the power adapter with wet hands or allow liquids to spill on it.

Make sure the mains adapter cables are kept out of reach of your baby and other children at all times.

To avoid possible danger from power cords, the cords should be secured and never be hung on or near the crib.

Do not replace the plugs or cable on your power adapter. This product should only be used with the AC power adapter supplied by the manufacturer, as included in this package.

Never cut, damage or bend the power cord.

Do not put any objects on top of the power cord, which could cause overheating, damage, combustion and electronicution.

Do not leave the power adapter connected to the wall outlet when it is not plugged into the baby or parent unit.

WARNING:

Do not replace the power cord with non-original substitutes. Improper connection may cause electrocution.

Do not place the AC adaptor cable in a high wear and tear location. Never use a frayed or compromised cord. Intended for indoor use only.

1.3 Safty Instructions for Li-ion battery(Non removable pre-installed battery)

Do not attempt to repair or adjust any of the electrical or mechaniacal functions of the unit.

Do not dismantle,cut,open,crush,bend,puncture,or shred cells or batteries.

If a battery leaks,do not let the battery liquid touch skin or eyes.If this happens,immediately flush the affected areas with water, and seek medical assistance.

The battery should not be exposed to direct sunlight or heat sources such as a candle,stove,radiator,heat register or other appliance that s,emits heat.

Do not modify, remanufacture,insert foreign objects into the battery, or immerse or expose it to water or other liquids. Batteries may explode if damaged.

Use only the battery packed with the product or the **same type that sold** by the manufacturer or its authorized distributors.

Improper use or use of unapproved batteries may **cause** a risk of fire,explosion,or other hazards,and may invalidate the warranty.

 
If you believe the battery is damaged,remove product from the charge and stop using the product.Never use a damaged battery.

1.4 Information on disposal of product

Always dispose of your product(with the non removable pre-installed battery)at the end of their life in an environmentally resposible way and in accordance with your local waste disposal requirements. All cardboard and paper packaging materials should be recycled in accordance with your local council waste regulations.

2. Overview


2.1 Packinkg List

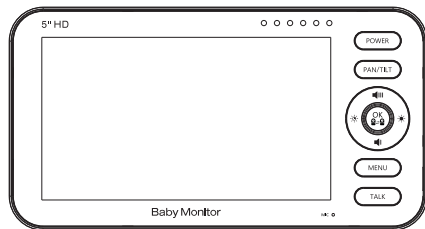

□ □ □ □ □ □

- □ □ □ □ □ □ □ □
- Screw Set x1

 - Camera x 1
- User Manual x 1

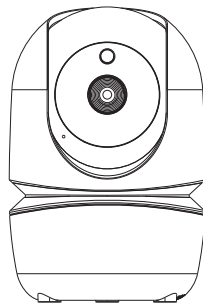

□ □ □ □ □ □

- □ □ □ □ □ □ □ □ □ □ □ □ □ □ □ □
- □



User Manual



AC Power Adapter

 


Screw Set



□ □



2.2 Monitor

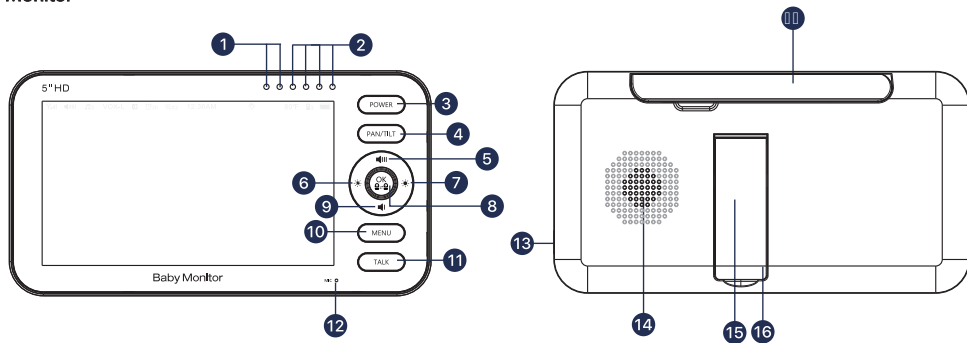

- 1 Power/charging indicator LED:**
 - *The LED shows red when charging under the display is turn off state.
 - *The LED shows orange when charging under the turn on state.
 - *The LED shows green after the battery is fully charged.
- 2 Volume LED:**
 - When the baby unit detects the voice, the indicator light will be on, the louder the detected sound, the more lights will light up
- 3 Power on/off:**
 - Long press to turn on/off the monitor; short press to screen on/off.
- 4 Pan/Tilt:**
 - Press the key **PAN/TILT** to enter into the Pan/Tilt mode.
- 5 Volume  up:**
 - Press Volume+ to increase the volume/Tilt up the camera in the Pan/Tilt mode.

-
- 6 Brightness /Left:**
Press the Brightness- to decrease the brightness/Tilt up the camera in the Pan/Tilt mode.
 - 7 Brightness /Right:**
Press the Brightness+ to increase the brightness/Tilt up the camera in the Pan/Tilt mode.
 - 8 OK/Swift:**
Press the ok key to confirm or view/swift camera.
 - 9 Volume /Down:**
Press Volume- to decrease the volume/Tilt up the camera in the Pan/Tilt mode.
 - 10 Menu:**
Short Press the Menu key the menu will pop up, and press again to Exit.
Press and hold the Menu key around 2 seconds to operate Zoo in/out.
 - 11 Talk to baby:**
To talk, press and hold the talk key on the front of the monitor.
 - 12 MIC:**
When talk to baby, it collects the voices of parents.
 - 13 Type c interface**
Charge the monitor by connecting the Power Adapter to the monitor and a socket.
 - 14 Speaker:**
Hear the sound from the baby.
 - 15 Stand:**
Monitor placement stand.
 - 16 Reset(under the stand):**
Long Press the Reset button with a pin to reset the display
 -  **Antenna**

  2.3 Camera

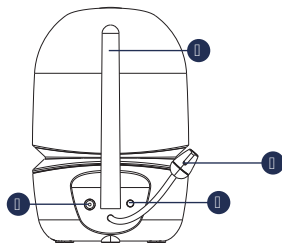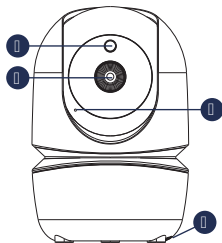


- Light sensor
- CMOS sensor
- MIC
- Speaker
- Antenna
- Temperature sensor
- DC-jack
- Pair key

2.4 Icons Overview

- | | | | | | | | |
|--|-------------------|--|--------------|-------|------------------|---------|-------------------------|
| | ----- Lullaby | | ----- VOX | | ----- Brightness | | ----- Alert Volume |
| | ----- Time Format | | ----- Zoom | | ----- Setting | 50/60Hz | ----- Frequency setting |
| | ----- Timer | | ----- Camera | °C/°F | ----- Temp C/F | | ----- Night Vision |

 3. Getting Started

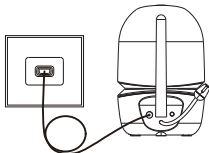


Step1 Connect the AC power adapter with camera. Plug the AC power adapter into power socket.



Step2 Press **POWER** for two seconds to turn on the monitor.



 Step3 Set the monitor to prepare for connecting



Step4 Press the PAIR button for two seconds until there is a ★ before . (the monitor has already been paired with the camera in factory settings.No repeated operation is needed.)

4.Function operation

Lullaby setting

- 1.Press menu button **MENU** to access menu.
choose  and press 
2. Select the lullaby you want to play
- 3.Navigate with  to select the duration and music volume
- 4.In order to stop the lullaby playback,select 
- 5.Press **MENU** to exit the menu.

NOTE:The lullaby default setting is off.

Digital zoom

- 1.Press menu button **MENU** to access menu.
choose  and press 
- 2.Navigate with  to select the desire options
- 3.Press **MENU** to exit the menu

Pair the monitor with the camera

- 1.Press menu button **MENU** to access menu.
choose  and press 
- 2.Navigate with  to select the camera you want to pair.
- 3.Press **MENU** to exit menu.

NOTE:Before you begin pairing,make sure to have the monitor and camera side by side and turned on.

Vox mode

- 1.Press menu button **MENU** to access menu.
choose  and press 
- 2.Navigate with  to select the desire options
- 3.Press **MENU** to exit the menu

NOTE:To resume the video and audio signal manually on your camera when Vox function is on,briefly press any key on your camera.

Split screen set

- 1.Press menu button **MENU** to access menu.
choose  and press 
- 2.Navigate with  to select the desire options
- 3.Press **MENU** to exit the menu

NOTE:This function is only available when two or more cameras are paired

Delete the monitor

- 1.Press menu button **MENU** to access menu.
choose  and press 
- 2.Navigate with  to select the camera you want to delete.
- 3.Press **MENU** to exit menu.

5. Baby monitor setting

Temperature scale setting

1. Press menu button **MENU** to access menu.
choose  and press 
2. Select  and press 
3. Navigate with  to select the desire scale.
4. Press **MENU** to exit menu.

NOTE: Make sure the temperature sensor is not positioned too close to the camera body as it may affect the correct temperature reading. It is recommended to stretch out the sensor, so it is as far away from the camera body as possible. Also, it is recommended to place the camera in an area where there is good air circulation and not in a closed area where the temperature tends to be higher.

Time and time format setting

1. Press menu button **MENU** to access menu.
choose  and press 
2. Select  and press 
3. Navigate with  to select the desire format, and set the time.
4. Press **MENU** to exit menu.

Timer setting

1. Press menu button **MENU** to access menu.
choose  and press 
2. Select  and press 
3. Navigate with  to select the desire time.
4. Press **MENU** to exit menu.

Temperature alert setting

1. Press menu button **MENU** to access menu.
choose  and press 
2. Select  and press 
3. Navigate with  to select the desire options.
4. Press **MENU** to exit menu.

Language setting


1. Press menu button **MENU** to access menu.
choose  and press 
2. Select  Language and press 
3. Navigate with  to select the desire language.
4. Press **MENU** to exit menu.

NOTE: You can choose the following language:

English	Dutch(Nederlands)
French(Francais)	Portuguese(Português)
German(Deutsche)	Russian(Русский)
Italian(Italiano)	Turkey(Türkçe)
Spanish(Español)	


Warning alert volume setting

 1. Press menu button **MENU** to access menu.
choose  and press 
2. Select  Alert and press 
3. Navigate with  to select the desire alert volume.
4. Press **MENU** to exit menu.

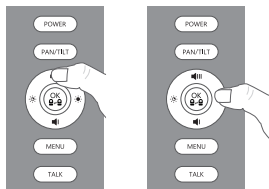

Volume/Brightness adjustments

 Press or to increase/decrease the sound of the camera
 Press or to increase/decrease the brightness of the camera



Switching between the monitor

Briefly press the switch button on your camera



Scan mode

Press and hold the button to activate the automatic scan mode
 Press the button to deactivate the scan mode



Talk to baby

Press and hold the button **TALK** to talk to your baby
 Release the button when finished talking

6.Trouble shooting

Problem	Possible cause/solution
No reception on the camera	• The power adapters may not be properly connected. • Ensure that the monitor and camera are on. • Make sure the monitor and camera are not far away from each other. • Monitor and camera may not be properly paired.Follow pairing instructions.
Interference or poor reception	• Move the monitor closer to camera. • Use of other 2.4GHz product,such as wireless networks(Wi-Fi routers),Blueetooth systems, or microwave ovens,may cause interference with this product, so keep the baby monitor at least 5ft (1.5m)away from these types of products or turn them off if they appear to cause interference. • The monitor or camera may be too close to metal objects. • The battery power may be too low.
Image frozen on the camera	• Restart the monitor (unplug the power adapter from the wall outlet, wait for approx 5 seconds and plug it back into the wall outlet). • Reset the camera by pressing the Reset button(16),located at the back of the camera, under the stand.
A high-pitched is heard from the unit (feedback,static)	• The monitor and camera may be too close to each other.Move them further apart. • THE volume on the camera may be set too high.Lower the volume.
Cannot hear the monitor sounds on the camera	• Volume setting on the camera may be too low.Increase the volume. • Battery power may be too low.Recharge the battery.
Background noises	• In a quiet environment,surrounding the camera,decrease the volume on your parent unit to level 3 and below • In a loud environment,surrounding the camera,increase the volume to the maximum level.

7. Technical data sheet

Frequency	2.4GHz
Type of Modulation	GFSK
Data Rate	4 Mbps
Channel bandwidth	3.3758 MHz
Transmission Range	Up to 960 feet/300 meters (Open space-No obstructions)
Power Adapter (Monitor)	Input:100-240VAC 50/60Hz ; Output: 5V, 1.2A
Power Adapter (Camera)	Input:100-240VAC 50/60Hz ; Output: 5V, 1A
LCD Screen	5.0 HD TFTLCD (1280*720 pixels)
Rechargeable battery (pre-installed in parent unit)	Model:YB905560 3.7V,4000mAh
Transmition Power	18dB
Image Sensor Type	1/4" Color CMOS
IR LED Type	940nm
Operation Enviroment	Indoor use only; Temperature: 32-104°F/0-40°C; Humidity: 5%-90%rh (relative humidity)

8.Maintenance and Warranty

8.1 Maintenance

All of the following maintenance procedures should only be performed when monitor and camera are unplugged and off :

Clean the surfaces of the monitor and camera with a soft, fluff-free cloth.

Never use cleaning agents or solvents.

If the units become dirty,use a lightly damp cloth to wipe surfaces,taking care not to allow water into any openings.

8.2 Warranty terms

We take quality very seriously.This is why all of our products come with three months warranty(replace or refund)and lifetime technical support from the original purchase date against defects in workmanship and materials.The warranty terms do not apply to any product that has been subject to abuse,misuse,negligence or accident.

If you have warranty or support issues,please contact the customer service of seller before leaving your review.

9.Information on disposal of product

Always dispose of your product(with the non removeable pre-installed battery)at the end of their life in an environmentally responsible way and in accordance with your local waste disposal requirements.All cardboard and paper packaging materials should be recycled in accordance with your local council waste regulations.

9.FCC Requirement

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Max.Report SAR(1g): Body:0.748W/kg

5"HD Video Baby Monitor

ALL RIGHTS RESERVED

The features described in user's manual
are subject to modifications without prior notice.



WARNING:

Keep the small parts away
from children



Made in China

Catch Every Precious Moment Of Your Baby