

SOUNDLOGIC™ XT

HP-135

**TRUE WIRELESS DIGI-BUDS
RECHARGABLE STEREO EARBUDS
WITH DIGITAL DISPLAY STORAGE CASE**



INSTRUCTION MANUAL

**PLEASE READ ALL INSTRUCTIONS CAREFULLY
AND RETAIN FOR FUTURE USE**

Getting Started

- Remove the product from the box.
- Please retain all packaging and instructions. Check the contents against the Package Contents list below.

Package Contents

- True Wireless Bluetooth Stereo Earbuds
- Recharging Case
- USB Charging Cable
- Instruction Manual

Features

- True Wireless Bluetooth Stereo Earbuds
- Charging Case with LCD screen, helps to show remaining battery
- Small and elegant design, good fit for your ears
- Supports Android or iOS
- Supports hands-free call pick-up
- Supports wireless streaming of music
- Charging Case included
- Auto-pairs once removed from the case
- Charging time: approx. 1-2 hours; play time approx. 2-3 hours on single charge
- Charging Case provides up to 8 hours of playback time
- Rechargeable battery capacity: 200mAh
- Digital display show
- Earbuds battery capacity: 40mAh

Safety Instructions

Keep the unit away from heat sources, direct sunlight, humidity, water and any other liquids.

Do not operate the unit if it has been exposed to water, moisture or any other liquids to prevent against electric shock, explosion and/or injury to yourself and damage to the unit.

Do not use the unit if it has been dropped or damaged in any way.

Repairs to electrical equipment should only be performed by a qualified electrician. Improper repairs may place the user at serious risk.

Do not use the unit with wet hands.

Do not put objects into any of the openings.

Keep the unit free from dust, lint etc.

Do not use this unit for anything other than its intended use.

Keep the unit out of reach of children.

This product is not a toy.

Do not use the headset at excessive volume levels, as damage to hearing may occur.

Description of Parts:



1	Charging Port
2	Charging Connectors
3	Charging Slot
4	Recharging Case LCD Screen
5	MF (Multi-Function) / Phone Button
6	LED Indicator / Built-In Microphone

INSTRUCTIONS FOR USE

Charging Instructions

The Recharging Case and Bluetooth Earbuds come with a built-in rechargeable battery. Before using it for the first time we recommend you charge the battery fully. Please recharge the battery by following either methods every time they drain out.

To charge the Recharging Case (without Bluetooth Earbuds)

Plug the Micro USB end of the included USB charging cable into the charging port of the Recharging Case. Plug the other end into a suitable USB port such as the one on your computer or other devices made for USB charging. The LCD screen will flash with battery capacity value to indicate that its being charged.

It takes less than 2 hours for the case to charge fully. When the battery is fully charged, the LCD screen will display battery capacity value 100.

To charge the Bluetooth Earbuds

1. After fully recharging the Recharging Case, disconnect it from charging.
2. Put the Bluetooth Earbuds into respective charging slots correctly.
3. The LED light indicator on the Earbuds turns red to indicate that the battery is being charged. It takes less than 2 hours for the Earbuds to fully charge. When the battery

is fully charged, the red LED light will turn off, and the LCD screen will also turn off.

Turning on/off the Bluetooth Earbuds

Take out the Earbud from the Recharging Case, it will turn on automatically (Or, if the Earbud is not stored inside the Recharging Case, press and hold the **MF** button for 3 seconds to turn ON.)

Press and hold the MF button of the Earbud for 6 seconds to turn OFF the device. (Or, put the Earbud back to the Recharging Case, it will turn off for recharging automatically.)

Pairing either one Bluetooth Earbud with Bluetooth devices (phone or tablet that support call-answering)

- Take out one Earbud from the Recharging Case, it will turn on automatically and the LED flashes red and blue (Or, if the Earbud is not stored inside the Recharging Case, press and hold the **MF** button for 3 seconds to turn ON. An indication tone will be heard and the LED flashes red and blue.)
- Place the Bluetooth Earbud and Bluetooth device (phone or tablet that support call answering) no further than 1m apart from each other;
- Activate the Bluetooth function on your mobile device. Please refer to the manufacturer's instructions for instructions on enabling Bluetooth on your device.
- Once you have activated Bluetooth on your mobile device, select the "**Digi-Buds**" from the list of available Bluetooth devices.
- You might be prompted with "Pair with **Digi-Buds?**" message on your source device, with "Cancel" and "OK" options. Please click "OK".
- If required, enter the password '0000' to confirm & finalize pairing.
- Once paired successfully, an indication tone will be heard and the LED will flash blue slowly.
- You can now start to use the Earbud.
- If pairing is unsuccessful, turn off the device first and then re-pair following the above steps.
- Once you have paired the Bluetooth Earbud with a mobile device, the earbud will remember this mobile device and will pair automatically when its Bluetooth is activated within the range, during subsequently pairing. You do not need to re-pair any previously connected devices.
- The Bluetooth Earbud will attempt to automatically connect to the last device it was paired with when switched on. If you want to pair it with a new device, please follow the steps outlined above.

Making a call with the Bluetooth Earbud in Bluetooth mode

Basic operation

Function	Operation	Button
Answer incoming call	Incoming Call	Short press the Phone button to answer an incoming call.

Reject Incoming Call	Incoming Call	Press and hold the Phone button for 1.5 seconds and release
End call	Incoming Call	After your phone conversation, Short press the Phone button
Redial last number	Standby mode and connected to a device	Short press the Phone button twice

Listening to Music Wirelessly

Please ensure that your device (iPhone, Tablet or Other Smart Phone) is paired with the Bluetooth Earbud to stream music wirelessly. Once it is paired, play music from your device.

Function	Operation	Button
Pause	Playing music	Short press the MF button will pause the music
Play	Pausing	Short press the MF button will resume the music
Previous track (for left Earbud only)	Playing music	Press and hold the MF button for 1 second and release
Next track (for right Earbud only)	Playing music	Press and hold the MF button for 1 second and release

Note: Other functions including volume increase/decrease, Next track for left Earbud, Previous track for right Earbud, you may need to control through your source device.

Pairing **both** Bluetooth Earbuds with Bluetooth devices (smart phone or tablet etc)

- Take out both Earbuds from the Recharging Case, it will turn on automatically and the LED flashes red and blue (*Or, if both Earbuds are not stored inside the Recharging Case, press and hold the **MF** button for 2 seconds to turn ON. An indication tone will be heard and the LED flashes red and blue.)
- After few seconds, you would hear another indication tone when both Earbuds connected together. The LED light indicator on one Earbud will flash red and blue, and the LED light indicator on the other Earbud will flash blue slowly.
- At this point, activate the Bluetooth function on your mobile device, and search for Bluetooth devices near you.
- Once you have activated Bluetooth on your mobile device, select the “**Digi-Buds**” from the list of available Bluetooth devices.
- You might be prompted with “Pair with **Digi-Buds?**” message on your source device, with “Cancel” and “OK” options. Please click “OK”.
- Once paired successfully, an indication tone will be heard and the LED on both units will flash blue slowly.

Making a call with the Bluetooth Earbuds in Stereo pairing mode

Basic operation

Function	Operation	Button
----------	-----------	--------

Answer incoming call	Incoming Call	Short press the Phone button of one Earbud to answer an incoming call.
Reject Incoming Call	Incoming Call	Press and hold the Phone button of one Earbud for 1.5 seconds and release
End call	Incoming Call	After your phone conversation, short press the Phone button of one Earbud
Redial last number	Standby mode and connected to a device	Short press the Phone button of one Earbud twice

Note: both Earbuds support phone conversation.

Listening to Music Wirelessly in Stereo pairing mode

Please ensure that your device (iPhone, Tablet or Other Smart Phone) is paired with the Bluetooth Earbuds to stream music wirelessly. Once it is paired, play music from your device.

Function	Operation	Button
Pause	Playing music	Short press the MF button of one Earbud will pause the music
Play	Pausing	Short press the MF button of one Earbud will resume the music
Previous track	Playing music	Press and hold the MF button of left Earbud for 1 seconds and release
Next track	Playing music	Press and hold the MF button of right Earbud for 1 seconds and release

Note: Other functions including volume increase/decrease, you may need to be controlled through your source device.

Voice Assistant Operation

Voice Assistant is a built-in interactive feature that allows you to Start Conversation with Your Siri or Google Assistant, with short press the MF button of the Earbud (or either Earbud when using both Earbuds) 3 times quickly.

This feature enables you to ask questions and seek assistance on a number of things from your Voice Assistant, even when you're several feet away from your phone. Below are some of the many examples listed below.

Note: Google Assistant is available on eligible Android 5.0 devices or later. Works on Lollipop, Marshmallow and Nougat Android Phones with Google Play Services, >1.5GB of memory and 720P or higher screen resolution. Please ensure Google Assistant App is downloaded and made as default Voice Assistant on your mobile device.

While the Earbud is paired (or both Earbuds are paired) using Bluetooth, short press the MF button of the Earbud (or either Earbud when using both Earbuds) 3 times quickly and release to start conversation with your Siri or Google Assistant. An indication tone would

be heard before you speak into the Earbud.

- Example 1: Short press the MF button of the Earbud (or either Earbud when using both Earbuds) 3 times quickly and release, then speak into the Earbud(s), how's the weather today?
Voice Assistant will reply with something like: mainly cloudy with a few showers.
- Example 2: Short press the MF button of the Earbud (or either Earbud when using both Earbuds) 3 times quickly and release, then speak into the Earbud(s), what's the time now?
Voice Assistant will reply with something like: it is 8pm now.
- More examples:
Set an alarm for 7am tomorrow.
Play some music.
What's in the news?

Troubleshooting

Symptom	Solution
No Sound	<ul style="list-style-type: none">• Power On the Earbud(s) and charge the battery• Increase the volume on your mobile device and music source• Move your mobile device closer to the Earbud(s) and away from any interference or obstructions• User a different music source• Connect another mobile device
Poor Sound Quality	<ul style="list-style-type: none">• User a different music source• Connect another mobile device• Move your mobile device closer to the Earbud(s) and away from any interference or obstructions
Battery Won't Charge	<ul style="list-style-type: none">• Secure the ends of the USB charging cable• Try another charging source
Your Google Assistant not responding	<ul style="list-style-type: none">• This is only available for Android Mobile Devices• Make sure Google Assistant is downloaded on your mobile device and set to default voice assistant• Make sure your Android Mobile Device is Bluetooth paired with Earbud• Make sure you are in a country where Google Assistant is available• For additional support, visit www.support.google.com/assistant

Loud Dial Tone Noise When Activating Google Assistant	<ul style="list-style-type: none"> • Make sure you have latest version of Google Assistant App • On your Android mobile device, go to Settings > Apps > Google App > Disable. After that, tap Enable (If you have uninstalled Google App, please uninstall and reinstall the App).
---	---

Care and Maintenance

Read the following recommendations before using the Bluetooth Earbuds. Following these you will be able to enjoy the product for many years.

- Don't expose the Bluetooth Earbuds to liquid, moisture or humidity to avoid the product's internal circuit being affected.
- Don't use abrasive cleaning solvents to clean the device.
- Don't expose the device to extremely high or low temperature as this will shorten the life of electronic devices, destroy the battery or distort certain plastic parts.
- Don't dispose of the device in a fire as it will result in an explosion.
- Don't expose the device to contact with sharp objects as this will cause scratches and damage.
- Don't let the device fall on the floor. The internal circuit might get damaged.
- No user serviceable parts.

Specifications

Bluetooth specification	Bluetooth 5.0
Operating distance	10m
Working time	2 to 3 hours (moderate volume)
Charging input voltage	DC 5V
Charging time	less than 2 hours
Built-In Battery	Recharging Case: 200mAh Bluetooth Earbud: 40mAh (each)
Size	Recharging Case: 54.6mm (L) x 34.0mm (D) x 33.5mm (H) Bluetooth Earbud: 20.1mm (L) x 23.3mm (D) x 21.8mm (H) (each)
Weight	Recharging Case: 23g Bluetooth Earbud: 3g (each)

(Note: Battery life & charging time may vary based on usage & types of devices used.)

FCC Instructions

Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the product.

NOTE: This product has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable

protection against harmful interference in a residential installation. This product generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If the product does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures :

- Reorient or relocate the receiving antenna.
- Increase the separation between the product and receiver.
- Connect the product into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Imported by Osiris Inc. L6T 4M6/
Osiris America Inc. 14020