

**MAGELLAN**

**Maestro 4700**

**User's Manual**

Navigation Device



**Magellan® Maestro®**

**User Handbook**



# Safety

This Magellan receiver is a vehicle-navigation aid designed to assist you in arriving to your selected destinations. When using this Magellan product, these safety rules must be followed to prevent accidents that can result in injury or death to yourself or others:

- Please check with your state or local law enforcement for applicable regulations regarding mounting to the windshield. Go to [www.magellangps.com](http://www.magellangps.com) for alternate mounting solutions. An adhesive disk is supplied with the Magellan Maestro for use as an alternate mounting solution to the dashboard.
- When driving, the need to view the display is minimal. Voice prompts will guide you to your destination. The driver should enter data or program the Magellan receiver only when the vehicle is stopped. Only a vehicle passenger should enter data or program the receiver while the vehicle is moving.
- It is your responsibility to comply with all traffic laws. Every attempt is made to ensure that the database is accurate. However, roadways, points of interest (POIs), and business and service locations may change over time. The database does not include, analyze, process, consider, or reflect any of the following: legal restrictions (such as vehicular type, weight, height, width, load and speed restrictions), road slope or grade, bridge height, width, weight, or other limits; population density; neighborhood quality or safety; availability or proximity of law enforcement; emergency rescue, medical, or other assistance; construction work zones or hazards; road or lane closures; road, traffic, or traffic facilities' safety or condition; weather conditions; pavement characteristics or conditions; special events; traffic congestion. It is your responsibility to disregard any unsafe, hazardous, or illegal route suggestions.
- Keep the receiver safe from extreme temperature conditions. For example, do not leave it exposed to direct sunlight for an extended period of time.
- Take care when mounting the receiver in your vehicle, whether using the windshield mount or other mount or accessories, that it does not obstruct the driver's view of the road, interfere with the operation of the vehicle's safety devices such as air bags, or present a hazard to occupants of the vehicle should the receiver be dislodged while driving. You assume the risks associated with damage to your vehicle or vehicle occupants as the result of your choices in mounting the receiver.
- Laws in some states prohibit wearing stereo headphones while operating a motor vehicle. Please contact your state's Department of Motor Vehicles for information.
- The battery is rechargeable and should not be removed. In the event it should need to be replaced, please contact Magellan Technical Support.



Please Do Not Return This Product To The Place Of Purchase Without First Contacting Magellan Technical Support™ [www.magellangps.com/support/](http://www.magellangps.com/support/)

Register Your Magellan Maestro™ [www.magellangps.com/](http://www.magellangps.com/) To Keep Updated On The Latest Offers.™ See The User Manual Accessed From The [www.magellangps.com/support/](http://www.magellangps.com/support/) For Detailed Information.



# Installation



## Choose a Location

The Magellan Maestro receiver needs a clear view of the sky to receive signals from the GPS satellites so choose a location with an unobstructed view of the sky, commonly on or near the windshield.<sup>[1]</sup>

## Clean the Surface

Use the alcohol cleaning pad supplied with your receiver to clean the area on the windshield or dash. Allow the surface to dry before attaching the mount.

## Install the Car Cradle



 
[1] Some areas have laws regarding mounting devices on the windshield. Please refer to local laws before installing. Additional mounting solutions for areas other than the windshield can be found in the User Manual.

The Magellan Maestro has an internal battery but may need to be charged before it can be used while not connected to external power.


The battery will begin charging as soon as power is supplied to the Magellan Maestro through the vehicle power cable. (When the light on the vehicle power cable illuminates, it is properly connected to 12 VDC. Note some vehicles require that the ignition be on before power is delivered to the 12 VDC power receptacle.)




## Attach the Receiver

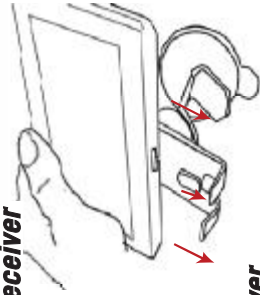

## Connect Power

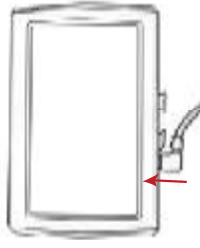 


## Route Cable

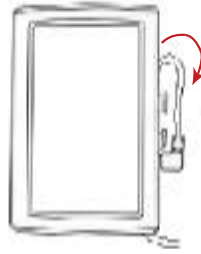 

## General Information

Please refer to this handbook for questions on using the Magellan Maestro receiver. If you are still unable to answer your question, check our technical support web page at <http://www.magellangps.com/support>

 
### Magellan Maestro 4700

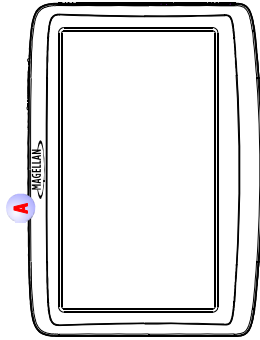

- A** Power switch
- B** MicroSD Card (optional) slot
- C** USB input. (External power and connecting to personal computer.)

### Parts List

 - Magellan Maestro
- Adjustable Car Holder
- Vehicle Power Cable
- Adhesive Mounting Disk

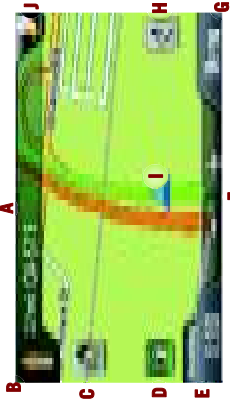


- A** Current street. Route Mode: Distance and street for next maneuver. Tap to repeat instructions.
- B** Route mode only. Displays next turn instructions. Tap to display maneuver list.
- C** Voice Command Activation button. Tap to begin voice commands.
- D** Next exits Points of Interest (POI) list (only if traveling on a highway).
- E** Normal: Current time and cardinal heading. Route: Distance to destination, arrival time, speed or remaining time.
- F** Zoom out/Zoom in.
- G** Access Main Menu.
- H** Access Volume/Mute controls.
- I** Current Position icon.
- J** Access OneTouch menu.

### Parts List

 - Magellan Maestro
- Adjustable Car Holder
- Vehicle Power Cable
- Adhesive Mounting Disk

# First Time Use

## Power On

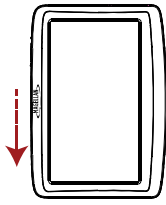

Slide the power switch to the left and release to turn the receiver on.

To turn the receiver off, slide and release the power switch the same as was done to turn it on.

This method places the Magellan Maestro receiver in idle mode. Should you need to completely shutdown the receiver, slide the power switch to the left, hold for 3 seconds and then release.

The first time you use the Magellan Maestro receiver it may take up to 4 minutes to compute your location.

If you are not getting your current location, use these tips to improve satellite signal reception.



Leave the garage or parking structure so the GPS receiver has a clear view of the sky.

Satellite signals can be blocked by tall buildings or on mountain roads, you may intermittently see a drop in signal strength in these locations.

## Satellite Signal Strength

To view the satellite signal strength indicator, tap on the OneTouch icon. The signal strength indicator can be found in the upper right corner.



4 bars green: Strong signal  
Blank: No satellite signals.  
Unable to compute position.



## Changing Volume



Tap the volume icon



Increase volume  
Mute  
Decrease volume



# Menus

## Main Menu Tap on the MENU button on the Map screen to access the Main Menu.

Access **Go To** functions to create a route or access your address book.

Access **One Touch Menu** View the **Map Screen**.

Access **Settings** (Map Options, Navigation Preferences, Product Information, etc.)

Access **Blue Tooth** controls.

While routing, **Trip Options** and **Cancel Route** buttons are also shown.

## Go To Menu Tap on the Go To icon on the Main Menu.

View or route to a **point of interest**.

Access **One Touch Menu** Create a route from a list of your last 20 destinations.

Create a route to an **Address** you enter.

Access your **Address Book** containing addresses and points of interest you've saved.

Create a route to the **Home** address you've stored in the receiver. (If there is no Home address stored, you will be asked to enter one.)

Create a route to the **Intersection** of two streets.

Route to a **City Center**.

*Not shown:* Route to an **Intersection**. Route to a **City Center**.



## OneTouch Menu

### OneTouch™

The OneTouch menu provides easy access to those destinations and searches you use most. Some buttons are assigned by default (Home, Emergency, Previous, etc.) while others can be assigned by you. User-assigned buttons can be commonly used destinations or POI searches.

### Saving Searches

Tap on the Assign button and you are asked to assign a OneTouch button, either as a location or as a search. Saving a search as a OneTouch button gives you a way of performing searches you may do commonly, as 'Nearest Coffee'.

### Emergency Button

The OneTouch display has an Emergency button that, while it is hoped you never have to use it, can provide immediate directions and phone information for the nearest police station, hospital, or repair facility.



OneTouch menu is accessed by tapping on the OneTouch icon found in the upper right corner of the Map screen as well as other screens.



Tap on an "Assign" button to assign a location or a saved search OneTouch option.

The 1/2 button accesses a second page for saving addresses and searches.

The Manage button provides the means to edit addresses that you have assigned.

The upper right corner displays the GPS satellite signal strength and the battery life of the internal battery.





# Managing OneTouch



1

Access the OneTouch menu.



2

Tap on any Assign button.



3

Select Location or Search.

Follow the instructions to enter the address or save a search. When you are done you will be asked to enter a name for the button.



4

 
Assign button has been replaced.

## Editing OneTouch Buttons

Follow these instructions to step 3. Instead of tapping on an Assign button, tap on the button you want to edit. On the Edit screen you can change the name or modify the address. (Entering a phone number is not available at this time.)

## Saving a Search

You can save a search on a POI to the OneTouch menu. On step 4 select "Search". Follow the instructions in this handbook on searching for a POI. When the list of POIs is shown, a Save button is shown at the bottom of the list.

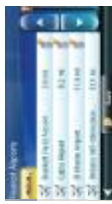

Tap Save and the Assign OneTouch screen is displayed. Tap on the button you want to assign the search to and you will then be able to access the same search quickly from the OneTouch menu.





# Voice Command



The Magellan Maestro 4700 includes voice command for performing many of the common activities verbally. To access the voice command function, tap the Voice Command button on the Map screen.

The Say a Command screen is displayed with those functions that are accessible using voice command. Just speak clearly and let the Magellan Maestro receiver do the rest.

The icon indicated here shows that this screen has voice command capabilities and that the receiver is in listening mode. (See note on *Voice Command Ready*)



Listening



Off



## Voice Command Icons

Whenever a list is presented you will notice numbers displayed for each item. (In this example, Home Brew Coffee is number 4.) Say 'Number Four' to select the fourth item in the list.



### For Best Results:

- Speak at a normal conversational tone, don't speak too loudly.
- Turn the radio down. Voices near the unit will decrease recognition.
- Position the unit about 3 ft. from the user.
- Use full phrases when possible ('Go Back' instead of 'Back').

## Turning Voice Command Off

If you don't want to have voice command functioning, just tap the voice command icon on the Map screen. From the Say a Command screen, tap Settings and you are presented with the option of turning voice command off.

## Turning Voice Command On

To restart voice command after turning it off, you need to access the Main Menu. Tap the Settings icon and scroll down the page to select the Voice Recognition button. Here you will be given the option of turning the voice command back on.

## Voice Command Ready

Please note that there is a slight pause when using voice command after a spoken command causes a screen change. You need to wait for the "Listening" icon to appear before speaking the next command. When voice command is ready to receive your command, the Listening icon will appear and you will hear an audible click.



 
# Pairing Bluetooth®

You must pair your Magellan Maestro receiver with your Bluetooth-capable phone before you can use your phone with the Magellan Maestro receiver.

Setting the Maestro into pairing mode is simple, just follow the steps shown here. Setting your phone for pairing varies from phone to phone so you will need to refer to your Bluetooth device's manual for instructions on setting it to pairing mode.


## First Time Use

The instructions shown here are for pairing a phone during normal use. The first time you use Bluetooth in your Magellan Maestro receiver, the receiver will automatically ask you if you want to pair a phone. After confirming that you want to continue, you will go to step 4.

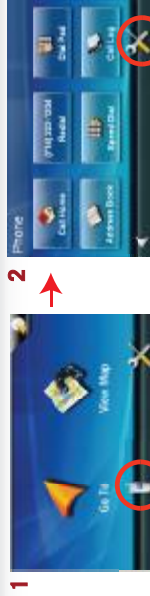

1 Tap the Bluetooth icon

 Tap Tools icon

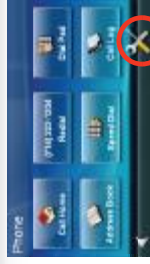

2



3

4 The Maestro is now in pairing mode and waiting to be connected to your phone. Follow the instructions from your phone's manual to set it in to pairing mode.

Tap the Pair Phone button.

5 After your phone has searched for new devices select the device in the list named "Magellan 4700".

6 Your phone will ask for you to enter a passcode. Passcode : 1234



7

Tap Yes.



8





## QuickSpell™

When entering an address only those characters that can be used to spell the city or street are shown as active. Note that here there are no streets for the city chosen that begin with Q, X, or Z and are grayed out.



As more letters are entered, the keyboard active characters change indicating which characters can be used to spell the city or street. Here only the A, D, I, L, or O could be used to enter a street for the city chosen.



This speeds up entering an address greatly and avoids misspelling the word you are trying to enter. Tapping on the checkmark will bring up a list of the cities or streets that begin with the letters you've entered. When the available cities or streets is short, the receiver will automatically switch to the list, displaying those items that begin with the letters you've entered.

In this example, a user in San Dimas has entered "SAN F" and the receiver has chosen "SAN FERNANDO, CA" as the probable city. Had the user been in Oakland, CA, the receiver would be displaying SAN FRANCISCO, CA.



If you tap on the city at the top of the display or on the green checkmark, it is selected as your destination city and you are then required to enter the street. Tap on LIST when the button is active to bring up the list of cities beginning with the characters you've entered. (Note that if the number of cities that begin with the characters you've entered is short, the list is automatically displayed.)

### QuickSpell™

Your Magellan Maestro receiver uses a feature known as QuickSpell for entering cities and streets whenever possible. QuickSpell displays only those keys that could be used to enter a city or address that is in the receiver's memory. For example, in the screen shown here for street entry, only the letters that spell a street are displayed. This greatly reduces the chance for errors as well as to speed up the address entry process.

### Smart City Search

Another way the Magellan Maestro makes entering an address easy is through the use of Smart City Search. The Magellan Maestro receiver uses your location as well as cities you've created routes to before to try to figure out the city you are looking for. As you enter characters, the 'computed' city is displayed at the top of the screen.



## Setting Home Address

### Home Address

Use the Magellan Maestro receiver to quickly return to your home address no matter how lost you thought you were. When you first install your Magellan Maestro receiver you should set your home address on the OneTouch menu so it is there whenever you need it. You have the option of entering your home address or, if you are in your vehicle and the Magellan Maestro receiver is computing a position fix, you can assign your current location as your home. This uses latitude/longitude coordinates to assign your home position. After following these steps and tapping the green checkmark, the address is saved and designated as your Home address. Next time you access the Home icon you can set a route to your home.

### Map Updates

On some occasions you may find that you cannot enter the name of the street you desire. This is due to the street not being in the receiver's memory. Most likely this is a new street and wasn't included at the time of production. If this occurs you may want to visit the Magellan web site ([www.magellangps.com](http://www.magellangps.com)) and check for a map update. In the meanwhile, you can set your current location [3] as your home. Map updates usually come out yearly and can be purchased directly from the Magellan web site.

1 Tap OneTouch icon

2 Tap Home icon

3 Confirm or select current location

 
4 Use Smart Search to enter city

5 Select city from list

6 Use QuickSpell to enter street

7 Select street from list

8 Enter street address

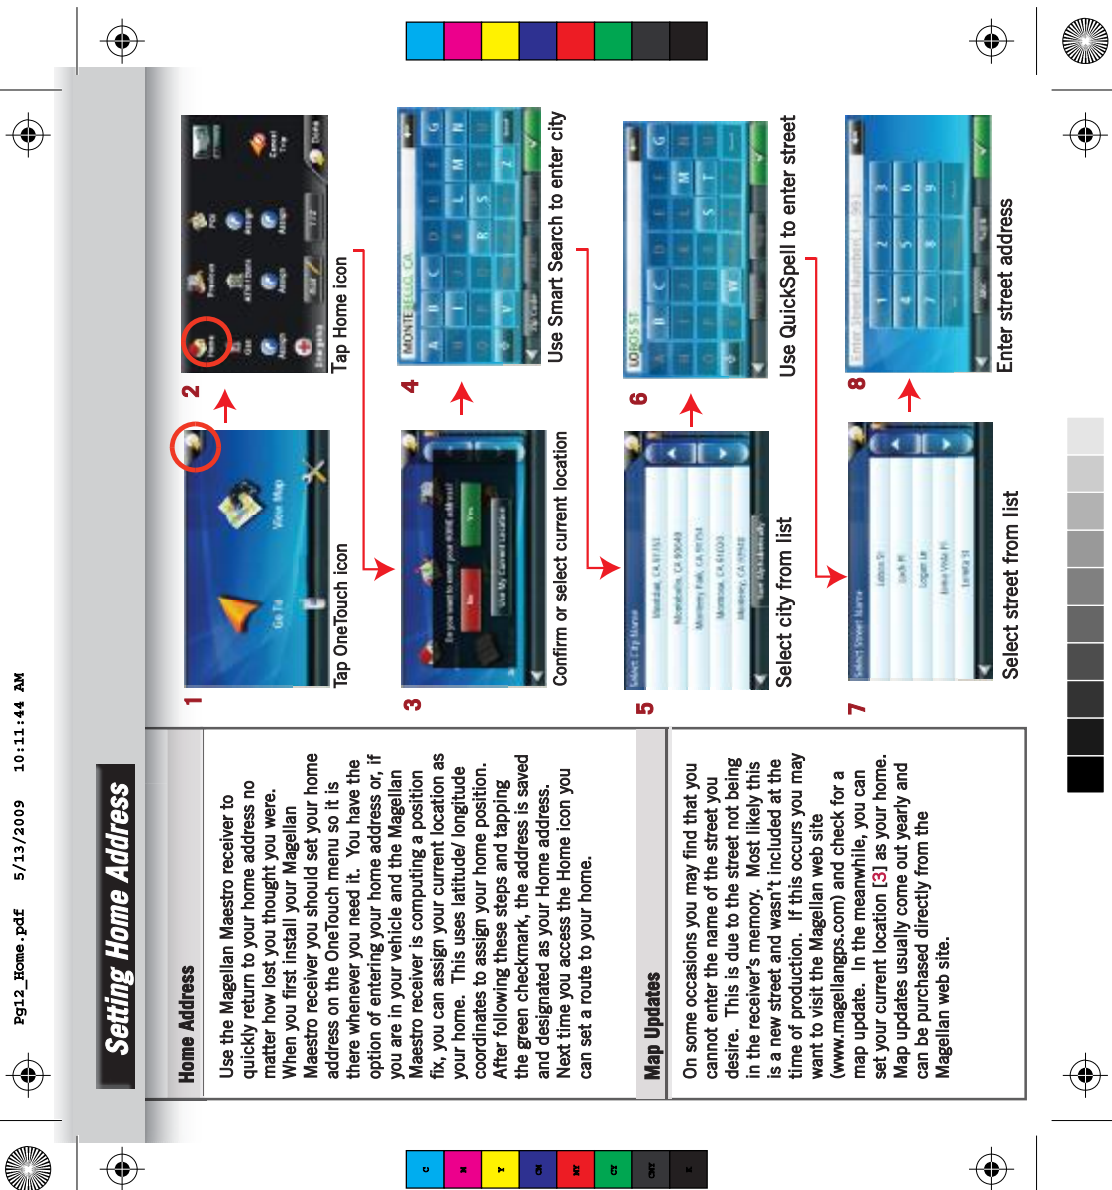

# Routing to an Address

**1** Tap Go To icon

**2** Tap Address icon

**3** Use QuickSpell to enter city  
Tap List to view listing of cities

**4** Select city from list

**5** Use QuickSpell to enter street.

**6** Select street from list

**7** Enter street address

**8** Select the orange "GO" button

## Address Selection

This example shows how to route to an address that is not in your address book, however you have many different options in what you select as a destination.

**Points of Interest:** These are preloaded points of interest that are grouped by category.

**Previous:** You can select a previous destination that you have already created a route to, even if you didn't complete the route.

**Address Book:** Addresses that you have entered and stored in your address book.

**Intersection:** Select two streets that intersect and a route can be created to that point.

**City Center:** Create a route to the geographical center of a city that you select.

## Routing Options

On the final screen [8] you can set options for the route as to how the route will be computed (fastest time [default], shortest distance, or most use of freeways). Before starting the route, tap "Options" and select the routing method desired.



## Routing Tools

### Canceling a Route

This is an option you have if you no longer wish to continue along the route you've created.



### Adding a POI to an Active Route

The example shown here is for adding a POI to an active route. You can choose any of the other Go To options and it will function similarly.

#### Add Destination Screen

*Replacing the Destination* takes the destination you have just selected and makes it the arrival point for the route.

*Go There Now* puts the destination you have just selected and makes it the next point in the route and then continues the route to the original destination.

 
*Add To Trip* puts the new destination at the end of the trip, after the original destination. *If the trip already has multiple destinations, you will be asked where you want to add this destination.*

From the Map Screen, select *Menu*.

Select *Go To*.

Select *Points of Interest*.

Select your category and subcategories for the type of POI.

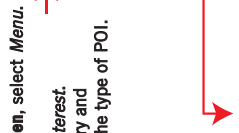

Choose POI.




Select where to set the POI in the route.


Select destination option.




## Saving an Address

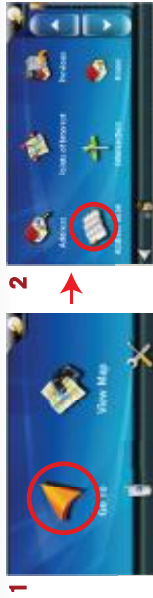 

Select **Add**.

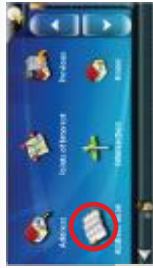 

Select **Address Book**.

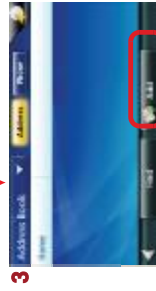 

Select **Add**.



Select how you want to select the address and enter the information.



Select **Yes** \*.



Use the "Edit" button to add additional information for this entry. When done, tap the green checkmark.

### Address Book

Addresses can be added to your address book and are then accessible for in creating a route or a multi-destination trip.

### Address Book Tips

The Address Book screen (3) has many functions that you may find useful.

Tap "Address" or "Phone" to toggle between what is displayed in the list.

Tap on a name in the list to delete or edit the entry.

Tap on the address or phone, depending on what you are displaying, to create a route to the address selected.

If you have a long list of entries you can tap on the button in the upper left corner to select the alphabet range to display.

Additionally, you can use the Find button at the bottom of the screen to search for a name in your address book.

\* [5] Check the Add to OneTouch if you want this address stored on your OneTouch menu as well.





## Routing to a POI

### Select POI Screen [3]

On the Select POI screen you can select by category, search by name, or, if on a route, POI's along the route or near your destination.

### Categories [4]

Commonly used categories (Gas, Coffee, Restaurants, Shopping) are displayed at the top, all other categories are listed in alphabetical order.

### Subcategories [5]

\* There may be additional subcategories to select from after choosing one of these subcategories. For example, selecting "Movie Theater" in step 5 brings up another subcategory list that displays a list of movie chains (AMC, Edwards, etc.) you can narrow your search with, or select ALL SUBCATEGORIES to find the nearest movie theater regardless of which movie chain it is in.



# Traffic

## Traffic

1. The Magellan Maestro is traffic-ready but requires that you purchase the Magellan Traffic Link before it can be used. The Magellan Traffic Link consists of a replacement Power Adapter Cable that has an internal traffic receiver.
2. **The Magellan Traffic Link can be purchased from the Magellan Store which can be accessed from the Magellan Web Site: [www.magellangps.com](http://www.magellangps.com).**



*When using the Traffic Link cable, be sure that it is not wound up or coiled around a metallic object (steering column, etc.). Additionally, if you are having difficulties in receiving traffic information you can try laying the power cable along the top of the dashboard towards the windshield.*



3. After purchasing the Magellan Traffic Link, replace the Power Adapter Cable that came with the Magellan Maestro with the new adapter cable. Traffic will be automatically activated and ready to use.
4. Disabling/enabling Traffic:



Disable or enable Traffic by tapping on the checkbox so it appears as shown. The button below the Enable Traffic checkbox can be used to toggle between showing only traffic events along your route or showing all traffic events.



# Magellan Limited Warranty

All Magellan global positioning system (GPS) receivers are navigation aids, and are not intended to replace other methods of navigation. The purchaser is advised to perform careful position charting and use good judgment. READ THE USER GUIDE CAREFULLY BEFORE USING THE PRODUCT.

1. **MAGELLAN WARRANTY.**

- (a) MITAC Digital Corp. (Magellan) warrants its GPS receivers and hardware accessories to be free from defects in material and workmanship and will conform to its published specifications for the product for a period of one year from the date of original purchase. **THIS WARRANTY APPLIES ONLY TO THE ORIGINAL CONSUMER PURCHASER OF THIS PRODUCT.**
- (b) In the event of a defect, Magellan will, at its discretion, repair or replace the hardware product with a product of like kind or quality, which may be new or reconditioned, with no charge to the purchaser for parts or labor. Magellan's limit of liability under the limited warranty shall be the actual cash value of the product at the time the purchaser returns the product to Magellan for repair less a reasonable amount for usage, as determined by Magellan in its sole discretion. The repaired or replaced product will be warranted for 90 days from the date of return shipment, or for the balance of the original warranty, whichever is longer.
- (c) Magellan warrants that software products or software included in hardware products will be free from defects in the media for a period of 30 days from the date of shipment and will substantially conform to the then current user documentation provided with the software (including updates thereto). Magellan's sole obligation shall be the correction or replacement of the media or the software so that it will substantially conform to the then-current user documentation. Magellan does not warrant the software will meet purchaser's requirements or that its operation will be uninterrupted, error-free or virus-free. The purchaser assumes the entire risk of using the software.

2. **PURCHASER'S REMEDY. PURCHASER'S EXCLUSIVE REMEDY UNDER THIS WRITTEN WARRANTY OR ANY IMPLIED WARRANTY SHALL BE LIMITED TO THE REPAIR OR REPLACEMENT, AT MAGELLAN'S OPTION, OF ANY DEFECTIVE PART OF THE RECEIVER OR ACCESSORIES WHICH ARE COVERED BY THIS WARRANTY. REPAIRS UNDER THIS WARRANTY SHALL ONLY BE MADE AT AN AUTHORIZED MAGELLAN SERVICE CENTER. ANY REPAIRS BY A SERVICE CENTER NOT AUTHORIZED BY MAGELLAN WILL VOID THIS WARRANTY.**

3. **PURCHASER'S DUTIES.** For repair or replacement on a Magellan product the purchaser must obtain a Return Materials Authorization (RMA) number from Magellan Technical Support or by submitting a repair request through our website at [www.magellangps.com](http://www.magellangps.com), prior to shipping. The purchaser must return the product postpaid with a copy of the original sales receipt, purchaser's return address and the RMA number clearly printed on the outside of the package to the Authorized Magellan Service Center address provided by Magellan with the RMA number. Magellan reserves the right to refuse to provide service free-of-charge if the sales receipt is not provided or if the information contained in it is incomplete or illegible or if the serial number has been altered or removed. Magellan will not be responsible for any losses or damage to the product incurred while the product is in transit or is being shipped for repair. Insurance is recommended. Magellan recommends the use of a trackable shipping method such as UPS or FedEx when returning a product for service.

4. **LIMITATION OF IMPLIED WARRANTIES.** Except as set forth in item 1 above, all other expressed or implied warranties, including those of fitness for any particular purpose or merchantability, are hereby disclaimed AND IF APPLICABLE, IMPLIED WARRANTIES UNDER ARTICLE 35 OF THE UNITED NATIONS CONVENTION ON CONTRACTS FOR THE INTERNATIONAL SALE OF GOODS. Some national, state, or local laws do not allow limitations on implied warranty on how long an implied warranty lasts, so the above limitation may not apply to you.





5. EXCLUSIONS. The following are excluded from the warranty coverage:

- (a) periodic maintenance and repair or replacement of parts due to normal wear and tear;
  - (b) batteries;
  - (c) finishes;
  - (d) installations or defects resulting from installation;
  - (e) any damage caused by (i) shipping, misuse, abuse, negligence, tampering, moisture, liquids, proximity or exposure to heat, or improper use; (ii) disasters such as fire, flood, wind, and lightning; (iii) unauthorized attachments or modification;
  - (f) service performed or attempted by anyone other than an authorized Magellan Service Center;
  - (g) any product, components or parts not manufactured by Magellan;
  - (h) that the receiver will be free from any claim for infringement of any patent, trademark, copyright or other proprietary right, including trade secrets
  - (i) any damage due to accident, resulting from inaccurate satellite transmissions. Inaccurate transmissions can occur due to changes in the position, health or geometry of a satellite or modifications to the receiver that may be required due to any change in the GPS. (Note: Magellan GPS receivers use GPS or GPS-GLONASS to obtain position, velocity and time information. GPS is operated by the U.S. Government and GLONASS is the Global Navigation Satellite System of the Russian Federation, which are solely responsible for the accuracy and maintenance of their systems. Certain conditions can cause inaccuracies which could require modifications to the receiver. Examples of such conditions include but are not limited to changes in the GPS or GLONASS transmission.)
- The opening, dismantling or repairing of this product by anyone other than an authorized Magellan Service Center will void this warranty.



6. EXCLUSION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES

- (a) MAGELLAN SHALL NOT BE LIABLE TO PURCHASER
- (b) OR ANY OTHER PERSON FOR ANY INDIRECT, INCIDENTAL OR CONSEQUENTIAL DAMAGES WHATSOEVER, INCLUDING BUT NOT LIMITED TO LOST PROFITS, DAMAGES ARISING FROM A DELAY OR LOSS OF USE, OR OUT OF THE BREACH OF THIS WARRANTY OR ANY IMPLIED WARRANTY EVEN IF CAUSED BY THE NEGLIGENCE OR ANOTHER FAULT OF MAGELLAN OR OUT OF THE NEGLIGENCE OF THE USER OF THE PRODUCT. IN NO EVENT WILL MAGELLAN BE HELD RESPONSIBLE FOR SUCH DAMAGES, EVEN IF MAGELLAN HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.
- (c) Some national, state, or local laws do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

7. COMPLETE AGREEMENT

- (a) This written warranty is the complete, final and exclusive agreement between Magellan and the purchaser with respect to the quality of performance of the goods and any and all warranties and representations. THIS WARRANTY SETS FORTH ALL OF MAGELLAN'S RESPONSIBILITIES REGARDING THIS PRODUCT. THIS WARRANTY GIVES YOU SPECIFIC RIGHTS. YOU MAY HAVE OTHER RIGHTS WHICH VARY FROM LOCALITY TO LOCALITY AND CERTAIN LIMITATIONS CONTAINED IN THIS WARRANTY MAY NOT APPLY TO YOU.
- (b) If any part of this limited warranty is held to be invalid or unenforceable, the remainder of the limited warranty shall nonetheless remain in full force and effect.

- 8. CHOICE OF LAW. This limited warranty is governed by the laws of the State of California, without reference to its conflict of law provisions or the U.N. Convention on Contracts for the International Sale of Goods, and shall benefit Magellan, its successors and assigns. This warranty does not affect the consumer's statutory rights under applicable laws in force in their locality, nor the customer's rights against the dealer arising from their sales/purchase contract.

For further information concerning this limited warranty, please visit Magellan's website [www.magellangps.com](http://www.magellangps.com) or contact:

MITAC Digital Corp.  
 471 El Camino Real  
 Santa Clara, CA 95050  
 USA

USA & Canada: 800-707-9971  
 Mexico: 866-310-7223

 


# Settings

## Accessing System Settings



1

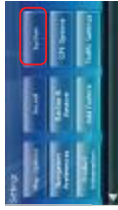

2



3

The Settings screen (2) has other useful functions in customizing your Magellan Maestro receiver. After you have used your receiver for a while, you may want to come back to this screen and select how the information is displayed on the Map screen, sound levels and output, which warnings are announced, what type of vehicle you are using, etc.

Backup and Restore options are also available on the Settings screen to provide a means of saving and retrieving address information.

<b>Program Language</b>	Select from English, Spanish or French Canadian.
<b>Auto Power</b>	If the touchscreen hasn't been accessed or the current position hasn't changed for a defined period of time, the Magellan Maestro receiver can be set to power off. Use the Auto Power setting to define the period of time desired.
<b>Brightness</b>	Set the desired brightness level.
<b>Time Format</b>	Select how time is displayed (24 hour or 12 hour).
<b>Time Zone</b>	Select your current time zone.
<b>Distance Units</b>	Select the units of measure for distance measurements; Kilometers/meters or Miles/feet.



©2009 MITAC International Corporation. The Magellan logo, Magellan, and Maestro are registered trademarks of MITAC International Corporation, and OneTouch and QuickSpell are trademarks of MITAC International Corporation and are used under license by MITAC International Corporation. All rights reserved. The AAA logo is a trademark of the American Automobile Association. AAA © 2009 All rights reserved. CAA and the CAA logo are trademarks of the Canadian Automobile Association. All other trademarks and registered trademarks are property of their respective owners.

605-0301-001 A  
FW 1.00

## Warning statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20 centimeters between the radiator and your body.

Any changes or modifications (including the antennas) made to this device that are not expressly approved by the manufacturer may void the user's authority to operate the equipment.

You are cautioned that changes or modifications not expressly approved by the party responsible for compliance could void your authority to operate the equipment.

Cet appareil numérique respecte les limites de bruits radioélectriques applicables aux appareils numériques de Classe B prescrites dans la norme sur le matériel brouilleur: "Appareils Numériques," NMB-003 édictée par l'Industrie.

This digital apparatus does not exceed the Class B limits for radio noise emissions from digital apparatus as set out in the interference-causing equipment standard entitled "Digital Apparatus," ICES-003 of Industry Canada.