

# Features

This chapter describes how to operate technology features.

<b>Audio System</b>			
About Your Audio System.....	***		
USB Port(s).....	***		
HDMI® Port .....	***		
Audio Antenna.....	***		
Audio System Theft Protection .....	***		
Audio Remote Controls .....	***		
<b>Audio System Basic Operation .....</b>	<b>***</b>		
Audio/Information Screen .....	***		
Adjusting the Sound .....	***		
Display Setup .....	***		
Playing the AM/FM Radio.....	***		
Playing a CD .....	***		
Playing an iPod .....	***		
Playing Internet Radio .....	***		
Playing a USB Flash Drive .....	***		
Playing <i>Bluetooth</i> ® Audio.....	***		
Playing a Video Using the HDMI®.....	***		
Smartphone Apps.....		***	
Sri Eyes Free.....		***	
<b>Audio Error Messages .....</b>	<b>***</b>		
<b>General Information on the Audio System .....</b>	<b>***</b>		
<b>Customized Features.....</b>	<b>***</b>		
<b><i>Bluetooth</i>®/HandsFreeLink®</b>			
Using HFL.....		***	

## About Your Audio System


### Models with navigation system

See the navigation system manual for operation of the audio system.

### Models without navigation system

The audio system features AM/FM radio. It can also play audio CDs, WMA/MP3/AAC files, USB flash drives, and iPod, iPhone and *Bluetooth* devices.

You can operate the audio system from the buttons and switches on the panel, the remote controls on the steering wheel, or the icons on the touchscreen interface.

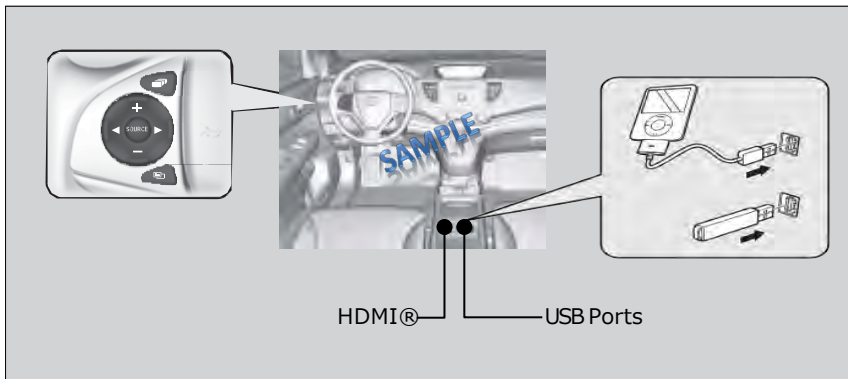

### >>About Your Audio System

SiriusXM® Radio is available on a subscription basis only. For more information on SiriusXM® Radio, contact a dealer.

⇒General Information on the Audio System  
p. \*\*\*


SiriusXM® Radio is available in the United States and Canada, except Hawaii, Alaska, and Puerto Rico. SiriusXM® is a registered trademark of Sirius XM Radio, Inc.

Video CDs, DVDs, and 3-inch (8-cm) mini CDs are not supported.

iPod, iPhone and iTunes are trademarks of Apple Inc.

State or local laws may prohibit the operation of handheld electronic devices while operating a vehicle.

## USB Ports

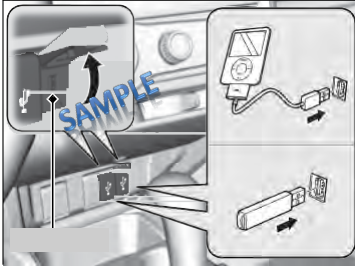


1. Open the cover
2. Install the iPod dock connector or the USB flash drive to the USB port.

### >>USB Ports

- Do not leave the iPod or USB flash drive in the vehicle. Direct sunlight and high temperatures may damage it.
- We recommend using an extension cable with the USB port.
- Do not connect the iPod or USB flash drive using a hub.
- Do not use a device such as a card reader or hard disk drive, as the device or your files may be damaged.
- We recommend backing up your data before using the device in your vehicle.
- Displayed messages may vary depending on the device model and software version.

If the audio system does not recognize the iPod, try reconnecting it a few times or reboot the device. To reboot, follow the manufacturer's instructions provided with the iPod or visit [www.apple.com/ipod](http://www.apple.com/ipod).

## HDMI®Port

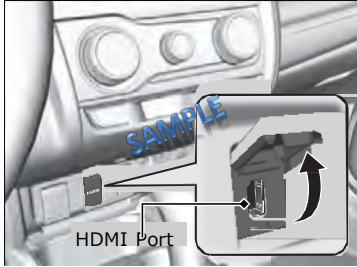


1. Open the cover.
2. Install the HDMI® cable to the HDMI® port.

### >>HDMI® Port

- Do not leave the HDMI® connected device in the vehicle. Direct sunlight and high temperatures may damage it.
- We recommend backing up your data before using the device in your vehicle.
- Displayed messages may vary depending on the device model and software version.

The terms HDMI and HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing LLC in the United States and other countries.

## Audio Antenna

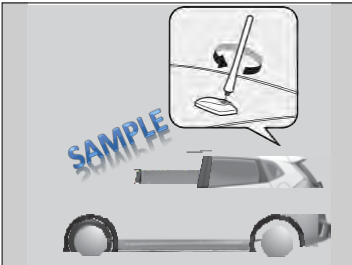

Your vehicle is equipped with a removable antenna at the rear of the roof.

### >>Audio Antenna

#### NOTICE

Before using a “drive-through” car wash, remove the antenna by unscrewing it by hand. This prevents the antenna from being damaged by the car wash brushes.

## Audio System Theft Protection

---

The audio system is disabled when it is disconnected from the power source, such as when the battery is disconnected or goes dead. In certain conditions, the system may display **Enter code**\*<sup>2</sup>. If this occurs, reactivate the audio system.

### ■ Reactivating the audio system


1. Turn the ignition switch to ON II \*<sup>1</sup>.
2. Turn on the audio system.
3. Press and hold the audio system power button for more than two seconds.
  - ▶ The audio system is reactivated when the audio control unit establishes a connection with the vehicle control unit. If the control unit fails to recognize the audio unit, you must go to a dealer and have the audio unit checked.

\* 1 : Models with the smart entry system have an **ENGINE START/STOP** button instead of an ignition switch.

\* 2 : Models with display audio system.

## Audio Remote Controls

Allow you to operate the audio system while driving.

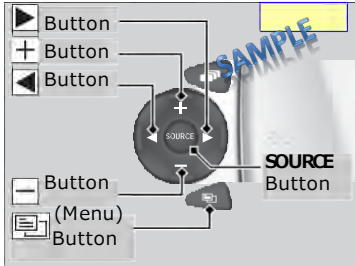

### SOURCE Button

Cycles through the audio modes as follows:  
 FM→AM→CD→USB→iPod→*Bluetooth*® Audio  
 →Pandora®→Aha™→Apps\*1→AUX HDMI®

### (Volume) Buttons

Press : To increase the volume.  
 Press : To decrease the volume.

### ◀▶ Button






- When listening to the radio
  - Press : To select the next preset radio station.
  - Press : To select the previous preset radio station.
  - Press and hold : To select the next strong radio station.
  - Press and hold : To select the previous strong radio station.
- When listening to a CD, iPod, USB flash drive, or *Bluetooth*® Audio
  - Press : To skip to the next song.
  - Press : To go back to the beginning of the current or previous song.
- When listening to a CD or USB flash drive
  - Press and hold : To skip to the next folder.
  - Press and hold : To go back to the previous folder.
- When listening to Internet radio\*
  - Press : To skip to the next song.
  - Press and hold : To select the next station.
  - Press and hold : To select the previous station.

\* 1 : Appears only when connected to HondaLink™.


### > > Audio Remote Controls

The CD or AUX mode appears only when a CD is loaded or HDMI device is connected. Pandora® and *Bluetooth*® Audio appear when a connection (*Bluetooth*® or USB) is established with a device.

**Models with display audio system****Steering Wheel  (Menu) Button**

- When listening to the radio  
**Press and hold**  : To display the menu items. You can select **Scan**, **Save Preset**, or **Seek**.
- When listening to a CD or USB flash drive  
**Press and hold**  : To display the menu items. You can select **Scan**, **Repeat**, or **Random**.
- When listening to an iPod  
**Press and hold**  : To display the menu items. You can select **Repeat** or **Shuffle**.
- When listening to a *Bluetooth*® Audio  
**Press and hold**  : To display the menu items. You can select **Pause** or **Play**.
- When listening to a Pandora®  
**Press and hold**  : To display the menu items. You can select **Bookmark**, or **Play/Pause**.


## &gt; &gt; Audio Remote Controls

The  button is available only when the audio mode is FM, AM, CD, USB, iPod, Pandora®, Aha™, or *Bluetooth*® Audio.


# Audio System Basic Operation

## Models with display audio system


To use the audio system function, the ignition switch must be in ACCESSORY I or ON II \*1.

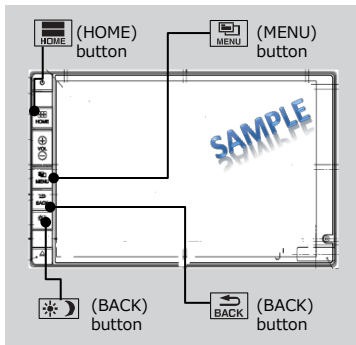





 **button:** Select to go to the **HOME** screen.  
⇒ **Switching the Display** P. 192


 **button:** Touch to select any mode.  
The available mode includes **Change Source, Station List, Save Preset, Radio Text, Music Search**, and play modes. Play modes can be also selected from **Scan, Random/Repeat**, and so on.

 **button:** Select to go back to the previous display when it is displayed.

 **button:** Press to change the audio/information screen brightness.

Press  once and select  or  to make an adjustment.

▶ Each time you press , the mode switches between the daytime mode, nighttime mode and **OFF** mode.

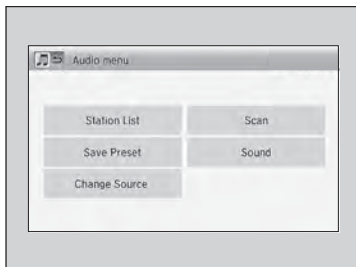

## > > Audio System Basic Operation

Audio Menu Items

⇒ **Station List** P. 200

⇒ **Music Search** P. 203, 206, 211

⇒ **Random/Repeat** P. 204, 212

⇒ **Scan** P. 201, 204, 212

\* 1: Models with the smart entry system have an **ENGINE START/STOP** button instead of an ignition switch.




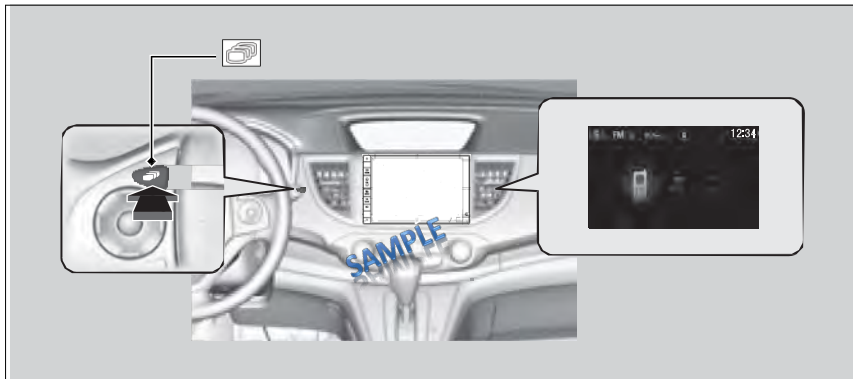
## Audio/Information Screen

Displays the audio status and wallpaper. From this screen, you can go to various setup options.


### ■ Switching the Display

Using the  button

Press the  (display) button on the steering wheel to change the display.



## Using the HOME screen

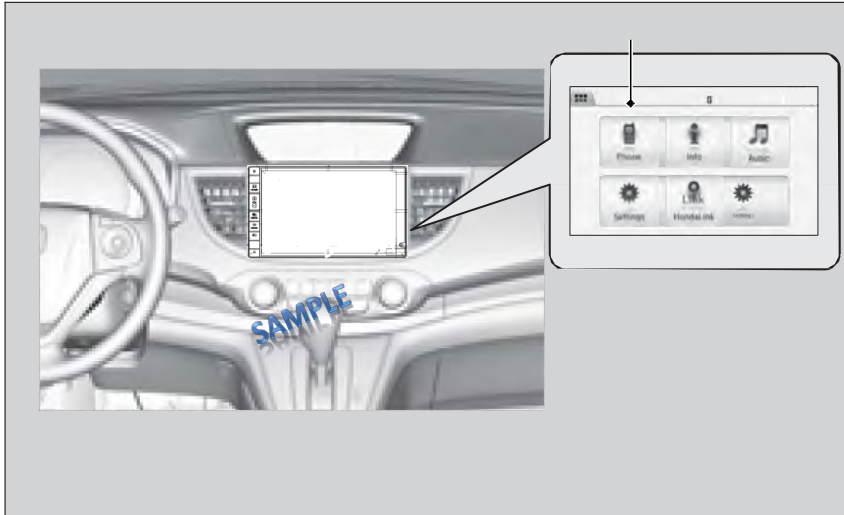

Select **HOME** to go to the **HOME** screen.

Select **Phone**, **Info**, **Audio**, **Settings**, or **HondaLink**.

■ **Phone**

Shows the **HFL** information.

⇒ **Bluetooth® HandsFreeLink®** P. 248

■ **Info**

Shows the **Trip Computer**, **Clock/Wallpaper**, **Voice Info**, or **System/Device Information**.

### ■ Audio

Shows the current audio information.

### ■ Settings

Enters the customizing menu screen.

⇒ **Customized Features** P. 226

### ■ HondaLink Apps

Connects with your smartphone\*<sup>1</sup> to play personalized music, information, and social media streams.

⇒ **Smartphone Apps** P. 217



\*1 : Available on specific phones only. Check [handsfreelink.honda.com](http://handsfreelink.honda.com) for compatible phones and [hondalink.com](http://hondalink.com) for feature details.

## ■ Wallpaper Setup

You can change, store, and delete the wallpaper on the audio/information screen.

### ■ Import wallpaper

You can import up to five images, one at a time, for wallpaper from a USB flash drive.

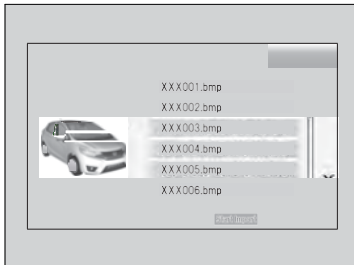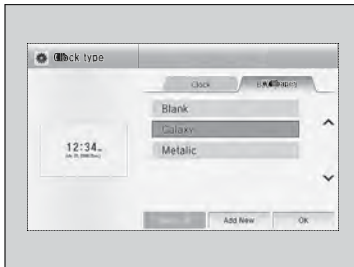

1. Connect the USB flash drive to the USB port.  
⇒ **USB Port(s)** P. 163
2. Select **Settings** to go to the **Settings** screen.
3. Select **Info**.
4. Select **Clock/Wallpaper Type**, then the **Wallpaper** tab.
5. Select **Add New**.
  - ▶ The picture name is displayed on the list.
6. Select a desired picture.
  - ▶ The preview is displayed on the left side on the screen.
7. Select **Start Import** to save the data.
  - ▶ Then the display will return to the wallpaper list.

## > > Wallpaper Setup

- When importing wallpaper files, the image must be in the USB flash drive's root directory. Images in a folder cannot be imported.
- The file name must be fewer than 256 characters.
- The file format of the image that can be imported is BMP(bmp) or JPEG(jpg).
- The individual file size limit is 5 MB.
- The maximum image size is 4,096 x 4,096 pixels. If the image size is less than 800 x 480 pixels, the image is displayed in the middle of the screen with the extra area appearing in black.
- Up to 5 files can be selected.
- If the USB flash drive does not have any pictures, the **No files detected** message appears.

### ■ Select wallpaper


1. Select **Settings** to go to the **Settings** screen.
2. Select **Info**.
3. Select **Clock/Wallpaper Type**, then the **Wallpaper** tab.
  - ▶ The screen changes to the wallpaper list.
4. Select a desired wallpaper.
  - ▶ The preview is displayed on the left side on the screen.
  - ▶ The pop-up menu appears on the screen.
5. Select **Set**.
  - ▶ The display will return to the wallpaper list.

### ■ Delete wallpaper

1. Select **Settings** to go to the **Settings** screen.
2. Select **Info**.
3. Select **Clock/Wallpaper Type**, then the **Wallpaper** tab.
  - ▶ The screen changes to the wallpaper list.
4. Select a wallpaper that you want to delete.
  - ▶ The preview is displayed on the left side on the screen.
  - ▶ The pop-up menu appears on the screen.
5. Select **Delete**.
  - ▶ The confirmation message will appear.
6. Select **Yes** to delete completely.
  - ▶ The display will return to the wallpaper list.

#### > > Wallpaper Setup

From the pop-up menu, select **Preview** to see a preview at full-size screen.

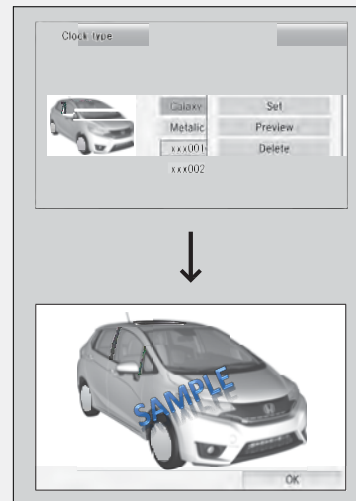


To go back to the previous screen, select **OK**, or **BACK**.

When the file size is large, it takes a while to be previewed.


To delete all wallpapers you add, select **Delete All**, then **Yes**.

## Adjusting the Sound

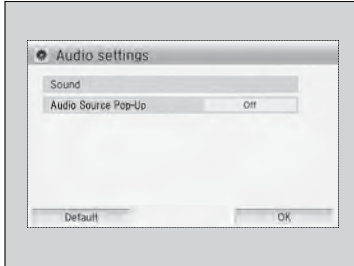

1. Select **HOME** button.
2. Select **Settings**.
3. Select **Audio**.
4. Select **Sound**.

Select the tabs to adjust the following choices:  
**BASS, TREBLE, FADER, BALANCE, SVC**  
(Speed-sensitive Volume Compensation)

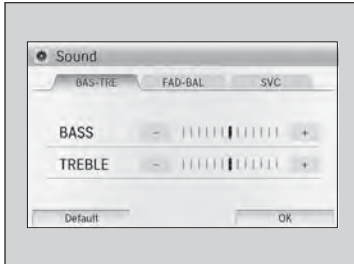


### 1 Adjusting the Sound

The SVC has four modes: **Off, Low, Mid, and High**. SVC adjusts the volume level based on the vehicle speed. As you go faster, audio volume increases. As you slow down, audio volume decreases.

## Display Setup


You can change the brightness or color theme of the audio/information screen.

### ■ Changing the Screen Brightness

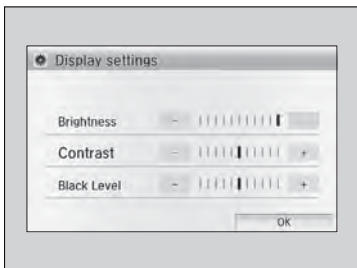

1. Select **HOME** button.
2. Select **Settings** to go to the **Settings** screen.
3. Select **System**.
4. Select the **Display** tab.
5. Select **Display Settings**.
6. Select the setting you want.
7. Select **OK**.

### ■ Changing the Screen's Color Theme

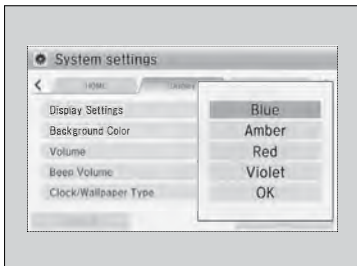


1. Select **HOME** button.
2. Select **Settings** to go to the **Settings** screen.
3. Select **System**.
4. Select the **Display** tab.
5. Select **Background Color**.
6. Select the setting you want.
7. Select **OK**.

### > > Changing the Screen Brightness

You can change the **Contrast** and **Black level** settings in the same manner.

# Playing the AM/FM Radio

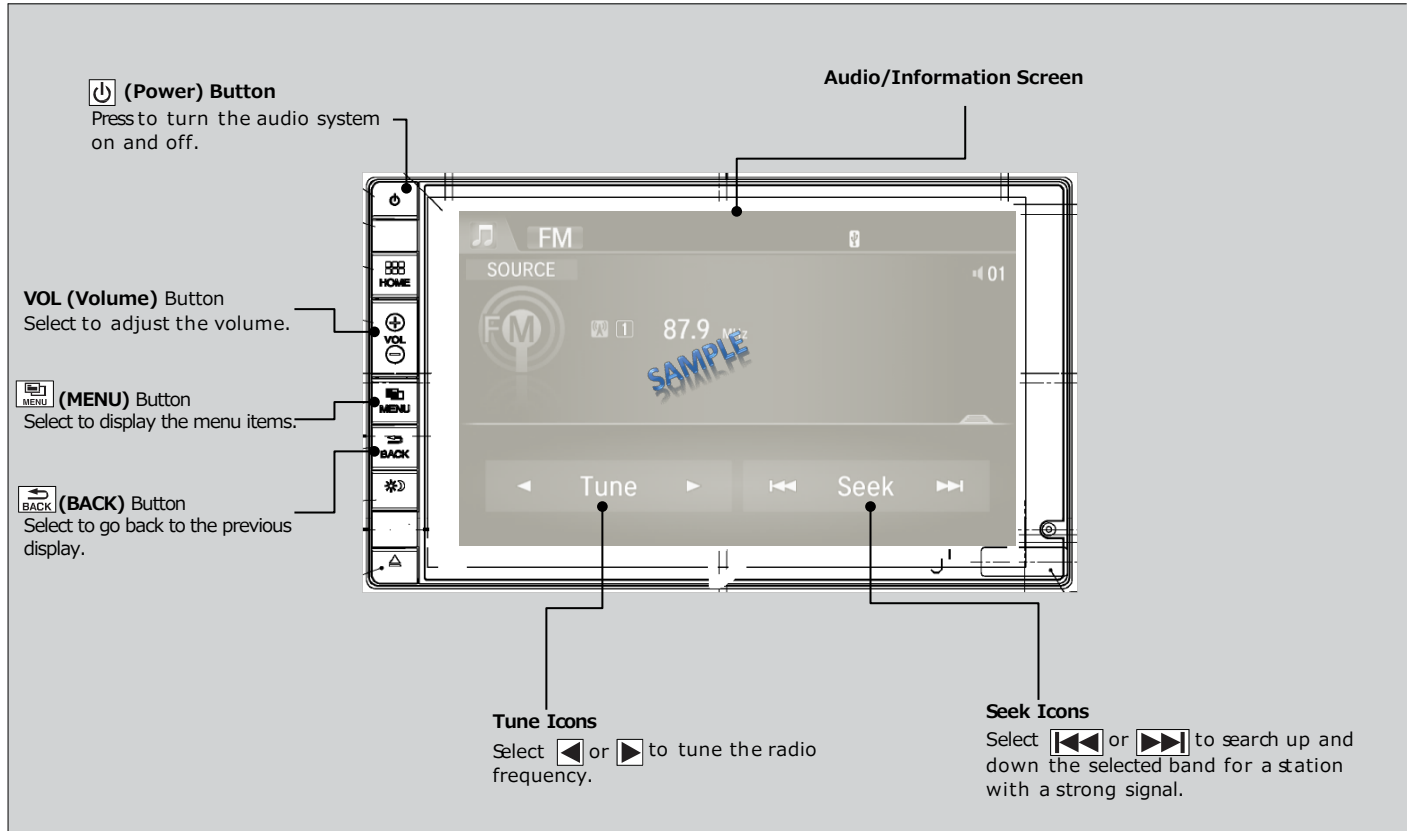

\* 1: Some or all of the lists may not be displayed.



## ■ Preset Memory

To store a station:

1. Tune to the selected station.
2. Select **MENU**.
3. Select **Save Preset**.
4. Select the preset number you want to store that station.

## ■ Radio Data System (RDS)

Provides text data information related to your selected RDS-capable FM station.

### ■ To find an RDS station from Station List

1. Select **MENU** while listening to an FM station.
2. Select **Station List**.
3. Select the station.

### ■ Manual update

Updates your available station list at any time.

1. Select **MENU** while listening to an FM station.
2. Select **Station List**.
3. Select **Refresh**.

## > > Playing the AM/FM Radio

The **ST** indicator appears on the display indicating stereo FM broadcasts.

Stereo reproduction in AM is not available.

Switching the Audio Mode

Press the **SOURCE** button on the steering wheel or select **SOURCE** on the list.

⇒ **Audio Remote Controls P. \*\*\***

You can also switch the mode by selecting **Change Source** on the **MENU** screen.

You can store 6 AM stations and 12 FM stations into the preset memory.

## > > Radio Data System (RDS)

When you select an RDS-capable FM station, the RDS automatically turns on, and the frequency display changes to the station name. However, when the signals of that station become weak, the display changes from the station name to the frequency.

### ■ Radio text

Displays the radio text information of the selected RDS station.

1. Select **MENU**.
2. Select **View Radio Text**.

### ■ Scan


Samples each of the strongest stations on the selected band for 10 seconds.

1. Select **MENU**.
2. Select **Scan**.

To turn off scan, select **Cancel**.

## Playing a CD


Your audio system supports audio CDs, CD-Rs, and CD-RWs in either MP3 or WMA, or AAC\*1 format. With the CD loaded, select the CD mode.

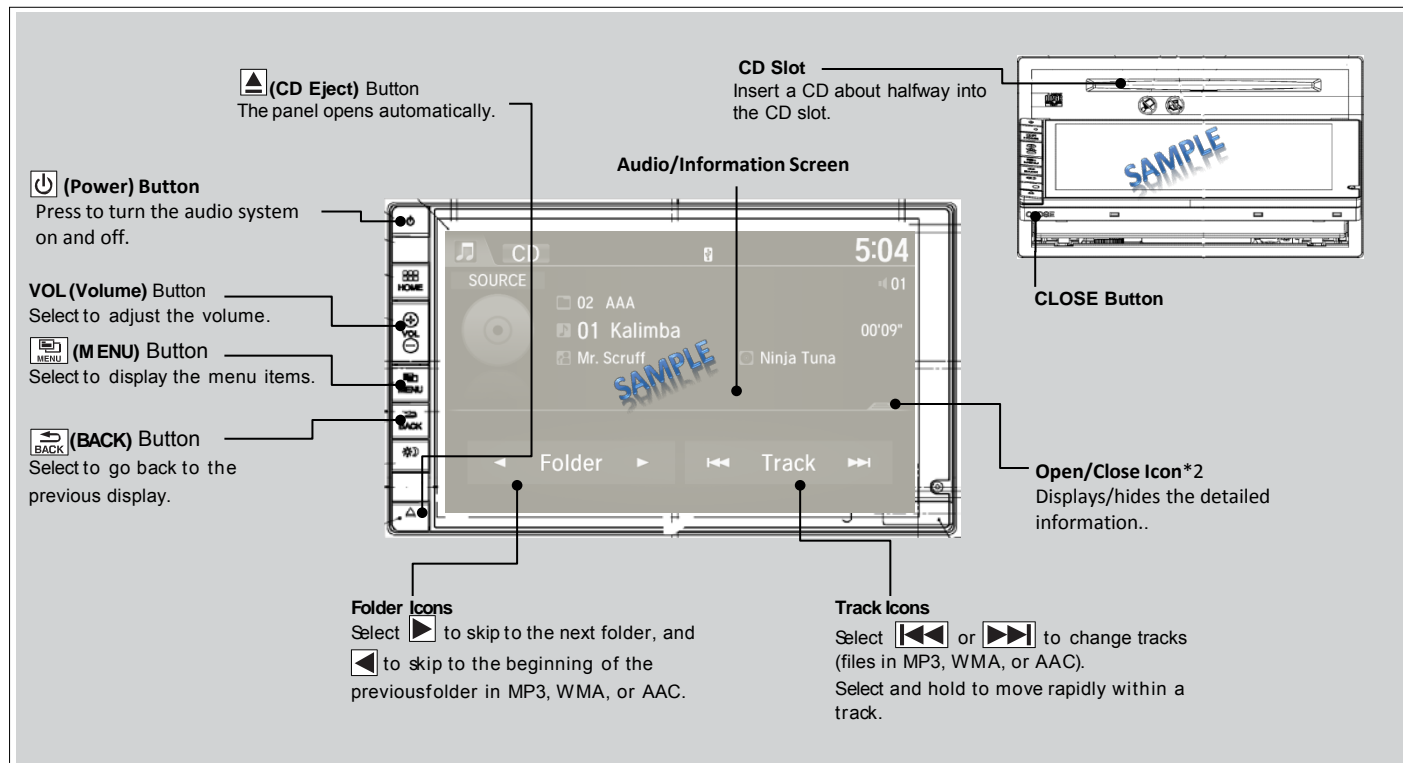

\*1 : Only AAC format files recorded with iTunes® are playable on this unit.

\*2 : Some or all of the lists may not be displayed.

## ■ How to Select a File from the Music Search List (MP3/WMA/ AAC)

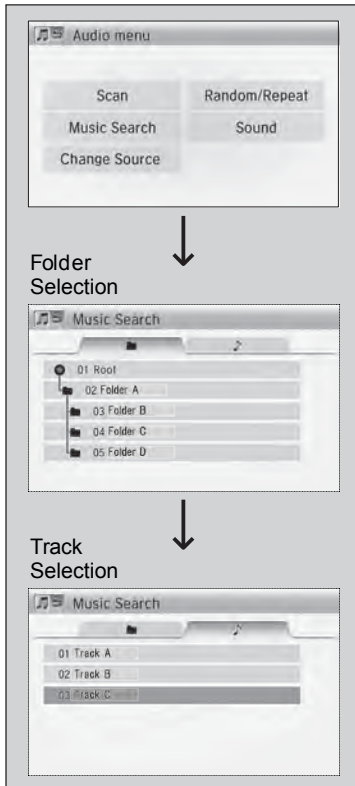

1. Select **MENU** and select **M usic Search**.

2. Select a folder.

3. Select a track.

### > > Playing a CD

#### NOTICE

Do not use CDs with adhesive labels. The label can cause the CD to jam in the unit.

WMA files protected by digital rights management (DRM) cannot be played.

The audio system displays **Unplayable File**, then skips to the next file.


Text data appears on the display under the following circumstances:

- When you select a new folder, file, or track.
- When you change the audio mode to CD.
- When you insert a CD.

If you eject the CD but do not remove it from the slot, the system reloads the CD automatically after several seconds.

## ■ How to Select a Play Mode

You can select scan, repeat, and random modes when playing a track or file.

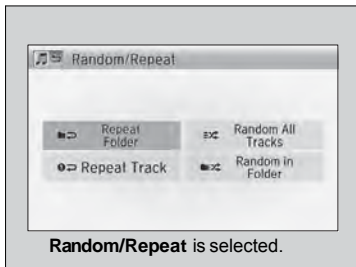

1. Select **MENU**.
2. Select **Scan** or **Random/Repeat**.
3. Select a mode.

### ■ To turn off a play mode

1. Select **MENU**.
2. Select the mode you want to turn off.

## > > How to Select a Play Mode

Play Mode Menu Items

### Scan

**Scan Folders** (MP3/WMA/AAC): Provides 10-second sampling of the first file in each of the main folders.

**Scan Tracks:** Provides 10-second sampling of all tracks on the CD (all files in the current folder in MP3, WMA, or AAC).

### Random/Repeat

**Repeat Folder** (MP3/WMA/AAC): Repeats all files in the current folder.


**Repeat Track:** Repeats the current track/file.

**Random in Folder** (MP3/WMA/AAC): Plays all files in the current folder in random order.

**Random All Tracks:** Plays all tracks/files in random order.


## Playing an iPod

Your audio system supports audio CDs, CD-Rs, and CD-RWs in either MP3 or WMA, or AAC\*1 format. With the CD loaded, select the CD mode.

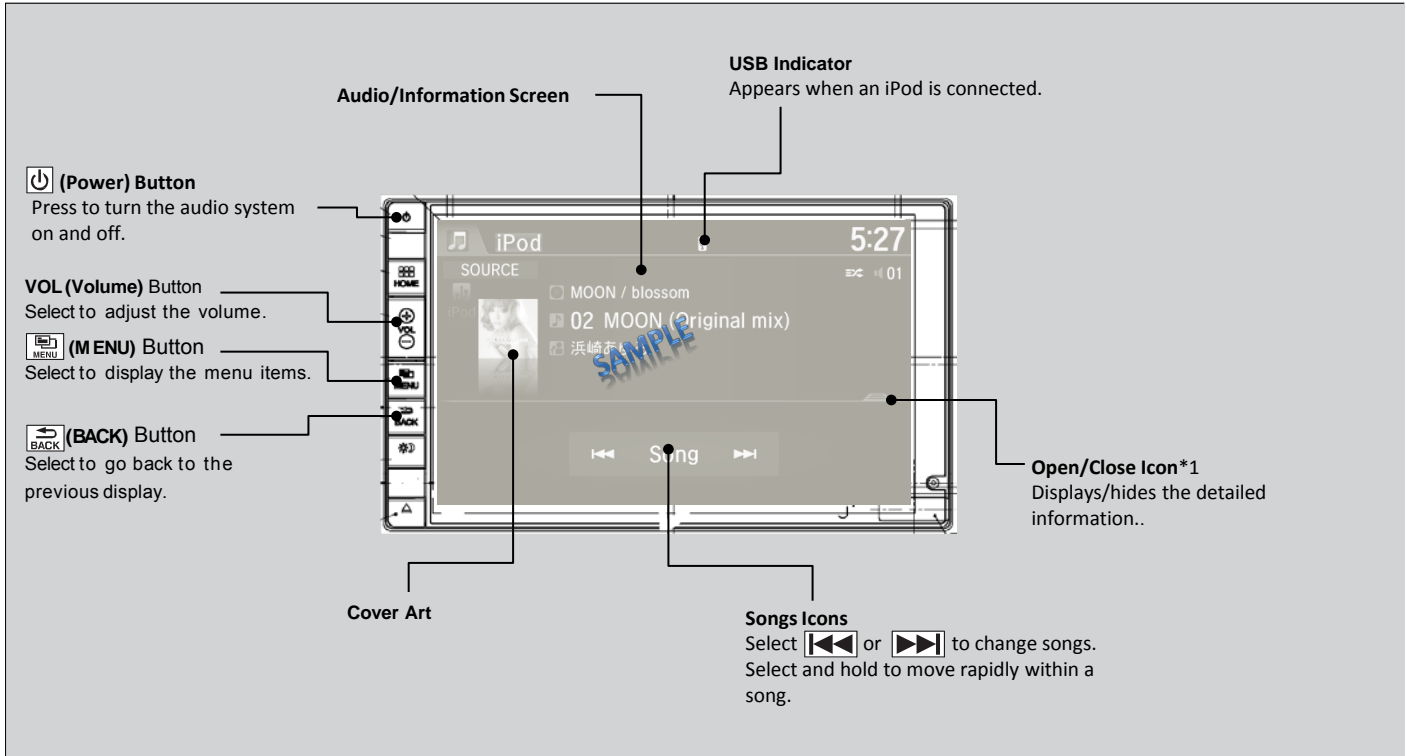

\* 1: Some or all of the lists may not be displayed.

## ■ How to Select a Song from the Music Search List

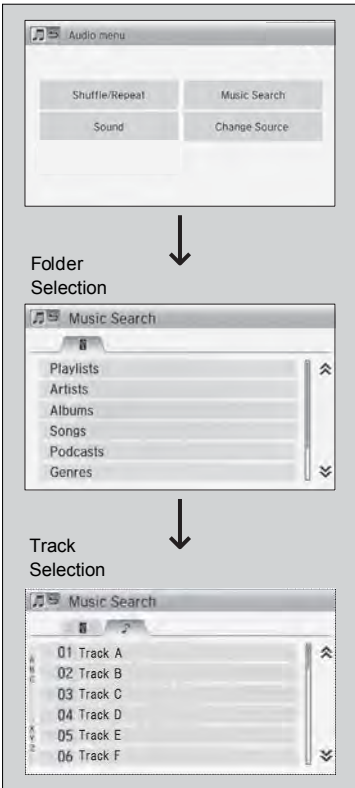

1. Select **MENU** and select **MusicSearch**.
2. Select the items on that menu.

### > > How to Select a Song from the Music Search List

Available operating functions vary on models or versions. Some functions may not be available on the vehicle's audio system.


If there is a problem, you may see an error message on the audio/information screen.

→ **iPod/USB Flash Drive P. \*\*\***

If you operate the music app on your iPhone/iPod while the phone is connected to the display audio system, you may no longer be able to operate the same app on the display audio. Reconnect the device if necessary.

## ■ How to Select a Play Mode

You can select repeat and shuffle modes when playing a file.

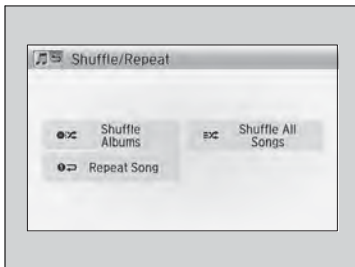

1. Select **MENU**.
2. Select **Shuffle/Repeat**.
3. Select a mode.

### ■ To turn off a play mode

1. Select **MENU**.
2. Select the mode you want to turn off.

## 1 How to Select a Play Mode

### Play Mode Menu Items

**Repeat Song:** Repeats the current file.

**Shuffle Albums:** Plays all available albums in a selected list (playlists, artists, albums, songs, genres, or composers) in random order.

**Shuffle All Songs:** Plays all available files in a selected list (playlists, artists, albums, songs, genres, or composers) in random order.



U.S. models

Compatible phones only


## Playing Internet Radio

Connect a compatible phone through *Bluetooth*®.

⇒ **Phone Setup P.** \*\*\*

iPhone only

You can also connect the phone using your dock connector to the USB port. Select **Source** to select Pandora mode.

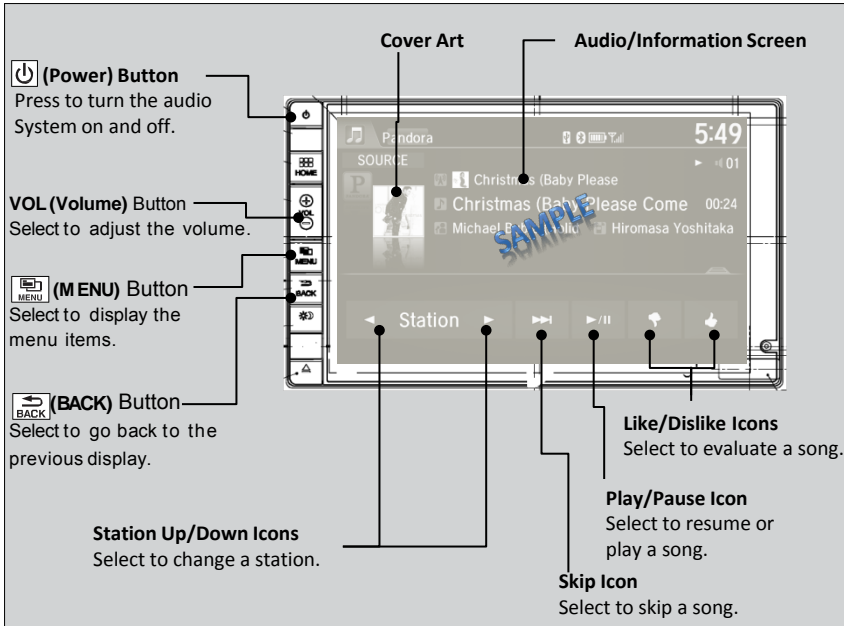

\*1 : Some or all of the lists may not be displayed.

### > > Playing Internet Radio

Pandora®, the Pandora logo, and the Pandora trade dress are trademarks or registered trademarks of Pandora Media, Inc., used with permission. Pandora is currently available exclusively in the United States.

To find out if your phone is compatible with this feature, visit [www.handsfreelink.honda.com](http://www.handsfreelink.honda.com), or call 1-888-528-7876

To use this service in your vehicle, the Pandora® app must first be installed on your phone. Visit [www.pandora.com](http://www.pandora.com). for more information.


## ■ Pandora® Menu

You can operate some of the Pandora® menu items from your vehicle's audio system.

The available items are:

- **Bookmark**
- **Station List**
- **New Station**
- **Change Source**
- **Sound**

### ■ Operating a menu item

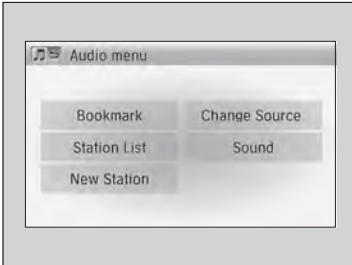

1. Select **MENU**.
2. Select an item.

### > > Playing Internet Radio

Pandora® is free, personalized radio that plays music and comedy you'll love. Just start with the name of one of your favorite artists, songs, comedians or composers and Pandora® will create a custom station that plays similar tracks. Pandora® also features hundreds of genre stations ranging from Dubstep to Smooth Jazz to Power Workout.

If you cannot operate Pandora® through the audio system, it may be streaming through *Bluetooth*® Audio. Make sure Pandora® mode on your audio system is selected.

#### Changing Stations

To change stations, activate the Pandora® menu, select **Station List**, and then select a new station.

### > > Pandora® Menu

Available operating functions vary on software versions. Some functions may not be available on the vehicle's audio system.

If there is a problem, you may see an error message on the audio/information screen.

⇒ **Pandora®P.\*\*\***


Pandora® may limit the total number of skips allowed on the service. If you dislike a track after the skip limit has been reached, your feedback will be saved but the current track will continue to play.

## Playing a USB Flash Drive

Your audio system reads and plays sound files on a USB flash drive in either MP3, WMA or AAC\*1 format.

Connect your USB flash drive to the USB port, then select the USB mode.


⇒ **USB Ports** P. \*\*\*

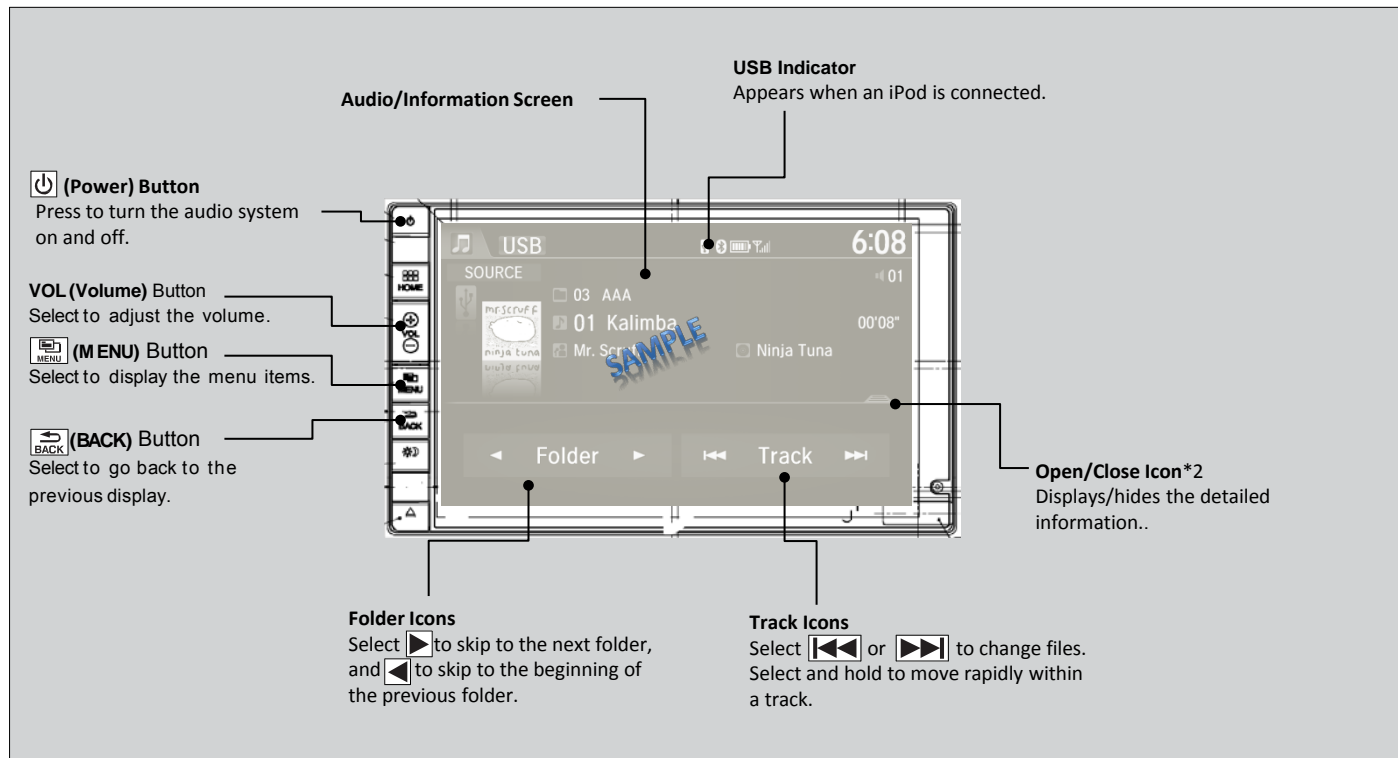

\*1 : Only AAC format files recorded with iTunes are playable on this unit.

\*2 : Some or all of the lists may not be displayed.

## ■ How to Select a File from the Music Research List

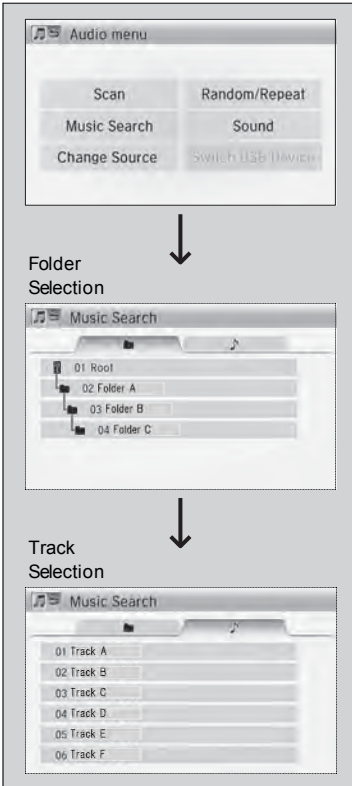

1. Select **MENU** and select **M**usic **S**earch.

2. Select a folder.

3. Select a track.

### > > Playing a USB Flash Drive

Use the recommended USB flash drives.

⇒ **General Information on the Audio System P. \*\*\***

Files in WMA format protected by digital rights management (DRM) are not played.


The audio system displays **Unplayable File**, and then skips to the next file.

If there is a problem, you may see an error message on the audio/information screen.

⇒ **iPod/USB Flash Drive P. \*\*\***

## ■ How to Select a Play Mode

You can select scan, repeat, and random modes when playing a file.

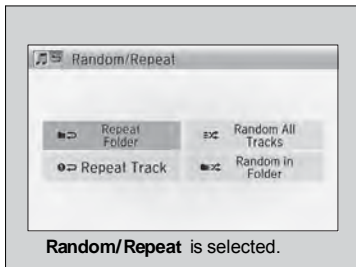

1. Select **MENU**.
2. Select **Scan** or **Random/Repeat**.
3. Select a mode.

### ■ To turn off a play mode

1. Select **MENU**.
2. Select the mode you want to turn off.

## > > How to Select a Play Mode

Play Mode Menu Items

### **Scan**

**Scan Folders:** Provides 10-second sampling of the first file in each of the main folders.

**Scan Tracks:** Provides 10-second sampling of all files in the current folder.

### **Random/Repeat**

**Repeat Folder:** Repeats all files in the current folder.

**Repeat Track:** Repeats the current file.


**Random in Folder:** Plays all files in the current folder in random order.

**Random All Tracks:** Plays all files in random order.

## Playing Bluetooth® Audio

Your audio system allows you to listen to music from your *Bluetooth*®-compatible phone. This function is available when the phone is paired and connected to the vehicle's *Bluetooth*® HandsFreeLink® (HFL) system.

⇒ **Phone Setup** P. \*\*\*

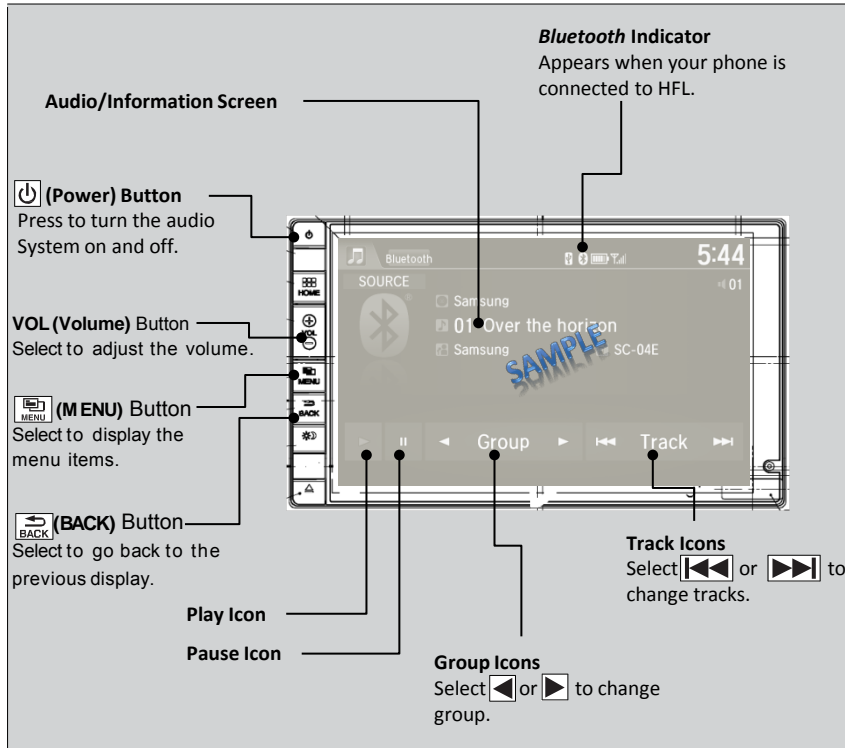

\*1: Depending on the *Bluetooth* device you connect, some or all of the lists may not be displayed.

### >>Playing Bluetooth® Audio

Not all *Bluetooth*-enabled phones with streaming audio capabilities are compatible with the system. For a list of compatible phones:

- U.S.: Visit [www.handsfreelink.honda.com](http://www.handsfreelink.honda.com), or call 1-888-528-7876.
- Canada: Visit [www.handsfreelink.ca](http://www.handsfreelink.ca), or call 1-888-528-7876.

In some states, it may be illegal to perform some data device functions while driving.

Only one phone can be used with HFL at a time. When there are more than two paired phones in the vehicle, the first paired phone the system finds is automatically linked.

If more than one phone is paired to the HFL system, there may be a delay before the system begins to play.

In some cases, the name of the artist, album, or track may not appear correctly.

A **NO CONNECT** message may be displayed if:

- The phone is not linked to HFL.
- The phone is not turned on.
- The phone is not in the vehicle.
- An incompatible phone is connected.

The following functions may not be available on some devices:

- Pause function
- Group selection

## ■ To Play *Bluetooth*® Audio Files




1. Make sure that your phone is paired and connected to HFL.
2. Press the *Bluetooth*® Audio mode.

If the phone is not recognized, another HFL-compatible phone, which is not compatible for *Bluetooth*® Audio, may already be connected.

### ■ To pause or resume a file

Select the play icon or pause icon.

## ■ Searching for Music

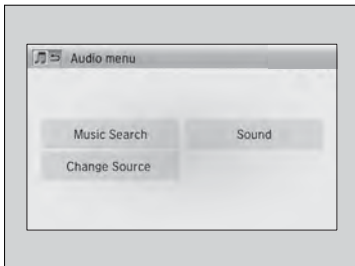

1. Select **MENU**.
2. Select **Music Search**.
3. Select a search category (e.g., Albums).
4. Select an item.
  - u The selection begins playing.

### > > To Play *Bluetooth*® Audio Files

To play the audio files, you may need to operate your phone. If so, follow the phone maker's operating instructions.

Switching to another mode pauses the music playing from your phone.


### > > Searching for Music

Depending on the *Bluetooth* device you connect, some or all of the lists may not be displayed.

## Playing a Video Using the HDMI®


Your audio system allows you to play videos from an HDMI®-compatible device.  
Connect the device, using an HDMI® cable, then select the HDMI® mode.

⇒ **HDMI® Port\* P. \*\*\***

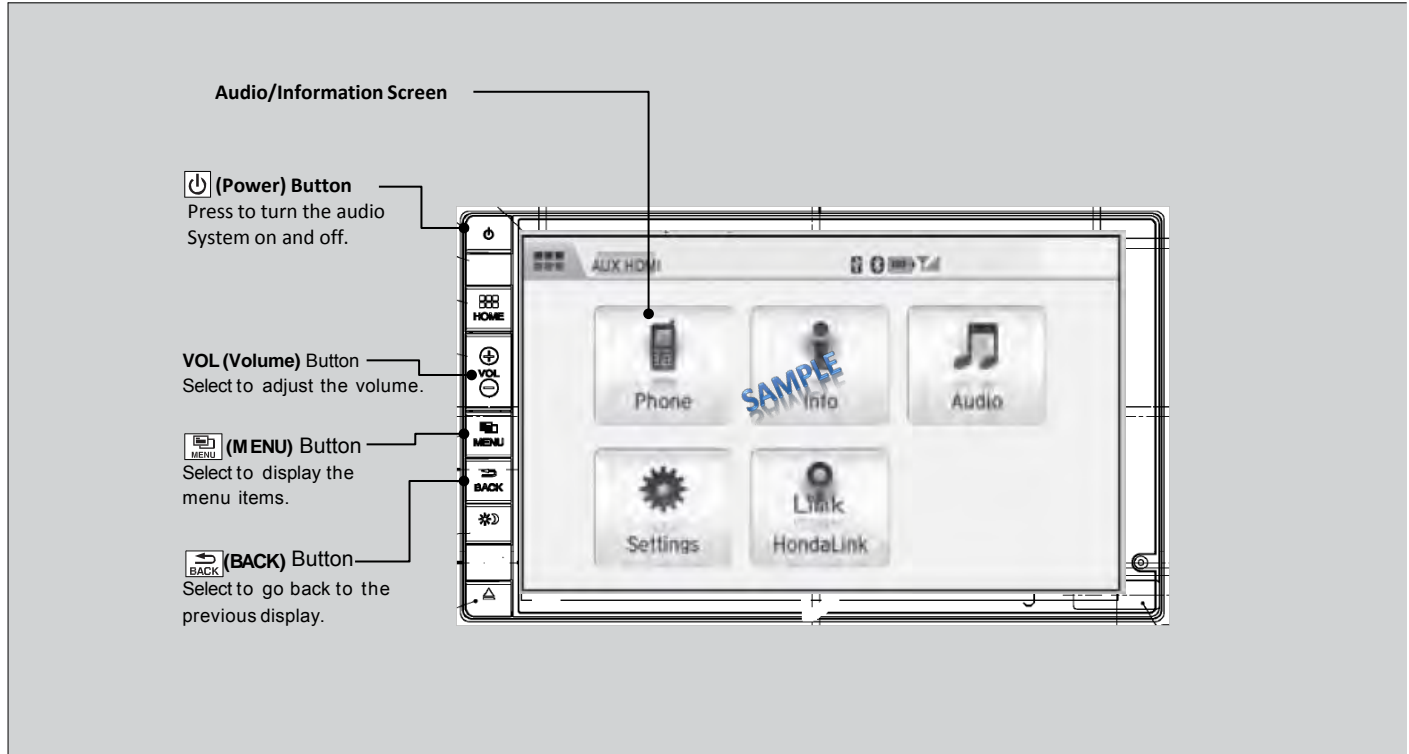



## ■ Changing the Screen Aspect

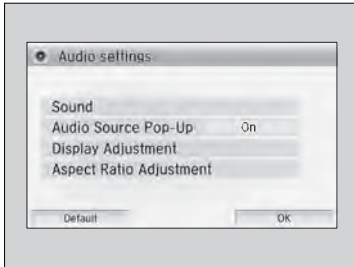


1. Select **HOME**.
2. Select **Settings** to go to the **Settings** screen.
3. Select **Audio**.
4. Select **Aspect Ratio Adjustment**.
5. Select the setting you want.
6. Select **OK**.

## >>Playing a Video Using the HDMI®

This feature is limited while driving. To play videos, stop your vehicle and apply the parking brake.

## Smartphone Apps

You can connect a compatible smartphone to the system to enable integration between the smartphone's approved apps and the vehicle. This allows you to control the phone through the vehicle display. To check smart phone compatibility, download the HondaLink app, and view connection instructions, visit [handsfreelink.honda.com](http://handsfreelink.honda.com). For the latest apps and feature details, check [hondalink.com](http://hondalink.com).

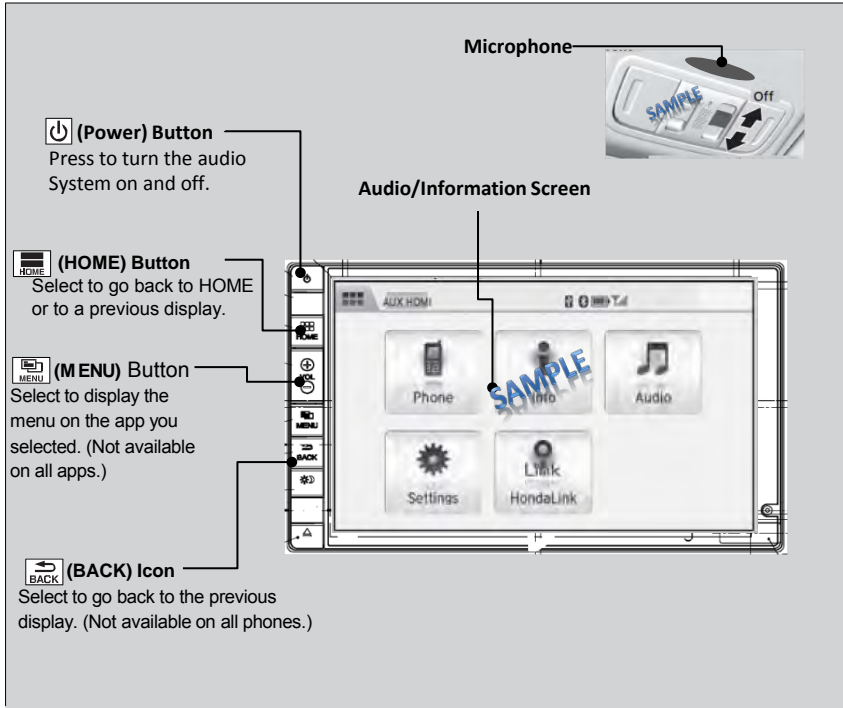

### >> Smartphone Apps

Park in a safe place before connecting your phone and while operating the displayed apps.

Not all phones and apps are compatible with the system. The system does not display all the available apps on smartphone, and some apps need to be preinstalled. Ask a dealer for details.

You need to switch the *Bluetooth* connection to your smartphone if another electronic device is connected.

⇒ **Changing the currently paired phone P. \*\*\***

The following may vary by phone type:

- Connection methods.
- How to connect a smartphone to the system.
- Apps that can be operated on the screen.
- Display response time/update time.

We do not support every app operation on the display audio. Ask the app provider for any questions on the app's features

## Siri Eyes Free

You can talk to Siri using the Talk button on the steering wheel when your iPhone is paired to *Bluetooth*® HandsFreeLink®.

⇒ **Phone Setup P. \*\*\***

### > > Siri Eyes Free

Siri is a trademark of Apple Inc.


Check Apple Inc. website for features available for Siri.

When operating the vehicle, only use Siri through the Talk button.

### > > Using Eyes Free




Some commands work only on specific phone features or apps.
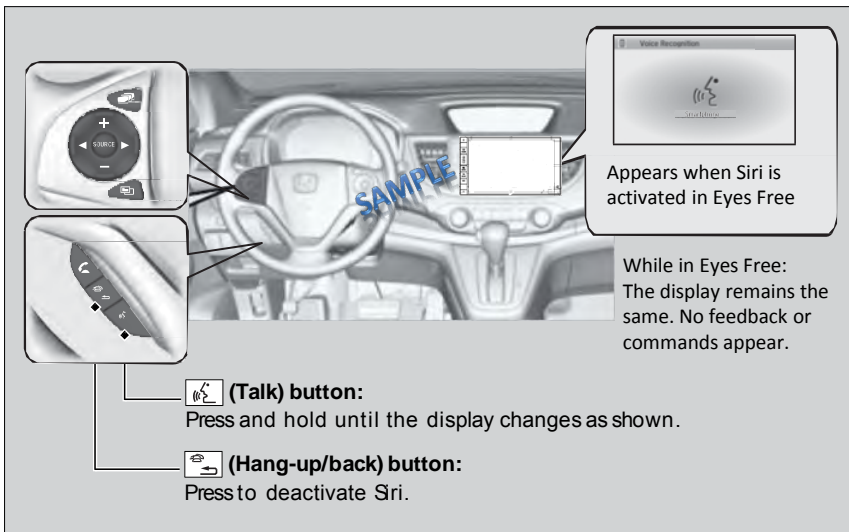
## ■ Using Eyes Free



## CD Player

If a disc error occurs, you may see the following error messages.

Error Message	Cause	Solution
Unplayable File	Track/file format not supported	<ul style="list-style-type: none"><li>• Current track/file will be skipped. The next supported track/file plays automatically.</li></ul>
Bad Disc Please Check Owners Manual Push Eject	Mechanical error	<ul style="list-style-type: none"><li>• Press the  (eject) button and remove the disc, and check that the error message is cleared.</li><li>• Check that the disc is not damaged or deformed, and insert the disc again.<ul style="list-style-type: none"><li>⇒ <b>Protecting CDs P. ***</b></li></ul></li><li>• If the error message reappears, press the  button, and pull out the disc.</li><li>• Insert a different disc. If the new disc plays, there is a problem with the first disc.</li><li>• If the error message repeats, or the disc cannot be removed, contact a dealer. Do not try to force the disc out of the player.</li></ul>
Mecha Error		
Bad Disc Please Check Owners Manual	Servo error	<ul style="list-style-type: none"><li>• If the error message reappears, press the  button, and pull out the disc.</li><li>• Insert a different disc. If the new disc plays, there is a problem with the first disc.</li><li>• If the error message repeats, or the disc cannot be removed, contact a dealer. Do not try to force the disc out of the player.</li></ul>
Check Disc	Disc error	<ul style="list-style-type: none"><li>• Check that the disc is not damaged or deformed.<ul style="list-style-type: none"><li>⇒ <b>Protecting CDs P. ***</b></li></ul></li></ul>
		<ul style="list-style-type: none"><li>• Turn the audio system off and allow the player to cool down until the error message is cleared.</li></ul>

## iPod/USB Flash Drive

If an error occurs while playing an iPod or USB flash drive, you may see the following error messages. If you cannot clear the error message, contact a dealer.

Error Message	Solution
<b>USB Error</b>	Appears when there is a problem with the USB adapter unit. Check if the device is compatible with the USB adapter unit.
<b>The connected USB device has a problem. See Owner's Manual</b>	Appears when an incompatible device is connected. Disconnect the device. Then turn the audio system off, and turn it on again. Do not reconnect the device that caused the error.
<b>Unsupported Version</b>	Appears when an unsupported iPod is connected. If it appears when a supported iPod is connected, update the iPod software to the newer version.
<b>Connect Retry</b>	Appears when the system does not acknowledge the iPod. Reconnect the iPod.
<b>Unplayable File</b>	Appears when the files in the USB flash drive are DRM or an unsupported format. This error message appears for about 3 seconds, then plays the next song.
<b>No Data</b>	<b>iPod</b> Appears when the iPod is empty.
	<b>USB flash drive</b> Appears when the USB flash drive is empty or there are no MP3, WMA, or AAC files in the USB flash drive.
	<b>iPod and USB flash drive</b> Check that compatible files are stored on the device.
<b>Unsupported</b>	Appears when an unsupported device is connected. If it appears when a supported device is connected, reconnect the device.

## Pandora®

If an error occurs while playing Pandora® you may see the following error messages. If you cannot clear the error message, contact a dealer.

Error Message	Solution
<b>The maximum number of stations that can be created is 100. To create more, please delete one or more previously created stations.</b>	<ul style="list-style-type: none"> <li>● Appears when the number of stations that can be created is exceeded. Follow the message.</li> </ul>
<b>Unable to create new station. Please try again.</b>	
<b>Unable to play Pandora. Please try again later.</b>	<ul style="list-style-type: none"> <li>● Appears when the commanded operation is failed. Try again later.</li> </ul>
<b>Unable to save bookmark.</b>	
<b>This Pandora station is currently not available. Please select another station.</b>	<ul style="list-style-type: none"> <li>● Appears when the station you selected is not available. Change a station, or try again later.</li> </ul>
<b>Unable to play Pandora. When stopped, log-in to Pandora.</b>	<ul style="list-style-type: none"> <li>● Appears when you have not logged into Pandora®. Follow the message.</li> </ul>
<b>Unable to connect to Pandora. When stopped, check your mobile phone.</b>	
<b>Unable to play Pandora. Please try again later.</b>	<ul style="list-style-type: none"> <li>● Appears when failed to connect. Check your device and try again.</li> </ul>
<b>Connect Retry</b>	

Error Message	Solution
<b>Unsupported</b>	<ul style="list-style-type: none"> <li>● Appears when the device is not supported. Use another device.</li> </ul>
<b>Unsupported Version</b>	<ul style="list-style-type: none"> <li>● Appears when Pandora® version is not supported. Update Pandora® to the latest version.</li> </ul>
<b>Pandora App version is not supported</b>	<ul style="list-style-type: none"> <li>● Appears when Pandora® is unable to play music. Check the Bluetooth status on your device.</li> </ul>
<b>Unable to connect to the phone. Please make sure the phone's Bluetooth setting is ON and try again.</b>	<ul style="list-style-type: none"> <li>● Appears when no data is available with Pandora® activated. Reboot the app and reconnect the device.</li> </ul>
<b>No Data</b>	<ul style="list-style-type: none"> <li>● Appears when an incompatible device is connected. Disconnect the device. Then turn the audio system off, and turn it again. Do not reconnect the device that caused the error.</li> </ul>
<b>The connected USB device has a problem. See Owner's Manual</b>	<ul style="list-style-type: none"> <li>● Appears when there is no station list on the device. Create one on your device.</li> </ul>
<b>No station list on device. Use device to create station.</b>	<ul style="list-style-type: none"> <li>● Appears when there is no station on app. Store some.</li> </ul>
<b>No Stations stored in Pandora App</b>	<ul style="list-style-type: none"> <li>● Appears when you try to skip a song or select <b>Dislike</b> over the predetermined number of times in an hour.</li> </ul>
<b>The maximum number of tracks that can be skipped per hour has been reached.</b>	

## Recommended CDs

- Use only high-quality CD-R or CD-RW discs labeled for audio use.
- Use only CD-R or CD-RW discs on which the recordings are closed.
- Play only standard round-shaped CDs.

The CD packages or jackets should have one of these marks.



### ■ CDs with MP3, WMA, or AAC files

- Some software files may not allow for audio play or text data display.
- Some versions of MP3, WMA, or AAC formats may be unsupported.

### > > Recommended CDs

A Dual-disc cannot play on this audio unit. If recorded under certain conditions, a CD-R or CD-RW may not play either.



## ■ Protecting CDs

Follow these precautions when handling or storing CDs:

- Store a CD in its case when it is not being played.
- When wiping a CD, use a soft clean cloth from the center to the outside edge.
- Handle a CD by its edge. Never touch either surface.
- Never insert foreign objects into the CD player.
- Keep CDs out of direct sunlight and extreme heat.
- Do not place stabilizer rings or labels on the CD.
- Avoid fingerprints, liquids, and felt-tip pens on the CD.

### > > Protecting CDs

#### NOTICE

 
Do not insert a damaged CD. It may be stuck inside and damage the audio unit.

#### Examples:

- Bubbled, wrinkled, labeled, and excessively thick CDs



Bubbled/  
Wrinkled



With Label/  
Sticker



Using  
Printer Label  
Kit

 


Sealed




With Plastic Ring

- Damaged CDs



Chipped/  
Cracked

 

Warped



Burrs

- Poor quality CDs

- Small CDs



3-inch (8-cm)  
CD

## Compatible iPod, iPhone, and USB Flash Drives

### ■ iPod and iPhone Model Compatibility

Model
iPod (5th generation)
iPod classic 80GB/160GB (launch in 2007)
iPod classic 120GB (launch in 2008)
iPod classic 160GB (launch in 2009)
iPod nano
iPod touch
iPhone 3G/iPhone 3GS/iPhone 4/iPhone 4S/iPhone 5

### ■ USB Flash Drives

- Use a recommended USB flash drive of 256 MB or higher.
- Some digital audio players may not be compatible.
- Some USB flash drives (e.g., a device with security lockout) may not work.
- Some software files may not allow for audio play or text data display.
- Some versions of MP3, WMA, or AAC formats may be unsupported.

#### > > iPod and iPhone Model Compatibility

This system may not work with all software versions of these devices.

#### > > USB Flash Drives

Files on the USB flash drive are played in their stored order. This order may be different from the order displayed on your PC or device.

# Customized Features

Use the audio/information screen to customize certain features.

## Models with navigation system


See the navigation system manual for information of the customized features.

## Models without navigation system

### ■ How to customize

While the vehicle is at a complete stop with the ignition switch in ON II \*1, select **Settings**, then select a setting item.

Audio/Information Screen

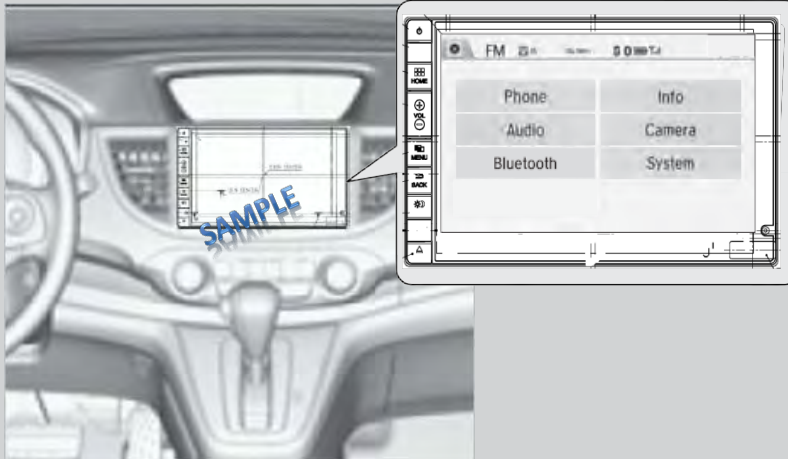

\* 1: Models with the smart entry system have an **ENGINE START/STOP** button instead of an ignition switch.

## >> Customized Features

When you customize settings:

- Make sure that the vehicle is at a complete stop.
- **Automatic transmission (CVT) models**  
Shift to P.
- **Manual transmission models**  
Set the parking brake.

## >>How to customize


To customize other features, select **Settings**.

⇒ **List of customizable options P. \*\*\***

### ■ Customization Flow


Select **HOME**.

Select **Settings**.

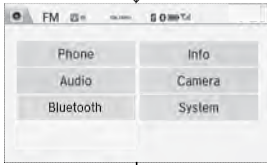


Features


System

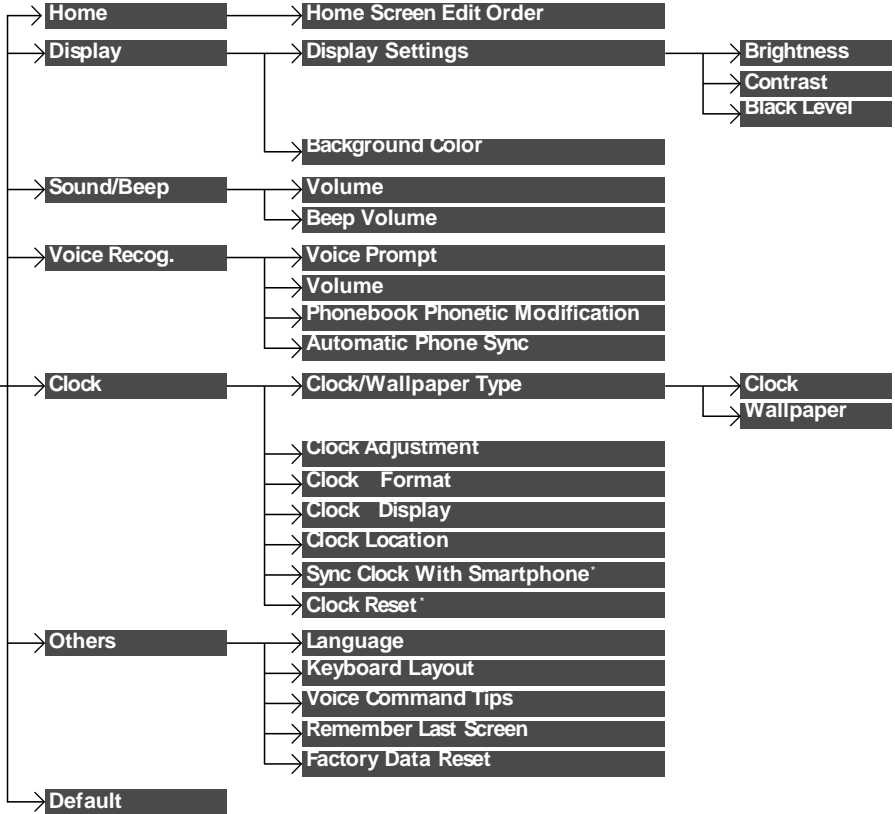

\* Not available on all models

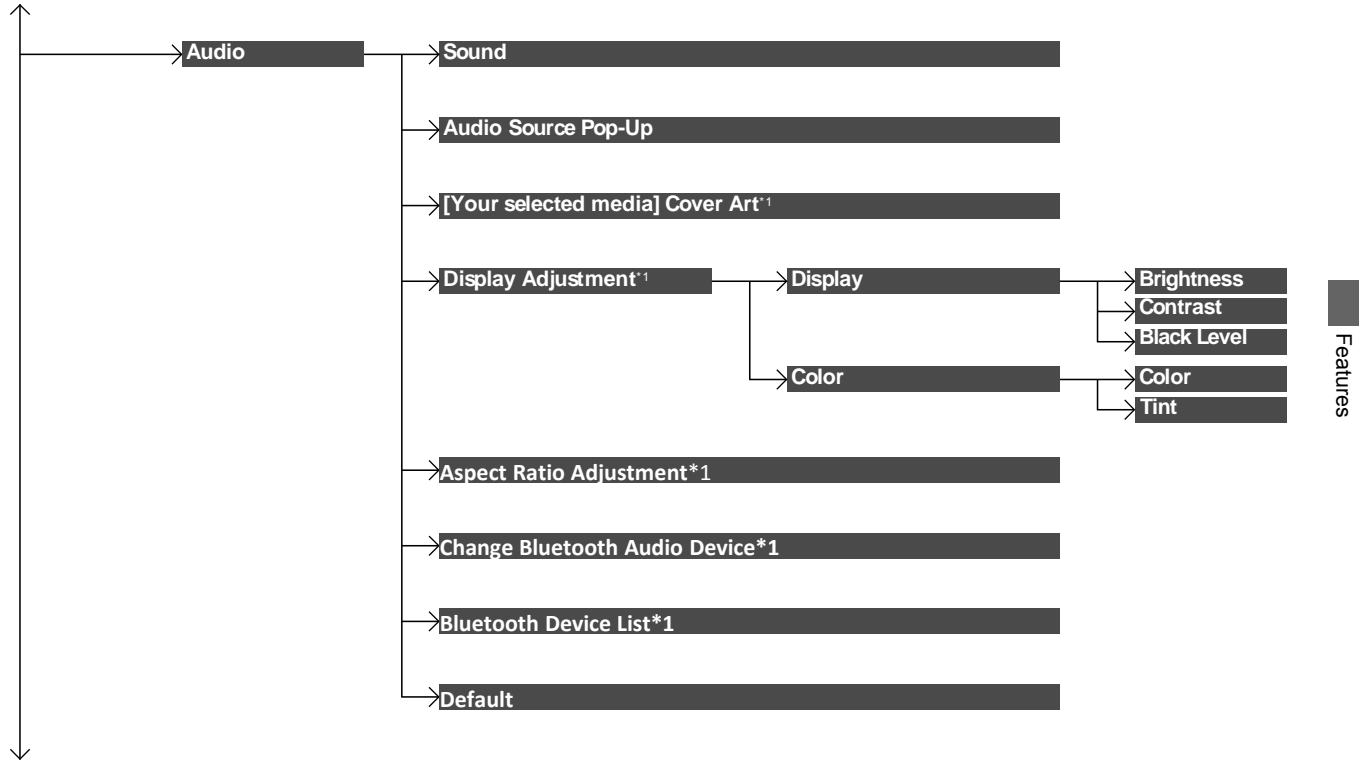



\*1: May change depending on your currently selected source.

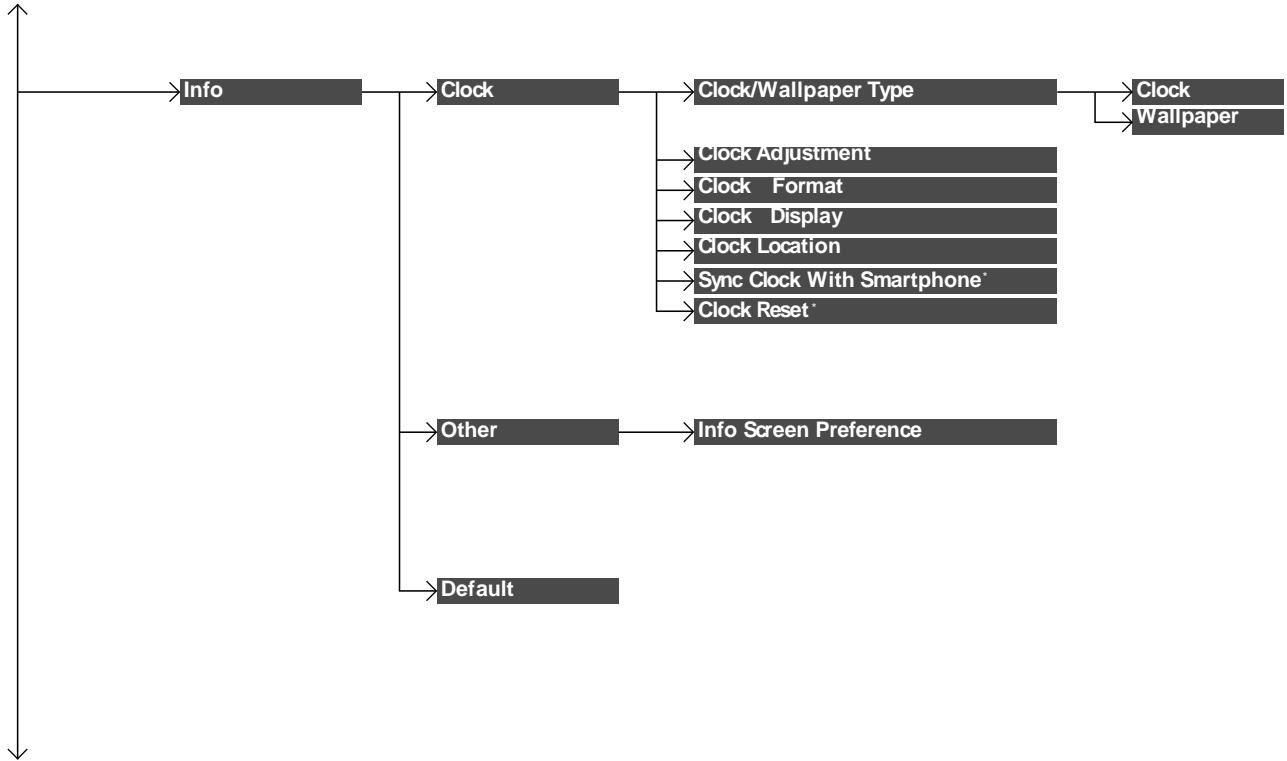

Features

\* Not available on all models

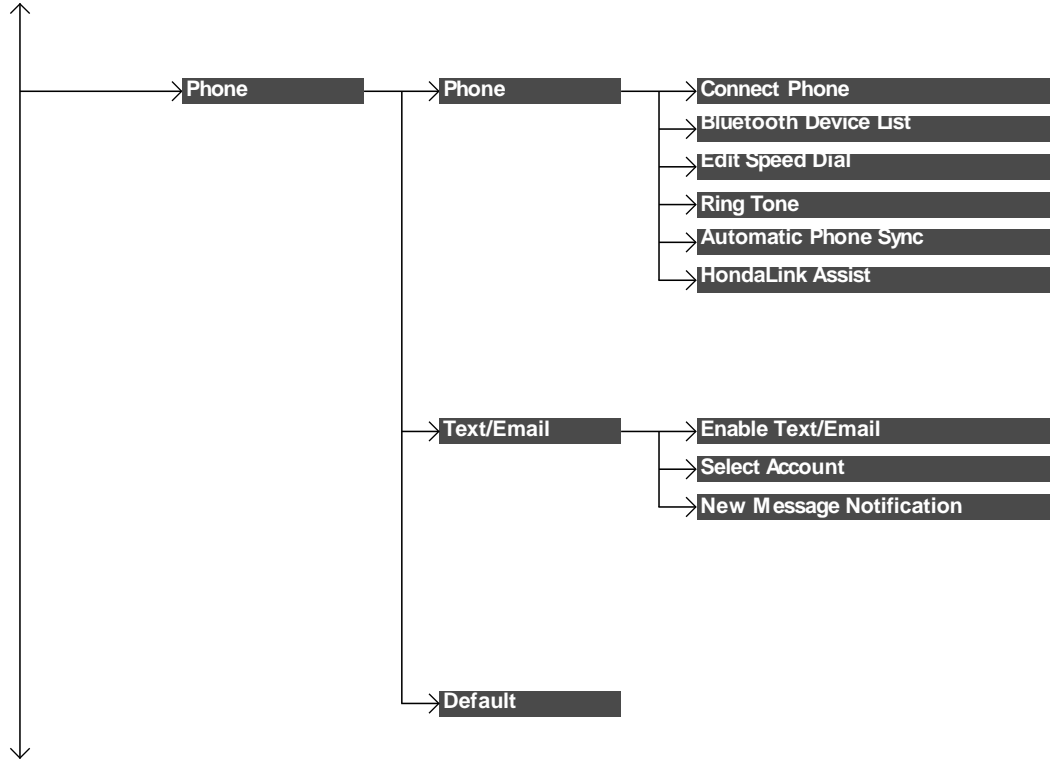

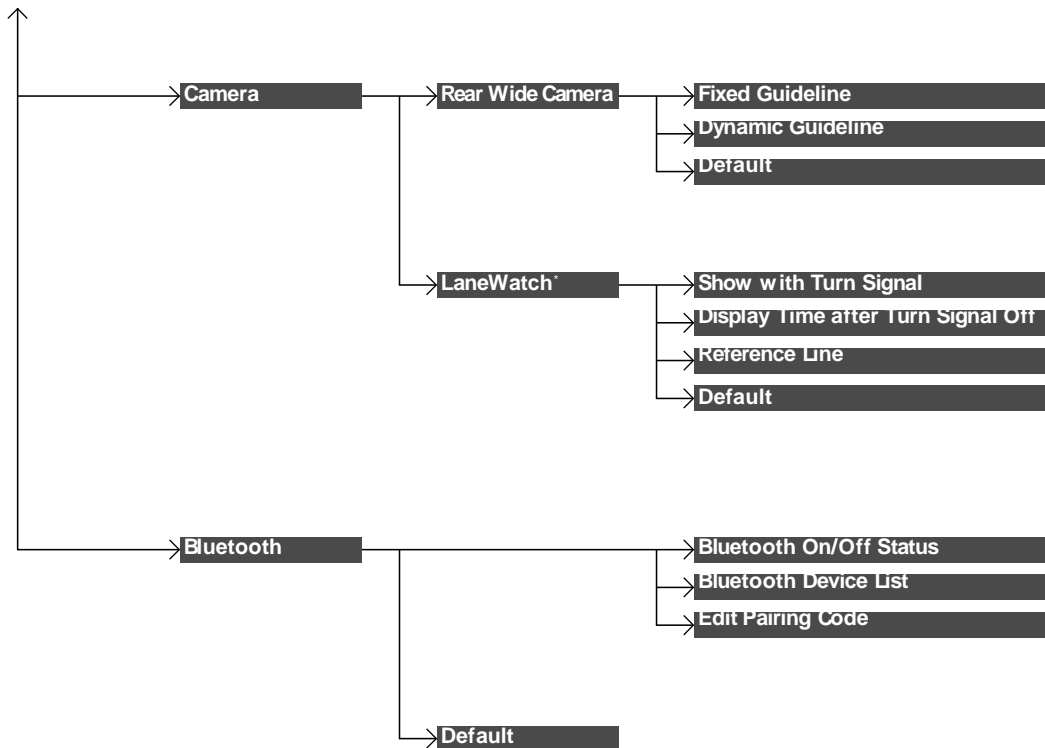

\* Not available on all models



■ List of customizable options

Setup Group	Customizable Features		Description	Selectable Settings	
System	Home	Home Screen Edit Order	Changes the <b>HOME</b> screen icon layout.	—	
	Display	Brightness	Changes the brightness of the audio/information screen.	—	
		Display Settings	Contrast	Changes the contrast of the audio/information screen.	—
		Black Level	Changes the black level of the audio/information screen.	—	
		Background Color	Changes the background color of the audio/information screen.	<b>Blue<sup>*1</sup>/Amber/Red/Violet</b>	
	Sound/Beep	Volume	Changes the sound volume.	<b>0-6<sup>*1</sup>-11</b>	
Beep Volume		Changes the beep volume.	<b>Off/1/2<sup>*1</sup>/3</b>		

\*1: Default Setting

Setup Group	Customizable Features	Description	Selectable Settings		
System	Voice Recog.	<b>Voice Prompt</b>	Turnsthe voice prompt on and off.	<b>On<sup>*1</sup>/Off</b>	
		<b>Volume</b>	Changes the volume of the voice prompt.	<b>0-6<sup>*1</sup>-11</b>	
		<b>Phonebook Phonetic Modification</b>	Modifies a voice command for the phonebook.	—	
		<b>Automatic Phone Sync</b>	Sets a phonebook data to be automatically imported when a phone is paired to HFL.	<b>On/Off</b>	
	Clock	Clock/ Wallpaper Type	<b>Clock</b>	Changes the clock display type.	<b>Analog/Digital<sup>*1</sup>/Small Digital/Off</b>
			<b>Wallpaper</b>	<ul style="list-style-type: none"> <li>● Changes the wallpaper type.</li> <li>● Imports an image file for a new wallpaper.</li> <li>● Deletes an image file for a wallpaper. ⇒ <b>Wallpaper Setup P.***</b></li> </ul>	<b>Blank/Galaxy<sup>*1</sup>/Metallic</b>
		Clock	<b>Clock Adjustment</b>	Adjusts Clock. ⇒ <b>Clock P.***</b>	—
			<b>Clock Format</b>	Selects the digital clock display from 12H to 24H.	<b>12H<sup>*1</sup>/24H</b>
			<b>Clock Display</b>	Selects whether the clock display comes on.	<b>On/Off<sup>*1</sup></b>
			<b>Clock Location</b>	Changes the clock display layout.	<b>Right upper<sup>*1</sup>/Left upper/ Right lower/Left lower/Off</b>
<b>Sync Clock With Smartphone<sup>*</sup></b>			Selects whether the clock links to the device you connect.	<b>On<sup>*1</sup>/Off</b>	
<b>Clock Reset<sup>*</sup></b>			Cancels/Resets all customized items for clock display as default.	<b>Yes/No</b>	

\*1 : Default Setting

\* Not available on all models

Setup Group	Customizable Features	Description	Selectable Settings	
<b>System</b>	<b>Others</b>	<b>Language</b>	Changes the display language.	<b>English<sup>*1</sup>/French/Spanish</b>
		<b>Keyboard Layout</b>	Selects the on-screen keyboard type.	<b>Alphabet/QWERTY<sup>*1</sup></b>
		<b>Voice Command Tips</b>	Alerts you when manual control of the system is disabled to prevent distraction while driving. Only voice commands are available.	<b>On<sup>*1</sup>/Off</b>
		<b>Remember Last Screen</b>	Selects whether the device remembers the last screen.	<b>On/Off<sup>*1</sup></b>
		<b>Factory Data Reset</b>	Resets all the settings to their factory default.	<b>Yes/No</b>
	<b>Default</b>	Cancels/Resets all customized items in the <b>System</b> group as default.	<b>Yes/No</b>	
<b>Audio</b>	<b>Sound</b>	Adjusts the settings of the audio speaker's sound ⇒ <b>Adjusting the Sound P.</b> ***	<b>(FADER), L9~0<sup>*1</sup>~R9 (BALANCE), Off/Low/Mid<sup>*1</sup>/High (SVC)</b>	
	<b>Audio Source Pop-Up</b>	Selects whether the list of selectable audio sources comes on or not when <b>Audio</b> is selected on the <b>HOME</b> screen.	<b>On/Off<sup>*1</sup></b>	

\*1 : Default Setting

Setup Group	Customizable Features	Description	Selectable Settings		
Audio	iPod or USB mode [Your selected media] <b>Cover Art</b>	Turns on and off the cover art display.	<b>On*1/Off</b>		
	HDMI mode <b>Display Adjustment</b>	<b>Display</b>	<b>Brightness</b>	⇒ <b>System P.***</b>	
		<b>Color</b>	<b>Contrast</b>		—
			<b>Black Level</b>		
	<b>Color</b>	<b>Color</b>	Changes the color of the audio/information screen.	—	
		<b>Tint</b>	Changes the tint of the audio/information screen.	—	
	HDMI mode <b>Aspect Ratio Adjustment</b>	Changes the aspect ratio and zoom settings of the audio/information screen.	<b>Normal/Full /Zoom</b>		
	Bluetooth mode <b>Change Bluetooth Audio Device</b>	Connects, disconnects or pairs a <i>Bluetooth</i> ® Audio device to HFL.	—		
	Bluetooth mode <b>Bluetooth Device List</b>	Pairs a new phone to HFL, edits or deletes a paired phone. ⇒ <b>Phone Setup P.***</b>	—		
	<b>Default</b>	Cancels/Resets all customized items in the <b>Audio</b> group as default.	<b>Yes/No</b>		

\*1 : Default Setting

Setup Group	Customizable Features	Description	Selectable Settings	
<b>Info</b>	<b>Clock/ Wallpaper</b> <hr/> <b>type</b> <hr/> <b>Clock Adjustment</b> <hr/> <b>Clock Format</b> <hr/> <b>Clock Display</b> <hr/> <b>Clock Location</b> <hr/> <b>Sync Clock With Smartphone*</b> <hr/> <b>Clock Reset*</b>	<hr/> <b>Clock Wallpaper</b> <hr/> <hr/> ⇒ <b>System P.***</b>		
	<b>Other</b>	<b>Info Screen Preference</b>	Changes the Info Screen type.	<b>Info Top/Info Menu/Off<sup>1</sup></b>
	<b>Default</b>		Cancels/Resets all customized items in the <b>Info</b> group as default.	<b>Yes/No</b>

\*1 : Default Setting

\* Not available on all models

Setup Group	Customizable Features	Description	Selectable Settings	
Phone	<b>Connect Phone</b>	Pairs a new phone to HFL, connects or disconnects a paired phone. ⇒ <b>Phone Setup P.</b> ***	—	
	<b>Bluetooth Device List</b>	Pairs a new phone to HFL, edits or deletes a paired phone. ⇒ <b>Phone Setup P.</b> ***	—	
	<b>Edit Speed Dial</b>	Edits, adds or deletes a speed dial entry. ⇒ <b>Speed Dial P.</b> ***	—	
	<b>Ring Tone</b>	Selects the ring tone.	<b>Fixed/Mobile Phone</b> *1	
	<b>Automatic Phone Sync</b>	Sets a phonebook data to be automatically imported when a phone is paired to HFL.	<b>On/Off</b>	
	<b>HondaLink Assist</b>	Turns HondaLink Assist on and off.	<b>On/Off</b> *1	
	<b>Text/Email</b>	<b>Enable Text/Email</b>	Turns the text message/e-mail function on and off.	<b>On</b> *1/Off
		<b>Select Account</b>	Selects a mail or text message account.	—
		<b>New Message Notification</b>	Selects whether a pop-up alert comes on the screen when HFL receives a new text message/e-mail.	<b>On/Off</b> *1
	<b>Default</b>	Cancels/Resets all customized items in the <b>Phone and Text/Email</b> group as default.	<b>Yes/No</b>	

\*1 : Default Setting

Setup Group	Customizable Features	Description	Selectable Settings
Camera	Rear Wide Camera	<b>Fixed Guideline</b>	Selects whether the fixed guidelines come on on the rear camera monitor. <b>On*1/Off</b>
		<b>Dynamic Guideline</b>	Selects whether the dynamic guidelines come on on the rear camera monitor. <b>On*1/Off</b>
		<b>Default</b>	Cancels/Resets all customized items in the <b>Rear Wide Camera</b> group as default. <b>Yes/No</b>
	LaneWatch	<b>Show with Turn Signal</b>	Selects whether the LaneWatch display comes on when you move the turn signal lever to the passenger side. <b>On*1/Off</b>
		<b>Display Time after Turn Signal Off</b>	Changes the length of time the LaneWatch display stays on after you pull the turn signal lever back. <b>0 second*1/2 seconds</b>
		<b>Reference Lines</b>	Selects whether the reference lines come on the LaneWatch monitor. <b>On*1/Off</b>
		<b>Default</b>	Cancels/Resets all customized items in the <b>LaneWatch</b> group as default. <b>Yes/No</b>

\*1 : Default Setting


Setup Group	Customizable Features	Description	Selectable Settings
Bluetooth	<b>Bluetooth On/Off Status</b>	Changes the <i>Bluetooth</i> @status.	On <sup>*1</sup> /Off
	<b>Bluetooth Device List</b>	Pairs a new phone to HFL, edits or deletes a paired phone, or creates a security PIN. ⇒ <b>Phone Setup</b> P.***	—
	<b>Edit Pairing Code</b>	Edits <b>Pairing Code</b> . ⇒ <b>To change the pairing code setting</b> P.***	Random/Fixed <sup>*1</sup>
	<b>Default</b>	Cancels/Resets all customized items in the <b>Bluetooth</b> group as default.	Yes/No

\*1 : Default Setting



## Defaulting All the Settings

Reset all the menu and customized settings as the factory defaults.

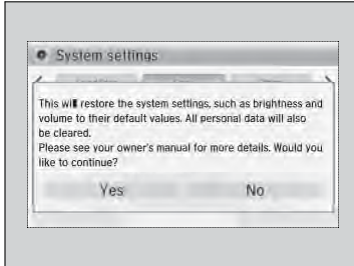

1. Select **HOME**.
2. Select **Settings**.
3. Select **System**.
  - Repeat the procedure to select **Others** tab, then **Factory Data Reset**.
  - The confirmation message will appear.
4. Select **Yes** to reset the settings.
5. Select **Yes** again to reset the settings.
  - The confirmation message will appear. Select **OK**.

### > > Defaulting All the Settings

When you transfer the vehicle to a third party, reset all settings to default and delete all personal data.

The following settings will be reset:

- Audio preset settings
- Phonebook entries
- Other display and personal settings.

## Models with navigation system


See the navigation system manual for how to operate the *Bluetooth®HandsFreeLink®*

## Models without navigation system

*Bluetooth®HandsFreeLink®* (HFL) allows you to place and receive phone calls using your vehicle's audio system, without handling your cell phone.

## Using HFL

### HFL Buttons

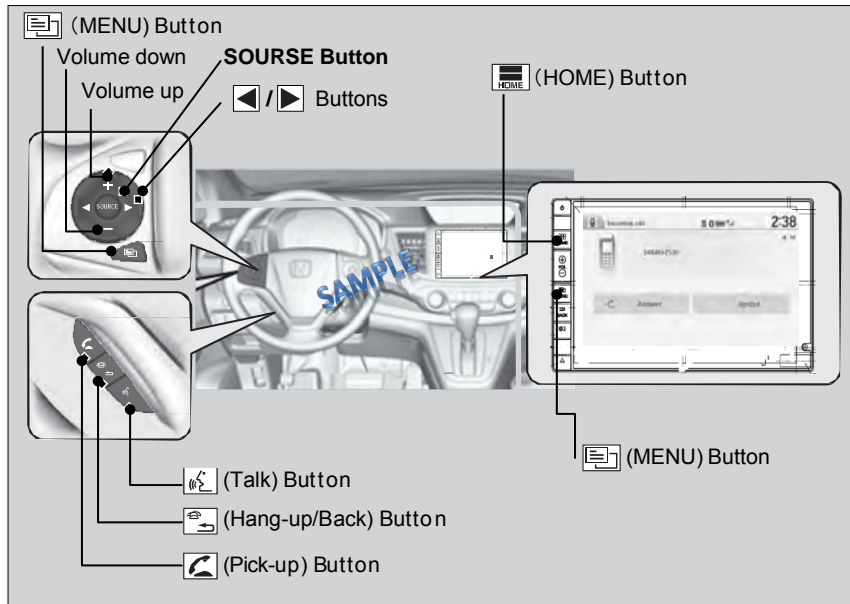

## > > Using HFL


To use HFL, you need a *Bluetooth*-compatible cell phone. For a list of compatible phones, pairing procedures, and special feature capabilities:

- U.S.: Visit [www.handsfreelink.honda.com](http://www.handsfreelink.honda.com), or call 1-888-528-7876.
- Canada: Visit [www.handsfreelink.ca](http://www.handsfreelink.ca), or call 1-888-528-7876.


To use HFL, the **Bluetooth On/Off Status** setting must be **On**.


⇒ **Customized Features P. \*\*\***

 
### Voice control tips


- Press and release the  button when you want to call a number using a stored voice tag, a phonebook, name or a number. Speak clearly and naturally after a beep
- If the microphone picks up voices other than yours, the command may be misinterpreted.
- To change the volume level, use the audio system's **VOL** (Volume) or use the remote audio controls on the steering wheel.


State or local laws may prohibit the operation of handheld electronic devices while operating a vehicle.

 **(Pick-up) button:** Press to go directly to the **Phone** screen, or to answer an incoming call.

 **(Hang-up/Back) button:** Press to end a call, go back to the previous command, or to cancel a command.

 **(Talk) button:** Press to call a number with a stored voice tag, a phonebook, name, or a number.

  **button:** Press to display **Speed Dial**, **Call History**, or **Redial** on the **Phone** screen.

 **button:** Press to select an item displayed on the **Phone** screen.

**SOURCE button:** Press to call a number listed in the selected item on the **Phone** screen.

To go to the **Phone menu** screen:

1. Select **HOME**.
2. Select **Phone** to switch the display to the **Phone** screen.
3. Select **MENU**.

#### > > Using HFL

Up to six speed dial entries can be displayed among a total of 20 that can be entered. If there is no entries in the system, Speed Dial is disabled.

⇒ **Speed Dial P. \*\*\***

#### *Bluetooth®/Wireless Technology*


The *Bluetooth®* word mark and logos are registered trademarks owned by Bluetooth SIG, Inc., and any use of such marks by Honda Motor Co., Ltd., is under license. Other trademarks and trade names are those of their respective owners.

#### HFL Limitations

An incoming call on HFL will interrupt the audio system when it is playing. It will resume when the call is ended.

## ■ HFL Status Display

The audio/information screen notifies you when there is an incoming call.

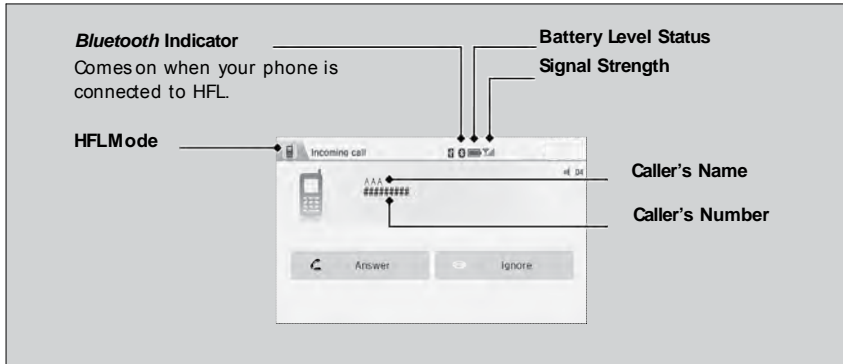

## ■ Limitations for Manual Operation

Certain manual functions are disabled or inoperable while the vehicle is in motion. You cannot select a grayed-out option until the vehicle is stopped.

Only previously stored speed dial entries with voice tags, phone book names, or numbers can be called using voice commands while the vehicle is in motion.

⇒ **Speed Dial P.** \*\*\*

### > > HFL Status Display

The information that appears on the audio/ information screen varies between phone models.

You can change the system language to English, French, or Spanish.

⇒ **Customized Features P.** \*\*\*

# HFL Menu

The ignition switch must be in ACCESSORY I or II <sup>\*1</sup> to use HFL.

## ■ Phone settings screen




1. Select **HOME**.
2. Select **Settings**.
3. Select **Phone Settings**.

> > **HFL Menu**

To use HFL, you must first pair your *Bluetooth*-compatible mobile phone to the system while the vehicle is parked.


Some functions are limited while driving. A message appears on the screen when the vehicle is moving and the operation is canceled.

Features

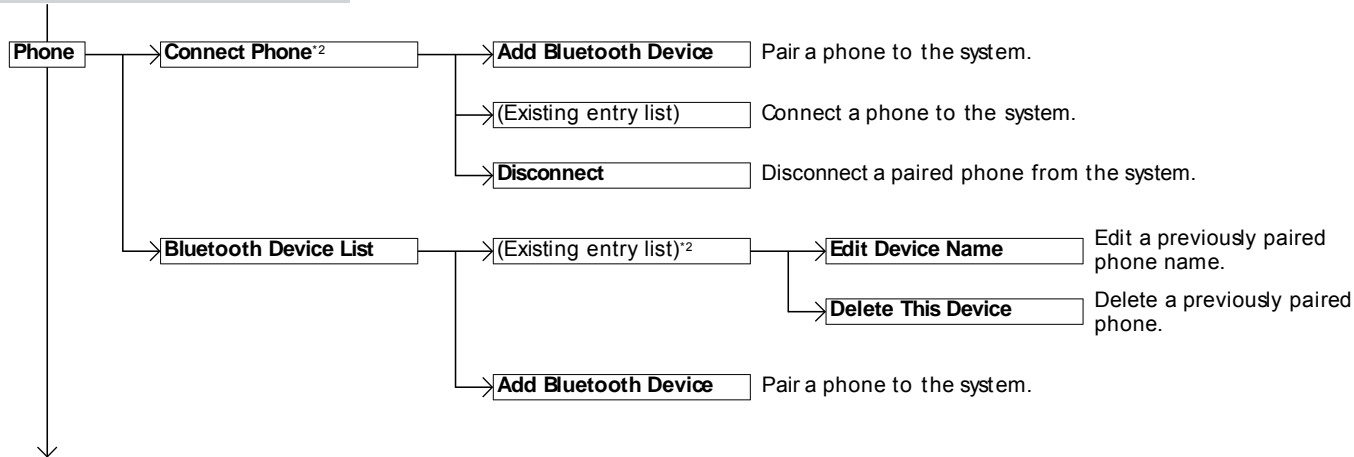


\*1: Models with the smart entry system have an **ENGINE START/STOP** button instead of an ignition switch.

\*2: Appears only when a phone is connected to HFL.

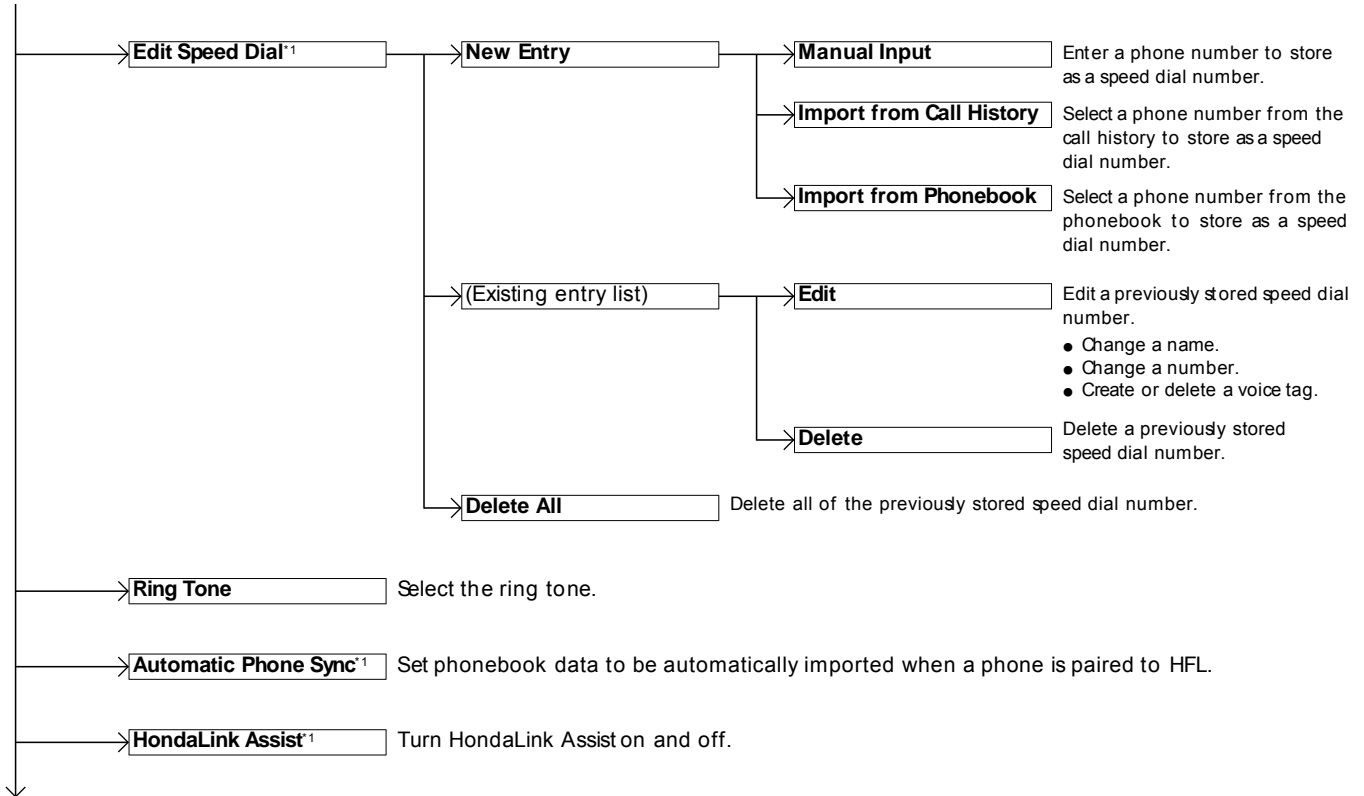


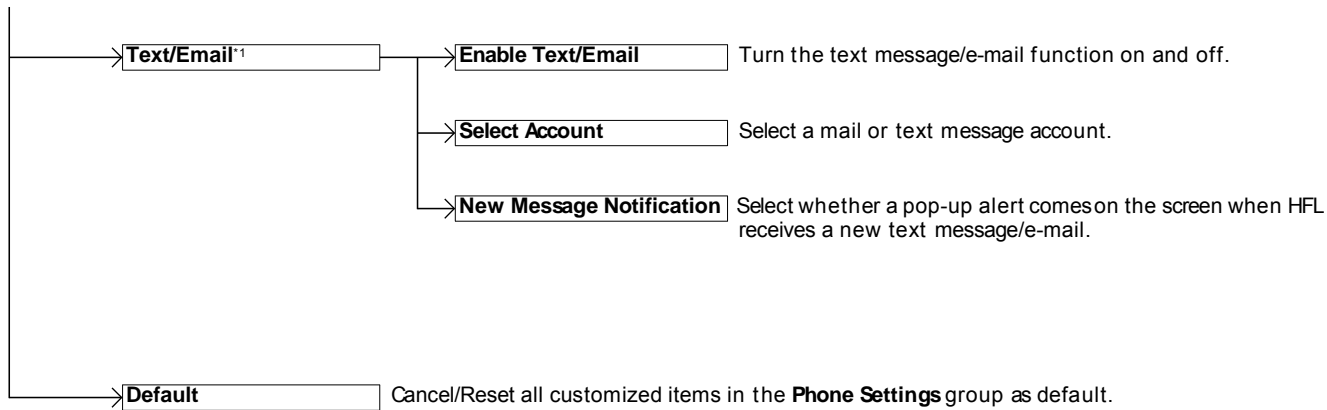

\*1: Appears only when a phone is connected to HFL.




\*1 : Appears only when a phone is connected to HFL.
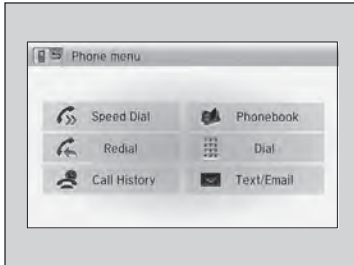
## ■ Phone menu screen




1. Press , or select **HOME**, then select **Phone**.
2. Press  (MENU) on the steering wheel, or select **MENU**.

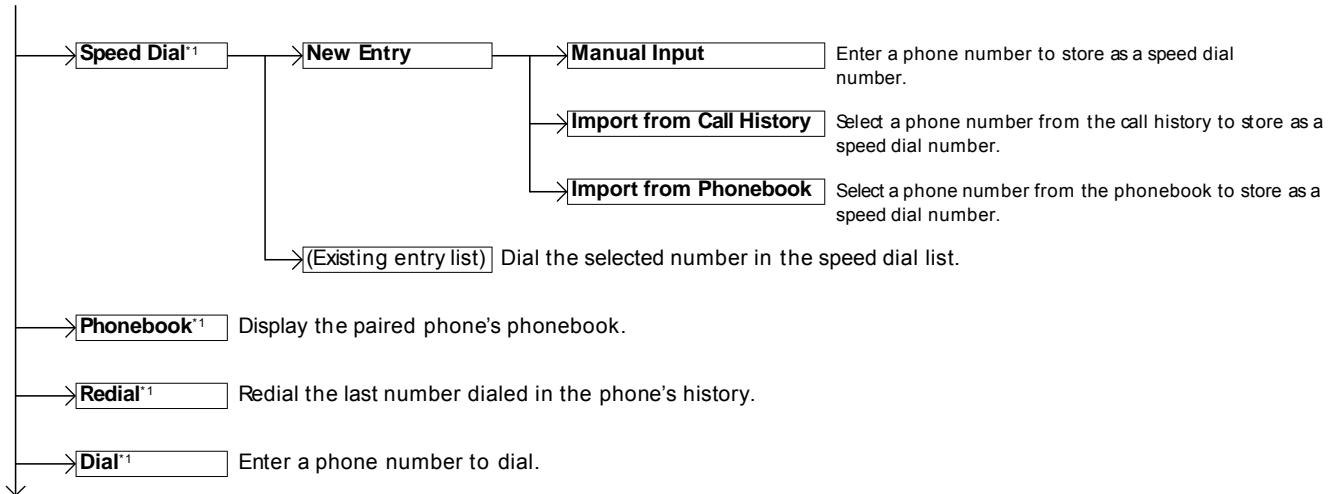

\*1: Appears only when a phone is connected to HFL.



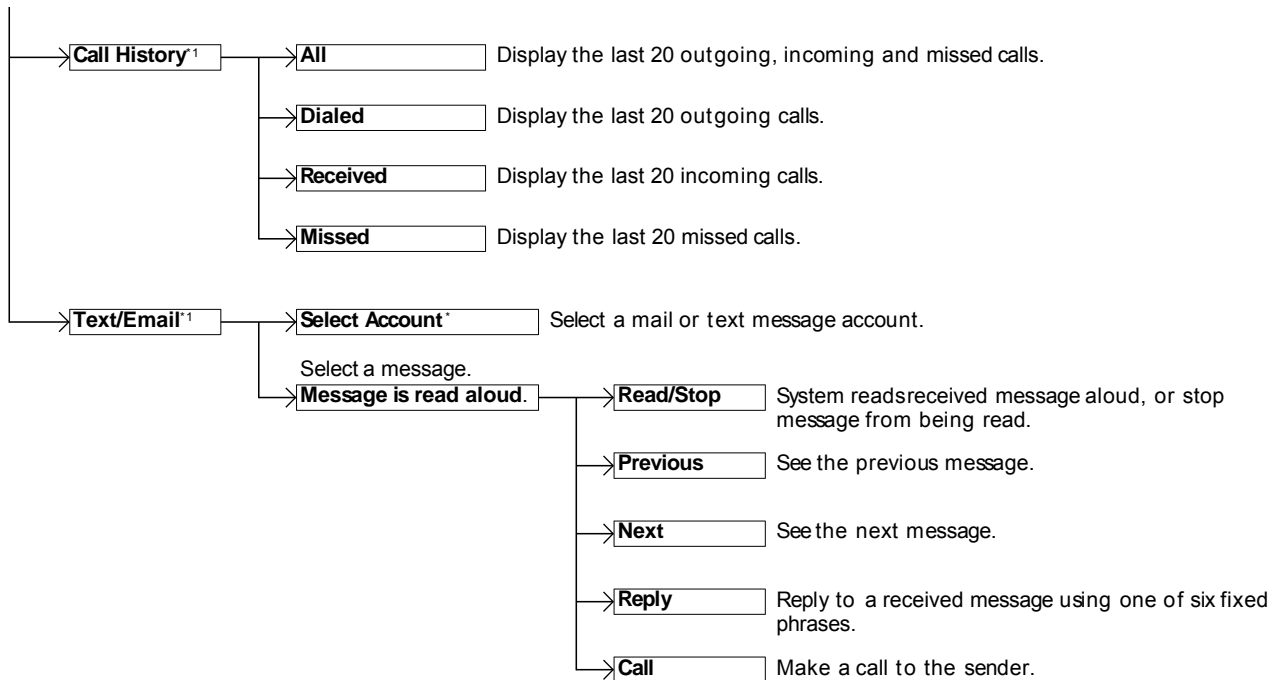

\*1 : Appears only when a phone is connected to HFL

\* Not available on all models

## Phone Setup



### ■ To pair a mobile phone (when there is no phone paired to the system)


1. Select **Phone**.
2. Select **Yes**.
3. Make sure your phone is in search or discoverable mode, then select **OK**.
  - ▶ HFL automatically searches for a *Bluetooth* device.
4. Select your phone when it appears on the list.
  - ▶ If your phone does not appear, you can select **Refresh** to search again.
  - ▶ If your phone still does not appear, select **Phone not found** and search for *Bluetooth* devices using your phone. From your phone, select **HandsFreeLink**.
5. The system gives you a pairing code on the audio/information screen.
  - ▶ Confirm if the pairing code on the screen and your phone match. This may vary by phone.
6. A notification appears on the screen if pairing is successful.

### > > Phone Setup

Your *Bluetooth*-compatible phone must be paired to HFL before you can make and receive hands-free calls.

#### Phone Pairing Tips:

- You cannot pair your phone while the vehicle is moving.
- Up to six phones can be paired.
- Your phone's battery may drain faster when it is paired to HFL.
- If your phone is not ready for pairing or not found by the system, the system will return to the previous screen.

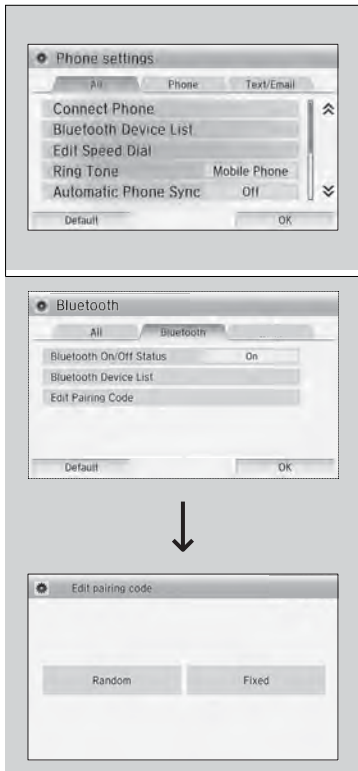

### ■ Changing the currently paired phone

1. Go to the **Phone settings** screen.  
⇒ **Phone settings screen P. \*\*\***
2. Select **Connect Phone**.
3. Select a phone to connect.  
► HFL disconnects the current phone and starts searching for another paired phone.

### ■ To change the pairing code setting

1. Select **HOME**.
2. Select **Settings**.
3. Select **Bluetooth**.
4. Select **Bluetooth** tab.
5. Select **Edit Pairing Code**.
6. Select **Fixed** or **Random**.


### > > Changing the currently paired phone

If no other phones are found or paired when trying to switch to another phone, HFL will inform you that the original phone is connected again.

### > > To change the pairing code setting


The default pairing code is **0000** until you change the setting. To create your own, select **Fixed**, and delete the current code, then enter a new one.

For a randomly generated pairing code each time you pair a phone, select **Random**.

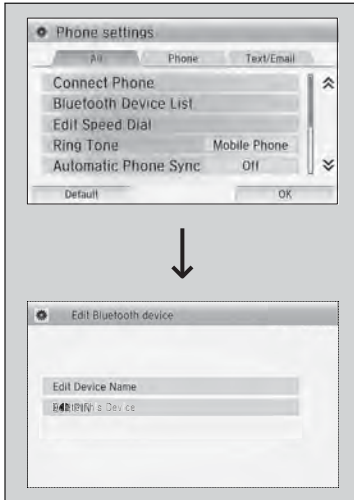

■ **To edit an already-paired phone name**


1. Go to the **Phone settings** screen.  
⇒ **Phone settings screen P. \*\*\***
2. Select **Phone** tab.
3. Select **Bluetooth Device List**.
4. Select a paired phone you want to edit.
5. Select **Edit Device Name**.
6. Edit the name and select **OK**.
7. A notification appears if the change is successful.

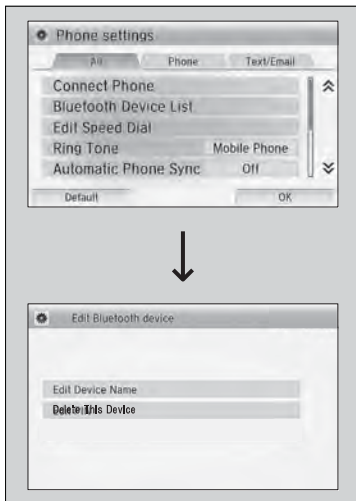

### ■ To delete a paired phone

1. Go to the **Phone settings** screen.  
⇒ **Phone settings screen P. \*\*\***
2. Select **Phone** tab.
3. Select **Bluetooth Device List**.
4. Select a phone you want to delete.
5. Select **Delete This Device**.
6. You will receive a confirmation message on the screen. Select **Yes**.
7. A notification appears if the deletion is successful.

## To Set Up a Text Message/E-mail Options

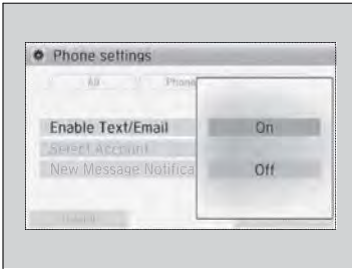


### ■ To turn on or off the text/e-mail function

1. Go to the **Phone settings** screen.  
⇒ **Phone settings** screen P.\*\*\*  
Select **Text/Email** tab, then **Enable Text/Email**.
  - ▶ A pop-up menu appears on the screen.
3. Select **On** or **Off**.

### ■ To turn on or off the text/e-mail notice

1. Go to the **Phone settings** screen.  
⇒ **Phone settings** screen P.\*\*\*  
Select **Text/Email** tab, then **New Message Notification**.
  - ▶ A pop-up menu appears on the screen.
3. Select **On** or **Off**.

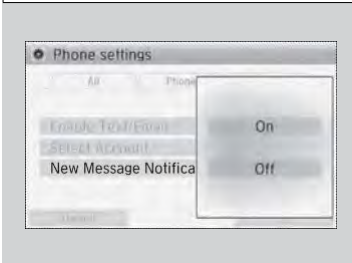


> > To turn on or off the text/e-mail notice

**On:** A pop-up notification comes on every time you receive a new message.  
**Off:** The message you receive is stored in the system without notification.

## Ring Tone

You can change the ring tone setting.

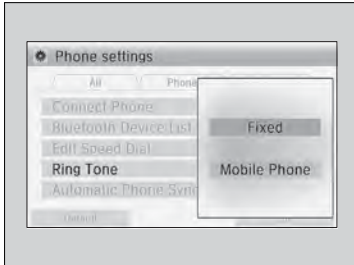


1. Go to the **Phone settings** screen.  
⇒ **Phone settings screen P.\*\*\***
2. Select **Phone** tab, then **Ring Tone**.
3. Select **Fixed** or **Mobile Phone**.

### >> Ring Tone


**Fixed:** The fixed ring tone sounds from the speaker. **Mobile Phone:** The ring tone stored in the connected cell phone is heard through the vehicle speakers.

## Automatic Import of Cellular Phonebook and Call History

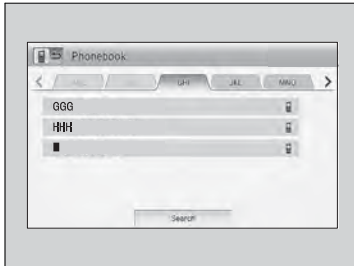

### ■ When Automatic Phone Sync is set to On:

When your phone is paired, the contents of its phonebook and call history are automatically imported to the system.

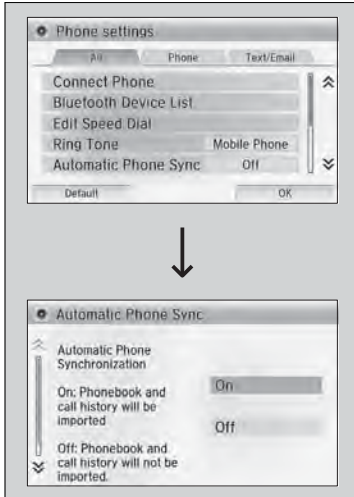


### ■ Changing the Automatic Phone Sync setting

1. Go to the **Phone settings** screen.  
⇒ **Phone settings screen P.\*\*\***
2. Select **Phone** tab, then **Automatic Phone Sync**.
3. Select **On** or **Off**.

## 1 Automatic Import of Cellular Phonebook and Call History

When you select a person from the list in the cellular phonebook, you can see up to three category icons. The icons indicate what types of numbers are stored for that name.

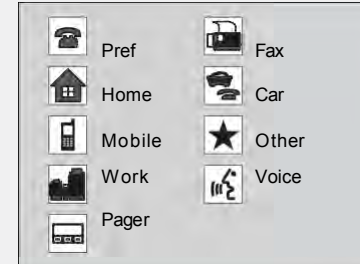

On some phones, it may not be possible to import the category icons to the system.

The phonebook is updated after every connection. Call history is updated after every connection or call.




## Speed Dial


Up to 20 speed dial numbers can be stored per phone.





To store a speed dial number:


1. Go to the **Phone menu** screen.  
⇒ **Phone menu screen P. \*\*\***
2. Select **Speed Dial**.  
► Repeat the procedure to select **New Entry**.
3. Select a place to choose a number.  
From **Import from Call History**:  
► Select a number from the call history. From **Manual Input**:  
► Input the number manually. From **Import from Phonebook**:  
► Select a number from the linked cell phone's imported phonebook.
4. When the speed dial is successfully stored from **Import from Call History** or **Import from Phonebook**, you are asked to create a voice tag for the number. Select **Yes** or **No**.
5. Select **Record** to store a voice tag for the speed dial entry.  
► Using the  button, follow the prompts to store a voice tag for the speed dial entry.

### >> Speed Dial

When a voice tag is stored, press the  button to call the number using the voice tag. Say "Call" and the voice tag name.

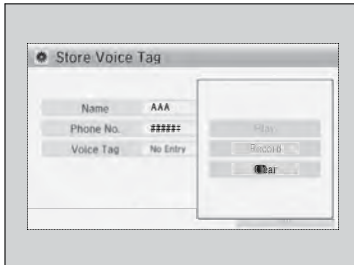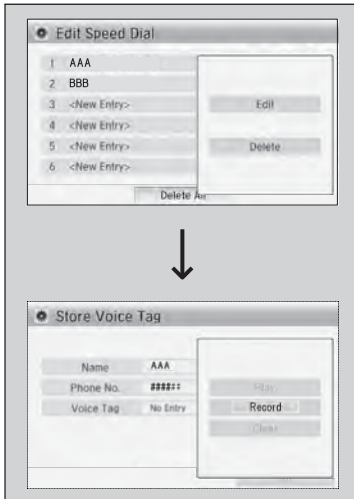

### ■ To add a voice tag to a stored speed dial number


1. Go to the **Phone settings** screen.  
⇒ **Phone settings screen P. \*\*\***
2. Select **Phone** tab, then **Edit Speed Dial**.
3. Select an existing speed dial entry.  
▶ From the pop-up menu, select **Edit**.
4. Select **Voice Tag**.  
▶ From the pop-up menu, select **Record**.
5. Select **Record** to store the voice tag.
6. Using the  button, follow the prompts to complete the voice tag.

### ■ To delete a voice tag

1. Go to the **Phone settings** screen.  
⇒ **Phone settings screen P. \*\*\***
2. Select **Phone** tab, then **Edit Speed Dial**.
3. Select an existing speed dial entry.  
▶ From the pop-up menu, select **Edit**.
4. Select **Voice Tag**.  
▶ From the pop-up menu, select **Clear**.
5. A confirmation message appears on the screen. Select **Yes**.

### > > Speed Dial


Avoid using duplicate voice tags. Avoid using “*home*” as a voice tag. It is easier for the system to recognize a longer name. For example, use “*John Smith*” instead of “*John*.”

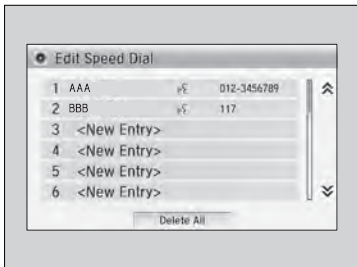

■ **To delete a speed dial**


1. Go to the **Phone settings** screen.  
⇒ **Phone settings screen P. \*\*\***
2. Select **Phone** tab, then **Edit Speed Dial**.
3. Select an existing speed dial entry.  
► From the pop-up menu, select **Delete**.
4. A confirmation message appears on the screen. Select **Yes**.

## Making a Call

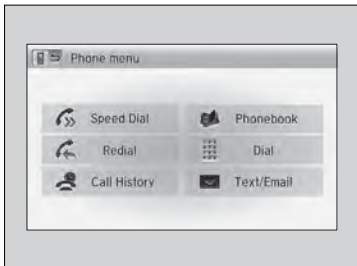


You can make calls by inputting any phone number, or by using the imported phonebook, call history, speed dial entries, or redial.

### > > Making a Call

Any voice-tagged speed dial entry, phonebook name, or number can be dialed by voice from most screens. Press the  button and say "Call" and the stored voice tag name.

The maximum range between your phone and vehicle is 30 feet (10 meters).


Once a call is connected, you can hear the voice of the person you are calling through the audio speakers.

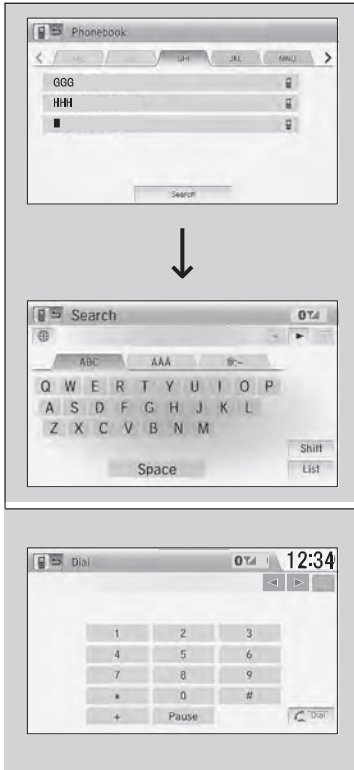

■ **To make a call using the imported phonebook**

1. Go to the **Phone menu** screen.  
⇒ **Phone menu screen P.\*\*\***
2. Select **Phonebook**.
3. Select a name.  
▶ You can also search by letter. Select **Search**.  
▶ Use the keyboard on the touch screen for entering letters.
4. Select a number.  
▶ Dialing starts automatically.

■ **To make a call using a phone number**

1. Go to the **Phone menu** screen.  
⇒ **Phone menu screen P.\*\*\***
2. Select **Dial**.
3. Select a number.  
▶ Use the keyboard on the touch screen for entering numbers.
4. Select .  
▶ Dialing starts automatically.

> > **To make a call using the imported phonebook**


This function is disabled while the vehicle is moving. However, you can call a stored voice-tagged speed dial number using voice commands.

- ⇒ **Limitations for Manual Operation P.\*\*\***
- ⇒ **Speed Dial P.\*\*\***

> > **To make a call using a phone number**


This function is disabled while the vehicle is moving. However, you can call a stored voice-tagged speed dial number using voice commands.

- ⇒ **Limitations for Manual Operation P.\*\*\***
- ⇒ **Speed Dial P.\*\*\***

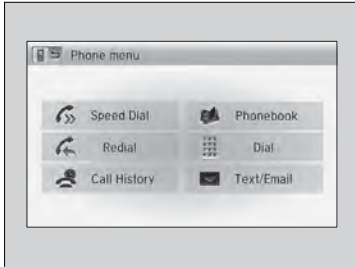


■ To make a call using redial

1. Go to the **Phone menu** screen.  
⇒ **Phone menu screen P.\*\*\***
2. Select **Redial**.  
▶ Dialing starts automatically.

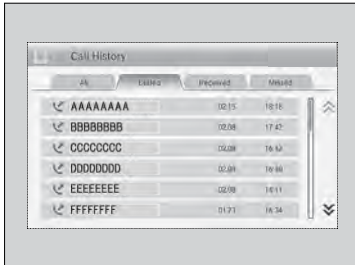

■ To make a call using the call history Call history is stored by **All**, **Dialed**, **Received**, and **Missed**.

1. Go to the **Phone menu** screen.  
⇒ **Phone menu screen P.\*\*\***
2. Select **Call History**.
3. Select **All**, **Dialed**, **Received**, or **Missed**.
4. Select a number.  
▶ Dialing starts automatically.

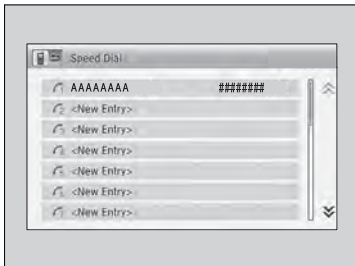

■ To make a call using a speed dial entry

1. Go to the **Phone menu** screen.  
⇒ **Phone menu screen P.\*\*\***
2. Select **Speed Dial**.
3. Select a number.  
▶ Dialing starts automatically.


>> To make a call using redial

Press and hold the  button to redial the last number dialed in your phone's history.


> > To make a call using the call history

The call history displays the last 20 dialed, received, or missed calls.  
(Appears only when a phone is connected to the system.)

> > To make a call using a speed dial entry

When a voice tag is stored, press the  button to call the number using the voice tag.  
⇒ **Speed Dial P.\*\*\***



Any voice-tagged speed dial entry can be dialed by voice from any screen.

Press the  button and follow the prompts.

## Receiving a Call



When there is an incoming call, an audible notification sounds and the **Incoming call** screen appears.

Press the  button to answer the call.  
 Press the  button to decline or end the call.

## Options During a Call

The available options appear on the screen during a call.



**Mute:** Mute your voice.


- ▶ The mute icon appears when **Mute** is selected.  
 Select **Mute** again to turn it off.


**Transfer:** Transfer a call from the system to your phone.

**Touch Tones:** Send numbers during a call. This is useful when you call a menu-driven phone system.


## > Receiving a Call



Call Waiting

Press the  button to put the current call on hold to answer the incoming call.

Press the  button again to return to the current call.

Select **Ignore** to ignore the incoming call if you do not want to answer it.

Press the  button if you want to hang up the current call.

You can select the icons on the touch screen instead of the  and  buttons.

## 1 Options During a Call

**Touch Tones:** Available on some phones.

You can select the icons on the touch screen.

## Receiving a Text Message/E-mail

HFL can display newly received text or e-mail messages as well as 20 of the most recently received messages on a linked cell phone. Each received message can be read aloud and replied to using a fixed common phrase.



1. A pop-up appears and notifies you of a new text message or e-mail.
2. Select **Read** to listen to the message.
  - The text message or e-mail is displayed.  
The system automatically starts reading out the message.
3. To discontinue the message read-out, select **Stop**.

### 1 Receiving a Text Message/E-mail


The system does not display any received messages while you are driving. You can only hear them read aloud.

With some phones, you may be able to display up to 20 most recent text messages and e-mails.

State or local laws may limit your use of the HFL text message/e-mail feature. Only use the text message/e-mail feature when conditions allow you to do so safely.


When you receive a text message or e-mail for the first time since the phone is paired to HFL, you are asked to turn the **New Message Notification** setting to **On**.

⇒ **To turn on or off the text/e-mail notice P.\*\*\***

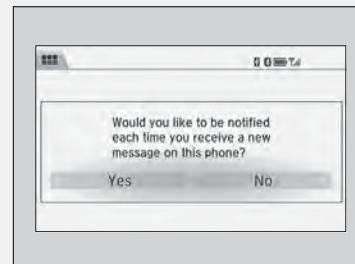

## Selecting a Mail Account


If a paired phone has text message or mail accounts, you can select one of them to be active and receive notifications.

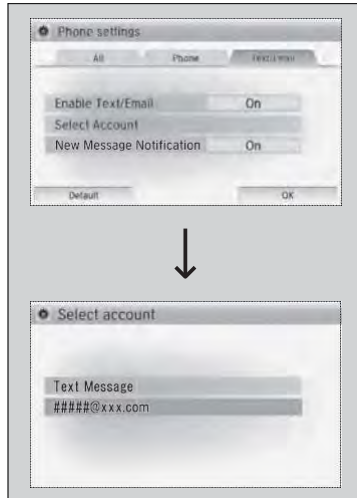

1. Go to the **Phone settings** screen.  
⇒ **Phone settings screen P.\*\*\***
2. Select **Text/Email** tab, then **Select Account**.  
▶ A pop-up menu appears on the screen.
3. Select **Text Message** or an e-mail account you want.

### 1 Selecting a Mail Account

You can also select a mail account from the folder list screen or the message list screen.

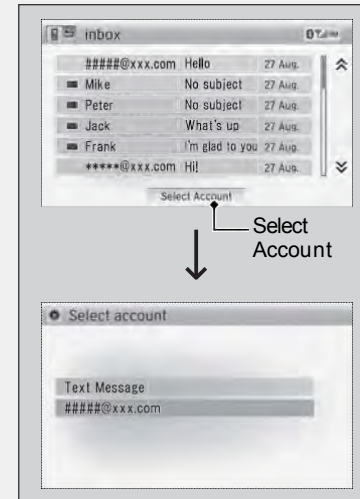


You can only receive notifications from one text message or mail account at a time.




## Displaying Messages

### Message List

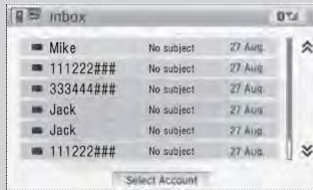


### Text Message

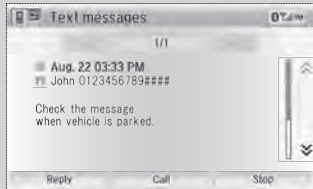

### ■ Displaying text messages


1. Go to the **Phone menu** screen.  
⇒ **Phone menu screen P.\*\*\***
2. Select **Text/Email**.  
► Select account if necessary.
3. Select a message.  
► The text message is displayed. The system automatically starts reading the message aloud.

### > > Displaying Messages

The  icon appears next to an unread message.


If you delete a message on the phone, the message is also deleted in the system. If you send a message from the system, the message goes to your phone's outbox.

To see the previous or next message, select **Previous** or **Next** on the message screen.

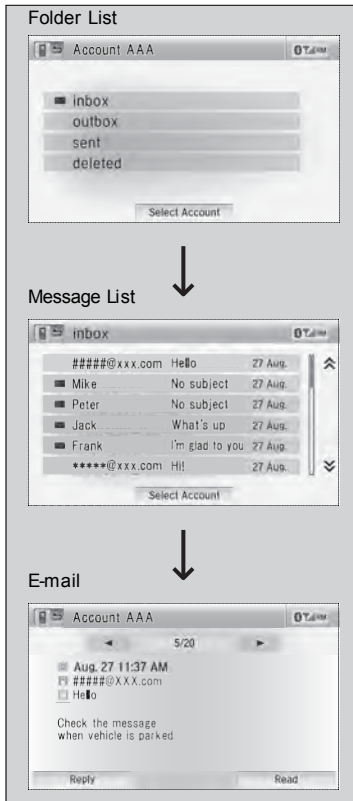

### ■ Displaying e-mails

1. Go to the **Phone menu** screen.
  - ⇒ **Phone menu screen P.\*\*\***
2. Select **Text/Email**.
  - ▶ Select **Select Account** if necessary.
3. Select a folder.
4. Select a message.
  - ▶ The e-mail is displayed. The system automatically starts reading the message aloud.

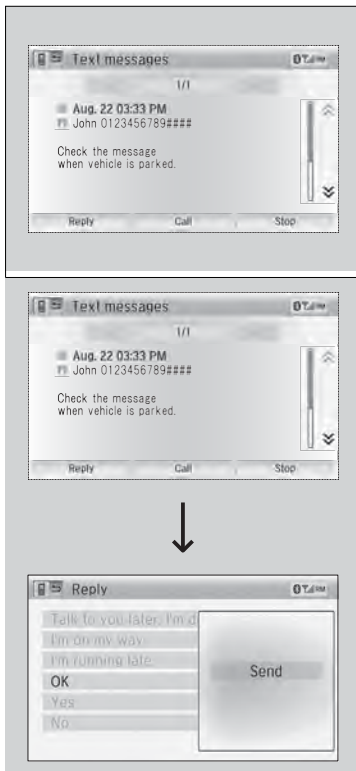

### ■ Read or Stop reading a message

1. Go to the text or e-mail message screen.
  - The system automatically starts reading the message aloud.
    - ⇒ **Displaying Messages P.\*\*\***
2. Select **Stop** to stop reading.  
Select **Read** again to start reading the message from the beginning.

### ■ Reply to a message


1. Go to the text or e-mail message screen.
  - The system automatically starts reading the message aloud.
    - ⇒ **Displaying Messages P.\*\*\***
2. Select **Reply**.
3. Select the reply message.
  - The pop-up menu appears on the screen.
4. Select **Send** to send the message.
  - **Complete** appears on the screen when the reply message was successfully sent.

### >> Reply to a message

The available fixed reply messages are as follows:

- **Talk to you later, I'm driving.**
- **I'm on my way.**
- **I'm running late.**
- **OK**
- **Yes**
- **No**

You cannot add, edit, or delete reply messages.

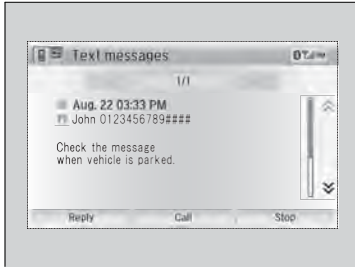


■ **Making a call to a sender**

1. Go to the text message screen.
2. Select **Call**.

## In Case of Emergency

### ■ Automatic collision notification

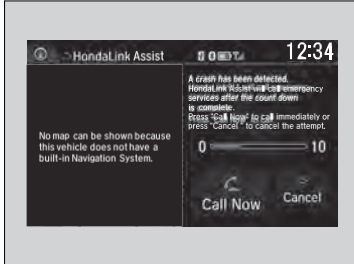

If your vehicle's airbags deploy or if the unit detects that the vehicle is severely impacted, your vehicle automatically will attempt to connect to the HondaLink operator. If connected, information about your vehicle, its location, and its condition will be sent to the operator; you also can speak to the operator when connected.

**IMPORTANT:** For vehicles equipped with HondaLink Assist, owner activation constitutes authorization for Honda to collect information from your vehicle needed to provide the service, and agreement to the Terms of Use at [www.hondalink.com/TermsAndConditions](http://www.hondalink.com/TermsAndConditions). In a crash, HondaLink Assist will attempt to notify emergency services but **NEITHER HONDA NOR ITS SERVICE PROVIDERS GUARANTEE THAT SUCH NOTIFICATION WILL OCCUR.**

Honda reserves the right to terminate HondaLink Assist services at any time or for any reason, and in the future may not be able to provide services due to changes in, or obsolescence of, technology integral to the service or changes in governmental regulation.

### > > In Case of Emergency

Your vehicle may not be able to connect to the operator if the battery level is low, the line is disconnected, or you do not have adequate cellular coverage.

You cannot use this emergency services when:


- You travel outside the HondaLink service coverage areas.
- There is a problem with the connecting devices, such as the microphones, speakers, or the unit itself.

You cannot operate other phone-related functions using the screen while talking to the operator. Select **Hang Up** to terminate the connection to your vehicle.

### > > Automatic collision notification

If the unit fails to connect to the operator, it repeatedly tries until it succeeds.

## ■ To enable notification

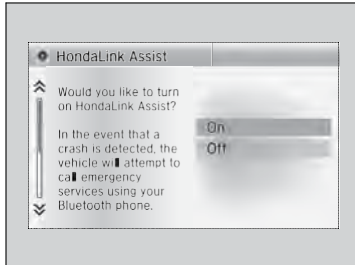

1. Go to the **Phone settings** screen.  
⇒ **Phone settings screen P. 274**
2. Select **Phone** tab, then **HondaLink Assist**.  
▶ A pop-up menu appears on the screen.
3. Select **On** or **Off**.

### > > To enable notification

Setting options:

- **On:** Notification is available.
- **Off:** Disable the feature.

# Devices that Emit Radio Waves

---

The following products and systems on your vehicle emit radio waves when in operation.

Audio system

*Bluetooth*® Audio

*Bluetooth*® HandsFreeLink®

Immobilizer System

Remote Transmitter

Models with Rear Entertainment System

Rear Entertainment System Remote Control

---

Each of the above complies with the appropriate requirements or the required standards of FCC (Federal Communications Commission) and Industry Canada Standard, described below:

### FCC/IC Notices

This device complies with Part 15 of FCC Rules and Industry Canada licence-exempt RSS standard(s)

- (1) this device may not cause interference, and
- (2) this device must accept any interference, including interference that may cause undesired operation of this device.

### CAUTION:

This transmitter must not be co-located or operated in conjunction with any other antenna or transmitter.

### CAUTION:

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

### CAUTION:

This equipment complies with FCC/IC radiation exposure limits set forth for an uncontrolled environment and meets the FCC radio frequency (RF) Exposure Guidelines and RSS-102 of the IC radio frequency (RF) Exposure rules. This equipment has very low levels of RF energy that it deemed to comply without maximum permissive exposure evaluation (MPE).