

《 KIPASS (Kawasaki's Intelligent Proximity Activation Start System) 》

Starting Engine

1. Hold on the fob key.
2. Push down and release the knob key.
3. Turn the knob key to "ON" within five seconds.
4. Check that the engine stop switch is in the RUN position.
5. Make certain the transmission is in neutral.
6. Leaving the throttle completely closed, push the starter button.

Stopping Engine

1. Close the throttle completely.
2. Shift the transmission into neutral.
3. Turn the knob key to "OFF".

Manual description sentence

IC:

Operation is subject to the following two conditions:
(1) this device may not cause interference, and
(2) this device must accept any interference received,
including interference that may cause undesired operation
of the device.

FCC:

This device complies with part 15 of the FCC Rules.
Operation is subject to the following two conditions:
(1) this device may not cause harmful interference, and
(2) this device must accept any interference received,
including interference that may cause undesired operation.

FCC Part 15 Warning sentence:

Changes or modifications not expressly approved by the party responsible
for compliance could void the user's authority to operate the equipment.