


Owner's Manual (Draft)

Locking and unlocking

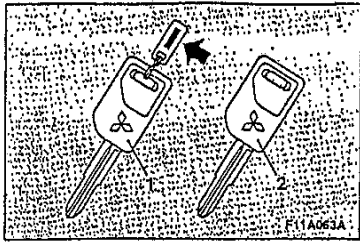

Keys

EF21AAQ

- 1- Master key (Black)
- 2- Sub key (Grey)

Three keys are provided. Two of them are master keys and the third is a sub key.

The master keys fit all locks. Keep one in a safe place, as a spare key. The sub key fits all locks except for the glove box.

NOTE

- (1) The key number is stamped on the tag as indicated in the illustration. Make a record of the key number and store the key and key number tag in separate places, so that you can order a key from your authorized MITSUBISHI dealer in the event the original keys being lost.
- (2) The engine is designed so that it will not turn over if the ID code registered in the immobilizer computer and the key's ID code do not match. Refer to the section entitled "Electronic immobilizer" for details and key usage.
- (3) Keys should never be placed in areas which contain magnetic or metal objects as this may interfere with the transponder.

Electronic immobilizer (Anti-theft starting system)

EF11C-KD

The electronic immobilizer is designed to reduce significantly the possibility of vehicle theft. The purpose of the system is to immobilize the vehicle if an invalid start is attempted. A valid start attempt can only be achieved (subject to certain conditions), using a key "registered" to the ignition lock.

8

Locking and unlocking

CAUTION

- (1) Keep a spare key or pieces of magnet/metal away when the key is turned to the "ON" position.
- (2) Be careful not to damage the key with a cutter etc. since there is a transponder inside the key.
- (3) Don't make any alterations or additions to the immobilizer system; any alterations or additions could cause failure of the immobilizer.
- (4) Three keys are provided. If you lose one of them, order a key from your authorized MITSUBISHI dealer as soon as possible.

To make a key, take your vehicle and the remaining key to your authorized MITSUBISHI dealer. If you need an extra spare key, take your vehicle and ALL the keys to your authorized MITSUBISHI dealer. Because all the keys have to be re-registered in the immobilizer computer unit.


NOTE

- (1) The immobilizer allows up to 8 different ID codes to be registered; you can possess a maximum of 8 spare keys.
- (2) A system failure is suspected if turning the ignition key to START position does not cause the engine to start. In such a case, consult an authorized MITSUBISHI dealer.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NO USER SERVICEABLE PARTS INSIDE. DO NOT ATTEMPT TO MODIFY THIS EQUIPMENT. IF MODIFIED, YOUR AUTHORITY TO OPERATE THIS EQUIPMENT MIGHT BE VOIDED BY FCC.

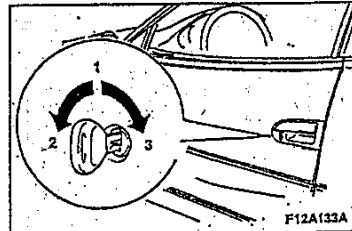

Doors

EF12A-F8

Operation from outside the vehicle

- 1- Insert or remove the key
- 2- Lock
- 3- Unlock

9