

**MØBI®**

70208

# DXRTouch

**Premium Wireless  
Audio/Video  
Monitoring System**



## Complete Operating Instructions



**IMPORTANT:**  
*Keep instructions for future reference.*

## TABLE OF CONTENTS

---

<b>Introduction</b> _____	1
<b>Radio Interference Parameters</b> _____	1
<b>Package Contents</b> _____	2
<b>Monitor/Receiver</b> _____	2
<b>Camera/Transmitter</b> _____	3
<i>To Start</i>	
<i>Charging/Powering On</i> _____	4
<i>Locking the Screen</i> _____	4
<i>Set to Another Language</i> _____	4
<i>Pairing Camera and Monitor</i> _____	5
<b>Main Menu</b> _____	6
<i>Touch Navigation</i>	
<i>Volume/Display</i> _____	7
<i>Lullabys</i> _____	7
<i>Night Light</i> _____	7
<i>Record</i> _____	8
<i>Play</i> _____	9
<i>Quad and Channel View</i> _____	10
<i>VOX (Voice Activation)</i> _____	10
<i>Settings</i>	
<i>Monitor Settings</i> _____	11-14
<i>Camera Settings</i> _____	15
<b>Per Camera and Convenience Icons</b> _____	16
<b>Webcam Use • Data/File Transfers</b> _____	17
<b>Audio/Video Out</b> _____	18
<b>Troubleshooting</b> _____	18
<b>Factory Default Settings</b> _____	19
<b>Battery Replacement</b> _____	20
<b>Product Safety</b> _____	20
<b>Proper Disposal</b> _____	21
<b>Limited Warranty</b> _____	21
<b>About Mobi® / Contact Mobi®</b> _____	22

## INTRODUCTION

---

Congratulations on the purchase of this MobiCam® DXR Touch Monitoring System, which incorporates the latest advanced technology. To fully maximize and benefit from this product's advanced features we highly recommend you review these instructions. This 2.4 GHz Digital monitor enables you to transmit picture and sound signals cordlessly, which is ideal for many situations such as monitoring a baby, young children or the elderly or used as office or warehouse monitoring system.

**IMPORTANT: Use ONLY a fingertip or other NON-SHARP object to select touch screen options. Using sharp objects can damage the screen and void the warranty.**

## RADIO INTERFERENCE PARAMETERS

---

### FCC Statement

15.19: This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference and (2) This device must accept any interference received, including interference that may cause undesired operation.

15.21: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

### FCC Radiation Exposure Statement

This equipment has been tested and complies with Federal Communications Commission radiation exposure limits as set forth for uncontrolled environments. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body. This Camera must not be co-located or operating in conjunction with any other antenna or Camera. This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This device and its antenna must not be co-located or operating in conjunction with any other antenna or Camera. This device has been tested for compliance with FCC RF Exposure (SAR) limits in the typical laptop computer configuration and this device can be used in desktop or laptop computers via side mounted USB slots. This device and its antenna must not be co-located or operated in conjunction with any other antenna or Camera.

### IC Statement

Operation of this device is subject to the following two conditions: 1. This device may not cause interference, and 2. This device must accept any interference, including interference that may cause undesired operation of the device.

## PACKAGE CONTENTS

- 1 Monitor/Receiver
- 2 AC/DC Adaptors 5V 800mAh
- 1 Attachable Strap Mount
- 1 Wall Anchor Mount with Screw
- 1 AV-Out Cable
- 1 Camera/Transmitter
- 1 Li-Ion Rechargeable Battery (for monitor only)
- 1 Door/Drawer Attachable Hook
  - 1 USB to Mini USB Data Cord
- 1 User Manual

## MONITOR



### Monitor / Receiver Unit


- features:
- 3.5" QVGA resolution TFT touch panel screen
  - VGA resolution (640\*480) up to 25 frames per second
  - up to 250-300m range
  - 2-way communication
  - MENU/ESCAPE button
  - PAIR Button
  - TALK Button
  - Lock Screen Button for disabling touch screen
  - SD Card Slot up to 32 Gb (not included)
  - Mini USB Output port (for connection to a PC and charging)
  - A/V Output port
  - DC Input (AC/DC adaptor included)
  - Two-Color LED: solid green for power on; flashing red for charging
  - Quad-View split screen (up to 4 camera capability)
  - Main Menu color icon display
  - Rechargeable Li-ion Battery 3.7V 1200 mAh (included for monitor only)

## CAMERA



### Camera / Transmitter Unit

- features:
- PAIR Button
  - LED for Power ON / Pairing (flashes)
  - Microphone & Speaker
  - DC Input (AC/DC adaptor included)
  - Night Vision
  - Temperature Sensor and Alarm
  - VOX (Hi/Mid/Lo/Off) with receiver control
  - Adjustable Volume from receiver
  - Adjustable TX Power (High-Low) from receiver
  - 4 Lullaby choices
  - Night Light
  - Rechargeable Battery 3.7V 1500 mAh (not included - sold separately)
  - 2.4GHz Digital FHSS, 100% secure with full privacy and interference free

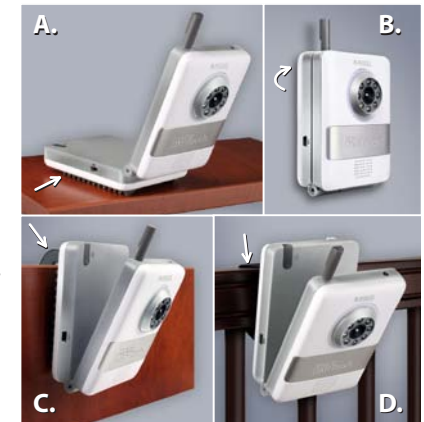

### Positioning / Mounting Options

- A.** Horizontal to Slightly Angled Surfaces - Built-in Ridge-Grip Feet... **B.** Wall Mount Screw with Drywall Anchor (included)... **C.** Door or Drawer Hook Mount / Stand (included)... **D.** Horizontal Rails / Drawer Handles - Attachable Strap Mount (included)

**WARNING: To prevent strangulation never place a power cord within reach of a child.**

## TO START

- A. Plug one of the AC/DC adapters (they are interchangeable) into the monitor and allow it to **charge the Monitor Battery** for at least 5-1/2 hours.
- B. Plug the other AC/DC adapter into the camera. **Turn the Camera On** by holding the **ON/OFF Button** down for several seconds. The green "Power On" Indicator lights when powered up.
- C. **Turn the Monitor On** by holding its **ON/OFF Button** down for several seconds. Its "Power On" Indicator will light up (green on battery power, red when charging) and the Mobi logo will appear on the screen.
- D. **Press ESC Button** to go to the **Main Menu**.

*NOTE: While viewing the Main Menu, if no buttons are pressed, or the screen is not touched after 30 seconds, the monitor will automatically exit the Main Menu mode.*

### Main Menu



- E. **Press ESC Button** once again to go to the **Camera View**. Along the top and bottom of the screen, small "Per Camera" Icons (explained on page 16) will appear over the view from the camera, which should be on and paired with the monitor.



### Camera View



**IMPORTANT: Use ONLY a fingertip or other NON-SHARP object to select touch screen options. Using sharp objects can damage the screen and void the warranty.**

**LOCKING THE SCREEN:** If you press the **Lock Screen Button** a LOCK icon will appear and the touch-screen function will be disabled. Pressing the Lock Screen Button again will revert it back to normal touch-screen function.


**TO SET TO ANOTHER LANGUAGE:** The monitor is set to **English** by default. The MobiCam® DXR Touch can also display in **French, German, Portuguese, Spanish, or Italian**. To change the language follow this sequence: press the **ESC Button**

- touch **Setting** icon 
- touch **System Setting** 
- touch slider to **See More List**
- select **Language** from the list
- select a new **Language**
- press the **ESC Button**

**PAIRING:** The monitor and camera are paired (wirelessly linked) by the manufacturer at the factory. If you ever need to relink the camera, or you want to pair Additional Cameras (sold separately) you need to pair each following this sequence:

*NOTE: Before pairing be sure the camera and monitor are both turned on and both are within 10 feet of each other.*




1. **Power On** the Monitor and Camera
2. Press and hold the **Pair Button** on the back of the **Monitor** until the Pair Screen is displayed, then release the button.
3. Press and release the **Pair Button** on the **Monitor** and select a camera number (1-4) to be paired. The word "**Pairing**" appears below the icon of the selected camera as it waits to be paired.
4. You have 10 seconds to press and hold the **Pair Button** on the back of the **Camera** to complete Pairing, otherwise restart from step 2 above.
5. The word "**OK**" or "**Failed**" will be displayed on screen.
6. Press the **ESC Button** or the **Return** icon  to go back. To pair additional cameras repeat the steps above.

## MAIN MENU ... touch the **ESC Button** to open the Main Menu on screen

**IMPORTANT:** Use **ONLY** a fingertip or other **NON-SHARP** object to select touch screen options. Using sharp objects can damage the screen and void the warranty.

Touch the appropriate icon to access all Settings and Options.

<p><b>VOLUME / DISPLAY</b> <i>adjust</i></p> <ul style="list-style-type: none"> <li>• Sound Volume</li> <li>• Screen Contrast</li> <li>• Screen Brightness</li> </ul>	<p><b>LULLABYS</b> <i>select</i></p> <ul style="list-style-type: none"> <li>• Camera Number</li> <li>• Lullaby Choice</li> <li>• Lullaby Volume</li> </ul>	<p><b>NIGHT LIGHT</b> <i>select</i></p> <ul style="list-style-type: none"> <li>• Camera Number</li> <li>• Night Light On</li> <li>• Night Light Off</li> </ul>	<p><b>RECORD</b> <i>select</i></p> <ul style="list-style-type: none"> <li>• Record Video</li> <li>• Take Photo</li> <li>• Format SD Card</li> <li>• SD Information</li> <li>• Time/Date Stamp</li> </ul>
---	--	--	--

<p><b>PLAY</b> <i>select / play</i></p> <ul style="list-style-type: none"> <li>• Recorded Video</li> <li>• Recorded Photo</li> <li>• Delete Files</li> </ul>	<p><b>QUAD / CHANNEL</b> <i>select</i></p> <ul style="list-style-type: none"> <li>• Quad View</li> <li>• Specific CAMs</li> <li>• Switch CAMs</li> </ul>	<p><b>VOX (Voice Activation)</b> <i>select</i></p> <ul style="list-style-type: none"> <li>• Camera Number</li> <li>• VOX On/Off</li> <li>• Sound Sensitivity</li> <li>• Auto Record On/Off</li> </ul>	<p><b>SETTINGS</b> <i>for the Camera</i></p> <ul style="list-style-type: none"> <li>• Temperature Alarm</li> <li>• TX Power/Volume</li> </ul>
--	--	---	---

<p><b>SETTINGS</b> <i>for the Monitor</i></p> <ul style="list-style-type: none"> <li>• USB Output</li> <li>• Recording Schedule</li> </ul>	<ul style="list-style-type: none"> <li>• Zoom/Pan/Tilt</li> <li>• Screen Timeout</li> <li>• Touch Calibration</li> <li>• SD Card Update</li> </ul>	<ul style="list-style-type: none"> <li>• 6 Languages</li> <li>• Reset to Default</li> <li>• About / Version</li> <li>• Date/Time</li> </ul>	<ul style="list-style-type: none"> <li>• Date/Time</li> <li>• Time Alarm</li> <li>• Auto Switch Time</li> <li>• AV Out Format</li> </ul>
--	--	---	--

## TOUCH NAVIGATION ... touch the **ESC Button** to start at Main Menu

from **Main Menu** ...    ... to **These Screens** ...    ... to **Do This** ...



**VOLUME / DISPLAY**





touch **-** or **+** icons to adjust...

- ▶ **Monitor Volume**
- ▶ **Screen Contrast**
- ▶ **Screen Brightness**

**LULLABYS**






▶ select a **Camera**...



- ▶ select one of four **Lullabys** and/or...
- ▶ deactivate all **Lullabys**...
- ▶ adjust **Lullaby Volume**

**NIGHT LIGHT**

select **Night Light** icon for the camera you wish to control in order to...

- ▶ turn the **Night Light ON**
- ▶ turn the **Night Light OFF**


(the light bulb image in the icon changes to yellow when ON and back again when OFF)

**HINT:** To move back one screen touch **Return icon**  or go to camera view by pressing the **ESC Button**.

## TOUCH NAVIGATION ... touch the **ESC Button** to start at Main Menu

from **Main Menu** ... to **These Screens** ... to **Do This** ...

### RECORD

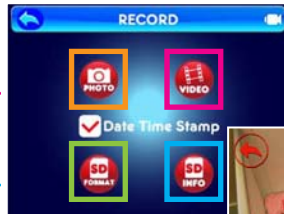

touch one of four functions...

#### Photo

goes to camera view and you can **take a photo** of the scene by touching this **Still Camera** icon



#### Video

goes to the camera view and you can **record a video** (with sound) of the scene by touching this **REC** icon to start recording - and press again to stop recording

NOTE: All recording functions require an SD memory card with available space (max 32 Gb) to be in the SD card slot on the monitor.

NOTE: While recording no other functions are available until recording is stopped.



#### SD Format

lets you **Format / Erase** an SD memory card



select **OK** or **Cancel**



#### SD Info

displays **Total Size, Used Space, and Free Space** on any SD card you may have in the SD card slot

HINT: To move back one screen touch **Return icon** or go to camera view by pressing the **ESC Button**.

## TOUCH NAVIGATION ... touch the **ESC Button** to start at Main Menu

from **Main Menu** ... to **These Screens** ... to **Do This** ...

### PLAY




touch to select one of two options...

#### Video or Picture


- select **Video** or **Picture**
- select a folder for the **Date of the Recording** (year/month/day)



- select a **Video** or **Picture File** to **Play** or **View**

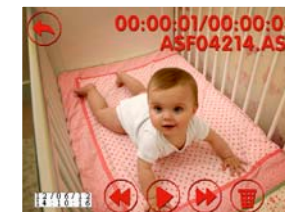

- as you view a **Recorded Video** file the screen will also show...
  - Return** icon (upper left) - used to exit the playback at any time
  - Elapsed Time / Total Play Time / and Date-Time Stamp** (upper right)
  - Video Play** controls (bottom center)
  - Delete** icon (bottom right)

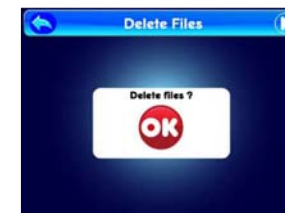

- when the **Delete** icon is touched you see this to confirm file deletion with an **OK**

HINT: To move back one screen touch **Return icon** or go to camera view by pressing the **ESC Button**.

## TOUCH NAVIGATION ... touch the ESC Button to start at Main Menu

from **Main Menu** ...

... to **These Screens** ...

... to **Do This** ...

### QUAD / CHANNEL



NOTE: All cameras must be **Paired** to the monitor for viewing access. (Refer to Pairing on page 5.)

NOTE: In **Quad** mode, touching any active camera image changes to that full screen single camera view. Also sound only from the last camera in full screen mode can be monitored.



NOTE: In **Auto Scan** mode (indicated by this symbol) you can select which cameras to include and the scan time between each camera. (Refer to Auto Switch Time on page 11.)



choose from these options...

### Single Camera View

- ▶ select a **Camera** icon (1-4, which will be shown in color and active if paired) to be your constant channel if choosing **Single Camera View**

### Quad View

- ▶ select the **Quad** icon and see all currently paired cameras (up to 4) simultaneously

*HINT: To move back one screen touch the **Return** icon... or go to camera view by pressing the **ESC Button**.*

### Auto Scan View

- ▶ select the **Auto Scan** icon to go to a full view from each paired camera (up to 4) as they change from one to the next

### VOX Sound Activated Monitoring



NOTE: **VOX** keeps monitor (picture and sound) off until the camera detects a sound, which automatically turns the monitor back on. This helps prevent false alarms and allows parents more rest.



### Sound Activated Mode (VOX)

- ▶ select a paired **Camera** icon (the ones in color)
- ▶ select from 3 options...

**VOX** (set to On or Off)

**Sound Sensitivity**  
(set to High, Med or Low)

**Sound-Activated Recording**  
(set to Yes or No)

*HINT: To move back one screen touch **Return** icon or go to camera view by pressing the **ESC Button**.*

## TOUCH NAVIGATION ... touch the ESC Button to start at Main Menu

from **Main Menu** ...

... to **These Screens** ...

... to **Do This** ...

### SETTINGS




 
### Monitor Setting

- ▶ on the Setting Screen, simply touch the **System Setting** icon (at the top) to access monitor functions...




### From the Monitor Setting list...

- ▶ select **Date/Time**
- ▶ touch **any value**, then touch the **arrows** to adjust **value up or down**
- ▶ press **OK** to save changes

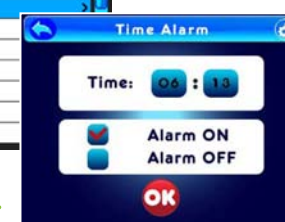

### From the Monitor Setting list...

 - ▶ touch **Time Alarm**
- ▶ touch **any value**, then touch the **arrows** to adjust **value up or down**
- ▶ touch **Alarm On** or **Alarm Off**
- ▶ touch **OK** to set



### From the Monitor Setting list...

- ▶ touch **Auto Switch Time**
- ▶ select a **camera switching** interval (5 sec to 60 sec)
- ▶ check the **cameras** to be included in **auto switching** mode
- ▶ touch **OK** to set

*HINT: To move back one screen touch **Return** icon or go to camera view by pressing the **ESC Button**.*

## TOUCH NAVIGATION ... touch the **ESC Button** to start at Main Menu

from **Main Menu** ... to **These Screens** ...

... to **Do This** ...

### SETTINGS (cont.)



#### Monitor Setting (cont.)

From the **Monitor Setting** list...

- ▶ select **TV Out Format**
- ▶ choose either **PAL** or **NTSC** video format (US standard is **NTSC**)
- ▶ touch **OK** to set



From the **Monitor Setting** list...

- ▶ select **Recording Schedule**
- ▶ touch **any value** and then touch the **up and down arrows** to **adjust time**
- ▶ to activate press **On** (or **OFF** to deactivate)



From the **Monitor Setting** list...

- ▶ select **Zoom/Pan/Tilt** and go to the camera scene with **Zoom/Pan/Tilt** icons overlaying the image...
- ▶ to **Zoom-In** touch the **+** icon (maximum of 3.0-to-1 enlargement)
- ▶ to **Zoom-Out** touch the **-** icon
- ▶ to **Pan or Tilt** touch the **arrow** icons (you can Pan or Tilt only after you have zoomed in)

NOTE: Press the **ESC Button** to return to the video image without Zoom/Pan/Tilt icons overlaying it.

HINT: To move back one screen touch **Return** icon  or go to camera view by pressing the **ESC Button**.

## TOUCH NAVIGATION ... touch the **ESC Button** to start at Main Menu

from **Main Menu** ... to **These Screens** ...

... to **Do This** ...

### SETTINGS (cont.)



#### Monitor Setting (cont.)

From the **Monitor Setting** list...

- ▶ touch **Video Off Timeout**
- ▶ touch the **timer** icon to choose between **non-active (X)** or **active (no X) Timeout Mode**
- ▶ if active, touch the **-** or **+** icons to set the limit at which time the video will automatically **Timeout** (turn off)



From the **Monitor Setting** list...

- ▶ select **Touch Calibration**
- ▶ touch the **+** icons as they appear in each corner of the screen (this calibrates the monitor for best touch screen accuracy)
- ▶ once all four corners are touched, tap **EXIT** to return to the Monitor Setting list



From the **Monitor Setting** list...

- ▶ touch **USB Output**
- ▶ select the **Top** icon for **Charging** the monitor via the AC Adapter (included)
- ▶ select the **Middle** icon to use the system as a **USB Webcam** on a PC\* via the USB Data Cable (included) or...
- ▶ select the **bottom** icon for PC file transfer mode to or from an SD Card in the monitor via the included USB Data Cable
- ▶ touch **OK** to set

\*See page 17 for details on using the USB Output for viewing video or transferring video or photo files to a PC.


HINT: To move back one screen touch **Return** icon  or go to camera view by pressing the **ESC Button**.



## TOUCH NAVIGATION ... touch the **ESC Button** to start at Main Menu

from **Main Menu** ... to **These Screens** ... to **Do This** ...

### SETTINGS (cont.)

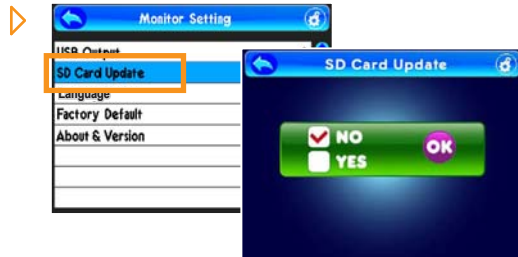

#### Monitor Setting (cont.)


##### From the Monitor Setting list...

**NOTE:** Though shown here for reference, this function to be used **ONLY** for **Updating System Firmware**, to be downloaded and put onto an SD card, in order to be installed using this option. Specific instructions will be provided to registered users regarding any new firmware.



##### From the Monitor Setting list...

- ▷ touch **Language**
- ▷ touch one of the 6 specific **Languages** you want the monitor to show in all text displays

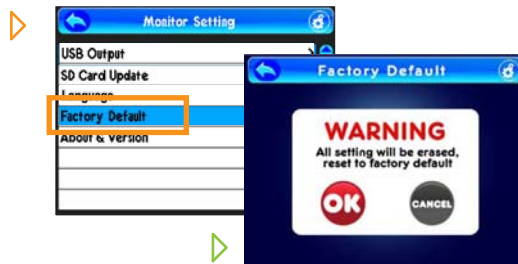

##### From the Monitor Setting list...

- ▷ touch **Factory Default**
- ▷ choose **OK** to reset all settings, or **Cancel** if you change your mind



##### From the Monitor Setting list...

- ▷ touch **About & Version**
- ▷ here you will see the product name and manufacturer, and the latest version of the installed firmware

HINT: To move back one screen touch **Return icon** or go to camera view by pressing the **ESC Button**.

## TOUCH NAVIGATION ... touch the **ESC Button** to start at Main Menu

from **Main Menu** ... to **These Screens** ... to **Do This** ...


### SETTINGS (cont.)



#### Camera Settings

- ▷ on the Setting Screen, simply touch the **Camera** icon (on the bottom line) for the one you wish to control the settings for...

**NOTE:** Only **Paired** camera icons will show in color and be active for touch control.

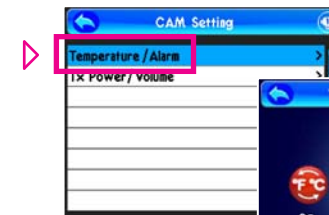


#### From the Camera Setting screen...

- ▷ touch **Temperature/Alarm**
- ▷ set °F or °C (default is °F)
- ▷ touch the **thermometer icon**
- ▷ set the maximum and minimum alarm **temperature range**
- ▷ set the **Alarm** to be **On** or **Off**
- ▷ if **On**, set the **Alarm Time** (from 5 to 60 seconds)



**NOTE:** When the room temperature (where the camera is) goes above or below the temperature range you set, the monitor will sound an alarm and the small **Temperature** icon on the monitor screen will flash showing the out-of-range temperature in that room. The **ESC Button** will temporarily silence the repeating alarm until the temperature returns to the set range, or you turn the **Alarm Off** from this screen.

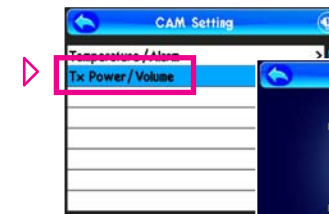

#### From the Camera Setting list...

- ▷ touch **Tx Power/Volume**
- ▷ adjust the **Camera Speaker Volume** (top icon) up or down for the Two-Way Talk function
- ▷ set the **Transmit Range Power** (lower icon) on **High** or **Low**



HINT: To move back one screen touch **Return icon** or go to camera view by pressing the **ESC Button**.

## INDIVIDUAL CAMERA and CONVENIENCE ICONS


**IMPORTANT:** Use **ONLY** a fingertip or other **NON-SHARP** object to select touch screen options. Using sharp objects can damage the screen and void the warranty.

Specific small icons are created for each paired camera at the top edge of the screen which relate to that individual camera (except **Battery Level**, which is for the **monitor only**). To use them...

just observe or touch one of the following **Individual Camera** icons to either...

- A...** view **current Camera Number**, or change to the **next camera** you want to view
- B...** view **current VOX level**, or change **VOX sound sensitivity level** for that camera
- C...** view **Lullaby status**, change the **Lullaby selection**, or **turn off Lullabys** from that camera
- D...** add **Zoom/Pan/Tilt** controls over the scene to manipulate the image from that camera

*NOTE: Other individual camera icons appear for informational purposes, such as **Room Temperature**, **Switching Mode** and **Signal Strength**, and when in **Quad Mode**, each camera screen shown will also display the **Signal Strength** of that particular camera.*

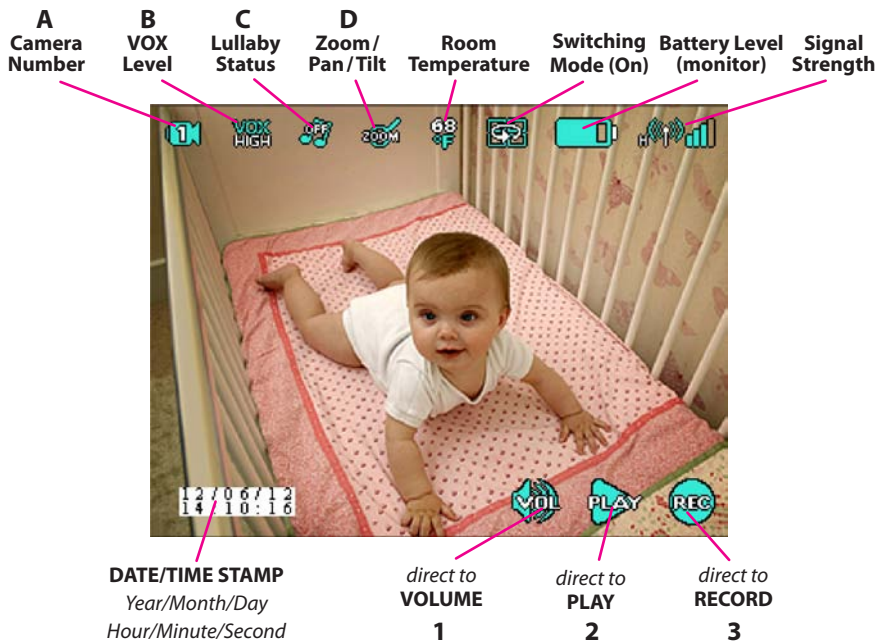

Each paired camera scene also displays **Convenience Icons** (shown along the bottom of the screen) so you can either view the **current Date/Time Stamp** or...

touch and **bypass** the **Main Menu** to...

- 1... instantly adjust **Volume** controls for that camera
- 2... instantly access the **Play Video/View Photo** control panel
- 3... instantly **Record Video** from that camera...*with just one touch!*

## WEBCAM USE

To view a larger version of the monitor screen on your PC\* screen...

*Note: Using this feature allows viewing only on the computer. Once USB Connection is established the monitor screen is turned off and all features and buttons (with the exception of the ESC Button) will not be functional.*

1. set the **USB Output** on the monitor to the **Webcam** icon (refer to page 13)
2. using the **USB Cord** (included), connect the monitor to an available USB port on your PC\*
3. wait for your computer to automatically **recognize** and **install** the appropriate **drivers** and you receive a **Successful Installation** message.
4. once you have installed the device driver, your **MobiCam® DXR Touch** can be utilized as a **wireless webcam**.
5. once the picture from the monitor is displayed on your computer screen, pressing the **ESC Button** on the monitor toggles between **Single** and **Quad View** modes.

*The DXR Touch can be used in conjunction with Skype®, Windows Messenger®, Google Talk® and Yahoo Messenger®. When utilizing Skype®, Windows Messenger®, Google Talk® or Yahoo Messenger®, please refer to their documentation for technical support.*

\* The MobiCam® DXR Touch is only compatible with Windows® PCs.

## DATA/FILE TRANSFERS

To transfer photo and video files from the monitor to your PC\* ...

*Note: Using this feature allows viewing only on the computer. Once USB Connection is established the monitor screen is turned off and all features and buttons (with the exception of the ESC Button) will not be functional.*

1. set the **USB Output** on the monitor to the **USB Connection** icon (refer to page 13)
2. using the **USB Cord** (included), connect the monitor to an available USB port on your PC\*
3. wait for your computer to automatically **recognize** and **show** the outside **Memory Device**.
4. you may then **move** or **copy files** from the SD Card (not included) as you normally would with any such storage device (provided one is in the monitor and has data stored on it)

\* The MobiCam® DXR Touch is only compatible with Windows® PCs.

## AUDIO/VIDEO OUT

*You can hear and see audio/video output on a TV or other AV device directly from your DXR Touch monitor.*

Simply connect the AV OUT Cord (included) to the AV OUT jack on the right side of the monitor and connect the other ends (three RCA connectors) to the Audio and Video Input jacks on your TV, DVR, or Camcorder, and select the appropriate input setting on that AV device.

The monitor screen will automatically turn off, signaling the unit is connected. Please refer to your AV device manual for proper input selection and operation.

## TROUBLESHOOTING

Problem	Solution
Monitor will not turn on	<ul style="list-style-type: none"> <li>• Check AC/DC connection</li> <li>• Confirm power outlet is working properly</li> <li>• Charge Battery Pack</li> </ul>
Monitor on but no picture	<ul style="list-style-type: none"> <li>• Confirm "Audio Only" mode is not selected</li> <li>• Confirm "VOX" mode is OFF</li> <li>• Confirm there are no obstructions in front of camera</li> <li>• Confirm camera and monitor are paired properly</li> </ul>
Camera will not turn on	<ul style="list-style-type: none"> <li>• Check AC/DC connection</li> <li>• Confirm power outlet is working properly</li> </ul>
Battery does not recharge	<ul style="list-style-type: none"> <li>• Check AC/DC connection.</li> <li>• Check battery pack connection in the monitor.</li> <li>• Confirm power outlet is working properly</li> <li>• Confirm batteries are placed correctly in monitor</li> </ul>
Connection is lost	<ul style="list-style-type: none"> <li>• Confirm monitor and camera are ON.</li> <li>• Confirm AC/DC adapter is connected properly</li> <li>• Confirm battery has sufficient power.</li> <li>• Place camera and monitor near each other and press camera <b>Pair</b> button to relink camera and monitor.</li> <li>• Reduce distance between camera and monitor.</li> <li>• Remove or avoid other wireless products that may be near camera or monitor.</li> </ul>

## FACTORY DEFAULT SETTINGS

Item	Default value	Range
<b>Monitor setting value</b>		
Volume	5	0-9
Contrast	5	0-9
Brightness	5	0-9
Date & Time	2011/09/01,08:00	
Alarm Time	Off, 09:00	On , Off
Date Time Stamp	Off	On , Off
Auto Switch time	5s	5s,10s,30s,1min
Recording schedule	Off	On , Off
	Start Time : 12:00:00	
	Final Time: 12:11:00	
Zoom	1.0	1.0 to 3.0
TV out format	PAL	PAL,NTSC
Monitor Video Off Timeout	Off, 60s	From 5s to 180s
<b>Camera setting value</b>		
VOX setting	Off	High, Middle, Low, Off
Lullaby	Off	Off, Lull 1, Lull 2, Lull 3, Lull 4
Temperature setting	°F	°F - °C
	Min 59°F - Max 86°F	50°F - 122°F
	Alarm Off	On/Off, 5s,10s,30s,1m (increments)
Volume	5	0-9
TX Power	High	High, Low
Night Light	Off	Off, On

## BATTERY REPLACEMENT

Monitor Battery (included)  
Li-Ion 3,7V 1200 mAh



Camera Battery (not included, sold separately, Mobi part # 70216) Li-Ion 3,7V 1500 mAh



## PRODUCT SAFETY

***This product is not intended to be used as a medical monitor and its use should not replace adult supervision.***

### CAUTION

- Periodically examine this product for damage to the cord, housing or other parts that may result in the risk of fire, electric shock or serious injury. Do not operate any product with a damaged cord or plug. If the product malfunctions, or is damaged in any manner, please contact the manufacturer for examination and repair to avoid a potentially serious hazard.
- Never use the camera, monitor, or AC adapters near water (i.e. bathtub, sink, etc.).
- Always use the camera and the monitor where there is adequate ventilation. To prevent overheating keep the camera and the monitor away from heat sources such as radiators, heat registers, stoves, or other appliances that produce heat.
- Use only a dry cotton cloth to keep the units free of dust. Do not use a damp cloth, water, or liquid cleaner of any kind.
- Remove the battery from either unit during long periods of non-use, as batteries may leak.
- Unplug the AC adapters from the monitor and the camera during periods of non-use. To disconnect from the electrical outlet, grip the transformer and pull from the power socket. Never remove by pulling the cord.
- Only use the Monitoring System with the supplied power adapters.

### WARNING

This product is not a toy. Keep out of reach of children. To prevent strangulation never place a power cord within reach of a child.

## PROPER DISPOSAL

If you eventually dispose of the DXR Touch Monitor, Camera, Batteries, or AC Adapters, do so in accordance with current federal, state and local regulations. As a consumer, you may be obligated by law to recycle used batteries.

Do not mix products bearing the WEEE symbol (crossed out trash bin icon) with your general household waste.

For the correct collection and treatment of these products take them to the collection points designated by your local authority. Alternatively, contact the supplier that sold you the product.



## LIMITED WARRANTY

Mobi Technologies, Inc. warrants this product to be free from defects in material and workmanship for a period of ninety (90) days from the date of purchase. Should this product prove to be defective at any time during the warranty period, Mobi Technologies, Inc. will, at its option, either replace or repair it without charge. After the warranty period, a service charge will be applied for replacement of parts or labor for repair. If you suspect that the product is malfunctioning or is defective, please call Mobi toll free at 1. 877. 662.4462 and ask for the Service Department. If the problem still persists after consulting with our Service Department, you may return the product to obtain warranty service. Please return it to Mobi along with a dated sales receipt from the place of purchase to verify that it is within the authorized warranty period. This warranty does not cover damage caused by accident, misuse, abuse, improper maintenance, unauthorized modification, or connection to an improper power supply. A fee may be charged for repair resulting from such damage. This warranty excludes all incidental or consequential damages and any liability other than what is stated above.

### Notes:



## **Mobi Technologies, Inc.**

5913 Blackwelder St  
Culver City CA 90232

Toll Free 877.662.4462

Be sure to register this  
product on the Mobi website  
to receive firmware updates.

[www.getmobi.com](http://www.getmobi.com)

Mobi, MobiCam, and DXR Touch  
are registered trademarks of  
Mobi Technologies, Inc.

SD is a trademark of SD Association.  
Skype®, Windows Messenger®, Google Talk®  
and Yahoo Messenger® are trademarks  
of their respective companies.

© 2013 Mobi Technologies, Inc.

All Rights Reserved