

**MOBI**®

# Secure Start™

wireless  
audio/video  
monitor



Complete

Operating

Instructions

70294



# TABLE OF CONTENTS

	pg
Introduction .....	1
Package Contents .....	1
Features .....	2
Consumer Guide to Product Safety .....	3-4
Know Your Monitor .....	4
Know Your Camera .....	5
Powering Up .....	6
Monitor/Camera Operation .....	7-10
Troubleshooting .....	11
Radio Interference Advice .....	12
Warranty .....	13

## LIST OF FIGURES

	pg
Fig. 1 – Signal Strength .....	1
Fig. 2 – Secure Start Monitor .....	2
Fig. 3 – Secure Start Camera .....	2
Fig. 4 – Secure Start Monitor – Left / Front View .....	4
Fig. 5 – Secure Start Monitor – Right / Front View .....	4
Fig. 6 – Secure Start Monitor – Rear View .....	4
Fig. 7 – Secure Start Camera – Right / Front View .....	5
Fig. 8 – Secure Start Camera – Rear View with Stand .....	5
Fig. 9 – Volume Adjustment Menu Display .....	7
Fig.10 – Operations Display – Brightness Highlighted .....	7
Fig.11 – VOX Enabled Display .....	7
Fig.12 – Operations Display – VOX Sense Highlighted .....	8
Fig.13 – VOX Sensitivity Adjustment Display .....	8
Fig.14 – Operations Display – Menu Exit Highlighted .....	8
Fig.15 – Audio Mode Only Display .....	9
Fig.16 – Operations Display – Talk Vol Highlighted .....	9
Fig.17 – Talk Volume Adjustment Display .....	9
Fig.18 – Operations Display – Brightness Highlighted .....	10
Fig.19 – Brightness Adjustment Display .....	10
Fig.20 – Other Screen Indicators .....	10

# INTRODUCTION

Congratulations on the purchase of the Mobi® Secure Start™ Audio/Video Monitoring System, bringing you the latest in wireless technology. We recommend you read the instructions carefully before use. The Mobi® Secure Start™ enables you to transmit audio wirelessly, which is ideal for monitoring babies, young children, housebound seniors, or pets.

## About 2.4 Ghz Digital Wireless Signals



Fig. 1

Secure Start™ is an innovative, digital wireless solution integrating advanced Frequency Hopping Spread Spectrum (FHSS). This technology greatly reduces interference coming from other devices using the same radio frequency (2.4 Ghz), such as WIFI, Bluetooth, cordless phones, etc.. However, a

weaker signal (lag or still image) can occur from time to time depending on the environment where the system is installed. Factors affecting transmission include use near microwave ovens or other high frequency electromagnetic waves, as well as reinforced concrete walls, large scale metal products and metal furniture.

Additionally your wireless router speed can be affected if the units are placed close to the router. Your signal strength will return to normal once the units are placed farther from the router or once they are turned off.

## If You Experience Reception Problems

First, readjust the monitor to a different angle. Next, attempt to relocate the camera in closer proximity to the monitor. If none of these steps resolves the problem, if at all possible, rearrange potential obstacles such as desks, furniture, metal cabinets, etc.

## PACKAGE CONTENTS

1 x Monitor Unit # 70294R (Fig. 2)  
1 x Monitor AC/DC Adapter Cord  
1 x Mobi® Rechargeable Battery Pack\*

1 x Camera Unit # 70294T (Fig. 3)  
1 x Camera AC/DC Adapter Cord  
1 x Camera Stand

\*for Monitor only

*NOTE: If you find any of the contents are missing or should you need to order replacement parts, please contact Mobi Technologies, Inc., Monday through Friday between 8am and 5pm PST at 1.877.662.4462, or visit [www.getmobi.com](http://www.getmobi.com).*

## FEATURES

- 2.0" LCD Color High Resolution TFT LCD Display
- Voice Activated Picture & Sound with Auto Mute
- Transmission Range up to 400Ft
- Up to 6 Ft Night Vision Range
- 2.4 Ghz Private Digital Transmission
- No installation needed—ready to use
- Compact design for easy portability
- Auto Mute with Voice Activation
- Audio Only Option
- Low Battery and Out of Range Indicators
- Rechargeable Batteries Included for the Monitor
- AC/DC Adapters included for Monitor and Camera



Fig. 2



Fig. 3

# CONSUMER GUIDE TO PRODUCT SAFETY

Please read this instruction manual before using your Mobi® Secure Start™ system. When using electrical appliances, basic safety precautions should always be followed.

*Note: Please keep this manual for future reference.*

- This product is not intended to be used as a medical monitor and its use should not replace adult supervision.



- Periodically examine this product for damage to the cord, housing or other parts that may result in the risk of fire, electric shock or injury. Do not operate any product with a damaged cord or plug. If the Color Wireless Monitor malfunctions, or is damaged in any manner, please contact the manufacturer for examination and repair to avoid a hazard.
- Never use the Camera and/or the Monitor near water (i.e. bathtub, sink, etc.).
- The AC adapters are not toys.



- Always use the Camera and the Monitor where there is adequate ventilation. To prevent overheating keep the Camera and the Monitor away from heat sources such as radiators, heat registers, stoves, or other appliances that produce heat.
- Use only a dry cotton cloth to keep the units free of dust. Do not use a damp cloth, water, or liquid cleaner of any kind.



- Remove the batteries from the Monitor during long periods of non-use, as batteries can leak.
- Unplug the AC adapters from the Monitor and the Camera during periods of non-use. To disconnect from the power supply, grip the transformer and pull from the power socket. Never pull by the cord.
- Only use the Monitoring System with the supplied power adapters.

## KNOW YOUR MONITOR

### Button & LED Functions:

(Fig. 4)

- 1 Two-Way (TALK) Button
- 2 Power Selector (OFF • AUDIO • ON)  
(battery charge indicator)
- 3 Belt Clip
- 4 Power ON Indicator
- 5 Volume Up ( + ) Button
- 6 Menu Button
- 7 Volume Down ( - ) Button



Fig. 4

(Fig. 5)

- 8 VOX OFF / ON Button
- 9 AC/DC Adapter Jack
- 10 Microphone

(Fig. 6)

- 11 Speaker
- 12 Battery Door



Fig. 5

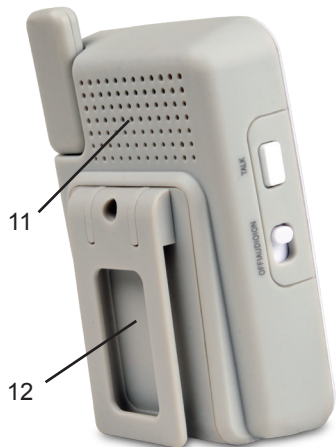 


Fig. 6

# KNOW YOUR CAMERA

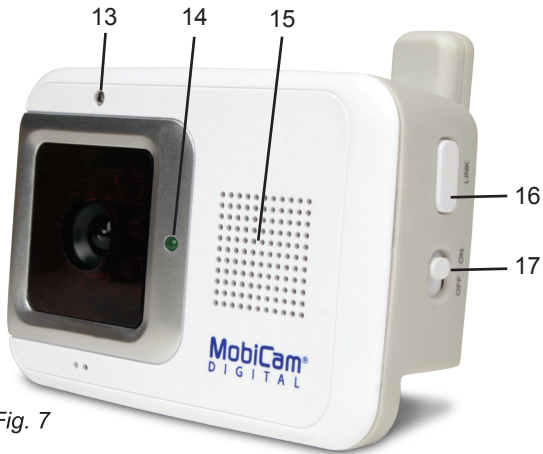 


Fig. 7

## Button & LED Functions:

(Fig. 7)

- 13 Light Sensor
- 14 Power ON Indicator
- 15 Speaker
- 16 LINK Button
- 17 Power Selector OFF / ON

(Fig. 8)

- 18 AC/DC Adapter Jack
- 19 Camera Stand
- 20 Stand Mounting Socket

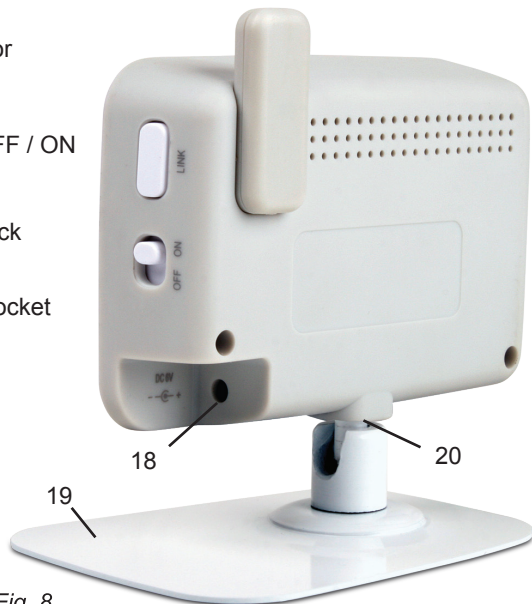 


Fig. 8

# POWERING UP

The Mobi® Secure Start™ Camera is powered by an AC/DC Adapter while the Monitor can be powered by either rechargeable batteries or an AC/DC Adapter (both provided).

## Using the AC/DC Adapters:

- Plug the connector of the AC/DC Adapters into the DC Jacks on the Monitor and Camera units (*Fig. 5; no. 9 and Fig. 8; no. 18*). Both AC/DC Adapters are the same and are interchangeable between the Monitor and the Camera.
- Plug the adapter power cords into a standard AC outlet.
- To check the Monitor, switch the Power ON/OFF Selector to the ON position (*Fig. 4; no. 2*).
- To check the Camera, switch the ON/OFF Selector to the ON position (*Fig. 7; no. 17*).
- The power indicator lights will illuminate indicating that the units are ON (*Fig. 4; no. 4 and Fig. 7; no. 14*).

## Using Batteries:

- Remove the battery door (*Fig. 6, no. 12*) on your Monitor using a screwdriver and insert the Mobi® rechargeable batteries.
- Return the battery cover to the original position and secure the screw with a screwdriver and allow the batteries to charge with the AC/DC Adapter connected.
- The battery indicator light is green when charged and will turn red when batteries are low.

*Note: One battery charge goes between 3-4 hours. When monitoring over long periods and, in particular, overnight, it is recommended to use the AC/DC Adaptor for the Monitor.*

## Warnings:

1. Replace rechargeable batteries with Mobi® rechargeables ONLY.
2. When using non-rechargeables do not mix old and new batteries.
3. Do not mix alkaline, standard or rechargeable batteries.
4. Remove the batteries during long periods of non-use.
5. Please dispose of old, defective batteries in an environmentally friendly manner, in accordance with the relevant legislation.
6. Use only the AC/DC Adapters supplied with the system.

*Note: Camera only functions while its AC/DC Adapter is connected.*



# MONITOR / CAMERA OPERATION

## Monitor Power ON/OFF

Switch the Power ON/OFF Selector (Fig. 4, no. 2) to the ON position. The power indicator light (Fig. 4, no. 4) will turn on indicating the Monitor is ON.

## Volume Adjustment

Press the Volume Up ( + ) Button (Fig. 4; no. 5) or Volume Down ( - ) Button (Fig. 4; no. 7) to adjust the volume to the desired level. This image (Fig. 9) will appear on screen to indicate the sound level.



Fig. 9

## Menu Settings

Press the Menu Button (Fig. 4; no. 6) to enter the menu operation mode. There are 3 operations you can adjust as shown here (Fig. 10): “Brightness”, “VOX Sense” (Voice Activation Sensitivity Level) and the “Talk Vol” (Two-Way Talk Volume) level. To select an operation use the “+” and “-” Buttons to toggle between the three options. Once the desired option is selected press the Menu Button again to go to that operation mode.

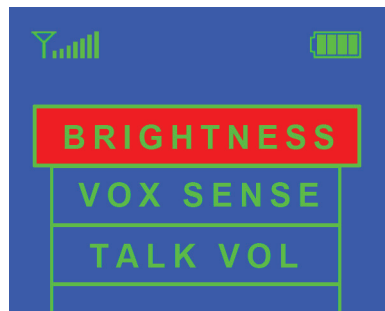 


Fig. 10

*Note: The selected operation will be highlighted in red.*

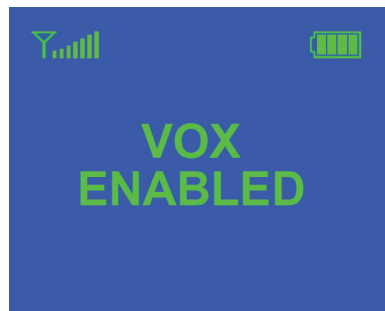 


Fig. 11

## VOX (Voice Activation) Mode

Your Monitor is equipped with VOX mode. To turn on this feature switch the VOX button (Fig. 5; no. 8) to the ON position. The following message (Fig. 11) will appear on screen indicating the feature is enabled.

VOX mode allows your Monitor to go into standby which conserves battery power. While in VOX mode your Monitor will stop transmitting audio and video. However, whenever the Camera picks up noise (like your baby or anything else) in the room, the Monitor will automatically begin transmitting video and sound. Once the room is quiet again the Monitor will return to the power-saving VOX mode unless you have switched off the VOX feature.

### VOX Sensitivity Adjustment

You can adjust the VOX noise sensitivity to a desired level. Press Menu and use the “+” and “-” Buttons and select VOX Sense (Fig. 12).

Next press the Menu Button again to select that operation and then use the “+” and “-” Buttons again to adjust the sensitivity to the desired level (Fig. 13) ...Lo, Mid, or Hi sensitivity to noise.

Press the Menu button once more to select that sensitivity level and return to the three operation choices.

### Exiting Menu

To get back to the normal screen (with only the Signal and Battery Strength symbols) from the three operation choice screen, use the “+” and “-” Buttons to scroll to Menu Exit (Fig. 14) and press the Menu Button again.



Fig. 12

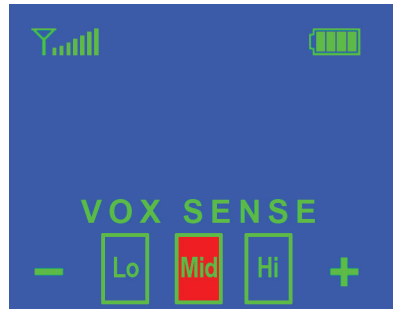 


Fig. 13



Fig. 14

## Audio Only Mode

Your Monitor features an Audio Only mode option. This option allows you to conserve battery power while transmitting and receiving only audio, leaving the video off. To select this option switch the Power Selector (OFF • Audio • ON) (Fig. 4; no. 2) to Audio. This message (Fig. 15) will appear on screen indicating this mode is enabled.

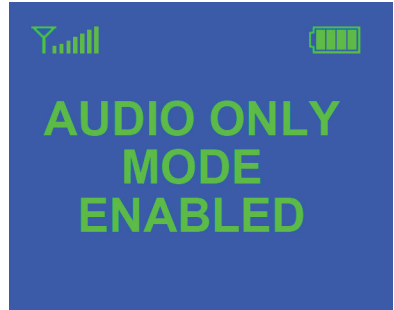 


Fig. 15

## Two-Way Talk

Your Monitor can allow you to communicate through the Camera when you press the Talk Button (Fig. 4; no. 1). Pressing the Talk Button enables your Camera to receive audio from the Monitor.

To adjust the volume level for this option press the Menu Button and use the “+” and “-” Buttons to scroll to Talk Vol (Fig. 16).



Fig. 16

Press the Menu Button again to go to the Talk Volume Adjustment Display (Fig. 17) and use the “+” and “-” Buttons to select the desired level then press the Menu Button once more to set that level.



Fig. 17

## Brightness Level

To adjust the brightness level on your Monitor press the Menu Button and use the “+” and “-” Buttons to select Brightness (Fig. 18).

Press the Menu Button again to select that option which shows the Brightness level scale (Fig. 19). Use the “+” and “-” Buttons to select the desired level and then the Menu Button again to set the level.

## Linking the Units

You can pair the Monitor and Camera when necessary using these steps:

- Turn ON both units
- On the Monitor: Press and hold the “ - ” and “ + ” buttons together until its power ON indicator starts blinking.
- Then on the Camera: Press and hold the LINK Button (Fig. 7, no. 16) until its power ON indicator starts blinking.
- The system will complete the unit matching process automatically.
- Once properly linked the monitor will display the image transmitted from the camera.

*Note: Secure Start™ is a single Camera system and does not support multiple cameras.*




Fig. 18



Fig. 19

## Other Screen Indicators

 Your Monitor will always indicate the signal strength and battery level on screen (Fig. 20).

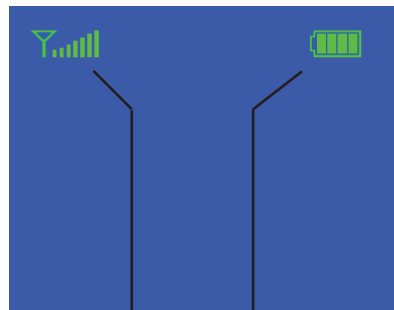

Signal Strength

Battery Level

Fig. 20

# TROUBLESHOOTING

## Problem

## Solution

Monitor will not turn on

- Check AC/DC Connection
- Confirm power outlet is working properly.
- Charge Battery Pack

Monitor does not show an image

- Confirm audio only mode is not selected
- Confirm VOX mode is OFF
- Confirm there are no obstructions in front of Camera

Monitor only transmitting audio

- Confirm audio only mode is not selected

Camera will not turn on

- Check AC/DC Connection
- Confirm power outlet is working properly.

Battery does not recharge

- AC/DC adapter has not been connected
- Check battery pack connection to Monitor.
- Confirm power outlet is working properly.
- Confirm batteries are placed correctly in Monitor.

Connection is lost

- Confirm Monitor and Camera are ON.
- Confirm AC/DC adapter is connected properly.
- Place Camera and Monitor near each other and press camera link button

# RADIO INTERFERENCE ADVICE

## FCC Statement

15.19: This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference and (2) This device must accept any interference received, including interference that may cause undesired operation.

15.21: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

## FCC Radiation Exposure Statement

This equipment complies with FCC radiation exposure limits set forth for uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body. This Camera must not be collocated or operating in conjunction with any other antenna or Camera. This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This device and its antenna must not be co-located or operating in conjunction with any other antenna or Camera. This device has been tested for compliance with FCC RF Exposure (SAR) limits in the typical laptop computer configuration and this device can be used in desktop or laptop computers with side mounted USB slots. This device and its antenna must not be co-located or operated in conjunction with any other antenna or Camera.

## IC STATEMENT

Operation of this device is subject to the following two conditions:

1. This device may not cause interference, and 2. This device must accept any interference, including interference that may cause undesired operation of the device.

# WARRANTY

Mobi Technologies, Inc. warrants this product to be free from defects in material and workmanship for a period of ninety (90) days from the date of purchase. Should this product prove to be defective at any time during the warranty period, Mobi Technologies, Inc. will, at its option, either replace or repair it without charge. After the warranty period, a service charge will be applied for replacement of parts or labor for repair. To obtain warranty service, please return the product to Mobi Technologies, Inc. along with a dated sales receipt from the place of purchase. Purchaser is responsible for shipping the product to Mobi Technologies, Inc. at the address indicated below and for all associated freight and insurance costs. This warranty does not cover damage caused by accident, misuse, abuse, improper maintenance, unauthorized modification, or connection to an improper power supply. A charge will be made for repair of such damage. This warranty excludes all incidental or consequential damages and any liability other than what is stated above.

© 2012 Mobi Technologies, Inc. All Rights Reserved.

Mobi Technologies, Inc.

5913 Blackwelder St

Culver City CA 90232

Toll Free Number (877) 662-4462

[www.getmobi.com](http://www.getmobi.com)

Please register your product at:

[www.getmobi.com/registerproduct.php](http://www.getmobi.com/registerproduct.php)



**Mobi Technologies, Inc.**

5913 Blackwelder St  
Culver City CA 90232

Toll Free Number (877) 662-4462

[www.getmobi.com](http://www.getmobi.com)

Mobi and Secure Start are registered  
trademarks of Mobi Technologies, Inc.

© 2012 Mobi Technologies, Inc. All Rights Reserved