

1

Preface

Tablet PC User's Manual



Contents

Chapter 1: Preface

Content	1-2
Regulations and Statements	1-3
FCC-B Radio Frequency Interference Statement	1-3
FCC Conditions	1-3
FCC	1-4
CE Conformity	1-4
Battery Regulations.....	1-4
WEEE Statement	1-5
Safety Instructions	1-5
Trademarks	1-7
Reversion History	1-7

Chapter 2: Introductions

Manual Map	2-2
Unpacking	2-2
Product Overview	2-3
Specification	2-6

Chapter 3: Getting Started

Power Management	3-2
AC Power	3-2
Connecting the AC Power	3-2
Battery Power	3-3
Powering ON	3-4
Power Management in Windows OS.....	3-5
Basic Operations	3-8
Knowing the Display Features.....	3-8
Wireless Activation.....	3-10

❖ Regulations and Statements

FCC Conditions

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- This device may not cause harmful interference.
- This device must accept any interference received, including interference that may cause undesired operation.

changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a

Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are

designed to provide reasonable protection against harmful interference in a

residential installation. This equipment generates, uses and can radiate radio

frequency energy and, if not installed and used in accordance with the

instructions, may cause harmful interference to radio communications. However,

there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception,

which can be determined by turning the equipment off and on, the user is

encouraged to try to correct the interference by one or more of the following

measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC RF Radiation Exposure and SAR Statements SAR Statement. The T8650 has been tested for body-worn Specific Absorption Rate (SAR) compliance. The FCC has established detailed SAR requirements and has established that these requirements. RF Exposure Information The radio module has been evaluated under FCC Bulletin OET 65C (01-01) and found to be compliant to the requirements as set forth in CFR 47 Sections, 2.1093, and 15.247 (b) (4) addressing RF Exposure from radio frequency devices. This model meets the applicable government requirements for exposure to radio frequency waves. The highest SAR level measured for this device is less than 1.6 W/kg.

WiFi 5G indoor use only

Operations in the 5.15-5.25GHz band are restricted to indoor usage only.

CE Conformity



This device is in compliance with the essential safety requirements and other relevant provisions set out in the European Directive.

Battery Regulations



European Union:

Batteries, battery packs, and accumulators should not be disposed of as unsorted household waste. Please use the public collection system to return, recycle, or treat them in compliance with the local regulations.



廢電池請回收

Taiwan:

For better environmental protection, waste batteries should be collected separately for recycling or special disposal.

California, USA: The button cell battery may contain perchlorate material and requires special handling when recycled or disposed of in California.

For further information please visit: <http://www.dtsc.ca.gov/hazardouswaste/perchlorate/>

Safety Guideline for Using Lithium Battery

Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type recommended by the equipment manufacturer. Discard used batteries according to manufacturer's instructions.

WEEE Statement

Under the European Union ("EU") Directive on Waste Electrical and Electronic Equipment, Directive 2002/96/EC, which takes effect on August 13, 2005, products of "electrical and electronic equipment" cannot be discarded as municipal waste anymore and manufacturers of covered electronic equipment will be obligated to take back such products at the end of their useful life.



❖ Safety Instructions



Read the safety instructions carefully and thoroughly. All cautions and warnings on the equipment or user's manual should be noted.



Keep this equipment away from humidity and high temperature.



Lay this equipment on a stable surface before setting it up.



The openings on the enclosure are used for air convection and to prevent the equipment from overheating. Do not cover the openings.



- Do not leave the equipment in an unconditioned environment with a storage temperature above 60°C (140°F) or below 0°C (32°F), which may damage the equipment.
- This unit should be operated under maximum ambient temperature of 40°C (120°F).



- Make sure the power voltage is within safety range and has been adjusted properly to the value of 100~240V before connecting the equipment to the power outlet.
- Always unplug the AC power cord before installing any add-on card or module to the equipment.

-
- Always disconnect the AC power cord or uninstall the battery pack or switch off the wall socket if the equipment would be left unused for a certain time to achieve zero energy consumption.
-



Never pour liquid into the opening that could damage the equipment or cause an electrical shock.



Place the power cord in a way that people are unlikely to step on it. Do not place anything on top of the power cord.



Always keep the strong magnetic or electrical objects away from the equipment.



When installing the coaxial cable to the TV Tuner, it is necessary to ensure that the metal shield is reliably connected to protective earthing system of the building.

Cable distribution system should be grounded (earthed) in accordance with ANSI/NFPA 70, the National Electrical Code (NEC), in particular Section 820.93, Grounding of Outer Conductive Shield of a Coaxial Cable.



If any of the following situations arises, get the equipment checked by a service personnel:

- The power cord or plug is damaged.
 - Liquid has penetrated into the equipment.
 - The equipment has been exposed to moisture.
 - The equipment has not worked well or you can not get it work according to User's Manual.
 - The equipment was dropped and damaged.
 - The equipment has obvious signs of breakage.
-



Green Product Features

- Reduced energy consumption during use and stand-by
 - Limited use of substances harmful to the environment and health
 - Easily dismantled and recycled
 - Reduced use of natural resources by encouraging recycling
 - Extended product lifetime through easy upgrades
 - Reduced solid waste production through take-back policy
-

Environmental Policy

- The product has been designed to enable proper reuse of parts and recycling and should not be thrown away
 - Users should contact the local authorized point of collection for recycling and disposing of their end-of-life products.
-

❖ Trademarks

All trademarks are the properties of their respective owners.

❖ Revision History

Version	Revision History	Date
1.0	First Released	07, 2016

2

Introductions

Congratulations on becoming an user of this product, the finely designed Tablet PC. This brand-new exquisite Tablet PC will give you a delightful and professional experience in using it. We are proud to tell our users that this product is thoroughly tested and certified by our reputation for unsurpassed dependability and customer satisfaction.

❖ Manual Map

This User's Manual provides instructions and illustrations on how to operate this Tablet PC. It is recommended to read this manual carefully before using this Tablet PC.

Chapter 1, Preface: Provide users the basic safety information and caution that is relevant when using this Tablet PC. It is recommended to read these information or caution when using this Tablet PC for the first time.

Chapter 2, Introductions: Include the descriptions of all the accessories of this Tablet PC. It is recommended to check out that if you have all the accessories included when you open the packing box. If any of these accessories is damaged or missing, please contact the vendor where you purchased this product. Also, this chapter provides the specification of this Tablet PC, and introduces the function buttons, connectors, LED of this product.

Chapter 3, Getting Started: Provide the basic operation instructions when using this Tablet PC.

❖ Unpacking

First, unpack the shipping carton and check all items carefully. If any item contained is damaged or missing, please contact your local dealer immediately. Also, keep the box and packing materials in case you need to ship the unit in the future. The package should contain the following items:

- Tablet PC
- AC/DC adapter / Interchangeable Plug

❖ Product Overview

This section provides the description of basic aspects of the Tablet PC. It will help you to know more about the appearance of this device before using it. Please be aware that the Tablet PC shown in this section may vary from the actual one that users purchased.




The figures shown here are for reference only.

1. Front Camera

This built-in front camera can be used for picture taking, video recording or conferencing, and any other interactive applications.

2. Volume Up  / Volume Down  Button

Press the Volume Up or Volume Down button to adjust the sound volume.

3. Power Button 

Press this button to turn this product ON and OFF.

i. Before powering on the Tablet PC for the very first time, you must connect it with AC power.

ii. Press and hold the power button for 4 seconds can shut down the Tablet PC.

4. Reset Hole

If the Tablet PC cannot be turned off normally or no respond by pressing the power button for 4 seconds, insert a straightened paperclip to the hole.

Please note that in this case, AC power must be connected before restarting the Tablet PC.

5. Micro-SD Card Slot

Used for inserting or replacing micro-SD card to increase the storage capacity of the Tablet PC.

6. Internal Microphone

This is the built-in microphone and its function is the same with microphone.

7. Headphone Jack

Used for connecting the speakers or headphones.

8. Micro-HDMI Port 

HDMI (High Definition Multimedia Interface) is a new interface standard for PCs, displays and consumer electronics devices that supports standard, enhanced and high-definition video, plus multi-channel digital audio on a single cable. Through the mini-HDMI to HDMI cable makes the mini-HDMI port connect with HDMI devices.

9. USB Port

Connecting the Tablet PC to a PC

You can use the USB cable to connect the tablet PC to a PC and this process allows you to access the personal data from or to a PC easily. The tablet PC will become a removable disk and a USB storage device in this time.

Connecting the USB device to the Tablet PC

10. DC-in Jack

It is an electrical connector for supplying direct current (DC) power.

11. Touch Screen

Whenever the display is rotated, the touch screen will be rotated and expanded to fit the

display automatically.

This function will be changed depends on the user's settings.

12. Boss Hole

Used for locking the boss hole of the keyboard.

13. 3D Camera

This built-in 3D camera can be used for picture taking, video recording or conferencing, and any other interactive applications.

14. Speaker

Support high quality sound.

❖ Specification

The specification may change without notice. The actual products sold are different from areas. Please check the detailed specification with your local dealers.

	Item	Specification	Comment
CPU	Support Processor	Intel Cherry Trail (T4 / Z8550)	BGA
	TDP	TBD (SDP:2.0W)	
CoreChip	PCH	NA (SOC)	
	TDP		
Memory	Technology	LPDDR3 1600 MHz	
	Memory (Max.)	4GB	on Board
Video	Graphics	UMA	
	TDP/TGP	N/A	
Panel	LCD Type	8" MIPI	
	Brightness control	S/W	
	LCD Resolution	1280X800	
Touch Panel	Touch Sensor	W/Windows Home key	
Digitizer	Touch pen	N/A	
Audio	Sound Codec chip	Realtek ALC5645	
	Internal Speaker	Speakers x 2	
	Sound Volume	Adjust by volume button & SW	
	Surround Sound	N/A	
	Microphone	DMIC	
Communication	56K Fax/MODEM	N/A	
	GIGA LAN	N/A	
	Wireless LAN	802.11 a/b/g/n/AC	AMPAK_AP6356SDPR
	Bluetooth	BT 4.0	
	GPS	GNSS+GLONASSS	
Storage	4G	M.2	(optional)
	HDD	N/A	
	Optical drive	N/A	
Camera	NAND	EMMC 32/64/128 GB	On board
	Camera (Front)	2.0M FF	
	Camera (Rear)	8.0M AF	
Sensor	Camera Flash LED	rear camera	
	G-Sensor	support	BMC150
	E-Compass	support	
	Light-Sensor	support	
	Gyroscope	support	BMG160
	micro HDMI	x 1	
	USB 3.0 (type A)	x 2 (USB 3.0)	Host only
	micro SIM card holder	N/A	
	Full Mini-PCIe Slot	N/A	
	Card Reader	x 1 micro SD	SD card 3.0
	Reset Hole	X 1	
Docking Connector	X 1		
Headphone out	X 1		

Optional	3D camera	X 1	Intel RealSense 200
	Barcode scanner	X 1	EA31/ ED40 embedded
	NFC	X 1	Smart Approach
Power	Adaptor	19V/3.42A	
	Battery	6700MAH / 11850MAH(optional)	43Wh(11850mAH) Large battery optional
	Battery Life (working mode)	4.69 Hours movie play back	50%CPU, 100%screen, and wifi/BT/GPS on
Physical Characteristics	RTC Battery	N/A	PMIC
	Dimension	232.6 x 150 x 22 mm	
	Weight	350 g	(w/25Wh M battery)
OS & AP & Others	OS	Windows 10	

3

Getting Started

❖ Power Management

AC Power

It is strongly recommended to connect the AC/DC adapter to the Tablet PC and use the AC power while using this Tablet PC for the first time since some models may require the AC/DC adapter to be connected in order to power on the Tablet PC safely and properly. When the AC power is connected, recharging the battery will start immediately.

 
Note that the AC/DC adapter included in the package is approved for your Tablet PC; using other adapter model may damage either the Tablet PC or other devices attached to it.

Do not cover the AC/DC adapter since it may generate a certain heat while in use. Always be aware of heat coming from the AC/DC adapter in use.

Connecting the AC Power

1. Take up the interchangeable plug and look for the groove on the interchangeable plug which can be used for locking on the AC/DC adapter. Then align the groove of the interchangeable plug on the tenon of the AC/DC adapter with correct orientation. Next, rotate the interchangeable plug 90 degrees clockwise until it is fixed on the AC/DC adapter.
2. Plug the DC end of the AC/DC adapter into the DC-in jack of the Tablet PC.
3. Then plug the AC/DC adapter into the power outlet.
4. When remove, please follow the steps 3→2→1.

Note: The interchangeable plug may vary depending on countries or regions.

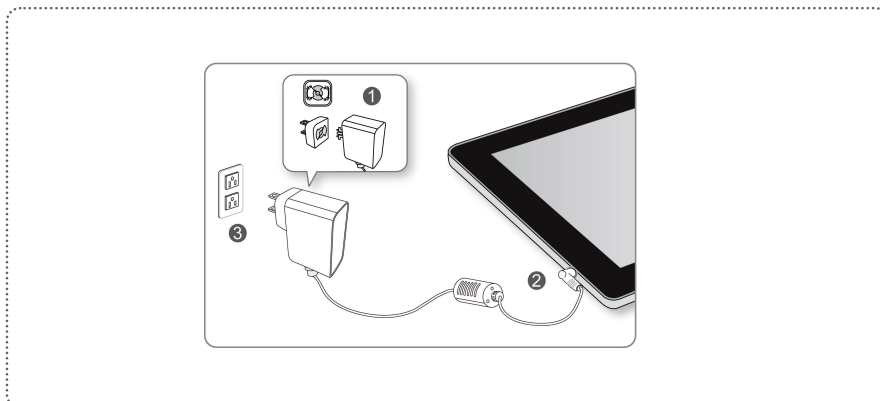

❖ Battery Power

This Tablet PC is equipped with a built-in high-capacity Lithium-ion Polymer battery pack. The rechargeable Lithium-ion Polymer battery pack is an internal power source of the Tablet PC.

Be aware that this battery pack may be damaged if users try to disassemble the battery pack on their own. Also, please note that the limited warranty of the battery pack will be voided if the battery pack is disassembled by non-authorized technicians.

Please follow your local laws and regulations to recycle the Tablet PC and the built-in battery pack.

Conserving Battery Power

Efficient battery power is critical to maintain a normal operation. If the battery power is not managed well, the saved data and customized settings may be lost.

To optimize battery life and avoid a sudden power loss, read the tips below:

- Suspend system operation if the system will be idle for a while or shorten the suspend time period.
- Turn off the system if you won't be using it for a period of time.
- Disable unnecessary settings or remove idle peripherals.
- Connect an AC/DC adapter to the system whenever possible.

Charging the Battery Pack

The built-in battery pack can be recharged when the Tablet PC is connected to the AC power.

Please pay attention to the following tips before recharging the battery:

- You can use the system, suspend system operation or shut down and turn off the system without interrupting the charging process.
- The built-in battery pack uses Lithium-ion Polymer battery cells that have no "memory effect." It is unnecessary to discharge the battery before recharging. However, to optimize the life of battery, we suggest that consuming the battery power completely once a month is necessary.
- The actual charging time will be determined by the applications in use.

Power On

Long press the Power Button to power on the Tablet PC.



Power Management in Windows OS

 
Power management of personal computers (PCs) and monitors has the potential to save significant amounts of electricity as well as deliver environmental benefits. To be energy efficient, turn off your display or set your PC to standby/hibernate mode after a period of user inactivity.

Follow the instructions below to adjust the power management settings in Windows OS:

“Power Options” in Windows OS allows you to control the power management features of your display, hard drive, and battery.

1

In Windows 8 Metro APPs screen, please select “Desktop” to return back to the desktop.


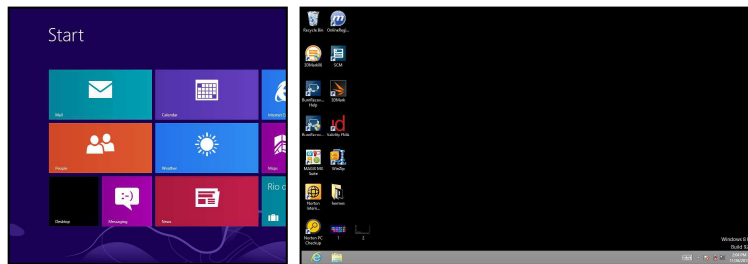


2

Slide your finger from the right edge of the desktop leftward will bring a list of functional icons. Find the [Settings] icon on the desktop.



  
3 Tap [Settings] icon will get the following selection menu. Select **Control Panel** in the menu.

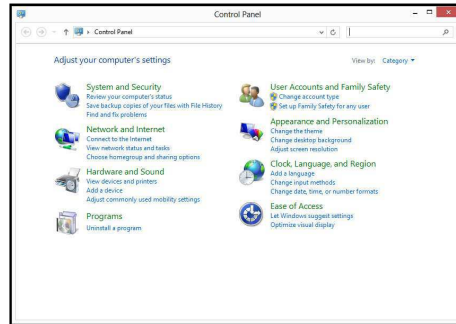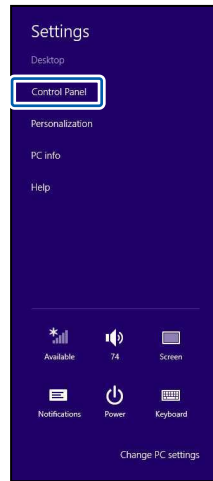

4 Tap **System and Security**.




 5 Tap **Power Options**.



6

 Then select a power plan that meets your personal needs.

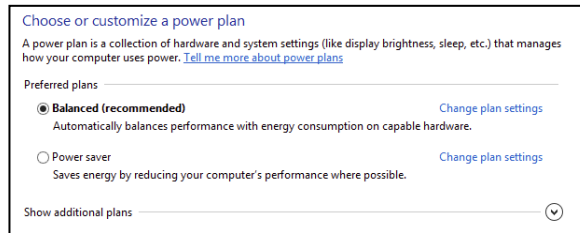

7

The Power icon will present various and relative options as following:



8

You can wake up your computer from power saving mode by pressing the power button

❖ Basic Operations




Knowing the Display Features

 
Ten-point-touch IPS Display

 
This Tablet PC is equipped with a ten-point-touch IPS display which delivers consistent and accurate color from all viewing angles, and makes viewing more pleasure with vivid and clear picture on the screens. Users are allowed to use finger gestures to interact with multi-media content, play games, read e-books, access documents, create special effects, manipulate art and photographs, and even surf on the internet, in a truly unique and compelling way.

Display Lock

With a built-in G-sensor module, this IPS display gives users a more flexible way in viewing web pages, documents, pictures, videos, etc. Whenever the display is rotated, the screen will be rotated and expanded to fit the display automatically.

1. Find the **[Settings]** icon on the desktop and tap it.
2. Enter the **[PC Settings]** main page by tapping **[Change PC Settings]**.
3. Select this Screen icon  to enable this function.
4. Tap this  icon again will lock the screen .


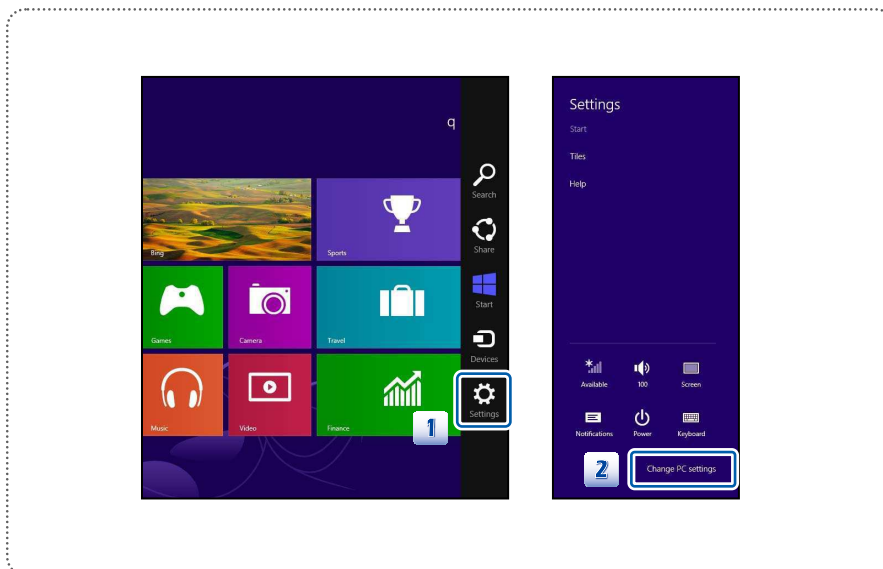


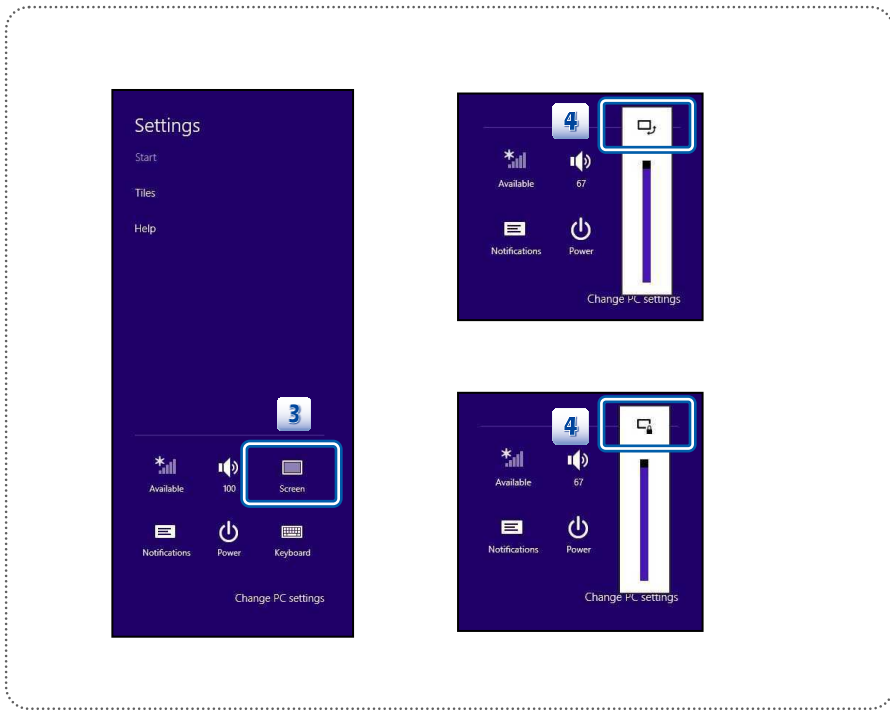

Wireless Activation

1. Find the **Settings** icon on the desktop and click on it.
2. Enter the **PC settings** main page by clicking on **Change PC settings**.
3. Unfold the **Airplane mode** selections under **Network**.
4. Make sure Airplane mode is set to OFF here.
5. Turn the Wi-Fi or Bluetooth function on/ off by sliding the function switch bar.

  Refer to the Status LED to check the device status.

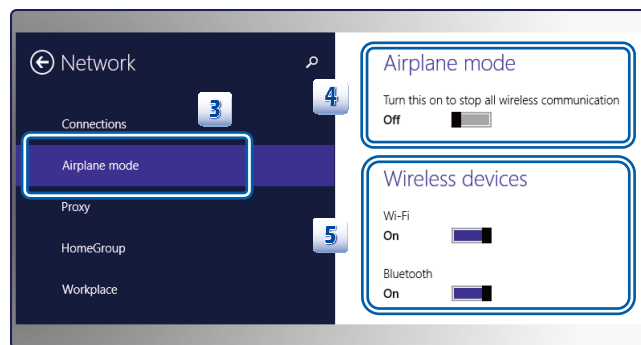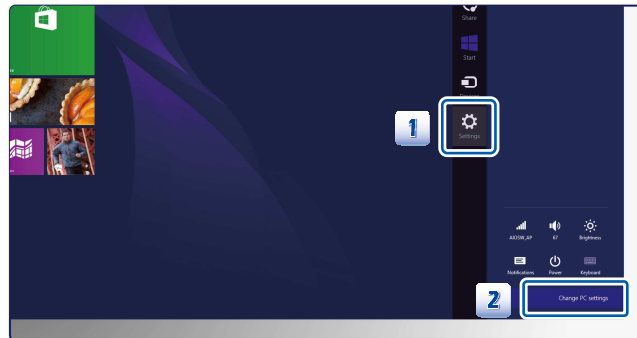

1. When Airplane mode is set to ON, the Wi-Fi and Bluetooth function will be disabled at once.
2. The information provided here is for reference only, and may vary without notice.