

128g双铜单色双面印刷(折页) 尺寸80*80mm

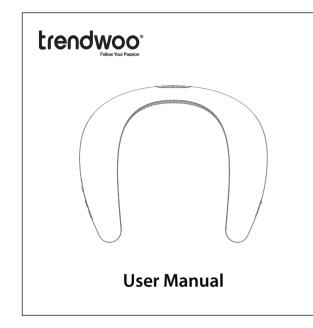


BLUETOOTH CONNECTION

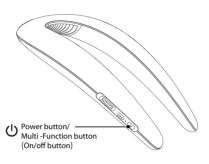

Step 1 Power on

Long press "ひ" button 2 seconds, you will hear prompt tone of power on, then the speaker will enter into Bluetooth pairing mode with the blue indicator blinking.

01

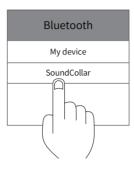

Step 2 Choose the device

Find "SoundCollar" in your bluetooth list and select it.

Speaker will get disconnected, Blue LED will flash, it will

connect automatically again when cellphone is back to

Red LED indicator will flash quickly when battery level is

When the battery power is less than 10%, speaker will

Red LED indicator will last long time when charging,


red LED indicator will turn on after full charge.

02

bluetooth range.

shut down with prompt tone

below 20%

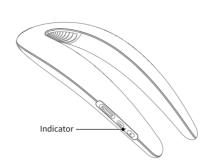


Step 3 Pairing success

The LED indicator keeps blue once pairing is done, then you can access to music.

03

OPERATION DIRECTION

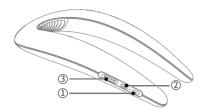

(1)(2) Power button/ Multi -Function button

Long press ①2 S for power on/off.

Short press ① when playing music for Play/Pause

When a call is coming, short press ① to answer/end a call; short press ① twice to reject a call

Press ② 3 times to previous song, press ② 2 times to next song Short press ② to turn on Siri

Long press (2) to disconnect Bluetooth

③ Volume Knob

Slide up 3 to turn the Volume up, slide down 3 to turn the Volume down

04

trendwoo[°]



BLUETOOTH FUNCTION AND LED INDICATOR



	Power On	The default mode is Bluetooth pairing mode when power on, blue LED flashes quickly
	Bluetooth	Blue LED will be normally on after connected successfully. When it beyonds the range of bluetooth, blue LED will flash quickly
	Bluetooth Disconnect or no any operation	It will power off automatically when more than 10 minutes

successfully, if

cellphone is out

of bluetooth range

Lower Battery

Low power

shut down

Charging

PRODUCT SPECIFICATION

Product Name	Bluetooth Speaker
Model NO.	MP39417
Bluetooth Version	4.2
Battery Capacity	800mAh
Play Time	5-6 hours (70% Vol)
Charging Time	3 hours
Driver Units	3W x 2
Charging Current	5V / 0.5A
Product Size	245x205x44.5mm
Product Weight	290g

07

FREQUENTLY ASKED QUESTIONS

Q: What kind of charger should we use for the speaker?

A: All common USB chargers can be used, while we suggest 5V/0.5A.

Q: What if there is noise or discontinuous sound when playing? A: The speaker can be normally used within 10m under no obstruction environment. If it is

over 10m or with obstruction, there might be noise or discontinuous sound.

Q: Why will the speaker shut down automatically when it is working?

A: When there is no bluetooth pairing 10 minutes, the speaker will shut down automatically to reduce power consumption.

Q: The speaker cannot connect the once-paired cellphone.

A: First, remove the speaker's pairing name from the cellphone's Bluetooth list and then short press the power button quickly to restart paring mode.

Q: The speaker cannot be started up in a normal situation.

A: Please plug in the charger and try in a few minutes.

Federal Communications Commission (FCC) Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or moreofthefollowingmeasures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warning: Changes or modifications made to this device not expressly approved by Monoprice, Inc may void the FCC authorization to operate this device.

Note: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.