


P/N 34440

**PRODUCT OVERVIEW**

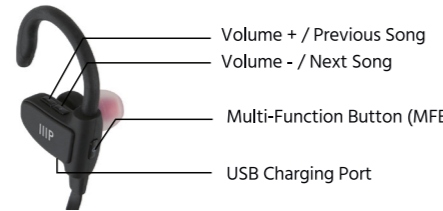

**GET A COMFORTABLE FIT**  
The Monoprice Move headset comes with 3 pairs of high quality silicone and foam memory ear tips (Large, Middle, Small). Choose the right size of ear tips to find the most secure option for you.

**GETTING STARTED**

**Charging:**

The headset may be partially charged, but please be sure that you fully charge your new headset before using it for the first time.

To charge the headset please connect it to any active USB port or adapter using the USB charging cable. Please make sure your adapter performance is as follows: DC 5V, 100-300 mA.

Do not use fast chargers, they can damage your headset. Your headphones can be fully charged in about 2 hours. When fully charged, the LED indicator changes from red to blue.

**LOW BATTERY**

When the Red LED indicator stays on, the battery is running low. Please recharge the headset.

**TURNING THE HEADSET ON/OFF**

**Turn on:**

Press and hold the multi-function button for 3 seconds, the LED indicator will flash blue and you will hear a voice state "Power on" in the headset.

**Turn off:**

Press and hold the multi-function button for 3 seconds, the LED indicator will flash red for 2 seconds and then go off. A voice will state "Power off."

**PAIRING**

To pair the headset with your device you should first switch it to pairing mode:

- Starting with the headphones turned off.
- Press and hold the power button for about 7 seconds or until you see the red and blue lights flash alternately, then you will hear "Pairing". This means the headphones are in pairing mode.
- Find **MP34440** in Bluetooth search results of your device. Simply select the headset name to connect.
- If a code or a pin is required for pairing, please enter "0000".

**PAIRING**

5. When successfully paired, the indicator should flash in blue.

**Notes:**

Maximum operating range for wireless headphones is 33 ft (10m).

If you move out of range, your headphones may lose connection and go into standby mode.

In this case you need to move back to your device and manually reconnect it.

**PAIRING WITH TWO DEVICES**

The Monoprice Move Wireless Headset is capable of pairing to two devices. To do that:

- Follow the instructions in the "Pairing" section to connect the headphone to device #1.
- Once the first connection is done, disable the wireless pairing function on device #1, and turn off the headphones.
- Follow the instructions in the "Pairing" section to connect the headphones to device #2.
- Once connection between device #2 and the headphones is established go back to device #1 and bring the device #1 into pairing mode.

**MAKING PHONE CALLS**

Once your headset is connected, incoming phone calls can be handled via controls on the headphones.

Answer a call:	Press the multi-function button once
End a call:	Press the multi-function button once
Adjust the volume:	Press the volume + or - button
Redial last number:	Double press the multi-function button
Reject incoming call:	Press and hold the multi-function button

**STREAMING MUSIC**

Once your headset is connected, you can stream music from your device to your headset. Music automatically pauses with incoming phone calls and resumes once the call is ended.

Pause/Resume:	Press the multi-function button once
Volume Control:	Press the volume +/- button once
Next/Previous Track:	Press and hold the volume + / -

**VOICE NOTIFICATION**

<b>Action:</b>	<b>Notification:</b>
Incoming call:	Ringing
Turn on:	Power on
Turn off:	Power off
Successfully paired:	Connection successful
Bluetooth disconnected:	Connection lost
Battery level low:	Battery low

**LED INDICATOR**

Blue and red light flash alternately:	Pairing mode
Blue LED flashes once every 3 seconds:	Standby mode
Blue LED flashes twice every 5 seconds:	Connected
Red LED goes on:	Low Battery
Turn off:	Power off
Solid Red LED:	Charging
Solid Blue LED:	Fully charged

**SPECIFICATIONS**

Bluetooth® Standard:	4.1
Supported Profile:	A2DP, HFP, HSP, AVRCP
Maximum Range:	33 ft / 10 m
Talk Time:	Up to 7 Hours
Standby Time:	Up to 320 Hours
Charging Time:	2 Hours
Power Input:	Power Input DC 5V 100mA-300mA
Battery Type:	Built-in Rechargeable Li-Polymer Battery (85mAh)
Weight:	16g

FCC Statement  
This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your warranty for this equipment.  
This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

RF Exposure Information  
The device has been evaluated to meet general RF exposure requirements. The device can be used in portable exposure condition without restriction.