

MT750 User Manual

Buttons:



“+/1”, “-/2” and “M/3”

Operation Instruction:

- (1) Insert the device to the iPod. Make sure the iPod is not connected with a computer.
- (2) Turn on the iPod and play music. The device should display the frequency for transmitting music. If the music pauses, it should display nothing instead and stop transmitting. When music comes again, it works again.
- (3) There are three preset frequency points on which the music can be transmitted. Briefly press the “1” button to set the preset frequency 1, “2” for the preset frequency 2 and “3” button for frequency 3. Also, you can set the frequency manually by a) pressing and holding the “3” button; b) pressing “+/1” button briefly to increase the frequency or pressing the “-/2” button to decrease the frequency; c) pressing and holding any button to save the manual-set frequency as preset 1, 2, or 3.

Adjust the Brightness:

You can adjust the brightness of the frequency display by pressing and holding the “1” and “2” buttons together.

Charge the iPod:

When connect the iPod with the power, the device can also charge the iPod with 500mA.

Note:

The device will stop transmitting when there is no sound in about 55 seconds.

FCC AND IC WARNING STATEMENT

FCC ID:RJE168007-00

THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.