

Monster Cable Products Inc.


Wireless MP3 adapter User guide

Setup Instructions:

The Monster model # 169069-00 Wireless MP3 adapter is your own personal FM broadcast station intended for use exclusively inside an automobile with a 12v cigarette lighter outlet.

1. Tune your FM radio to a regular FM station and adjust the radio volume control to desired level.
2. Plug the Monster Wireless MP3 adapter to your MP3 player.
3. Plug the Monster Wireless MP3 adapter to your automobile 12v cigarette lighter outlet.
4. Select an album on the MP3 player and push the playback button.
5. Note Frequency displayed on MP3 player i.e. 100.3Mhz as shown in example picture below. Tune your FM radio to the same indicated frequency.
6. Listen to FM signal from the MP3 player and adjust MP3 player volume control for optimum level.

For best results, preset the Monster MP3 adapter to FM frequencies that are not occupied by strong local FM broadcast stations.

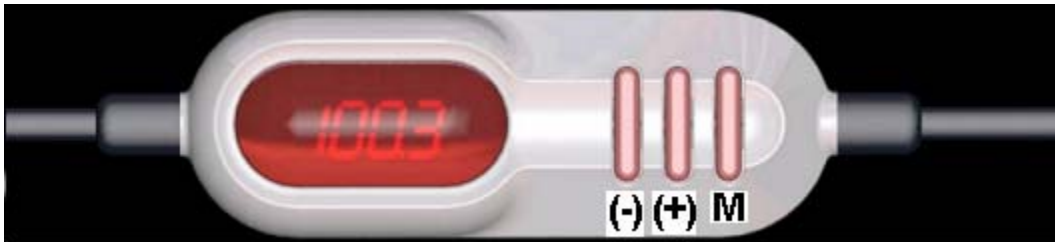

Instructions for changing frequency:

The Monster Wireless MP3 adapter contains three (3) memories for storing frequencies. To select among any of the 3 memories, momentarily press on any of the three buttons(-, +, or M). When shipped from the factory, the default frequencies stored inside the memories are 88.1Mhz (Memory #1), 98.1Mhz (Memory #2), and 107.9Mhz (Memory #3). To change these default frequencies, do the following:

- 1) Press the button labeled "M" and keep it pressed for a few seconds until the LED's illuminating the push buttons begin to flash. This puts the unit into "Frequency-select mode".
- 2) When the LED's are flashing, press the (+) and/or (-) buttons to change the indicated frequency. The (+) button increments frequency. The (-) button decrements frequency.
- 3) When you have adjusted to your desired frequency, you may now save the frequency to memory. To save the indicated frequency to Memory #1, press the (-) button for at least 3 seconds until the LED's stop flashing. To save the indicated frequency to Memory #2, press the (+) button for at least 3 seconds until the LED's stop flashing. To save the indicated frequency to Memory #3, press the M button for at least 3 seconds until the LED's stop flashing.
- 4) After the displayed frequency is saved to memory, the unit will automatically return to "Memory mode" and continue to operate at the selected frequency. In Memory mode, you can select any frequency stored in the 3 memories by momentarily pressing on any of the three buttons.
- 5) While the unit is in "Frequency-select mode", it will automatically go back to Memory mode after 10 seconds if you do not press any other keys during this period. If you did not save the indicated frequency to a memory location, the unit will automatically save the indicated frequency for you and it will continue to operate at that frequency.

Instructions for changing the Frequency readout brightness:

The Frequency display of the Monster Wireless MP3 adapter can be preset for 'Bright' or 'Dim' operation depending on day or night use. To switch between day and night settings, press and Hold the (+) and (-) keys together. If readout is in Bright mode, it will switch to Dim mode. If readout is in Dim mode, it will switch to Bright mode.

Additional information is available at www.monstercable.com.

Warranty does not include malfunction caused by accident, misuse, contact with solvent chemicals or malfunction caused by tampering or modification. This warranty excludes all incidental or consequential damages. Some states do not allow the exclusion or limitation of consequential damages so the above limitation may not apply to you.

For Warranty Service, the product must be returned at your expense to place of purchase. Return policies may vary. If you cannot reasonably do this, please contact us stating the nature of the defect and date of purchase. Include a copy of your sales slip or proof of purchase. Your repaired or replacement equipment will be returned to you at our expense. This warranty gives you specific rights: you may also have other legal rights which vary from state to state.

FCC Notice: This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Caution: changes or modifications not expressly approved by Monster Cable Products Inc. may void the users authority to operate this device.

Note: This equipment has been tested and found to comply with the limits for a class B digital device pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by tuning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help.

Monster Cable Products, Inc.

455 Valley Drive Brisbane, CA 94005

Phone 415-840-2000

FCC ID : RJE169069-00