

Attachment
User's Manual

Media Key

K360

USER MANUAL

- **Build in 16 Embedded Hot Button**
- **One Touch Easy Attach Multi. Media Function**
- **Programmable Hot Button**
- **Scroll Key for Easy Browsing**
- **Easy Installation**

WARNING

Note : This equipment has been tested and found to comply with the limits for a Class B device, pursuant to Part 15 of FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures :

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio / TV technician for technician for help.

Notice:

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions : (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

System Requirement

- IBM PC compatible system
- Windows 95 operations system
- IBM PS/2 or AT compatible keyboard port
- Standard sound card (for CD and Video operation).

If you want to operate the Multimedia functions, need sound card to support.

- CD-ROM Drive (for CD and Video operation).
- MPEG card or pre-installed Software MPEG.OPTION.

If you want to operate the Video image functions, need MPEG or software MPEG to support.

Installation for Windows'95

1. Boot up system with Windows'95
2. Click on the START icon in the task bar and select RUN.
3. Type in "D:\setup.exe" and click on OK. In which D: means the drive for the software to install. It could be A: or D:
4. Follow the screen prompts to complete your installation.
5. Reboot your system..

* Standard Operation


Your MEDIA KEYBOARD function just as a normal keyboard does, with a few exceptions and additions as explained below. Otherwise, just use your MEDIA KEYBOARD as you would any other keyboard.

You could press the "Ez" key (in blue) to toggle switch the embedded function key to be ON/OFF. When it is ON, the LED of Ez will be light and all the hot button feature will be enable. When OFF, all the hot button feature will be disabled and returned to original keyboard definition.

- Embed hot button keys special function description

1. Pre-Track 


Press this key will enable the program running in CD Drive skip to the previous paragraph or music.

2. Play/Pause 

Press this key to play/pause the program in your CD Drive.

3. Next Track 

Press this key will enable the program running in CD Drive skip to the next paragraph or music.

4. Stop 


Press this key will stop the playing of the program running in CD Drive.

5. Vol. UP 

Press this key will increase the volume of the program playing in CD Drive.

6. Vol. Down 


Press this key will decrease the volume of the program playing in CD Drive.

7. Mute 


Press this key will enable the MUTE function to the program playing in CD-ROM.

8. Screen Saver 


Press this key will enable the Screen Saver function which had been set at your W'95 system.

9. InterNet Browser 

Press this key will enable the Browser function which had been set at your W'95 system.

10. Rotate Window 


Press this key switch the activated window.

11. Minimized Application 

Press this key will minimize the current application window.

12. Close Application 

Press this key will close the active application running in Windows.

13. Scroll Up 

Press this key to scroll up the active windows.

14. Scroll Down 

Press this key to scroll down the active windows.

15. Scroll Right 

Press this key to scroll right the active windows.

16. Scroll Left 


Press this key to scroll left the active windows.

User Define Button

This is used to custom configure the media buttons of your Media keyboard to your desired functions.

1. Move the cursor to the task bar. You will see the Media icon which hid in the task bar.



2. Double click the Media icon. 

3. You will see the layout of the Media key.

4. Double click the Media key which you want to re-define.

5. You will see the Media key definition.

6. You could disable the embedded function by selecting the "Ignore Action".

7. You could change the function to other desired Media function by selecting the "Predefined Function" and choose the function on the scroll table.

8. You could change the function to any desired application by selecting the "Attach to File". And click the Browse File to choose desired application.

9. Click OK to save the configuration.

** Windows & Windows 95 is a trade mark of Microsoft.