



 
## Plush with Bluetooth® Speaker User Manual

Please read this user manual carefully before operating the appliance; and save it for further reference.

### Safety Instruction:

- Do not use this device near water; clean only using a dry or slightly moist cloth.
- The appliance shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed near the product.
- Do not place speaker on any wet surface.
- Do not cover the unit with any table-clothes, curtains, etc. Place the unit where there is good air circulation.
- No naked flames sources, such as candles, should be placed near the product.
- Press the player's button gently. Pressing them too hard can damage the player.
- Do not expose product to temperature above 35°C; keep it out of direct sunlight.
- This product has no user-serviceable parts. Do not attempt to repair this product yourself.
- Do not subject the product to harsh impacts. Do not drop the appliance. This may result in damage to the product.
- Do not place unit near TV, speakers, wireless telephones and other objects that generate strong magnetic fields.
- When the unit is affected by a strong electromagnetic field or by other interference simply turn off to reset the speakers, it will return to normal operation.

### Bluetooth® Wireless Speaker Buttons:

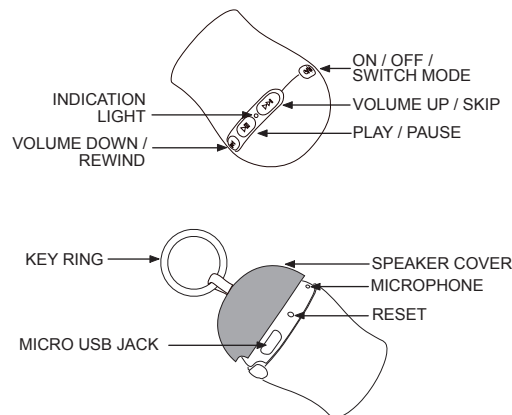

### How to Charge the Speaker:

This speaker has built-in rechargeable battery, before the first use, the battery should be charged to ensure optimal performance and battery life. Pull the speaker cover gently, micro USB jack is under the cover. Charging the speaker for about 4 hours by connecting the speaker to the USB port of a PC which is powered on, alternately the speaker may be powered by a AC/DC wall charger (not included) with a 5V 500mA USB output. The red charging indication light will be "on" while it is charging, it turns off while fully charged.

### Bluetooth Pairing:

- Press and hold the ON/OFF button ( ) for about 3 seconds to turn on the speaker. The blue color indication light will flash alternatively showing it is in bluetooth pairing mode.
- The speaker starts searching for bluetooth device.
- Turn on your bluetooth enabled music player device ( ie. iPod/iPhone, mobile phone or compatible device) to search this bluetooth speaker. Please refer to the device user manual to activate the bluetooth function and pairing procedures.
- Select to pair the "iCRW-MB3P" device from the bluetooth list.
- Once paired the blue indication light will be ON. Now you can play music from your bluetooth device to this bluetooth speaker.
- When it is not being used for a long period time, please turn off the speaker.

### Play / Pause:

- Press the to play or pause the song, press it again to pause or continue to play the song.

### Previous / Next Song:

- Press the button ( ) once to select the song. Press the for the previous song, press for the next song.

### Volume Control:

- Press and hold ( ) for a while to adjust the sound volume. Press to decrease sound volume; press to increase sound volume. Stop press while it reaches the desired sound level.

### Handsfree function:

- This speaker has built-in microphone, it can be work as handsfree speaker after connected mobile phone with bluetooth connection.
- User can pick up the phone call by press the Play / Pause once.
- Hang up the calling by press the Play / Pause button once again.
- Keep press Play / Pause button for about 2 seconds to redial the last called phone number. ( not the call-in number )

### Camera Shutter function:

 
- When connected bluetooth, short press the button to switch to camera shutter mode. ( with shutter sound indication )
- Open the Camera application on your mobile phone.
- Press the to take photo.

### Bluetooth Speaker and the Plush:

1. There has a velcro on the rear side of the plush.



2. Open the velcro and place the bluetooth speaker inside.

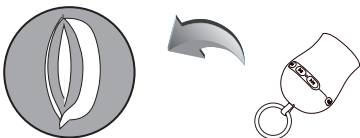

3. Close the velcro properly and enjoy your music with the plush.




### Others:

 This bluetooth speaker has a key ring, you can bring it with you everywhere, and it can works as a stand.



KEY RING



SPEAKER STAND

### Troubleshooting:

1. Cannot pair successfully
  - ▶ Check whether the speaker is in power on and bluetooth is in searching mode.
  - ▶ Check whether there are too many bluetooth receivers around. Turn them off to avoid any disturbance and pair again.
2. The sound is too low or distorted
  - ▶ Check the volume setting on your device and adjust the volume to a suitable sound level.
  - ▶ Check if the speaker is battery low, charge the speaker.
3. Cannot play music properly
  - ▶ Check whether the distance between the speaker and bluetooth device is too far from its working distance ( maximum 10M in outdoor operating space ) or whether there are some obstacles blocking the communication between the speaker and bluetooth device.
4. Speaker malfunction
  - ▶ Press the "RESET" button by using a pin and restart the device.
5. Speaker play "bi bi" sound
  - ▶ The battery is in low level, please charge the unit.

### FCC Warning:

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

### NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.



MADE IN CHINA

The Bluetooth® word mark and logos are registered trademarks owned by the Bluetooth SIG, Inc. and any use of such marks by Moppet Enterprises Limited is under license. Other trademarks and trade names are those of their respective owners.