 


morphy richards®

Bulldog Cylinder Vacuum

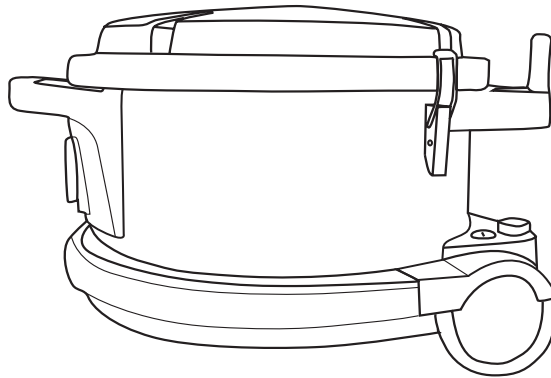

Please read and keep these instructions



getting the best from
your new cleaner...

If your cleaner isn't picking up as well as it should, please check

- **Dustbags**

It is important to replace them regularly otherwise the performance of the cleaner will be impaired. Bags can be blocked with dust even though they do not appear full.

- **Filters**

It is important that the filters are cleaned regularly and if necessary replaced to allow air through the appliance.

- **Blockages**

Check the nozzle, tubes and hose for blockages.



For replacement parts, help with using your Morphy Richards products and lots more, contact us by phone or through our website

UK

Helpline: 0870060 2604

Replacement parts: 0870 167 6635

Ireland 1800 409119

www.morphyrichards.com



Important safety instructions

The use of any electrical appliance requires the following of common sense safety rules.

Primarily there is danger of personal injury and secondly danger of damage to the appliance and property. These are indicated in the instructions text by the following two conventions:

WARNING: Danger of personal injury

IMPORTANT: Damage to the appliance

In addition we offer the following essential safety advice.

Location

- Do not use or keep this product outside when it is raining.
- Do not store the appliance near hot ovens or heating appliances.

Mains lead

- Do not allow the mains lead to become strained or run this appliance over it.
- If the electrical cable becomes damaged the complete cable assembly must be replaced. Do not attempt this task yourself, contact us using the helpline number.

Children

- Children do not understand the dangers associated with operating electrical appliances. Never allow children to use this appliance.

Other safety considerations

- Never use in the presence of explosive liquids or vapours.
- Never pick up inflammable or poisonous liquids such as petrol, copier toner, or other volatile substances. Never pick up acids, asbestos or asbestos dust.

- Always disconnect the appliance from the mains supply after use or prior to cleaning or replacing dust bags.
- The appliance should never be left running unsupervised.

Product safety

- Never use the appliance without the filter installed.
- Never use the appliance to vacuum hot ashes, broken glass, sharp objects or liquids.
- Never modify the cleaner in any way.
- Repairs to electrical appliances are only to be undertaken by trained personnel. Unprofessional repairs can be dangerous for users.
- Use only genuine Morphy Richards spare parts and accessories.

Electrical requirements

Check that the voltage on the rating plate of your appliance corresponds with your house electricity supply which must be A.C. (Alternating Current).

If the socket outlets in your home are not suitable for the plug supplied with this appliance, the plug should be removed and the appropriate one fitted.

WARNING: The plug removed from the mains lead, if severed, must be destroyed as a plug with bared flexible cord is hazardous if engaged into a live socket outlet.

 
 
 
 
Should the fuse in the 13 amp plug require replacement, a BS1362 13 amp fuse must be fitted.

Features

- ❶ Dust bag container cover
- ❷ Dust bag container clips
- ❸ Onboard tool storage
- ❹ Dust bag container
- ❺ Protective rubber bumper
- ❻ Hose inlet
- ❼ Motor protection filter
- ❽ Dust inlet tube
- ❾ Dust bag holder
- ❿ Variable power control
- ⓫ On/off button

Accessories you should have:


- ❿ Turbo nozzle
- ⓫ Combination floor nozzle
- ⓬ Telescopic metal tubes
- ⓭ Suction hose with airflow control handle
- ⓮ Upholstery nozzle
- ⓯ Brush attachment
- ⓰ Crevice tool
- ⓱ Paper dust bag

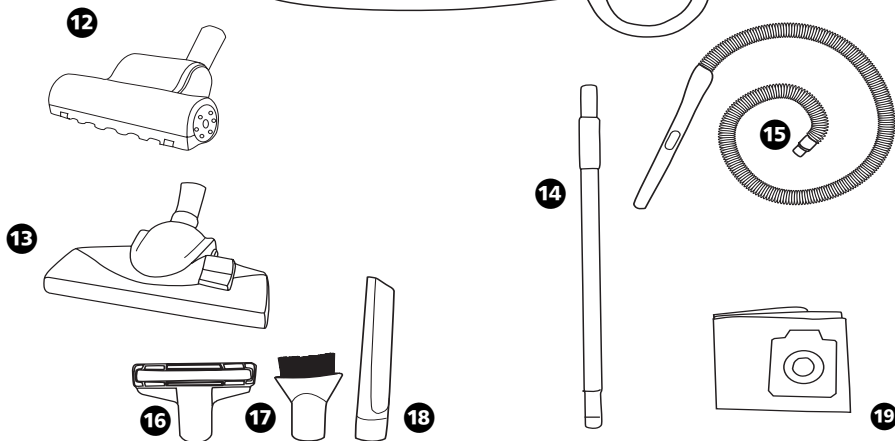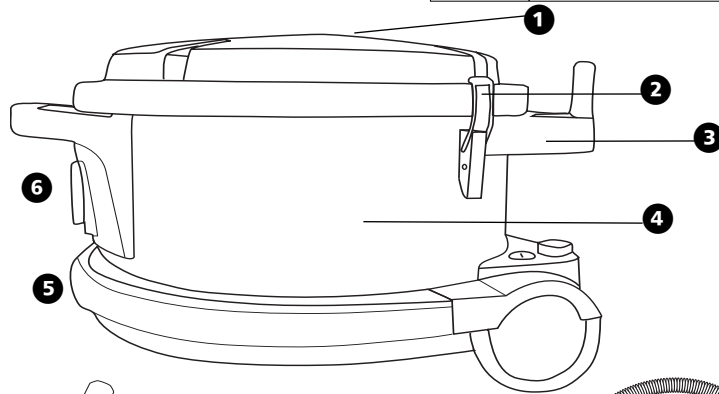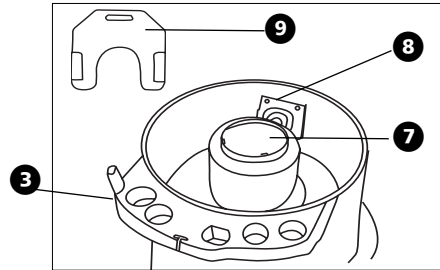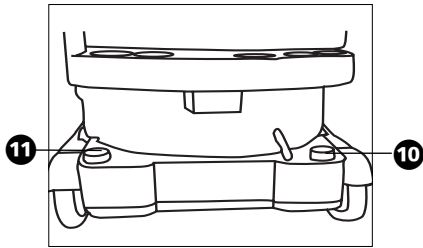

Operation

Suction hose


 
Lining up the locking tabs on the hose to location slots on the vacuum. Push the hose end **15** into the suction hose inlet **6** on the vacuum cleaner. Turn the rotating hose

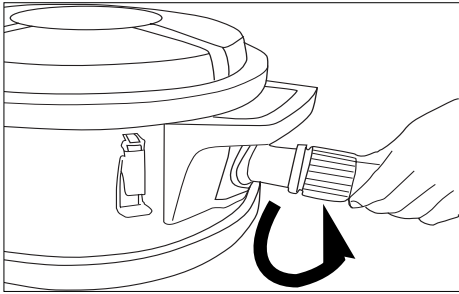

clockwise until it clicks. Make sure it is securely in place. The appropriate cleaning tool can be attached directly to the other end of the suction hose.

Switching on

  Plug the appliance into the mains supply. Ensure that the variable power control **10** is set to minimum by turning the dial anti-clockwise as far as it will go. Push the on/off switch **11** to start the suction motor. Turn the variable power dial clockwise to the desired power. Push the switch again to turn off the motor.

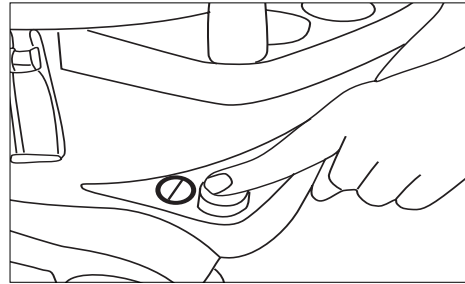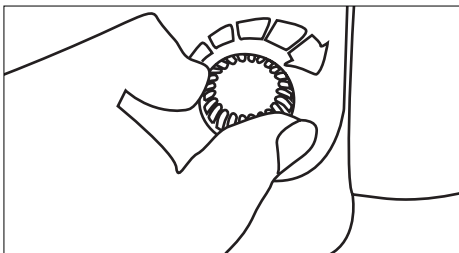


Controlling suction power

The suction power can be varied to suit the surface being cleaned, by using the variable power control **10**.

The suction power can also be adjusted using the fingertip control on the handle of the suction hose **15**.

Closed: full suction

 
Open: reduced suction

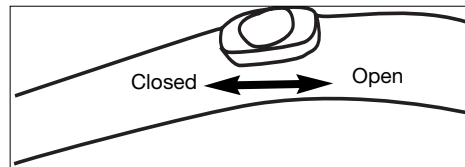

Tools and accessories

Telescopic metal tubes 14

 Attach the telescopic tube to the handle end of the hose. Extend to the desired length by pressing down the slider release and pulling out the tube.

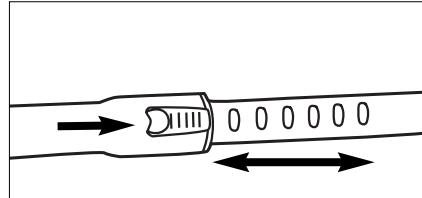

Turbo nozzle 12

The turbo nozzle is particularly useful for the removal of hairs etc from carpets and upholstery.

Cleaning the turbo nozzle 12

The turbo nozzle should be regularly cleaned and any hairs or fibres wrapped around the brush bar removed to maintain optimum performance.

Avoid picking up large debris with the turbo nozzle as it may jam the turbo fan. If this happens remove nozzle from tubes and open flaps underneath nozzle debris. Make certain flap is fully closed before re-use.

Combination floor nozzle 13

This nozzle is suitable for general purpose cleaning on a wide variety of floor coverings. Use the brushes 'up' for carpets and brushes 'down' on hard floors.


Tool storage

The tools may be stored in the on-board storage area at the rear of the cleaner.

Standard accessories	Application
	Curtains and delicate fabrics
	Textiles and upholstery
	Carpets and other textile floor coverings (brushes up)
	Settings for heavy dirt and smooth floors (brushes down)


Opening the dust bag container

 To access the dust bag Release the cover clips by lifting the bottom of the clips upwards. Then lift off the dust bag container cover.

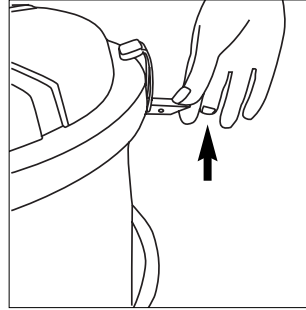

Removing the dust bag

 - 1 Lift the dust bag holder 9 upwards to remove.
- 2 Slide the dust bag away from the inlet tube 8
- 3 Dispose of the bag with your household waste.

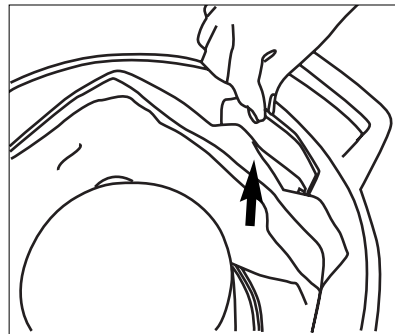

Refitting the dust bag

- 1 Slide the bag over the dust inlet tube. Push the bag fully onto the tube until it reaches the stop.
- 2 Slide the dust bag holder 9 down over both the cardboard collar of the bag and the plastic stop. The bag should now be firmly held against the stop.



 
Refitting the dust container cover

- 1 Place the cover on top of the dust bag container.
- 2 Secure the fixing clip on top of the cover and then pressing the bottom part of the clips down

Cleaning the foam lid filter

DO NOT USE THE PRODUCT WITHOUT THE FOAM FILTER FITTED


- 1 To clean the foam filter first remove the dust container cover.
- 2 Turn the cover upside down.
- 3 Gently push out the cover edge to release the four edge clips.
- 4 Lift off the cover base
- 5 Remove the foam filter
- 6 Wash the foam in cold water. DO NOT USE DETERGENTS.
- 7 Leave to air-dry
IMPORTANT: The foam must be thoroughly dry before re-fitting.
- 8 Place the foam inside the lid, then fit the lid cover ensuring all edge clips are fully engaged.
- 9 Re-fit to the dust bag container.

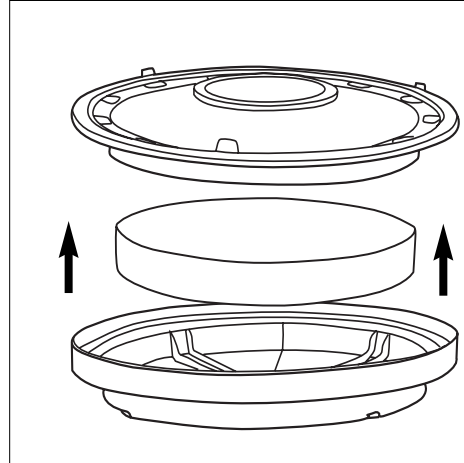

Cleaning the motor protection filter

IMPORTANT: Never use the appliance without the motor protection filter installed, otherwise damage to the motor may occur which would not be covered by the guarantee.

 - 1 Unclip and remove dust container cover.
- 2 Take out the filter and clean (by shaking) or wash.
- 3 To wash the filter, gently wash in warm water and leave to air dry. Do not use detergents. Ensure the filter is fully dry before replacing into the machine.
- 4 Close the filter holder and place back into position before removed.

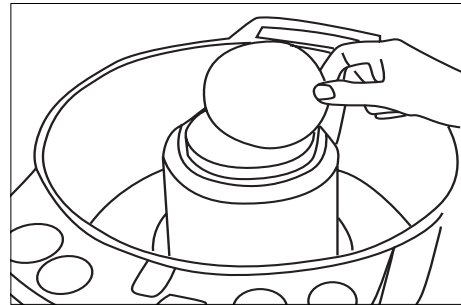

Cleaning and maintenance

Unplug from the mains before cleaning. The vacuum cleaner, especially the dust compartment and all accessories can be cleaned using a damp cloth or a non-abrasive domestic cleaner and wiped dry.

To keep the underside of the floor nozzle clean, vacuum it at regular intervals using the crevice tool.

WEEE



For electrical products sold within the European Community. At the end of the electrical products useful life it should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice in your country.

Purchasing dustbags replacement filters

Use only genuine replacement dustbags and filters which can be purchased from specialist retailers or by calling the number on the front page of this leaflet.

Helpline

If you have any difficulty with your appliance, do not hesitate to call us. We're more likely able to help than the store from where you bought it.

Please have the following information ready to enable our staff to deal with your query quickly:

- Name of the product
- Model number as shown on the underside of the appliance
- Serial number



Your two-year guarantee

- It is important to retain the retailers receipt as proof of purchase. Staple your receipt to this back cover for future reference.

Please quote the following information if the product develops a fault. These numbers can be found on the base of the product.

Model no. Serial no.

All Morphy Richards products are individually tested before leaving the factory. In the unlikely event of any appliance proving to be faulty within 28 days of purchase it should be returned to the place of purchase for it to be replaced. You may be asked to return a copy of proof of purchase.

If the fault develops after 28 days and within 24 months of original purchase, you should contact the helpline quoting model number and serial number should you require further assistance. Repair or replacement of the product is subject to the exclusions set out below (1-6).

If you suspect a fault, follow the simple checks detailed below before returning the appliance or calling the helpline.

- Check the dust bag and filters for blockages.
- Check the hose and tubes for blockages.
- Check the plug is firmly in the socket and the supply is switched on.
- Make sure the socket is working by trying another appliance.

If for any reason this item is replaced during the two-year guarantee period, the guarantee on the new item will be calculated from original purchase date. Therefore it is vital to retain your original receipt or invoice to indicate the date of initial purchase.

To qualify for the two-year guarantee the appliance must have been used according to the manufacturers instructions.

Morphy Richards shall not be liable to replace or repair the goods under the terms of the Guarantee where:

- 1** The fault has been caused or is attributable to accidental use, mis-use, negligent use or used contrary to the manufacturers recommendations or where the fault has been caused by power surges or damage caused in transit.
- 2** The appliance has been used on a voltage supply other than that stamped on the products.
- 3** Repairs have been attempted by persons other than our service staff.
- 4** Where the appliance has been used for hire purposes or non-domestic use.
- 5** The guarantee excludes consumables such as bags and filters.
- 6** Morphy Richards are not liable to carry out any type of servicing work, under the guarantee.

This guarantee does not confer any rights other than those expressly set out above and does not cover any claims for consequential loss or damage. This guarantee is offered as an additional benefit and does not affect your statutory rights as a consumer.

- This guarantee is valid in the UK and Ireland only.



For additional information on Morphy Richards products www.morphyrichards.co.uk

Morphy Richards products are intended for household use only

Morphy Richards has a policy of continuous improvement in product quality and design. The Company, therefore, reserves the right to change the specification of its models at any time.

morphy richards®

The After Sales Division,
Registered address
Morphy richards Ltd, Mexborough,
South Yorkshire, England, S64 8AJ

Helpline (office hours)
UK 0870 060 2604
Republic of Ireland 1800 409119

VC70191M UK Rev 2 11/05