


# Vent 20000 mAh USB-C PD Fast Wireless Power Bank

## Instruction Manual

7121-74

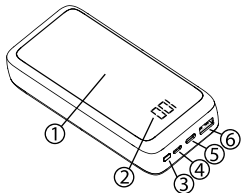

### Features:

1. Wireless Charging Output Surface
2. Digital Battery Indicator
3. ON/OFF Button
4. Micro-USB Input Port
5. Type-C Input/Output Port
6. USB Output

### What's included:

- 1 x 20000mAh PD Wireless Power Bank
- 1 x Instruction Manual
- 1 x Type-C to Type-C Cable

### Tech Specifications

- Capacity: 20000mAh/3.7V/74Wh
- Micro-USB Input: DC 5V/2.4A 3A(Max)
- Type-C Input: DC 5V/2.4A 3A(Max) 9V/2A
- Type-C Output: DC 5V/3A 9V/2A 12V/1.5A
- USB A Output: DC 5V/3A 9V/2A 12V/1.5A
- Total Output: 18W (Max)
- Wireless Output: 5W/7.5W/10W

### LED Indicators

- ON/OFF Button(3): Press once to view the remaining power capacity on Digital Battery Indicator(2).

### INSTRUCTIONS:

#### 1. Charging the PowerBank:

- Charge the powerbank fully before usage.
- Connect the provided Type-C to Type-C cable to a power source and to Type-C input port on the powerbank(5).
- Once connected the Digital Battery Indicator(2) will flash during charging and stop blinking once fully charged.

#### 2. Charging Electronic Devices with the Power Bank, like some laptops:

- Connect the appropriate cable to your mobile phone/device then connect the other end of the cable into the Type-C output port(5) or USB A output port(6).
- Digital Battery Indicator(2) will illuminate when charging.
- Remove the cable from your mobile device and powerbank once fully charged.

#### 3. Charging Electronic Devices with the Wireless Charging:

- Press the Powerbank ON/OFF(3) to turn on the wireless charging function.
- Digital Battery Indicator(2) will illuminate once the powerbank is in wireless charging standby mode.
- Place the wireless charging supported mobile device on the charging surface(1), Digital Battery Indicator( 5) will illuminate when device is charging.
- Remove the mobile device and powerbank once fully charged.

**\*\* Note:** If the digital battery indicator is flashing "188", an unknown object being detected

between the wireless charging area and the phone by FOD(Foreign Object Detection). (Indicator will flash 10 seconds, then light off) PD means power delivery.

### SAFETY PRECAUTIONS:

- WARNING-When using this product, basic precautions should always be followed:
1. Read all the instructions before use.
  2. Never store or use this product in temperatures below 32°F (0°C) or above 115°F (45°C).
  3. Do not overcharge your phone. The unit may become hot under excessive use. Remove your phone once it is fully charged. Never charge your phone for more than 7 hours at a time.
  4. The unit will only achieve full performance after 2 or 3 completed charge and discharge cycles.
  5. To reduce the risk of injury, close supervision is required when the product is used near children.
  6. Do not expose the device to moisture.
  7. Do not use the device in excess of its output rating. Overload outputs above the rating may result in a risk of fire or injury.
  8. Do not use the device if damaged or modified.
  9. Damaged or modified batteries may exhibit unpredictable behaviour resulting in fire, explosion or risk of injury.
  10. Do not disassemble the device. For repairs, seek a qualified service professional. Incorrect reassembly may result in a risk of fire or injury.
  11. Do not expose the device to fire or excessive temperatures. Exposure to fire or temperatures above 104°F (40°C) may result in explosion.

12. To ensure product safety, ensure that qualified service professionals use only identical replacement parts.
13. Attachments on the back of your phone can impede the effectiveness of the wireless charger, and lead to overheating. Please remove attachments from the phone before charging on this device.

### FCC Statement:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
  - (2) This device must accept any interference received, including interference that may cause undesired operation.
- \* Warning:  
Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**FCC Caution:**

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.