


Parallax 4000 mAh Wireless Powerbank
Instruction Manual

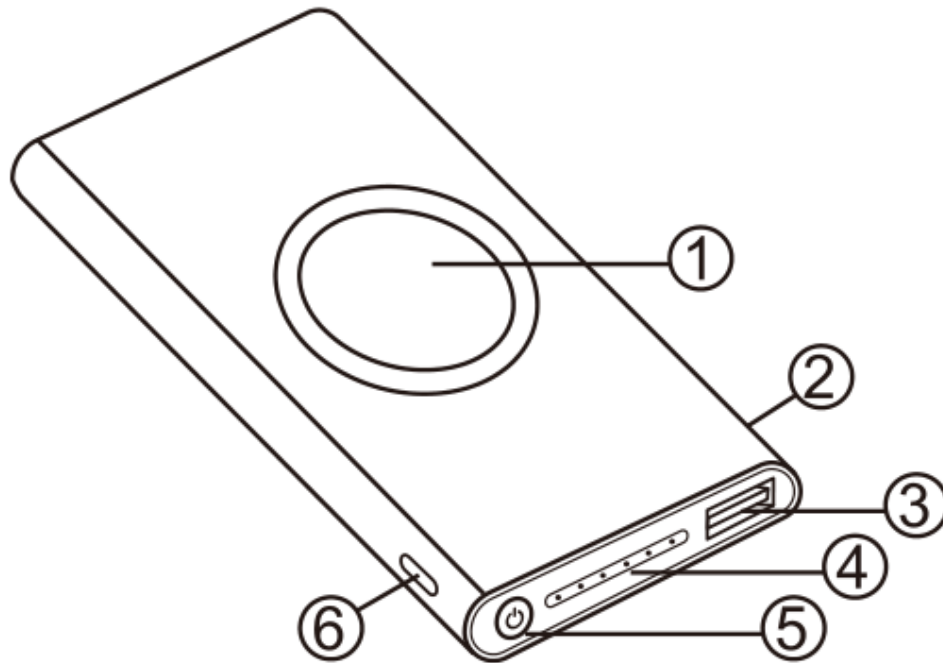

Features:

1. Wireless Charging Pad
2. Micro USB Input
3. USB Output
4. LED Indicators(six)
5. ON/OFF Button
6. Type-C Input

What' s included:

- 1 x 4000 mAh wireless Power Bank
- 1 x USB to Micro-USB charging cable
- 1 x Instruction Manual

Tech Specifications:

- 4000 mAh/3.7V poly-li battery
- Input power: DC5V/ 2 A
- Output power: DC5V/2.1A
- Wireless Output: DC 5V/1A

LED Indicators:

ON/OFF Button: Press once to view the remaining power capacity.

Instructions:

1. Charging the power bank:

A. Using USB to Micro-USB charging cable, insert the USB Charging cable into a certified USB AC adapter or USB port of a computer to begin charging.

B. When Charging the first four LED indicators will flash BLUE, Once fully charged the four LED indicators will be remained BLUE.

2. Charging mobile phones and other electronic devices:

A. Connect the Micro-USB cable to your mobile phone/device using the appropriate connector. Connect the other end of the power bank, the first four LED indicators will illuminate BLUE when charging.

B. When capacity is getting decreased during charging, the four LED indicators will gradually turn off accordingly.

C. Remove the USB cable from your mobile device when it is fully charged.

3. Charging Mobile phones and other electronic devices with wireless output.

A. Press ON/OFF Button once, BLUE four indicators should be on to show balance capacity, the remaining two LED indicators will flash RED and GREEN for three times, the Green indicator off right away, RED indicator would wait for 50 seconds to get off if no charging action. The first four BLUE LED indicators would be off after 60 seconds.

B. When the last indicator displays RED, it means wireless charging mode. Place a phone compatible with wireless charging function on the wireless charging pad surface and it would charge automatically. The fifth LED indicator display GREEN.

SAFETY PRECAUTIONS:

WARNING – When using this product, basic precautions should always be followed, including the following:

1. Read all the instructions before using the product.
2. Charge the power bank fully before initial use. The unit's full performance is achieved only after 2 or 3 completed charge and discharge cycles.
3. To reduce the risk of injury, close supervision is necessary when the product is used near children.
4. Do not expose the device to moisture.
5. Do not use the device in excess of its output rating. Overload outputs above rating may result in a risk of fire or injury.
6. Do not use the device if damaged or modified.
7. Damaged or modified batteries may exhibit unpredictable behavior resulting in fire, explosion or risk of injury.
8. Do not disassemble the device. Take it to a qualified service person when service or repair is required. Incorrect reassembly may result in a risk of fire or injury.
9. Do not expose the device to fire or excessive temperature. Exposure to fire or excessive temperature. Exposure to fire or temperatures above 212° F may cause explosion.
10. Having servicing performed by a qualified repair person using only identical replacement parts.
11. This will ensure that the safety of the product is maintained.
12. Do not overcharge Phone. Unit may get hot with excessive use. Remove Phone when it is fully charged. Never charge for more than 7 hours at a time.

Note: In order to charge devices, use only the accessory cable or the cable included with your own device by the manufacturer.

FCC WARNING STATEMENT

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

To maintain compliance with FCC's RF Exposure guidelines, This equipment should be installed and operated with minimum distance between 20cm the radiator your body: Use only the supplied antenna.

WIRELESS CHARGING ENABLED DEVICES:

iPhone 8/8Plus/X, Samsung Galaxy S8/S8+/S7/S7 Edge/S6/S6 Edge, Nokia Lumia 1020/920/928, HTC 8X, HTC Droid DNA, HTC Rround, HTC Incredibly 4G LTE, Moto Droid Turbo, Motorola Moto 360 Smart Watch, Moto Droid Maxx, Droid Mini, Google Nexus 6/4/5/7 (2013), LG D1L, LG LTE2, LG G2 (Verizon), Blackberry Z30 (Verizon)

MADE IN CHINA