

Motorola, FLEX and Scriptor Jazz are trademarks or registered trademarks of Motorola, Inc. © 1999 by Motorola, Inc. All Rights Reserved.

Paging Product Group
12 Ang Mo Kio Street 64
Ang Mo Kio Industrial Park 3
Singapore 569088

Printed In Singapore 09/99



Alphanumeric FLEX™ Pager User's Guide

SCRIPTOR JAZZ 200

Thank you

for choosing the Motorola **Scriptor® Jazz 200**. This Synthesized 2-Line alphanumeric FLEX™ pager has been developed using Motorola's trademarked FLEX technology. The result? A technologically advanced yet user-friendly pager that will give you years of reliable service.

The Pager is a **dynamic communication tool** used by over **150 million people** around the world. It is the **smallest, lightest** communication tool available.

With its **fixed monthly subscription and low battery usage**, the pager is the most economical communication tool available. Over the years, paging utility has increased from **receiving numbers to text messages** & more.

To ensure a full understanding of how the **Scriptor® Jazz 200** works, please read this User's Guide carefully.



PAGERS

Index

			You are here
Get Start Features. 1	Buttons, Backlight. 2	Functions Turn ON, Turn OFF. 3	Function Menu 4
Alerts. 5	Melody alert. 6	Time/Date, Alarm. 7	Msg read mode. 8

Manual area, Battery level. 9	Screen contrast, Pager control. 10	Messages Personal folder. 11	Receiving messages. 12
Personal folder function menu. 13	Missed message*, Mail. 14	Mail (contd.) 15	Mail folder function menu. 16
Notebook. 17	Notebook folder function menu. Maintenance Battery info... 18	Install/replace battery, Pager care... 19	Repair/Maint, Symbols 20

*: Indicates Operator Dependent


Getting Started

Pager Features

- The Motorola Scriptor® Jazz 200 offers a wide range of useful features.
- 2-Line, 18 English character screen or 1-Line, 14 English character screen, depending on paging operators
 - up to 30 personal messages
 - up to 15 mail messages (5 history/slot)
 - 2 alarms
 - 5 user selectable pleasing alerts, 2 user programmable advanced melodies
 - Vibrator alert and vibracall
 - 3 speed scrolling of message
 - Message security by storing in Notebook
 - GPS Flex time, *if applicable*
 - Real time clock
 - Backlight display for ease of reading in dark.

(Symbols and characters that are blinking on the pager display screen are shown in grey (e.g.) in this User's Guide.)

Function Buttons

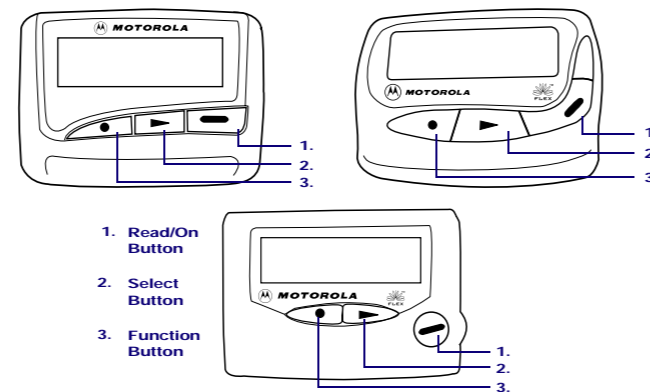


Backlight

Press and hold for 2 seconds to turn on your pager's backlight. Press for 2 seconds to turn off the backlight manually.

Compose Melody Alert

 You can program 2 melody ("A", "B") of your own as one of the alert tone.




- :to advance melody "A" to "B"; melody note (ABCDEFG, abcdefg, '_').
- :to advance cursor position.
- :to return to Alert Function screen.
- Press to enter the user-compose screen when the cursor is on "P" in Alert Function screen.
- After completing the programming of the melody, press to return to Alert Function screen, confirm the melody for "A" or for "B". Press to confirm the setting.

Function Details

Pager ON

 - Press and hold for 2 second to turn on your pager. The status screen is displayed.




* indicates 'Area Index' (1 to 10) applicable when more than one areas are programmed.

The pager returns to the standby screen after the time out period, is displayed at the top left hand corner.

Pager OFF


- Press to go to Function Menu screen.
- Press to select TURN OFF function.
- The "TURN OFF ?" is displayed in the function screen.
- Press again to confirm turning your pager off.

 Time and Date



- Press to choose the day of month.
- Press to highlight the month field then press to choose the value.
- Repeat the steps to choose the value of year, hour, minute and AM/PM fields.
- Press to update your setting and return to the status screen.
- Time-date setting is disabled if "GPS" time update" is turned on.

 
Alarm



- Press to select Alarm "1" OR "2".
- Press to move to the alarm icon field.


Function Menu

- Press to enter the Function Menu screen from the status screen.
- Press to move to the next Function Menu icon.
- Press to enter the current selected function sub-menu (function-setting mode).

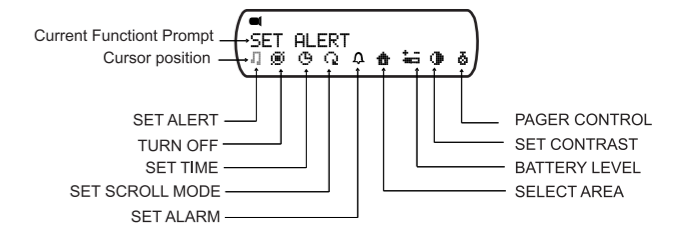


- Press to switch from (Alarm OFF) to (Alarm ON).
- Press to move to the time field.
- When alarm is turned ON, press to change the fields (hour, minute) so that your pager alerts.
- Press to update your setting.

 Message Read Mode



- "Page by page read mode" appears in the screen, press to select "Horizontal text scrolling".
- Press to highlight the speed field.
- Press to change the scroll speed, "MEDIUM", "SLOW" OR "FAST".
- Press to confirm your setting.

Alert Mode

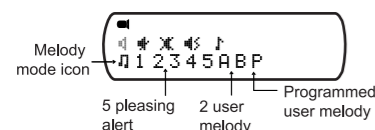

- Press to advance the different alert modes; from silent to sleep, vibra-call, chirp, and pleasing alert 1 to 5, A, B.
- Press to confirm your selection.

The alert status is updated in the status screen as below.


- | | |
|---------------------------|--------------------------------------|
| Audio : | Sleep : |
| pleasing alert and chirp. | pager receives message but no alert. |
| Silent : | Vibra-call : |
| vibration. | vibration follows by audio alert. |

Manual Area Selection (provided more than one areas are programmed)



- When you enter this mode, "Area 1" (an area name, if programmed) is displayed.
- Press to move to the next area.
- Press to select the area you wish to receive messages, e.g. Taipei which has an area index "3".

 Battery Level




- When the cursor is on the Battery icon in the Function menu screen, the battery level indicator is displayed.
- If a bar is left, this indicates a low battery condition.

9

- A priority message comes with a unique alert. The message is displayed on the screen directly (if programmed).

Personal Folder Function Menu

- Press to enter Personal Function screen from Personal Folder screen.

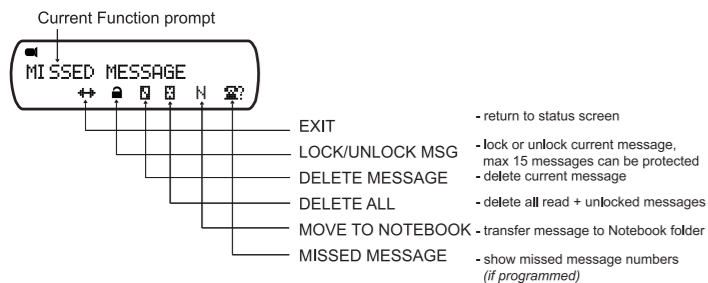

- Press to move to the next Personal Folder Function prompt.
- Press to enter the selected function and to activate it.
- A confirmation message "?" comes with "DELETE ALL", "DELETE MESSAGE".

13

Notebook

You can store important Personal or Information service message in your Notebook Folder. A maximum of 16 slots can be stored. When the Notebook is full, "NOTEBOOK FULL" appears, if you attempt to store Personal or Mail message to the Folder.

- Press to enter Notebook Folder screen from the status screen when the cursor is on the folder.



- : display content of current slot.
- : move to the next icon slot.
- : enter Notebook function Folder screen.

17

Screen Contrast



- Press to change the level of contrast of your paper screen.
- Press to confirm and to return to status screen.

Pager Control




- "UNREAD REMINDER" appears, press to switch ON.
- Press to more to the next control.
- Press to enter the selected control setting screen.
- (i) "UNREAD REMINDER" - ON : unread message reminder, alerts at 2-minute interval.
- (ii) "LOW CELL REMINDER" - ON : low battery condition, hourly alerts (8am to 8pm).
- (iii) "MISSED PAGE REMINDER" - ON : missed pages, alerts at 5-minute interval.
- (iv) "GPS TIME UPDATE"-ON : paper time display follows GPS time.
- * Indicates - if programmed.

10

- Press again to confirm.
- You can enter Personal Message Function menu by pressing when you are reading the message. The operation is the same as Personal Folder Function Menu except there are no "DELETE ALL" and "MISSED MESSAGE" functions.

Missed Message Feature (Operator Dependent)

If there are any missed messages, the total number is first displayed.

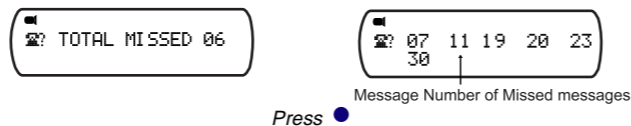


Mail (Information Service)

Your pager can receive information such as world news or financial report (the extent of information received depends on your service provider).

14

Notebook Folder Function Menu

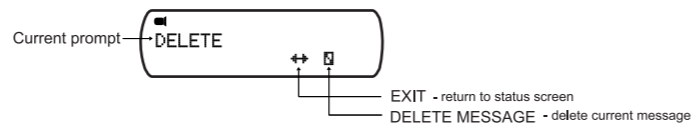

Maintenance

Battery Information


This pager is designed to operate on one 'AAA'-size alkaline battery. The correct time and any stored message will remain intact for up to one minute after the battery is removed.

18

Message Features

Personal Folder


- Press to enter Personal Folder screen from the status screen when the cursor is on the folder.

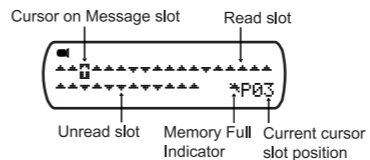

- : display content of current slot.
 - : move to the next message icon slot.
 - : enter Personal Folder Function screen.
- Your pager can receive up the 30 personal messages.


11

- Press to enter Mail Folder Screen from the status screen when the cursor is on the folder.

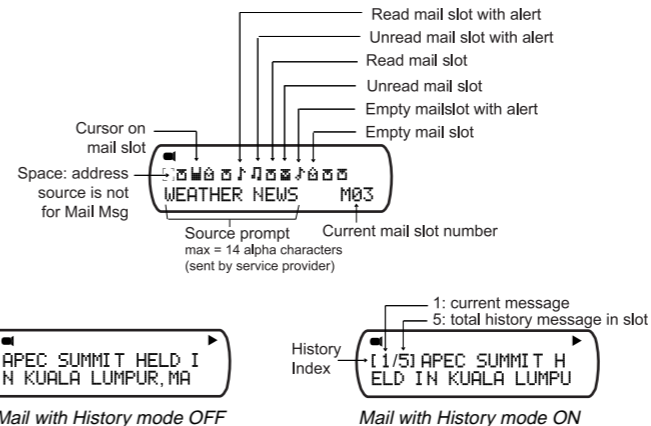

15

To install or replace a battery:

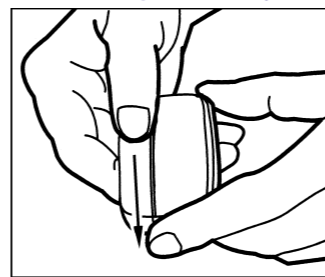

- Place the pager face down in the palm of your hand.
- Push with a click to unlock the battery door and slide it out as shown.
- Slide a new battery into the battery compartment. Ensure that pager is OFF and the battery polarity is correct.
- To close battery cover, the dot on the cover must be aligned to the dot on the battery casing.

Do not press any button while replacing the battery.

Care of your Pager


To maintain the fine optical quality of your pager's display screen, please do not subject the pager to extreme temperatures or moisture. To clean the pager housing, use a soft, non-adhesive cloth moistened with a mild soap and water solution. Wipe the surface with a second cloth moistened with clean water. Do not immerse the pager in water. Do not use any other cleaning solutions.

16

Receiving Messages

When a message is received, your pager alerts according to your set alert mode.

- Press to read the message.

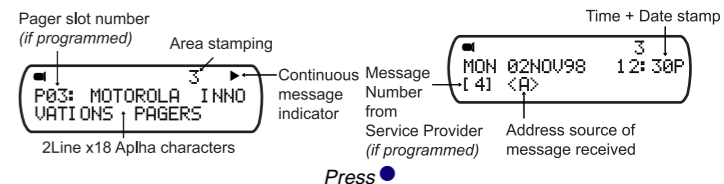


- When an error message is received and read, an "E" is appended in front of the pager slot number (if programmed) OR the message (if slot numbering is not programmed).
- When a group message is received, "G>" is appended in front of the slot number (if programmed) OR the message (if slot numbering is not programmed). Your pager alerts (if programmed) with a unique alert or follows pager alert of sleep, silent mode when a group message is received.

- Your pager can receive up to 15 mail messages. You can store a maximum of 5 mail message from the same source in one slot when History mode is turned on.

Mail Folder Function Menu

Press to enter Mail Folder Function Screen from Mail Folder Screen.

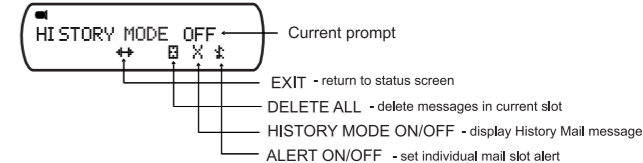

- Press to move to the next Mail Folder Function prompt.
- Press to enter the selected function and to activate it.
- A confirmation message "?" comes with "DELETE ALL" and "HISTORY MODE ON". Press again to confirm.
- You can enter Mail Message Function menu by pressing when you are reading the mail. The operation is the same as Mail Folder Function message expect the additional function "MOVE TO NOTEBOOK", i.e. you can move individual Mail message to Notebook Folder.

Repair and Maintenance

Your pager, if properly handled, will give you many years of trouble-free service. However, if servicing is required, Motorola's Service Organisation, staffed with specially trained technicians, offers, conveniently located repair and maintenance facilities throughout the world. Please contact your paging service provider for more information.

Patent Information

This Motorola product is manufactured under one or more Motorola U.S. patents. A partial listing of these patents is provided on the inside surface of the battery door. Other U.S. patents covering this product are pending.

Status Static Icon

- Audio Alert
- Silent Alert
- Vibra-call Alert
- Sleep Mode/standby Mode
- Alarm Enabled
- Missed Page Indicator
- New Message Indicator
- Duplicate Message (if programmed)
- Locked Message
- Out-Of-Range indicator (if programmed)
- Continuous Message Indicator (press to read the next screen)

19

20