

INSTRUCTION MANUAL

A preliminary draft of the User's Manual (Part 2) follows this page.
The text on the following three pages will be added to the user manual.

1. Description of Basic Icons

 


To reduce battery consumption, if the set lighting time arrives, the Screen lights of automatically. (See page 71)


	To indicate the signal strength level in the current service area		To indicate that the roaming service is used
	To indicate the call is in progress or NATE is connected		To indicate that the service cannot be connected
	Displayed when the phone has been set to 'Auto Answer'		Displayed when you use your earpiece
	Displayed when you use handsfree kit		Displayed when you receive voice messages or text messages
	Displayed when you receive broadcasting message		Displayed when the cell phone is equipped with external memory card
	To indicate that the cell phone has been lock' mode. 🔒 Total Lock 🗝️ Private Lock		Displayed when you use bluetooth (See the page 116 for Bluetooth icons)
	To indicate that alarm (Quick Set, Morning Call, My Favorite Alarm) has been set to ON.		
	To indicate that the receive tone has been set to Bell mode. 🔔: Bell&Vib 📞: Vib then Bell 🔊: Louder 🚫: No Bell & No Vib 🗨️: My etiquette mode		
	To indicate a remaining battery capacity 🔋: Full Charge 🔌: Low Charge 🔌: Need Charge		
	Displayed when you connect the USB data cable (It varies depending on the receive mode selected) 📶: Data Reception 📠: Fax Reception		

2. How to Use Menu Move Buttons

1. How to use Menu to be displayed on the bottom of screen
2. How to move and select Menu

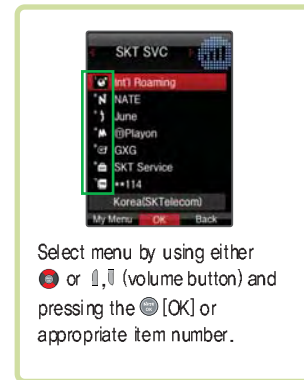


 3. When scroll bar is displayed

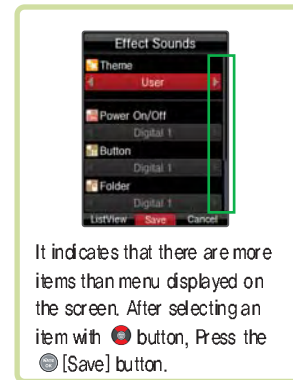


Before Using

4. When ► is displayed on the side of menu

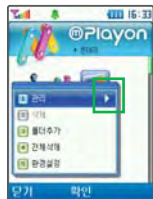


When pressing either [OK] or [Power] button, detailed items will be displayed. Select an item by pressing the [OK] button or an appropriate number.

5. When ◀▶ is displayed on the screen

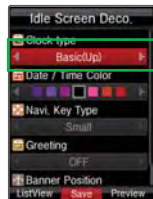

After selecting an item with [Power] button, Set it by pressing the [Save] button.

6. When ● is displayed on the screen

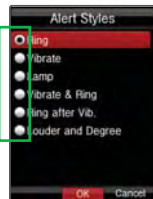

After selecting an item with [Power] button, Set it by pressing the [OK] button.

3. Power ON and OFF

1. Power ON

Press [Power]

- The service provider logo and a graphic set by the user are displayed, and the phone is reset to the standby screen.

2. Power OFF

Press and hold [Power]

- A graphic disappears and the power is turned off.



Note

The graphic on the internal screen can be downloaded from NATE and changed in 'Setting Internal Screen' under 'Setting Display.' The graphic may be displayed late on the display depending on the capacity of graphic downloaded. (See page 67 for Setting Internal Screen.)

4. Placing a Call

1. Making a call by entering a phone number

Enter a desired phone number on standby screen and press [Power]



- The call time is displayed on the display screen automatically.
- Call charge is counted from the point of time for the connection with the called party.
- If you press and hold [Power] on the standby screen, the number dialed last is connected.
- When 'Lock All' is set in the cell phone, you can place a call after entering the lock code.
- You can change a numeric type displayed on screen by pressing [Camera] (Camera button) when you enter the number. (See page 71 for Setting Dial Number.)





2. Placing a call from Phone Book

● (Right)[Phone Book] → Select a phone number to call → Press

- You can place a call by searching a phone number saved in the cell phone. (See page 127 for Searching Phone Number)
- Selecting a person to call and pressing allow you to the number set to 'Representative Number'.

3. Placing a call from SpeedDialing

Press and hold a last digit of the abbreviated numbers saved.

- You can make a call easily by using the abbreviated numbers saved in the phone book. (See page 129 for Registering Phone Number.)



Location number 17	press the dial button 1 shortly, and press and hold 7
Location number 173	press the dial button 1 and 7 , and press and hold 3

4. Placing a call from Electronic Dialing

Enter a phone number → Enter 'P' or 'T' by using , and a number to be dialed electronically → Press



- You can use this function conveniently by entering several phone numbers in advance according to announcement when using ARS.
- To cancel electronic dial, press C during a call.

Description of electronic dial buttons

P	The number after 'P' can be sent only if the or (left)[Move] is pressed.
T	The numbers after 'T' are sent automatically shortly after.

5. Receiving a Call

If a call is received, open the folder to receive the call.



- When a call is received with a ringer tone or vibration, if you press and hold (Volume button), the ringer tone or vibration is switched to mute.
- If you have already registered 'Call ID service with your service provider, the caller's number is displayed on the screen.



The graphic on the internal screen can be downloaded from NATE and changed in 'Setting Internal Screen' under 'Setting Display'. (See page 67 for Setting Internal Screen.)

1. Receiving a Call with the Earpiece

- With the earpiece connected, if a call is received, you can press or the button of the earpiece to receive the call.
- When the call is ended, press or the button of the earpiece to disconnect the call.

2. Setting Receive Mode

● (Left)[Menu] → 6^{MT} → 3^{DEF}

- When receiving a call, you can receive a call through the receiving method previously configured.

Folder Opened	: Open the folder to receive a call.
Any Key	: You can answer calls placed to your phone by pressing all buttons except .
Send Key Only	: You can answer calls placed to your phone only when pressing .
In 3 Seconds	: After receiving tone sounds for 3 seconds, the call is connected automatically.

6. Functions Available During a Call

You can use various convenient functions while your phone is busy.

1. Mute

During a call Press **[Left][Menu]** **[OK]** Select Mute

- During a call, you can block your conversation from being transmitted to the called party.
- When a voice sending is blocked, 'M' is displayed.
- To cancel this function, select Mute again.
- Once a call is ended, this function is canceled automatically.

2. Blocking keytone

During a call Press **[Left][Menu]** **[OK]** Select key tone block

- During a call, you can block a button tone.
- When using a key tone block, 'K' is displayed.
- To cancel this function, select the key tone block again.
- Once a call is ended, this function is canceled automatically.

3. Sending my number

During a call Press **[Left][Menu]** **[OK]** Select the sending my number

- During a call, you can send your number to the cell phone of a called party.
- Your number is displayed on the screen and sent to the called party, and your cell phone is returned to call mode.

4. Using Phone Book

During a call Press **[Right][Phone Book]** **[OK]** Select a desired menu

- You can use the phone book menu during a call. (See page 124 for Using Phone Book Menu)

5. Adjusting call volume

During a call, adjust a call volume by using the **[Up/Down]** (Volume button).

- During a call, you can adjust a voice volume of the called party.

6. Recording phone number

During a call, enter a phone number and press the **[OK]**

- A phone number recorded during a call will be saved in 'List of Outgoing Calls'. After disconnecting a call, you can press and hold the **[Call]** to connect a recorded number.

7. Using speaker

Press **[Speaker]** during a call

- When using a speaker, 'S' is displayed. To cancel this function, press the **[Speaker]** again.
- When using the speaker, a microphone should face the user within about 30cm.
- Once a call is ended, this function is canceled automatically.


8. Using text message

Press **[Text]** during a call **[OK]** Select a desired menu

- During a call, you can send a text message and check the sent and received messages. (See page 148 for Using Message Menu)

7. Missed Call

If the user fails to receive a call, the following image is displayed on the screen.

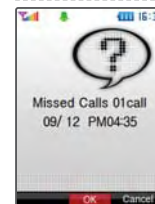

- With the folder closed, you can check missed calls by pressing **[Camera]** (Camera button), **[HOLD]** (HOLD button), **[Up/Down]** (Volume button).
- To confirm it from the menu, you can use 'Call Record/Time' in 'Phone Book'.
- To confirm it from the call list, you can check it from 'Missed' by pressing **[Call]**.
- When the 'Missed Call' message box is displayed on the standby screen, if you press **[OK]** button, the 'Missed Call List' is displayed. However, if the called party's number is a call restricted one or you have not yet subscribed to 'Caller ID' service, 'Call Restrict' is displayed on 'Missed Call List'.



8. Setting My Menu

You can transfer up to 12 menus, which you use, frequently to My Menu.

Select a desired menu and then press **(Left)[My Menu]** → Select a setting 'Yes' → Search a menu by pressing **(Left)[Menu]** and select desired icon by pressing a number button → Copy it to My Menu




- You can confirm My Menu, register a new one or delete it by pressing the **(Left)[Menu]** from the standby screen.
- Even if you transfer any existing menu to My Menu, the existing menu is not deleted.

9. Using Menu after Entering Numbers

Entering numbers on the standby screen, you can use simple functions related with the number you entered.

Enter numbers on the standby screen → **(Left)[Menu]**

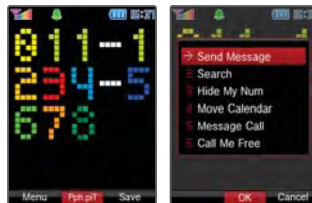

Menu Description

Send message	Send a message to the number you entered.
Search	Search phone book information on the number you entered.
Hide my Num	When making a call to the number you entered, the number of caller (user) is not displayed on the called party.
Move Calendar	Search a date for the number you entered.
Message call	Record and send a voice message to the number you entered.
Call Me Free	When making a call, a receiver (the called party) can pay a call charge for the caller (user). ※ For call charge or other information, please contact SKT Customer Center (1566-0011) or e-Station website (www.e-station.com).



03 Inputting Characters

1. Changing Character Input Mode	45
2. Using Menu to Enter Other Characters	46

1. Changing Character Input Mode

Pressing (Right) [Korean] in the character input mode, change the desired input mode.



- Pressing the (Camera button) enables you to change the input mode to 'Korean → English Uppercase → English Lowercase → Number' in this sequence.
- You can move to a desired position and enter characters by using or .
- When inputting characters, you can delete characters one by one by pressing shortly and delete all by pressing it long.

1. Inputting Korean Characters

1. Inputting Consonants

- To enter the first basic consonant and the double consonant, press the button once and twice respectively. To enter the 2nd consonant marked on the keypad, press the basic consonant, press the basic consonant and #*0 button once more.

예	
	Press * once
	Press * twice
	Press * and #*0

2. Inputting Vowels

- These consonants are combined and entered automatically in the sequence of initial sound, medial vowel and final consonant in accordance with the Korean orthography. If you entered a final consonant which does not conform to the Korea orthography, the cursor will move to the initial sound consonant automatically.
- To enter the 2nd vowel marked on the keypad, press the appropriate button twice. To enter a diphthong, enter the basic vowel and then press #*0 button.

예			
	Press 3 once		Press 3 and #*0
	Press 3 twice		Press 3 twice and #*0



2. Inputting English Characters and Numbers

1. Inputting English Characters

- Enter English characters by pressing the 1st marked English letter once, 2nd marked one twice, the 3rd one three times, respectively.
- In the English input mode (Uppercase and Lowercase), if you press 1st once and twice, '@', and '.' will be entered respectively.


Ex

M	Press 6 ^{MNT} once
O	Press 6 ^{MNT} three times
T	Press 8 ^{TV} once
O	Press 6 ^{MNT} three times
.	Press 1 st twice




2. Inputting Numbers

- Press the appropriate [Dial] button in Number mode.
- Press and hold the [Dial] button regardless of input mode, and an appropriate number is entered.

2. Using Menu to Enter Other Characters

Press  (Left)[Menu] in character input mode and select a desired menu.

1. Symbol

- You can select and enter general symbols. (General, Graphics 1, Graphics 2, Ruled Lines, Weights, Round, Parentheses, Japanese 1, Japanese 2, Emoticons, Mails)
- To move to the next page, press . And to select a symbol, press .
- After checking a number assigned to the desired symbol, enter it by pressing  [OK].

2. My Sentence

- This function enables you to store and use maximum 20 favorite sentences. (See page 108 for Using My Sentence.)

Note

The menu function (character color, picture/character, emoticon, phrase) and symbols for writing a message have been more greatly improved than the menu functions for entering general characters. For how to use the menu and symbols for writing a message, please see 'Writing Message'. (See page 149 for Writing Message.)



04 SKT Service

1. Setting Auto Roaming 48
2. To connect NATE 49
3. To connect June 50
4. Using @Playon 52
5. Using GXG 54
6. Using SKT Supplementary Services 55
7. Using **114 Service 56
8. Using NATE Air 56
9. Using WINC (Mobile Address) 58
10. Using NATE Phone P 58
11. Using 1mm Service 58

1. Setting Auto Roaming

This function enables you to use the cell phone even abroad. (Upon purchasing the product, the password is set to '0000'.)

● (Left)[Menu] → 1 → 1 → Enter a password



■ If you are to change the status of setting this auto roaming service, please contact our service center. (If you change the setting voluntarily, the cell phone may happen to work abnormally.)


※ For service charge and other information, please contact the SKT Auto Roaming Customer Center (1566-2011).

- Korea (SKTelecom) : Set as default, and used when you use your cell phone at home.
- Auto Select : When you stay in foreign country except area A or B, you can select this function to check if mobile phone services are available for such place.
- A-Band (China, etc.) : Selected when you use your phone in China, Thailand, Hong Kong, New Zealand, Guam, Saipan, Taiwan, Israel, and some parts of USA.
- B-Band (USA, etc.) : Selected when you use your phone in main parts of USA, Australia and Canada.

2. To connect NATE

You can connect wireless Internet NATE to search various information or download various contents such as games and ringer tones.

● (Left)[Menu] → 1 → 2

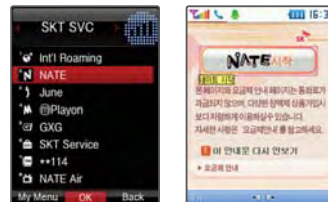

■ You can connect it by pressing and holding the [NATE] on the standby screen. If you want to exit from NATE connection, press .

※ When using NATE, data call and information charges are imposed. For more information, see the SKT NATE website (<http://www.nate.com>) or contact the SKT Customer Center (1566-0011).

※ If you download contents through wireless Internet (NATE, June, @Playon, GXG, etc.) with the lack of cell phone memory, 'No Space' message will be displayed on the screen. At this time, you can delete the contents saved in cell phone and download contents by executing a memory administrator function.

■ Using NATE browser menu



■ When your phone is connected to NATE, if you press ● (Left)[Menu], the browser menu is displayed. Then you can move to a desired item by pressing ● or ●.

Description of NATE Browser Menu Icons


	History	Displays sites accessed by the user recently.
	Move	Enables user to move the web page easily.
	My Menu	Enables users to search or edit their own menus by registering those menus searched by the user frequently and using My Menu viewing.
	Useful Tool	A collection tools for easy NATE uses.
	Help	Enables users to check the information about browser.

3. To connect June

This function enables you to download and enjoy various contents such as TV, movies, music, animation, games and sports with premium service.

1. June

● (Left) [Menu] → 1. June → 3. Download Contents

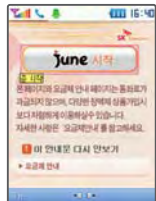

Note

- June service screen and its contents are subject to change depending on conditions of service provider.
- June contents provided upon purchasing the product cannot be restored once they are deleted voluntarily or due to users inadvertency.
- In case of downloading June contents, you can check them from Download Contents, and save them flexibly within a capacity of June memory regardless of type of contents.
- If contents have not been saved fully, you can continue to save them from Download Contents.
- If you receive a call while using June, you can accept or refuse it.

- If you press **June** shortly on the standby screen, you will move to June menu screen. If you press and hold **June**, you can access June service immediately.
- ※ In case of downloading contents, information charges are imposed. For more information, see the charge guide or contact the SKT service center (1566-0011).
- ※ If you download contents through wireless Internet (NATE, June, @Playon, GXG, etc.) with the lack of cell phone memory, TSM (memory administrator) will be executed. At this time, you can delete the existing contents and download new ones (including delete-protection June album contents, live bells contents, and live screen contents.)
- *What is TSM (memory administrator)? When you try to save contents under the condition that the memory of cell phone is fully used, TSM asks whether to delete the existing contents or not.

2. Download Contents


Press **June** on the standby screen → Select Download Contents

- You can access to June, and store/manage/play the downloaded contents (See page 75 for VOD/MOD.)

3. Setting Phone

Press **June** on the standby screen → Select Setting Phone

- By accessing the Setting Phone of June service, you can decorate your phone more uniquely through downloaded live bells or live screens.

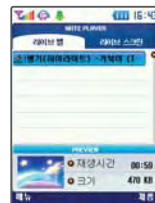

1. Live Bell

- By accessing June, you can save/play downloaded live bells and set the live bell.

2. Live Screen

- By accessing June, you can save/play downloaded live screens and set the screen.

4. GXG

Press **June** on the standby screen → Select GXG

- You can use 3D GXG games. (See page 54 for Using GXG)

5. Movie Mail

Press **June** on the standby screen → Select a movie mail

- You can check the contents saved in the attached file box. (See page 156 for Using Attached File Box.)

6. Setting Environment

Press **June** on the standby screen → Select Setting Environment


- You can set environments necessary for using the downloaded contents from June.

- Setting play environment : Set various environments necessary for playing contents.
- Setting screen : Set skins, preview screens, and change recommended content setting.
- Live screen sound : In case of setting the standby screen to live screen, you can select whether to set background sound or not
- Memory information : Check the internal/external memory's total, progress and available capacity.

4. Using @Playon

It is an integrated download-type content menu where you can use downloaded contents immediately without reconnecting NATE.


Press **⏏** (Left)[Menu] → 1 **☰** → 4 **☰** or press **⏏** on the standby screen

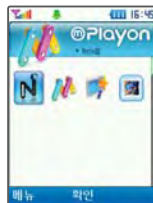

	NATE Home	Move to NATE menu
	@Playon	Access @Playon service
	Phone Theme	Save folder for background screen contents

- You can adjust the volume of selected content by pressing **⏏**, **⏏** (Volume button).
(If the volume is muted in @Playon Environment Setting, you can hear no sound when moving the @Playon folder.)
- If a memory is not sufficient, you can download contents after deleting existing contents.
- If you receive a call while using contents, you can use contents again after receiving and completing the call. However, in case of 1:1 games or network games, you should subscribe to NATE Call Waiting service. After receiving and completing the call, some contents may not work normally depending on downloaded contents.
- ※ In case of downloading @Playon contents with the lack of cell phone memory, TSM (memory administrator) will be executed. At this time, you can delete the existing contents and download new ones (including delete-protection June album contents, live bells contents, and live screen contents).
*What is TSM (memory administrator)? When you try to save contents under the condition that the memory of cell phone is fully used, TSM asks whether to delete the existing contents or not.
- ※ If you delete all the contents saved in @Playon, those of GXG download contents will be deleted, too.
- ※ In case of downloading contents via @Playon, call and information charge will be imposed. For more information, see the service provider.

■ Using Downloaded Contents Menu

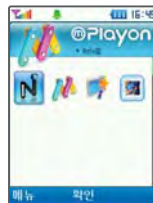


Menu Description

Management	You can correct a selected content (name), move a position and folder and check registered information.
Delete	You can delete a selected content.
Add Folder	You can create a new folder and manage its move.
Delete All	You can delete all the downloaded contents. (※ Be careful that all the contents saved in GXG download contents will be deleted together upon Delete All.)
Setting environment	Check the total memory information of downloaded contents and set the volume (sound setting) and automatic alignment.

5. Using GXG

You can enjoy 3D games downloaded through wireless Internet or PC.

● (Left)[Menu] → 1 → 5

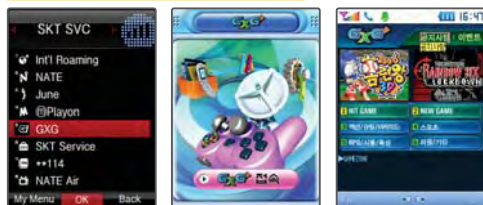

※ If you separate a USB cable or external memory card (Micro-SD) by force while you send GXG games to the cell phone via PC, the cell phone may happen to work abnormally.

※ If you download games via wireless Internet, an excessive charge for packets may be imposed. For more information, see the GUIDE by accessing the GXG homepage (www.gxgc.com).

1. GXG Access

■ You can download 3D games by connecting GXG services of wireless Internet.

2. Download Contents

■ The 3D game contents downloaded by accessing GXG services are saved.

3. @Playon

■ While using GXG menu, you can move to @Playon immediately. (See page 52 for Using @Playon.)

4. Setting Environment

■ You can check the information on 3D game memory and set the sound control environments.

6. Using SKT Supplementary Services

This menu enables users to easily access various supplementary services provided by SK Telecom to register or cancel various services.

● (Left)[Menu] → 1 → 6


Image Call	: When placing a call, you can have a designated caller's image, characters or emoticons to be displayed on the cell phone of a called party. (See page 126 for Using Image Call.)
Sorisam	: When it is difficult to use the cell phone, you can check a received voice message.
Auto Connection	: When the user didn't receive a call (until alarm signals like Bell or Vibration time ends), it is connected to a number wanted by the user automatically.
Call Forward Jeongbosam	: A received call is connected directly to a general phone number registered by the user.
Traffic News	: Informs users of text information selected by users such as news, sports and stock prices on the cell phone on a designated time.
Secret Call	: Informs users of latest traffic information regarding highways, national roads, railways, airlines and Seoul city.
NumberPlus	: You can assign secret number to your phone and enter it whenever you make a call in order to prevent others from using the phone.
Edit 011 SVC	: You can get one more number from a service provider to use it as a receive-only number.
SKT SVC Center	: If SKT supplementary service numbers have been changed, you can enter the contact number again.
	: You can have a direct access to SKT Customer Service.

※ For service charges and other information, please contact SKT Customer Center (1566-0011).

7. Using **114 Service

This service provides a user with phone numbers, detailed locations and introduction of business firms which are located closely to the user.

● (Left) [Menu] → 1 → 7

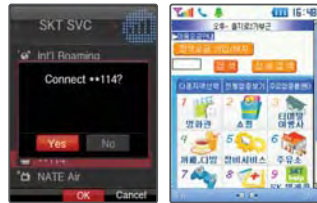

■ If you press * , * , 1 , 1 , 4 and on the standby screen, you will receive a text message. You can use the same service by pressing [OK] button from the received text message.

※ Using **114 service will impose some charge on you. For more information, see the service charge guide or contact the SKT Customer Center (1566-0011).

8. Using NATE Air

This is the broadcasting service provided by NATE, and you can receive various and massive changing information such as various news, stock prices, on-the-spot telecast, and movie.

● (Left) [Menu] → 1 → 8 → Select it by pressing




■ When receiving a broadcasting message, 'NATE Air' flashes on the standby screen and disappears upon your checking.

※ This service is available after subscribing to NATE Air supplementary services. For subscriptions and other information, contact SKT Customer Center (1566-0011) or visit the NATE Air homepage (<http://air.nate.com>).

※ With subscribing to NATE Air service, you can receive an urgent alert messages related to public or disaster alarms by free. If you do not want to receive an urgent alarm messages, you can change the status of receiving in the Setting Environment.

■ Broadcasting Message Service

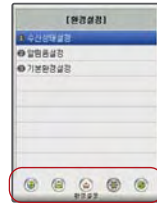

Using Broadcasting Message Menu

You can delete/protect messages or cancel their protection by pressing ● (Left) [Menu] from a list of broadcasting messages.

	Channel Message	Received broadcasting messages are stored by channel and displayed. When you search them by channel message, the number of received messages by channel and the messages not-confirmed are displayed on the bottom of the display screen.
	Recent Message	Broadcasting messages are displayed in an order of recently received ones, regardless of channels.
	Store Box	Move to @Playon where received messages are stored.
	Setting Environment	Setting reception status : You can set whether or not to receive messages by channels. Setting alarm sound : You can set alarm interval and sound generated when a broadcasting message is received. Setting basic environment : You can set how to check received messages.
	Adding/Changing Channel	You can add or change channels to receive broadcasting messages by connecting the terminal to NATE. ※ Upon adding a channel, you will be charged with service fee for each channel.

9. Using WINC (Mobile Address)

You can have an access to wireless Internet services by entering numbers instead of complicated domains.

Select [NATE] → WINC

- If you press after entering WINC (mobile address) on the standby screen, you can have an access to wireless Internet sites.
- The list of recommended phone pages is subject to change depending on the situations of the service provider.

Recommended Phone Page

Title	Mobile Address	Title	Mobile Address
SKTelecom	11#011	Song Gwan Ho's	592646#007
Club Cyon	25822966#0	Mobile World	
Yahoo Korea	9090	Freechal	815#1
MSN	6768	HoHo	4646
Seoul City Bus	287#0	Gumi City Hall	4864#0
Photo Meding	2235	Korea Consumer	4545#0
NDA	6432#0	Protection Board	
		Weather	630

※ For more information, please contact the service provider or visit the WINC homepage (<http://www.winc.or.kr>).

10. Using NATE Phone P

You can use the mobile cyworld by your phone.

Enter a phone number on the standby screen → Press [Phone P]

- When searching the phone book, select a phone number, press and select 'Connect to Phone P' to access it.
- ※ When you connect to NATE Phone P, you are charged with NATE fee. For more information, contact the service provider or see 'Mobile' of the Cyworld homepage (<http://cyworld.nate.com>).

11. Using 1mm Service

You can use the service you want immediately on the standby screen.

Select a desired 1mm menu on the 1mm service screen by using

- The installed 1mm service runs on the standby screen automatically. Select a setting 'Release on the standby screen' from '1mm execution setting' in 'Setting Up' not to run it on the standby screen.
- Pressing moves you to the standby screen while using 1mm service.
- ※ When you connect to 1mm Service, you are charged with service fee. For subscription or other information, contact the service provider or see 1mm homepage (www.1mm.com).



05 Setting Sound

1. Selecting Ringer Tone 60
2. Selecting Bell/Vib 61
3. Adjusting Volume 62
4. Setting Group Charac Bell 62
5. Setting Effect Tone 63
6. Setting Information Alarm Tone 63
7. Setting System Alert Tone 64
8. Setting Time Alarm 64
9. Setting My Etiquette Mode 65

1. Selecting Ringer Tone

You can set a ringer tone sounded when a call is received

(Left)[Menu] → 2^{ABC} → 1^{a..l}



- Besides the default ringer tones stored in your cell phone, you can use the melody downloaded service provided by your service provider to download various ringer tones.
- With the etiquette mode canceled, you can adjust the volume of a ringer tone by pressing , (Volume button).

Kind of Bells

- Basic bell : 1~7
- Single bell : 1~10
- My bell : 1~200
- Live bell : 1~200
- Movie bell : 1~999

1. Downloading Melody

1. Downloading Melody from 700 Service

Enter a 700 service phone number → press

- If you select a desired melody according to the voice guide message to download them, and the message downloaded through 700 service is transmitted, you can download the melody by pressing the [OK] button.
- According to types of downloaded melodies, they are saved in 'Single Bell', 'My Bell' and 'Live Bell' Respectively.

2. Downloading Ringer Tone from NATE

Press and hold [NATE] on the standby screen to connect NATE

- According to types of downloaded melodies, they are saved in 'My Bell' or 'Live Bell'.
- You can check the downloaded my bell even from 'My Bell' menu of 'Contents Store Box'. (See page 73 for Using My Bell)

2. Selecting Bell/Vib

You can change a ringer tone from bell to vibration, or vice versa, informing that a call, alarm or alert is received.

(Left)[Menu] → 2^{ABC} → 2^{ABC}



- Even if you change a receive mode in 'Select Bell/Vib' under 'Sound Setting' if etiquette mode has been set, the receive mode is not changed as long as the etiquette mode is not cleared. Upon clearing the etiquette mode, the phone returns to the most recently set receive mode.
- A message-receiving tone depends on the status of setting a message-receiving alarm. (See page 158 for Setting Message-Receiving Alarm.)

Bell/Vib Icons

	Bell		Vib then Bell		Bell & Vib
	Lamp		Vib		Bell Louder

1. Setting Etiquette Mode

Press and hold * on the standby screen
(Release it by pressing and holding it once more.)

- If etiquette mode is set, is displayed on the standby screen.
- This feature allows you to change a ringer tone or a alarm mode to vibration mode in order not to make yourself a nuisance to others. However, if your phone is connected to earpiece, it makes a sound through the jack of earpiece.
- Even if you switch off and on your phone, your phone will maintain etiquette mode.

If etiquette mode is set

- Vibration : be executed at the cases such as Power On, Bell of the phone, Alarm sound (except Morning Call), Alert for receiving messages (Except the case of clearing the message-receiving set)
 - Muted : be maintained at the cases such as Call-connecting tone, Power Off, message box tone, Out of S/C tone (out of service areas), Menu move tone, Button tone, Folder effect tone, Low battery, Ready for shutter, 1Min Timer
 - Alarm Bell : be rung at the case of Alert for emergency messages
 - Sound : be sounded at the cases such as Shutter tone, Morning Call
- * What is Emergency SMS? Emergency SMS is provided by service provider for the purpose of notifying its users of dangerous situations when an emergency situation occurs in a specific area



3. Adjusting Volume

You can adjust the volume of tones by functions.

● (Left)[Menu] → 2 ^{LO}ABC → 3 ¹⁻⁴DEF




- You can adjust the volume by using and save it by pressing [Save].

Call Tone	: Adjust the volume during a call
Ringer	: Adjust the volume of tone sounded when receiving a call
Effect Sound	: Adjust the volume of effect tone sounded when opening/closing the folder or turning on/off the power
Info. Alert	: Adjust the volume of tone for various alarms
System Alert	: Adjust the volume of tone for various warnings
Alarm	: Adjust the volume of bell for alarms
Phone Theme	: Adjust the volume for phone theme setting
@Playon	: Adjust the volume when starting @Playon menu

4. Setting Group Charac Bell

You can set graphics or ringer tones for groups registered to the phone book respectively.

● (Left)[Menu] → 2 ^{LO}ABC → 4 ^{EH}GHI

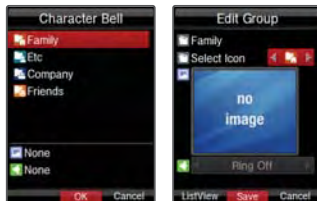

- Selecting a desired group and pressing [OK] button will display a graph of ringer tone-setting window, you can select an icon by pressing ● (Left)[Picture View]/[List View] and set a graphic and ringer tone.
- If a ringer tone or graphic is not set up on registering a phone number, another ringer tone or graphic set for group will be sounded or displayed. If a ringer tone or graphic for individuals and groups are not set, a graphic set in 'Incoming Call' of 'Setting Internal Screen' or a ringer tone set in 'Selecting Ringer Tone' will be displayed or sounded. When receiving a call subscribed to Image Call service (Image Call, Lettering Plus), a graphic depends on the status of setting a reception environment of Image Call service. (See page 126 for Using Image Call.)

5. Setting Effect Tone

You can set individual or total effect tones of the cell phone.

● (Left)[Menu] → 2 ^{LO}ABC → 5 ^{JKL}




- If you did not set an effect tone over 1 level by using (Volume button) on the standby screen or the phone is set to etiquette mode, the effect tone will not be sounded.

Theme	: Set same effect tone to all theme or different ones to each theme by user definition.
Power On/Off	: Set an effect tone for turning on or off the power.
Button	: Set an effect tone for pressing buttons.
Folder	: Set an effect tone for opening and closing the folder.
Confirm Box	: Set an effect tone for displaying a pop up window of dialog box.
Menu	: Set an effect tone sounded when moving menus.

6. Setting Information Alarm Tone

You can set various information alarm tones on your phone.

● (Left)[Menu] → 2 ^{LO}ABC → 6 ^{MT}NRQ

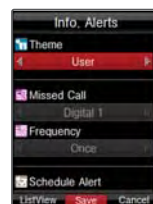

Theme	: Set same effect tone to all theme or different ones to each theme by user definition.
Missed Call	: Set an alarm tone for missed calls.
Frequency	: Set a number of times for alarms informing missed calls.
Schedule Alert	: Set a schedule alarm tone.
Anni. Alert	: Set an alarm tone for anniversary dates.
D-Day Alert	: Set an alarm tone for D-Day
Meeting Planner	: Set an alarm tone for meeting planner



7. Setting System Alert Tone

You can set various system alert tones on your phone for emergencies or user-set situations.

● (Left)[Menu] → 2_{abc} → 7_{pqrs}




- Connecting Alert : Set an alert tone for connecting a call with a called party.
- Call Release Tone : Set an alert tone when a call is disconnected.
- 1 min lap. Alert : Set an alert tone every minute after starting a call.
- Out Of SVC Area : Set an alert when the phone is out of service areas.
- Battery Warning : Set an alert tone when your phone needs recharging.

8. Setting Time Alarm

You can set time to be sounded with voice when you press the volume button or open a folder, or in accordance with the hour.

● (Left)[Menu] → 2_{abc} → 8_{tuv}

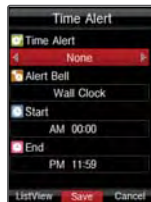


- If an alarm-starting time corresponds to an alarm-ending time, you cannot set a time-alarm function.
- If you set a time-alarm setting items with 'Volume key' you can check the time by pressing and holding **[V]**, **[V]** (Volume button) with the folder closed.
- If the standby screen is set to supplementary service like Phone Theme or 1mm Service, the folder tone will be sounded despite setting the time-alarm tone for 'Opening Folder'.

9. Setting My Etiquette Mode

You can change the phone to etiquette mode (depending on various options such as cycle and bell/vib setting, and lamp setting) at a designated time zone regardless of the setting of cell phone sounds. (Be noticed that the etiquette mode setting is applied prior to my etiquette mode setting.)

● (Left)[Menu] → 2_{abc} → 9_{wxyz}

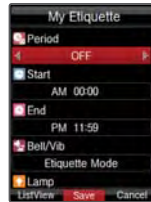

Bell/Vib Setting

- | | |
|------------------------------|---|
| Bell to Vib | : Same as etiquette mode setting (See page 61 for Setting Etiquette Mode.) |
| Only Alarm Bell & Alarm Tone | : Alarm Bell/Vib setting is applied to only the following cases such as Alarm Bell, Schedule, Anniversary Date, D-Day, Meeting Planner. (See page 61 for Selecting Bell/Vib.) |
| Bell & Vib OFF | : No Bell and no vibration. |

- **[E]** is displayed on the standby screen at a time zone when my etiquette mode is set.
- If an earpiece is connected, sound is heard from earpiece.
- If a starting time corresponds to an ending time, you cannot set My Etiquette Mode.
- Some supplementary contents may not be applied to My Etiquette Mode.
- My Etiquette Mode is not applied to Morning Call, Emergency Message Alarm (See page 61 for Emergency Message?) and camera shutter tone.




06 Setting Display

1. Setting Internal Screen	67
2. Setting External Screen	68
3. Setting Internal Standby Screen	68
4. Setting External Standby Screen	69
5. Changing Banner	70
6. Setting Menu Type	70
7. Setting Dial Type	71
8. Setting Backlit	71

1. Setting Internal Screen

You can change the graphic displayed on your internal screen according to the state of your phone such as 'standby screen', 'calling', 'power on', 'power off' and 'connecting NATE'.

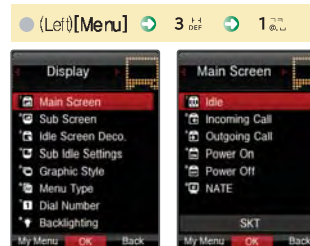

- There are a basic screen, flash screen, color, my gallery, photo box, movie box, live screen, and picture pal.
- You can download up to 200 graphics depending on the memory capacity after connecting NATE. (See page 49 for Connecting NATE.)
- You can check the downloaded graphics even from 'PicturePal' of 'Contents Store Box' or 'Phone Theme' of '@Playon'.

- Upon setting graphics, you can set the photos stored in the photo box or movies of the movie box to the internal screen. You can take a photo immediately by pressing ● (Right)[Photographing] and apply photos or movies to the screen immediately.

1. Downloading Graphic

- You can download graphics by pressing ● [Access] on the graphic screen to be set.

2. Deleting Graphic

- To delete a downloaded graphic, select a graphic and press ● [Delete].


Note

When setting a downloaded graphic to screen, it may be displayed slowly on the screen depending on graphic capacity.



2. Setting External Screen


You can change the graphic displayed on your external screen according to the state of your phone such as 'standby screen', 'called', 'calling', 'power on', 'power off'.

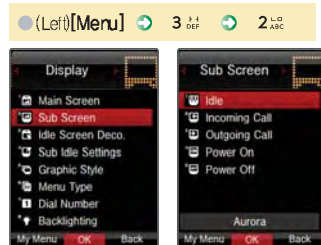

- There are a basic screen, flash screen, color and photo box.
- Upon setting each screen, you can set the photos stored in the photo box to the external screen. You can take a photo by pressing ●(Right)[Photographing] and apply photos to the screen immediately.

3. Setting Internal Standby Screen


You can set the 'clock type', 'date/time color', 'world clock', 'direction key', 'screen text', 'text location' and 'text color' to be displayed on the internal standby screen.

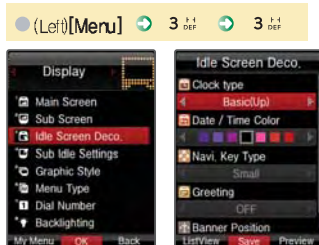

- If the standby screen is set to flash screen (flash clock 1~7) at the internal screen setting menu, the clock type is set to flash clock (1~7) automatically. (See page 67 for Setting Internal Screen.)

4. Setting External Standby Screen

You can set the 'Clock type', 'Date/time color', 'World clock', 'Screen text', 'Text color' to be displayed on the external standby screen.

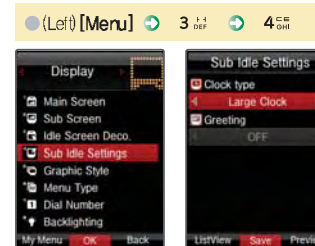


- If you press ●(Right)[Preview], you can check the screen to set in advance.
- You can select a city for each country when setting a world clock from the clock type.
- You can select a date/time color when setting a small clock from a clock type.

Clock Type	: You can set the display method of date, time and calendar on the standby screen (Basic up/down, Large clock up/middle/down, Large Analog dock, Calendar up/down, 3 Month Calendar up/down, World Clock 1~2, Clock/Calendar Cancel, Flash Clock (1~7))
Date/Time Color	: You can set the color of date and time displayed on the internal standby screen. (Applicable clock type: Basic up/down)
World Clock	: You can set to display a time for a city in your mind out of world 49 main cities to the internal standby screen. (Applicable clock type: World dock 1~2)
Navi. Key Type	: You can set the method of displaying a menu hot key on the internal standby screen
Greeting	: You can enter and display a desired text on the standby screen and indicate a saved D-day there.
Banner Position	: You can decide the location where the content of text message or D-day to be displayed on the internal standby screen. (Applicable clock type: Clock/calendar cancel, Basic up, Large dock middle/down, Calendar up/down, Flash clock (1~7))
Banner Color	: You can set the color of text message when entering it.



5. Changing Banner

You can change styles to be displayed on the screen such as 'Theme', 'Font', 'Font size', 'Font color', 'Screen background', 'Background transparency' and 'Control transparency'.

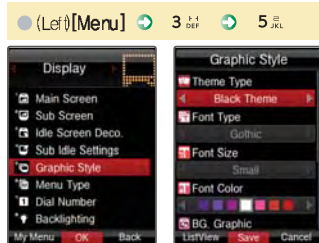

- You can check and set a detailed list by pressing (Left)[List Viewing]/[Color].


How to download font or flash menu

1. Visit the Motorola homepage (www.mymotorola.co.kr), download the PC Sync program, and install it to PC.
2. Execute the PC Sync program, select [Setting Phone], and click [Font] or [Flash Menu].
3. If you select a desired font or flash menu and click [Import to Phone], your selected data will be saved in the cell phone.

※ If you want more various fonts or menu types (flash menu), please visit the Motorola homepage (www.mymotorola.co.kr) and download fonts or menu types.

6. Setting Menu Type


You can change the method of displaying menus on the screen. And also you can change a menu type by pressing (Left)[Convert] from the menu selection mode.

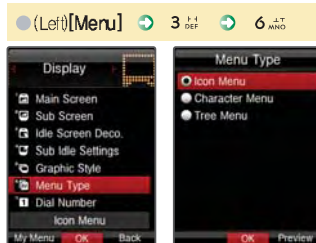

- You can check a menu type in advanced by pressing (Right)[Preview].

7. Setting Dial Type


When you enter numbers on the standby screen, you can set their styles on the screen.

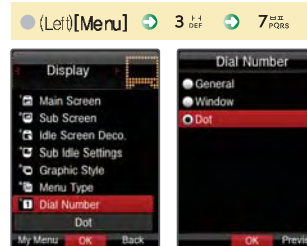

- If you press (Right)[Preview] during setting, you can check number styles to set in advance.
- You can change numeric styles by pressing || (Camera button), when you enter a number on the standby screen.

8. Setting Backlit

You can set the internal or external lighting time for the screen, backlit time for during a call, backlit time for the keypad and brightness of external screen.

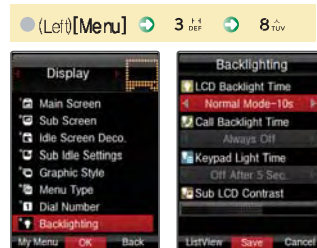

- If you do not use the phone within the configured lighting time after opening folder, the screen goes to the screen saver mode and the light goes turned off.

