

 


MOTORAZRTM VE66


User's Guide


HELLOMOTO

Introducing your new **MOTORAZR™** VE66 GSM wireless phone. Here's a quick anatomy lesson.

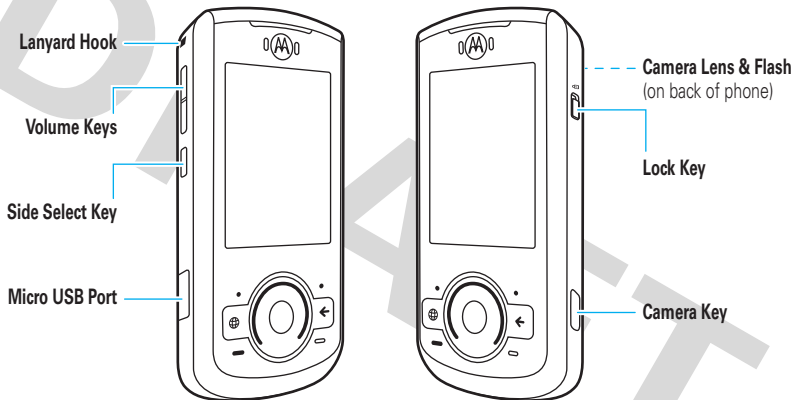


Home Screen

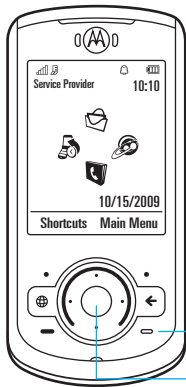 

1 Press & hold  until the display lights up.

2 Press  to open the **Main Menu**.

 Main Menu

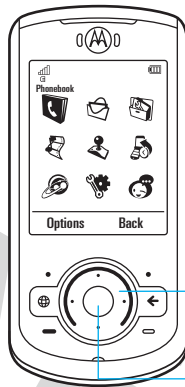

3 Press  up/down/left/right to scroll to a menu feature.

4 Press  to select it.

Note: This is the standard home screen and main menu layout. **Your phone's home screen and main menu may be different.** To change your home screen shortcuts and main menu appearance, see your *Quick Start Guide*.

Motorola, Inc.
Consumer Advocacy Office
1307 East Algonquin Road
Schaumburg, IL 60196

www.hellomoto.com

1-800-331-6456 (United States)
1-888-390-6456 (TTY/TDD United States for hearing impaired)
1-800-461-4575 (Canada)

Certain mobile phone features are dependent on the capabilities and settings of your service provider's network. Additionally, certain features may not be activated by your service provider, and/or the provider's network settings may limit the feature's functionality. Always contact your service provider about feature availability and functionality. All features, functionality, and other product specifications, as well as the information contained in this user's guide are based upon the latest available information and are believed to be accurate at the time of printing. Motorola reserves the right to change or modify any information or specifications without notice or obligation.

MOTOROLA and the Stylized M Logo are registered in the US Patent & Trademark Office. The Bluetooth trademarks are owned by their proprietor and used by Motorola, Inc. under license. Java and all other Java-based marks are trademarks or registered trademarks of Sun Microsystems, Inc. in the U.S. and other countries. Microsoft and Windows are registered trademarks of Microsoft Corporation; and Windows XP and Windows Media are trademarks of Microsoft Corporation. Macintosh is a registered trademark of Apple Computer, Inc.  is a Certification Mark of the Wireless Fidelity Alliance,

Inc. All other product or service names are the property of their respective owners.

© 2008 Motorola, Inc. All rights reserved.

Caution: Changes or modifications made in the radio phone, not expressly approved by Motorola, will void the user's authority to operate the equipment.

Software Copyright Notice

The Motorola products described in this manual may include copyrighted Motorola and third-party software stored in semiconductor memories or other media. Laws in the United States and other countries preserve for Motorola and third-party software providers certain exclusive rights for copyrighted software, such as the exclusive rights to distribute or reproduce the copyrighted software. Accordingly, any copyrighted software contained in the Motorola products may not be modified, reverse-engineered, distributed, or reproduced in any manner to the extent allowed by law. Furthermore, the purchase of the Motorola products shall not be deemed to grant either directly or by implication, estoppel, or otherwise, any license under the copyrights, patents, or patent applications of Motorola or any third-party software provider, except for the normal, non-exclusive, royalty-free license to use that arises by operation of law in the sale of a product.

Manual Number: 68XXXXX296-A

contents

Safety Information	6	lock & unlock phone	25	handsfree	36
FCC Notice	10	lock your SIM card		answer options	36
Use and Care	11	or applications	25	call times & costs	37
EU Conformance	12	personalize	26	more calling features	38
Recycling Information	13	alert styles	26	text entry	42
get started	14	time & date	27	word mode	43
about this guide	14	themes	28	abc mode	44
battery	14	display appearance	30	numeric mode	45
basics	18	more personalizing features	31	symbol mode	45
display	18	calls	33	entertainment	46
volume	21	voice quality	33	browser	46
side select key	21	turn off a call alert	33	fun & games	48
voice commands	21	recent calls	33	messages	49
talking phone	23	redial	34	voicemail	49
handsfree speaker	24	return a call	34	text messages	49
codes & passwords	24	caller ID	35	instant messaging	51
		emergency calls	35	more message features	52

tools	55
contacts	55
personal organizer	58
connections	62
Bluetooth® wireless	62
WiFi Internet connection ...	66
cable connections	70
sync	72
file manager	73
phone software updates ...	75
service & repairs	76
SAR Data	77
WHO Information	78
Privacy and Data Security ...	78
OSS Information	79
Driving Safety	79
index	81

Safety and General Information

This section contains important information on the safe and efficient operation of your mobile device. Read this information before using your mobile device.

Exposure to Radio Frequency (RF) Energy

Your mobile device contains a transmitter and receiver. When it is ON, it receives and transmits RF energy. When you communicate with your mobile device, the system handling your call controls the power level at which your mobile device transmits.

Your Motorola mobile device is designed to comply with local regulatory requirements in your country concerning exposure of human beings to RF energy.

Operational Precautions

For optimal mobile device performance, and to be sure that human exposure to RF energy does not exceed the guidelines set forth in the relevant standards, always follow these instructions and precautions.

Product Operation

When placing or receiving a phone call, hold your mobile device just like you would a landline phone.

If you wear the mobile device on your body, always place the mobile device in a Motorola-supplied or approved clip, holder, holster, case, or body harness. If you do not use a body-worn accessory supplied or approved by Motorola—or if you hang your mobile device from a

lanyard around your neck—keep the mobile device and its antenna at least 2.5 centimeters (1 inch) from your body when transmitting.

Using accessories not supplied or approved by Motorola may cause your mobile device to exceed RF energy exposure guidelines. For a list of Motorola-supplied or approved accessories, visit our Web site at:

www.motorola.com

RF Energy Interference/Compatibility

Nearly every electronic device is subject to RF energy interference from external sources if inadequately shielded, designed, or otherwise configured for RF energy compatibility. In some circumstances your mobile device may cause interference with other devices.

Follow Instructions to Avoid Interference Problems

Turn off your mobile device in any location where posted notices instruct you to do so.

In an aircraft, turn off your mobile device whenever instructed to do so by airline staff. If your mobile device offers an airplane mode or similar feature, consult airline staff about using it in flight.

Implantable Medical Devices

If you have an implantable medical device, such as a pacemaker or defibrillator, consult your physician before using this mobile device.

Persons with implantable medical devices should observe the following precautions:

- ALWAYS keep the mobile device more than 20 centimeters (8 inches) from the implantable medical device when the mobile device is turned ON.
- DO NOT carry the mobile device in the breast pocket.
- Use the ear opposite the implantable medical device to minimize the potential for interference.
- Turn OFF the mobile device immediately if you have any reason to suspect that interference is taking place.

Read and follow the directions from the manufacturer of your implantable medical device. If you have any questions about using your mobile device with your implantable medical device, consult your healthcare provider.

Driving Precautions

The use of wireless phones while driving may cause distraction. Discontinue a call if you can't concentrate on driving.

Additionally, the use of wireless devices and their accessories may be prohibited or restricted in certain areas. Always obey the laws and regulations on the use of these products.

Responsible driving practices can be found in the "Smart Practices While Driving" section in this guide (or separate guide).

Operational Warnings

Obey all posted signs when using mobile devices in public areas.





Potentially Explosive Atmospheres



Areas with potentially explosive atmospheres are often, but not always, posted and can include fueling areas, such as below decks on boats, fuel or chemical transfer or storage facilities, or areas where the air contains chemicals or particles, such as grain dust, or metal powders.

When you are in such an area, turn off your mobile device, and do not remove, install, or charge batteries. In such areas, sparks can occur and cause an explosion or fire.

Symbol Key

Your battery, charger, or mobile device may contain symbols, defined as follows:

Symbol	Definition
	Important safety information follows.
	Do not dispose of your battery or mobile device in a fire.
	Your battery or mobile device may require recycling in accordance with local laws. Contact your local regulatory authorities for more information.
	Do not throw your battery or mobile device in the trash.

Symbol	Definition
	Do not let your battery, charger, or mobile device get wet.
	Listening at full volume to music or voice through a headset may damage your hearing.

Batteries & Chargers

Caution: Improper treatment or use of batteries may present a danger of fire, explosion, leakage, or other hazard. For more information, see the “battery use & safety” section in the user’s guide.

Keep Your Mobile Device and Its Accessories Away From Small Children

These products are not toys and may be hazardous to children. For example:

- A choking hazard may exist for small, detachable parts.
- Improper use could result in loud sounds, possibly causing hearing injury.
- Improperly handled batteries could overheat and cause a burn.

Glass Parts

Some parts of your mobile device may be made of glass. This glass could break if the product is dropped on a hard surface or receives a

substantial impact. If glass breaks, do not touch or attempt to remove. Stop using your mobile device until the glass is replaced by a qualified service center.

Seizures/Blackouts

Some people may be susceptible to epileptic seizures or blackouts when exposed to flashing lights, such as when playing video games. These may occur even if a person has never had a previous seizure or blackout.

If you have experienced seizures or blackouts, or if you have a family history of such occurrences, please consult with your physician before playing video games or enabling a flashing-lights feature (if available) on your mobile device.

Discontinue use and consult a physician if any of the following symptoms occur: convulsion, eye or muscle twitching, loss of awareness, involuntary movements, or disorientation. It is always a good idea to hold the screen away from your eyes, leave the lights on in the room, take a 15-minute break every hour, and stop use if you are tired.

Caution About High Volume Usage



Warning: Exposure to loud noise from any source for extended periods of time may affect your hearing. The louder the volume sound level, the less time is required before your hearing could be affected. To protect your hearing:

- Limit the amount of time you use headsets or headphones at high volume.

- Avoid turning up the volume to block out noisy surroundings.
- Turn the volume down if you can't hear people speaking near you.

If you experience hearing discomfort, including the sensation of pressure or fullness in your ears, ringing in your ears, or muffled speech, you should stop listening to the device through your headset or headphones and have your hearing checked.

For more information about hearing, see our Web site at www.motorola.com/hearingsafety (in English only).

Repetitive Motion

When you repetitively perform actions such as pressing keys or entering finger-written characters, you may experience occasional discomfort in your hands, arms, shoulders, neck, or other parts of your body. If you continue to have discomfort during or after such use, stop use and see a physician.

[Mar0108]

FCC Notice to Users

The following statement applies to all products that have received FCC approval. Applicable products bear the FCC logo, and/or an FCC ID in the format FCC-ID:xxxxxx on the product label.

Motorola has not approved any changes or modifications to this device by the user. Any changes or modifications could void the user's authority to operate the equipment. See 47 CFR Sec. 15.21.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. See 47 CFR Sec. 15.19(3).

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Use and Care

To care for your Motorola phone, please keep it away from:



liquids of any kind

Don't expose your phone to water, rain, extreme humidity, sweat, or other moisture. If it does get wet, don't try to accelerate drying with the use of an oven or dryer, as this may damage the phone.



dust and dirt

Don't expose your phone to dust, dirt, sand, food, or other inappropriate materials.



extreme heat or cold

Avoid temperatures below 0°C/32°F or above 45°C/113°F.



cleaning solutions

To clean your phone, use only a dry soft cloth. Don't use alcohol or other cleaning solutions.



microwaves

Don't try to dry your phone in a microwave oven.



the ground

Don't drop your phone.

 
European Union Directives Conformance Statement



[France Only]

Hereby, Motorola declares that this product is in compliance with:

- The essential requirements and other relevant provisions of Directive 1999/5/EC
- All other relevant EU Directives

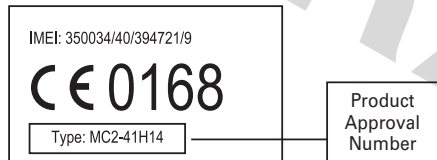

The above gives an example of a typical Product Approval Number.

You can view your product's Declaration of Conformity (DoC) to Directive 1999/5/EC (to R&TTE Directive) at www.motorola.com/rtte. To find your DoC, enter the Product Approval Number from your product's label in the "Search" bar on the Web site.

Caring for the Environment by Recycling



This symbol on a Motorola product means the product should not be disposed of with household waste.

Disposal of your Mobile Device and Accessories

Please do not dispose of mobile devices or electrical accessories (such as chargers, headsets, or batteries) with your household waste. These items should be disposed of in accordance with the national collection and recycling schemes operated by your local or regional authority. Alternatively, you may return unwanted mobile devices and electrical accessories to any Motorola Approved Service Center in your region. Details of Motorola approved national recycling schemes, and further information on Motorola recycling activities can be found at:

www.motorola.com/recycling

Disposal of your Mobile Device Packaging and User's Guide

Product packaging and user's guides should only be disposed of in accordance with national collection and recycling requirements. Please contact your regional authorities for more details.




 


get started

about this guide

This guide shows how to locate a menu feature as follows:

Find it:  >  **Multimedia** > **Camera**

This means that, from the home screen:

- 1 Press the *center key*  to open the menu.
- 2 Press the *navigation key*  to scroll to  **Multimedia**, and press  to select it.
- 3 Press  to scroll to **Camera**, and press  to select it.

This guide uses the following symbols:

symbols



This means a feature is network, SIM card, or subscription dependent and may not be available in all areas. Contact your service provider for more information.



This means a feature requires an optional accessory.

battery

battery charging notes

For instructions on charging the battery, see your *Quick Start Guide*.

Notes for charging your phone's battery:

- When charging your battery, keep it near room temperature. Never expose batteries to temperatures below 0°C (32°F) or above 45°C (113°F) when charging.
- New batteries are not fully charged.
- New batteries or batteries stored for a long time may take more time to charge.
- Motorola batteries and charging systems have circuitry that protects the battery from damage from overcharging.

Note: You can charge your battery by connecting a cable from your phone's micro USB port to a USB port on a computer. Both your phone and the computer must be turned on, and your computer must have the correct software drivers installed. A Motorola Original USB cable and supporting software



may be included with your phone. These tools are also sold separately.

battery use & safety

IMPORTANT: HANDLE AND STORE BATTERIES PROPERLY TO AVOID INJURY OR DAMAGE. Most battery issues arise from improper handling of batteries, and particularly from the continued use of damaged batteries.

DON'Ts

- **Don't disassemble, crush, puncture, shred, or otherwise attempt to change the form of your battery.**
- **Don't let the phone or battery come in contact with water.** Water can get into the phone's circuits, leading to corrosion. If the phone and/or battery get wet, have them checked by your carrier or contact Motorola, even if they appear to be working properly.

- **Don't allow the battery to touch metal objects.** If metal objects, such as jewelry, stay in prolonged contact with the battery contact points, the battery could become very hot.
- **Don't place your battery near a heat source.** Excessive heat can damage the phone or the battery. High temperatures can cause the battery to swell, leak, or malfunction. Therefore:
 - Do **not** dry a wet or damp battery with an appliance or heat source, such as a hair dryer or microwave oven.
 - Avoid leaving your phone in your car in high temperatures.

DOs

- **Do avoid dropping the battery or phone.** Dropping these items, especially on a hard surface, can potentially cause damage.

- **Do contact your service provider or Motorola if your phone or battery has been damaged from dropping or high temperatures.**

IMPORTANT: USE MOTOROLA ORIGINAL PRODUCTS FOR QUALITY ASSURANCE AND SAFEGUARDS.

To aid consumers in identifying authentic Motorola batteries from non-original or counterfeit batteries (that may not have adequate safety protection), Motorola provides holograms on its batteries. Consumers should confirm that any battery they purchase has a "Motorola Original" hologram.

Motorola recommends you always use Motorola-branded batteries and chargers. Motorola mobile devices are designed to work with Motorola batteries. If you see a message on your display such as **Invalid Battery** or **Unable to Charge**, take the following steps:

- Remove the battery and inspect it to confirm that it has a "Motorola Original" hologram;

- If there is no hologram, the battery is not a Motorola battery;
- If there is a hologram, replace the battery and retry charging it;
- If the message remains, contact a Motorola Authorized Service Center.

Important: Motorola's warranty does not cover damage to the phone caused by non-Motorola batteries and/or chargers.

Warning: Use of a non-Motorola battery or charger may present a risk of fire, explosion, leakage, or other hazard.

PROPER AND SAFE BATTERY DISPOSAL AND RECYCLING

Proper battery disposal is not only important for safety, it benefits the environment. Consumers may recycle their used batteries in many retail or service provider

locations. Additional information on proper disposal and recycling may be found on the Web:

- www.motorola.com/recycling
- www.rbc.org/call2recycle/ (in English only)

Disposal: Promptly dispose of used batteries in accordance with local regulations. Contact your local recycling center or national recycling organizations for more information on how to dispose of batteries.

 
Warning: Never dispose of batteries in a fire because they may explode.




basics


display

The *home screen* appears when you turn on the phone.

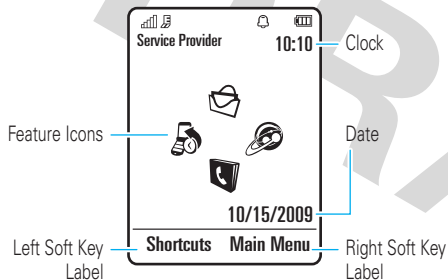




Note: Your home screen may look different, depending on your service provider.

To dial a number from the home screen, press number keys and .

Press the *center key*  or the **Main Menu** soft key to open the main menu.



Press **Shortcuts** in the home screen to access some frequently-used phone features.

Press the *navigation key*  up, down, left, or right in the home screen to open basic features. To show, hide, or change feature icons in the home screen, see your *Quick Start Guide*.




Tip: Want some help? Press  >  **Tools** > **Help**. Select a **Help** topic to find information about phone features.



Status indicators appear at the top of the home screen:








- 1 Signal Strength Indicator** – Shows the strength of the wireless network connection.
- 2 EDGE/GPRS Indicator** – Shows when your phone is using a high-speed *Enhanced Data for GSM Evolution* (EDGE) network connection , or *General Packet Radio Service* (GPRS) network connection .


- 3 Bluetooth/WiFi Indicator** – When Bluetooth power is turned on, the Bluetooth indicator shows Bluetooth status:


-  (solid blue) = Bluetooth powered on
-  (solid green) = Bluetooth connected
-  (flashing blue) = Bluetooth discoverable mode

The WiFi indicator  appears in red when WiFi power is turned on. The WiFi indicator turns green when your phone establishes a WiFi network connection through an access point. 

- 4 Messaging Presence Indicator** – Shows your instant messaging (IM) status: 

-  (green) = online
-  = offline
-  = busy
-  = discrete
-  (gray) = invisible to IM




5 **IM Indicator** – Shows when you receive a new IM message. 

6 **Message Indicator** – Shows when you receive a new text or voice message. Other indicators can include: 

 = text message  = voicemail message

message


 = email message

7 **Location Indicator** – Shows  when your phone is providing location information to the network, or  when location information is turned off. 

8 **Alert Style Indicator** – Shows the alert style setting:

 = ring loud




 = ring soft

 = ring and vibrate

 = vibrate then ring


 = vibrate only


 = silent

9 **Active Line Indicator** – Shows  to indicate an active call, or  to indicate when call forwarding is on. Indicators for dual-line-enabled SIM cards can include: 

 = line 1 active

 = line 2 active

 = line 1

 = line 2


call forward on

 
call forward on

10 **Battery Level Indicator** – Vertical bars show the battery charge level. Recharge the battery when your phone shows **Low Battery**.


volume


Press the *volume keys* to:

- turn off an incoming call alert
- change earpiece or speakerphone volume during a call
- change playback volume for a song or video
- change radio volume
- set your phone's alert style in the home screen (press the volume keys to scroll to an alert style, then press  or the side select key to select it)

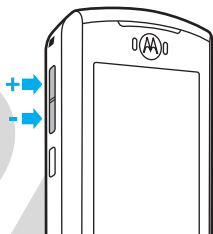

side select key

 The *side select key* gives you another way to do things. For example, when you scroll to a menu item, you can press the side select key to select it (instead of pressing .

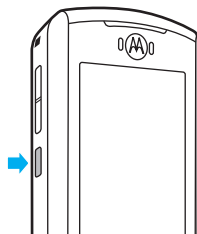


voice commands

You can use voice commands to tell your phone what to do.

Note: Not all languages support voice commands.

voice dial a call


You can dial a contact list entry by speaking its name, or dial any phone number by speaking its digits.

- 1 Press and hold . The phone loads the voice recognition software, then prompts you to say a command or name.
- 2 Wait for the beep, then say the **full name** of the contact as it appears in your contact list (for example, “John Smith”). Your phone confirms the name and makes the call.

or

Say “Dial Number.” Your phone prompts you to speak the digits in the phone number. Speak the digits. Your phone confirms the number and makes the call.

Tips:

- You can say a contact’s name and number type together. For example, say “John Smith mobile” to call the mobile number stored for John Smith.
- For voice command help, press and hold , then press **Help**.

voice activate phone functions

You can use voice commands to open applications and perform many basic phone functions.

- 1 Press and hold . The phone prompts you to say a command.
- 2 Wait for the beep, then say a command from the list.

voice commands
“<Name>”
“Dial Number”

voice commands
"Send Message To <Name>"
"Check Calendar"
"Check New Message"
"Check New Email"
"Add New Contact"
"Talking Phone"
"Check Battery"
"Check Signal"
"Check Time"
"Check Date"
"Open Setup"
"Open Recent Calls"
"Open Theme"
"Open Camera"
"Open Web Access"
"Set Ring Loud"
"Set Vibrate"
"Set Silent"

voice commands
"Set Airplane"
"Set Airplane Off"

Tip: Press and hold  to see the list of voice commands.

talking phone

You can set your phone to read the names of menu features or contact list entries, recite phone number digits you type in the home screen, and/or read text messages or email messages you receive (in English only).

Find it:  >  Settings > Phone Settings > Talking Phone

Shortcut: Press and hold . When the phone prompts you to say a command, say "Talking Phone."

handsfree speaker

During a call, press **Options > Speaker On** to turn the handsfree speaker on. Your display shows the speakerphone indicator until you turn it off (press **Options > Speaker Off**) or end the call.


Note: The use of wireless phones while driving may cause distraction. Discontinue a call if you can't concentrate on driving. Additionally, the use of wireless devices and their accessories may be prohibited or restricted in certain areas. Always obey the laws and regulations on the use of these products.

codes & passwords

Your phone's four-digit **unlock code** is originally set to **1234**. The six-digit **security code** is originally set to **000000**. If your service provider didn't change these codes, you should change them:

Find it:  >  **Settings > Security > Change Passwords**

You can also change your **SIM PIN** codes or call barring password.



If you forget your unlock code: At the **Please verify the Unlock Code** prompt, try entering 1234 or the last four digits of your phone number. If that doesn't work, press  to enter your six-digit security code instead.

If you forget other codes: If you forget your security code, SIM PIN code, PIN2 code, or call barring password, contact your service provider.

lock & unlock phone

You can lock your phone to keep others from using it. You must enter the four-digit unlock code to lock or unlock your phone.

To **manually lock** your phone:

Find it:  >  Settings > Security > Phone Lock > Lock Now

To **automatically lock** your phone whenever you turn it off:

Find it:  >  Settings > Security > Phone Lock
> Lock at Power On > On

lock your SIM card or applications

Note: You must enter your SIM PIN code to lock or unlock the SIM card. If you forget your PIN code, contact your service provider.

Caution: If you enter an incorrect PIN code three times before the correct code, your SIM card is disabled, and your display shows **SIM Blocked**.

To **lock or unlock your SIM card:**

Find it:  >  Settings > Security > SIM PIN Lock

To **lock an application** (such as Messages):

Find it:  >  Settings > Security > Application Lock

You must enter the four-digit unlock code to see the applications list. Select an application and choose **Lock** to lock it.

personalize

alert styles

You can quickly change your phone's alert style to match your activity or environment. Each alert style uses a different ringtone volume and/or vibrations to notify you of incoming calls and other events. The alert style indicator shows at the top of the home screen.

 Ring Loud

 Ring Soft

 Ring and Vibrate


 Vibrate then Ring

 Vibrate Only

 Silent

To change your alert style: From the home screen, press the volume keys on the side of your phone. Alternatively, from the home screen press **Shortcuts** > **Change Alert Style**.



The **Vibrate Only** and **Silent** alert styles silence your phone until you set another alert style.

Shortcut: From the home screen, press and hold  to quickly set the alert style to **Vibrate Only**.

change alert style settings

You can change the ringtones that notify you of incoming calls and other events. You can also change the keypad tone volume and slide tone. The changes you make are applied globally to all alert styles.





Find it:  >  **Settings** > **Sounds & Ringtones**

- 1 Press  up/down to scroll to the setting you want to change, then press .
- 2 Change the setting as desired.
- 3 Press **Back** to exit and save your changes.

create a new alert style


To create a **new** alert style with the ringtone volume and event notification characteristics you specify:

Find it:  >  Settings > Sounds & Ringtones > Ring Mode > Create Ring Mode

- 1 Press  up/down to scroll to the default alert style name, then press  to select it.
- 2 Change the alert style name as desired.
- 3 Press  up/down to scroll to the setting you want to change, then press  to select it.
- 4 Change the setting as desired.
- 5 Press **Save** to exit and save your changes.


edit or delete alert styles

To **edit** an alert style:

Find it:  >  Settings > Sounds & Ringtones > Ring Mode, scroll to the alert style, press **Options** > **Edit Ring Mode**

Note: You can't edit the **Vibrate Only** or **Silent** alert styles.

To **delete** a user-defined alert style:

Find it:  >  Settings > Sounds & Ringtones > Ring Mode, scroll to the alert style, press **Options** > **Delete Ring Mode**

time & date



Your phone can automatically update the time and date. It uses the time and date for the **Calendar**.



To **synchronize** time and date with the network:



Find it:  >  Settings > Phone Settings > Time & Date > Auto-Update Time > On

To **manually** set the time and date:

Find it:  >  Settings > Phone Settings > Time & Date > Auto-Update Time > Off, then scroll to and select Time and Date

To adjust time and date, press  left/right to scroll to a setting, then press  up/down to change it. Press **Set** to save your settings.



To show a **12-hour or 24-hour** digital clock in the home screen:

Find it:  >  **Settings** > **Phone Settings** > **Time & Date**
> **Time Format** > **12 Hour Clock** or **24 Hour Clock**

To set the **date format** in the home screen:


Find it:  >  **Settings** > **Phone Settings** > **Time & Date**
> **Date Format**

To set your **time zone**:

Find it:  >  **Settings** > **Phone Settings** > **Time & Date**
> **Time Zone**, then select a city in your time zone

Shortcut: Press keypad keys to enter the first letters of the city you want.

themes

Use a phone *theme* to personalize the look and sound of your phone. Most themes include a wallpaper image, screensaver image, and ringtones. 

To **apply** a theme:

Find it:  >  **Settings** > **Themes** > *theme*

To **download** a theme using your phone's browser, see page 46.

To **delete** a theme:



Find it:  >  **Settings** > **Themes**, scroll to the theme, then press **Options** > **Manage** > **Delete**

Note: You can delete only downloaded themes or custom themes you create.

preview ringtones

To preview the ringtones on your phone, and choose the ringtone a theme uses to notify you of incoming calls:



Find it:  >  **Settings** > **Themes**, press **Options** > **Edit** > **Ringtone** > **Ringtones** > **Sounds and Ringtones** > **Preloaded Ringtones**



- 1 Press  up/down to scroll and listen to each ringtone in turn.
- 2 Press  to select the highlighted ringtone.
- 3 Press **Save** to save your selection.

apply a photo as wallpaper

To use a photo as a background *wallpaper* image in your home screen:

Find it:  >  **Settings** > **Themes**, press **Options** > **Edit**

- 1 Press  right to select the **images** tab .





- 2 Press  down to scroll to **Wallpaper**, then press  to select it.
- 3 Scroll to the photo you want to use, then press **Select**.

Note: If the photo is stored on an installed memory card, select **Back to Pictures** > **Back to My Files** > **Memory Card** > **MyPhotos** to search for photos on the memory card.

- 4 Press **Save** to save your selection.

Photos that you copy to your phone from another device may not scale correctly when applied as wallpaper images. To **resize a wallpaper photo** so it displays at the correct size:








Find it:  >  **Settings** > **Themes**, press **Options** > **Edit**

- 1 Press  right to select the **images** tab .
- 2 Press  down to scroll to **Wallpaper Layout**, then press  to select it.

- 3 Scroll to **Fit-to-Screen**, then press **Select**.
- 4 Press **Save** to save the setting.

modify a theme

Find it:  >  **Settings** > **Themes**, scroll to the theme, press **Options** > **Edit**

- 1 Press  or  to select the **sounds** tab  or **images** tab .
- 2 Press  or  to scroll to the setting you want to change, then press .
- 3 Scroll to the image or sound file you want, then select it.
- 4 Press **Save** to save your theme changes.

The **Wallpaper** appears as a background image in your home screen.

The **Screensaver** appears in the display after a period of inactivity.

Skins set the look and feel of your phone's display.

To **reset** the standard settings for a modified theme:

Find it:  >  **Settings** > **Themes** > *theme*, press **Options** > **Manage** > **Reset**

To **restore** the default theme on your phone:

Find it:  >  **Settings** > **Themes**, press **Options** > **Manage** > **Restore to Default**

create a new theme

Find it:  >  **Settings** > **Themes**, press **Options** > **Create Theme** or **Create a Copy**

display appearance

To set your display **brightness**:

Find it:  >  **Settings** > **Display** > **Brightness**

To save battery life, the **display** turns off when you're not using your phone. To set the display timeout delay interval:

Find it:  >  Settings > Display > Backlight Timeout

The display **screensaver** appears briefly when the display timeout delay interval is reached. To turn the screensaver off:

Find it:  >  Settings > Display > Screensaver > None

Tip: To extend battery life, turn off the screensaver.

more personalizing features

features

language

Set menu language:

 >  Settings > Phone Settings > Language and Input > Language

reset settings

Reset default settings for all options **except** the unlock code, security code, and lifetime timer:

 >  Settings > Phone Settings > Reset > Reset All Settings

features

delete data

Caution: This option **erases all information you have entered** (including contacts and calendar entries) **and content you have downloaded** (including photos and sounds) stored in your phone's memory. After you erase the information, you can't recover it. This option does **not** delete SIM card or memory card information.

 >  Settings > Phone Settings > Reset > Delete All Data

features

delete memory card information

Caution: This option **erases all information you have entered** (including contacts and calendar entries) **and content you have downloaded** (including photos and sounds) stored on your memory card and/or SIM card. After you erase the information, you can't recover it.

 >  Settings > Phone Settings > Reset
> Delete Memory Cards

calls

voice quality

You can adjust audio settings for your phone's headset speaker, to optimize voice quality and clarity during a call.

Find it:  >  Settings > Call Settings > In-Call Setup > Voice Quality



Shortcut: During a call, press **Options** > **Voice Quality**.


turn off a call alert



Press the volume keys on the side of your phone to turn off the ringer before answering a call.




recent calls



Your phone keeps lists of incoming and outgoing calls, even for calls that didn't connect. The most recent calls are listed first. The oldest calls are deleted as new calls are added.

Find it:  >  Recent Calls



Shortcut: Press  from the home screen to go to the **All Calls** list.



- 1 Press  left/right to select a call list: **All Calls**, **Dialed Calls**, **Answered Calls**, **Missed Calls**, or **Frequent Calls**.
- 2 Press  up/down to scroll to a phone number.

Icons indicate if the call was incoming , outgoing , or missed . A check mark next to the icon indicates a connected call.

- To call the number, press .
- To check if a missed call left you a voicemail message, see page 49.
- To see call details (like time and date), press .
- Press **Options** to perform other operations on the number (send a message, save to contacts), or to set recent call options.




redial

- 1 Press  in the home screen to go to the **Dialed Calls** list.
- 2 Scroll to the number you want to call, then press .

If you hear a **busy signal** and see **Call Failed**, press  or **Retry** to redial the number. When the call goes through, your phone shows **Connected** and connects the call. 

return a call

Your phone keeps a record of your unanswered calls, and shows a list of the calls you've missed.

When you see the missed calls list, press  to scroll to a call, then press  to see call information. To return the call, press .

caller ID

Calling line identification (caller ID) shows the phone number for an incoming call.



Your phone shows the caller's name and picture when they're stored in your contact list, or **Incoming Call** when caller ID information isn't available.

Note: Picture IDs aren't available for contacts stored on the SIM card.

Tip: Want to know who's calling without even looking at your phone? To give one of your contacts a special ringtone, see page 56.

To show or hide your phone number for the next outgoing call, enter the number you want to call, then press **Options > Show ID** or **Hide ID**.

To show or hide **your phone number** for all calls:


Find it:    **Settings > Call Settings > Dialing Setup > My Caller ID > All Calls > Show ID** or **Hide ID**

emergency calls

Your service provider programs one or more emergency phone numbers, such as 911 or 112, on your phone. Provided that the phone is switched on and in network coverage, you can make emergency calls using the programmed numbers, even when your phone is locked or the SIM card is not inserted (*where allowed by the network operator*).

Note: Check with your service provider, as emergency numbers vary by country. Your phone's pre-programmed emergency number(s) may not work in all locations, and sometimes an emergency call cannot be placed due to network, environmental, or interference issues. Do not solely rely on your wireless phone for essential communications, such as medical emergencies.

To make an emergency call: Turn your phone on, exit any open application such as games, dial the

emergency number, then press  to call the emergency number.

handsfree

Note: The use of wireless phones while driving may cause distraction. Discontinue a call if you can't concentrate on driving. Additionally, the use of wireless devices and their accessories may be prohibited or restricted in certain areas. Always obey the laws and regulations on the use of these products.

features

auto answer (headset)

Automatically answer calls when connected to a car kit or headset:

 >  Settings > Connections > Handsfree Settings
> Auto-Answer

features

voice dial (headset)

Enable voice dial with headset send/end key:

 >  Settings > Connections > Handsfree Settings > Voice Dial

answer options

You can use different ways to answer an incoming call. To turn on or turn off an answer option:

Find it:  >  Settings > Call Settings > In-Call Setup
> Answer Options


option

Any Key Answer Answer by pressing any key.




Open To Answer Answer by opening the slider.













Note: You can always press  to answer a call.

call times & costs

Network connection time is the elapsed time from the moment you connect to your service provider's network to the moment you end the call by pressing . This time includes busy signals and ringing.

The amount of network connection time you track on your resettable timer may not equal the amount of time for which you are billed by your service provider. For billing information, contact your service provider.

features
call times 
See call timers:
 >  Recent Calls, press Options > Call Times

features
in-call timer 
Show call time information during a call:
 >  Settings > Call Settings > In-Call Setup > In-Call Timer
call costs 
See call cost trackers and credit information:
 >  Recent Calls, press Options > Call Costs
call cost setup 
Set a credit limit:
 >  Recent Calls, press Options > Call Costs > Call Cost Setup
data times 
See data call timers:
 >  Recent Calls, press Options > Data Times

features

data volumes



See data volume meters:

 >  Recent Calls, press **Options** > **Data Volumes**



more calling features

To use voice commands for calling, see page 21.

features

speed dial

Your phone can store nine phone numbers that you can call with a single keypress. To **store** a speed dial phone number:

 >  Phonebook, press **Options** > **Settings** > **Speed Dial List**
> *speed dial location*

To **call** a speed dial number from the home screen, press and hold the single-digit speed dial number for one second.

features

international calls



If your phone service includes international dialing, press and hold **0** to insert your local international access code (indicated by +). Then, press number keys to dial the country code and phone number.

hold a call

Press **Options > Hold** to put all active calls on hold.

mute a call

Press **Options > Mute** to put all active calls on mute.

features

call waiting



When you're on a call, you'll hear an alert if you receive a second call. Press **[-]** to answer the new call.

- To switch between calls, press **Switch**.
- To connect the two calls, press **Link**.
- To end the call on hold, press **Options > End Call On Hold**.

To turn call waiting on or off:

[Phone Icon] > **[Gear Icon]** **Settings > Call Settings > In-Call Setup > Call Waiting > On or Off**

conference call



During a call:

Dial next number, press **[-]**, press **Options > Link Calls**

features

transfer a call





During a call:

Dial next number, press , press **Options > Transfer Call**

call forwarding



Set up call forwarding:

 >  **Settings > Call Settings > Call Forward > Voice Calls > Forward Calls > All Calls or If Unavailable**, select **To**, then specify the forwarding number

Cancel call forwarding:

 >  **Settings > Call Settings > Call Forward > Cancel All**

Note: The **Cancel All** option cancels all call forwarding, including data and fax calls.

blocked callers



Block various types of incoming calls:

 >  **Settings > Call Settings > In-Call Setup > Blocked Callers**

features

TTY calls



Note: A teletypewriter (TTY) is a communication device used by people who are hard of hearing or have a speech impairment. TTY does not work from mobile phone to mobile phone.

Set up your phone for use with an optional TTY device:

 >  **Settings > Call Settings > In-Call Setup > TTY Settings > TTY**

change phone line



If you have a dual-line-enabled SIM card, you can change your line to make and receive calls from your other phone number:

 >  **Settings > Call Settings > Active Line**

The active line indicator shows the active phone line (see illustration on page 20).

features

network settings



See network information and adjust network settings:

 >  **Settings** > **Network Settings**

fixed dial



When you turn on fixed dialing, you can call only numbers stored in the fixed dial list.

Note: You must enter your SIM PIN2 code to turn fixed dialing on or off. If you forget your PIN2 code, contact your service provider.

Turn fixed dialing on or off:

 >  **Settings** > **Call Settings** > **Fixed Dialing** > **On or Off**

Use the fixed dial list:

 >  **Tools** > **Dialing Services** > **Fixed Dial**

features

service dial



Dial service phone numbers stored by your service provider:

 >  **Tools** > **Dialing Services** > **Service Dial**

DTMF tones

 
Activate DTMF tones:

 >  **Settings** > **Call Settings** > **Dialing Setup** > **DTMF** > **Long** or **Short**

To send DTMF tones during a call, just press the number keys.

text entry

Some features let you enter text.

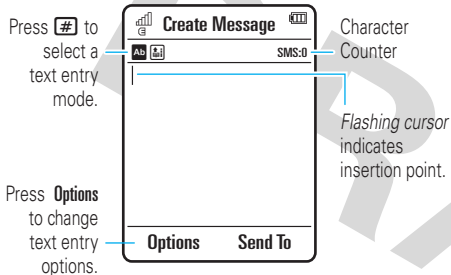


text entry modes


Ab	“word” mode (see page 43)
Ab	“abc” mode (see page 44)
123	numeric mode (see page 45)
[#]	symbol mode (see page 45)




To **change** your global text entry language:

Find it:  >  Settings > Phone Settings > Language and Input > Default Input Language


 
Change text case: In a text entry screen, press **[0]** to change text case to all capital letters (**[A]**), next letter capitalized (**[a]**), or next letter lowercase (no symbol).

Set word learning: Your phone can learn the words you enter, to improve text prediction and completion. In a text entry screen, press **Options > Text Entry > Set Text Prediction > Learn My Words**. Your phone shows  when word learning is active.

Set text completion: Set your phone to complete words based on the characters you enter. In a text entry screen, press **Options > Text Entry > Set Text Prediction > Offer Completions**. Your phone shows  when text completion is active.


Edit or delete text: In a text entry screen, press  to move the cursor to the right of text you want to edit. Press the *clear/back key*  to delete the character left of the cursor. Hold  to delete word by word.


word mode



To switch to “word” predictive text entry mode, press  in a text entry screen until you see  in the display.

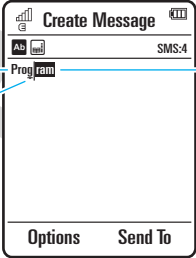

Word mode lets you enter words using one keypress per letter. The phone predicts each word as you enter it.


For example, if you press    , your display might show:



Press  to enter **Prog** & a space.

Press  up/down to see other words. Press  right to select a word.

You can turn text completion on () or off ().

Press  to delete character to left of cursor.

The screenshot shows a 'Create Message' screen with a signal strength indicator, a 'G' icon, and a battery icon. The text 'Program' is entered, and a prediction bar above it shows 'Ab' and a text completion icon. Below the text are 'Options' and 'Send To' buttons. A status bar at the top right shows 'SMS:4'.

 
Tip: Need to enter a symbol or punctuation? Press **#** until you see **[@]** to switch to symbol mode (for more information, see page 45).

abc mode

To switch to “abc” text entry mode, press **#** in a text entry screen until you see **[Ab]** in the display.

To enter text, press a keypad key repeatedly to cycle through the letters and number on the key. Repeat this step to enter each letter.

For example, if you press **7** one time, your display might show:

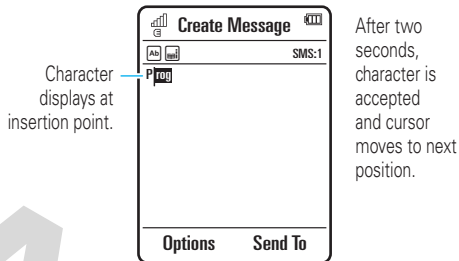

When text completion is activated, your phone tries to guess the rest of the word:

- Press **••** to select the suggested word.
- Press **•◂** right to enter the suggested word and a space.
- If you want a different word, press keypad keys to enter the remaining letters.

Shortcut: To enter punctuation in abc mode, you can press **1** to cycle through an assortment of commonly used punctuation symbols.

numeric mode

Press **#** in a text entry screen until you see **123**. Press the number keys to enter the numbers you want.

Tip: Just need one number? To enter a number quickly, press and hold a number key until the number appears.

symbol mode



Press **#** in a text entry screen until you see **@**. The display shows the symbol associated with each keypad key. Press **↻** up/down repeatedly to see different symbols. To insert a symbol, press its key, or scroll to it and press **⬇**.

entertainment

browser

Use your phone's full HTML browser to surf to your favorite Web sites, upload videos to a video blog, and download files and applications to your phone. Log on to your Internet-based email account to check your email on the go.

Find it: Press 

Press  up/down/left/right to scroll through Web pages. Scroll to a link and press  to select it. Press **Back** at any time to return to the previous screen.

Some Web pages may contain a text entry window for exchanging information with a Web site. Scroll to the window, select it, and enter text as usual (for information about entering text, see page 42).

To **go to a Web page**, press **Options** > **Go to**, enter the Web address, and press **Go**.

To **bookmark** the current Web page, press **Options** > **Active Page** > **Add Bookmark**.

To go to a **bookmarked Web page**, press **Options** > **My Bookmarks** > *bookmark*.

To **change the homepage** that appears when you open the browser, go to the Web page you want to use, then press **Options** > **Active Page** > **Use as Homepage**.

To **upload** a video to a video blog site, see your *Quick Start Guide*.

To **download** a media file, theme, or Java™ game or application to your phone, go to the page that links to the file, scroll to the link, and select it.






To **exit** the browser, press **Exit**.

perform a Google search

Use your phone's browser to perform a Web search by using the Google Web site.



Find it: Press 

- 1 Press **Options** > **My Bookmarks**.
- 2 Press  to scroll to the **Google** bookmark, and press  to select it.
- 3 Press  to select the Google text entry window.
- 4 Enter a search topic in the text entry window.
- 5 Press  down to scroll to the Google Search button, and press  to select it.

The browser shows the results of your search.

check your email

Check your personal Web-based **email** account (like Hotmail, Gmail, or Yahoo).



Find it: Press 

- 1 Press **Options** > **Go to**.
- 2 Enter the Web address for your Web-based email account, then press **Go**.

manage certificates

Enable or disable Internet access certificates stored on your phone.



Find it:  >  **Settings** > **Security** > **Certificates**

Certificates are used to verify the identity and security of Web sites when you download files or share information.

fun & games

features

start a game or application



Start a Java™ game or application:

 >  Games > *game or application*

airplane mode

Turn off your phone's WiFi features, Bluetooth wireless features, and calling features in locations where wireless phone use is prohibited. This lets you use the camera, music player, and other non-network features while you are on an airplane, without interfering with airplane communications.

 >  Settings > Phone Settings > Airplane Mode > On


To reactivate your phone's calling features, turn off airplane mode.

messages

voicemail


Your network stores the voicemail messages you receive. To listen to your messages, call your voicemail number.

Note: Your service provider may include additional information about using this feature.

When you **receive** a voicemail message, your phone shows **New Voicemail**, and the voicemail message indicator  appears at the top of the home screen.

To **check** voicemail messages:

Find it:  >  **Messaging** > **Voicemail**

Shortcut: Your service provider may store your voicemail phone number in speed dial location 1. If so, you can press and hold  in the home screen to listen to your voicemail message(s).



text messages

send a message

A message can contain text and pictures, sounds, or other media objects. You can add multiple pages to a message and put text and media objects on each page. You can send a message to other compatible phones or to email addresses.

Find it:  >  **Messaging** > **Messages** > **Create Message**

Shortcut: From the home screen, press **Shortcuts** > **Create Message**.



- 1 Press keypad keys to enter text on the page (to enter text, see page 42).

To insert a **picture, sound, or other media object** on the page, press **Options** > **Insert**. Select the file type






and the file. (**Note:** File size restrictions may apply to pictures and videos sent in a message.)

To insert **another page**, press **Options > Insert > Page**. You can enter more text and objects on the new page.

- 2 When you finish the message, press **Options > Sending Options** to set message options (such as **Subject** and **Priority**).
- 3 When you finish setting message options, press **Done**.
- 4 Press **Send To** to select message recipients. You can:
 - Select one or more entries from your contact list (press  to scroll to an entry, and press  to select it).
 - Enter a new number or email address (press **Options > Enter Number** or **Enter Email**).
- 5 Press **Send** to send the message.

Your phone might tell you that this is a multimedia message if it contains multiple pages or media objects. Some phones or networks don't support multimedia messages. Press **Yes** to send the message.

To save or cancel the message, press **Options > Save to Drafts** or **Cancel Message**.

Messages that you send are stored in the **Outbox**. Icons next to each message show if the message was **sent** , if the send attempt was **successful** , or if the send attempt **failed** . Press **Options** to perform various operations on a message.

receive a message

When you receive a text message, your phone plays an alert and shows **New Message**. The text message indicator  appears at the top of the home screen.



To **read** the message, press **View**. If the message contains media objects:



- Pictures and animations show as you read the message.
- Sound files play as you read the message. Press the volume keys on the side of your phone to change the sound volume.
- Attached files are added to the end of the message. To open an attachment, select the file indicator or file name.

To **answer** the message, press **Options > Reply**.

instant messaging

Use instant messaging to share messages with your friends in real time.



Find it:  >  **IM**, scroll to your IM account, press **Log In**

If you don't have an IM account, select **[New Account]** to create one.

To **find others** online, select **Contact List** to see a list of other users.

To **start a conversation**, scroll to a name in the **Online Contacts** list and press **Send IM**.

To **open an active conversation**, scroll to a name in the **Conversations** list and press **View**.

To end a conversation, press **Options > End Conversation**.



To **log out** from your instant messaging session, press **Options > Log Out**.

create or edit an IM account

To create a new IM account:

Find it:  >  IM > [New Account]

To edit an existing IM account:

Find it:  >  IM, scroll to an account, press **Options** > **Edit Account**

more message features

features

send a prewritten quick note

 >  **Messaging** > **Messages** > **Templates**
> **Text Templates** > *quick note*, press **Options** > **Send**

To create a new quick note:

 >  **Messaging** > **Messages** > **Templates** > **Text Templates**,
press **Options** > **Create Template**

features

set up an email account

You can set up and use multiple email accounts on your phone:

 >  **Messaging** > **Email**

If no account exists, the phone prompts you to set up a new email account.

Your phone shows a separate folder for each email account.

send email

 >  **Messaging** > **Email**

use a multimedia template

Open a multimedia template with pre-installed media:

 >  **Messaging** > **Messages** > **Templates** > **MMS Templates**

features


read new message or email







When your display shows **New Message**, press **View**.

read old messages




•◉ >  **Messaging** > **Messages** > **Conversations**

Icons next to each message show if it is **read** , **unread** , **urgent** , or has an **attachment** . Press **Options** to perform various operations on a message.

read old email



•◉ >  **Messaging** > **Email** > *email folder*

Press **Options** to perform various operations on a message.

features

store message objects




Go to a multimedia message page, then press **Options** > **Store**.

create folder



Create a personal folder to store your messages.

•◉ >  **Messaging** > **Messages** > **My Folders**, press **Options** > **Create Folder**

browser messages



Read messages received by your browser:

When your display shows **New Message**, press **View**.

To activate browser messages and adjust browser message settings:

•◉ >  **Messaging**, press **Options** > **Message Settings** > **Browser Messages**

features



info services



Read subscription-based information services messages:

When your display shows **New Message**, press **View**.

To activate information services and adjust info services settings:

 >  **Messaging**, press **Options** > **Message Settings**
> **Info Services**

tools

contacts

New contacts that you create are stored in both **phone memory** and on your **SIM card**. The contact information stored in phone memory can include multiple phone numbers, email addresses, and personal information. Only the contact name and phone number(s) are stored on the SIM card

features

call a contact

•◉ > ☎ Phonebook, scroll to the contact, press ☐ to call

Note: If a contact has multiple phone numbers or email addresses, press •◉ left/right to select the number or email address you want.

features

store new contact

•◉ > ☎ Phonebook, press Options > Create > Contact

Shortcut: From the home screen, press Shortcuts > Create Contact.

Press •◉ left/right to select the **details** tab ☐, **address** tab ☐, **ID** tab ☐, or **notes** tab ☐. Press •◉ up/down to scroll to information you want to change, then press •◉ to select it.

send message to contact

•◉ > ☎ Phonebook, scroll to the contact, press Options > Send > Message


features

send email to contact

•◂◃ > Phonebook, scroll to the contact, press **Options**
> **Send** > **Email**

Note: This option appears only when the contact has an email address.


add another phone number or email address to contact

•◂◃ > Phonebook, scroll to the contact, press **Options**
> **Edit Contact**, press ◂◃◂◃ left/right to select the **details**
tab , press ◂◃◂◃ up/down to scroll to an empty
Number or **Email** field, press ◂◃◂◃ to select it

features


set picture ID for contact

Assign a photo or picture (*picture ID*) to show in the display when you receive a call from a contact:

•◂◃ > Phonebook, scroll to the contact, press **Options**
> **Edit Contact**, press ◂◃◂◃ left/right to select the **ID**
tab , press ◂◃◂◃ up/down to scroll to **Picture ID**, press
◂◃◂◃ to select it

set ring ID for contact

Assign a distinctive call alert (*ring ID*) for a contact:

•◂◃ > Phonebook, scroll to the contact, press **Options**
> **Edit Contact**, press ◂◃◂◃ left/right to select the **ID**
tab , press ◂◃◂◃ up/down to scroll to **Ringtone**, press
◂◃◂◃ to select it

features

create group

Add contacts to a group message list or email list:

•◉ > ☎ Phonebook, press **Options** > **Create** > **Group**

create and use private contacts

Identify one or more contacts as private contacts. You must enter your six-digit security code to see the private contacts on your contact list.

•◉ > ☎ Phonebook, press **Options** > **Setup** > **Private Contacts**

set contact list sort order

•◉ > ☎ Phonebook, press **Options** > **Settings**
> **Default Sort Order** > **First Name** or **Last Name**

features

manage SIM card contacts

•◉ > ☎ Phonebook, press **Options** > **Settings**
> **SIM Card Manager**

Delete contacts stored on your SIM card, or import contact to the SIM card from phone memory, or from another location.

copy SIM card contacts to phone memory

Press •◉ > ☎ Phonebook, press **Options** > **Import Contacts**
> **SIM Card**, press **Options** > **Select All**, press **Import**.

copy phone memory contacts to SIM card




 
Press •◉ > ☎ Phonebook, press **Options** > **Settings**
> **SIM Card Manager**, press **Options** > **Import Contacts**
> **Phone Contacts**, press **Options** > **Select All**, press **Import**.

personal organizer

features

send contact(s) to another device




Send one or more contacts to another phone, computer, or device:

 >  **Phonebook**, scroll to the contact, press **Options** > **Share**, press  to select the current contact, press  up/down to scroll to **Bluetooth**, **Messaging**, or **Email** transfer method, press **Select** to select it.

To send multiple contacts, press **Options** > **Share** > **Multiple Contacts** (instead of the current contact).

delete contact(s)

Delete one or more contacts from your contact list:

 >  **Phonebook**, scroll to the contact, press **Options** > **Delete**, press  to select the current contact, press **Yes** to confirm deletion.

To delete multiple contacts, press **Options** > **Delete** > **Multiple Contacts** (instead of the current contact).


features

set alarm

 >  **Tools** > **Alarm Clock**

turn off alarm

When the display shows an alarm:

To turn off the alarm, press **Dismiss** or .


To set an eight-minute delay, press **Snooze**.

set calendar default view

 >  **Tools** > **Calendar**, press **Options** > **Calendar Setup** > **Default View** > **Month** or **Week** or **Day**


features

add new calendar event

⦿ >  **Tools** > **Calendar**, scroll to the day and/or start time, press ⦿, enter event details

You can set a music or sound file, voice note, or video as an event reminder alert. When creating a calendar event, select **Calendar Alert** > *alarm type*, scroll to the file (or create a new file), press **Insert**.

see calendar event

⦿ >  **Tools** > **Calendar** > *event*

To edit event details, press **Options** > **Edit**.

calendar event reminder

When the display shows an event reminder (and optionally plays an event reminder alert):


To see reminder details, select **Open Event**.

To close the reminder, press **Dismiss**.

features

send calendar event to another device

Send a calendar event to another phone, computer, or device:

⦿ >  **Tools** > **Calendar** > *event*, press **Options** > **Share via** > **Bluetooth** or **Message** or **Email**

manage downloaded files

Manage files and applications that you've downloaded onto your phone from the browser or over a Bluetooth® connection:

⦿ >  **Tools** > **Download Manager**

world clock

Show time and date information for multiple cities around the world:

⦿ >  **Tools** > **World Clock**

features

task list

Create a checklist of tasks you need to perform, and set your phone to notify you when task deadlines arrive:

 >  **Tools** > **Task List**

notes

Write and store notes on your phone:

 >  **Tools** > **Notes**

features

record voice note

Record a voice note reminder to yourself, or record a phone call in progress:

 >  **Multimedia** > **Voice Recorder**, press  to start recording, press **Stop** to stop recording

To save the voice note, press **Save**.

To perform various operations on the voice note, press **Options**.

Note: Recording of phone calls is subject to varying State and Federal laws regarding privacy and recording of phone conversations. Always obey the laws and regulations on the use of this feature.

features

play voice note

Play back a voice note you've recorded:


•◉ >  **Multimedia > Media Finder > Voice Notes**

> *voice note*

calculator

•◉ >  **Tools > Calculator**

To use the calculator as a currency converter:

•◉ >  **Tools > Calculator**, press **Options > Set Exchange Rate**, enter exchange rate, press **Set**, enter amount, press **Options > Convert Currency**

connections

Bluetooth® wireless

Your phone supports Bluetooth wireless connections. You can connect your phone with an optional Bluetooth headset or Bluetooth car kit to make handsfree calls, or with a set of Bluetooth stereo headphones to listen to music stored on your phone. Connect your phone with a device that supports Bluetooth connections to exchange files, connect with a printer that supports Bluetooth connections to print images, or use your phone as a Bluetooth wireless modem to connect to the Internet.



For maximum Bluetooth security, you should always connect Bluetooth devices in a safe, private environment.

turn Bluetooth power on & off

Your phone automatically turns Bluetooth power on when you use a Bluetooth feature.

To turn Bluetooth power on or off at any time:

Find it:  >  **Settings** > **Bluetooth**, press **Options**
> **Setup Bluetooth** > **Bluetooth Power** > **On** or **Off**

Note: To extend battery life and maximize Bluetooth security, use this procedure to set Bluetooth power to **Off** when not in use. Your phone will not connect to another device until you use a Bluetooth feature again, or set Bluetooth power back to **On**.


use a Bluetooth headset or handsfree car kit

Before you try to connect your phone to a handsfree device for the first time, make sure the device is **on** and **ready** in *pairing* or *bonding* mode (see the device user's guide). You can connect your phone with only one device at a time.

Find it:  >  Settings > Bluetooth, press **Options**
> Search For Device > Headset

Shortcut: From the home screen, press **Shortcuts**
> Find Bluetooth Devices.

Your phone lists the Bluetooth audio devices it finds within range.

- 1 Scroll to a device in the list.
- 2 Press  to connect with the highlighted device.

copy files to a device

You can copy a media file, contact, calendar event, or bookmark to another phone or computer that supports Bluetooth connections.

Note: You can't copy some copyrighted objects.

Before you try to copy a file to another device, make sure the receiving device is **on** and **ready** in discoverable mode. Also, make sure the device is not busy with another Bluetooth connection.

- 1 On your phone, scroll to the object that you want to copy to the other device.
- 2 Press **Options**, then select:
 - **Send via** > **Bluetooth** for an image or sound file, calendar event, or bookmark.
 - **Share** > **contact** > **Bluetooth** for a contact.

3 Select a recognized device name.

or

Select **[Search For Devices]** to search for new devices, then select the device where you want to copy the object.

4 Press **Options > Send**.

5 If necessary, enter a mutually agreed upon passkey (such as **0000**) on your phone and the device, then press **OK** to connect to the device.

Your phone shows **Sending** while the file is transferred. When file transfer is complete, the phone shows **Send Successful**, and prompts you to press **OK** to continue.

receive files from a device

Before you try to receive a file from another device, make sure your phone's Bluetooth power is **on** (see page 62).

Place your phone within range (approximately 10 meters/30 feet) of the other Bluetooth device, and send the file from the device.

If your phone and the sending device were not previously paired, place your phone in discoverable mode so the sending device can locate it. Press

 >  **Settings > Bluetooth**, press **Options > Discoverable On 3 Minutes**. The Bluetooth indicator  in the home screen flashes when your phone is in discoverable mode.

Your phone shows **Incoming Transfer** while the file is transferred. When file transfer is complete, the phone shows **Successful**, and tells you where the file was stored.

send a photo to a printer

You can send a photo to a printer that supports Bluetooth connections.

Note: You can print A4, US Letter, and 4x6 size pages. To print another size, copy the image to a linked computer and print it from there.


- 1 On your phone, take a new photo or scroll to a stored image that you want to print, then press **Options > Print via > Bluetooth**.
Note: If you see **Service Not Supported** when you try to print, select **Send To > Bluetooth** instead. (The **Send To** option does not print the image name or date stamp.)
- 2 Select a recognized printer name, or press **Options > Search For Printers** to search for another printer where you want to send the image.
- 3 If available, modify print options.

more Bluetooth features

Note: A device is *recognized* after you connect to it once (see page 63).

features

pair with recognized device

Press  >  **Settings > Bluetooth**, press  left to select the **My Devices** tab, press  up/down to scroll to the device name, press  to connect.

drop connection with device

Scroll to the connected device name and press  to disconnect.

remove device from device list

Scroll to the device name and press **Options > Remove Device**.

Note: You can't remove a device from the list while your phone is connected to the device.

WiFi Internet connection

You can use your phone to make and receive calls over a WiFi CERTIFIED® wireless connection, if your service provider supports Internet calls using *Voice-over-Internet Protocol (VoIP)* or *Session Initiation Protocol (SIP)*.

To use an Internet connection (instead of a cellular network connection), you must connect to your service provider through a wireless connection over a wlan access point.

Note: Your phone's WiFi features are not allowed for outdoor operation in France. To avoid unlawful interference with radio signals, do not use the WiFi features in France unless you are indoors.

features

switch audio to Bluetooth® headset or Bluetooth car kit during call



Press **Options** > **Use Bluetooth**.

To switch audio back to the phone, press **Options** > **Use Handset**.

edit properties of recognized device



Scroll to the device name, press **Options** > **Edit Device**.

set Bluetooth® options




Press **•••** >  **Settings** > **Bluetooth**, press **Options** > **Setup Bluetooth**.

available networks list

To see a list of available access points within range of your phone:


Find it:  >  **Settings** > **WiFi** > **Available Networks**


Your phone lists available access points. The orange WiFi signal strength indicator  shows the strength of each WiFi connection. Other indicators can include:

★ = saved network

 = secure access point

✓ = active network connection

 = active saved network connection



Scroll to the network access point you want to use, then press  to select it.

create a WiFi network connection

To create and save a WiFi connection with a network access point:



Find it:  >  **Settings** > **WiFi** > **Available Networks**

- 1 Scroll to the WiFi network of your choice and press .
- 2 If prompted by your phone, enter the secret key, then press **Continue**.
- 3 When the connection is established, make sure you save the profile. To save the profile, scroll to the WiFi network with the active network connection indicator , and press **Options** > **Save**.

Your phone creates a secure connection with the network, and saves the network profile in the **Saved Networks** list.

Note: Your phone automatically connects to a network in the **Saved Networks** list when the phone is within range of the network access point.

quick connect

To have your phone automatically locate and connect to a WiFi network access point:

Find it:  >  Settings > WiFi > Quick Connect

Your phone connects to the network access point with the best signal strength within range of your phone. If the first connection fails, the phone connects to the next available network.

saved networks list

To see the network connection profiles you've saved on your phone:

Find it:  >  Settings > WiFi > Saved Networks

Note: Your phone automatically connects to a network in the **Saved Networks** list when the phone is within range of the network access point.

manually add network to list

To manually set up a network access point and add it to the list:

Find it:  >  Settings > WiFi > Set Up WiFi
> Add New Network > Enter Network Info

You must enter the following configuration settings:

options	
SSID	Enter the broadcast name that identifies the wireless access point.
Profile Name	Enter the name you want to use to identify the access point in the Saved Networks list.

options

Security Type Select the security type for the access point.

Depending on the security type, you may be prompted to enter the **Passphrase** or **Network Key** for the access point.

Non-Broadcast SSID Select this option if the name of your access point is not being broadcast.

Tip: Check the available networks list to see if the access point name is being broadcast.

view or edit a network profile

Find it:  >  **Settings** > **WiFi** > **Saved Networks**, scroll to the network, press **Options** > **Edit**

send network profile

To send a network profile in an SMS text message to another phone or compatible device:

Find it:  >  **Settings** > **WiFi** > **Saved Networks**, scroll to the network, press **Options** > **Send To**

receive network profile

Your phone notifies you when you receive a network profile message from another phone or PC.

Press **Options**, then press **Save** to save the network profile to your **Saved Networks** list.

Tip: Press **Options**, then press **View** to see network details before you save the network profile to your phone.


turn WiFi power on or off

 
Find it:  >  **Settings** > **WiFi** > **WiFi Power** > **On** or **Off**

Note:

- To extend battery life, use this procedure to turn off WiFi power when not in use.
- Turning off WiFi power may prevent your voice service over WiFi from working.

cable connections

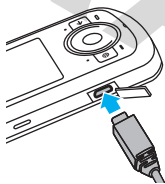

 To transfer data between your phone and a computer, insert the micro USB port connector plug from a USB cable into your phone's micro USB port. Connect the other end of the cable to the computer.







Note: A Motorola Original USB cable and supporting software may be included with your phone. These tools are also sold separately. Check your computer to determine the type of cable you need.





Note: Some phone functions are temporarily unavailable when a USB connection is active.

To use Windows® Media Player 11 to sync music files from a computer to your phone: Press  >  **Settings** > **Connections** > **USB Settings** > **Media Synch/PlayFromDevice**, then connect your phone to the computer. For more information, see your *Quick Start Guide*.



To manually transfer music, pictures, and videos between your computer and phone (phone memory or installed memory card): Press  >  **Settings** > **Connections** > **USB Settings** > **Memory Card**, then connect your phone to the computer. For more information, see your *Quick Start Guide*.

To use your phone as a modem: Press  >  **Settings** > **Connections** > **USB Settings** > **Modem**), then connect your phone to the computer.

To **transfer contact lists and calendar entries** between your phone and computer: Connect your phone to the computer, then open the optional Motorola Phone Tools accessory application on the computer. You can also use the Motorola Phone Tools application to transfer and sync music files from the computer to your phone. The Phone Tools software automatically switches your phone to the proper connection setting required to sync the phone. See the Phone Tools user's guide for more information.

To make data calls through a computer: Press  >  **Settings** > **Connections** > **USB Settings** > **Modem**, then connect your phone to the computer. Use the computer application to place or answer the call.

To create a new data connection on your phone, press  >  **Settings** > **Connections** > **Data Connections** > **Add a Connection**).

To print an image over a USB PictBridge connection: Press  >  **Settings** > **Connections** > **USB Settings** > **USB Printing**, then connect your phone to a PictBridge-compatible printer. Select the image(s) you want to print, then press **Options** > **Print via** > **USB**.

end a USB connection

Caution: Do not disconnect your phone from the computer while files are being transferred.

On a PC running Windows XP™ or later: When file transfer is complete, remove the USB cable from your phone and computer.

On a PC running an earlier version of Windows OS: Click the Safely Remove Hardware icon in the system tray at the bottom of your computer screen, then select

Safely Remove USB Mass Storage Device. Remove the USB cable from your phone and computer.

On a Macintosh® computer: Select and drag the Removable Disk icon to the Trash. Remove the USB cable from your phone and computer

sync

You can use several different over-the-air connection methods to synchronize information between your phone and a remote server.



Exchange ActiveSync

Use the Internet to synchronize your phone's contact list, calendar entries, and email with an email account on a Microsoft® Exchange 2003 server.



set up Exchange ActiveSync

Confirm that the **Mobility** option is enabled on the email account, and that **data service** is activated with

your phone service provider (additional fees may apply for this service).



To set up an ActiveSync partner:

Find it:  >  Tools > Sync > Exchange ActiveSync

Enter your email account and server information, including **User Name**, **Password**, **Domain Name**, **Server Name**, and **Data Connection** details. If necessary, contact your system administrator to obtain the information you need, or to help you connect your phone to the server.

use Exchange ActiveSync

Schedule your phone to **automatically** synchronize data with an Exchange ActiveSync partner:

Find it:  >  Tools > Sync > Exchange ActiveSync, press **Options** > **Edit** > **Auto Sync** > **On**, press **OK** to enter the time and days you want to synchronize

To **manually** synchronize your contacts, calendar, and email:

Find it:  >  Tools > Sync > Exchange ActiveSync press Options > Sync

The first synchronization may take several minutes, depending on the amount of data in your contacts list, calendar, and email on the Exchange 2003 server.

SyncML

Call a SyncML Internet server and synchronize your phone's contact list and calendar entries with the server.

To **synchronize files** with a partner you set up:

Find it:  >  Tools > Sync > SyncML

If no SyncML profile is stored on your phone, the phone prompts you to create a profile. Contact your IT system administrator to obtain the information you need to set up a profile.

Note: If your phone can't connect to the server, verify that your phone's network service provider has data service activated on your phone (additional fees may apply for this service).

file manager

Manage music and sound files, photos, videos, and other files stored on your phone, and on an optional removable microSD memory card.

Find it:  >  Tools > File Manager

Select a folder or **Memory Card** to see its contents.

To **play** a sound file or voice note, or **view** a photo or video, just scroll to the file and select it.

To **edit** a file: Scroll to the file and press Options > Manage to copy, move, or rename it. Other options let you delete, send, or apply the file. You can't perform some operations on some copyrighted or pre-installed files.

To **copy files** between your phone and a computer, you can use a cable connection (see following section) or a Bluetooth® connection (see page 63).


format memory card

You must format a new memory card before you can use it with your phone.

Caution: Formatting a memory card **erases** all files stored on the memory card.

To format an installed memory card:

Find it:  >  Tools > File Manager

- 1 Press  to scroll to the memory card.
- 2 Press **Options** > **Manage** > **Format**.
- 3 Select **Format** to confirm that you want to format the memory card.

see memory card properties

To see memory card properties (such as name and available memory):

Find it:  >  Tools > File Manager

- 1 Press  to scroll to the memory card.
- 2 Press **Options** > **Manage** > **Properties**.

move or copy files between phone and memory card

Caution: When you **move** a file to a new location, the file is **deleted** from its original location.

Find it:  >  Tools > File Manager

- 1 Scroll to the file you want to move or copy.

2 Press **Options** > **Manage** > **Move** or **Copy**.



Note: The **Move** and **Copy** options do not appear if the file is copyright-protected.

3 Scroll to the destination location, then press **Place**.

phone software updates

Sometimes, we think of ways to make your phone's software faster or more efficient after you've purchased your phone. You can find out if your phone can be updated at: www.hellomoto.com/update

Your service provider may send updated phone software over-the-air to your phone. When your phone receives a software update, you can install it immediately, or defer installation until later. To install a deferred software update:

Find it:  >  **Settings** > **Phone Settings** > **Update Software**

service & repairs

If you have questions or need assistance, we're here to help.

Go to www.motorola.com/support, where you can select from a number of customer care options. You can also contact the Motorola Customer Support Center at 1-800-331-6456 (United States), 1-888-390-6456 (TTY/TDD United States for hearing impaired), or 1-800-461-4575 (Canada).

Specific Absorption Rate Data

This model wireless phone meets the government's requirements for exposure to radio waves.

Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission (FCC) of the U.S. Government and by the Canadian regulatory authorities. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age or health.

The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC and by the Canadian regulatory authorities is 1.6 W/kg.¹ Tests for SAR are conducted using standard operating positions accepted by the FCC and by Industry Canada with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR

level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station, the lower the power output.

Before a phone model is available for sale to the public in the U.S. and Canada, it must be tested and certified to the FCC and Industry Canada that it does not exceed the limit established by each government for safe exposure. The tests are performed in positions and locations (e.g., at the ear and worn on the body) reported to the FCC and available for review by Industry Canada. The highest SAR value for this model phone when tested for use at the ear is 0.66 W/kg, and when worn on the body, as described in this user guide, is 0.92 W/kg. (Body-worn measurements differ among phone models, depending upon available accessories and regulatory requirements).²

While there may be differences between the SAR levels of various phones and at various positions, they all meet the governmental requirements for safe exposure. Please note that improvements to this product model could cause differences in the SAR value for later products; in all cases, products are designed to be within the guidelines.

Information from the World Health Organization

Present scientific information does not indicate the need for any special precautions for the use of mobile phones. If you are concerned, you may want to limit your own or your children's RF exposure by limiting the

length of calls or by using handsfree devices to keep mobile phones away from your head and body.

Source: WHO Fact Sheet 193

Further information: <http://www.who.int/peh-emf>

Privacy and Data Security

Motorola understands that privacy and data security are important to everyone. Because some features of your mobile device may affect your privacy or data security, please follow these recommendations to enhance protection of your information:

- **Monitor access**—Keep your mobile device with you and do not leave it where others may have unmonitored access. Lock your device's keypad where this feature is available.
- **Keep software up to date**—If Motorola or a software/application vendor releases a patch or software fix for your mobile device that updates the device's security, install it as soon as possible.
- **Erase before recycling**—Delete personal information or data from your mobile device prior to disposing of it or turning it in for recycling. For step-by-step instructions on how to delete all personal information from your device, see the section entitled "master clear" or "delete data" in the user's guide.

Note: For information on backing up your mobile device data before erasing it, go to www.motorola.com and navigate to the "downloads" section of the consumer Web page for "Motorola Backup" or "Motorola Phone Tools."

- **Understanding AGPS**—To provide location information for emergency calls, certain Motorola mobile devices incorporate *Assisted Global Positioning System* (AGPS) technology. AGPS technology also can be used in non-emergency applications to track and monitor a user's location—for example, to provide driving directions. Users who prefer not to permit such tracking and monitoring should avoid using such applications.

If you have further questions regarding how the use of your mobile device may impact your privacy or data security, please contact Motorola at privacy@motorola.com, or contact your service provider.

OPEN SOURCE SOFTWARE INFORMATION

For instructions on how to obtain a copy of any source code being made publicly available by Motorola related to software used in this Motorola mobile device you may send your request in writing to:

MOTOROLA, INC.
OSS Management
600 North US Hwy 45
Libertyville, IL 60048
USA

The Motorola website opensource.motorola.com also contains information regarding Motorola's use of open source.

Motorola has created the opensource.motorola.com to serve as a portal for interaction with the software community-at-large.

To view additional information regarding licenses, acknowledgments and required copyright notices for open source packages used in this Motorola mobile device, please select "Legal Notices" from Phone Settings.

Smart Practices While Driving

Drive Safe, Call Smart

Check the laws and regulations on the use of mobile devices and their accessories in the areas where you drive. Always obey them. The use of these devices may be prohibited or restricted in certain areas—for example, handsfree use only. Go to www.motorola.com/callsmart (in English only) for more information.

Your mobile device lets you communicate by voice and data—almost anywhere, anytime, wherever wireless service is available and safe conditions allow. When driving a car, driving is your first responsibility. If you choose to use your mobile device while driving, remember the following tips:

- **Get to know your Motorola mobile device and its features such as speed dial and redial.** If available, these features help you to place your call without taking your attention off the road.
- **When available, use a handsfree device.** If possible, add an additional layer of convenience to your mobile device with one of the many Motorola Original handsfree accessories available today.
- **Position your mobile device within easy reach.** Be able to access your mobile device without removing your eyes from the road. If you receive an incoming call at an inconvenient time, if possible, let your voicemail answer it for you.



- **Let the person you are speaking with know you are driving; if necessary, suspend the call in heavy traffic or hazardous weather conditions.** Rain, sleet, snow, ice, and even heavy traffic can be hazardous.
- **Do not take notes or look up phone numbers while driving.** Jotting down a “to do” list or going through your address book takes attention away from your primary responsibility—driving safely.
- **Dial sensibly and assess the traffic; if possible, place calls when your car is not moving or before pulling into traffic.** If you must make a call while moving, dial only a few numbers, check the road and your mirrors, then continue.
- **Do not engage in stressful or emotional conversations that may be distracting.** Make people you are talking with aware you are driving and suspend conversations that can divert your attention away from the road.
- **Use your mobile device to call for help.** Dial 911 or other local emergency number in the case of fire, traffic accident, or medical emergencies.*
- **Use your mobile device to help others in emergencies.** If you see an auto accident, crime in progress, or other serious emergency where lives are in danger, call 911 or other local emergency number, as you would want others to do for you.*
- **Call roadside assistance or a special non-emergency wireless assistance number when necessary.** If you see a broken-down vehicle posing no serious hazard, a broken traffic signal, a minor traffic accident where no one appears injured, or a vehicle you know to be stolen, call roadside assistance or other special non-emergency wireless number.*

* Wherever wireless phone service is available.

index

A

- access point connection 66
- accessories 36, 62
- active line indicator 20
- active line, change 40
- airplane mode 23, 48
- alarm clock 58
- alert
 - set 26, 28
 - turn off 21, 33
- alert style indicator 20
- answer options 36

B

- battery indicator 20
- battery life, extend 31, 62, 70
- Bluetooth indicator 19

- Bluetooth wireless 62
- bonding. See Bluetooth wireless
- brightness 30
- browser 46, 47, 53, 59
- browser messages 53

C

- calculator 61
- calendar
 - add event 59
 - send event 59
 - set view 58
 - synchronize 72, 73
- call
 - answer options 36
 - waiting 39
- call alert 56
- call barring 24, 40
- call forward indicator 20
- call forwarding 40
- call timers 37, 38
- caller ID 35, 56
- camera 1
- car kit 36
- center key 14
- certificates 47
- clear/back key 43
- clock 27
- codes 24, 25
- conference call 39

contact list
 add entry 55
 copy contacts to phone or SIM
 57
 picture ID 35
 send contact 58
 synchronize 72, 73
costs, track 37
customer support 76
customize 26

D

data call 37, 38
date 27
delete data 32
delete text 43
dial a phone number 41
dialed calls 33
display 2, 18, 30
download files 46

download manager 59
drafts folder 50
driving tips 79
DTMF tones 41

E

earpiece volume 21
EDGE indicator 19
email
 read 53
 send 52
 synchronize 72
email address 55
emergency number 35
Enter Unlock Code message 24

F

file manager 73
fixed dial 41
forward calls 40

G

GPRS indicator 19
group mailing list 57

H

handsfree speaker 1, 24
headset 36
headset jack 1
hold a call 39
home screen 2, 18

I

IM 51
IM indicators 19, 20
in-call indicator 20
Incoming Call message 35
information services 54
instant messaging. See IM
international access code 39
Internet connection 66

K

- keypad 36
- keypad volume, adjust 26

L

- language 31
- lanyard hook 1
- line 1 and line 2 20
- linking. See Bluetooth wireless
- location indicator 20
- lock
 - applications 25
 - phone 25
 - SIM card 25
- lock key 1
- Low Battery message 20

M

- media playback 26
- media volume, adjust 26

- memory card 74
- menu 2, 18
- menu icons 18
- message
 - read 50, 53
 - send 49
- message indicator 20, 50
- messaging. See IM
- micro USB port 1
- micro-USB port 15
- Missed Calls message 34
- multimedia message 49
- mute a call 39

N

- navigation key 14
- network settings 41
- notes 60
- number entry 45

P

- pair with recognized device 65
- pairing. See Bluetooth wireless
- passwords. See codes
- personalize 26
- phone number
 - store 55
 - your number 40
- picture ID 35, 56
- PIN code 24, 25
- PIN2 code 24, 41
- predictive text entry 43
- printing 65, 71

Q

- quick note 52

R

- radio 21
- received calls 33

recent calls 33

redial 34

repairs 76

reset settings 31

return a call 34

ring ID 35, 56

ringer volume, adjust 26, 27

ringtone 26, 28

S

saved networks 67

screensaver 28, 31

security code 24

service dial 41

side select key 1, 21

signal strength indicator 19

silent alert style 26

SIM Blocked message 25

SIM card 24, 25, 41

SIM card, delete information 32

SIP 66

skin 28

soft keys 18

software update 75

speakerphone 36

speed dial 38

store phone numbers 55

support 76

symbol entry 45

synchronize 72, 73

T

talking phone 23

task list 60

technical support 76

templates 52

text edit 43

text entry 42

text message 49

text templates 52

theme 28

time 27

timers 37, 38

transfer a call 40

TTY device 40

U

unlock

 applications 25

 phone 24, 25

 SIM card 25

unlock code 24, 25

V

vibrate alert style 26

voice commands 21

voice dial 21, 36

voice note 60, 61

voice quality 33

voicemail 49

voicemail message indicator 49

VoIP 66

volume 21, 26, 27

volume keys 1, 21

W

wallpaper 28

Web pages 46, 47

WHO information 78

WiFi 66

WiFi indicator 19

WiFi signal strength indicator 67

world clock 59

U.S. patent Re. 34,976

DRAFT

www.motorola.com

