 


## 5. World Time

You can check a current time of main cities (50 countries) throughout the world.

Menu ▶ Organizer ▶ World Time

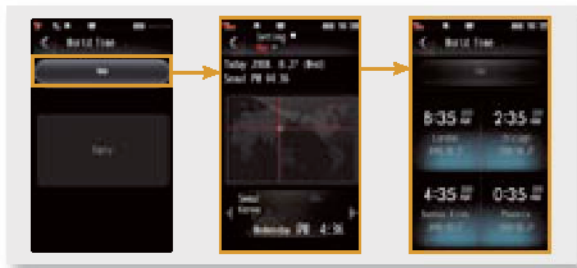

- Tap **New** to add the city and display the time.
- You may select the city from the list or map.
- You can set up to 4 different cities.
- You can tap any of the cities on the screen to delete it from the list or set the start and end date for DST (Daylight saving time).



## 09 Message

1 Messages .....	114
2 New Message .....	118
3 Mobile Messenger .....	121
4 e-mail .....	121
5 Spam Manager .....	122
6 Attachment Box .....	123
7 Settings .....	124

# 1. Messages

You can view and manage the messages saved in your phone.



## Menu ▶ Message ▶ Messages

- You can tap from the main screen for direct access.
- When you receive the message, icon will be displayed on the standby screen.
  - Most recently saved message will be shown on the top of the list.
- You can check 'Inbox', 'Outbox' or 'Saved' messages.
- If you select a message then tap menu, you can select form 'Save Message', 'Delete Selected Msg.' or 'Deselect All'.
- When you check the message, you can tap to see the previous or next message on the list.
- When you check the message, you can press volume button up or down to zoom in/out.

### Button description

	Check the menu
	Confirm selection
	Move to previous screen

### Note

- If the capacity for received message is exceeded, the oldest message deleted first.
- You can change settings from 'MSG Noti. Settings' or 'MSG Notification' to check the received message in the main screen. (Settings, see p.124)

## Inbox

### Menu ▶ Message ▶ Messages ▶ Inbox



- You can tap from the main screen to access directly.
- You can check and manage the received messages. (Including voice messages.)
- Select a message and tap to read the message.
- The attached contents will be played automatically.

### Icon description

	Unconfirmed SMS Message		Confirmed SMS Message
	Unconfirmed MMS Message		Confirmed MMS Message
	Unconfirmed Movie Message		Confirmed Movie Message

### Menu description




- Call: You can call the person who sent the message.
- Reply: You can reply the message to the sender.
- Delete: You can delete the selected message.
- Forward: You can forward the received message to other person.
- Save Number: You can save the phone number indicated in the message in the phonebook.
- Save Message: You can save the selected message in Saved box.
- Save Contents: If received message contains any multimedia contents, you can save the contents to your phone.
- Add to Spam List: Register a selected message as a spam number to block the message.
- Sort Message: You can sort the message into name/time/size order.
- Message Search: You can search and find the message by name/number/string.
- Delete All: You can delete all saved message in the inbox.

# 1. Messages (Cont'd)



## Outbox

Menu ▶ Message ▶ Messages ▶ Outbox



- You can tap  from the main screen to access directly.
- You can check and manage sent, draft or failed messages.
- Select a message and tap  to check the contents of the message.
- While writing the message, tap  and select 'Save to Draft box' to save the message.

### Icon description

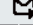	Temporary saved message
	Sent SMS message
	Sent MMS message

### Menu description


- Call: You can call the person who received the message.
- Delete: You can delete the selected message.
- Forward: You can forward the received message to other person.
- Save Number: You can save the phone number indicated in the message to your phonebook.
- Save Message: You can save the selected message in 'Saved' box.
- Delete All: You can delete all saved message in outbox.


### Note

- If the message is saved temporarily as draft, you can only select either 'Delete' or 'Delete all'.

## Saved

Menu ▶ Message ▶ Messages ▶ Saved

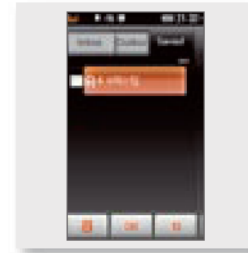

- You can tap  from the main screen to access directly.
- You can check the saved messages from either 'Inbox' or 'Outbox'.

### Menu description

- Delete: You can delete the selected message.
- Forward: You can forward the received message to other person.
- Save Number: You can save the phone number indicated in the message to your phonebook.
- Save to Outbox: You can send the selected message back to outbox.
- Save to Inbox: You can send the selected message back to inbox.
- Save Contents: If received message contains any multimedia contents, you can save the contents to your phone.
- Delete All: You can delete all saved message in outbox.
- Sender's info: You can check the sender's information if you have received the message.
- Receiver's info: You can check the receiver's information if you have sent the message.

## 2. New Message

The integrated MMS function enables you to attach content to the long text message and send to the mobile phone or e-mail address.



### Menu ▶ Message ▶ New Message

- ▶ A message can be sent to up to 20 people at a time.
- ▶ You can answer a call while you are writing a message, and return to the message screen after the call.
- ▶ You can send up to 3 image files (photo or picture) and 1 music and movie file.
- ▶ After writing a message, you can preview the message.
- ※ MMS is an SKT's new multimedia transmission service integrating the text message function and the color mail function.

### Note

#### Cautions in writing messages

- Messages are sent as SMS in default. However In the following cases, they are changed to MMS and additional data fee is charged: message exceeding 40 Korean letters/80 English letters, font color changed, emoticon added, avatar added, paper set, content attached (photo, movie, background music, etc.).
- If a message is changed to MMS, a message 'Converted to MMS' is displayed on the message window.

#### MMS fee

- The same information fee is charged for long text message, changed font color, paper set, avatar set, and emoticon added between MMS and SMS.
- Additional service fee is charged. No data call fee is charged for sending and receiving MMS. Visit SKT T-World website (<http://www.tworld.co.kr>) or contact SKT Customer Center for further information.

### Message screen description

**BG:** You can set the background for your messages.

**Avata:** The character or the photo of the sender is displayed on the message receiver's phone.

**Attach:** You can attach picture, movie clips, images, sound files with the message.

**Sender:** You can enter the number of the sender.

**Receiver:** You can enter select the receiver from call history or phonebook.


### Menu description

Save to Draft Box	You can save the message temporarily.
Preview	You can preview the message you have written.
Recent Addresses	You can choose the receiver from the recent list of inbox and outbox.
Find Address	You can select receiver from the phonebook.
Enter E-mail	You can send the message through e-mail.
Read-replay Reqst	You can request for notice when the receiver opens the message.
Send Receiver's List	You can add receiver's list in the message.

## 2. New Message (Cont'd)

### Background

Menu ▶ Message ▶ New Message ▶ BG

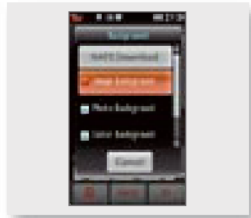


- You can set the background for your messages.

Menu description

NATE Download: You can download background images from the NATE.  
 Image Background: You can select a image stored in the phone and set the image as a background.  
 Photo Background: You can select a photo stored in the photo album and set the photo as a background. (Tap to select.)  
 Color Background: You can select the background color of the letter paper. (Note that the content might not be identified if the letters are written on the paper of the same color.)  
 No Background: You can set the background as a white paper.

### Avatar

 Menu ▶ Message ▶ New Message ▶ Avatar

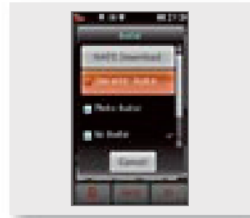

- The character or the photo of the sender is displayed on the message receiver's phone.


Menu description

NATE Download: You can download avatar from the NATE.  
 Character Avatar: You can set a character in the photo album as avatar.  
 Photo Avatar: You can set the photo in the photo album as an avatar.  
 No Avatar: No avatar is displayed on the receiver's phone.  
 An Avatar?: You can check the description of avatar.

## 3. Mobile Messenger

You can use the real time messenger function without registering friends.

Menu ▶ Message ▶ @Messenger

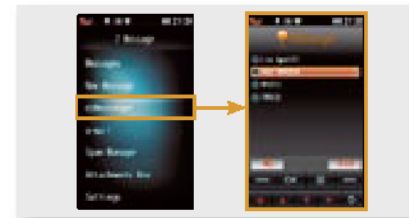

- If you tap **Talk**, you can add an entry by searching name/number or entering number.
- If you tap **Settings**, you can use talk, delete, message box, settings, help, update functions.
- You can select the person you wish to chat and tap 'Talk' to chat with the person.


### Note

• The mobile messenger service is charged with the fixed service fee per message, and no data fee will be charged.  
 - Use Help or visit the messenger website (<http://mm.nate.com>) for further information.

## 4. e-mail

Using the phone, you can manage inbox and outbox of the e-mail.

Menu ▶ Message ▶ e-mail

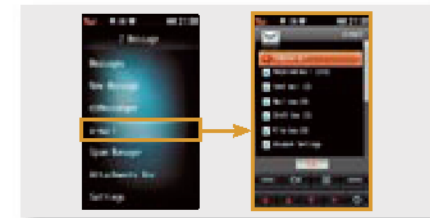


- When writing the e-mail, you can attach the photo.
- You can check received contents, images, attachments.

### Note



• In order to use e-mail service, you have to register and make a e-mail account and extra charges will apply.

## 5. Spam Manager

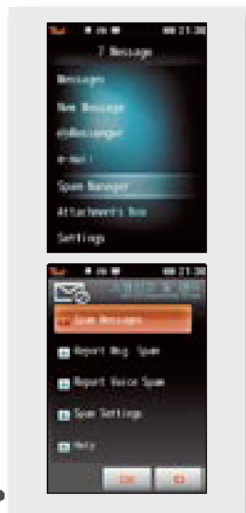To promote convenience of the user and to prevent damage caused by illegal spam, you can report the received spam messages to the spam handling center of Korea Information Security Agency.



### Menu ▶ Message ▶ Spam Manager


Spam Messages	You can check received spam messages.
Report Msg. Spam	You can report spam by selecting the spam message and tap  .
Report Voice Spam	You can report spam by selecting the spam number and tap  .
Spam Settings	You can block the number or message to set as a spam.
Help	You can check the guide for spam report.

### Note



• Visit the spam handling center of Korea Information Security Agency ([www.spamcoop.or.kr](http://www.spamcoop.or.kr)) for further information.

## 6. Attachment Box

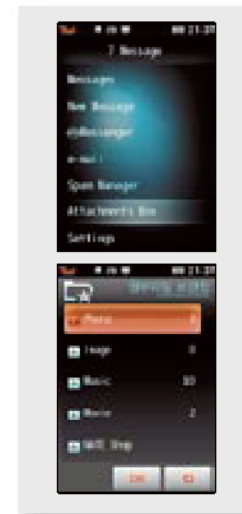You can manage and check attachment of the received MMS.



### Menu ▶ Message ▶ Attachment Box

- When you check each contents, tap  to download most recent contents available.
- Tap  to Send MMS, Set Background, Rename, Delete the contents.

### Menu description


Photo	You can view and manage the attachable photos.
Image	You can store and manage the images downloaded from NATE.
Music	You can view and manage the attachable music, and voice files.
Movie	You can view and manage the attachable movie files.
NATE Shop	You can connect to NATE content shop and download the latest contents.

## 7. Settings

| You can set preferences for the message functions.

### Menu ▶ Message ▶ Settings

 
MMS Settings	<p>You can select and set various contents when writing messages.</p> <ul style="list-style-type: none"><li>• Background Settings: You can select the background of the message. (Background, see p.120)</li><li>• Avatar Settings: You can send the character or photo with the message. (Avatar, see p.120)</li><li>• Font Color Settings: You can select the font color.</li><li>• Photo Size Settings: You can set the size of photos transmitted from the phone via wireless Web (Internet).</li><li>• Set Name Card: You can determine whether to attach your phone name card to all the messages.</li><li>• MMS mode change: You can set alarm when switching SMS to MMS message.</li></ul>
Signature Settings	<p>You can attach the designated sentence at the end of the message.</p> <ul style="list-style-type: none"><li>• Edit Signature: You can enter the signature.</li><li>• Signature Setting: You can set the designated sentence at the end of the message.</li></ul>
MSG Noti. Setting	<p>You can set ring volume, alarm type, and alarm on calls.</p>
Msg. Notification	<p>You can set to display the message on the standby screen when a message is received.</p>
Sent Msg. Auto Save	<p>You can set auto save option on/off for sent messages.</p>
Spam Settings	<p>You can block the message from the designated phone number and string.</p> <ul style="list-style-type: none"><li>• Number Block: You can check the number, or cancel block, add, or delete all.</li><li>• String Block: You can check the blocked phone number and use cancel block, add, delete all.</li><li>• Spam Setup/Release: You can set to block spam number or sentence.</li></ul>
Phrase Settings	<p>You can set the frequently used phrase.</p>

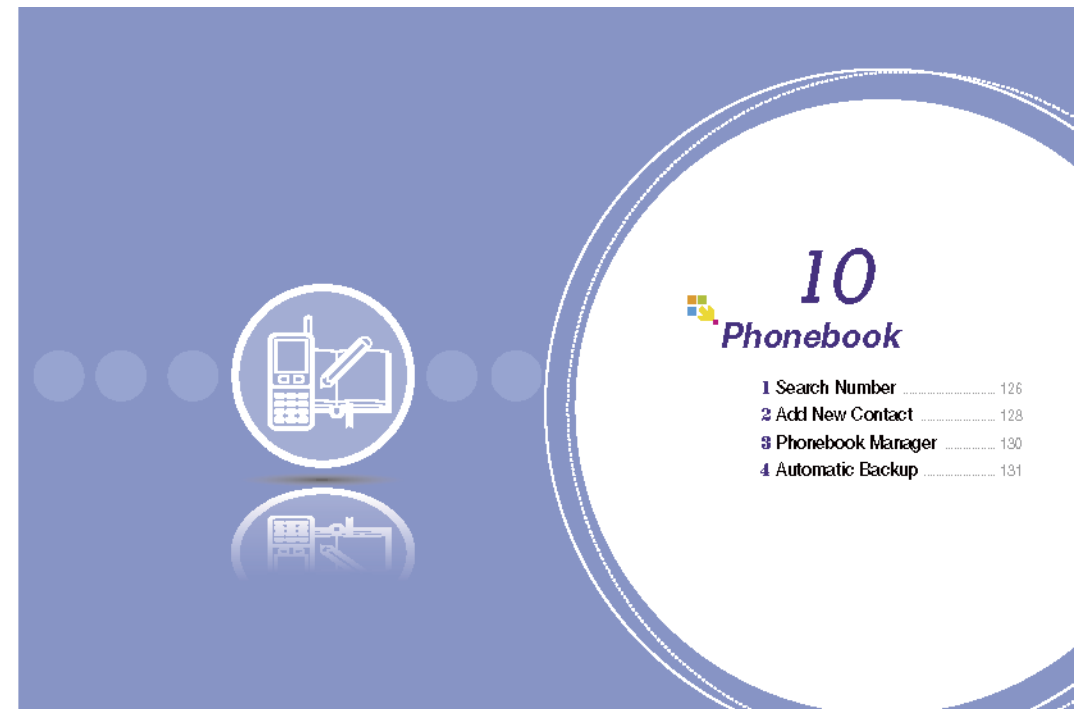


# 1. Search Number

You can search the saved phone number list.

 
## Menu ▶ Phonebook ▶ Search Number

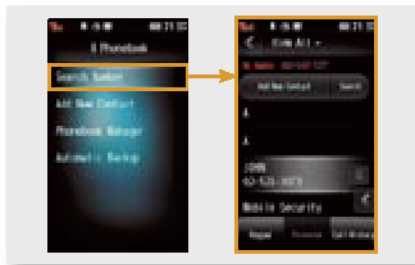

- You can check or edit phone numbers.
- You can tap  from the main screen for direct access.
- Tap 'View All ▼' and you can select from 'View All', 'Group' and 'Speed Dial'.
- You cannot delete the default mobile security number.

### Search all

#### Menu ▶ Phonebook ▶ Search Number ▶ View All

- Tap , and enter the name to be searched.
- Contacts containing the entered letter, will be displayed on the list.
- If you enter the first letter of a name, all the names starting with same letter will be displayed.

### Search from group

#### Menu ▶ Phonebook ▶ Search Number ▶ Group

- All the groups will be listed and you can select the group to search the number.
- If you enter the first sound of a name, all the names starting with the sound are searched.
- Search will be done within the selected group.


### Search speed dial

#### Menu ▶ Phonebook ▶ Search Number ▶ Speed Dial


- You can check the numbers assigned with speed dial.

### Search by number

#### Menu ▶ Phonebook ▶ Search Number ▶ Key Pad ▶ Enter number

- You can tap  from the main screen for direct access.

## Checking the number

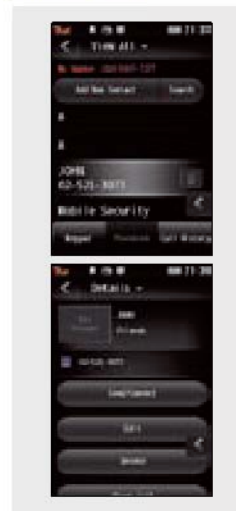

- You can select the phone number from the phonebook and view more information.
- Tap 'Details ▼' to select 'Details' or 'Call History'.

### Menu description

New Message	Send message to selected number.
@Messenger	Real-time messenger service. (@Messenger, see p.121)
Cyworld	Connect to the mobile website.
Send/Connect	Send Voice Message Call, Call Me Free, selected number via Bluetooth functions.
Block	Block the selected number.
Edit	Edit the contact information.
Delete	Delete all or delete the selected number.

\* Only the supported function will be shown on the menu.

 


## 2. Add New Contact

You can save phone numbers in the phone.

### Add new contact

Menu ▶ Phonebook ▶ Add New Contact

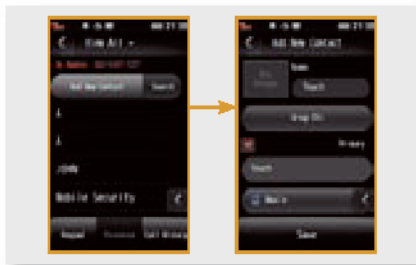

#### Menu description

Name: Touch the name entry space to enter the name.


Group: Select the group for the new contacts.

Primary: If there are more than one number, set the primary number that represents the contact.

Number type: Set the type of the number

1	Mobile
2	Office
3	Home
4	Fax
5	Other

Add item: Add extra phone, Ringtone, Vibrate, E-Mail, Anniversary or Memo to the contact.

- From the main screen, You can tap  for direct access.
- You can save up to 200 numbers including mobile security number.

### Add new group

Menu ▶ Phonebook ▶ Search Number ▶ Group ▶ Add New Group

You can add new groups on your phone.

 


- You can tap existing group to edit or delete the group.
- If additional group is deleted, contacts under the group will automatically move under group 'ETC'.
- You cannot delete 4 default groups.
  - Family, ETC, Company, Friends.

### Add new speed dial

Menu ▶ Phonebook ▶ Search Number ▶ Speed Dial ▶ Select Number

You can assign speed dial to the numbers from your phonebook.

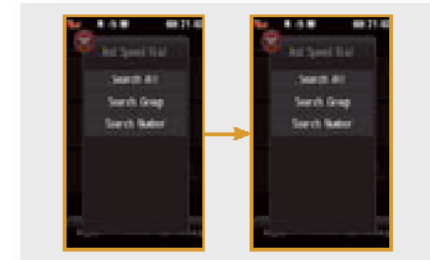

- You can tap the speed dial number and search the phone number from 'Search All', 'Search Group' or 'Search Number'.
- If the speed dial is already assigned, you can tap the speed dial number to 'Call', 'Edit' or 'Delete'.
- If you tap and hold the speed dial number from the numeric keypad, your phone will call the assigned number. (Speed Dial, see p.42)
- You can set up to 9 speed dials (including 9 for mobile security number).
- Mobile security number cannot be deleted.

### 3. Phonebook Manager

You can manage the block call and the memory usage.

#### Block calls

Menu ▶ Phonebook ▶ Phonebook Manger ▶ Block Call



- Tap **Block** to add a number to be blocked.
- To unblock the number on the block list, gently touch and slide the number from left to right and tap **Delete**.
- Tap the number on the blocked list to set the block method to 'Mute' or 'Disconnected'.

All Calls Mute: You can block all the calls.  
 Hidden Number Mute: Block the restricted number.  
 060\* Mute: Block the 060\* numbers.

#### Memory usage

Menu ▶ Phonebook ▶ Phonebook Manger ▶ Memory Usage

 


- Tap **Reset** to reset all the memory information.  
 - If you reset your memory, all phone numbers store in your phone will be deleted. (Except Mobile security number)

### 4. Automatic Backup

The phone updates the phonebook everyday to the server

Menu ▶ Phonebook ▶ Automatic Backup

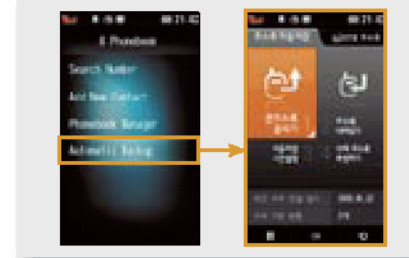

#### Menu description

- Upload Address Book: You can view changed address and upload to the server.
- Download Address Book: You can download saved address in the server. (Additional fee is charged when downloading.)
- Address Book Info: You can check the information of the most recent saved address book to the server.
- Move to NATE: You can view phonebook saved in the phone or NATE web phonebook. The phonebook in the phone is synchronized with NATE.
- Settings: You can set various preferences such as password, phonebook automatic backup, time, delete, and update.
- Help: You can view guidelines on the phone automatic backup services.

#### Note

- In order to use automatic backup service, you have to register first and additional service fee is charged. Contact SKT Customer Center for further information.

# MEMO

A light green rectangular area with rounded corners, containing ten horizontal dashed lines for writing.

**11**  
**Settings**

<b>1</b> Phone Setting .....	134
<b>2</b> Call Setting .....	135
<b>3</b> Data Network .....	135
<b>4</b> Customer Service .....	136
<b>5</b> My Device Info .....	137

# 1. Phone Setting

| Integrated menu for phone setting.

## Menu ▶ Settings ▶ Phone Setting

Language	You can set the language to either Korean or English.
Bluetooth	Set the Bluetooth mode On/Off. • Automatically search for device when the Bluetooth mode is on.
Removable Disk	Set the Removable disk On/Off. • You need external memory card to use this function and the phone function will be restricted.
Airplane Mode	Set your phone available in the plane or other places that restricts mobile phone use (MP3, Games, Organizer etc.).
Date Setting	Set the date on your phone. (In airplane mode only.)
Time Setting	Set the time on your phone. (In airplane mode only.)
Locked Mode	Lock all the functions or set 'Phone Lock', 'Service Lock', 'Photo Album', 'Movie Album', 'Call Lock', or 'Message Lock' on/off to restrict other people from using it.
Change Password	Change your phone's password.
Restore Default	Restore your phone to the default setting.
Factory Reset	Set your phone to Factory default setting.
Format External	Format external memory card.

# 2. Call Setting

| Integrated menu for call setting.

## Menu ▶ Settings ▶ Call Setting

Answer Option	Set the answering option. Answer your phone by tapping 'Answer' key or by opening the clear cover.
Int'l Restrict Call	Restricts international outgoing calls.
700/600 Restrict Call	Restricts outgoing call starts with 700/600.
Call Time/History	You can check or reset 'Last Call Timer', 'Cumulative Dialed', 'Roaming Call', 'Sent Message', 'Last Reset'.

# 3. Data Network

| You can change NATE preferences.

## Menu ▶ Settings ▶ Data Network

 
Allow Call Nater/Modem	Set your phone to allow call when you are using data calling.
Modem Mode	Turn on/off the modem mode.
1x Connect Only	Turn on/off the 1x Connect Only mode.
NATE Setting	Set the NATE starting page and proxy.

## 4. Customer Service

You can check the service guide about the phone.

### Call Center


Menu ▶ Settings ▶ Customer Service

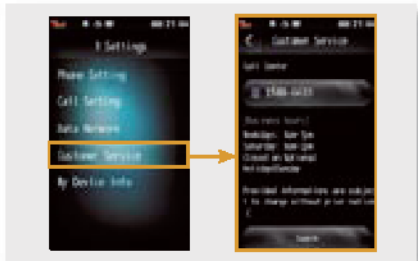

- You can check the business hours and the phone number of Motorola Customer Center.
- You can tap number shown on the screen, to call the Customer Center.

### Search

 
Menu ▶ Settings ▶ Customer Service ▶ Search

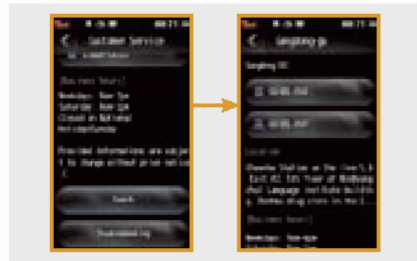

- You can find the number for Customer Center and their location.
- Tap the Customer Center you're looking for and tap the number to make a call.
- Tap **Save** to save the number of selected Customer Center on your phonebook.

### Troubleshooting

Menu ▶ Settings ▶ Customer Service ▶ Troubleshooting

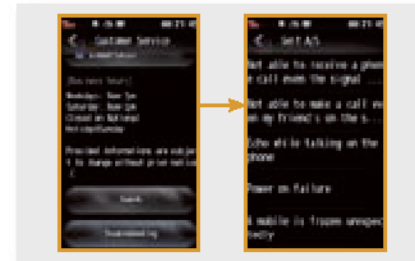


- You can check the troubleshooting and check the solution.

## 5. My Device Info

 You can check your phone's model name and SW version.

Menu ▶ Settings ▶ My Device Info

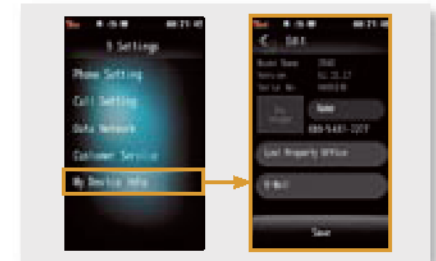

- You can check the model name, version and the serial number of your phone.
- You can add picture, name, phone number, contact number when lost, and the e-mail address.

## MEMO

A light green rectangular area with rounded corners, containing ten horizontal dashed lines for writing.



12  
Appendix

1 Accessories .....	140
2 Troubleshooting .....	140
3 Specification .....	141
4 Authentication label .....	141
5 Specific Absorption Rate .....	142
6 Collecting wasted mobile phones .....	143

## 1. Accessories

You can purchase optional items at the nearest Motorola service center or accessory shop. Contact the service provider or visit Motorola website ([www.mymotorola.co.kr](http://www.mymotorola.co.kr)) for details.



## 2. Troubleshooting

Nothing is displayed on the screen

- Check the battery.

No antenna bar is displayed on the screen

- Move to other place and then attempt a call again.

It sounds "Toot-Toot" when a call is placed

- There is no communication channel available or your phone has failed in communicating with a base station. Press **END CALL** to clear the call and press **CALL** to redial the number.

The charging lamp of the charger blinks in red

- Check the battery position or clean the terminals before reattempting charging. If the lamp keeps blinking, contact the nearest service center.

Battery operating time does not comply with the User Manual

- The battery operating time reduces slowly as the battery repeats charging and discharging. The operating time reduces rapidly if the battery is left in a cold or hot place for a long time.

Malfunction or failure to power On

- Remove the battery and reinstall it, and then turn the power on.

## 3. Specification

	Wireless communications service	Bluetooth
Transmit frequency	824.64~848.37MHz	2402~2480MHz
Receive frequency	869.64~893.37MHz	2402~2480MHz
TX power	300mW	0.1 mW
Number of channel	-	79CH
Type of emission	-	F1D
Modulation system	-	GFSK
Communication mode	-	semi-duplex operation
Transformer	PLL	
Power	DC 3.8V	
Exterior, weight		
Relative humidity	-20°C ~ +50°C	

## 4. Authentication label

1. Name of the model : Wireless communications service device
2. Authentication number : XXX-X-XXXX-XXXX
3. Authentication Trade name : Motorola Korea Inc.
4. The date of manufacture: 2008. . .
5. Manufacturer/country : Motorola Korea Inc. / China

### Notice to Users

- ※ The manufacturer and the installer are not allowed to provide the service that affects people's lives since there can be an interference of in this equipment.

## 5. Specific Absorption Rate Data

This model wireless phone meets the government's requirements for exposure to radio waves.

Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission (FCC) of the U.S. Government and by the Canadian regulatory authorities. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age or health.

The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC and by the Canadian regulatory authorities is 1.6 w/kg.<sup>1</sup> Tests for SAR are conducted using standard operating positions accepted by the FCC and by Industry Canada with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value.

This is because the phone is designed to operate at multiple power

levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station, the lower the power output.

Before a phone model is available for sale to the public in the U.S. and Canada, it must be tested and certified to the FCC and Industry Canada that it does not exceed the limit established by each government for safe exposure. The tests are performed in positions and locations (e.g., at the ear and worn on the body) reported to the FCC and available for review by Industry Canada. The highest SAR value for this model phone when tested for use at the ear is 0.99 w/kg, and when worn on the body, as described in this user guide, is 0.85 w/kg. (Body-worn measurements differ among phone models, depending upon available accessories and regulatory requirements).<sup>2</sup>

While there may be differences between the SAR levels of various phones and at various positions, they all meet the governmental requirements for safe exposure. Please note that improvements to this product model could cause differences in the SAR value for later products; in all cases, products are designed to be within the guidelines.

## 6. Collecting wasted-mobile phones

The collected wasted-mobile phones are utilized as resources and the residues are treated ecologically. Motorola is willing to do its best to protect environment not only today but in the future also. We kindly inviting you to participate in this movement for the protection of environment.

### Motorola phone collecting centers



### Recycling of wasted-mobile phone

- Return the old one to the distributor when you purchase a new phone.
- Return your mobile phone to a representative of mobile service provider.
- Visit a near-by representative of the manufacturer or A/S center.
- Utilize a collecting bag with no charger (arranged in provincial office, distributor, representative)

### Guidelines for collecting discarded Motorola mobile phones



Please think of environment when you discard your phones and accessories. Do not discard old mobile phones or accessories such as battery pack, battery charger, etc. together with household waste. In some countries and areas, they have established a system to treat useless electronic and electrical products and batteries. Please contact your area for more information. If there is no appropriate system available, please send useless mobile phone and accessories to a near-by Motorola service center.



## FCC Notice to User

The following statement applies to all products that have received FCC approval. Applicable products bear the FCC logo, and/or an FCC ID in the format FCC-ID:1HDP6JH1 on the product label.

Motorola has not approved any changes or modifications to this device by the user. Any changes or modifications could void the user's authority to operate the equipment. See 47 CFR Sec. 15.21.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. See 47 CFR Sec. 15.19(f).

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is

encouraged to try to correct the interference by one or more of the following measures:


- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

## European Union Directives Conformance Statement



Hereby, Motorola declares that this product is in compliance with:

- The essential requirements and other relevant provisions of Directive 1999/5/EC.
- All other relevant EU Directives

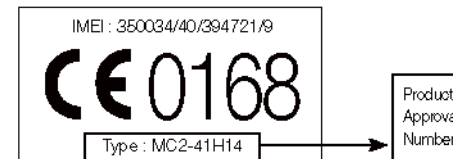

The above gives an example of a typical Product Approval Number. You can view your product's Declaration of Conformity (DoC) to Directive 1999/5/EC (to R&TTE Directive) at [www.motorola.com/itte](http://www.motorola.com/itte). To find your DoC, enter the product Approval Number from your product's label in the "Search" bar on the web site.

# MEMO

A large green rectangular area with horizontal dashed lines, intended for taking notes.

## Bluetooth

- Bluetooth mode : [Left][Menu] ▶ [F1] ▶ [2M] ▶ [17]
- Connect bluetooth : [Left][Menu] ▶ [F1] ▶ [2M] ▶ [2M]
- Settings : [Left][Menu] ▶ [F1] ▶ [2M] ▶ [13]
- My Device Info : [Left][Menu] ▶ [F1] ▶ [2M] ▶ [4]

## Dictionary

 
- English-Korean : [Left][Menu] ▶ [F1] ▶ [4] ▶ [17]
- Korean-English : [Left][Menu] ▶ [F1] ▶ [4] ▶ [2M]
- My Vocabulary : [Left][Menu] ▶ [F1] ▶ [4] ▶ [13]
- Previous Key Word : [Left][Menu] ▶ [F1] ▶ [4] ▶ [4]
- Settings : [Left][Menu] ▶ [F1] ▶ [4] ▶ [F1]

## Photo Capture

- In standby screen, press and hold [Camera] for a while.

## Movie Capture

- In standby screen, press and hold [Camera] ▶ [2M] ▶ [17]

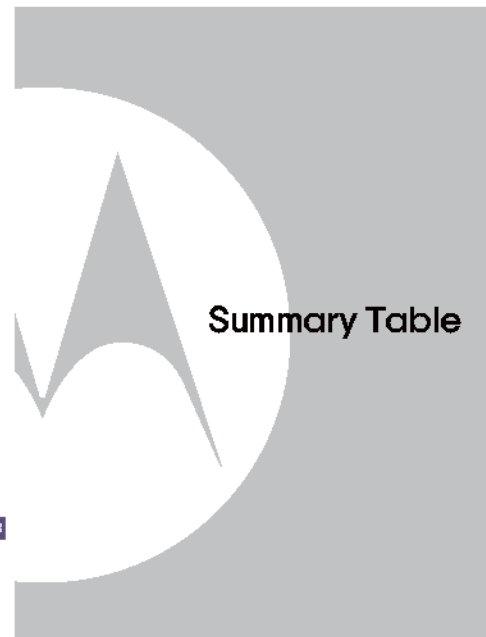

### Saving Phone Number

- Save number from menu: [Phonebook] (Right) [Add New] (Right)
- Save number in standby screen: Enter number [Save] (Right)

### Searching Phone Number

- In the standby screen, press and hold [Phonebook] (Right) and select Speed/All/Group/Number [Search]

### Messages

- Checking message: [Messages] [Check]
- Writing message: [Messages] [Compose]

### T LIVE

- Recent video list: [T LIVE] [Recent]
- Video message box: [T LIVE] [VTC]
- VTC contents box: [T LIVE] [VTC]
- Movie/Photo album: [T LIVE] [Album]
- T LIVE settings: [T LIVE] [Settings]

### Main Menu Setting

- Sounds: [Menu] (Left) [Sounds] [1-7] [1-7]
- Display: [Menu] (Left) [Display] [1-7] [2-4]
- Message: [Menu] (Left) [Message] [1-7] [2-3]
- Camera: [Menu] (Left) [Camera] [1-7] [4-5]
- Tune setting: [Menu] (Left) [Tune] [1-7] [6-1]
- Bluetooth: [Menu] (Left) [Bluetooth] [1-7] [6-6]
- T LIVE settings: [Menu] (Left) [T LIVE] [1-7] [7-7]

### One-Touch Dial

- Set/Release Etiquette: In standby screen, press and hold [Etiquette]
- Lock/Unlock: In standby screen, press and hold [Lock]
- W: In standby screen, press [W]
- Moneta: In standby screen, press [Moneta]
- My Menu: In standby screen, press [My Menu]
- T MAP: In standby screen, press and hold [T MAP]
- NATE: In standby screen, press and hold [NATE]
- Operation Effects: In standby screen, press [Operation Effects]
- T interactive: In standby screen, press and hold [T interactive]

## Warranty Policy

Thank you for purchasing a Motorola product. This product has passed a strict quality control and inspection of the Motorola Technology Team. If a defect is found in your product during the warranty period, it will be repaired free of charge at a Motorola Service Center.

### Warranty Period

- Terminal Equipment: 1 year
- Lithium ion battery: 6 months
- Other Accessories: 1 year

### Free Warranty Service

Free warranty service will be provided for one year (warranty period) after purchasing.

Type of defects or trouble	Compensation		
	Under warranty	After expiry of warranty	
Critical repair service request resulting from performance and function failures occurred in normal operation within 10 days after purchasing.	Exchange or refund	N/A	
Critical repair service request resulting from performance and function failures occurred in normal operation within 1 month after purchasing.	Exchange or repair		
Critical repair service request within 1 month of exchange. Exchange the product is impossible.	Refund	Free service	
Repairable	Performance and function failures occurred Three times of repair and four times of defects resulting from the same reason. Four times of repair and five times of defects resulting from the different reasons.	Exchange or refund	Paid service
Non-repairable	AS parts are available but repair is impossible.	Exchange or refund	Refund the price deducted by the depreciation amount.
	Repair is impossible because AS parts are not in stock.		Refund the price deducted by the depreciation amount and added by 10%.
Lost of repair request product by the user	Exchange or refund		Refund the price deducted by the depreciation amount and added by 10%.

Model		Serial No.	
Purchase Date	Year Month Day	Customer	
Distributor		Price	

※ When you purchase the product, please fill the blanks on the Warranty Policy and keep it together with the receipt in order to obtain more beneficial service.

### Paid Service

- Reasons other than defects: Service requests for symptoms other than defects will be charged after expiry of the warranty period. Carefully read the User's Manual before you visit a service center.
- Defects resulting from user's errors:
  - Defects caused by careless handling (soaking, impact) or improper repairing and remodeling.
  - Defects caused by using improper power supply.
  - Defects caused by repairs done at a place other than the Motorola Service Centers.
  - Defects caused by using accessories not provided by Motorola. (hands free, quick charger, charger, battery, stereo headset, battery cover, etc.)
  - Defects or damages resulting from dropping while moving the product.
- Others:
  - Defects resulting from natural disasters such as fire, earthquake, flood, etc.
  - Expiry of life time of consumable (battery, stereo headset, external memory, antenna, and various accessories)



# Safety and General Information

---

**This section contains important information on the safe and efficient operation of your mobile device. Read this information before using your mobile device.**

## Exposure to Radio Frequency (RF) Energy

Your mobile device contains a transmitter and receiver. When it is ON, it receives and transmits RF energy. When you communicate with your mobile device, the system handling your call controls the power level at which your mobile device transmits.

Your Motorola mobile device is designed to comply with local regulatory requirements in your country concerning exposure of human beings to RF energy.

## Operational Precautions

For optimal mobile device performance, and to be sure that human exposure to RF energy does not exceed the guidelines set forth in the relevant standards, always follow these instructions and precautions.

## Safety Information

## Product Operation

When placing or receiving a phone call, hold your mobile device just like you would a landline phone.

If you wear the mobile device on your body, always place the mobile device in a Motorola-supplied or approved clip, holder, holster, case, or body harness. If you do not use a body-worn accessory supplied or approved by Motorola, keep the mobile device and its antenna at least 2.5 centimeters (1 inch) from your body when transmitting.

Using accessories not supplied or approved by Motorola may cause your mobile device to exceed RF energy exposure guidelines. For a list of Motorola-supplied or approved accessories, visit our Web site at: [www.motorola.com](http://www.motorola.com).

## RF Energy Interference/Compatibility

Nearly every electronic device is subject to RF energy interference from external sources if inadequately shielded, designed, or otherwise configured for RF energy compatibility. In some circumstances your mobile device may cause interference with other devices.