

INSTRUCTION MANUAL

A preliminary draft of the User's Manual follows this page.
The text on the following is the user manual.

Welcome

Thank you for purchasing Motorola mobile phone with world leading mobile communication technology. Motorola's mobile communication equipment are designed and produced in compliance with its strict in-house standards and the international standards.

They are subject to the strict quality tests including temperature, humidity, shock, dust, vibration and drop tests. We are confident that you will be highly satisfied with the Motorola products that have been manufactured after such processes. Thank you again for choosing Motorola, and we hope that you would succeed in your business with your XT720.

- ※ Some of the contents and the functions in this manual subject to change without prior notice according to situation.
- ※ We suggest that you set your phone on vibration at a public place.

Prohibition of Illegal IMEI Modification

Removal or change of IMEI (International Mobile Equipment identity) installed in the mobile phone manufactured and supplied by Motorola, or and attempt to reproduce and enter another IMEI in the mobile phone is strictly prohibited. In addition, such an illegal act may damage the software installed in the phone. Therefore, customers should care so that you do not damage your phone due to such an illegal act. The product which is illegally modified is excluded from any free or paid service warranted by Motorola.

Safety Information

Read this 'Safety information' carefully for your own safety and to prevent possible property damage.

CAUTION

- Do not lend your phone to other person.
- Follow appropriate cell phone etiquette in public places.
- If any problem occurs with your phone, contact designated service center.
- If your phone is lost or stolen, report your mobile service provider immediately.
- Do not use unauthorized devices with your phone.
 - Unauthorized battery charger, stereo earphone, USB data cable, batteries or any other unauthorized devices may decrease your product's performance and may result in product malfunction.
- Do not use your earphone for extended hours.
 - If you are exposed to loud sound for extended period of time, it may damage your hearing.
- Make sure to record important data separately.
 - Saved phone numbers or other data can get lost due to user's carelessness or other unexpected problems.
- Make sure to keep your phone in dry places (with relatively low humidity) at all time.
 - If either mobile phone or battery is immersed in 'liquid', the color of immersion-checking label attached on your mobile phone or battery will be changed. In this case, you will lose the privilege of receiving free service by Motorola.
- For normal operation of the touchscreen, do not attach any protection film. Also, be careful with the moisture and use the touchscreen with clean and dry hands.
- This product should not be added with any separate equipment that may cause an alteration to its original performance as described on type registration

CAUTION FOR USING BATTERY

Please keep the following directions to avoid of heating, fire and explosion.

- Contact the manufacturer or retail store immediately when you find swollen battery which can be dangerous.
- Use authentic charger only.
- Do not place the battery near the heating apparatus. (Do not put the battery in microwave.)
- In summer, do not place the battery in the car.
- Do not place or use the battery where the temperature is high and humid places such as spa.
- Do not let metal products such as necklace, coin, key and watch contact the battery terminal.
- Use lithium battery guaranteed by carrying device manufacture company.
- Do not disjoint, compress or penetrate the battery.
- Do not give strong impact such as dropping the battery.
- Do not expose the battery over 60°C.
- Make sure the battery does not get wet.

RECOMMENDED GUIDELINE FOR CHARGING METHOD

- Do not charge the battery in the way which is not in the user's manual.
- Fire or explosion may occur.

Safety and General Information

This section contains important information on the safe and efficient operation of your mobile device. Read this information before using your mobile device.

Exposure to Radio Frequency (RF) Energy

Your mobile device contains a transmitter and receiver. When it is ON, it receives and transmits RF energy. When you communicate with your mobile device, the system handling your call controls the power level at which your mobile device transmits.

Your Motorola mobile device is designed to comply with local regulatory requirements in your country concerning exposure of human beings to RF energy.

Operational Precautions

For optimal mobile device performance, and to be sure that human exposure to RF energy does not exceed the guidelines set forth in the relevant standards, always follow these instructions and precautions.

Product Operation

When placing or receiving a phone call, hold your mobile device just like you would a landline phone.

If you wear the mobile device on your body, always place the mobile device in a Motorola-supplied or approved clip, holder, holster, case, or body harness. If you do not use a body-worn accessory supplied or approved by Motorola, keep the mobile device and its antenna at least 2.5 centimeters (1 inch) from your body when transmitting.

Using accessories not supplied or approved by Motorola may cause your mobile device to exceed RF energy exposure guidelines. For a list of Motorola-supplied or approved accessories, visit our Web site at: www.motorola.com.

RF Energy Interference/Compatibility

Nearly every electronic device is subject to RF energy interference from external sources if inadequately shielded, designed, or otherwise configured for RF energy compatibility. In some circumstances your mobile device may cause interference with other devices.

FCC Notice to Users

The following statement applies to all products that have received FCC approval. Applicable products bear the FCC logo, and/or an FCC ID in the format FCC-ID:xxxxxx on the product label.

Motorola has not approved any changes or modifications to this device by the user. Any changes or modifications could void the user's authority to operate the equipment. See 47 CFR Sec. 15.21.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. See 47 CFR Sec. 15.19(3).

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is

encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

↘ Safety Information (cont'd)

To use the mobile phone safely for a long time

Use authentic products only.

Using unauthorized products (battery, charger etc.) may shorten product's life or decrease its performance.

Be careful not to cause damages to the glass of mobile phone display.

Some part of your mobile device is made out of tempered glass. This glass could break if the product is dropped on a hard surface or receives a substantial impact. If glass breaks, do not touch or attempt to remove. Stop using your mobile device until the glass is replaced by a qualified service center.

Do not dry your mobile phone with a heating apparatus.

If you dry a wet mobile phone or battery with a heating apparatus may cause explosion or damage to your phone. In this case, do not turn on the power, separate a battery from the phone and contact a service center designated by Motorola.

Keep the mobile phone clean at all time.

- If there are foreign substances on a metal part of a charger or battery, the phone may not be charged properly.
- Use smooth cloth to clean the mobile phone and do not use flammable chemicals (such as alcohol, benzene, thinner, etc.) for cleaning.

Do not give strong impact to the mobile phone, disassemble or modify it.

Giving a strong impact or dropping the mobile phone or battery may cause malfunction or explosion.

In case of disassembling or modifying the mobile phone on your own discretion, you will lose privilege to receive free service.

Do not use the phone while charging.

If you use the mobile phone while charging it with a charger or USB data cable, there is a risk of electric shock or fire. Make sure that you use the phone after disconnecting it from USB data cable or charger.

Be cautious when you use an USB data cable.

If you connect the phone with PC via USB data cable, there is a risk of electric shock depending on the grounding status of the PC's power supply.

Do not place your phone near items containing magnetic components.

Placing the phone near magnetic components may cause product malfunction or cause battery discharge which can lead to performance decrease.

↘ Safety Information (cont'd)

To use the mobile phone safely for a long time

Make sure to back-up all the data stored in your mobile phone.

- Saved data (such as phone number or pictures etc.) can be deleted unexpectedly due to user's carelessness, software upgrade or product repair etc.
- Manufacturer shall not be responsible for such data loss.

Use and keep the phone at room temperature.

If a mobile phone or battery is placed in a hot or cold place, it may shorten product's life or decrease its performance.

Keep the phone out of animal or children's reach.

If children or animals suck or bite the mobile phone or battery, they may run into a risk of having an electric shock or exposure to electromagnetic wave.

Be careful when you use a necklace or cord for the mobile phone.

Be careful that using a necklace or cord for the mobile phone may cause you to run into dangerous accidents like being caught in train, electric railway or car doors.

Do not paint or put sticker on your mobile phone.

- Such action may damage your phone's joints and your phone may not open or close properly.
- Paint or metallic content on the phone may cause an allergic reaction, eczema, itching, swell, etc.

Do not paint or put sticker on your mobile phone.

- Such action may damage your phone's joints and your phone may not open or close properly.
- Paint or metallic content on the phone may cause an allergic reaction, eczema, itching, swell, etc.

Keep the phone, charger and battery out of children's reach.

- If they put battery in their mouth or use damaged battery, it may harm their body and there is risk of electric shock or danger of exposure to electric magnetic wave.
- Make sure children do not swallow any parts of the phone such as covers. It may stuck on their throat or cause them to suffocate.

Do not place your phone near credit card, phone card, bank book or other materials that uses magnetic strip.

Your phone may damage the magnetic strip.

Do not hold or block the intenna with your body during a call.

- If you hold the bottom part of the phone (where intenna is located) during a call or data transfer, it may decrease the performance.
- If you attach materials (such as metallic stickers) that may effect intenna, it may decrease the quality of the call.



↘ Safety Information (cont'd)

To use the mobile phone safely for a long time

Do not use the mobile phone in a place with risk of explosion.

In a construction sites and military areas, explosives can be controlled with RF devices. Turn off your phone and follow the proper instructions and signals.

Do not use the mobile phone near inflammable materials.

Do not use your phone or attach accessories on it in a potentially explosive atmosphere including gas station, gas leaking areas, and deck on boats.

Do not use the mobile phone in a prohibited area such as air plane and hospitals.

Radio frequency emitted from your phone may affect some of the devices used in an air plane or hospitals and cause accidents.

Do not use the mobile phone near pacemakers.

- Electromagnetic waves from your mobile phone may affect pacemaker when it is used within 15cm (6 inches) from it.
- If it is necessary, person with pacemaker should always use the phone in the opposite side of the pacemaker and keep the distance over 15cm.

A chargeable battery is consumable.

The repetition of charging/discharging will shorten its operation time gradually.

When the phone is not being charged properly, lamp on the charger will blink.

Check the charger to avoid the trouble that may occur to each device.

Mobile phone and battery cover need to be combined at all time.

If not, it may cause malfunction.

In case of separating a battery from the mobile phone, please turn off the power.

If not, it may cause malfunction.

↘ Safety Information (cont'd)

To use the mobile phone safely for a long time

Make sure to charge the battery with the TTA authorized battery charger.

Using unauthorized charger may cause damage to your phone.

Keep your phone at room temperature of 0°C~40°C, avoid direct sunlight or place with high temperature and humidity.

If not, it may damage the phone and cause the phone to explode.

Do not place the phone in areas that may get very hot, such as microwave or near heating apparatus.

There is a risk of explosion or fire.

Ensure that charging terminal of the battery does not make contact with other metallic objects such as necklace, coins and keys.

There is a risk of explosion or fire.

Do not use the mobile phone while driving.

- Using the mobile phone while driving a car is dangerous and such action can cause car accidents.
- Check the local laws and regulations on using the mobile phones while driving.

Do not install a hands-free device near air bag.

An air bag inflates with great force in a moment. Do not leave your phone or set up the hands-free kit near to the air bag. You may be seriously injured when the air bag is activated.

Your phone checks battery temperature on its own for your safety. When the temperature of the battery raises over 55°C, phone will automatically stop all the functions and notify you to place the phone in cooler area with a pop-up message. Pop-up message will appear every 3 minutes when the temperature of the battery is between 55°C to 58°C.

When the temperature pass over 58°C, your phone will automatically turns in to cool down mode.

※ What is cool down mode?

It is a state where you can only make emergency calls and your phone will stop all the functions until the temperature of the battery becomes lower than 50°C.

When the temperature becomes lower than 50°C, your phone will notify you in a pop-up message that your phone is back to normal.

CONTENTS PAGE(S)

Before Use

Components
Parts of the Phone
Battery

 

Components

Before using your phone, make sure you have all the components included in your package.

 
					Image TBA
Mobile phone	Battery cover	Standard battery	Battery charger	Car charger	Universal docking
				Image TBA	
Multi adapter	USB data cable	Stereo earphone	DMB antenna	Personality piece	User guide

- Above illustration may look slightly different and the supplied items may change without notice.
- If you attach the multi adapter to the 'accessory connector', be careful not to loose the body of the multi adapter.
- If you contact 5 PIN terminal of basic components such as Multi adapter and USB Data cable to the PC's USB port, your PC may malfunction (Power off, Reset).
- You can purchase HDMI cable and 3.5mm TV-Out cable separately from Motorola's on-line store.

Parts of the Phone

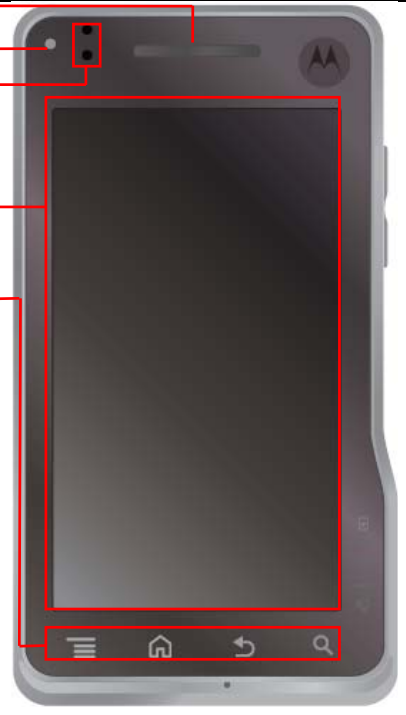



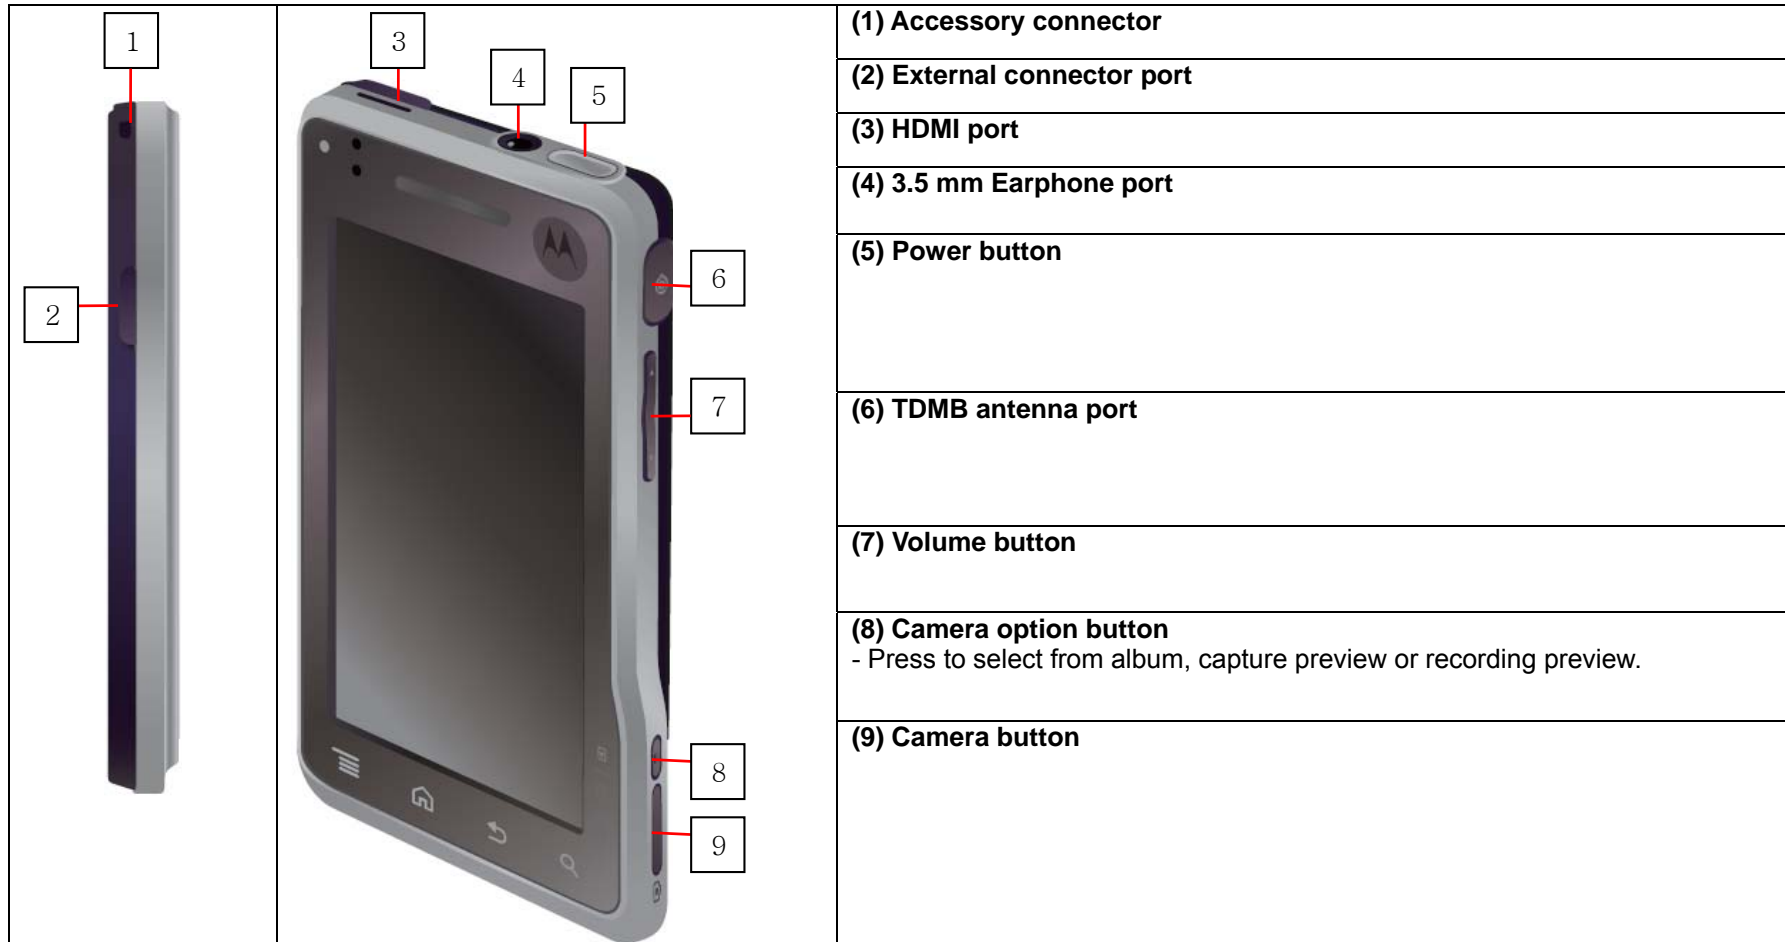

Earphone		Rear camera	
Front camera		Secondary mic	
Light sensor			
Touch screen		Flash	
Touch buttons			
☰: Menu button			
🏠: Home button		Battery cover	
↶: Back button			
🔍: Search button			
		Speaker	

↘Parts of the Phone (cont'd)



Battery

Battery in the package is not fully charged therefore make sure to fully charge the battery.

Installing the battery		Removing the battery	
	1. Put the battery with the battery charge terminal and the phone charge terminal engaged as shown in the figure.		1. Push the battery cover (in the direction of the arrow as shown in the figure) while pressing the battery cover release button.
	2. Put the battery properly in the battery slot. Push it until it clicks.		2. Lift up the battery as shown in the figure.
	3. Place the battery cover to the battery cover groove. Push the battery cover (in the direction of the arrow as shown in the figure) until it clicks.		3. Remove the battery from the phone.

Caution

Make sure that the power is off when you remove the battery.

- If you remove the battery while the phone is on, it may damage your phone.

↘Battery (cont'd)

Charging the battery





Charging the battery with a USB data cable

- 1) Open the external connection port cover and connect the USB data cable.
 - To charge your phone by using the USB data cable, you should have the SKT integrated USB driver installed in your PC.
 - If you connect your phone to your PC by using the USB data cable, both charging and communication function is available.
- 2) Connect the USB data cable to the USB port on your PC.

Note

- Some data cables, other than Motorola's authorized USB data cable, do not support battery charging function depending on their type.

	<p><u>Charging the battery with the battery charger</u></p> <ol style="list-style-type: none">1) Insert the battery on the battery charger. <ul style="list-style-type: none">• Check and make sure that the battery is in proper position. <ol style="list-style-type: none">2) Connect the multi adapter to the battery charger.3) Connect the travel charger to the multi adapter.4) Connect the power cord of the travel charger to an electrical outlet. <ul style="list-style-type: none">• Red: Charging, Green : Charging completed
	<p><u>Charging the battery with the travel charger</u></p> <ol style="list-style-type: none">1) Open the external connection port cover and connect multi adapter.2) Connect the travel charger to the multi adapter.3) Connect the power cord of the travel charger to an electrical outlet. <ul style="list-style-type: none">• Red : Charging, Green : Charging completed

Note

- Use TTA certified charger. Uncertified chargers or USB data cables may cause incidents or damage to your phone.
- Travel charger is not included in the package for conservation of resources. You may purchase them separately from the retail shop or service center.

➤Battery (cont'd)

Battery charging status

Type	Charging in progress	Charging completed
Travel charger	Red	Green

Lamp blinks in red

- Status of the charging terminal is poor. Check if the battery is clean and try again.
- Battery or the other accessories may be damaged. Contact service center.

Lamp blinks in orange

- Battery is being charged in a place too hot or too cold. When the temperature returns to normal, the lamp turns red and begins charging again.
- If the phone is being charged in a too hot or too cold place, it can stop charging itself. In this case, the screen is on and special battery icon will blink. (Icon description, see p.36) If temperature changes into the room temperature, the lamp is changed into red and the battery starts to be charged.

Battery charging time

Type	Standard battery
Time	Approx. 150 minutes

- Charging time can be different depending on the status of battery and the charger.
- Charging time may increase if the rated voltage of the charger is low.

Battery operating time

Type	Standby time	Voice call time	Video call time	TDMB watching time
Standard battery	Approx. 000 minutes	Approx. 000 minutes	Approx. 000 minutes	Approx. 000 minutes

- ※ **Based on a new battery/Bluetooth mode off/no external memory**
- Above service time of the battery is measured according to standard set by SKT. Actual operating time can be different depending on the status of usage.
 - Using bluetooth function will increase battery consumption.
 - If you have large amount of calling, it will be more convenient to charge a battery everyday.
 - Calling or browsing internet consumes more battery than when the phone is in standby. If the calling time becomes longer, standby time will get shorter.
 - Receiving call will consume as much battery as making a call.
 - Standby time may get shorter in out-of-service area.
 - Operating time may vary depending on the charge status, temperature(high/low), wave status in the surrounding and the lighting.




Low battery

- When the battery is low, pop-up notification will appear.
- When the battery is low, functions may not be able to operate. Charge the phone immediately.

USIM card

In order to use the phone, you should insert the USIM (Universal Subscriber Identity Module) card supplied by SKT. Emergency calls can be made without the USIM card.

Installing the USIM card

 A dark blue smartphone with the back cover removed. The battery cover is shown floating above the phone. The battery is partially inserted into the back of the phone, and the USIM card slot is visible.	<ol style="list-style-type: none">1. Remove the battery cover.2. Lift up and pull out the battery.
 The smartphone is shown from the back with the battery cover removed. A USIM card is being inserted into the slot. The gold contacts of the card are facing down.	<ol style="list-style-type: none">3. Insert the USIM card as shown in the figure. - Make sure that USIM card is inserted in proper position with the gold contact facing down.
 The smartphone is shown from the back with the battery cover closed. The cover is pushed onto the phone until it clicks.	<ol style="list-style-type: none">4. Put the battery back.5. Close the battery cover. - Push the battery cover until it clicks.

➤USIM card (cont'd)

Installing the USIM card



1. Remove the battery cover and the battery.
2. Remove the USIM card as shown in the figure.
3. Put the battery and the battery cover back.

- You can use the menu on the standby screen even when the USIM card is not inserted.

Note

- Calling and data usage fees are charged to the person registered to the USIM card. Therefore, be careful not to lose or transfer ownership.
- Set the password on your USIM card to prevent other people from using your USIM card when it is stolen or lost.
- Data inside of the USIM card can be damaged when the card gets scratched or bent.
- Using the USIM card with Transportation card function, battery usage time may get shorter.
- Turn the power off before inserting the USIM card. If you insert the USIM card while the phone is on, card will not be recognized.
- If you enter the wrong USIM card password for 3 consecutive times, USIM card usage will be restricted. In this case, contact the retail store or SKT.
- For more information on USIM card, contact SKT retail store or service center

Basic Operation

Power On/Off



Turning the power on


1. Press and hold the [Power] button.

Turning the power off

1. Press and hold the [Power] button.
2. When the phone option window appears, tap [Power off]
3. Tap [OK] to turn the power off.





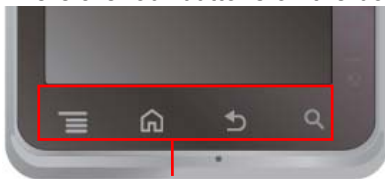





Using the buttons

There are four buttons on the bottom of the touchscreen.





buttons

Button description

	Menu button	Press  to open menu options. Menu will be different depending on the application being used.
	Home button	Press  to close any menu or application and return to the home screen. Press and hold  to show the last few applications used, and then tap an application to open it. In the home screen, press  to open or close the main menu.
	Back button	Press  to go back to previous screen.
	Search button	Press  for text search, or press and hold for voice search.

Setting the screen lock

Your touch screen will be locked automatically when the phone is not being used for certain period of time.

1. From the Home screen, tap .
2. Tap [Settings] → [Sound & Display] → [Screen timeout]
3. Select the time for screen timeout.
 - Your screen will turn off and become locked if there hasn't been any action for the duration of the set time.
 - If you select never timeout, your phone will not become locked automatically. You have to lock the screen manually by pressing the  button.


Note

Screen will not turn off automatically when the USB data is connected.


Unlocking the touchscreen

<capture>

Your touchscreen will be locked when it is not being used for long period of time.

1. Press the  button when the touchscreen is off.
2. Tap and drag [Lock] to the right (to the direction of the arrow).

> Locking the touchscreen

1. Press the  button while the touchscreen is unlocked.

Using the touchscreen

<u>Tap</u> You can simply tap the touchscreen to select a function.	<u>Tap and hold</u> You can tap and hold the selected item to see more options.
<capture>	<capture>

Drag To scroll through a list or move slowly, drag across the touchscreen.	Flick To scroll through a list or move quickly, flick across the touchscreen (drag quickly and release).
<capture>	<capture>

Home screen

You can access to the functions you want to use.

<capture>

Status Indicator

Status Bar

Flick or drag this bard down to see details.

Shortcuts

Tap to open


App Tray

Drag up to see and select the application.

Note





















The home screen extends beyond what you see on the screen to give you more room for adding shortcuts, widgets and more. Flick the home screen left and right to see more panels.



Press  button to bring home screen on your phone.

When you flicker home screen to use more space, location bar will tell you which panel you are looking at.

Icons

	Bluetooth active		Network status (full)
	GPS active		Network status (roaming)
	Wi-Fi active		GPRS (fast data)
	Downloading		EDGE (faster data)
	Volume		Voicemail message
	Vibrate		
	Silent		Air plane mode
	Mute call		Battery charging
	Signal (roaming)		Battery full
	Speakerphone On		Alarm On


To see today's date; you can tap and hold the status indicator.

Widgets

 
Adding a widget

> Adding a widget using menu button



1. Tap  from the home screen.
2. Tap [Add] → [Widgets]
3. Select a widget you want to add.

> Adding a widget from application tray

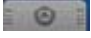1. Tap  from the home screen.
2. Tap and hold the widget you want to add.

 
Moving a widget

You can select and move a widget to a desired location on the home screen panel.

1. Tap and hold the icon that you wish to move.
 - When blue-lined box appears around the icon, you can drag the icon and move around the home screen.
2. Move the icon to a desired location.
3. Release the icon.


Deleting a widget

You can select and delete a widget from the home screen.

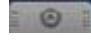1. Tap and hold the icon that you wish to delete.
 - When blue-lined box appears around the icon, you can drag the icon and move around the home screen.
2. Move the icon to trash.
- Once the icon becomes movable status,  will change to trash.
3. Release the icon when the color of the trash becomes red.

Short cuts

Adding a short cuts

1. Tap  from the home screen.
2. Tap [Add] → [Short cuts]
3. Select a short cut.
4. Select activity.
 - Selected activity will be added on the home screen.


Moving a short cut

You can select and move a short cut to a desired location on the home screen panel.

1. Tap and hold the icon that you wish to move.
 - When blue-lined box appears around the icon, you can drag the icon and move around the home screen.
2. Move the icon to a desired location.
3. Release the icon.

Deleting a short cut


You can select and delete a short cut from the home screen.

1. Tap and hold the icon that you wish to delete.
 - When blue-lined box appears around the icon, you can drag the icon and move around the home screen.
2. Move the icon to trash.
 - Once the icon becomes movable status,  will change to trash.
3. Release the icon when the color of the trash becomes red.

Folders

Adding a folder




1. Tap  from the home screen.
2. Tap [Add] → [Folders]
3. Select a folder
 - If you select [New folder], empty folder will be created in the home screen and you can drag and drop other icons from the home screen.

Wallpaper


Setting a wallpaper




1. Tap  from the home screen.
2. Tap [Add] → [Wallpaper]
3. Select a gallery.
 - Media gallery: You can choose a photo from the photo albums with the pictures that you took.
 - Wallpaper gallery: You can choose wallpaper provided in the phone.
4. Select an image that you wish to set as wallpaper.
5. Tap [Set wallpaper].

My Sign

You can draw on a screen to execute command on your phone.

1. Tap [App Tray] from the home screen.
 2. Tap [My Sign].
 3. Draw a gesture on a screen with your finger.
- To check the list of gestures, tap .

Adding a gesture

1. Tap [App Tray] → [My Sign].
 2. Tap  from the home screen.
 2. Tap [Add gesture]
 4. Select an action or application which will be executed by the gesture.
 5. Draw a new gesture on the screen with your finger.
 6. Tap [Save] to save a new gesture.
- To cancel, tap [Cancel].

Phone

Phone screen

You can use various types of functions related to phone calls.

[Home screen → Phone]

Or,

[Home screen → App Tray → Phone]

<capture>


1) Phone	You can dial number from dial pad
2) Call log	You can view history of incoming, outgoing, missed calls and messages
3) Contacts	You can view numbers stored in your phonebook.
4) Favorites	You can view the numbers
5) Entry field	Entered number will appear on this field. You can tap [←].
6) Dial pad	You can enter a number you wish to call.
7) Dial button	Press to dial a number. You can tap [Dial] without entering any numbers to call the most recent call.
8) Hide/Show dial pad	You can hide or show the dial pad.

Making a Call


You can make a call in various ways such as entering number directly or searching a number from your contacts.

Making a call from Dial pad

1. From the Phone screen, dial the number you wish to call.
2. Press [Dial] to make a call.

Tap  to use following functions

Send Message	You can send a text message to a entered number
Add 2-sec pause	Numbers after P will be inputted automatically after 2 seconds.
Add wait	Numbers after T will be inputted when you tap [Dial]
Add to contacts	Entered number will be added to the contacts
Speed dial list	You can check the speed dial list.
Enable dial candidates	You can enable/disable 'Hide/Show dial pad' option

* Top 4 options will appear if you tap  after entering a number.

Making a call from Call log

You can search recently used phone numbers (outgoing, incoming, missed or sent or received messages) to make a call.

[Home screen → Phone → Call log]


You can select a number to see detail information and options.

1. Tap [Send Icon] on the right side of the number you want to call.

<capture>

Screen description

	Incoming Call
	Outgoing Call
	Missed Call

Tap  to use following functions

Clear call log	
Block call	

Making a call from Speed dial

You can set the frequently called numbers on a speed dial and make a call easily and quickly.

1. From the Phone screen, tap and hold the speed dial number.

Ending a call

When you want to hang up the phone, tap [End].

Answering a call

When the call is incoming, tap and hold the **[Receive Icon]** and drag it to the right.

> Rejecting a call

Press and hold the volume button down.

Or,

When the call is incoming, tap and hold the **[End Icon]** and drag it to the left.

Missed call

[Missed call icon] will appear on the status indicator.

1. Tap and drag the status indicator down.
2. Tap the number.
 - Call log will appear on the screen.
3. Tap the number to check the detailed information.


In-call option

To use the options during a call, tap the buttons appear on the screen.

<capture>

Hold	You can hold and switch calls if you are connected to more than one call.
Add call	You can make a new call. * You have to be registered to a 3way calling service in order to make more than one call at the same time.
End	You can end a call.
Dialpad	You can show/hide the dialpad.
Bluetooth	You can transfer various things through bluetooth.
Mute	You can set the mute to prevent the receiver from hearing you.
Speaker	You can turn the speakerphone on.

Note

You can also tap  to return to home screen and use other function during a phone call.

Caution

Make sure you hang up the phone call before using other applications. Phone call will not end automatically and the charges may apply.

Roaming service

You can use your phone from overseas country.

[Home screen → App Tray → T Service → T Roaming]

Select system

> Selecting system automatically

1. Tap [Select System] from the T Roaming screen.
2. Tap [Auto]
 - Available service provider will be selected automatically.

> Selecting system manually

1. Tap [Select System] from the T Roaming screen.
2. Tap [Manual]
 - List of available service provider will appear.
3. Select a service provider.

Roaming auto dial

This function will allow you to make call to domestic number from outside of the country without international access number or national code. You can make a call using the number directly from the phonebook or call history.

1. Tap [Roaming Auto Dial On] from the T Roaming screen.
 - Roaming auto dial icon will be on the display when the function is on.

Message

Text message

You can check text messages, and send MMS file with picture and movies attached. You can also check and manage received messages.


[Home screen → Messaging]

<capture>

Checking messages

1. Tap a thread from the list.

- All sent and received message will be saved in a thread.
- You can see the whole conversation between you and the receiver.

Tap  to use following functions

Compose	You can create a new message.
Delete threads	You can delete all saved threads.
Settings	You can view/change the message settings.
Search	You can enter a keyword and search for a message containing that keyword.
Spam List	You can check the spam list.

Creating a new message

1. Tap [New message] from the messaging screen.


2. Enter a number using dialpad.

- Tap [View contact] to select a number from Call log, Contact or Favorite.

3. Enter a text using soft keyboard.

4. Tap [Send] to send a message.

- Once the message is sent, it will be saved as thread.

Tap  to use following functions


Call **	You can make a call to the receiver.
Add subject	You can add a subject on a message.
Attach	You can attach various types of files on your text message.
Send **	Send a message.
Insert smiley	You can insert text emoticons.
Discard *	You can discard the message currently composing.
All threads *	You can check list of all the saved threads.
More **	You can delete thread, view all threads or save the number on your contacts.

Items with * will appear on the menu before message is sent.

Items with ** will appear on the menu after message is sent.


Creating a MMS message

You can create a message and attach a file(s) on them.

1. Tap [New message] from the messaging screen.
2. Tap  → [Attach]
3. Select a type of attachment.
 - Pictures: You can attach a picture from the picture album.
 - Capture picture: You can capture a picture and attach to the message.
 - Videos: You can attach a video from the video album.
 - Capture video: You can record a video and attach to the message.
 - Audio: You can attach a music save in your phone.
 - Record audio: You can record a audio and attach to the message.
4. Enter a text using soft keyboard.
5. Tap [Send] to send a message.
 - To replace or remove the attach file, tap [Replace]/[Remove]

> Recording a audio for attachment

After selecting [Record audio] from the attachment window;


1. Tap [o] to start recording
2. Tap [□] to end the recording
3. Tap [Use this recording] to save and attach the recorded audio.
 - To cancel the recording, tap [Discard]
 - Record will be attached automatically if you tap .


E-mail

You can register a e-mail account used in internet and check your e-mail directly from your phone.

Creating new Email

Before using your Email, you must set up the e-mail account. The email setup wizard will guide you through setting up your email account.

1. From the home screen, tap App Tray → Email ->  .
2. Tap [Compose]
3. Enter the recipient email address and message
4. Tap [Send]

Tap  to use following functions

Add Cc/Bcc	You can add Cc/Bcc
Send	You can send the email
Save as draft	You can save current email as draft
Co. Directory	You can check the company directory (if exchange account exists)
Discard	You can discard current email.
Add attachment	You can add pictures on your email.

* Exchange account is for Exchange server work email accounts. Enter detail from your IT administrator.

Browser

Browser

You don't need a PC, surf the web with your phone.

[Home screen → Messaging]

Internet screen

<capture>


Connection


Over the air: **E** (EDGE), **G** (GPRS) or **3G**. [Wi-fi icon]

Web address

To go to a URL, tap the URL entry field.

Drag or flick to scroll.

Press  to display options.

Tap  to use following functions

New window	You can open a new window.
Bookmarks	You can see bookmarks, most visited sites and visited history.
Windows	You can all the windows in a list. You can select or close a window currently open.
Refresh/Stop	You can refresh page or stop loading the page.
Forward	You can
More	You can use Add bookmark, Find on page, Select text, Page info, Share page, Downloads, Settings functions.

* Exchange account is for Exchange server work email accounts. Enter detail from your IT administrator.

Zoom in/out the page

When viewing photos, web pages, email, or maps, you can zoom in and out. Pinch your fingers together or apart. For photos and web pages, you can double-tap (tap twice quickly) to zoom in, then double-tap again to zoom out. For maps, double-tap to zoom in and tap once with two fingers to zoom out.

<capture>


<capture>

Zoom In

Zoom Out



Short cut to searching a web

You can tap  from the home screen and enter a keyword to search.

Your phone will automatically use google to search the content.

Contacts

Contacts


Contacts like you've never had before.

<capture>

Contacts List


Tap to view contact information. Tap & hold to edit, delete, and more.

Menu Options

Press  to edit sync groups or to add/import new contacts.


Note

You can tap and hold the contact to see more options.


Tap  to use following functions

Search	You can search a contact.
New Contact	You can add a contact
Speed dial list	You can see the speed dial list.
Display options	You can change the display option settings
Import contacts	You can import contacts from USIM or Micro SD memory card.
More	You can use Export contact and Accounts option.

Adding a new contact

1. Tap **Contacts** →  from the home screen.
2. Tap [New contact]
3. Enter the contact information.
 - You can tap the thumbnail area to add a picture from the picture album.
 - You can tap [+] to show hidden information field and tap [-] to hide them.
4. Tap [Done] to save the contact.
 - To cancel, tap [Revert].

Checking the contact

1. Tap Contacts.
2. Tap one of the existing contacts.
3. Tap  to use following options.

Edit contact	You can edit detail information of the contact.
Share	You can attach contact in email and share with other people
Options	You can set designated ringtone for selected contact.
Delete contact	You can delete selected contact from you phone.

Applications

Alarm clock

You can check, add and turn on/off the alarm.


<capture>

Alarm information

Tap to view detail settings of the alarm.


Check mark

Tap to turn on/off the alarm. When the check mark is green, alarm is on.

Tap  to use following functions

Add alarm	You can add a new alarm.
Show/Hide clock	You can show/hide the clock.
Settings	You can set alarm in silent mode, alarm volume, snooze duration, side button behavior.

Adding a new alarm

1. Tap  from the alarm screen.
2. Set the time.
 - Alarm will turn on the time that you set.
 - Tap [+] [-] to adjust hour and minute.
 - Tap [AM/PM] to set a.m./ p.m.
3. Set the ringtone.
 - Select and tap the ringtone.
 - Selected ringtone will sound when alarm turns on.
4. Set vibrate on/off.
 - Set your phone to vibrate when the alarm turns on.
5. Set repeat option.
 - Set the day(s) when the alarm will turn on.
6. Set Label.
 - Name a alarm to categorize alarms.

Calculator

You can use calculator on your phone.

[Home screen→App tray→Calculator]

<capture>

Clear

Tap [clear] to delete one number and, tap and hold [clear] to delete the entire number entered.

 button

Tap to change the panel to advance or basic.

Photos

See it, capture it, share it!

<capture>

Auto focus box


Settings

Tap to change the Scenes, Flash, Brightness capture mode and view.

Taking a picture

You need a micro SD memory card to store the photos. You cannot save the photo unless you have a micro SD memory card inserted in your phone.

- To take the photo, lightly press the camera button halfway until the auto focus box turns green, then press all the way to take the photo.
- To check the picture album, tap [=] button

Tap  to use following functions

OCR	You can change to OCR function
Tags	You can change the tags settings
Settings	You can change the general settings for photos.

Movie

Record a video with your phone!

<capture>

Settings


Tap to change the Scenes, Flash, Brightness capture mode and view.

Recording a video

You need a micro SD memory card to store the videos. You cannot save the video unless you have a micro SD memory card inserted in your phone.

- To take the video. press the camera button.

- To check the video album, tap [=] button

Tap  to use following functions

OCR	You can change to OCR function
Tags	You can change the tags settings
Settings	You can change the general settings for photos.

Dictionary

You can search meanings of the words with your phone.


<capture>

Search Method

You can set the search method from word, idiom, example, hangulro, spelling check.

Using the dictionary

1. Enter a word and tap [next] to search for a meaning.
2. Select a word.

Tap  to use following functions

Highlight Pen	You can highlight the word
Change dictionary	You can change the types of dictionary.
Save	You can save the word in a wordbook
History	You can check the history of the searched words.
Dict. Setting	You can check and change the general settings.

Notepad

You can write a note and save in your phone.

<capture>

Existing note

Tap to view or edit existing note



button

Tap to add a note.

Adding a new note

1. Tap [App Tray]→[Note pad]→
2. Tap [Add note]
3. Write a note.

- Press to go back to previous screen and the note will be saved automatically.

Tap to use following functions

Discard

You can go back to previous screen without saving.

Subway map

The phone provides the nationwide subway route map. The information is subject to change depending on the circumstances.

<capture>

Navigation

When you zoom in the map, navigation will show where you are looking at.



button

Tap to see more options.

Find a route

1. Tap [App Tray]→[Subway map]→
2. Tap [Find route].
3. Set start station.
4. Set end station.
5. View the route

- You can tap to see shortest path, fewest transfers or save route.

Tap to use following functions

My route	You can see the saved route.
Station info	Select a subway station and press to find first/last train timetable, exit info and transfer info
Regions Setting	You can set the region from Seoul, Daejeon, Daegu, Busan and Gwangju.
Find route	You can set starting and end station to find a route.
Lost & Found Center	You can set a

TDMB

You can watch real-time TV and listen to the radio. Also recording and storing it is available with the phone.

<capture>

Button description	
[icon]	Adjust volume
[icon]	Press : Set favorite channel or move to favorite channel Press and hold : Move to menu
[icon]	Press: Capture current channel Press and hold: Record current channel

Menu description

1
Move to previous/next channel

2
Check tu information by connecting to NATE

3
Adjust volume

4
Move to previous channel


5
[icon] Check broadcast information
[icon] Watch the selected video channel
[icon] Listen to the selected audio channel
[icon] Check next program
[icon] Set program start alert
[icon] Wireless internet available broadcast
[icon] Recording available broadcast

Settings

Language

You can set the language of your phone in Korean or English.


<capture>

1. Tap  → **Settings** from the home screen.
2. Tap [Language & Keyboard].
3. Tap [Select locale].
4. Tap the desired language.
 - You can choose from English and Korean.

Sound

You can set the sound option for your phone.


<capture>

1. Tap  → **Settings** from the home screen.
2. Tap [Sound & display].
3. Change the settings.
 - You can turn on/off the silent mode, change ringer volume, media volume, phone ringtone, Phone vibrate, notification ringtone, audible touch tones, audible selection, haptic feedback, and SD card notifications.

Language

You can set the language of your phone in Korean or English.


<capture>

1. Tap  → **Settings** from the home screen.
2. Tap [Language & Keyboard].
3. Tap [Select locale].
4. Tap the desired language.
 - You can choose from English and Korean.

Sound

You can set the sound option for your phone.

<capture>

1. Tap  → **Settings** from the home screen.
2. Tap [Sound & display].
3. Change the settings.
 - You can turn on/off the silent mode, change ringer volume, media volume, phone ringtone, Phone vibrate, notification ringtone, audible touch tones, audible selection, haptic feedback, and SD card notifications.

Phone Setting

Integrated menu for phone setting.

Language	You can set the language to either Korean or English.
Removable disk	Set the Removable disk On/Off. • You need external memory card to use this function and the phone function will be restricted.
Airplane Mode	Set your phone available in the plane or other places that restricts mobile phone use (MP3, Games, Organizer etc.).
Locked Mode	Lock all the functions or set 'Phone Lock', 'Service Lock', 'Photo Album', 'Movie Album', 'Call Lock', or 'Message Lock' on/off to restrict other people from using it.
Change Password	Change your phone's password. •Default password is '0000'.
Restore Default	Restore your phone to the default setting.
Factory Reset	Initialize the phone to default settings.
Format External	Format external memory card.
Format Internal	Format internal memory.
Format USIM card	Format USIM card.
Format T MAP	Format T MAP.
Format NATE Cash	Format NATE cash.

Call Setting

Integrated menu for call setting.

- You can set/cancel various call answer modes.
- You can check call time by touching 'Call Time'.

Network Setting

- You can set network when using global roaming.
- You cannot use it when using in domestic.

Answer options	Set the answering option. Answer your phone by touching 'Answer' key or by opening the Flip.
Int'l Restrict Call	Restricts international outgoing calls.
700/600 Restrict Call	Restricts outgoing call starts with 700/600.
Call Time/History	You can check or reset 'Last Call Timer', 'Cumulative Dialed', 'Total Dialed', 'Roaming Call', 'Sent Message', 'Last Reset'.

Date/Time Setting

You can set current date and time in the phone.

- 1) Set the date/time setting switch as [ON].
- 2) Set date, time and city.
- 3) Set summer time (DST).
- 4) Save date/time by pressing [SAVE].

 
Moto Customer Service

You can receive the service guide about the phone.

Call Center

- You can check the representative number and business hours of Motorola Customer Call Center will be displayed.
- Touch the number to place a call to the customer center.

Search Service Center

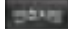- Touch [Seoul▼] on the top of the screen and you can select a city among Seoul, Kyounki, Kang-won, Chungcheong, Jeonra, Kyoungsang and Jeju.
- You can check call number and map of the local service center.
- Select a service center you want and touch the call number to place a call directly.
- Touch  to save the number of customer center.

Troubleshooting

- You can check the solution against phone failure.

My Device Info

You can check your phone's model name and S/W version.

- You can check the model name, version and serial number of your mobile phone.
- You can register your photo, name, contact number and e-mail.

USIM Setting

To prevent loss of information when lost or stolen the phone, you can set lock and PIN.








PIN Lock : You can set PIN code when turning on/off the mobile phone.

Change PIN Code : You can change PIN code. (Set PIN lock to use this function)

Menu Access : You can lock the menu when USIM card is not inserted in the phone.(Set PIN lock to use this function)

Block USIM Setting : You can turn on/off the block USIM Setting.

Change Blocking USIM Password : You can change the existing password.

Accessories			Troubleshooting
 <p>Standard-type battery</p>	 <p>Stereo earphone</p>	 <p>Multi adapter</p>	<p>Nothing is displayed on the screen</p> <ul style="list-style-type: none"> · Check the battery. <p>No antenna bar is displayed on the screen</p> <ul style="list-style-type: none"> · Move to other place and then attempt a call again. <p>It sounds 'Toot-Toot' when a call is placed</p> <ul style="list-style-type: none"> · There is no communication channel available or your phone has failed in communicating with a base station. End the call and try again by redialing. <p>The charging lamp of the charger blinks in red</p> <ul style="list-style-type: none"> · Check the battery position or clean the terminals before reattempting charging. If the lamp keeps blinking, contact the nearest service center. <p>Battery operating time does not comply with the User Manual</p> <ul style="list-style-type: none"> · The battery operating time reduces slowly as the battery repeats charging and discharging. The operating time reduces rapidly if the battery is left in a cold or hot place for a long time. <p>Malfunction or failure to power On</p> <ul style="list-style-type: none"> · Remove the battery and reinstall it, and then turn the power on.
 <p>USB data cable</p>		 <p>Car charger</p>	
 <p>Travel charger</p>	 <p>Bluetooth headset</p>		
<p>You can purchase optional items at the nearest Motorola service center or accessory shop. Contact the service provider or visit Motorola website (www.mymotorola.co.kr) for details.</p>			

Spec and Feature

	Wireless communications service	Bluetooth
Transmit frequency	824.64~848.37MHz	2402~2480MHz
Receive frequency	869.64~893.37MHz	2402~2480MHz
TX power	250mW	0.1mW
Number of channel	20CH	79CH
Type of emission	G7W	F1D
Modulation system	QPSK/OQPSK	GFSK
Communication mode	Duplex operation system	Semi-duplex operation system
Oscillation	PLL	
Power	DC 3.7V	
Exterior, weight	-	
Relative humidity	-	

Authentic Label

1. Name of the model : Wireless communications service device (V13)
2. Authentication number :
3. Authentication Trade name : Motorola Korea Inc.
4. The date of manufacture :
5. Manufacturer/country : Motorola Korea Inc. / China

Notice to Users

※ The manufacturer and the installer are not allowed to provide the service that affects people's lives since there can be an interference of in this equipment.

Specific Absorption Rate Data

This model wireless phone meets the government's requirements for exposure to radio waves.

Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission (FCC) of the U.S. Government and by the Canadian regulatory authorities. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age or health. The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC and by the Canadian regulatory authorities is 1.6 W/kg.¹ Tests for SAR are conducted using standard operating positions accepted by the FCC and by Industry Canada with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station, the lower the power output. Before a phone model is available for sale to the public in the U.S. and Canada, it must be tested and certified to the FCC and Industry Canada that it does not exceed the limit established by each government for safe exposure. The tests are performed in positions and locations (e.g., at the ear and worn on the body) reported to the FCC and available for review by Industry Canada. The highest SAR value for this model phone when tested for use at the ear is 0.68 W/kg, and when worn on the body, as described in this user guide, is 0.23 W/kg. (Body-worn measurements differ among phone models, depending upon available accessories and regulatory requirements).² While there may be differences between the SAR levels of various phones and at various positions, they all meet the governmental requirements for safe exposure. Please note that improvements to this product model could cause differences in the SAR value for later products; in all cases, products are designed to be within the guidelines.

Motorola service Center

☎ Motorola mobile phone consultant and A/S inquiry Nation wide 1588-6633
Please tell us your product model, error status and your contact number. We will try our best to solve your questions and provide quick service.

	Region	Service Center	Location
Seoul	Gangnamgu	Samseong station	1 Floor Ildong Building 968-5 Daechi-dong Gangnam-gu Seoul
	Gangbukgu	Gangbuk	202ho 2 Floor Gadeuntower Building 446-13 Beon1-dong Gangbuk-gu Seoul
	Gangnamgu	Seolleung	703ho Hwasin Building 705-22 Yeoksam-dong Gangnam-gu Seoul
	Gangdonggu	Gangdong	2 Floor Yangseong Building 77-37 Seongnae-dong Gangdong-gu Seoul
	Eunpyunggu	Eunpyung	187-38ho Daejo-dong Eunpyeong-gu Seoul
	Jungnanggu	Jungnang	2 Floor 115-13 Sangbong-dong Jungnang-gu Seoul
	Gangseogu	Gangseo	401ho Daeseong Building 1065-14 Hwagok3-dong Gangseo-gu Seoul
	Gwanakgu	Gwanak	5 Floor Jeongdobilding 1422-6 Sillim-dong Gwanak-gu Seoul
	Gwangjingu	Technomart	6 Floor Samudong Technomart Guui-dong Gwangjin-gu Seoul
	Dongdaemungu	Dongdaemun	1 Floor Dongeun Building 89-53ho Sinseol-dong Dongdaemun-gu Seoul
	Dongjakgu	Dongjak	2 Floor Osong Building 86-1 Sadang-dong Dongjak-gu Seoul
	Seochogu	Gangnam	6 Floor Eundo Building 737-19beonji Banpo-dong Seocho-gu Seoul
	Seodaemungu	Sinchon	5 Floor Daewon building 72-25,26 Changcheon-dong Seodaemun-gu Seoul
	Jongno	Jongno	4 Floor Tongil Building 12beonji Jongno2-ga Jongno-gu Seoul
	Yeongdeugpogu	Yoeongdeungpo	9 Floor Annam Building 47-3 7ga Yeongdeungpo-dong Yeongdeungpo-gu Seoul
Yongsangu	Yongsan I park mall	3ho 8 Floor Jeonjajeonmunjeom I Park mall 40-999 Hangangno3-ga Yongsan-gu Seoul	
Incheon	Namdonggu	Incheon namdong	3 Floor 6-dong Nammun Building 1131beonji 1-dong Guwol Namdong-gu Incheon
	Bupyeonggu	Bupyeong	1 Floor Motorola service center 374-1 Bupyeong4-dong Bupyeong-gu Incheon
	Namgu	Juan	5 Floor Daedong Building 133-3 Juan-dong Nam-gu Incheon
Gyeonggi	Suwon	Dongsuwon	401ho Jowon Building 1046-2 Ingye-dong Paldal-gu Suwon-si Gyeonggi-do
		Suwon station	3 Floor Sammyeong Building 90-17 2ga Maesallo Gwonseon-gu Suwon-si Gyeonggi-do
		Buksuwon	203ho Dongyangparagon 2 Floor 499-3 Songjuk-dong Jangan-gu Suwon-si Gyeonggi-do

❖ Background with color is designated motorola wasted mobile phone collecting center. They may change without prior notice.

Motorola service Center

☎ Motorola mobile phone consultant and A/S inquiry Nation wide 1588-6633
Please tell us your product model, error status and your contact number. We will try our best to solve your questions and provide quick service.

Region	Service Center	Location
Gyeonggi	Ahnyang	Ahnyang 2 Floor Shopping mall building 1beonga 674-26 Anyang1-dong Manan-gu Anyang-si Gyeonggi-do
	Seongnam	Seongnam 4761beonji Sujin2-dong Sujeong-gu Seongnam-si Gyeonggi-do
	Bucheon	Bucheon 207ho 2 Floor 1058-3 Jung3-dong Wonmi-gu Bucheon-si Gyeonggi-do
	Goyang	Ilsan 211ho 110-2beonji Juyeop-dong Ilsan-gu Goyang-si Gyeonggi-do
	Goyang	Hwajeong 403ho Hyeonchang Building 978 Hwajeong-dong Deogyong-gu Goyang-si Gyeonggi-do
	Uijeongbu	Uijeongbu 2 Floor Gwanju building 567-2 Uijeongbu2-dong Uijeongbu-si Gyeonggi-do
	Guri	Guri 406ho 4 Floor Dongwon play station building Inchangdong 676-6 Guri-si Gyeonggi-do
	Ansan	Ansan 2 Floor Namyang Building 541-2 Gojan-dong Danwon-gu Ansan-si Gyeonggi-do
	Gunpo	Sanbon 201ho 2 Floor Sinmyeongsan Building 1142-6 Sanbon-dong Gunpo-si Gyeonggi-do
	Gwangmyung	Gwangmyeong 306ho 3 Floor Leaders Building 158-195ho Gwangmyeong-dong Gwangmyeong-si Gyeonggi-do
	Pyeongtaek	Pyeongtaek 2 Floor 62-17beonji Pyeongtaek-dong Pyeongtaek-si Gyeonggi-do
	Icheon	Icheon 2 Floor 148-11beonji Changjeon-dong Icheon-si Gyeonggi-do
	Yongin	Yongin 302ho 3 Floor Sincheon Building 241-5beonji Samga-dong Cheoin-gu Yongin-si Gyeonggi-do
	Gimpo	Gimpo 2 Floor Geonjae Building 858beonji Bukbyeon-dong Gimpo-si Gyeonggi-do
Osan	Osan 402ho Osan-green Plaza 925-6 Osan-dong Gyeonggi-do	
Bundang	Bundang 6 Floor Aubi Building Seohyeon 272-1 Seohyeon-dong Bundang-gu Seongnam-si Gyeonggi-do	
Daejeon	Donggu	Daejeon donggu 2 Floor Yongjeon Building 172-4 Yongjeon-dong Dong-gu Daejeon
	Junggu	Daejeon junggu Motorola 2 Floor Socheong1 beonga Building 5-2 Seonhwa-dong Jung-gu Daejeon
	Seogu	Daejeon seogu 2 Floor Hanyang Plaza 835beonji Tanbang-dong Seogu Daejeon
Chungnam	Cheonan	Cheonan 1 Floor Wonhong Building 135-19 Wonseong-dong Cheonan-si Chungcheongnam-do
	Nonsan	Nonsan 605-6ho Chwiam-dong Nonsan-si Chungcheongnam-do

Region		Service Center	Location
Chungnam	Gongju	Gongju	2 Floor 228beonji Jung-dong Gongju-si Chungcheongnam-do
	Seosan	Seosan	2 Floor 126-18 Eupnae-dong Seosan-si Chungcheongnam-do
	Asan	Asan	111-3ho Bangchuk-dong Asan-si Chungcheongnam-do
Chungbuk	Cheongju	Cheongju heungdukgu	2 Floor 1053beonji Bongmyeong1-dong Heungdeok-gu Cheongju-si Chungcheongbuk-do
		Cheongju sangdanggu	112-7 Munhwa-dong Sangdang-gu Cheongju-si Chungcheongbuk-do
	Chungju	Chungju	1042 Munhwa-dong Chungju-si Chungcheongbuk-do
	Jecheon	Jecheon	69-9 2ga Jungangno Jecheon-si Chungcheongbuk-do
Busan	Namgu	Busan namgu	2 Floor 73-4ho Daeyeon-dong Nam-gu Busan
	Dongraegu	Busan dongraegu	1436-5beonji Oncheon2-dong Dongnaegu Busan
	Sasanggu	Busan sasanggu	502ho Cheongho Building 547-1 Gwaebeop-dong Sasanggu Busan
	Jingu	Busan jingu	2 Floor Myeongseong Building 870-12beonji Beomcheon1-dong Jingu Busan
	Junggu	Busan junggu	3 Floor Dongnam Building 15-5 4ga Nampo-dong Junggu Busan
	Haeundaegu	Busan haeundaegu	2 Floor 586-23beonji U-dong Haeundaegu Busan
Gyeongsangnam	Masan	Masan	2 Floor SK telecom 151-25 Yangdeok2-dong Masan-si Gyeongsangnam-do
	Ulsan	Ulsan junggu	2 Floor 226-43 Seongnam-dong Junggu Ulsan
		Ulsan	2 Floor Jungang Building 568-11 Sinjeong3-dong Namgu Ulsan
	Gimhae	Gimhae	613-12 Buwon-dong Gimhae-si Gyeongsangnam-do
	Jinju	Jinju	1 Floor 60-11beonji Jangdae-dong Jinju-si Gyeongsangnam-do
	Changwon	Changwon	105-1ho 1 Floor Newolympia-sangga 95-2 Jungang-dong Changwon-si Gyeongsangnam-do
	Yangsan	Yangsan	462-10 Bukbu-dong Yangsan-si Gyeongsangnam-do
	Tongyeong	Tongyeong	5-26beonji Buksin-dong Tongyeong-si Gyeongsangnam-do
	Jinhae	Jinhae	761-288 Yeojwa-dong Jinhae-si Gyeongsangnam-do

Motorola service Center

☎ Motorola mobile phone consultant and A/S inquiry Nation wide 1588-6633
Please tell us your product model, error status and your contact number. We will try our best to solve your questions and provide quick service.

Region	Service Center	Location
Daegu	Junggu	Jungdaegu 2 Floor Gyeongilgaebal Building 2118-2 Namsan3-dong Junggu Daegu
	Donggu	Dongdaegu 502ho Silla Building 19-4beonji Sincheon3-dong Donggu Daegu
	Bukgu	Bukdaegu 2 Floor 281-2 Nowon2ga Bukgu Daegu
	Seogu	Seodaegu 5 Floor Dongsan Building 458-48beonji Naedang4-dong Seogu Daegu
Gyeongbuk	Gyeongsan	Gyeongsan 2 Floor 247-6beonji Siji-dong Suseong-gu Daegu-si Gyeongsangbuk-do
	Gumi	Gumi 1 Floor 189-22 Wonpyeong2-dong Gumi-si Gyeongsangbuk-do
	Andong	Andong 333-102 Dangbuk-dong Andong-si Gyeongsangbuk-do
	Kyungju	Kyungju 121-21 Noseo-dong Kyungju-si Gyeongsangbuk-do
	Youngchun	Youngchun 1 Floor 183-18beonji Yasa-dong Youngchun-si Gyeongsangbuk-do
	Pohang	Pohang 732-15beonji Daeheung-dong Buk-gu Pohang-si Gyeongsangbuk-do
Gwangju	Gwangsangu	Gwangju gwangsangu 1 Floor 906-6beonji Singa-dong Gwangsangu Gwangju Jeollanam-do
	Namgu	Gwangju namgu 395-16beonji Bangnim-dong Namgu Gwangju Jeollanam-do
	Gwangsangu	Gwangju cheomdan 209ho Central building 867-1 Wolgyedong Gwangsangu Gwangju
	Bukgu	Gwangju bukgu 480-14beonji Sinan-dong Bukgu Gwangju Jeollanam-do
	Seogu	Gwangju seogu 647-14 Nongseong-dong Seogu Gwangju Jeollanam-do
Jeonnam	Mokpo	Hadang 880beonji Sang-dong Mokpo-si Jeollanam-do
	Suncheon	Suncheon 1 Floor Bonghwa Building 1686-9beonji Jorye-dong Suncheon-si Jeollanam-do
	Yeosu	Yeosu 576-7beonji Mipyong-dong Yeosu-si Jeollanam-do
	Haenam	Haenam 438-3ho Hae-ri Haenam-eup Haenam-gun Jeollanam-do
Jeonbuk	Jeonju	Jeonju kyungwon 2 Floor 33-10 3ga Gyeongwon-dong Wansan-gu Jeonju-si Jeollabuk-do
		Jeonju keumam 711-1 Geumam-dong Deokjingu Jeonju Jeollabuk-do

Region		Service Center	Location
Jeonbuk	Iksan	Iksan	3ga 53-1 Jungang-dong Iksan-si Jeollabuk-do
	Gunsan	Gunsan	2 Floor 845-11 Naun-dong Gunsan-si Jeollabuk-do
	Jeongeup	Jeongeup	44-59beonji Yeonji-dong Jeongeup-si Jeollabuk-do
	Namwon	Namwon	1048-2beonji Hyanggyo-dong Namwon-si Jeollabuk-do
	Gimjae	Gimjae	178-13 Yochon-dong Gimje-si Jeollabuk-do
Kangwon	Chuncheon	Chuncheon	661-21 Hyoja2-dong Chuncheon-si Gangwon-do
	Gangneung	Gangneung	134-9 Gyo2-dong Gangneung-si Gangwon-do
	Wonju	Wonju	7 Floor Jiam Building 193-6 Ilsan-dong Wonju-si Gangwon-do
	Sokcho	Sokcho	Hannam Building 1 Floor 932-4beonji Gyo-dong Sokcho-si Gangwon-do
	Donghae	Donghae	3 Floor Saemsil Building Saemsil 851beonji Cheongok-dong Donghae-si Gangwon-do
Jeju	Jeju	Jeju	4 Floor Jeongju Building 1060-14beonji Ido2-dong Jeju-si

 
•Location and address of the service center may change without notice. For detail A/S information please visit our website (<http://www.motorola.com/kr/consumer>).

Customer Support Center	
Mobile Phone Customer Support Center	SK Telecom Customer Center
<ul style="list-style-type: none"> · Mon ~ Fri 9:00 ~ 18:00 / Sat 9:00 ~ 13:00 (Business Hours 9:00 ~ 18:00(Weekdays)) · Toll-free (Telephone) 1588-6633 	<ul style="list-style-type: none"> · Customer Center 1599-0011(Paid service) / From your mobile phone 114(Free of charge) · MCustomer Center From your mobile phone 114 + NATE button(Free of charge) · Internet www.tworld.co.kr · Global Roaming 1599-2011(Paid service) · T MAP Navigation 1588-4011(Paid service) / From your mobile phone 1522(Free of charge) · Billing Management center 1599-0500(Paid service)
Motorola Website	
<ul style="list-style-type: none"> · http://www.motorola.com/kr/consumer 	

Collecting wasted-mobile phones

The collected wasted-mobile phones are utilized as resources and residues are treated ecologically. Motorola is willing to do its best to protect environment not only today but in the future also. We kindly invite you to participate in this movement for the protection of environment.


Motorola phone collecting centers

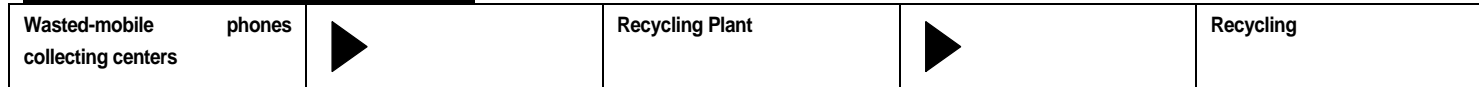

Recycling of wasted-mobile phone

<ul style="list-style-type: none"> - Return the old one to the distributor when you purchase a new phone. - Return your mobile phone to a representative of mobile service provider. 	<ul style="list-style-type: none"> - Visit a near-by representative of the manufacturer or A/S center. - Utilize a collecting bag with no charger (arranged in provincial office, distributor, representative)
--	--

Guidelines for collecting discarded Motorola mobile phones

	<p>Please think of environment when you discard your phones and accessories. Do not discard old mobile phones or accessories such as battery pack, battery charger, etc. together with household waste. In some countries and areas, they have established a system to treat useless electronic and electrical products and batteries. Please contact your area for more information. If there is no appropriate system available, please send useless mobile phone and accessories to a near-by Motorola service center.</p>
---	---