



motorola **Grant**

User's Guide

MOTOROLA Grant 25/06/09

Dummy Page - To be discarded before printing

ITC Notes:

Use this template with A6MotoLandscape StructApps. This template supports:

 
- Spot color formatting.
To produce a B/W print , check the 'Spot color as B/W' checkbox in the Framemaker print dialog.
- User's Guides with embedded Legal Guides, if needed.
All semantically-named elements within the Legal Guide content must have their Role attributes set to LG.

HELLOMOTO


Introducing your new Motorola Grant wireless phone! It's an easy-to-use music phone with a sleek design that's sure to get attention.

- **My Phone, My Way** – It's your phone — make it that way. Customise your home screen (page 25) with personal pictures, change wallpapers, and use your favourite song as your ringtone.
- **Connect on So Many Levels** – Whether it's with work or friends, stay connected with voice (page 41) and messaging (page 40).
- **Rich Music Experience** – Use the music player (page 43) to set your playlist for your morning commute. Insert an optional memory card into the removable memory slot to save many more songs! Or, use the FM Radio (page 42) to listen to your favourite music or news programs.
- **Camera** – Capture key moments with Photos (page 47) and Videos (page 49).
- **Convenient Extras** – When you are away from your home or desk, make use of handy tools like Contacts, Calculator, Alarm Clock, Calendar, and others (page 58).
- **Fun** – When you have a little time to spare, play a game (page 65).

Here's a quick anatomy lesson:

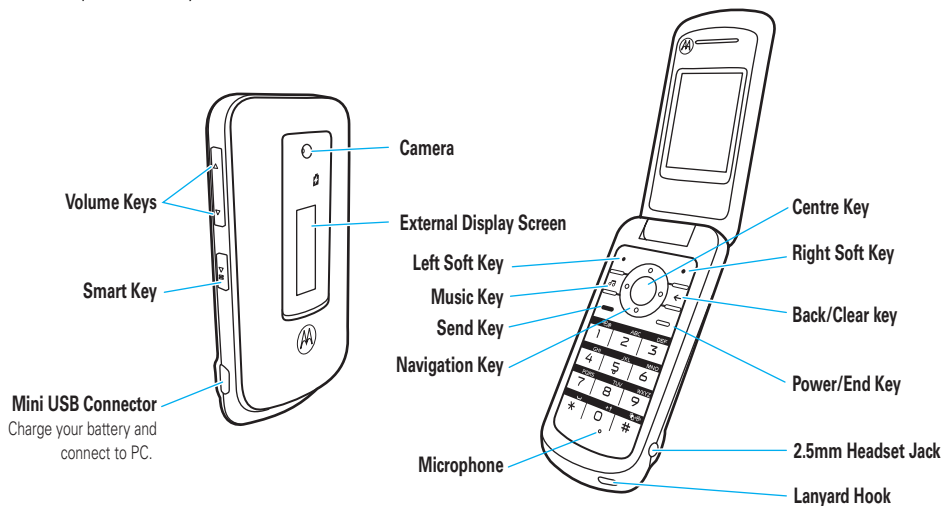

A few menu basics:

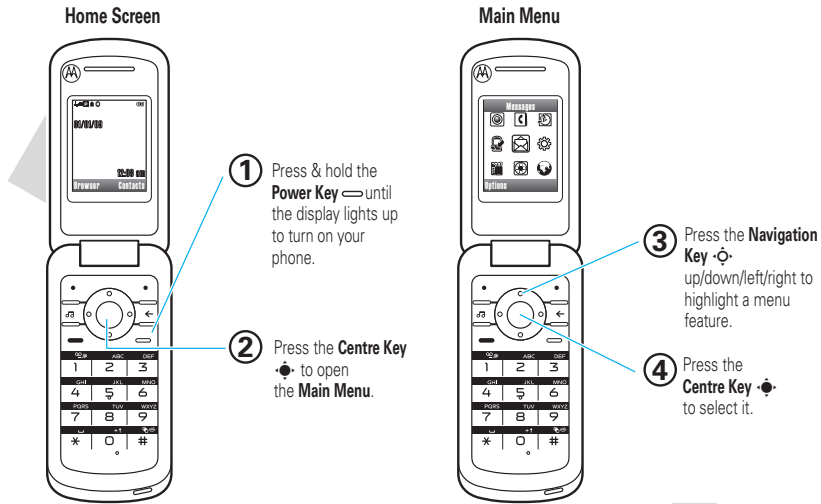 

This is a typical home screen and main menu layout. **Your phone may be a little different.**

Motorola, Inc.
Consumer Advocacy Office
1307 East Algonquin Road
Schaumburg, IL 60196
www.hellomoto.com

1-800-331-6456 (United States)

1-888-390-6456 (TTY/TDD United States for hearing impaired)

1-800-461-4575 (Canada)

Certain mobile phone features are dependent on the capabilities and settings of your service provider's network. Additionally, certain features may not be activated by your service provider, and/or the provider's network settings may limit the feature's functionality. Always contact your service provider about feature availability and functionality. All features, functionality, and other product specifications, as well as the information contained in this user's guide are based upon the latest available information and are believed to be accurate at the time of printing. Motorola reserves the right to change or modify any information or specifications without notice or obligation.

MOTOROLA and the Stylized M Logo are registered in the US Patent & Trademark Office. All other product or service names are the property of their respective owners. The Bluetooth trademarks are owned by their proprietor and used by Motorola, Inc. under license. Java and all other Java-based marks are trademarks or registered trademarks of Sun Microsystems, Inc. in the U.S. and other countries. Microsoft and Windows are registered trademarks

of Microsoft Corporation; and Windows XP is a trademark of Microsoft Corporation.

© Motorola, Inc., 2009.

Caution: Changes or modifications made in the radio phone, not expressly approved by Motorola, will void the user's authority to operate the equipment.

Software Copyright Notice

The Motorola products described in this manual may include copyrighted Motorola and third-party software stored in semiconductor memories or other media. Laws in the United States and other countries preserve for Motorola and third-party software providers certain exclusive rights for copyrighted software, such as the exclusive rights to distribute or reproduce the copyrighted software. Accordingly, any copyrighted software contained in the Motorola products may not be modified, reverse-engineered, distributed, or reproduced in any manner to the extent allowed by law. Furthermore, the purchase of the Motorola products shall not be deemed to grant either directly or by implication, estoppel, or otherwise, any license under the copyrights, patents, or patent applications of Motorola or any third-party software provider, except for the normal, non-exclusive, royalty-free license to use that arises by operation of law in the sale of a product.

Manual Number: 68XXXXX289-A

contents

menu map	7	add a phone number to an existing contact	23	change main menu appearance 35	
Safety Information	9	replace a phone number to an existing contact	24	ring styles & alerts	36
FCC Notice	13	call a stored phone number .	24	answer options	36
Use and Care	14	basics	25	wallpaper	36
EU Conformance	15	home screen	25	screen saver	36
Recycling Information	16	enter text	26	calls	38
get started	17	side keys	30	redial a number	38
about this guide	17	handsfree	31	call history	38
SIM card	17	codes & passwords	31	return a missed call	38
memory card	18	lock & unlock phone	32	call waiting	39
battery	19	memory card	32	speed dial	39
turn it on & off	22	tips & tricks	34	emergency calls	39
make a call	22	customise	35	messages	40
answer a call	22	change home screen shortcuts 35		send a message	40
adjust volume	23			receive a message	40
change ring style	23			voicemail	41
store a phone number	23				

entertainment	42	fun & games	65
FM radio	42	service & repairs	66
music player	43	SAR Data	67
Take & send photos	47	Hearing Aids	68
record & send a video	49	WHO Information	69
WebAccess	50	Registration	69
connections	52	Privacy and Data Security	70
cable connections	52	Driving Safety	71
Bluetooth® wireless	54	index	73
other features	57		
contacts	57		
more message features	57		
more personalising features	59		
call times	60		
in call menu	60		
headset	61		
network	62		
personal organiser	62		
advanced calling	63		
security	65		

menu map

main menu



Call History

- Received calls
- Dialed calls
- Call times
- Call cost *



Camera



My Music

- My Music
- FM radio



Extras

- Calculator
- Calendar



Contacts



Settings

- (see next page)



Messages

- Create message
- Inbox
- Draft
- Outbox
- Messages with Tags
- Quick notes
- Voicemail
- Info services
- MMS templates
- Message Settings



Games & Apps



WebAccess

- Start Browser
- Web Shortcut
- Go to URL



Bluetooth



Ring & Volume

- Change Ring Style
- Line 1
- Line 2
- Ring Volume
- Text msgs
- Voicemail
- Key volume
- Other settings



Clock

- Time and date
- Alarm clock
- Stop watch



Calendar



Airplane Mode

- Airplane Mode
- Prompt At Startup



Quick txt



Multimedia

- My Music
- FM radio
- Video Camera



Gallery

- All Pictures
- Videos
- Wallpapers



File Manager

- Pictures
- Sounds
- Videos
- Java
- vCard, vCal
- Others

* Network Dependent

This is the standard main menu layout.

Your phone's menu may be a little different.

settings menu

Easy menu

Ring & Volume

Display settings

- Wallpaper
- Display timeout
- Screensaver

Keys

- Navikey Shortcuts
- Left soft key
- Right soft key

Phone settings

- Language
- Airplane Mode
- Storage
- Java Settings
- Greeting
- Device Information
- Restore all Settings
- Delete Phone Data
- Format additional storage device

* Network Dependent

This is the standard main menu layout.

Your phone's menu may be a little different.

Call Settings

- Call Forward
- Headset
- My caller ID
- Open to answer
- Network *
- Easy prefix
- Other settings

Security

- SIM PIN
- Phone lock
- New passwords
- Lock Smart Key
- Restrict Calls *

Safety and General Information

This section contains important information on the safe and efficient operation of your mobile device. Read this information before using your mobile device.*

Exposure to Radio Frequency (RF) Energy

Your mobile device contains a transmitter and receiver. When it is ON, it receives and transmits RF energy. When you communicate with your mobile device, the system handling your call controls the power level at which your mobile device transmits.

Your Motorola mobile device is designed to comply with local regulatory requirements in your country concerning exposure of human beings to RF energy.

Operational Precautions

For optimal mobile device performance and to be sure that human exposure to RF energy does not exceed the guidelines set forth in

* The information provided in this document supersedes the general safety information in user's guides published prior to May 1, 2007.

the relevant standards, always follow these instructions and precautions.

External Antenna Care

If your mobile device has an external antenna, use only a Motorola-supplied or approved replacement antenna. Use of unauthorized antennas, modifications, or attachments could damage the mobile device and/or may result in your device not complying with local regulatory requirements in your country.

DO NOT hold the external antenna when the mobile device is IN USE. Holding the external antenna affects call quality and may cause the mobile device to operate at a higher power level than needed.

Product Operation

When placing or receiving a phone call, hold your mobile device just like you would a landline phone.

If you wear the mobile device on your body, always place the mobile device in a Motorola-supplied or approved clip, holder, holster, case, or body harness. If you do not use a body-worn accessory supplied or approved by Motorola—or if you hang your mobile device from a lanyard around your neck—keep the mobile

device and its antenna at least 2.5 centimeters (1 inch) from your body when transmitting.

When using any data feature of the mobile device, with or without an accessory cable, position the mobile device and its antenna at least 2.5 centimeters (1 inch) from your body.

Using accessories not supplied or approved by Motorola may cause your mobile device to exceed RF energy exposure guidelines. For a list of Motorola-supplied or approved accessories, visit our Web site at: www.motorola.com.

RF Energy Interference/Compatibility

Nearly every electronic device is subject to RF energy interference from external sources if inadequately shielded, designed, or otherwise configured for RF energy compatibility. In some circumstances your mobile device may cause interference with other devices.

Follow Instructions to Avoid Interference Problems

Turn off your mobile device in any location where posted notices instruct you to do so.

In an aircraft, turn off your mobile device whenever instructed to do so by airline staff. If your mobile device offers an airplane mode or similar feature, consult airline staff about using it in flight.

Implantable Medical Devices

If you have an implantable medical device, such as a pacemaker or defibrillator, consult your physician before using this mobile device.

Persons with implantable medical devices should observe the following precautions:

- ALWAYS keep the mobile device more than 20 centimeters (8 inches) from the implantable medical device when the mobile device is turned ON.
- DO NOT carry the mobile device in the breast pocket.
- Use the ear opposite the implantable medical device to minimize the potential for interference.
- Turn OFF the mobile device immediately if you have any reason to suspect that interference is taking place.

Read and follow the directions from the manufacturer of your implantable medical device. If you have any questions about using your mobile device with your implantable medical device, consult your health care provider.

Driving Precautions

Check the laws and regulations on the use of mobile devices in the area where you drive. Always obey them.

When using your mobile device while driving, please:

- Give full attention to driving and to the road. Using a mobile device may be distracting. Discontinue use if you can't concentrate on driving.
- Use handsfree operation, if available.
- Pull off the road and park before making or answering a call if driving conditions so require.
- Do not place a mobile device in the airbag deployment area.

Responsible driving practices can be found in the “Smart Practices While Driving” section in this user’s guide and/or at the Motorola Web site: www.motorola.com/callsmart.

Note: The use of wireless phones while driving may cause distraction. Discontinue a call if you can't concentrate on driving. Additionally, the use of wireless devices and their accessories may be prohibited or restricted in certain areas. Always obey the laws and regulations on the use of these products.

Operational Warnings

Obey all posted signs when using mobile devices in public areas.







Potentially Explosive Atmospheres


Areas with potentially explosive atmospheres are often but not always posted and can include fueling areas such as below decks on boats, fuel or chemical transfer or storage facilities, or areas where the air contains chemicals or particles, such as grain dust, or metal powders.

When you are in such an area, turn off your mobile device, and do not remove, install, or charge batteries. In such areas, sparks can occur and cause an explosion or fire.

Symbol Key

Your battery, charger, or mobile device may contain symbols, defined as follows:

Symbol	Definition
	Important safety information follows.
	Do not dispose of your battery or mobile device in a fire.
	Your battery or mobile device may require recycling in accordance with local laws. Contact your local regulatory authorities for more information.
	Do not throw your battery or mobile device in the trash.
	Your mobile device contains an internal lithium ion battery.
	Do not let your battery, charger, or mobile device get wet.

Symbol	Definition
	Listening at full volume to music or voice through a headset may damage your hearing.

Batteries and Chargers

Caution: Improper treatment or use of batteries may present a danger of fire, explosion, leakage, or other hazard. For more information, see the “Battery Use & Battery Safety” section in this user’s guide.

Choking Hazards

Your mobile device or its accessories may include detachable parts, which may present a choking hazard to small children. Keep your mobile device and its accessories away from small children.

Glass Parts

Some parts of your mobile device may be made of glass. This glass could break if the product is dropped on a hard surface or receives a substantial impact. If glass breaks, do not touch or attempt to remove. Stop using your mobile device until the glass is replaced by a qualified service centre.

Seizures/Blackouts

Some people may be susceptible to epileptic seizures or blackouts when exposed to flashing lights, such as when playing video games. These may occur even if a person has never had a previous seizure or blackout.

If you have experienced seizures or blackouts, or if you have a family history of such occurrences, please consult with your physician before playing video games or enabling a flashing-lights feature (if available) on your mobile device.

Discontinue use and consult a physician if any of the following symptoms occur: convulsion, eye or muscle twitching, loss of awareness, involuntary movements, or disorientation. It is always a good idea to hold the screen away from your eyes, leave the lights on in the room, take a 15-minute break every hour, and stop use if you are very tired.

Caution About High Volume Usage



Listening at full volume to music or voice through a headset may damage your hearing.

Repetitive Motion

When you repetitively perform actions such as pressing keys or entering finger-written characters, you may experience occasional discomfort in your hands, arms, shoulders, neck, or other parts of

your body. If you continue to have discomfort during or after such use, stop use and see a physician.

FCC Notice to Users

The following statement applies to all products that have received FCC approval. Applicable products bear the FCC logo, and/or an FCC ID in the format FCC-ID:xxxxxx on the product label.

Motorola has not approved any changes or modifications to this device by the user. Any changes or modifications could void the user's authority to operate the equipment. See 47 CFR Sec. 15.21.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. See 47 CFR Sec. 15.19(3).

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a

particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Use and Care

To care for your Motorola phone, please keep it away from:



liquids of any kind

Don't expose your phone to water, rain, extreme humidity, sweat, or other moisture. If it does get wet, don't try to accelerate drying with the use of an oven or dryer, as this may damage the phone.



extreme heat or cold

Avoid temperatures below 0°C/32°F or above 45°C/113°F.



microwaves

Don't try to dry your phone in a microwave oven.



dust and dirt

Don't expose your phone to dust, dirt, sand, food, or other inappropriate materials.



cleaning solutions

To clean your phone, use only a dry soft cloth. Don't use alcohol or other cleaning solutions.



the ground

Don't drop your phone.

 
European Union Directives Conformance Statement



Hereby, Motorola declares that this product is in compliance with:

- The essential requirements and other relevant provisions of Directive 1999/5/EC
- All other relevant EU Directives

Approval Number from your product's label in the "Search" bar on the Web site.

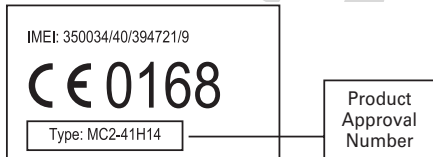

The above gives an example of a typical Product Approval Number.

You can view your product's Declaration of Conformity (DoC) to Directive 1999/5/EC (to R&TTE Directive) at

www.motorola.com/rtte. To find your DoC, enter the Product

Caring for the Environment by Recycling



This symbol on a Motorola product means the product should not be disposed of with household waste.

Disposal of your Mobile Device and Accessories

Please do not dispose of mobile devices or electrical accessories (such as chargers, headsets, or batteries) with your household waste. These items should be disposed of in accordance with the national collection and recycling schemes operated by your local or regional authority. Alternatively, you may return unwanted mobile devices and electrical accessories to any Motorola Approved Service Center in your region. Details of Motorola approved national recycling schemes, and further information on Motorola recycling activities can be found at: www.motorola.com/recycling

Disposal of your Mobile Device Packaging and User's Guide

Product packaging and user's guides should only be disposed of in accordance with national collection and recycling requirements. Please contact your regional authorities for more details.






get started

about this guide

This guide shows how to locate a menu feature as follows:

Find it:  >  **Messages** > **Create message** > **New message**

This means that, from the home screen:

- 1 Press the *centre key*  to open the main menu.
- 2 Scroll to  **Messages** and press the centre key .
- 3 Scroll to **Create message** and press the centre key .
- 4 Scroll to **New message** and press the centre key .

symbol



This means a feature is network/subscription dependent and may not be available in all areas. Contact your service provider for more information.



This means a feature requires an optional accessory.

SIM card

 
Your Subscriber Identity Module (SIM) card contains personal information like your phone number and contacts. It can also contain your voicemail and text message settings.

If you put your SIM card in another phone, that phone uses your phone number.


Caution: Don't bend or scratch your SIM card. Keep it away from static electricity, water, and dirt.

Tip: Ensure your SIM card is fully inserted into the phone before installing the battery.

1

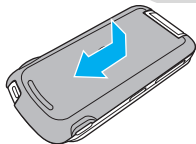

2

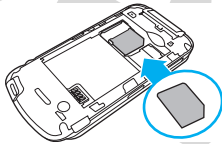 

memory card

You can use a removable microSD memory card (up to 2 GB) with your phone to store and retrieve multimedia objects, such as music and pictures.

 


Note: We recommend that you use Motorola approved memory cards only, such as SanDisk memory cards. Other memory cards may not be compatible with Grant.

To install the memory card, make sure the memory card's metal contacts are facing down.

Slide the top of the memory card under the metal band and into the holder. To remove the memory card, slide the card back out of the holder.

Note: If you download a copyrighted file and store it on your memory card, you can use the file only while your memory card is inserted in your phone. You cannot send, copy, or change copyrighted files.

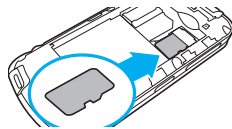

battery

battery use and safety

- Motorola recommends you always use Motorola-branded batteries and chargers. The warranty does not cover damage caused by non-Motorola batteries and/or chargers.

Caution: Use of an unqualified battery or charger may present a risk of fire, explosion, leakage or other hazard. Improper battery use, or use of a damaged battery, may result in a fire, explosion or other hazard.

- Battery usage by children should be supervised.
- **Important:** Motorola mobile devices are designed to work best with qualified batteries. If you see a message on your display such as **Invalid Battery** or **Unable to Charge**, take the following steps:

- Remove the battery and inspect it to confirm that it bears a Motorola “Original Equipment” hologram;
- If there is no hologram, the battery is not a qualified battery;
- If there is a hologram, replace the battery and retry charging it;
- If the message remains, contact a Motorola Authorized Service Centre.
- New batteries or batteries stored for a long time may take more time to charge.
- **Charging precautions:** When charging your battery, keep it near room temperature. Never expose batteries to temperatures below 0°C (32°F) or above 45°C (113°F) when charging. Always take your mobile device with you when you leave your vehicle.

- When storing your battery, keep it in a cool, dry place.
- **Avoid damage to your battery and/or mobile device.** Do not disassemble, open, crush, bend, deform, puncture, shred, or submerge the battery or mobile device. Avoid dropping the battery or mobile device, especially on a hard surface. If your battery or mobile device has been subjected to such damage, take it to a Motorola Authorized Service Centre before using. Do not attempt to dry it with an appliance or heat source, such as a hair dryer.
- **Use care when handling a charged battery**—particularly when placing it inside a pocket, purse, or other container with metal objects. Contact with metal objects (such as jewelry, keys, or beaded chains) could complete an electrical circuit (short circuit),

causing the battery to become very hot, which could cause damage or injury.

Promptly dispose of used batteries in accordance with local regulations. Contact your local recycling centre for proper battery disposal.

 


Warning: Never dispose of batteries in a fire because they may explode.


Before using your phone, read the battery safety information in the “Safety and General Information” section included in this guide.

install the battery


1

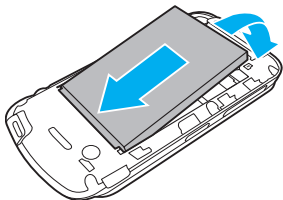

2

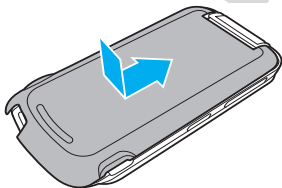 


remove the battery

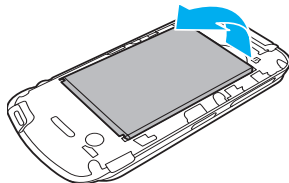 

Note: Your battery is intentionally tight fitting to ensure consistent connection.

charge the battery

 
New batteries are not fully charged. Plug the battery charger into your phone and an electrical outlet. Your phone might take several seconds to start charging the battery. The phone shows **Charge Complete** when finished.

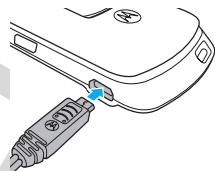


Note: Motorola batteries have circuitry that protects the battery from damage from overcharging.

 
Tip: You can also use a PC USB port to charge your phone battery. Before connecting your phone to your PC, download and install the charging software driver from www.motorola.com/support/Grant.

turn it on & off

To turn on your phone, press and hold  for a few seconds or until the display turns on.


If prompted, enter your four-digit unlock code. Your phone's four-digit **unlock code** is originally set to **1234** or the last four digits of your phone number (see page 31).


To turn off your phone, press and hold  for a few seconds.

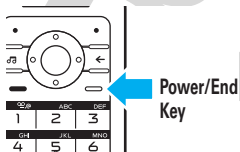

make a call


Enter a phone number and press **send key** to make a call.

 
To "hang up," press .

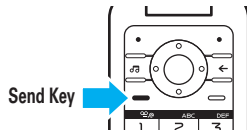


Tip: Is your caller saying they can't hear you? Make sure your finger is not covering the microphone (see page 2).

answer a call

When your phone rings and/or vibrates, open the flip or press  to answer. See page 36 for answer options.

To "hang up," press .

adjust volume

You can adjust the volume during a call by pressing the up or down volume keys on the side of the phone, or by pressing  up or down. To turn the handsfree speaker on, select **Spkr on**.

change ring style


Find it:  >  **Settings** > **Ring & Volume** > **Change Ring Style**

Available options are **Loud Ring**, **Soft Ring**, **Vibrate**, **Vibrate & Ring**, **Vibrate then Ring** or **Silent**.

store a phone number

You can store up to 1000 phone numbers in **Contacts**:

- 1 Enter a phone number in the home screen, and press **Save**.

- 2 To create a new contact, select **Create New**. Then enter a name and other details for the phone number. To select a highlighted item, press the centre key .
- 3 Press **Save** to store the number.

add a phone number to an existing contact

You can add a phone number to an existing contact by the following steps:

- 1 Enter a phone number in the home screen, and press **Save**.
- 2 Select **Add to contact**.
- 3 Select the kind of the phone number you just entered.

replace a phone number to an existing contact

You can replace a phone number to an existing contact by the following steps:

- 1 Enter a phone number in the home screen, and press **Save**.
- 2 Select **Replace Num/Email**.
- 3 Select the kind of the phone number you just entered.

call a stored phone number

Find it:  >  **Contacts**

- 1 Scroll to the entry.
- 2 Press the *send* key to call the entry.

Shortcut: In Contacts, enter the first letters of an entry to get to it quickly.


Note: To search for a contact name by typing it in, change the search method to **Find**:

 
Find it:  >  **Contacts** > **Options** > **Phonebook Settings**
> **Sort Order**

basics

See page 2 for a basic phone diagram.


home screen

When you turn on your phone, the *home screen* displays. To dial a number from the home screen, press number keys and .

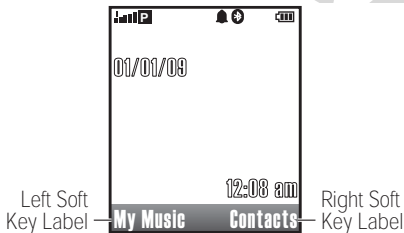

Note: Your home screen might look a little different from this example.




Soft key labels show the current soft key functions. For soft key locations, see page 2.

Press the *navigation key*  up, down, left, or right to select items in the home screen.

Status indicators can appear across the top of the home screen:






- 1 Signal Strength Indicator** – shows the strength of the wireless network connection.



2 EDGE/GPRS Indicator – shows when your phone is using a high-speed *Enhanced Data for GSM Evolution* (EDGE) network connection , or General Packet Radio Service (GPRS) network connection . 


3 Ring Style Indicator – shows the ring style setting:

-  = loud ring
-  = soft ring
-  = vibrate
-  = vibrate and ring
-  = vibrate then ring
-  = silent

4 Active Call Indicator – shows  to indicate an active call, or  to indicate when call forwarding is on. 




5 Message Indicator – shows when you receive a new text or voice message. Other indicators can include:

-  = email message
-  = voicemail message

 = message full

 = new message

Bluetooth Indicator - shows Bluetooth: 

-  (solid blue) = powered on
-  (solid green) = connected
-  (flashing blue) = discoverable mode

6 Battery Level Indicator - vertical bars show the battery charge level. Recharge the battery when your phone shows **Low Battery**.

enter text



Some screens allow you to use the keypad to enter text, such as when you compose a message:




set entry modes

Multiple text entry modes make it easy for you to enter names, numbers, and messages.

To select a default entry mode:


- 1 In a text entry screen, press **Option**.
- 2 Scroll to **Entry Setup** and press .
- 3 Scroll to **Writing Methods** and press .
- 4 Scroll to one of the following writing/entry methods or add a new one by pressing **New Entry**.

- 5 Scroll to the desired writing/entry method and press .

Writing/Entry methods

iTAP™ English	Enter letters and symbols by pressing a key one or more times. Besides, let the phone predict each word as you press keys.
Number	Enter a number by pressing its button on the keypad.
TAP English	Enter letters and symbols by pressing a key one or more times.

To change the text entry mode

Press  in the text entry screen to change the entry mode until the desired one is displayed.

Another way to select a text entry mode

Press **Option** in any text entry screen, scroll to and select **Entry Mode**, then scroll to and select the desired entry mode.

capitalisation

Press **⌘** in any text entry screen to change the text case. These indicators show capitalisation status:

indicators	
ab	no capital letters
ⒶⒷ	all capital letters
Ⓐb	capitalise the next letter only

text entry setting indicators

The following indicators identify the text entry setting:

indicators	
1	TAP, no capital letters

indicators	
1↑	TAP, capitalise the next letter
1↑	TAP, all capital letters
Ⓐ	iTAP™, no capital letters
Ⓐ↑	iTAP™, capitalise the next letter
Ⓐ↑	iTAP™, all capital letters

These indicators identify **Numeric** or **Symbol** entry mode:

indicator	
12	number mode
@	symbol mode


tap method

This is the standard method for entering text on your phone.

Regular **Tap** method cycles through the letters and numbers of the key you press. The **Tap Extended** method cycles through letters, numbers, **and** symbols.


- 1 Press a key one or more times to cycle through its characters.
- 2 Repeat the step above to enter all characters.

Tip: Press  to insert a space.

In a text entry screen you can press  to switch entry modes.

iTAP™ method


The iTAP software combines your single key presses into common words, and predicts each word as you enter it. This can be faster than the **Tap** method.





- 1 Press  right or left to scroll through the possible letter combinations, and highlight the combination you want.

 
- 2 Press **Select** to enter the highlighted combination.

You can press keys to add more letters to the end of the combination.


or

Press  to enter the highlighted combination and insert a space.

For example, if you press    , your phone displays the corresponding letter combinations:

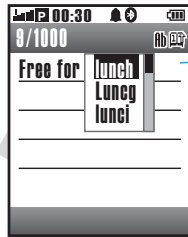

Press **Select** to accept **lunch**.

Press  right or left to see other word suggestions.

numeric method

In a text entry screen, press **#** to switch entry methods until your phone displays the **12** (numeric) indicator.

Press keypad keys to enter numbers. When finished, press **#** to switch entry modes.

symbol method

In the text entry screen, press **#** to switch entry methods until your phone displays the **@** (symbol) indicator.

- 1 Press a key one or more times to show possible symbol combinations at the bottom of the screen.
- 2 Scroll left or right to highlight a symbol and press **Select** to enter it.

delete letters & words

Move the cursor to the right of the text you want to delete and then:

- Press **Delete** to delete one letter at a time.
- Press and hold **Delete** to delete the entire message.

side keys

volume keys

Press the volume keys to:

- Turn off an incoming call alert
- Change earpiece or speakerphone volume during a call
- Change volume for a song

smart key

The *smart key* gives you another way to access a menu item of your choice from the home screen. Also, during music playback, you can use it to pause and resume music.



To change the menu item accessed by the smart key:

Find it:  >  Personalise > Home Screen > Home Keys > Smart Key

lock side keys

You can lock the side keys when the flip is closed, to prevent accidental key presses when playing music.

To automatically lock the side keys when the phone is idle and the phone flip is closed:

Find it:  >  Settings > Security > Lock Smart Key > 0 Second, 5 Seconds, 10 Seconds or 30 Seconds

handsfree

You can use your phone's handsfree speaker to make calls without holding the phone to your ear. To turn the speaker on, during a call, press **SPKR ON**. To turn the speaker off, press **SPKR OFF**.

You can also use an optional 2.5mm wired headset to go handsfree.

Note: Mini USB headsets are not supported.

codes & passwords

Your phone's four-digit **unlock code** is originally set to **1234** or to the last four digits of your phone number. The six-digit **security code** is originally set to **000000**.

Your service provider may reset these codes. If not, you should change them to protect your personal information. The unlock code must contain four digits. The security code must contain six digits.

To change a code or password:

Find it:  >  Settings > Security > New Passwords

Note: If you forget your security code, contact your service provider.

lock & unlock phone

You can lock your phone with a four-digit code to keep others from using it. For more types of locks, see “security” on page 65.

Note: You can make emergency calls on a locked phone (see page 39). A locked phone still rings or vibrates for incoming calls or messages, **but you need to unlock it to answer.**

To lock your phone:

Find it:  >  Settings > Security > Phone Lock > Lock Now
or **Lock on power up**

Enter the four-digit unlock code and press **Done**. Your phone first displays **Phone Locked**, and then shows **Enter Unlock Code** until the next time you unlock your phone.

To unlock your phone, enter your four-digit code and press **Done**.

memory card

You can store multimedia content, such as songs and pictures, on your phone’s internal memory or on an optional memory card.

Note: If you download a copyrighted file and store it on your memory card, you can use the file only while your memory card is inserted in your phone. You cannot send, copy, or change copyrighted files.

format memory card


You will need to format the memory card before using it for the first time. This essential procedure creates




the **Music**, **Picture**, and **Video** directories. If you do not format a memory card before using it for the first time, your phone may not be able to read the contents of the card.

Note: Folder names are region dependent.

Caution: Formatting the memory card erases all content on the card.





Find it:  >  **Settings** > **Phone Settings**


- 1 Scroll to **Format Additional Storage Device** and press .
- 2 When prompted, press **Yes** to continue or **No** to cancel formatting.

Tip: To access data stored on your microSD memory card, with your phone in the home screen, press 
>  **File Manager** > select the folder and then press 
> **Switch Storage Devices**.

tips & tricks

From the home screen (page 25), you can use shortcuts:


To...	Do this...
play music	Press  to activate the music library.
see recently dialled numbers	Press  .
use application shortcuts	Press the left and right soft keys or the navigation key  .
access voicemail	Press and hold the  key to access your voicemail messages.

To...	Do this...
change ring style	Press and hold the  key to change ring styles.

customise

change home screen shortcuts

Find it:  >  Settings > Keys

options	
NaviKey Shortcuts	Choose the features that open when you press the navigation key () up, down, left, or right in the home screen.
Right Soft Key	Choose the feature that opens when you press the <i>right soft key</i> .
Left Soft Key	Choose the feature that opens when you press the <i>left soft key</i> .

change main menu appearance

To change your main menu appearance, press 
> Options > View

You can change the order of the main menu features:

1 Press **Options > Reorder**.

Scroll to the feature you want to move and then press .

2 Scroll to the destination location, and then press **Done**.



ring styles & alerts

Your phone rings and/or vibrates to notify you of an incoming call or to signal certain other events. This ring or vibration is called an *alert*.

You can set alerts for different events, such as getting a message in your inbox or receiving a call.

set a style

Find it:  >  **Settings** > **Ring & Volume**

- 1 Select the desired settings by pressing .
- 2 Scroll to a ring style and press .

Your phone plays a sample of each highlighted setting. Ringtones play through the speakerphone, unless you're using a headset.



answer options

Set your phone to **Open to answer**.



Find it:  >  **Settings** > **Call Settings** > **Open to Answer**

wallpaper

Set a picture as a wallpaper (background) image in your home screen.

Find it:  >  **Settings** > **Display settings** > **Wallpaper**

To select a wallpaper image:

- 1 Scroll to **Picture** and press .
- 2 Scroll to the picture you want and press .


or

Select **(None)** to turn off wallpaper.

screen saver

Set a picture as a screen saver image. The screen saver displays when the phone is being charged and there is no activity.

Find it:  >  Settings > Display settings > All Pictures, Clock
or None

To specify how long your phone must be inactive before it displays the screen saver, press  > Settings > Display settings > Display Timeout.



Note: To conserve battery life, turn off the screen saver.

DRAFT

calls

To make and answer calls, see page 22.

redial a number


- 1 From the home screen, press  to see a list of recently dialled calls.
- 2 Scroll to the entry you want to call and press .


call history

Your phone keeps lists of the calls you recently received and dialled, even if the calls didn't connect. The lists are sorted from newest to oldest calls. The oldest calls are deleted as new calls are added.

Find it:  >  Call history


- 1 Scroll to an entry.

- 2 Press  to call the number.

To see call details (such as time and date), press .

Press **Options** to perform other operations on the number (send a message, save to contacts), or to set recent call options:

return a missed call

When you miss a call, your phone plays an alert and displays the  (missed call) indicator and a missed call notification. Press **View** to see the details and press the *send key* to call the number.

To view your missed calls at any time:

Find it:  >  Call history > Received Calls

To hear a voicemail message, see page 41.

call waiting



If you **receive a second call** while you are already on a call:



- To answer the second call and put the first call on hold, press **⇐**. To switch between the calls, press **Switch** again.
- To send the second call to your voicemail, press **Ignore**.

speed dial

Your phone can store nine phone numbers that you can call with a single key press. To **store** a speed dial phone number:

 >  **Contacts** > **Options** > **Phonebook Settings** > **Speed Dial**

To **call** a speed dial phone number, press and hold the single-digit speed dial number from the home screen.


emergency calls

Your service provider programs emergency phone numbers, (such as 112 or 911), that you can call under any circumstances, even when your phone is locked.

- 1 Enter the emergency number.
- 2 Press **⇐**.

Note: Emergency numbers vary by country. Your phone's pre-programmed emergency number(s) may not work in all locations, and sometimes an emergency call cannot be placed due to network, environmental, or interference issues.


messages

You can send and receive SMS/EMS and MMS multimedia messages as well as access your voicemail from the Messages feature. Each message type allows you to attach different objects. 


Note: Your phone can store a maximum of 1000 messages.

send a message

Find it:  >  Messages > Create message > New Message


- 1 To insert a picture, sound, or other object, press **Option** > **Insert**.
- 2 When you finish the message, press . Choose one or more people to send to.
- 3 Press **Send**.

quick text

You can quickly access the text entry screen by  **Quick txt** option so that you can send messages faster.

Find it:  >  **Quick txt**

receive a message

When you receive a message, your phone plays an alert and displays the  (new message) indicator and a new message notification. Press **Read** to read the message immediately, or save it in your message inbox for viewing later. To read messages in your message inbox:

Find it:  >  Messages > **Inbox**

Scroll to the message you want to read. Press **Read** to open the message. For MMS messages, your phone displays the media object, then the message.

voicemail

Your network stores the voicemail messages you receive.



When you **receive** a voicemail message, your phone shows an indicator and **New Voicemail**. Press **Call** to call your voicemail.

To check your voicemail messages at any time:

Find it:  >  Messages > Voicemail > 



Note: Your service provider may have assigned speed dial number **1** for calling voicemail and may provide additional information about using voicemail.

entertainment


FM radio

Find it:  > My Music > FM radio

To use the **FM Radio** you need to connect a stereo headset to the 2.5 mm headset jack.

- Press  left or right to change the frequency.
- Press the up or down volume keys on the side of the phone, or press  up or down to adjust the volume.
- Press **Mute** to mute the radio.

use the radio presets

- 1 Tune in the desired frequency by pressing  left or right, or press **Options** > **Scan** to scan for all

available radio stations. You can also use the keypad keys to enter a frequency by pressing **Options** > **Set Frequency**.

- 2 Press and hold a number key to save that number as the preset.

select a radio preset

- 1 Press **Options** > **Manage Presets** to view a list of all radio presets.
- 2 Press  up or down to select a preset.

Tip: If you know the number assigned to the preset station, press the keypad number to select it.

record FM radio clips

- 1 Press **Options** > **Record**.

Note: The maximum recording length is 100 seconds.

- 2 Press  to stop the recording. The clip is saved in  **File Manager** > **Sounds**.

Note: The unauthorised copying of copyrighted materials is contrary to the provisions of the Copyright Law of the United States and other countries. This device is designed solely for copying non-copyrighted materials, materials which you own the copyright, or materials which you are authorised or legally permitted to copy. If you are uncertain about your right to copy any material, please consult your legal advisor.

Note: Playback of recorded radio clips is in mono sound format only.

share a radio station

Share your favourite radio stations with friends:

Find it: Press **Options** > **Send Station Info**

Use the message screen to send the station frequency. Your friend can access the station with a single click.

select the radio output

 
You can play the radio through a stereo headset or a speaker. Press **Use Headset** or **Use Speaker**.

music player

Your phone can play music files:

Find it: 

music player controls

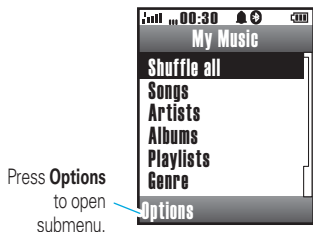

To copy music files from a computer to your phone, see page 32.

Note: Your phone may not play MP3 files that have a bit rate higher than 320 kbps. If you try to download or play one of these files, your phone may display an error message or ask you to delete the file.

Tip: Connect a stereo headset for high quality music playback.

functions	
scroll through song list	Before music playback , press up or down .
play	Press .
pause/resume	Press .
fast forward	Press & hold right (for at least two seconds).
skip to next song	Press & release right .
rewind	Press & hold left (for at least two seconds).
return to start of song	AFTER first two seconds of song, press & release left .
return to last song	WITHIN first two seconds of song, press & release left .
turn off	Press .

functions	
shuffle	Press Options > Shuffle > On .
repeat song or playlist	Press Options > Auto Repeat > None, One or All .

Tip: When listening to music on the move, use the convenient controls on the side of the phone. The *smart key* plays/pauses music playback and the *volume keys* adjust the volume.

playlists

You can collect your favorite songs into playlists.

To create or edit a playlist:

Find it: 

- **To create** a new playlist, scroll to **Playlists**, choose **New playlist**, and press the center key



- **To edit** an existing playlist, scroll to the playlist and press **Options**.


To select and play a playlist:

Find it:  > **playlists**

music player options

From **My Music** screen, press **Options** to view the following:

options	
Music store	you can purchase and download music online with ease. The GPRS or an more advanced telecommunications service is required.

options	
Sound setup	<p>Auto Repeat - Repeat the selected song or all songs on the current playlist.</p> <p>Shuffle - Play songs on the current list or a playlist in random order.</p>
View Free Space	<p>View remaining space on your phone and/or the plug-in memory card.</p> 

get music

Copy music to your phone's memory card.

Connect

- 1 With a memory card inserted and your phone in the home screen, insert the USB cable in your phone and your Windows PC.

Note: Grant supports Microsoft® Windows® 2000 and Windows XP™. Other operating systems may not be compatible with Grant.

- 2 On your phone, press **Yes** to connect your phone as a storage device. Name the device "Grant Mobile" and click **Finish**.

Note: For USB cable connection details, see page 52.

- 3 Now you've connected, use Windows Media Player or USB drag and drop to copy your music.

Windows Media Player

- 1 On your Windows PC, open Microsoft® Windows® Media Player 11.
- 2 On the **Sync** tab, select **More Options**. Under Device, select **Grant Mobile**.

- 3 Select **Properties**, check the “Create folder hierarchy on device” box, and click **OK**.

USB drag and drop


- 1 Use the **My Computer** window to find **Removable Device**.
- 2 Drag and drop your music, photos and other stuff that you want to copy.
Two folders are available: **Music** and **Picture**.
To help manage your music, you can create more folders in the **Music** folder.
- 3 When you're done, use the **Safely Remove Hardware** feature to finish.

 
Take & send photos

take a photo

Find it:  > Camera

Your camera lens is on the back of your phone when your phone is open.

With the viewfinder open, press  to capture your image.

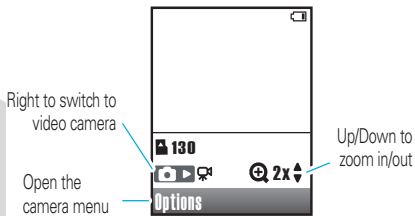

Adjusting the exposure affects the brightness of both the viewfinder display and the captured photo.


Before you take the photo, you can press **Options** to open the camera menu:

options	
Go to Pictures	See stored pictures.
Auto-timed Capture	Set a timer for the camera to take a photo.
Auto-Save	<p>Enable - after taking a picture by pressing the center key, your file will be saved automatically.</p> <p>Disable - the Discard option is provided to delete the file immediately after taking a picture.</p>
Picture setup	Provide advanced settings for users to custom the setting values of photo-taking and control the quality of images.

options

View Free Space View the remaining space on your phone and/or the plug-in memory card.



To take a photo, frame your subject in the viewfinder and press .

Press **Options** to:

- **Store only.**
- **Apply As a Wallpaper, Screen Saver, or Contact entry.**
- **Send in a message.**




or

Press **Discard** to delete the photo and return to the viewfinder.



send a stored photo in a message

Find it:  > Messages > Create message > New message > Options > Insert > Picture 

- 1 Scroll to the photo you want and press .
- 2 Enter the message text and press .
- 3 Scroll to a recipient address and press .

or

Press **Options**, then select **Enter Number** or **Enter Email** and enter the recipient's phone number or email address.


- 4 Press **Send**.

Note: Your Phone may indicate this is a Multimedia Msg. Some phones or networks do not support picture messages. Press **Yes** to send the message.

To view or delete your photos, select **Gallery** from the main menu of your phone (see page 9).



 record & send a video

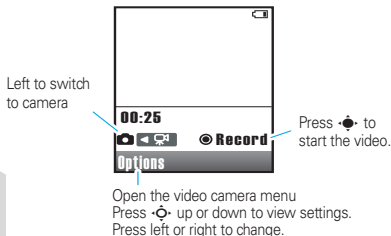Find it:  >  Multimedia > Video Camera




Note: The number of remaining minutes is an estimate.

Before you record the video clip, you can press **Options** to open the video camera menu:

options	
Video Camera Setup	Provide further settings for customizing the formats of video clips.
Switch Storage Devices	Choose to store your videos in your Phone Memory or the plug-in Memory Card . 
View Free Space	View the remaining space on your phone and/or the plug-in memory card. 

If you want to send your video in a message, the video length must be set to **MMS Short**. To set the length, press **Options > Video Camera Setup > Video Length**.

Press  to start recording the video in the viewfinder.

Press **Stop** to stop recording the video.

Press **Options** to:

Save the video clip

Discard the photo

Preview the video clip

- **Send** the video clip in a message.

To view or delete videos you've recorded, select **Gallery** from the main menu of your phone.



WebAccess

Use your phone to access Web pages.


Find it:  >  **WebAccess**

WebAccess options

option	
History	Access a list of recently viewed Web sites.
New	Add a bookmark.
Web Session	Access a stored Web session.
Stored Pages	Go to a previously stored page.
General Setting	Clear history, reset cache or clear cookies.

open a web page

Press  >  WebAccess > Go to URL

- 1 Enter the web address and press .

connections

 
cable connections

You can use your phone's mini USB port to connect to a computer.

Note: Motorola Original™ USB data cables and supporting software may be sold separately. Check your computer to determine which cable you need.

If you use a USB cable connection:

- Be sure to connect the phone to a high-power USB port **on your computer** (not a low-power one, such as the USB port on your keyboard or bus-powered USB hub).

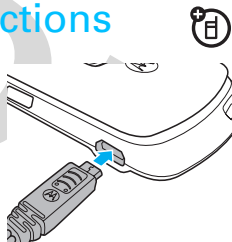


Note: If you connect your phone to a low-power USB port, the computer may not recognise your phone.

- Make sure both your phone and the computer are turned on and the phone is in the home screen.

Note: When your phone is plugged into a computer and is being used for mass storage, it cannot be used for anything else. To restore the phone to normal use, disconnect it from the PC.

- Grant currently supports Microsoft® Windows® 2000 and Windows XP™. Other operating systems may not be compatible with Grant.

 Attach the Motorola Original USB cable to the mini USB port on your phone and to an available USB port on your computer. Select **Yes** to connect the phone as a storage device.

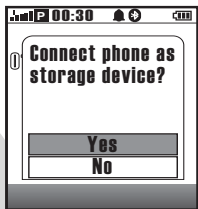


Note: Selecting **No** will start charging the phone battery.

On your computer:

- 1 Open your "My Computer" window, where your phone's memory card shows as a "Removable Disk" icon.
- 2 Click on the "Removable Disk" icon to access the memory card.

- 3 If necessary, in the "Removable Disk" (memory card) window, create one or more folders for the files you will copy onto the memory card.
- 4 To copy files between your computer and phone, drag and drop into the appropriate folders.
- 5 When you're finished, remove the device by selecting the "Safely Remove Hardware" icon at the bottom of your computer screen, then select "USB Mass Storage Devices" and "Stop".

Use these folders on your memory card for the file types indicated:

- music files (iMelody, MIDI and MP3): **\Music**. To help manage your music, you can also create new folders in the **\Music** folder. 
- picture files (JPG, PNG, or BMP): **\Picture**.

Note: The maximum single picture file size is 100kB, at a resolution of 640 x 640 dpi.

file manager

Manage music and sound files, photos, videos, and other files stored on your phone, and on an optional removable microSD memory card.

Find it:  >  File Manager

Select a folder to see its contents.

To play a sound file or voice note, or view a photo or video, just scroll to the file and select it.

Bluetooth® wireless

Your phone supports Bluetooth wireless connections. You can connect your phone with a Bluetooth headset to make handsfree calls. You can also connect your phone with a phone or computer that supports Bluetooth connections to exchange files.

Note: The use of wireless phones while driving may cause distraction. Discontinue a call if you can't

concentrate on driving. Additionally, the use of wireless devices and their accessories may be prohibited or restricted in certain areas. Always obey the laws and regulations on the use of these products.

For maximum Bluetooth security, you should always connect Bluetooth devices in a safe, private environment.

turn Bluetooth power on or off

Find it:  >  Bluetooth > Turn on

Note: To extend battery life, use this feature to set Bluetooth power to **Off** when not in use. Your phone will not connect to devices until you set Bluetooth power back to **On**.

make phone visible to other devices

Allow an unknown Bluetooth device to discover your phone:


 >  Bluetooth > Options > Bluetooth Settings > Visible to Other > Show.


pair with a handsfree device

Before you try to connect your phone with a handsfree device, make sure both your phone's Bluetooth power is **On** and the handsfree device is **on** and **ready** in *pairing* or *bonding* mode. You can connect your phone with only one device at a time:

Find it:  >  Bluetooth > Options > Search for

Your phone lists the devices it finds within range.

- 1 Scroll to a device in the list and press .
- 2 Enter the device passkey (such as 0000) and press **Confirm**.

When your phone is connected, the Bluetooth indicator  shows in the home screen.

Shortcut: When Bluetooth power is on, your phone can automatically connect to a handsfree device you have used before. Just turn on the device or move it near the phone.


Tip: Want to know more about your headset or handsfree device? For specific information about a device or for the device's PIN code, refer to the instructions that came with it.

copy files to another device


You can copy a media file, phonebook entry, datebook event, or web shortcut from your phone to a computer or other device.

Note: You can't copy some copyrighted objects.


- 1 If necessary, turn on your phone's Bluetooth power (see page 54).
- 2 Pair your phone with the other device (see page 55).

- 3 On your phone, scroll to the object that you want to copy to the other device.
- 4 Press **Options**, then select:
 - **Send > To Bluetooth** for media files
 - **Share Phonebook Entry Via > Bluetooth** for phonebook entries
- 5 Select a recognized device name, press , and then press **Done**.

If your phone could not copy the file to the other device, make sure the device is **on** and **ready** in discoverable mode. Also, make sure the device is not busy with another similar Bluetooth connection.

Note: Once you connect your phone to a Bluetooth device, that device can start similar Bluetooth connections with your phone. Your display shows the Bluetooth indicator  at the top when there is a Bluetooth connection.

receive files from another device

If you do not see the Bluetooth indicator  at the top of your phone display, turn on your phone's Bluetooth feature:



Find it:  >  **Bluetooth > Turn on**

- 1 If necessary, turn on your phone's Bluetooth power (see page 54).
- 2 Pair your phone with the other device (see page 55).
- 3 Send the file from the device.

If your phone and the sending device don't recognize each other, place your phone in discoverable mode so the sending device can locate it (see page 54).
- 4 Press **Accept** to accept the file from the other device.

Your phone notifies you when file transfer is complete. If necessary, select **Yes** to view the file.

other features

contacts

features
create entry •◂ > [Contacts] > press Options > Create New
edit entry •◂ > [Contacts] Scroll to the entry and press •◂ > Edit Contact to edit the entry. Scroll up or down and press •◂ to edit fields. Press Save to save your changes.
delete entry •◂ > [Contacts] Scroll to the entry and press •◂ > Delete Contact

more message features

features
send text message •◂ > [Messages] > Create message > New message Press Option > Insert to view insert options. You can also select a contact first. Press •◂, select Send Message , and then select New message to compose a message.
use MMS template Select a multimedia template with preloaded media: •◂ > [Messages] > Create message > MMS Templates

features

view sent messages

⬅️ ➡️ > ✉️ Messages > Outbox

Scroll to the message and press ⬅️ ➡️.

Press **Option** to view message options.

read received messages

⬅️ ➡️ > ✉️ Messages > Inbox

Scroll to the message and press ⬅️ ➡️.

Press **Option** to view message options.

drafts

View messages saved in **Drafts** folder:

⬅️ ➡️ > ✉️ Messages > Draft

Scroll to the message and press ⬅️ ➡️.

Press **Option** to view message options.

features

erase messages

Delete all messages or only messages from one folder:

⬅️ ➡️ > ✉️ Messages > Option > Cleanup Messages

Select **All**, **Inbox**, **Browser Msgs**, **Info Services**, **Outbox**, or **Drafts**.

set up voicemail



⬅️ ➡️ > ✉️ Messages > ⬅️ ➡️ > Message settings >

Voicemail Setup

view the message memory status

⬅️ ➡️ > ✉️ Messages > Option > Memory Status

more personalising features

features
keypad volume • > ⚙️ Settings > 🔔 Ring Style > <i>Style Detail</i> > Key Volume
set time and date • > ⌚ Clock > Time and Date
greeting Change the greeting that appears when you turn on your phone: • > ⚙️ Settings > Phone Settings > Greeting

features
clock view Display an analog clock or digital time readout in the home screen: • > 📱 Personalise > Home Screen > Clock Set
menu language • > ⚙️ Settings > Phone Settings > Language
reset settings Reset default settings for all options except unlock code, security code, and lifetime timer: • > ⚙️ Settings > Phone Settings > Restore all Settings To reset all options, you need to enter the Security Code (000000) .

features

delete data

Caution: This option erases all user-entered information stored in your phone memory, including Contacts entries and downloaded files. Once you erase the information, it cannot be recovered.

📶 > ⚙️ Settings > Phone Settings > Delete Phone Data

To reset all options, you need to enter the **Security Code (000000)**.


The amount of network connection time you track on your resettable timer may not equal the amount of time for which you are billed by your service provider. For billing information, please contact your service provider directly.

feature

set in-call timer

📶 > ⚙️ Settings > Call Settings > Time Display

call times

Network connection time is the elapsed time from the moment you connect to your service provider's network to the moment you end the call by pressing . This time includes busy signals and ringing.

in call menu







During a call you access the in call menu by pressing **Options**.

features

access a list of available phone lines

📶 > My Tel Numbers




 
Scroll to a line and press **Select**.

features
mute the call
 > Mute
hold the call
 > Hold
make another call
 > New Call 
access list of contacts
 > Contacts
access call history
 > Call history

headset

Note: The use of wireless phone while driving may cause distraction. Discontinue a call if you can't

concentrate on driving. Additionally, the use of wireless devices and their accessories may be prohibited or restricted in certain area. Always obey the laws and regulations on the use of these products.

features
auto answer
Automatically answer calls when connected to a headset: 
 >  Settings > Call settings > Auto Answer
Note: Both mono and stereo headsets are supported for voice only.
change volume
Press up or down on the volume keys on the side of the phone, or  right or left, to change the headset volume during a call.

network

features

network settings

View network information and adjust network settings:

•> Settings > Call Settings > Network

select a band

•> Settings > Call Settings > Network
> Network setup



personal organiser

features

set calendar default view

•> Calendar > press Option > Week view or Month view

features

add calendar event

•> Calendar

Scroll to the desired day and press **Create New Event**, then enter event details.

view calendar event

•> Calendar > select the desired day > •

event reminder

When an event reminder occurs, press **View** to view it. Press **Exit** to dismiss it.

send calendar event to another device

Send a calendar event to another phone, computer, or device:

•> Calendar > •> event, press Options > Send > Bluetooth or Send via MMS

features

set alarm

•◂◃ > ⌚ Clock > Alarm Clock > Create Alarm

Note: You can set the FM radio as your alarm device by selecting **Alert Tone** > **Alert method** > **Radio**.

turn off alarm

When the display shows an alarm:

To turn off the alarm, press **Dismiss** or **0**.

To set an eight-minute delay, press **Snooze**.

calculator

•◂◃ >  Extras > Calculator

convert currency

•◂◃ >  Extras > Calculator


Press •◂◃ and select **Options** > **Convert Currency**.

advanced calling

features

speed dial

Your phone can store nine phone numbers that you can call with a single keypress. To **store a speed dial phone number**:

•◂◃ >  Contacts > Options > Phonebook Settings > Speed Dial > select one entry from the displayed list > •◂◃ > **Assign Contact**, **Change Contact** or **Create New Contact**.

To call a speed dial number, press and hold the single-digit speed dial number for one second.

features

quick dial

Set your favourite contact numbers to three Quick Dial options.

 >  Personalise > Quick Dial

Scroll to the **Quick Dial** option (1, 2 or 3) that you want to set and press **Change**. Press **Browse** > **Contacts**, **Dialled Calls** or **Received Calls** to search for the number you need. Press **OK** to accept the selected number.

hold a call

Press **Options** > **Hold** to put all active calls on hold.

mute a call

Press **Options** > **Mute** to put all active calls on mute.

features


call waiting



When you are on a call, you'll hear an alert if you receive a second call. Press **Send key** to answer the new call.

- To switch between calls, press **Switch**.
- To connect the two calls, press **Link**.
- To end the call on hold, press **Options** > **End Call on Hold**.

To turn call waiting on or off:

 > **Settings** > **Call Settings** > **In-Call Setup** > **Call Waiting** > **On** or **Off**.

new call

During a call:

Options > **New Call**, press **Options** > **Browse Contacts**.

features

DTMF tones

Your phone can send Dual Tone Multi Frequency (DTMF) tones for calling card calls or other automated touch-tone calls.



 >  Settings > Call Settings > Other settings > DTMF > select **Short** or **Long**

security

features

SIM PIN

Caution: If you enter an incorrect PIN code three times before the correct code, your SIM card is disabled, and your display shows **SIM Blocked**. Lock or unlock the SIM card:

 >  Settings > Security > SIM Lock

fun & games

features

play a game or application



 >  Games & Apps

airplane mode

Turn off your phone's calling features in locations where wireless phone use is prohibited. This lets you use the music player and other non-network features while you are on an airplane, without interfering with aeroplane communications.

 >  Airplane Mode > On

To reactivate your phone's calling features, turn off the airplane mode.

service & repairs

If you have questions or need assistance, we're here to help.

Go to www.motorola.com/consumer/support, where you can select from a number of customer care options. You can also contact the Motorola Customer Support Centre at 1-800-331-6456 (United States), 1-888-390-6456 (TDD United States for hearing impaired), or 1-800-461-4575 (Canada).

Specific Absorption Rate Data

This model wireless phone meets the government's requirements for exposure to radio waves.

Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission (FCC) of the U.S. Government and by the Canadian regulatory authorities. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age or health.

The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC and by the Canadian regulatory authorities is 1.6 W/kg.¹ Tests for SAR are conducted using standard operating positions accepted by the FCC and by Industry Canada with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR

level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station, the lower the power output.

Before a phone model is available for sale to the public in the U.S. and Canada, it must be tested and certified to the FCC and Industry Canada that it does not exceed the limit established by each government for safe exposure. The tests are performed in positions and locations (e.g., at the ear and worn on the body) reported to the FCC and available for review by Industry Canada. The highest SAR value for this model phone when tested for use at the ear is 0.87 W/kg, and when worn on the body, as described in this user guide, is 0.37 W/kg. (Body-worn measurements differ among phone models, depending upon available accessories and regulatory requirements).²

While there may be differences between the SAR levels of various phones and at various positions, they all meet the governmental requirements for safe exposure. Please note that improvements to this product model could cause differences in the SAR value for later products; in all cases, products are designed to be within the guidelines.

Hearing Aid Compatibility with Mobile Phones

Some Motorola phones are measured for compatibility with hearing aids. If the box for your particular model has “Rated for Hearing Aids” printed on it, the following explanation applies.

When some mobile phones are used near some hearing devices (hearing aids and cochlear implants), users may detect a buzzing, humming, or whining noise. Some hearing devices are more immune than others to this interference noise, and phones also vary in the amount of interference they generate.

The wireless telephone industry has developed ratings for some of their mobile phones, to assist hearing device users in finding phones that may be compatible with their hearing devices. Not all phones have been rated. Phones that are rated have the rating on their box or a label on the box.

The ratings are not guarantees. Results will vary depending on the user’s hearing device and hearing loss. If your hearing device happens to be vulnerable to interference, you may not be able to use a rated phone successfully. Trying out the phone with your hearing device is the best way to evaluate it for your personal needs.

M-Ratings: Phones rated M3 or M4 meet FCC requirements and are likely to generate less interference to hearing devices than phones that are not labeled. M4 is the better/higher of the two ratings.

T-Ratings: Phones rated T3 or T4 meet FCC requirements and are likely to be more usable with a hearing device’s telecoil (“T Switch” or “Telephone Switch”) than unrated phones. T4 is the better/higher of the two ratings. (Note that not all hearing devices have telecoils in them.)

Hearing devices may also be measured for immunity to this type of interference. Your hearing device manufacturer or hearing health professional may help you find results for your hearing device. The more immune your hearing aid is, the less likely you are to experience interference noise from mobile phones.

Information from the World Health Organization

Present scientific information does not indicate the need for any special precautions for the use of mobile phones. If you are concerned, you may want to limit your own or your children's RF

exposure by limiting the length of calls or by using handsfree devices to keep mobile phones away from your head and body.

Source: WHO Fact Sheet 193

Further information: <http://www.who.int/peh-emf>

Product Registration

Online Product Registration:

direct.motorola.com/hellomoto/Motosupport/source/registration.asp

Product registration is an important step toward enjoying your new Motorola product. Registering helps us facilitate warranty service, and permits us to contact you should your product require an update or other service. Registration is for U.S. residents only and is not required for warranty coverage.

Please retain your original dated sales receipt for your records. For warranty service of your Motorola Personal Communications Product you will need to provide a copy of your dated sales receipt to confirm warranty status.

Thank you for choosing a Motorola product.

Privacy and Data Security

Motorola understands that privacy and data security are important to everyone. Because some features of your mobile device may affect your privacy or data security, please follow these recommendations to enhance protection of your information:

- **Monitor access**—Keep your mobile device with you and do not leave it where others may have unmonitored access. Lock your device's keypad where this feature is available.
- **Keep software up to date**—If Motorola or a software/application vendor releases a patch or software fix for your mobile device which updates the device's security, install it as soon as possible.
- **Erase before recycling**—Delete personal information or data from your mobile device prior to disposing of it or turning it in for recycling. For step-by-step instructions on how to delete all personal information from your device, see the section entitled "master clear" or "delete data" in this user's guide.

Note: For information on backing up your mobile device data before erasing it, go to www.motorola.com and then navigate to the "downloads" section of the consumer Web page for "Motorola Backup" or "Motorola Phone Tools."

- **Understanding AGPS**—In order to comply with emergency caller location requirements of the FCC, certain Motorola mobile devices incorporate *Assisted Global Positioning System* (AGPS) technology. AGPS technology also can be used in non-emergency applications to track and monitor a user's location—for example, to provide driving directions. Users who prefer not to permit such tracking and monitoring should avoid using such applications.

If you have further questions regarding how use of your mobile device may impact your privacy or data security, please contact Motorola at privacy@motorola.com, or contact your service provider.

Smart Practices While Driving

Drive Safe, Call SmartSM

Check the laws and regulations on the use of mobile devices and their accessories in the areas where you drive. Always obey them. The use of these devices may be prohibited or restricted in certain areas. Go to www.motorola.com/callsmart for more information.

Your mobile device lets you communicate by voice and data—almost anywhere, anytime, wherever wireless service is available and safe conditions allow. When driving a car, driving is your first responsibility. If you choose to use your mobile device while driving, remember the following tips:

- **Get to know your Motorola mobile device and its features such as speed dial and redial.** If available, these features help you to place your call without taking your attention off the road.
- **When available, use a handsfree device.** If possible, add an additional layer of convenience to your mobile device with one of the many Motorola Original handsfree accessories available today.
- **Position your mobile device within easy reach.** Be able to access your mobile device without removing your eyes from the road. If you receive an incoming call at an



inconvenient time, if possible, let your voicemail answer it for you.

- **Let the person you are speaking with know you are driving; if necessary, suspend the call in heavy traffic or hazardous weather conditions.** Rain, sleet, snow, ice, and even heavy traffic can be hazardous.
- **Do not take notes or look up phone numbers while driving.** Jotting down a “to do” list or going through your address book takes attention away from your primary responsibility—driving safely.
- **Dial sensibly and assess the traffic; if possible, place calls when your car is not moving or before pulling into traffic.** If you must make a call while moving, dial only a few numbers, check the road and your mirrors, then continue.
- **Do not engage in stressful or emotional conversations that may be distracting.** Make people you are talking with aware you are driving and suspend conversations that can divert your attention away from the road.
- **Use your mobile device to call for help.** Dial 911 or other local emergency number in the case of fire, traffic accident, or medical emergencies.*

- **Use your mobile device to help others in emergencies.** If you see an auto accident, crime in progress, or other serious emergency where lives are in danger, call 911 or other local emergency number, as you would want others to do for you.*
- **Call roadside assistance or a special non-emergency wireless assistance number when necessary.** If you see a broken-down vehicle posing no serious hazard, a broken traffic signal, a minor traffic accident where no one appears injured, or a vehicle you know to be stolen, call roadside assistance or other special non-emergency wireless number.*

* Wherever wireless phone service is available.

index

A

accessories 17
alarm clock 64
alert 36
answer a call 22

B

band selection 63
battery 19
 charge indicator light 2
 remove 21

C

cable connections 52
cables 52
calculator 64
calendar

event 63, 64
event reminder 64
view 64
view event 64

call

answer 22
end 22, 23
make 22
call a stored phone number 23, 24
call times 61
call waiting 39
calls restrict 65, 66
capitalise text 28
centre key 2
change ring alert 23
change volume 63
charge battery 21

clear/back key 2
clock
 analog 60
 digital 60
codes 31, 32
contacts 58
 create entry 58
 delete entry 58
 edit entry 58
controls
 music library 44
currency converter 64

D

date 60
delete text 30
dial a phone number 22
dialled calls 38
display 25
drafts folder 59
DTMF tones 66

E

emergency number 39
end a call 22, 23
end key 2, 22, 23
event
 calendar 63, 64

F

FM radio 42
format memory card 33

G

games 67
greeting 60

H

headset 62, 63
hearing aids 70
hold call 62
home screen 25

shortcuts 35

I

in call menu 62
in call timer 61
indicator lights 2
indicators
 text entry mode 28
install battery 21
iTAP text entry method 29

K

keypad volume 60

L

lock phone 32

M

make a call 22
master reset 61
memory card 18, 32

format 33

menu 35

 language 60

menu icons 35

messages

 drafts 59

 erase 59, 60

 MMS 59

 read 59

 receive 40

 send 40

 text message 58

 text template 59

 view sent message 59

Missed Calls message 38

MMS 59

music player 43

mute 62

N

navigation key 2, 25

network settings 63
new call accept 62
numeric entry method 30

O

optional feature 17

P

passwords. See codes
personal organiser 63
phone lines 62
phone number call 23, 24
phone number store 23
phonebook 58
playlists 45
power key 2, 22
preset radio stations 42

Q

quick text 40

R

radio 42
receive a message 40
received calls 38
recent calls 38
record radio stations 43
redial 38
remove battery 21
reset 61
restrict calls 65, 66
return a call 38
ring alert 23
ring style, setting 36

S

safety information 7, 9
safety tips 73
screen saver 37
security 65, 66
security codes 31, 66

send a message 40

send key 2, 22

set a style 36

set time & date 60

shortcuts 34

SIM 17

smart key 31

soft keys 2, 25

speakerphone

 automatic answer 63

storage 32

store phone number 23

symbol entry method 30

T

tap text entry method 28

template 59

text delete 30

text entry 26

 capitalisation 28

 entry mode indicators 28

time 60

tips & tricks 34

turn on/off 22

U

unlock

 code 31, 32

 phone 32

USB cables 52

USB drag and drop 47

V

voicemail 41

 message indicator 41

 setup 59

volume 23

 change 63

 keypad 60

W

wallpaper 36

WebAccess 50

WHO information 71

Windows Media Player 46

DRAFT

www.motorola.com



68XXXXX289-A