

Exhibit 8: Draft User's Manual -- 47 CFR 2.1033(b)(3)

The attached User's Manual is the final production-intended version of the generic Motorola International English User Manual. This guide will be adapted to carrier-specific versions, but the key information herein will be retained. Translations into other languages will also be done to support the needs of other markets. Minor revisions may be made to these manuals, prior to and subsequent to, placing this product onto the market. Selected portions of the User Guide can be found as indicated below:

8.1	Safety and Regulatory Section:	Page 45
8.2	Part 15B Declaration of Conformity:	Page 50
8.3	Specific Absorption Rate (SAR) Data:	Page 49
8.4	Guidance for use with Hearing Aids:	Page 13, 54



i886

User's Guide

Congratulations

MOTOROLA i886

The MOTOROLA **i886** brings the convenience of push-to-talk calls together with a premium messaging experience, all in a sleek QWERTY device.

- **Private Calls.** Stay in touch with your family, friends and colleagues with the simple touch of a button.
- **Organization.** Check your email, calendar, and contacts wherever you are.
- **Music Player.** Take your tunes with you wherever you go.

Caution: Before assembling, charging or using your phone for the first time, please read the important legal and safety information packaged with your phone.

More

- **Updates:** Phone updates, PC software, online help and more at www.motorola.com/support.
- **Accessories:** Find accessories for your phone at www.motorola.com/products.

Your phone

the important keys & connectors



When you open your phone, the screen adjusts for you.



Note: Your phone might look a little different.

Contents

Let's go	3
Keys & navigation	5
Home screen	6
Calls	8
Push-to-Talk	12
MOTotalk™	15
Web	18
Manage your life	20
Contacts	22
Messaging	24
Text entry	26
Tips & tricks	27
Personalize	28
Photos & videos	29
Music	32
Bluetooth™ wireless	36
USB & memory card	38
Tools	39
Security	39
Troubleshooting	40
Safety, Regulatory & Legal	42

Let's go

let's get you up and running

Assemble & charge

1 Remove cover



2 SIM in



3 MicroSD in



4 Battery in



5 Cover on



6 Charge up



Caution: Please read “Battery Use & Safety” on page 42.


Set up & go


The first time you turn on your phone, a setup wizard guides you through:

- Setting up email accounts, such as POP3, IMAP, or Microsoft™ Exchange.
- Loading contacts from your SIM card.

Note: This phone supports data-intensive apps and services. It is strongly recommended that you purchase a data plan that meets your needs. Contact your service provider for details.

Turn it on & off

To turn on your phone, press and hold End/Power .

To turn off your phone, press and hold End/Power , then select **Power off**.



Cool content & more

Your phone comes with a microSD memory card slot—you can load it up with photos, videos, and music from your computer using “USB drag & drop” on page 38.

 
Note: Do not remove your memory card while your phone is using it or writing files on it. Please read “Remove or format your memory card” on page 38

Keys & navigation

a few essentials

Key tips

Front keys

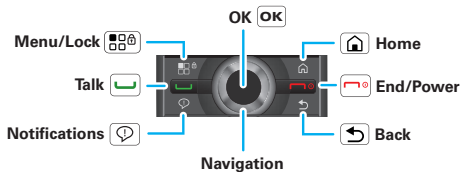

- **Home** (🏠): Press to return to the home screen. Press and hold to see recently used apps.
- **Menu/Lock** (📱): Open menu options, and press and hold to lock keypad.
- **Talk** (☎): Start a call.
- **Navigation**: Navigate through menus, apps, and Web pages.
- **OK** (OK): Select menu options.
- **End/Power** (📞): Press to end a call, or press and hold to turn phone on/off.
- **Notifications** (🗨): Open notifications.

- **Back** (↶): Go back one screen.

Keypad lock

Lock the keypad in the following ways:

- Press and hold Menu/Lock (📱).
- Let the keypad lock timeout (don't press or select anything).

To unlock the keypad, press Menu/Lock (📱) > (✳).

To change the time period of the keypad auto-lock, press (🔴) > ⚙ **Settings** > **Location & security** > **Keypad lock timeout**.

Power key menu

Press and hold End/Power (📞) to open the power key menu, where you can turn off the phone (**Power off**), or turn **Airplane mode** or **Silent mode** on or off.


Adjust volume

Press the volume keys to change the ring volume (in the home screen), or the earpiece volume (during a call, or listening to audio).



Navigation


Use the Navigation Key to move around the screen or to scroll through menus. Press **OK** to select an item. To display option menus for items, such as contacts,

 
highlight the item, then press and hold **OK**. To open the main apps menu, scroll to the app tab  in the home screen and press **OK** to select it.

Home screen

quick access to the things you need most

Quick start: Home screen

The *home screen* gives you all your latest information in one place. It's what you see when you turn on the phone or press Home . It's basically like this:

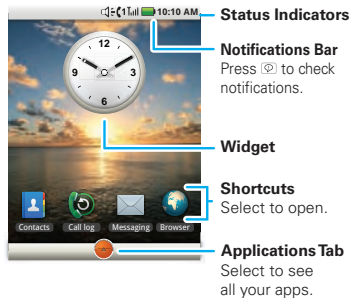

Note: Your home screen might look a little different.

The home screen extends beyond what you see on the screen to give you more room for adding shortcuts, widgets, and more. Press the Navigation

Key left and right to see more home screen panels or to add widgets or shortcuts.




Widgets

Add a *widget*, such as a clock, music player, or a calendar that shows upcoming appointments.

To open a widget, select it. To add widgets, press Menu/Lock  > **Manage Home** > **Add** > **Widgets**.

Shortcuts


To add shortcuts to the home screen, press Menu/Lock  > **Manage Home** > **Add** > **Shortcuts**.

 
Apps

Your phone comes with some apps already, and you may be able to download and install more. To open an app, select it.

Applications menu



All the apps on your phone, including the apps that came with your phone, and the ones you download and install, are listed in alphabetical order in your *Applications menu*.

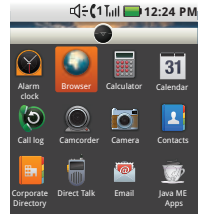Select the app tab, , in the home screen to open the app menu.














 





Running multiple apps

No need to close an app before opening another one. Your phone runs multiple apps, all at once.

You can open a new app while already running another. Press Home  to return to the home screen. Open the Applications tab, and select the app you want. To switch from one running app to another, press and hold Home  to see what apps are already open, then select the one you want. You can view up to the last six apps that you ran.


Phone status & notifications

The status bar at the top of the screen contains icons that tell you about messages and phone status. To view your notifications, press Notifications . Icons on the right tell you about phone status:

	Bluetooth™ active		private call
	GPS active		line 1 active
	vibrate		line 2 active
	silent		airplane mode
	data active		battery (charging)
	speakerphone active		battery (full charge)
	data sync		text message
	network (full signal)		call alert

Notification & Bluetooth LEDs

 Your phone has a notification LED that blinks whenever you receive voice mail, email, have an appointment, or your battery is low.




The Bluetooth LED blinks when a Bluetooth device is connected to your phone.


Calls


it's good to talk

Quick start: Calls


Make & answer calls




To make a call, enter a number, then press Talk .

To answer a call, press Talk .

To end a call, press End/Power .

In-call options

 
Press Menu/Lock  to show your in-call options.



Tip: You can press Home  or Back  to leave the active call display. To reopen it, press Talk .

Handsfree

Note: Using a mobile device or accessory while driving may cause distraction and may be illegal. Always obey the laws and drive safely.

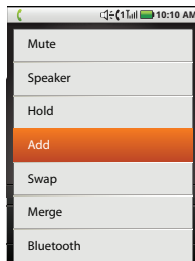

During a call:







- To use the speakerphone, press Speaker .
- To disconnect a Bluetooth™ device, press Menu/Lock  > **Bluetooth**.



Recent calls


Find it:  >  **Call log**

- To call a number, highlight it and press Talk .
- To send a text message, add to contacts, view a contact, or other options, highlight an entry, then press and hold  to display the options.
- To clear the list, press Menu/Lock  > **Clear Call log**.



Tip: When you're in the home screen, you can press Talk  to go to the **Call log**.

Frequent calls

Find it:  >  **Call log** > **Favorites**

- To call a number, select it to open the contact entry, then select the phone number or PTT number you want to call.
- To send a text message, view a contact, or other options, highlight an entry, then press and hold  to display the options.

Conference calls


To start a conference call, call the first number. After the call is answered, press Menu/Lock  > **Add call** and call the next number. When the next number answers, press Menu/Lock  > **Merge calls**.

Your phone number

Find it: **About phone** > **Status** > **My phone number**

Tip: The first contact in **Contacts** contains your mobile phone number.

Unanswered calls


If you receive a phone call and press End/Power  before it goes to voicemail, you can send an automatic text message to the other caller.

Find it:  >  **Settings** > **Call settings** > **Auto Text reply** > **Incoming call** or **Outgoing call**.

Emergency calls

Note: Your service provider programs one or more emergency phone numbers (such as 911 or 112) that you can call under any circumstances, even when your phone is locked. Emergency numbers vary by country. Your pre-programmed emergency numbers may not work in all locations, and sometimes an emergency call cannot be placed due to network, environmental, or interference issues.

1 Enter the emergency number. If your phone is locked, select **Emergency Call** at the bottom of the passcode screen, and then enter the number.

2 Press Talk  to call the emergency number.

Note: Your mobile device can use AGPS satellite signals to help emergency services find you (see “GPS & AGPS” on page 48).

Cool down

In very limited circumstances, such as where your phone has been exposed to extreme heat, “Cool Down” message screens will appear. To avoid possible damage to your battery and phone, you should follow these instructions until the phone is within its recommended temperature range. When your phone is in “Cool Down” mode, only emergency calls can be made.


Dual microphone noise cancellation

Dual microphone noise cancellation improves call audio quality by removing the ambient noise around you, and providing a cleaner, clearer sound to the person you’re calling.

Note: Dual microphone noise cancellation is turned on by default.

**Noise Cancellation
Microphone**



To turn off dual microphone noise cancellation, select  >  **Settings** > **Call settings** > **Noise cancellation**.

Features for the hearing impaired

Use your phone with a hearing aid

Note: Your phone has a hearing aid rating of **M3,T3**.

 
For more information, see “Hearing Aid Compatibility with Mobile Phones” on page 51.

For best results, use the optimization and phone setting. They generally apply as well for users with cochlear implants.

Optimize your phone position and orientation

While on a phone call slide your phone up and down, then left and right until best microphone coupling is obtained. You also may need to adjust your hearing aid (HA) volume setting.

If your HA has a telecoil, activate its switch, then also rotate the phone as illustrated to align the telecoils.

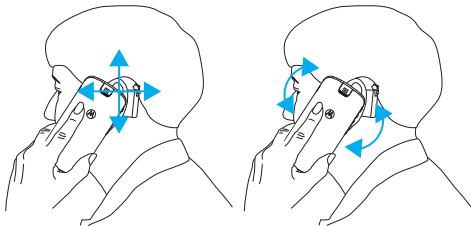

Note: Some automatically switched hearing aids may need an auxiliary switching magnet.

If you are unsure whether your HA is telecoil equipped or needs an auxiliary magnet, please refer to your HA user guide or contact a hearing aid professional or supplier.



Approximate telecoil location is within 6-13 mm of this location



Off - Shut off
M - Microphone
T - Telecoil

Approximate telecoil location is just above battery

Choose your hearing aid setting

Find it: > **Settings** > **Call settings** > **Hearing aid compatible**

The **Microphone** option optimizes your phone for microphone coupling. The **Telecoil** option meets the US federal requirements for telecoil coupling. The factory default setting for this feature is **Off**.

TTY

features

turn on TTY feature

> **Settings** > **Call settings** > **TTY** > **HCO, TTY or VCO**

turn off TTY feature

> **Settings** > **Call settings** > **TTY** > **Off**

change the TTY baud rate

> **Settings** > **Call settings** > **TTY** > **TTY baudrate** > **45.45 or 50.00**

change TTY mode during a call

Home > > **Settings** > **Call settings** > **TTY** > **HCO, TTY or VCO**