

User Guide

A1260

APPLICANT MOTOROLA INC

Congratulations

The Motorola A1260 touch screen phone does it all. It gives you so much and, with its stand out from the crowd design, it's sure to get attention.

 
- **Connect on many levels** —Stay connected with voice, text messaging and Email.
- **Rich Music Experience** —Use the music player and the FM Radio to listen to your favorite songs.
- **Photos and Videos made clear** — Capture the moment with photos and videos
- **Internet experience** — Capture the internet information and access your social networking sites.

Contents

<i>Introduction</i>	5
<i>Basic</i>	6
<i>About the Phone</i>	12
<i>Phone calls</i>	20
<i>Contacts</i>	30
<i>Messages</i>	36
<i>Email</i>	41
<i>Personalize</i>	44
<i>Entertainment</i>	47
<i>Videos</i> [★]	49
<i>Music</i>	50
<i>FM radio</i>	53
<i>Web</i>	54
<i>Connection</i>	56
<i>Cable connections</i>	61

<i>Memory card</i>	64
<i>Tools</i>	65
<i>Others</i>	69
<i>Secuirty</i>	73
<i>Service & Repairs</i>	74
<i>Safety, Regulatory & Legal</i>	75

Introduction

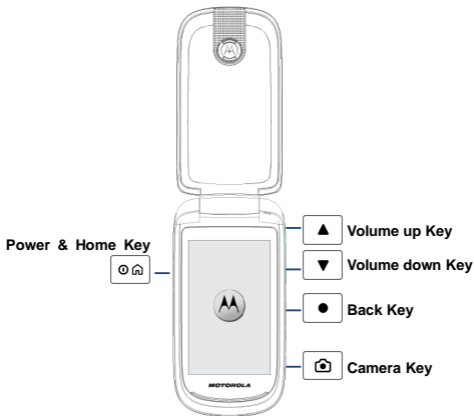








CAUTION Before using your phone for the first time, please read the important **Legal and Safety** information at the back of this guide.









More information

Go to www.motorola.com/support on your computer.

Basics

The phone contains the following features:

Icons	Description	cons	Description
	Call log		Email
	Calendar		Browser*
	Music*		Alarm
	FM radio		Camera*
	File manager*		Settings
	Camcorder*		Ebook*
	Voice recorder*		Video player*
	Time		Calculator
	Notes*		Mini map*
	Bluetooth		Baidu*

	Shop4apps**		Gallery*
	Business*		Campage*
	Leisure 4in1		YoudaoDict
	Hexin Stock*		SIM Toolkit*



★ Features need the Tflash to be installed.

* Features dependent on the SIM, network, and your data service. You may be charged

Note: This phone supports data-intensive apps and services. It is strongly recommended that you purchase a data plan that meets your needs. Contact your service provider for details.



CAUTION This is a standard features list, you list may be different.

Conventions used in this guide



Symbols	Explanation
	This means the feature is network, SIM card, or subscription dependent and may not be available in all areas. Contact your service provider for more information.
	This means the feature requires an optional accessory.

Find it

Let's find a feature! Here's an example:

Find it:  >  Settings > Wallpaper

It means:

1. From the home screen, tap  open the main menu.
2. Tap Settings to open the phone setup menu, and then tap Wallpaper.
3. Tap to highlight and select Wallpaper, then tap OK. In certain screens, you can tap  to show the menu options.

Assemble & Charge

Remove the back cover

1. Holding the phone and open the back cover with the small notch at the bottom.

SIM card install

2. Insert the SIM card in SIM card slot.



SIM card install

3. The Tflash socket is under the SIM card socket. Inset the Tflash card in the Tflash slot.



 
Note: To remove the SD card, push it in and release it.

Battery install

Use only Motorola original batteries and accessories for your Phone

 


4. Insert the contacts side of the battery first then gently push the battery into place

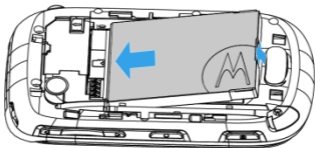

Replace the back cover

 
5. To replace the back cover, make sure it is sealed to the phone.

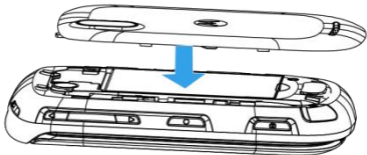

CAUTION: To protect the data in the phone, the phone should be powered off before you remove the battery.


Charge up the Phone

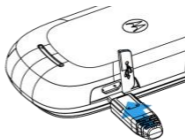

6. Insert the charge into the phone's sort which located in the left bottom of the phone, then insert the charger plug into the power socket.
7. After the phone has been fully charged, remove the charger.



Power on & off



To turn on your phone, press and hold Power Key  (below the earphone port).

To turn off your phone, press  and hold Power key ,

then select **Power off** on the option menu and confirm the selection.

Tap **OK** when prompted to turn off the phone.




About the Phone

Touch tips

Here are some tips on how to navigate around your phone


Touch

To choose an icon or option, simply touch it.

Try it: tap  to open the application main menu.

Touch & hold


To open special options, touch and hold an icon or other item.

 
Try it: tap , then touch & hold a contact to open options

Try it: touch & hold a widget on home screen to move it, or drag it to the delete button to delete it.

Drag

To scroll through a list or move slowly, drag across the touch screen.

Try it: tap  enter **Contacts**, and then drag your contacts list up and down

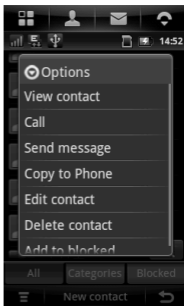

Tip: when you drag or flick a list, a scroll bar appears on the right. Drag the scrollbar to move the list to a letter A-Z.

Flick


To scroll through a list or move quickly, flick across the touch screen (drag quickly and release).

Tip: when you flick a long list, touch the screen to stop it from scrolling.



Home Screen

Quick access to the things you need most

The *home screen* gives all your latest information in one place. It's what you see when you turn on the phone or any time you press **Home Key** , it is basically like this:








Note: Your home screen might look a little different.


The home screen extends beyond what you see on the screen to give you more room for adding widgets. Flick the home screen left and right to see more panels or to add widgets.











Global navigation bar

The *global navigation bar* gives you the way to easily access to your phone's primary functions:

Icons	Explanation	Icons	Explanation
	Application main menu		Contacts
	Messages		Dialer
	Notifications		

Tip: The icons show in the notifications  .

Icons	Explanation
	Missed call
	An open wireless network is available
	Unsettled alarm event
	SMS/ MMS sent failed
	New SMS / MMS message
	New Email message
	Upcoming event
	General notification for system error

Status bar

The status bar under the Global navigation bar contains icons that tell you about the phone status. Touch the icons on status bar will reveal the corresponding status panel.












Wireless status **Ongoing process**

System info












These are the icons that may appear on the wireless status area of the status bar:

Icons	Explanation	Icons	Explanation
	Signal strength		Roaming
	Airplane mode		No signal
	EDGE connected		EDGE in use
	GPRS connected		GPRS in use
	Bluetooth is on		Connected to a Bluetooth device
	Bluetooth is discoverable		Connected to a WLAN network

These are the icons that may appear on the ongoing process area of the status bar:

Icons	Explanation	Icons	Explanation
	Call in progress		Call forwarding on
	Call on hold		USB connected
	Music is playing		FM radio in use
	In recording		Downloading data
	More notifications		

These are the icons that may appear on the system info area of the status bar:




Icons	Explanation	Icons	Explanation
	SD card installed		Phone microphone is mute
	No SIM card installed		Alarm is set
	Speakerphone on		Mute mode
	Vibrate mode		Battery is charging
	Battery is very low		Battery is full
	Battery is low		

Bottom bar

The bottom bar provides the basic functions you can use in the active application. The bottom bar could change according to the contextual content of application



 
Icons on bottom bar:

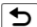

Icons	Explanation
	Tap to show menu.
	Return to home screen.
	Go back to previous screen.

Text entry

There are 3 kinds of text input methods.

 
- ✓ Full screen handwriting
- ✓ Qwerty
- ✓ Bell



Try this: Tap  enter Messages and compose a new message, then tap the text box, the input methods will be displayed, tap  to select one of following input methods:



Full screen handwriting

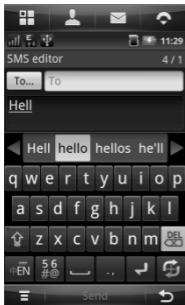


Qwerty keyboard input

 



Bell input



Typing tips

Here are some tips for the text entering:

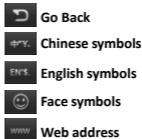

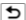


- ✓ To choose **symbols** or **numbers** from a list, tap  .



- ✓ To hide the input method tap  on the bottom bar.

- ✓ To switch input language press  for English, and .



for Chinese.


- ✓ To delete a character(hold to delete more), tap delete  .
- ✓ To start a new line, tap Return  .
- ✓ To enter one capital letter, press Shift  .
- ✓ Enter only capital letter, until your tap Shift  again, tap Shift  twice.

Application shortcuts bar

The application shortcuts bar contains 4 customized application shortcuts and the shortcut of ring alert style.

Change the shortcuts on Application shortcuts bar:

Find it:  >  > Home screen setup

1. Tap  to enable the Home screen shortcuts.
2. Tap the shortcut you would like to change, select the shortcut from the list of the applications that are installed on your phone.
3. Tap **OK** to make sure the selection.


Phone calls

Quick access to the things you need most



Find it:  **Phone**


Making calls

You can either dial a number directly, or you can use the Smart Dial feature to search and call a contact in your contacts list.

1. Tap , enter the number.
2. As you enter digits or letters, the panel displays numbers and names that match the keys you tapped.

 
If you enter a wrong digit,


Tap  to erase that digit, to erase the entire number, press and hold .

3. Tap  to close the dial pad and to see if there are more matching numbers or contacts.

4. To make a call, do one of the following:

If there are no matching contacts in the list, after entering

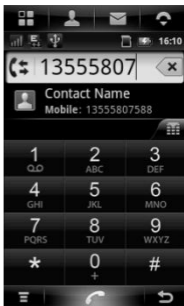

the number, Tap Call  .

Tap the phone number or contact from the list.

Smart Dial

 
The phone dialer's Smart Dial feature makes it quick and easy for you to place a call. Simply enter the phone number or first few letters of the person you want to call. Smart Dial automatically searches and filters your contacts list.

Tip: Tap **Redial** will put the number you dialed last time into the number field.



Answering the call

When you receive a phone call from a contact, the

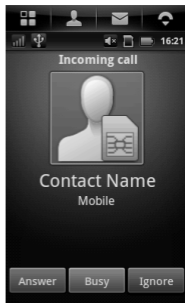Incoming call screen appears and displays the caller ID icon, name, and number type of the calling party. When you receive a phone call from someone who is not stored in Contacts, only the default caller ID icon and phone number appear on the Incoming call screen.



Tap **Answer** to answer the call, tap **Ignore** to ignore the call or tap **Busy** to make the phone in busy mode.

Tip: To mute the ringing sound without rejecting the call you can press the volume up or down key  / .

Call a speed dial number

To call a stored speed dial number, press and hold a number button.






To Set up speed dial numbers:

 
Find it:  >  > **Turbo dialing**




Tap the speed dial number in the list, then tap the contact number you want to assign to.


In-call options

When a call is in progress:

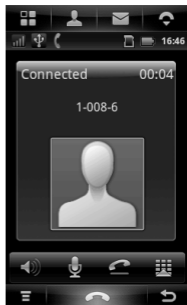- ✓ To hang up, tap End call button .
- ✓ To put the call on hold, tap  and tap  to recover.
- ✓ Tap  for hands free mode, and tap  to take the phone off the hands free mode.






-
- ✓ To mute the microphone tap , and tap  to recover.
 - ✓ To enter extend number, tap  to prompt the dial pad, tap it again to hide the dial pad.

Tip: To record the call, tap Menu  then tap **start recording**.

Note: Using a mobile device or accessory while driving may cause distraction and may be illegal. always obey the laws and drive safely.

Setup a conference call




1. Make a call to the first conference call participant.
2. When connected, press Menu , tap **Add call**, and then dial the number of the second participant. The first participant is put on hold when you dial the second participant.
3. When connected to the second participant, tap merge  .
4. When finished, tap end call  .

 


Call log

The Call log record all your missed calls, dialed numbers, received calls and blocked calls.

Find it:  >  or  > 

- ✓ Tap the call log type indicator icon  to call back.
- ✓ Tap the icon after the unsaved  number to save it to your contacts list.
- ✓ Tap the contact ID  to show the detail of the contact.
- ✓ Tap the tab at the bottom to switch between **Answered**, **Dialed**, **Missed** and **Blocked** calls

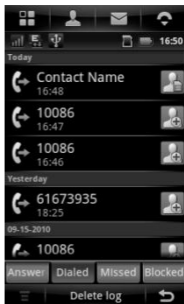

Phone setup



Find it:  >  > **Setup**

You can adjust the phone setup of your phone such as set speed dial numbers, or enable additional call services from you wireless service provider.

Options	Description
Call waiting	Set the option for the incoming call during a call
Call forwarding	Select how you want your phone to handle busy, unanswered, and unreachable calls. You can also set the call forwarding option for all incoming calls.
Turbo dialing	Set the speed dial number.
Prepend	Go back to previous screen.
Auto redial	Enable or disable redial the number not connected automatically
Auto answer	Enable or disable auto answer the call with headset or Bluetooth connected.
Flip Answer	Enable or disable open flip to answer the call
My number	Set my name and phone number

Emergency call

Note: Your service provider programs one or more emergency phone numbers (such as 911 or 112) that you can call under any circumstances, even when your phone is locked. Emergency numbers vary by country. Your pre-programmed emergency number(s) may not work in all locations, and sometimes an emergency call cannot be placed due to network, environmental, or interference issues.

1. Tap  **Phone** (if your phone is locked, touch Emergency call).
2. Enter the emergency number.
3. Tap  to call the emergency number.

Note: Your mobile device can use GPS signals to help emergency services find you. See "GPS" in your legal and safety information.

Contacts

Contacts like you've never had before

 
Find it:  **Contacts**

Contacts gives you quick and easy access to the people you want to reach.

Quick start: Contacts

All of your contacts are displayed alphabetically in a scrolling list. Each contact is followed by the default phone number.

The **Contacts** has the following tabs:

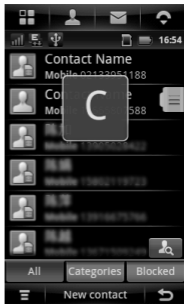

All

Give you access to all contacts on your phone including Phone contacts and contacts stored on your SIM card.

Categories

Let you assign contacts to categories so you can easily send an SMS, MMS, or email message to the whole category.

Blocked



List all the contacts or numbers you phone have blocked.

 
Tip: you can drag the list up to down to scroll it, or slide your finger up to down to scroll quickly. Either way, a tab

briefly appears to the right of the list, which you can drag up and down to scroll very quickly, while displaying the letter of the alphabet for the contacts you're scrolling past.

Details of contact

To view details of a contact:

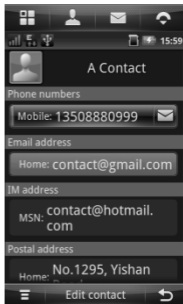


1. Open your contacts  .
 2. Find the contact and tap it to show it's details.
- ✓ Tap the phone number to call it directly.
 - ✓ Tap the email address to send email message.
 - ✓ To send SMS or MMS to the number tap the message icon after the number  .

 


New contact


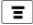
Find it:  **Contacts > New contact (All)**

Type the contact name and details, then tap **Done** to save.


- ✓ To add a new entry, tap the icon .
- ✓ To remove current entry, tap the icon .
- ✓ Flick up to see more details.
- ✓ Tap the picture frame icon  to select a picture for the contact ID.

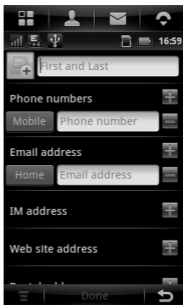

Copy to SIM / Phone



Find it:  >  > **Copy to SIM /Phone**

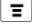You can copy the contacts stored in Phone contacts to SIM card or the contacts stored in SIM card to Phone contacts.


1. Tap , then tap **Copy to SIM /Phone**
2. Select the way you want to copy, Phone to SIM or SIM to Phone, tap **OK**.
3. Tap the check box behind the contact to select the contact you want to copy, or you can tap Copy all to make all contacts in the list selected.
4. Tap **Copy** to confirm.

Note: Some information might be lost while copy the contacts from Phone to SIM because of the capability of the SIM card.



Back-up to SD card

Find it:  >  > **Back-up to SD card**

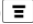
You can back-up all of the contacts on your phone to your SD card as separated vCard file.

1. Tap , then tap **Back-up to SD card**
2. you can select your destination or back-up it to the default folder.
3. Tap **Replace** to clear all vCard files in the folder or tap **Merge** to keep the vCard already in the folder.
4. Back-up to SD card complete.

Restore from SD card

Find it:  >  > **Restore from SD card**

You can restore the contacts backed-up in your SD card to Phone contacts.


1. Tap , then tap **Restore from SD card**
2. Select the contact you want to restore from the SD card.
3. Tap **Replace** to replace the same contacts or tap **Merge**

to keep them.

4. Restore from SD card complete.


Note: the phone scanned the SD card for the contacts vCard saved, the same contacts just show once in the list.

Search for a contact

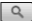1. Tap the search button  at the bottom.
2. In the search bar, enter the first few letters of the first or last name of the contact looking for. Matching contacts are displayed
3. Tap the contact to open his or her contact details screen.

Create a category and add contacts

Find it:  > **Categories**



1. On the Categories tab, Tap **edit category**, then tap  > **New category**.
2. Enter a name for the category, and then tap **Done**.
3. Tap **Add members** on the bottom bar.
4. Select the contacts you want to add to the category, and then tap **Add**.

Block contacts

Find it:  > **Blocked**


You can block a contact or a number from calling you or sending you message. When blocked, the contact removed from the contacts list and moved to the blocked list. The blocked call log will show under the **Blocked** tab, the blocked message will place under the folder **Spam**.

Do one of the following to add it the blocked list:

- ✓ Tap and hold on a contact in the contacts list then tap **Add to blocked**.
- ✓ In detail view of a call history, tap  > **Add to blocked**.
- ✓ In detail view of a message, tap  > **Add to blocked**.

Note: To unblock a contact, tap and hold the blocked contact, then tap **Remove from blocked**.

Share contact information as a vCard.

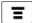1. Tap the contact want to share to show the details.
2. Tap  > **Share**.
3. Select the way you want to use **Bluetooth** or **Email**.
4. Tap **OK**.

Messages

Sometimes it's better to say it in a message

Find it:  **Messages**

Messages lets you compose and send text (SMS) and multimedia message (MMS) to other mobile phones.

Messages center

Messages groups all your messages with different folders, you can easily find:

Inbox: all received messages

SIM card: message saved in SIM card.


Draft: all draft messages.

 
Outbox: all messages preparing to send.

Sent Items: all messages sent out.

Spam: all blocked messages.

 
Trash: all deleted messages.

You can create your personal folder by tap  > New folder.

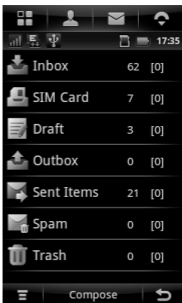





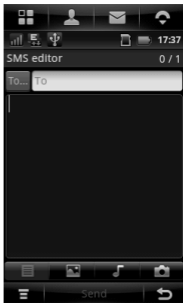


Send text (SMS) message

1. On Messages center screen, Tap **Compose**, the compose screen opens.
2. Fill in one or more recipients. You can:
 - ✓ Enter phone number directly in the To field. If you're sending the message to several phone numbers, separate the phone numbers with a comma. As you enter information, any matching phone numbers from your contacts list are displayed. Tap a match to enter that number or address directly.
 - ✓ Tap the To button, and then select the phone numbers of the contacts to whom you want to send the message. You can also select contact categories as recipients.
3. Tap the text box, and then start composing your message.
4. When done, tap Send to send the text message.




Send multimedia (MMS) message

1. While compose the text message, insert subject or any other attachments will convert it to multimedia (MMS) message automatically:
 - ✓ Insert the subject, tap  > Show > Subject.
 - ✓ Insert picture, tap  and then tap **insert picture** to attach a picture from you storage card.
 - ✓ Insert video, tap  and then tap **insert video** to attach a video from you storage card.
 - ✓ Insert audio, tap  and then tap **insert audio** to attach an audio from you storage card.
 - ✓ Insert recording, tap  and then tap **insert new recording** to start a new rerecording and attach it.
 - ✓ Tap  go to Camera to take a phone or video and attach it.
 - ✓ Tap  to add new slide.
2. Tap the text box, and you can add your text message.
3. When done, tap Send to send the MMS message.



New message

Depending on your ring alert style settings, the phone will play a ringtone, vibrate and display the new message dialog. Tap **Read** to open and read the new message.

If you not handle the dialog, it will auto collapse and show in the notifications panel, you can tap  to open the notifications panel, and then tap the new message to open and read it.

Manage message

You can move the messages to the folder you created to save or protect them.


1. In messages center screen, tap  >**New folder**.
2. Enter the name for the folder and tap **Done**.
3. In the folder of the messages you want to move, tap  >**Move**.
4. Select the messages you want to move, and then tap **Move to**.
5. Select the new folder you created, and then tap **Move**.

Note: To protect your message, while create the folder, enable Lock folder with coder to lock your folder, then every time you need to access the messages in the lock folder, it will need to verify the phone lock code first.

SMS backup

Find it:  >  > **SMS backup**

All SMS messages except in folder Spam and Trash can be backed-up to the storage card with folders.

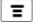
1. In messages center screen, Tap  >SMS backup.
2. Select the folders you want to backup.
3. Tap **Backup**.
4. After SMS backup complete, tap **OK**.

If you have backed-up SMS messages in your storage card, it will ask you whether to replace the files.

SMS restore



Find it:  >  > **SMS restore**

You can restore the SMS messages and folders backed-up to your messages center.

1. In messages center screen, Tap  >SMS restore
2. Select the folders you want to restore
3. Tap **Restore**.
4. After SMS restore complete, tap **OK**.



Email

Send and receive your Email everywhere


Find it:  **Main menu** >  **Email**

The **Email** application lets you send and receive email from your webmail or other accounts, using POP3 or IMAP.


Add a POP3 / IMAP email account

1. Tap  **Email** application.
2. Do one of the following:
 - ✓ If this is your first time to add an email account in Email, tap your provider on the Choose an Email provider screen.
 - ✓ If you have already added an email account, tap  >Account settings, and then tap **Add**.
3. Enter the **Email address** and **Password** for the email account and then tap next.
4. Enter the **Account name** and **Your name** and then tap **Done**.

Compose and send an email message

1. On the email accounts screen, tap **Compose**.
2. Fill in one or more recipients. You can:
 - ✓ Enter email address directly in the To field. If you're sending the email to several recipients, separate the email addresses with a comma.
As you enter information, any matching addresses from your contacts list are displayed. Tap a match to enter that address directly.
 - ✓ Tap To button, and then select the addresses of the contacts to whom you want to send the email. You can also select contact categories as recipients.
3. Enter the **subject** and then compose you message.
4. To add an attachment, tap  > add attachment, and choose from the following options:
 - ✓ Picture. To attach a photo from your storage card.
 - ✓ Audio. To attach a music file or voice recording from your storage card.
 - ✓ Video. To attach a video from your storage card.
 - ✓ Other files. To attach other files in your storage card.
5. Tap Send to send the message immediately, or tap save as draft if you want to send it later.



View and reply to an email message

The new email message will show in the notifications panel, you can tap  to open the notifications panel, and then tap the new email message to open and read it.

Or you can find the new message in Inbox:

1. On the email accounts screen, tap Inbox, then tap the email you want to view:
2. Tap Reply or Reply all to reply to the email.

Edit email account settings

1. On email accounts screen, tap  >Account settings.
2. Tap the email account you want to edit in the list.
3. Then you can edit the detail settings for the email account.
4. Tap **Done** to save your changes.
5. To remove the account, tap  >**Remove account**, then tap **OK** to make sure.

Personalize

Add your personal touch


Make your phone look and sound just the way you want it. Personalize your phone with a different wallpaper, ringtone, and notification sound for events such as incoming text, email, calendar reminders, and more.


Widget

1. Find an empty spot on our home screen where you want to add a widget, then tap and hold.
2. Tap the widget you want to add in the list.
3. To move the widget, press and hold the widget you want to move, drag the widget to the location where you want it, release your finger.
4. To remove the widget, press and hold the widget you want to remove, drag the widget to the Remove button, in the bottom, when the widget turns red, release your finger.



Ringer alert style


1. Tap  **Main menu** >  **Settings > Ringer alert style**

-
2. Tap the ringer alert style you want.
 3. Tap the volume button  to adjust the ringer volume of the ringer alert style.
 4. Tap OK.






Note: Tap the ringer alert style icons  on the home screen to setup the ringer alert style directly.

Ringtones



1. Tap  **Main menu**>  **Settings > Ringtone and sound**
2. Tap **Phone ringtone** for Incoming call, **Notification ringtone** for the default notification, **Message ringtone** for incoming message, **Calendar alert ringtone** for calendar reminder.
3. Scroll through the available ringtones and tap the ringtone you want to use, the ringtone briefly plays when selected.
4. Tap OK.

Note: Except the Notification ringtone you can tap  >More to set the audio files in your storage card as ringtone.

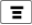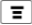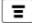Wallpaper

1. Tap  **Main menu**>  **Settings** > **Wallpaper**.
2. Tap to choose from the preload wallpapers.
3. Tap  >Select picture, select a photo from your storage card, crop it and then tap Save to set it as the wallpaper.
4. To use the wallpaper with transparency as background for applications, Tap  >Transparency.
5. To reset the wallpaper to default, Tap  >Reset to default.

Date & time

1. Tap  **Main menu**>  **Settings** > **Date & time**.
2. Tap the time button to set time.
3. Tap the date button to set date.

Color theme

Find it:  **Main menu**>  **Settings** > **Color theme**.

Language

Find it:  **Main menu**>  **Settings** > **Language**.

Entertainment

see it...take it...send it!


Take and send photos

To get the clearest pictures, wipe the lens clean with a dry cloth before you take a picture.







Note: Make sure the SD card is inserted.

Find it:  > **Camera**


To change camera settings, tap  before you take the photo. To take the photo, tap Capture. Then:

- To save the photo, tap **Save**.
- To send the photo in a message, tap **Share**.
- To discard the photo and return to the active viewfinder, tap **Delete**.

Following features will help to adjust the photo image

Icons	Features
	Scene select: auto, in room, outdoor, night.
	Brightness select.
	Pattern selection: camera, video, self-timer.
	Resolution : from 320 × 240 to 2048 × 1228.

edit a photo

Find it:  > **Gallery**> tap the picture for edit

Use the photo editor to edit photos and images stored on your phone, or create new drawings or illustrations. To edit an existing photo or picture, tap Gallery and select the photo you want to open.

Tap the photo to show options, such as **Edit**, **Delete**, and more.

Tap **Save** to save your changes.

Videos

To get the clearest videos, wipe the lens clean with a dry cloth before you record a video.

Record & send videos



Find it:  >  **Camcorder**

To record the video, tap **Record**. To stop the video, tap **Done**. Then:


- To save the video, tap **Save**.
- To send the video in a message, tap **Share**.
- To discard the video and return to the active viewfinder, tap **Delete**.

Play video clips



Find it:  >  **Video Player**

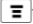

To start playing a video, tap the file and then tap **Play**.

While the video is playing, tap  to **Delete**, **Move**, **Copy**, or **Share** your video.

Music

Transfer music

You can use your phone as a modem, to connect your PC to the Internet, or as a storage device, to transfer music to/from the PC.

Find it:  >  > PC Connection > Modem or USB Mass Storage

Note: Copyright—do you have the right? Always follow the rules. See “Content Copyright” in your legal and safety information.

Modem

Motorola Phone Tools software includes a PC modem application that makes it easy to use your phone as a modem, and to set up a USB cable connection without first having to activate your phone’s modem application.

USB mass storage

On your computer:

1. Use the “My Computer” window to find “Removable Disk”.
2. Click on the “Removable Disk” icon to access the memory card.
3. To copy music files between your computer and phone, drag and drop into the music files folder.
4. When you’re done, use the “Safely Remove Hardware” feature to finish.

Music file formats


To **copy** files between your phone and a computer, you will need a computer with music files in one of these formats:

Formats	Bit rate
AAC, AAC+, Enhanced AAC+, or M4A (to be verified)	Up to 128kbps.
MP3 or MP4 (to be verified)	Up to 320kbps.

Play music



Find it  >  Music

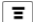

To **play** music files, tap Playlist, then tap the file you want to play.


Tip: Tap  to add or delete files in the playlist.

Music player controls


The music player displays the name, playing time, and length of the song that is playing. Tap:

 To play and  to pause.

 To play previous song or  to play next song.

 To play or cancel random songs.

 Toggle repeat.

 To mute volume and unmute volume.


FM radio

Play stations


Find it:   FM Radio


Use radio presets

To go to a preset station, tap following


 To manually adjust the channel by 0.1MHz.


 , To find the last, or next channel.


 , To edit and store the channel.

 To play the channel.

 To adjust the volume.

 To change mode between speaker and microphone.

 To change the mode between mono and stereo.

 To turn off the radio.

Web


Browser





Find it:   Browser


Note: If you are unable to establish a network connection with the browser, contact your service provider.

Interact with Web pages

Pull down the scroll bar to scroll through a text page or option list. Tap an option to select it. Tap  at any time to return to the previous screen.

Some Web pages may contain text fields for exchanging information with a Website. Tap the field and enter text in the usual way. And the following icons can support the related features as:

✓   Zoom out/in the web page

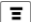Tap  to open the browser options:

Options	
Go	Go to input the web address
Bookmarks	Show the saved bookmarks
Windows	Show the opened windows
Add bookmark	To select and add bookmark
History	to check the browser history
Find on page	To search items in current webpage quickly.
Select text	To select the text size.
Share page	To share the webpage through email or message.
Download	To download information from website
settings	To select the website options




Connection

Wireless

You may set the connection for your phone through WLAN, Bluetooth to exchange data with other devices.

Connect new devices



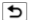

1. Tap , tap settings.
2. Tap Network.
3. Select the mode and tap  to activate the mode.
4. Tap  .

Connect Bluetooth

To connect with a new device, you need to pair with it. You only need to do this once for each device



- 1 Make sure the device you are pairing with is in *discoverable* mode.
- 2 Tap  >  Bluetooth.
- 3 Tap On (Discoverable) to activate Bluetooth power.
- 4 Tap Search to search for Bluetooth devices.
- 5 Your phone lists the devices it finds within range. Select

a device and tap Bond.

6 If necessary, tap Yes, OK or enter the device passkey (such as 0000) to connect to the device. When the device is connected, the Bluetooth indicator appears in the home screen.

Tip: For specific information about a device, check the instructions that came with it.

Note: The use of wireless phones while driving may cause distraction. Discontinue a call if you can't concentrate on driving. Additionally, the use of wireless devices and their accessories may be prohibited or restricted in certain areas. Always obey the laws and regulations on the use of these products.

Reconnect devices

To automatically reconnect your phone with a paired device, simply turn the device on.




To manually reconnect your phone with a paired device, tap and hold on the device name in the device list, then tap Create Bond.

Disconnect devices

To automatically disconnect your phone



from a paired device, simply turn the device off.

To manually disconnect your phone from a paired device, tap  to Remove Device.

Send files


You can use a Bluetooth connection to send a media file, contact, datebook event, or Web shortcut from your phone to a computer or other device.




- 1 On your phone, scroll to the item that you want to transfer.
- 2 For media files, contacts and calendar events tap Share > Bluetooth.
- 3 Select a recognized device name, or Search to search for the device.
- 4 Tap Send.



If your phone could not transfer the file to the other device, make sure the device is in *discoverable* mode. Also, make sure the device is not busy with another similar Bluetooth connection.

Note: Once you connect your phone to a Bluetooth device, that device can start similar Bluetooth connections with your phone. Your display shows the



Bluetooth indicator  in the status bar when there is a Bluetooth connection.

Receive files

If you do not see the Bluetooth indicator  in the status bar, turn on your phone's Bluetooth feature.

- 1 Tap  >  Bluetooth > On (Discoverable).
Place your phone near the device, and send the file from the device.

If your phone and the sending device don't recognize each other, place your phone in discoverable mode so the sending device can locate it:

Tap  >  Bluetooth > On (Discoverable).

- 2 Tap Ok on your phone to accept the file.

Your phone tells you when file transfer is complete. If necessary, tap Save to save the file.

Note: The unauthorized copying of copyrighted materials is contrary to the provisions of the Copyright Laws of the United States and other countries. This device is intended solely for copying non-copyrighted materials, materials in which you own the copyright, or materials which you are authorized or legally permitted to copy. If you are uncertain about your right to copy any material, please contact your

legal advisor.

Cable connections

Connect




Your phone has a micro USB port so you can connect it to a computer to transfer data.

Before you connect a cable, tell your phone what type of USB connection you want to use.



1 Insert the USB cable into the USB port on your phone. Connect the other end to the PC, and the other End to link the PC.

2 Select USB indicator  appear in the status bar which tells you the USD connected.

3. Tap the connection prompt, then USB applications will be displayed, choose the Mass Storage for synchronization and file transfer or select Modem to use as a modem.

Note: Motorola Original USB data cables and supporting software are sold separately.

Check your computer or hand-held device to determine the type of cable you need.



Transfer

Note: Memory cards are optional.



Using a cable connection, you can connect to your computer to access your phone's memory card.

Note: When your phone is connected to a computer and is being used for mass storage, it cannot be used for anything else, including making emergency calls. To restore the phone to normal use, disconnect it from the PC on your computer:

- 1 Use the "My Computer" window to find "Removable Disk".
- 2 Click on the "Removable Disk" icon to access the memory card.
- 3 To copy files between your computer and phone, drag and drop into the appropriate folders. Use the folders on your memory card for the file types indicated:
 - picture files: **\camera**.
 - video files: **\video**.
 - music files: **\music**
 - ringtones: **\ringtones**.
- 4 When you're done, use the "Safely Remove Hardware" feature to finish.


Modem

See your PC modem feature for details of how to use it.

Note: Motorola Phone Tools software includes a PC modem that makes it easy to use your phone as a modem, and to set up a USB cable connection without first having to activate your phone's modem application.

Memory card


Show & manage files

Find it:  > Settings > Phone storage

Note:

Do not remove your memory card while your phone is using it or writing files on it.






To copy or move a file **from your phone to your memory card**, highlight it in the list and tap  > Copy to Memory Card or Move to Memory Card.

Note: If you download a copyrighted file and store it on your memory card, you can use the file only while your memory card is inserted in your phone. You cannot send, copy, or change copyrighted files.

Tools




Calendar

Add new events






Find it:  >  Calendar, tap the day, tap , then tap New Event. Tap in a field to enter event details. Pull down the scroll bar to see additional fields. When you're done, tap Done.


Note: You'll need to create an event to use the reminder alarm.

See or edit events

Find it:  >  Calendar, tap the day, tap , then tap New Event to edit.






Voice records

To create voice records, tap  >  Recorder. When you are ready, press  and speak into the phone. Tap  To stop the recording, tap  to play the recording immediately.

To play voice records, tap  > File managers > My Recordings > tap the file to play.

Alarms

Find it:  >  Alarm

To set an alarm, tap the check box  beside an alarm to activate it. A check mark  indicates that the alarm is activated. Tap the time, then to   to set the alarm time. Set the desired time, then tap OK to store it. Tap Snooze to set the snooze period. Tap  to store your settings.

Note: When you select Alarm When Powered Off in the alarm clock setup screen, your phone turns itself on to sound the alarm.

To turn off the alarm, tap Dismiss. To delay the alarm, tap Snooze.

File manager

Find it:  >  File Manager


The file manager makes it easy for you to create personal folders to store and manage your files and applications. Your phone lists the available storage devices (such as Phone memory, and an optional removable Memory Card). Your phone includes several predefined folders, for examples:

-
- **bcr** – Stores your business card images that you take if you enable the option in BCR (Business Card Recognition).
 - **Camcorder** – Stores the videos that you take.
 - **Camera**– Stores pictures that you take.
 - **Contacts backup**– Stores you backup contacts if you do the backup in phonebook.
 - **DCIM** – Stores pictures from MMS and Bluetooth transfers.
 - **My recordings** – Stores the recording voice recording files that you take.
 - **notegallery** – Stores the article images that you take in CamPage.

Note: Your phone's folders and files may be different.

Gallery

Find it:  >  Gallery

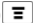Tap  to set up the related features, such as delete, edit, slide show profile etc.

Ebook


Find it:  >  Ebook

This application can allow you to manage and read your ebook like TXT files. Just place your txt file in the sdcard, and then launch this application to open the ebook. You can set the background color, font size in this application.

Others

Calculator

Find it:  >  Calculator

Tap , Tap Advanced for scientific calculation.

Business★

Find it:  >  Business

This application is an android based business card recognition tool, which can use the camera to take the photo and auto recognize the information contains in the business card. It will save the information into phonebook with the format supported by the phone.

CamPage★


Find it:  >  CamPage

After capturing the text, the following features can help to edit the text in personalizations:

- Recognize it can support to recognize the campagne or parts of the campagne, and you can entry to correct the wrong one by entry words yourself through the online

input.

- Ehnance to enhance the feature.
- Trim to auto the trim of campage.
- Rotate to rotate the campage direction
- Camera to go to the camera mode


Tap Power On key, tap  to select the Set Tag, Share , Delete features for each Campage.

Youdao Dict

Find it:  >  YoudaoDict.

Through Youdao Dictoinary, you can find the word translation through three method:

- Dictionary
- Bai Ke
- Translation

Tap  , you can choose find the history, select text, settings, about, help, exit etc. options.

Leisure 4in1

Find it:  >  Leisure 4in1.

There are 4 default games in the section, refer to the games help before using.

Hexin Stock

Find it:  >  Hexin Stock.

This is one of the best mobile stock tools which can provide you the latest and most authoritative stock information for your investment.

SHOP4APPS

Find it:  >  SHOP4APPS.

The SHOP4APPS is a business service that provides Tools, Games, MOTOPICKS, Entertainments & Lifestyle, Business & Social, and My locker options.

All of the content you can download through the internet.

Baidu

Find it:  >  Baidu.

This feature allows you to search anything you want via BaiDu search engine more conveniently.

SIM Toolkit

Find it:  >  SIM Toolkit.

The feature is provided by your system operator.

For details, check with your operator.

Map



Find it:  >  Map

Use this feature to get directions to a location. Select a city to get started.

Security

Codes & passwords

Your phone's four-digit **unlock code** is originally set to **1234**. The six-digit **security code** is originally set to **000000**. If your service provider didn't change these codes, you should change them:

Find it:  >  Settings > Security & location > Change Phone lock code.

You can also change your **SIM PIN** password.

If you forget your unlock code: At the Enter Phone Lock Code prompt, try entering 1234 or the last four digits of your phone number. If that doesn't work enter your six-digit Security code instead.

If you forget other codes: If you forget your security code, SIM PIN code, PIN2 code, or call barring password, contact your service provider.

Service & repairs

If you have questions or need assistance, go to

www.motorola.com/support,

where you can select from a number of customer care options.

You can also contact the Motorola Customer Support Center at

1-800-331-6456 (United States),

1-888-390-6456 (TTY/TDD United States for hearing impaired),

or

1-800-461-4575 (Canada).

Safety, Regulatory & Legal

Battery Use & safety

Important: Handle and store batteries properly to avoid injury or damage.

Most battery issues arise from improper handling of batteries, and particularly from the continued use of damaged batteries.

DON'Ts

- **Don't disassemble, crush, puncture, shred, or otherwise attempt to change the form of your battery.**
- **Don't let the phone or battery come in contact with water.** Water can get into the phone's circuits, leading to corrosion. If the phone and/or battery get wet, have them checked by your carrier or contact Motorola, even if they appear to be working properly.
- **Don't allow the battery to touch metal objects.** If metal objects, such as jewelry, stay in prolonged contact with the battery contact points, the battery could become very hot.
- **Don't place your battery near a heat source.** Excessive heat can damage the phone or the battery. High temperatures can cause the battery to swell, leak, or malfunction. Therefore:
 - Do **not** dry a wet or damp battery with an appliance or heat source, such as a hair dryer or microwave oven.
 - Avoid leaving your phone in the car in high temperatures.

DOs

- **Do avoid dropping the battery or phone.** Dropping these items, especially on a hard surface, can potentially cause damage.
- **Do contact your service provider or Motorola if your phone or battery has been damaged from dropping or high temperatures.**

IMPORTANT: USE MOTOROLA ORIGINAL PRODUCTS

FOR QUALITY ASSURANCE AND SAFEGUARDS. To aid consumers in identifying authentic Motorola batteries from non-original or counterfeit batteries (that may not have adequate safety protection), Motorola provides holograms on its batteries.

Consumers should confirm that any battery they purchase has a “Motorola Original” hologram.

Motorola recommends you always use Motorola-branded batteries and chargers. Motorola mobile devices are designed to work with Motorola batteries.

If you see a message on your display such as Invalid Battery or Unable to Charge, take the following steps:

- Remove the battery and inspect it to confirm that it has a “Motorola Original” hologram;
- If there is no hologram, the battery is not a Motorola battery;
- If there is a hologram, replace the battery and retry charging it;
- If the message remains, contact a Motorola Authorized Service Center.

Important: Motorola’s warranty does not cover damage to the phone caused by non-Motorola batteries and/or chargers.

Warning: Use of a non-Motorola battery or charger may present a risk of fire, explosion, leakage, or other hazard.

Proper and safe battery disposal and recycling:

Proper battery disposal is not only important for safety, it benefits the environment. Consumers may recycle their used batteries in many retail or service provider locations. Additional information on proper disposal and recycling may be found on the Web:

- www.motorola.com/recycling
- www.rbrc.org/call2recycle/ (in English only)

Disposal: Promptly dispose of used batteries in accordance with local regulations. Contact your local recycling center or national recycling organizations for more information on how to dispose of batteries.

Warning: Never dispose of batteries in a fire because they may explode.

Battery Charging

Notes for charging your phone's battery:

- When charging your battery, keep it near room temperature. Never expose batteries to temperatures below 0°C (32°F) or above 45°C (113°F) when charging.
- New batteries are not fully charged.
- New batteries or batteries stored for a long time may take more time to charge.
- Motorola batteries and charging systems have circuitry that protects the battery from damage from overcharging.



Driving Precautions

Responsible and safe driving is your primary responsibility when behind the wheel of a vehicle. Using a mobile device or accessory for a call or other application while driving may cause distraction. Using a mobile device or accessory may be prohibited or restricted in certain areas, always obey the laws and regulations on the use of these products.

While driving, NEVER:

- Type or read texts.
- Enter or review written data.
- Surf the web.
- Input navigation information.
- Perform any other functions that divert your attention from driving.

While driving, ALWAYS:

- Keep your eyes on the road.
- Use a handsfree device if available or required by law in your area.

-
- Enter destination information into a navigation device **before** driving.
 - Use voice activated features (such as voice dial) and speaking features (such as audible directions), if available.
 - Obey all local laws and regulations for the use of mobile devices and accessories in the vehicle.
 - End your call or other task if you cannot concentrate on driving.

Remember to follow the “Smart Practices While Driving” in this guide and at www.motorola.com/callsmart (in English only).

Seizures/Blackouts

Some people may be susceptible to epileptic seizures or blackouts when exposed to flashing lights, such as when playing videos or games. These may occur even if a person has never had a previous seizure or blackout.

If you have experienced seizures or blackouts, or if you have a family history of such occurrences, please consult with your physician before playing videos or games or enabling a flashing-lights feature (if available) on your mobile device.

Discontinue use and consult a physician if any of the following symptoms occur:

convulsion, eye or muscle twitching, loss of awareness, involuntary movements, or disorientation. It is always a good idea to hold the screen away from your eyes, leave the lights on in the room, take a 15-minute break every hour, and stop use if you are tired.

Caution About High Volume Usage

Warning: Exposure to loud noise from any source for extended periods of time may affect your hearing. The louder the volume sound level, the less time is required before your hearing



could be affected.

To protect your hearing:

- Limit the amount of time you use headsets or headphones at high volume.
- Avoid turning up the volume to block out noisy surroundings.
- Turn the volume down if you can't hear people speaking near you.

If you experience hearing discomfort, including the sensation of pressure or fullness in your ears, ringing in your ears, or muffled speech, you should stop listening to the device through your headset or headphones and have your hearing checked.

For more information about hearing, see our Web site at direct.motorola.com/hellomoto/nss/AcousticSafety.asp (in English only).

Repetitive Motion

When you repetitively perform actions such as pressing keys or entering finger-written characters, you may experience occasional discomfort in your hands, arms, shoulders, neck, or other parts of your body. If you continue to have discomfort during or after such use, stop use and see a physician.

[Nov0109]

Small Children

Keep your mobile device and its accessories away from small children.

These products are not toys and may be hazardous to small children. For example:

- A choking hazard may exist for small, detachable parts.
- Improper use could result in loud sounds, possibly causing hearing injury.
- Improperly handled batteries could overheat and cause a burn.

Glass Parts

Some parts of your mobile device may be made of glass. This glass could break if the product is dropped on a hard surface or receives a substantial impact. If glass breaks, do not touch or attempt to remove. Stop using your mobile device until the glass is replaced by a qualified service center.

Operational Warnings


Obey all posted signs when using mobile devices in public areas.






Potentially Explosive Atmospheres

Areas with potentially explosive atmospheres are often, but not always, posted and can include fueling areas, such as below decks on boats, fuel or chemical transfer or storage facilities, or areas where the air contains chemicals or particles, such as grain dust, or metal powders. When you are in such an area, turn off your mobile device, and do not remove, install, or charge batteries. In such areas, sparks can occur and cause an explosion or fire.

Symbol Key

Your battery, charger, or mobile device may contain symbols, defined as follows:

Symbol	Definition
	Important safety information follows

	<p>Do not dispose of your battery or mobile device in a fire.</p>
	<p>Your battery or mobile device may require recycling in accordance with local laws. Contact your local regulatory authorities for more information.</p>
	<p>Do not dispose of your battery or mobile device with your household waste. See “Recycling” for more information.</p>
	<p>For indoor use only.</p>
	<p>Listening at full volume to music or voice through a headset may damage your hearing.</p>

Radio Frequency (RF) Energy

Exposure to RF Energy

Your mobile device contains a transmitter and receiver. When it is ON, it receives and transmits RF energy. When you communicate with your mobile device, the system handling your call controls the power level at which your mobile device transmits.

Your mobile device is designed to comply with local regulatory requirements in your country concerning exposure of human beings to RF energy.

RF Energy Operational Precautions

For optimal mobile device performance, and to be sure that

human exposure to RF

energy does not exceed the guidelines set forth in the relevant standards, always follow these instructions and precautions:

- When placing or receiving a phone call, hold your mobile device just like you would a landline phone.
- If you wear the mobile device on your body, always place the mobile device in a Motorola-supplied or approved clip, holder, holster, case, or body harness. If you do not use a body-worn accessory supplied or approved by Motorola, keep the mobile device and its antenna at least 2.5 centimeters (1 inch) from your body when transmitting.
- Using accessories not supplied or approved by Motorola may cause your mobile device to exceed RF energy exposure guidelines. For a list of Motorola-supplied or approved accessories, visit our Web site at: www.motorola.com.

RF Energy Interference/Compatibility

Nearly every electronic device is subject to RF energy interference from external sources if inadequately shielded, designed, or otherwise configured for RF energy compatibility. In some circumstances, your mobile device may cause interference with other devices.

Follow Instructions to Avoid Interference Problems

Turn off your mobile device in any location where posted notices instruct you to do so.

In an aircraft, turn off your mobile device whenever instructed to do so by airline staff. If your mobile device offers an airplane mode or similar feature, consult airline staff about using it in flight.

Implantable Medical Devices

If you have an implantable medical device, such as a

pacemaker or defibrillator, consult your physician before using this mobile device.

Persons with implantable medical devices should observe the following precautions:

- ALWAYS keep the mobile device more than 20 centimeters (8 inches) from the implantable medical device when the mobile device is turned ON.
- DO NOT carry the mobile device in the breast pocket.
- Use the ear opposite the implantable medical device to minimize the potential for interference.
- Turn OFF the mobile device immediately if you have any reason to suspect that interference is taking place.

Read and follow the directions from the manufacturer of your implantable medical device. If you have any questions about using your mobile device with your implantable medical device, consult your healthcare provider.

Specific Absorption Rate (IEEE)

Your model wireless phone meets the governmental requirements for exposure to radio waves.

Your mobile device is a radio transmitter and receiver. It is designed and manufactured to not exceed limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission (FCC) of the U.S. Government and by the Canadian regulatory authorities. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed for the safety of all persons, regardless of age or health, and to account for any variations in measurements.

The exposure standard for mobile devices employs a unit of

measurement known as the Specific Absorption Rate (SAR). The IEEE SAR limit set by the FCC and by the Canadian regulatory authorities is 1.6 watts per kilogram (W/kg), averaged over one gram of tissue. Tests for SAR are conducted using procedures accepted by the FCC and by Industry Canada with the mobile device transmitting at its highest certified power level in all tested frequencies. Although the SAR is determined at the highest certified power level, the actual SAR level of the mobile device while operating can be below the maximum value. This is because the mobile device is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station, the lower the power output.

Before a mobile device is available for sale to the public in the U.S. and Canada, it must be tested and certified to the FCC and Industry Canada that it does not exceed the limit established by each government for safe exposure. The tests are performed in positions and locations (e.g., at the ear and worn on the body) submitted to the FCC and available for review by Industry Canada. The highest SAR value for this mobile device when tested for use at the ear is 0.611 W/kg, and when worn on the body, as described in this guide, is 0.989 W/kg. Body-worn measurements can differ, depending upon available accessories and regulatory requirements. The SAR information includes the Motorola testing protocol, assessment procedure, and measurement uncertainty range for this product.

While there may be differences between the SAR levels of various mobile devices and at various positions, they meet the governmental requirements for safe exposure. Please note that improvements to this product model could cause differences in the SAR value for later products; in all cases, products are designed to be within the guidelines.

Additional information on SAR can be found on the Cellular

Telecommunications & Internet Association (CTIA) Web site:
<http://www.phonefacts.net> or the Canadian Wireless
Telecommunications Association (CWTA) Web site:
<http://www.cwta.ca>

Information from the World Health Organization

“Present scientific information does not indicate the need for any special precautions for the use of mobile phones. If you are concerned, you may want to limit your own or your children’s RF exposure by limiting the length of calls or by using handsfree devices to keep mobile phones away from your head and body.” Source: WHO Fact Sheet 193

 
Further information: <http://www.who.int/peh-emf>

European Union Directives Conformance Statement

CE 0168  [Only Indoor Use Allowed In France for Bluetooth and/or Wi-Fi]

Hereby, Motorola declares that this product is in compliance with:

- The essential requirements and other relevant provisions of Directive 1999/5/EC
- All other relevant EU Directives



The above gives an example of a typical Product Approval

Number.

You can view your product's Declaration of Conformity (DoC) to Directive 1999/5/EC (to R&TTE Directive) at www.motorola.com/rtte. To find your DoC, enter the Product Approval Number from your product's label in the "Search" bar on the Web site.

FCC Notice to Users

The following statement applies to all products that have received FCC approval. Applicable products bear the FCC logo, and/or an FCC ID in the format FCC ID:xxxxxx on the product label.

Motorola has not approved any changes or modifications to this device by the user.

Any changes or modifications could void the user's authority to operate the equipment. See 47 CFR Sec. 15.21.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. See 47 CFR Sec. 15.19(3).

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by

turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

GPS

Your mobile device can use *Global Positioning System* (GPS) signals for location-based applications. GPS uses satellites controlled by the U.S. government that are subject to changes implemented in accordance with the Department of Defense policy and the Federal Radio Navigation Plan. These changes may affect the performance of location technology on your mobile device.

Your Location

Location-based information includes information that can be used to determine the approximate location of a mobile device. Mobile devices which are connected to a wireless network transmit location-based information. Devices enabled with GPS technology also transmit location-based information. Additionally, if you use applications that require location-based information (e.g. driving directions), such applications transmit location-based information. This location-based information may be shared with third parties, including your wireless service provider, applications providers, Motorola, and other third parties providing services.

Navigation

When using navigation features, note that mapping information, directions and other navigational data may contain inaccurate or incomplete data. In some countries, complete information may not be available. Therefore, you should visually confirm that the navigational instructions are consistent with what you see. All drivers should pay attention to road conditions, closures, traffic, and all other factors that may impact driving. Always obey posted road signs.

Smart Practices While Driving

Check the laws and regulations on the use of mobile devices and their accessories in the areas where you drive. Always obey them. The use of these devices may be prohibited or restricted in certain areas—for example, handsfree use only may be required. Go to www.motorola.com/callsmart (in English only) for more information.

Your mobile device lets you communicate by voice and data—almost anywhere, anytime, wherever wireless service is available and safe conditions allow. When driving a car, driving is your first responsibility. If you choose to use your mobile device while driving, remember the following tips:

- **Get to know your Motorola mobile device and its features such as speed dial, redial and voice dial.** If available, these features help you to place your call without taking your attention off the road.
- **When available, use a handsfree device.** If possible, add an additional layer of convenience to your mobile device with one of the many Motorola Original handsfree accessories available today.
- **Position your mobile device within easy reach.** Be able to access your mobile device without removing your eyes from

the road. If you receive an incoming call at an inconvenient time, if possible, let your voicemail answer it for you.

• **Let the person you are speaking with know you are driving; if necessary, suspend the call in heavy traffic or hazardous weather conditions.** Rain, sleet, snow, ice, and even heavy traffic can be hazardous.

• **Do not take notes or look up phone numbers while driving.** Jotting down a “to do” list or going through your address book takes attention away from your primary responsibility—driving safely.

• **Dial sensibly and assess the traffic; if possible, place calls when your car is not moving or before pulling into traffic.** If you must make a call while moving, dial only a few numbers, check the road and your mirrors, then continue.

• **Do not engage in stressful or emotional conversations that may be distracting.** Make people you are talking with aware you are driving and suspend conversations that can divert your attention away from the road.

• **Use your mobile device to call for help.** Dial 911 or other local emergency number in the case of fire, traffic accident, or medical emergencies (wherever wireless phone service is available).

• **Use your mobile device to help others in emergencies.** If you see an auto accident, crime in progress, or other serious emergency where lives are in danger, call 911 or other local emergency number (wherever wireless phone service is available), as you would want others to do for you.

• **Call roadside assistance or a special non-emergency wireless assistance number when necessary.** If you see a broken-down vehicle posing no serious hazard, a broken traffic signal, a minor traffic accident where no one appears injured, or a vehicle you know to be stolen, call roadside assistance or other special non-emergency wireless number (wherever

wireless phone service is available).

Privacy & Data Security

Motorola understands that privacy and data security are important to everyone.

Because some features of your mobile device may affect your privacy or data security, please follow these recommendations to enhance protection of your information:

- **Monitor access**—Keep your mobile device with you and do not leave it where others may have unmonitored access. Lock your device's keypad where this feature is available.

- **Keep software up to date**—If Motorola or a software/application vendor releases a patch or software fix for your mobile device that updates the device's security, install it as soon as possible.

- **Secure Personal Information**—Your mobile device can store personal information in various locations including your SIM card, memory card, and phone memory. Be sure to remove or clear all personal information before you recycle, return, or give away your device. You can also backup your personal data to transfer to a new device.

Note: For information on how to backup or wipe data from your mobile device, go to www.motorola.com/support

- **Online accounts**—Some mobile devices provide a Motorola online account (such as MOTOBLUR). Go to your account for information on how to manage the account, and how to use security features such as remote wipe and device location (where available).

- **Applications**—Install third party applications from trusted sources only. Applications can have access to private information such as call data, location details and network resources.

- **Location-based information**—Location-based information

includes information that can be used to determine the approximate location of a mobile device. Mobile phones which are connected to a wireless network transmit location-based information. Devices enabled with GPS technology also transmit location-based information. Additionally, if you use applications that require location-based information (e.g. driving directions), such applications transmit location-based information. This location-based information may be shared with third parties, including your wireless service provider, applications providers, Motorola, and other third parties providing services.

• **Other information your device may transmit**—Your device may also transmit testing and other diagnostic (including location-based) information, and other non-personal information to Motorola or other third-party servers. This information is used to help improve products and services offered by Motorola. If you have further questions regarding how the use of your mobile device may impact your privacy or data security, please contact Motorola at privacy@motorola.com, or contact your service provider.

Use & Care

To care for your Motorola mobile device, please observe the following:



liquids

Don't expose your mobile device to water, rain, extreme humidity, sweat, or other liquids. If it does get wet, don't try to accelerate drying with the use of an oven or dryer, as this may damage the mobile device.



extreme heat or cold

Avoid temperatures below 0°C/32°F or above 45°C/113°F.



microwaves

Don't try to dry your mobile device in a microwave oven.



dust and dirt

Don't expose your mobile device to dust, dirt, sand, food, or other inappropriate materials.



cleaning solutions

To clean your mobile device, use only a dry soft cloth. Don't use alcohol or other cleaning solutions.



shock and vibration

Don't drop your mobile device.



protection

To help protect your mobile device, always make sure that the battery compartment and any connector covers are closed and secure.

Recycling

Mobile Devices & Accessories

Please do not dispose of mobile devices or electrical accessories (such as chargers, headsets, or batteries) with your household waste, or in a fire. These items should be disposed of in accordance with the national collection and recycling schemes operated by your local or regional authority. Alternatively, you may return unwanted mobile devices and electrical accessories to any Motorola Approved Service Center in your region. Details of Motorola approved national recycling schemes, and further information on Motorola recycling activities can be found at:

www.motorola.com/recycling

Packaging & Product Guides

Product packaging and product guides should only be disposed of in accordance with national collection and recycling requirements. Please contact your regional authorities for more details.

Software Copyright Notice

Motorola products may include copyrighted Motorola and third-party software stored in semiconductor memories or other media. Laws in the United States and other countries preserve for Motorola and third-party software providers certain exclusive rights for copyrighted software, such as the exclusive rights to distribute or reproduce the copyrighted software. Accordingly, any copyrighted software contained in Motorola products may not be modified, reverse-engineered, distributed, or reproduced in any manner to the extent allowed by law. Furthermore, the purchase of Motorola products shall not be

deemed to grant either directly or by implication, estoppel, or otherwise, any license under the copyrights, patents, or patent applications of Motorola or any third-party software provider, except for the normal, non-exclusive, royalty-free license to use that arises by operation of law in the sale of a product.

Content Copyright

The unauthorized copying of copyrighted materials is contrary to the provisions of the Copyright Laws of the United States and other countries. This device is intended solely for copying non-copyrighted materials, materials in which you own the copyright, or materials which you are authorized or legally permitted to copy. If you are uncertain about your right to copy any material, please contact your legal advisor.

Open Source Software Information

For instructions on how to obtain a copy of any source code being made publicly available by Motorola related to software used in this Motorola mobile device, you may send your request in writing to the address below. Please make sure that the request includes the model number and the software version number.

MOTOROLA, INC.
OSS Management
600 North US Hwy 45
Libertyville, IL 60048
USA

The Motorola website opensource.motorola.com also contains information regarding Motorola's use of open source.

Motorola has created the opensource.motorola.com website to serve as a portal for interaction with the software community-at-large.

To view additional information regarding licenses, acknowledgments and required copyright notices for open source packages used in this Motorola mobile device, please press > > **Legal information**. In addition, this Motorola device may include self-contained applications that present supplemental notices for open source packages used in those applications.

Motorola, Inc.
Consumer Advocacy Office
600 N US Hwy 45
Libertyville, IL 60048

www.hellomoto.com

1-800-331-6456 (United States)

1-888-390-6456 (TTY/TDD United States for hearing impaired)

1-800-461-4575 (Canada)

Certain mobile phone features are dependent on the capabilities and settings of your service provider's network. Additionally, certain features may not be activated by your service provider, and/or the provider's network settings may limit the feature's functionality. Always contact your service provider about feature availability and functionality. All features, functionality, and other product specifications, as well as the information contained in this user's guide are based upon the latest available information and are believed to be accurate at the time of printing. Motorola reserves the right to change or modify any information or specifications without notice or obligation.

MOTOROLA and the Stylized M Logo are registered in the US Patent & Trademark Office. All other product or service names are the property of their respective owners. The Bluetooth trademarks are owned by their proprietor and used by Motorola, Inc. under license. Java and all other Java-based marks are trademarks or registered trademarks of Sun Microsystems, Inc. in the U.S. and other countries.

© 2010 Motorola, Inc. All rights reserved.

Caution: Changes or modifications made in the radio phone, not expressly approved by Motorola, will void the user's authority to operate the equipment.

Manual Number: 68XXXXX360