




Touch a thumbnail image from your camera roll or library, then:

- To delete the photo or video, press Menu  > **Delete**.
- To set the photo as a contact picture, social network profile picture, or wallpaper, press Menu  > **Set as**.
- To add the photo to an album, press Menu  > **Add to album**.


**Tip:** To copy photos or videos to/from a computer, go to “**MEMORY CARD & FILE TRANSFER**” on page 47.

## EDIT PHOTOS & VIDEOS

**Find it:**  >  **Gallery** > *picture* > Menu  > **Edit**

You can choose advanced editing features to resize, crop, or change the color.

 
## PLAY A SLIDESHOW

Touch  >  **Gallery**, touch a picture, then touch Menu  > **More** > **Slideshow** to start a slideshow. To stop the slideshow, touch the display. To return to the gallery, touch Back .

## VIDEOS


### TAKE A VIDEOS

**Find it:**  >  **Camcorder**

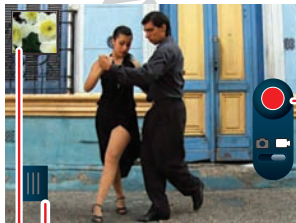


Open options.

Open last video.

**Tip:** To send your video in a message, adjust the video quality: Touch Menu  > **Settings** > **Video Resolution** > **QVGA (320 x 240)**.

To **record** the video, touch . To stop, touch  again.



After you record the video, you'll see a small image in the top left corner. Touch the small image to open it, then touch Menu  to see options.

### PLAY YOUR VIDEOS

**Find it:**  >  **Gallery** > **Camera roll** > *video*

## Controls

display lyrics Touch Menu  > **More** > **Settings** > **Display lyrics.**


send blip  Love this song, or hate it?  
Let your friends know.  
Touch Menu  > **Send Blip.**


add to playlist Touch Menu  > **More** > **Add to playlist.**


use as ringtone Touch Menu  > **More** > **Set as ringtone.**

delete Touch Menu  > **More** > **Delete.**

## HIDE, WAKE, TURN OFF


Touch Home  to use another app. Your music continues to play.

When you see  in the status bar a song is playing, flick down to see details. Touch the song to return to the music controls.

To turn off your music touch .

## PLAYLISTS

To add a song from the music library to a playlist, touch and hold the song then touch **Add to playlist**. Choose an existing playlist, or touch **New playlist** to create a new playlist.

To add a song to the playlist you're playing, touch Menu  > **More** > **Add to playlist** in the music player.

To edit, delete and rename playlists, touch and hold the playlist in the music library.

## INTERNET RADIO

**Find it:**  >  **Music** > **Radio** > **SHOUTCastM™ Radio**

### LISTEN TO A STATION

- 1 Select a category, and select a station or search through subcategories to find the station you want.
- 2 To begin listening to a station, touch it.

### FAVORITE STATIONS

To add a station to **Favorite stations**, touch a station to open it, then touch the star in the top right corner.

## FM RADIO

**Find it:**  >  **Music** > **Radio** > **FM Radio**

**Note:** You need to connect a wired headset to your phone to use the FM radio. The wires in your headset

act as the antenna. For best performance, use a Motorola Original headset. Indoor reception may vary.

### FIND A STATION

To tune into a station, drag your finger across the dial, or touch - **Seek** or + **Seek**.

### STATION PRESETS

To add a station to your presets, touch and hold the station name, then touch a preset number (1 to 10).

## MEMORY CARD & FILE TRANSFER

*copy photos, music, and more to your phone*


### MEMORY CARD

**Note:** You need the memory card installed for some features on your phone, like **Camera**.

To insert a memory card, see “**ASSEMBLE & CHARGE**” on page 3.

**Note:** Do not remove your memory card while your phone is using it or writing files on it.

**Warning:** When you format a memory card, all data on the card is deleted.

To remove or format your memory card, you need to unmount it. Touch Menu  > **Settings** > **Storage** > **Unmount SD card**. Then, to format your memory card, touch **Format SD card**.

### MANAGE FILES

**Find it:**  >  **Files** > **SD card**

Touch a file or folder to open it, touch and hold a file to copy, rename, or delete it.

 
### VIEW & TRANSFER FILES

You can use Phone Portal to connect your phone and computer with a cable or a Wi-Fi network.

When you connect your phone or type the Phone Portal URL into your computer's browser, you'll see the Phone Portal home screen.

Open your recent activity (**Home**), **Contacts**, **Photos**, **Settings**, **File Manager**, or **Support**.

Open details about your phone's network signal, battery, or memory.

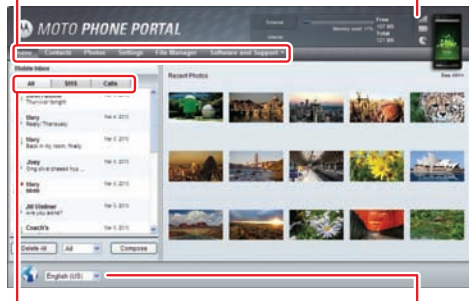

Show **All** recent activity, or only your **SMS** (text messages) or **Calls**.


Choose your language.

**Note:** Phone Portal works best with Internet Explorer 7 or newer, with Java script and cookies enabled.

## CONNECT THROUGH A WI-FI NETWORK

 
**Note:** Most public Wi-Fi networks (like the ones at coffee shops) don't let devices connect to each other. In that case, you need a USB cable connection.

- 1 Touch  > **Phone Portal**
- 2 If your phone is connected to a Wi-Fi network, it shows an Phone Portal URL. Use a computer on the network to enter the URL in a browser. It opens the Phone Portal home screen!

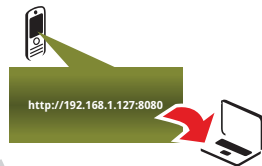

**Tip:** When your phone's Wi-Fi is on, it automatically reconnects to nearby networks it has used. To turn Wi-Fi on or off, touch Menu  > **Settings** > **Wireless & networks** > **Wi-Fi**

If your phone is not connected to a Wi-Fi network, it asks you to connect. Touch **OK** to open the Wi-Fi settings screen, then turn on **Wi-Fi** and touch a network to connect.

For network passwords, ask other network users or administrators. For your phone's MAC address and Wi-Fi details, touch Menu  > **Advanced**.

When your phone is connected ( appears in the status bar), touch Back  to close the settings.

Soon, Phone Portal shows a URL at the bottom of your screen. Using a computer on the same Wi-Fi network, just type the URL into the browser to open the Phone Portal home screen!

## CONNECT THROUGH A USB CABLE

- 1 Turn on your phone and computer, and connect them with a USB-to-micro USB cable.

Your computer might guide you through installing Motorola drivers.



- 2 Once your computer has the correct Motorola drivers, it opens the Phone Portal home page in your browser. A Motorola icon (M) appears in your task bar, in the lower right of your computer screen.

If you have Motorola MediaLink, it will launch instead of Phone Portal. To use Phone Portal, right-click (M) in your task bar, select “when the phone connects, launch,” and choose Phone Portal. Disconnect and reconnect your phone to launch Phone Portal.

## TOOLS

*stay on top of things*

### ALARM CLOCK

**Find it:** > **Alarm & Timer**

To turn on an alarm, touch the check box.

When an alarm sounds, drag **Dismiss** to turn it off or touch the screen to snooze.

To add an alarm, touch Menu > **Add alarm**, then enter alarm details.

### CALENDAR

 
**Find it:** > **Calendar**

Your calendar events can be viewed in different ways: Touch > **Show today** > **Agenda**, **Day**,

**Week**, or **Month** When you highlight an event in the day and week views, more details appear.

#### ADD CALENDAR EVENTS

From any calendar view, touch and enter event details then touch **Save**.

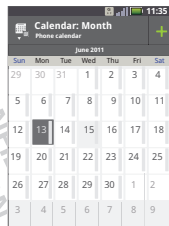

## MANAGE CALENDAR EVENTS

To edit an event, touch and hold it. When you're done editing event details, touch **Save**.

To delete an event, touch and hold it then touch **Delete event**.



## CALCULATOR

**Find it:** > **Calculator**

Your calculator has two views: basic and advanced. To change your views, touch Menu > **Advanced panel** or **Basic panel**. To clear history, touch Menu > **Clear history**.

## FILE MANAGER

Use file manager to view documents and files on your phone, microSD memory card, or Shared folders.

**Find it:** > **Files**

## QUICKOFFICE

Use Quickoffice to view recent documents and files on your memory card.

**Find it:** > **Quickoffice**

Touch a file or folder to open, or touch and hold a file for options.

To manage your folders and transfer files, see "**MEMORY CARD & FILE TRANSFER**" on page 47.

## ACCESSIBILITY

See, hear, speak, feel, and use. Accessibility features are there for everyone, helping to make things easier.

**Note:** For general information, accessories, and more, visit [www.motorola.com/accessibility](http://www.motorola.com/accessibility)

## VOICE RECOGNITION

Use your voice—just touch and speak.

- **Dialing and commands:** Touch > **Voice Commands**. To dial, say "**Call**" and then a contact name or phone number. Or, say a command from the list shown, like "**Send Message**" or "**Go To**".
- **Text entry:** Press on your keypad, then say what you want to type.

**Tip:** Speak naturally, but clearly. Use the microphone in a similar way to a speakerphone, so no need to shout or hold the phone close to your mouth.

To change your voice settings, see "**VOICE SETTINGS**" on page 51.

## VOICE READOUTS (TALKBACK)

Your navigation and selections, read out loud.