

PHOTOS & VIDEOS

see it, capture it, share it!

PHOTOS

TAKE & SHARE PHOTOS

Take that family photo, and post it online for everyone to see.

Note: To get the clearest photos, wipe the lens clean with a soft, dry cloth before you take a photo.

Find it:  **Camera**




Go to your picture gallery.

Tag photos with your location.

Zoom in or out.

Photo Capture Settings
Adjust for greater creative control.

To take the photo, touch the viewfinder to focus the photo, then touch .

Note: Photos are stored on your phone's internal memory unless you switch it to a microSD memory card (sold separately). **Picture Resolution** is **Widescreen** or **6MP**, unless you change it.

Open your gallery and touch and hold a photo to view options:

- To **set** the photo as a wallpaper, contact photo, or social network photo, touch **Set as**.
- To **upload** the photo to an online photo album, touch **Add to album**.
- To **send** the photo in a message or post it online, touch **Share**. For more info on sharing your photos, see "**SHARE PHOTOS & VIDEOS**" on page 26.
- To **delete** the photo, touch **Delete**.


PHOTO OPTIONS

You can make adjustments to optimize your shot. Touch the right side of the screen to see these options:

- **Scenes**—Adjust in different environments: **Auto**, **Portrait**, **Landscape**, **Sport**, and more. Touch the screen when finished to return to the viewfinder.
- **Effects**—Change photo look: **Normal**, **Black and White**, **Negative**, and more.
- **Flash**—Set **Flash On**, **Flash Off**, or **Auto Flash**.

- **Front/Back**—Switch between the forward facing and rear facing Cameras.
- **Switch to**—Toggle between photo and camcorder.


CAMERA SETTINGS

In the viewfinder, touch Menu  > **Settings** to adjust these settings:

- **Picture Resolution**—Adjust for optimal resolution.
- **Exposure**—Increase or decrease the amount of aperture time.
- **Storage Location**— Save photos to camera or memory card.

PICTURE MODES



In the viewfinder, touch Menu  > **Picture modes** to change picture mode:

- **Single shot**—Take one shot at a time.
- **Panorama**—Take multiple shots of wide scenes and join them together to make one large image. Use **Capture Direction** to specify how shots will be joined: **Move up**, **Move right**, **Move left**, **Move down**.
- **Multi-shot**—Take several shots in rapid succession when you touch and hold .


TAGGING PHOTOS

Tag your photos so you can group them in different folders.

To create a tag:

- 1 In the viewfinder, touch Menu  > **Tags** > **Active Custom Tags**.
- 2 Enter a tag name under **Edit custom tags**, touch **Done**, then touch **Done** again.
- 3 If necessary, activate the tag you created by touching **Custom Tags**. (A check box on the right turns green when activated.)
- 4 Touch Back  to return to the camera viewfinder.

The tag you created will be applied to any photo you take, until you deactivate the tag.

Note: To add a location tag to your photo, touch Menu  > **Settings** > **Location & security** and select a location service to turn on.

VIDEOS

RECORD & SHARE VIDEOS

Find it:  >  **Camcorder**

Note: To get the clearest videos, wipe the lens clean with a soft, dry cloth before you record a video.



Video Capture Settings

Adjust for greater creative control.

Go to your gallery.

Tag videos with your location.

Zoom in or out.

To record a video, touch . Touch to stop the recording.

Open your gallery and touch and hold a video to view options:

- To **play** the video, touch .
- To **upload** the video to an online album, touch .
- To **send** the video in a message or post it online, touch . For more info on sharing your video, see “**SHARE PHOTOS & VIDEOS**” on page 26.
- To **delete** the video, press Menu > **Delete**.

HD VIDEOS

You can capture HD-quality videos to watch on an HDTV or monitor.

To record an HD quality video, be sure to select the correct **Video resolution**. From the active camcorder viewfinder, touch Menu > **Settings > Video resolution > High Definition (720p)**.


To enhance the video quality, touch **Scenes** or **Effects** on the right side of the camcorder viewfinder. (You may need to touch the screen to see these options.)

VIDEO OPTIONS

You can make adjustments to optimize your video. Touch one of the buttons on the right side of the viewfinder to make changes (you may need to touch the screen to make the buttons appear):


- **Scenes**—Adjust for better audio capture in different environments: **Everyday**, **Outdoors**, **Concert**, **Narrative**, or **Subject**.
- **Effects**—Change video look: **Normal**, **Black and White**, **Negative**, and more.
- **Light**—Turn a light on or off to adjust for the lighting where you are recording.
- **Front/Back**—Switch between the forward facing and rear facing Cameras.
- **Switch to**—Toggle between camcorder and camera.

CAMCORDER SETTINGS

In the viewfinder, touch Menu  > **Settings** to open the camcorder menu and adjust settings like **Video Resolution**, **Focus Options**, and more.

VIEW PHOTOS & VIDEOS

Find it:  >  **Gallery**

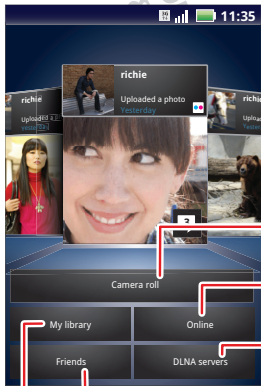

View your captured photos & videos.

See your online albums (like Picasa, Flickr, or Facebook).


See media from DNLA Connected devices on your Wi-Fi network.

Go to your friends' online albums.

Sort your photos & videos.

SHARE PHOTOS & VIDEOS



Find it:  >  **Gallery**

- 1 Touch a photo or video, then touch .
- 2 Choose how you want to share—like **Bluetooth**, **Email**, **Text Messaging**, or an online album.

MANAGE PHOTOS & VIDEOS


 

Find it:  >  **Gallery**

Touch a thumbnail image from your camera roll or library, then:

- To delete the photo or video, touch Menu  > **Delete**.
- To set the photo as a contact picture, social network profile picture, or wallpaper, touch Menu  > **Set as**.

Tip: To copy photos to/from a computer, go to “**VIEW & TRANSFER FILES**” on page 45.

EDIT PHOTOS & VIDEOS

Find it:  >  **Gallery** > *picture* > Menu  > **Edit**

You can choose advanced editing features to resize, crop, or change the color.


MUSIC


when music is what you need...


QUICK START: MUSIC

Find it:  >  Music

SCREEN NOT YET AVAILABLE

Touch a category, then touch the song or playlist you want to play. Touch Menu  > **Party shuffle** to randomly play all your songs, or touch **Search** to find a song.

Tip: When a song is playing, you can add it to a playlist by touching Menu  > **Add to playlist**.

Tip: To listen to music during a flight, turn off all your network and wireless connections: Press and hold Power  then touch **Airplane mode**.

SET UP MUSIC

WHAT MUSIC TRANSFER TOOLS DO I NEED?

To put music on your computer and then load it on your phone, you need:

- Microsoft® Windows® computer or Apple® Macintosh™.
- USB data cable (included with your phone).
- optional microSD memory card (sold separately).

Your phone supports removable microSD memory cards up to 32GB capacity. To make sure your memory card is installed, go to “**ASSEMBLE & CHARGE**” on page 3.

Tip: To see the available memory on your memory card, touch  >  **Settings** > **Storage**.

WHAT AUDIO FILE FORMATS CAN I PLAY?

Your phone can play many types of files: AAC, AMR, MP3, WAV, WMA, AAC+, and MIDI.

WHAT HEADPHONES CAN I USE?

Your phone has a 3.5mm headset jack for wired stereo listening (required for FM radio). You can also go wireless with Bluetooth® stereo headphones or speakers (see “**BLUETOOTH™ WIRELESS**” on page 41).

GET MUSIC













Transfer music from your computer to your phone using a USB cable connection. See “**VIEW & TRANSFER FILES**” on page 45 to learn how.

Note: Copyright—do you have the right? Always follow the rules. See “Content Copyright” in your legal and safety information.

PLAY MUSIC


Touch a song or playlist to start playing music.


MUSIC PLAYER CONTROLS

To...	
Play/pause	Touch  .
Select previous/next song	Touch  .
Fast forward/rewind	Touch and hold  .
View playlist	Touch  .
Shuffle	Touch  .
Repeat	Touch  .
Adjust volume	Press side volume keys.
View library	Press Menu  > Library .
Turn shuffle on/off	Press Menu  > Party shuffle .
Manage speakers	Press Menu  > Audio effects .
Add to playlist	Press Menu  > Add to playlist .
Use as ringtone	Press Menu  > Use as ringtone .
Delete	Press Menu  > Delete .

SCREEN NOT YET AVAILABLE

HIDE, WAKE, TURN OFF

Touch Home  to use another app. Your music continues to play.

When you see  in the status bar, a song is playing. Flick down to see details. Touch the song to return to the music controls.

To turn off your music, touch .

PLAYLISTS

To add a song from the music library to a playlist, touch and hold the song then touch **Add to playlist**. Choose an existing playlist, or touch **New** to create one.

To add a song to the playlist you're playing, touch Menu  > **Add to playlist** in the music player.

To edit, delete and rename playlists, touch and hold the playlist in the music library.

PODCASTS

Find it:  >  **Music** > **Podcasts**

INTERNET RADIO

Find it:  >  **Music** > **Internet radio**

FM RADIO

Find it:  >  **Music** > **FM radio**

SOCIAL NETWORKING

my life, your life

YOUR SOCIAL NETWORKING ACCOUNT

Integrate and sync all your contacts, emails, and social networking sites. No opening and closing apps and menus. Just touch the **Social Networking** and **Social Status** widgets on your home screen.

Tip: Use the gallery to view all of yours and your friends' online albums. Touch  >  **Gallery**.

ADD ACCOUNTS

You can add your **Facebook**, **MySpace**, **Twitter**, or other accounts to your social networking account. If you don't have accounts on these sites, visit their Web sites to set them up.

To set up email accounts, see "**SET UP MESSAGING**" on page 17.

Find it:  >  **Accounts** > **Add account**

Add an account by touching it. Then enter your user name and password for that account.

When you sign into social networking accounts, you'll see your friends and contacts in your **Contacts** list, and your status and updates can appear in your **Social Networking** widget.