 


## USE & CHANGE YOUR HOME SCREEN

On your home screen, shortcuts are icons that open your favorite apps, Web bookmarks, music playlists, and more. Widgets show you the date, updates, and more. The Calendar widget is an example of a scrollable widget—you can scroll through your calendar within the widget itself, on the home page, without opening the calendar app. The Books widget is an example of a stacked widget—you can flick through your content within the widget itself, on the home screen, without opening the Books app.

Flick left and right to see more home screen panels of shortcuts and widgets.

 
- **Customize:** To add widgets, app shortcuts, wallpapers, and more to your home screen, touch **+** at the top of the screen.
- **Resize a widget:** Touch and hold the widget until it vibrates, then let go. A highlighted frame appears around the widget—drag a corner to resize.

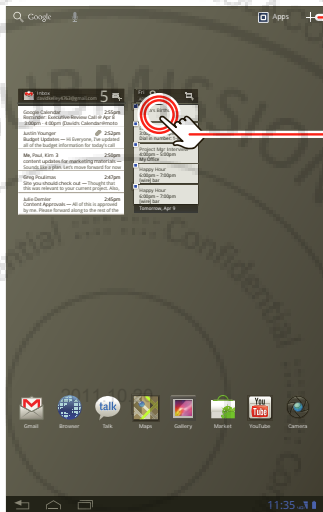

Touch **+** to add widgets, wallpaper, and more to your home screen.

Touch & hold, then drag widgets or shortcuts to a new spot or the trash can in the top right.

Touch the status indicators, then touch **⚙** twice to change your screen, sound, or other settings.

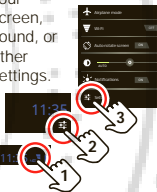



## NOTIFICATIONS

The notification panel at the bottom of the home screen contains icons that tell you about new messages, available app downloads, network signal strength, and other tablet status



indicators. Touch an individual icon to see that email, meeting reminder, or other notification. Or, touch the digital time display to open the entire notification panel to see all new message notifications, status icons, and other useful data.



## SEARCH

The search window on your home screen gives you two search options. For a text search, touch the search window, enter your keyword(s), then touch . To search by voice, touch  and speak your keyword(s) when prompted.


## SETTINGS

Open the Quick Settings Menu to change settings for brightness, sound, screen orientation, airplane mode, network, and notifications.

 
- 1 Touch the clock at the bottom of the home screen.
- 2 Touch .
- 3 Change a quick setting, or touch  **Settings** to see all tablet settings.

Tip: You can also go to tablet settings by touching  **Apps** >  **Settings**.

## APP MENU




Touch  **Apps** from the home screen to see your tablet's apps.

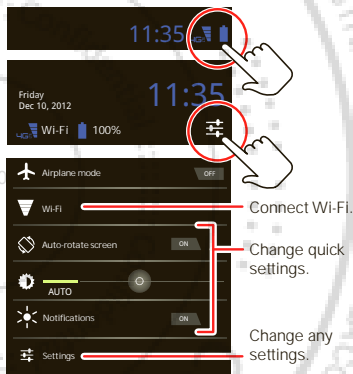To close the app tray, touch Home  or Back 



## KEY TIPS

### SLEEP & WAKE UP

Put the touchscreen to sleep by pressing Power/Lock .  
To wake up the touchscreen, just press the Power/Lock  again, then drag  across the screen.

On the back:

**Power/Sleep Key** 

Hold=power,  
Press=sleep

**Volume Keys** 







### CHANGE VOLUME

Press the volume keys to adjust the volume.

### SET UP EMAIL

The first time you turned on your tablet (see page 6), you may have logged in to your Google Account.

You can add other email accounts:


- If you want to set up additional Google Accounts, touch  **Apps** >  **Settings** > **Accounts & sync** > **Add account**.
- If you want to set up other email accounts, touch  **Apps** >  **Email**, then follow the step-by-step instructions to set up a POP3, IMAP, or corporate account.

### WANT MORE?

More help, more accessories, more free stuff. We're here to help.

- **Answers:** To download a Help Center app for your tablet, go to [www.motorola.com/xoom2help](http://www.motorola.com/xoom2help) and follow the on-screen instructions.
- **Support:** Software updates, PC software, user guides, online help, and more at [www.motorola.com/myxoom2](http://www.motorola.com/myxoom2).
- **Accessories:** Find accessories for your tablet at [www.motorola.com/products](http://www.motorola.com/products).

- Join us: Get the latest news, apps, tips & tricks, videos and so much more—join us on:

 YouTube™ [www.youtube.com/motorola](http://www.youtube.com/motorola)

 Facebook [www.facebook.com/motorola](http://www.facebook.com/motorola)

 Twitter [www.twitter.com/motomobile](http://www.twitter.com/motomobile)

2011.10.20

# MANAGE CONTENT

## CONNECTIONS

MOTOROLA XOOM 2 Media Edition gives you many ways to connect with your world.

 
### 4G LTE CONNECTION

Your MOTOROLA XOOM 2 Media Edition uses the 4G LTE mobile network wherever it's available. You'll know you're connected when you see **4G** on the screen.

### WI-FI

It's easy to connect to a Wi-Fi network. Newly added proxy support makes sure you stay connected.

- 1 Touch the clock at the bottom of the screen.
- 2 Touch **Settings**
- 3 Touch **Wi-Fi**.
- 4 In **Wireless & networks**, select **Wi-Fi**.

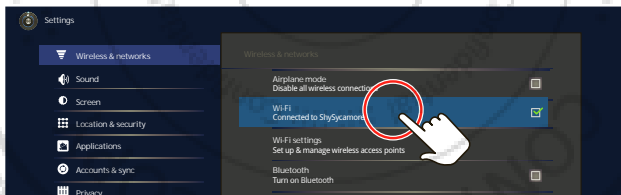

Your tablet scans for and shows all available Wi-Fi networks.

## USB CONNECTION

You can transfer HD video, music, pictures, photos and other media content between your tablet and a computer. A USB connection makes it easy. Use the USB cable that came with your tablet to make the connection and do the following:

- Microsoft™ Windows™ XP, Windows Vista, and Windows 7—On your computer, press Start, open your list of programs, and select Windows Explorer. Then drag and drop files from your computer to your tablet.
- Apple™ Macintosh™—Use Android File Transfer. (You can download it from [android.com/filetransfer](http://android.com/filetransfer). This requires Mac OS x 10.5 or later.)

## HDMI®



You can snap photos and capture videos, then sit back and enjoy them on your HDTV at home. Your tablet's HDMI port lets you connect it to other HDMI devices.

## BLUETOOTH® WIRELESS

With Bluetooth wireless technology, you can enjoy your music on a Bluetooth-enabled stereo headset, or connect to a Bluetooth keypad and mouse for quick and easy text entry. With newly added Bluetooth support for Google Talk, you can chat hands-free using a Bluetooth headset or car kit.

## MOTOCAST

**MotoCast** is an exclusive free app from Motorola that lets you stream content between your PC and tablet any time you have a network connection—music, photos, videos and documents!

- 1 On your computer, download and install **MotoCast** from [www.mymotocast.com](http://www.mymotocast.com). Then, create or enter or create your Motorola ID.
- 2 On your tablet, touch  **Apps** >  **MotoCast**. Then, enter your Motorola ID. **MotoCast** shows you the music, photos, and videos stored on your computer.
- 3 Follow the **MotoCast** prompts to stream or download files from your computer—now, you can access your music, photos, and videos on your tablet anywhere you have an Internet connection.

## CONTENT BACKUP



You can choose to back up some of your data, such as bookmarks, user dictionary, Wi-Fi passwords, and other settings, to your Google Account on Google servers. Some third-party application may also take advantage of this feature. If you get a new tablet, your tablet is lost or stolen, or if you reinstall an application, you can restore your settings and other data.

2011.10.20

# APPS & FEATURES

## POWERFUL APPS

Surf, watch, play—enjoy an out of this world experience with these features, and more:

- **Dijit™ Universal Remote**—Turn your tablet into a remote control with a program guide, recommendations, and social TV features. Just touch  **Apps** >  **Dijit** and follow the prompts to set up your devices and programming provider.
- **Cinematic HD movie playback**—Watch HD movies in HD, on your tablet's huge 8.2-inch widescreen display. Thousands of movie titles are now available for rental from Android Market.
- **Games**—Gaming reaches a whole new level—rich graphics on an HD display, an accelerometer, and a gyroscope. Your tablet delivers it all at lightning-fast speeds with its powerful dual-core processor and 16 or 32GB of RAM.
- **Google eBooks™**—Get your favorite books and read them right on your tablet.
- **Android Market™**—Android Market is your one-stop shop for movies, books, apps, and games.
- **Desktop-like tabbed browsing**—Open multiple tabs in a single browser window, and switch between them in a flash.
- **Google Talk™**—Google Talk now has voice and video capabilities, allowing you to chat "face-to-face" with any Google Talk enabled device over Wi-Fi, 3G, or 4G LTE. You can even chat handsfree with a Bluetooth headset or car kit.
- **Google Maps™**—Of course you can still find local businesses, view maps, and get driving directions. Some new additions make Google Maps really stand out from the rest. Street View zooms you all the way in—you're virtually standing on the street. 3D building outlines give you fantastic detail to the central areas of many cities.

**Remote Control Transmitter**



Control your TV or other devices.



- Photos and Videos—Snap killer photos with a 5MP camera. Capture videos like never before—in amazing 720p HD—with the fully functioning HD camcorder. Choose the lens on the rear of the tablet or, for self-portraits, the lens on the front. From the home screen, touch **Apps** > **Camera**. Touch  to take a photo or touch  to switch to videos.

 
You can also **view and import photos** from a digital camera with a USB connection and Picture Transfer Protocol.

**Note:** For more information on your tablet's apps and features, see the user guide.

## VERIZON SAFEGUARDS

Your family; your call. Verizon safeguards give you peace of mind with Family Locator, Content Filters, Spam Controls, Usage Controls, and more. Go to [verizonwireless.com/familylocator](http://verizonwireless.com/familylocator), [verizonwireless.com/spamcontrols](http://verizonwireless.com/spamcontrols), or [verizonwireless.com/usagecontrols](http://verizonwireless.com/usagecontrols).

On the back of your tablet:  **Camera Flash**  **Back Camera Lens** Start/stop recording. **Zoom**

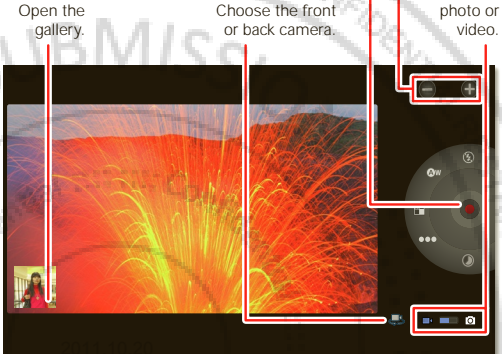

# TROUBLESHOOTING

## FORCED REBOOT

In the unlikely event that your device becomes unresponsive, try a forced reboot: Press and hold both Power/Lock (⏻) and the down volume key for more than 12 seconds.

## RESET

If you forget your unlock pattern or password, you can do a factory data reset to restore your tablet to its factory settings:

**Warning:** This deletes all of your data on the tablet. This includes pictures, videos, documents, and other files that you have not backed up online or on a PC.

- 1 Turn off your tablet (if necessary, see “FORCED REBOOT”).
- 2 Press and hold both volume keys while you press Power/Lock (⏻). Your tablet should show the Boot Mode menu.

Press the volume down key to scroll to Recovery mode, then press the volume up key to activate it.

- 3 When you see the Android logo, press both volume keys at the same time. Your tablet should show the Recovery screen.
  - a Press the volume down key to scroll to the factory reset option, then press Power/Lock (⏻) to activate it.
  - b Press the volume down key to scroll to the Yes confirmation, then press Power/Lock (⏻) to activate it.

## TOTAL EQUIPMENT COVERAGE

Sign up for Total Equipment Coverage, so that if your tablet breaks, gets lost or stolen, or malfunctions after the manufacturer’s warranty expires, you’re covered. Total Equipment Coverage combines Verizon Wireless Extended Warranty and Asurion’s Wireless Device Protection. For details, go to [verizonwireless.com/equipmentprotection](http://verizonwireless.com/equipmentprotection).

## Copyright & Trademarks

Motorola Mobility, Inc.  
Consumer Advocacy Office  
600 NUS Hwy 45  
Libertyville, IL 60048  
[www.motorola.com](http://www.motorola.com)

Note: Do not ship your product to the above address. If you need to return your product for repairs, replacement, or warranty service, please contact the Motorola Customer Support Center at:

1-800-734-5870 (United States)  
1-888-390-6456 (TTY/TDD United States for hearing impaired)  
1-800-461-4575 (Canada)

Certain features, services and applications are network dependent and may not be available in all areas; additional terms, conditions and/or charges may apply. Contact your service provider for details.

All features, functionality, and other product specifications, as well as the information contained in this guide, are based upon the latest available information and believed to be accurate at the time of printing. Motorola reserves the right to change or modify any information or specifications without notice or obligation.

Note: The images in this guide are examples only.

MOTOROLA and the Stylized M Logo are trademarks or registered trademarks of Motorola Trademark Holdings, LLC. Google, the Google logo, Android and Android Market are trademarks of Google, Inc. All other product or service names are the property of their respective owners.

© 2011 Motorola Mobility, Inc. All rights reserved.

Caution: Motorola does not take responsibility for changes/modification to the transceiver.

Product ID: MOTOROLA XOOM 2 Media Edition (MZ6D9)

Manual Number: 68016494001-A



MOTOROLA CONFIDENTIAL RESTRICTED :: MOTOROLA CONFIDENTIAL RESTRICTED

FCC SUBMISSION

CONTROLLED COPY

Confidential :: Confidential

2011.10.20