



EN

MOTOROLA XT611

LIFE.  POWERED.



FCC SUBMISSION



February. 9th, 2012

CONTROLLED COPY

CONGRATULATIONS

MOTOROLA XT611

Your MOTOROLA **XT611** phone delivers more for your work and play!

- **Search:** Touch Search  to search across your apps, contacts, web, and maps—or just enter the address for a place or a web page.
- **Apps:** Open  **Market** to download games for fun, social networking apps to keep in touch (like Facebook™ or Twitter), or find something else you like with “**APPS**” on page 5.
- **Touchscreen:** Browse the web and pinch-to-zoom on the touch display in “**WEB**” on page 18.
- **Camera:** Capture photos and videos with the 5MP auto-focus camera in “**PHOTOS & VIDEOS**” on page 20.

Note: Some apps and features might not be available in all countries.

 
Caution: Before assembling, charging, or using your phone for the first time, please read the important safety, regulatory and legal information provided at the end of the guide.

MORE

- **Support:** Phone updates, PC software, online help and more at www.motorola.com/support.
- **Accessories:** Find accessories for your phone at www.motorola.com/products.

YOUR PHONE

the important keys & connectors

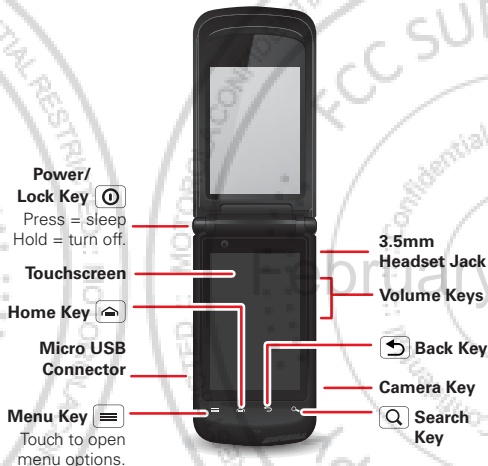

CONTENTS

LET'S GO	3
HOME SCREEN & APPS	5
PERSONALIZE.....	7
CALLS.....	9
CONTACTS.....	11
MESSAGING.....	13
TEXT ENTRY.....	15
SCHEDULE.....	16
WEB.....	18
LOCATION.....	19
PHOTOS & VIDEOS.....	20
MUSIC.....	22
BLUETOOTH™, WI-FI, & CABLE CONNECTIONS.....	24
SECURITY.....	27
TIPS & TRICKS.....	28
TROUBLESHOOTING.....	30
SAFETY, REGULATORY & LEGAL.....	31

LET'S GO

let's get you up and running

ASSEMBLE & CHARGE

1 Cover off



3 microSD in (may already be inserted)



5 Cover on



2 SIM in



4 Battery in



6 Charge up




 
Caution: Please read "BATTERY USE & SAFETY" on page 31.

SET UP & GO

Note: This phone supports apps and services that use a lot of data, so make sure your data plan meets your needs. Contact your service provider for details.

When you turn on your new phone, you can create or enter a Google™ account so that you can download apps, use Gmail™, and much more:

1 Press and hold Power/Lock key  to turn on your phone.




2 Touch the Android™ image to begin setup.

3 Touch a button to **Create** a Google account, **Sign in** with one you have, or **Skip**.



You can log into your account from a computer at accounts.google.com.

4 Enter details to create or sign into your account. When your phone confirms the account, it shows account sync options.

- To change whether your phone shows the Google account's contacts, Gmail™, and calendar, touch the Google account name.
- To add another account, touch **Add account**. For details, see "EMAIL" on page 13.

- To exit setup touch Home .

If your phone cannot connect, you can touch Menu  > **Wireless & networks** > **Wi-Fi settings** to change mobile network settings.


Touch Home  to return to the home screen. Touch and hold Home  to see your recent apps.

FLIP CLOSED

You can access some of the features on your phone, such as answering an incoming call, playing music or viewing a message, with the flip closed.

To lock the screen when the flip is closed, touch Menu  > **Settings** > **Display** > **Close flip to lock screen**.

SLEEP & WAKE UP

Your screen sleeps when you hold it to your ear during a call, or when it is inactive. To change the sleep delay, touch Menu  > **Settings** > **Display** > **Screen timeout**.

KEYS

Use your phone's keys to navigate and open options at any time.

Press the volume keys to change the ringer volume (in the home screen), or the earpiece volume (during a call).


From any screen, press the camera key on the right side of the phone to open the camera.

 
HOME SCREEN & APPS

a few essentials

Use your home screen for quick access to apps, search, and more. Download social networking apps to keep in touch!

QUICK START: HOME SCREEN

You'll see the home screen when you turn on the phone or touch Home  from a menu:

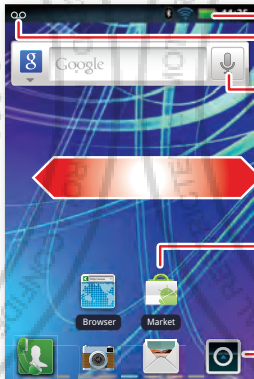

Status Indicators

Notifications

Flick down for details.


Widgets


Touch to open. Touch & hold to move or delete.


Drag or flick to open panels (or scroll in lists).

Shortcuts


Open the app menu.

- To open shortcuts or widgets, **touch** them. Touch Home  to return to the home screen.


When you open shortcuts or widgets, touch Menu  for options.

- To move or delete shortcuts or widgets, **touch and hold** them until you feel a vibration, then drag it to another spot, another panel, or  at the top.

In lists like **Contacts**, touch and hold list items for options.


- To add shortcuts, widgets, or wallpaper, touch and hold an empty spot until you see the menu. You can also add a folder to organize your shortcuts.
- To show more panels, **drag** or **flick** right or left. Touch and hold Home  to show recent apps.





In lists like **Contacts**, drag or flick to scroll.


To change your ringtone, display brightness, and more, touch Menu  > **Settings** > **Sound** or **Display**. For details, see "**PERSONALIZE**" on page 7.

APPS


To show your **apps menu**, touch .

- To scroll through the menu, flick up or down.
- To open an app, touch an icon.
- To close the app menu, touch Back .

To **download** new apps from Android Market™, touch  >  **Market**. Touch Search  to find an app, or touch **My Apps** to show or reinstall the apps you downloaded. To download apps from websites, you need to change your security settings: Touch Menu  > **Settings** > **Applications** > **Unknown sources**.

Tip: Choose your apps and updates carefully, from trusted sites like  **Market**, as some may impact your phone's performance.

 
Note: When installing an app, make sure you read the alerts that tell you what information the app will access. If you don't want the app to have access to this information, cancel the installation.









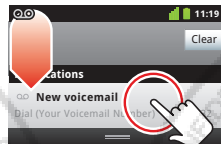





To **move or uninstall** your apps, touch Menu  > **Settings** > **Applications** > **Manage applications**. Touch an app in the list to show details and options.

On your computer, you can browse and manage apps for all your devices powered by Android™ at market.android.com.

PHONE STATUS & NOTIFICATIONS

In the status bar at the top of your screen, the right side shows phone status. The left side shows new messages or events (for details, flick the bar down).



	network strength		battery strength
	new voicemail		new text message
	Bluetooth™ on		Bluetooth connected
	Wi-Fi connected		airplane mode
	USB connected		alarm set
	silent ringer		silent ringer, vibrate on
	mute call		speakerphone

 
PERSONALIZE

add your personal touch

Customize your phone's sounds and appearance to make it unique to you!


QUICK START: PERSONALIZE

From the home screen, touch Menu  > **Settings** > **Sound** or **Display**.

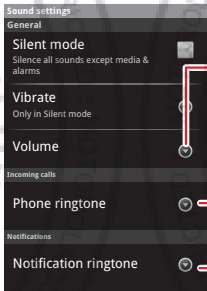

 Choose separate volume settings for incoming calls, media, alarms, and notifications.



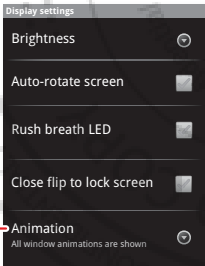

Call & Message Notifications



Turn on or off menu animations.

Animation

All window animations are shown

To...	
Choose a ringtone or vibration for calls and messages	Touch Menu  > Settings > Sound , then choose Phone ringtone , Notification ringtone , or Vibrate .
Change the volume	Touch Menu  > Settings > Sound > Volume .
Turn dialpad sounds on or off.	Touch Menu  > Settings > Sound > Audible touch tones .
Turn menu selection sounds on or off	Touch Menu  > Settings > Sound > Audible selection .
Change your wallpaper	Touch and hold an empty spot on the home screen, then touch Wallpapers .
Change shortcuts and widgets on your home screen	Touch and hold them. For details, see " HOME SCREEN & APPS " on page 5.

To...

Close flip to **lock screen**

Touch Menu  > **Settings** > **Display** > **Close flip to lock screen**.

Control whether some apps **rotate** the screen when you rotate your phone

Touch Menu  > **Settings** > **Display** > **Auto-rotate screen**.

Turn on or off **animations** that make your menus look smoother

Touch Menu  > **Settings** > **Display** > **Animation**.


Delete a shortcut or widget

Touch and hold the shortcut or widget until you feel a vibration, then drag it to the trash can.

Calibrate the **sensors** used by some games or navigation apps

Touch Menu  > **Settings** > **Display** > **G-Sensor Calibration** (movement) or **E-Compass Calibration** (direction).

LANGUAGE & REGION

To set your menu language and region, touch Menu  > **Settings** > **Language & keyboard** > **Select language**

 
CALLS

it's good to talk

Dial numbers, see recent calls, combine calls, or set up forwarding, restrictions, and more.


QUICK START: CALLS

From the home screen, touch  **Phone**.

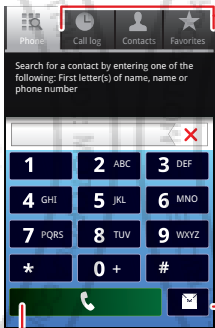

Open a list, then touch an entry to call.

 Send a text message.

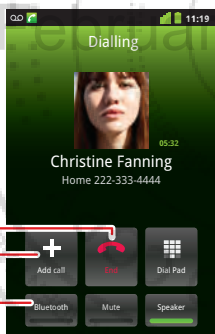









Call.

Hang up.

Start a conference call.


Use a connected Bluetooth™ device.

- To **make** a call, touch  **Phone**, enter a number, then touch .
- To **answer** a call, open the flip or drag  to the right.
- **During** a call, touch Home  or Back  to hide the active call display (to reopen it, touch  **Phone**).
Note: Using a mobile device or accessory while driving may cause distraction and may be illegal. Always obey the laws and drive safely.
- To use the **speakerphone** during a call, touch **Speaker**.
- To **enter numbers** during a call, touch **Dial Pad**.
- To **mute** or **unmute** a call, touch **Mute**.
- To **end** a call, close the flip or touch .
- To **ignore** an incoming call, drag  to the left.

Tip: For quick access to contacts, see “**FAVORITES**” on page 12.

RECENT CALLS

To show recent calls, touch  **Phone** > **Call log**.

- To call, text, open, or save an entry, touch and hold it.
- To clear the list, touch Menu  > **Clear call log**.


CONFERENCE CALLS

To start a conference call, call the first number. After they answer, touch **Add call** and call the next number. When the next number answers, touch **Merge calls**. To remove individual callers, touch **Manage**.


CALL WAITING

If you are on a call and a new call arrives:


- With call waiting on, touch **Answer** to answer the new call and put the old call on hold. Then, touch **Swap** to switch between calls, or **Merge calls** to combine them.
- With call waiting off, the new call goes straight to your voicemail.

To turn on call waiting, touch Menu  > **Settings** > **Call settings** > **Additional settings** > **Call waiting**.

CALL FORWARDING


To forward calls, touch Menu  > **Settings** > **Call settings** > **Call forwarding**. You can forward calls all the time, or only when your phone is busy, unanswered, or unreachable (not on the network)

RESTRICTED CALLS


To restrict your phone so that it can only dial a few numbers, touch Menu  > **Settings** > **Call settings** > **Fixed Dialling Numbers**.

- To turn fixed dialling on, touch **Enable FDN**.
- To add or delete the allowed numbers, touch **FDN list**.

YOUR PHONE NUMBER

To show your phone number, touch Menu  > **Settings** > **About phone** > **Status** > **My phone number**.

YOUR CALLER ID

To hide your number from the people you call, touch Menu  > **Settings** > **Call settings** > **Additional settings** > **Caller ID**.

EMERGENCY CALLS

Note: Your service provider programs one or more emergency phone numbers that you can call under any circumstances, even when your phone is locked. Emergency numbers vary by country. Your pre-programmed emergency number(s) may not work in all locations, and sometimes an emergency call cannot be placed due to network, environmental, or interference issues.