
Temporary Confidentiality Requested

Exhibit 8: Draft User's Manual -- 47 CFR 2.1033(b)(3)

The attached User's Manual is the final production-intended version of the generic Motorola International English User Manual. This guide will be adapted to carrier-specific versionsⁱ, but the key information herein will be retained.

Translations into other languages will also be done to support the needs of other markets. Minor revisions may be made to these manuals, prior to and subsequent to, placing this product onto the market. Selected portions of the User Guide can be found as indicated below:

- | | |
|--|----------------------------|
| 8.1 Safety and Regulatory Section: | Part 2; Page 14 |
| 8.2 Specific Absorption Rate (SAR) Data: | Part 2; Page 19 |
| 8.3 Guidance for use with Hearing Aids
(Pursuant to 47 CFR 20.19(f)(1): | Part 2; Pages 9, 26 |

ⁱ Motorola Mobility attests that the User's Guide provided with product shipping into Canada will provide any required Industry Canada notices and/or statements in both English and French, per the requirements of RSS-Gen.



4 JAN 2013

MOTOROLA **i460**

CONGRATULATIONS

MOTOROLA I460

Get the convenience of push-to-talk calls together with a sleek design in an affordable package.

- **Private Calls:** Stay in touch with your family, friends, and colleagues with the simple touch of a button.
- **My Phone, My Way:** It's your phone—make it that way. Customize your home screen with personal pictures, and change wallpapers and ringtones.

Note: Certain apps and features may not be available in all countries.

SAR This product meets the applicable limit for exposure to radio waves (known as SAR) of 1.6 W/kg (FCC & IC). The limits and guidelines include a substantial safety margin designed to assure the safety of all persons, regardless of age and health. The highest SAR values measured for this device are listed in the regulatory information packaged with your product.

MORE INFORMATION

On your computer—Go to www.motorola.com/support

YOUR PHONE

the important keys & connectors



Note: Your phone might look a little different.

CONTENTS

MENU MAP	4
START	5
BASICS	7
CALLS	12
PUSH-TO-TALK	15
SDG (GROUP) CALLS	17
WEB	18
TEXT ENTRY	19
CONTACTS	21
MESSAGING	22
PERSONALIZE	25
CAMERA	27
MULTIMEDIA	28
BLUETOOTH™ WIRELESS	31
MEMORY CARD	33
TOOLS	35
PROTECT	39
TROUBLESHOOT	41
SAFETY, REGULATORY & LEGAL	42

MENU MAP

MAIN MENU

Recent Calls

Multimedia

- Media Center
- My Images
- My Music
- My Videos
- Camera
- Camcorder
- Ring Tones
- VoiceRecord

Web

- Net

Contacts

- [New Contact]
- [New Group]
- [New Msg Group]

Messages

- [Create Message]
- Voice Mail
- Inbox
- Drafts
- Outbox
- Sent Items
- Net Alert

Games and Apps

- Alarm Clock Plus
- My Images
- My Music
- My Videos
- Calculator Suite
- Download Apps
- iHelp
- Backup+
- Java System
- Memory Card

Push To Talk

- Call Alert
- Push To...
- Group Connect
- PTT Options
- PTT Help

Tools

- My Info
- Profiles
- Alarm Clock Plus
- Bluetooth
- GPS
- Datebook
- Call Timers
- Memo

Settings

This is the standard main menu layout.
Your phone's menu may be different.

START

let's get you up and running

ASSEMBLE & CHARGE

1

Insert optional memory card.



2

Open grommet, then insert SIM with gold contacts facing down.



SIM



micro SIM



SIM & Adapter

3

Insert battery.



4

Battery cover on.




5

Charge up.





Caution: Before using your phone, please read the safety, regulatory and legal information provided with your product.

TURN IT ON & OFF

To turn on your phone, press and hold Power/End  for a few seconds or until the display turns on. If prompted, enter your four-digit unlock code.




Note: If you press Power/End  for more than four seconds, the phone will turn on in **Transmitters Off** mode.

To turn off your phone, press and hold Power/End .

ENABLE SECURITY

You will need to enable security the first time you turn on your phone or within 10 days of using your phone.

- 1 Press **Ok**.
- 2 You are prompted to enable security. Press **Yes** and follow the on-screen instructions.
- 3 Press Power/End  to return to the home screen.





BASICS

ABOUT THIS GUIDE

This guide shows how to locate a menu feature as follows:

Find it: Menu  >  **Settings** > **Phone Calls**

This means that, from the home screen:

- 1 Press the Menu key  to open the main menu.
- 2 Press the navigation keys to scroll to the  **Settings** menu option, and press  to select it.
- 3 Press the navigation keys to scroll to **Phone Calls**, and press  to select it.

HOME SCREEN














Your phone's *home screen* looks like this:



Note: Your home screen might look a little different.

Soft key labels in the home screen show the current soft key functions.


Status indicators appear at the top of your phone's display.

Indicators	
 Signal Strength	 No Service
 Active Phone Line	 New Message
 Speaker On	 Packet Data
 Speaker Off	 Battery Level
 Ringer Off	 Bluetooth™ On
 Vibrate All	 New Voicemail
 FM Radio On	4 JAN 2013

CAROUSEL MENU

Get quick access to your favorite applications, right on your home screen.


OPEN APPLICATIONS

- 1 Press the Navigation Key left or right until you highlight the application you want.
- 2 Press  to open the application.



Note: Availability of the Carousel is dependent on your service provider.

CHOOSE APPLICATIONS

Customize the Carousel with your most often used applications.

Find it: Menu  >  **Settings** > **Personalize** > **Carousel**

AUTO HIDE

To hide the Carousel when not in use, press Menu  >  **Settings** > **Personalize** > **Carousel** > **Auto Hide**.

ADJUST VOLUME


Press the volume keys up or down to:

- change the earpiece volume during calls
- change the ringer volume from the home screen
- turn off a call alert before answering the call



Tip: On the home screen, press and hold the volume key down until your phone vibrates to set your ringer to **Vibrate All**.


NAVIGATION KEY

Press the navigation key up, down, left, or right to scroll to items. When you highlight an item, press  to select it.



EXTERNAL DISPLAY

You can use your phone's external screen for these features:

- To **take a self-portrait**, turn on your camera with the phone open, then shut the phone to see yourself on the screen. Press the Smart key  to take the photo.
- To **see a list of recent calls**, press the Smart key .
- To **see phone status**, press and hold the Smart key .
- To **use the speaker**, press the Speaker key . To make voice calls, see "**VOICE NAMES**" on page 12.

Note: These features may be different depending on your service provider.

Speaker Key   Smart Key



TRANSMITTERS

Consult with airline staff about the use of the **Transmitters Off** feature during a flight. Turn off your phone whenever instructed to do so by airline staff.

Find it: Menu  >  **Settings** > **Advanced** > **Transmitters** > **Off**

Transmitters Off turns off your phone's calling and Bluetooth features in situations where wireless phone use is prohibited. You can use the phone's other non-calling features when the transmitters are turned off.


Note: Select **Transmitters Off** to disable all wireless services. You can still make emergency calls.


4 JAN 2013


CALLS

it's good to talk

MAKE & ANSWER CALLS

Enter a number, then press Talk .



To answer a call, press Talk .


To end a call, press Power/End .



VOICE NAMES

You can place calls by speaking commands to your phone.


First, assign a voice name by pressing Menu  >  **Contacts** > **[New Contact]**. Assign a name, phone number and select **[Options]** > **Voice Name**.


To make a call using a voice name, press and hold the Speaker key , and then follow the prompts.

HANDSFREE

Note: Using a mobile device or accessory while driving may cause distraction and may be illegal. Always obey the laws and drive safely.


During a call:


- To use the speakerphone, press **Speaker** or press the Speaker key .

- To connect a Bluetooth device, press Menu  > **Use Bluetooth**.

RECENT CALLS

Find it: Menu  >  **Recent Calls**

Tip: When you are in the home screen, you can press Talk  to go to **Recent Calls**.


The recent calls list contains information about the last 20 calls you made and received. To see call details, highlight an entry and press .



EMERGENCY CALLS

Note: Your service provider programs one or more emergency phone numbers that you can call under any circumstances, even when your phone is locked.

Emergency numbers vary by country. Your pre-programmed emergency number(s) may not work in all locations, and sometimes an emergency call cannot be placed due to network, environmental, or interference issues.

1 Enter the emergency number.

2 Press Talk  to call the emergency number.

Note: You can't make emergency calls while the keypad is locked, or if the phone shows a No Service message. To unlock the keypad, press Menu  > .

Note: Your phone can use location based services (GPS and AGPS) to help emergency services find you. See

“**LOCATION SERVICES**” on page 51.

COOL DOWN

In very limited circumstances, such as where your phone has been exposed to extreme heat, you may see “Cool Down” messages. To avoid possible damage to your battery and phone, you should follow these instructions until the phone is within its recommended temperature range. When your phone is in “Cool Down” mode, only emergency calls can be made.

4 JAN 2013



PUSH-TO-TALK

one or more, talk to them all

PRIVATE CALLS

Private calls are push-to-talk calls between two people.


MAKE AND ANSWER PRIVATE CALLS

To **make** a private call, enter the recipient's PTT number. Or, press Menu  >  **Contacts**, and select a contact that has a PTT number.

To **talk**, press and hold the PTT Button.

To **listen**, release the PTT Button.

To **answer** a private call, press the PTT Button after the caller has stopped talking.

To **end** a private call, press Power/End  or do nothing. The call will end after a few seconds.

To use the **speaker**, press the Speaker key .



CALL ALERTS

Use call alerts to tell someone you want to speak to them.

To **send** a call alert:

- Enter a Private ID, and press **Alert**. When prompted, press the PTT Button.
- Press **Contacts**, and highlight a contact containing a Private ID. Press **Alert**, and press the PTT Button when prompted.

When you **receive** a call alert, you can:

- **Answer:** Press the PTT Button to begin a private call with the sender.
- **Queue:** Press **Queue** to store the call alert to the call alert queue.
- **Clear:** Press **Clear** to dismiss and delete the call alert.

Note: Call alerts will automatically be moved to the queue after a few minutes of inactivity. You won't be able to make phone calls or private calls until the call alert is moved, or you've chosen one of the options above.

TURN OFF A CALL ALERT

You can press the volume keys to turn off a call alert before answering the call.

SDG (GROUP) CALLS

Need to talk to more than one person at a time? With SDG (Selective Dynamic Group) calls you can talk to up to 20 people at a time.

Note: SDG calls may not be available from your service provider. To store groups on your phone you need a group-call-capable SIM card. Contact your service provider for more information.

CREATE SDG LISTS IN CONTACTS

Find it: Menu  >  **Contacts**

- 1 Select **[New Group]**.
- 2 To assign a name to the group name, enter the name.
- 3 Add Private IDs. 4 JAN 2013
- 4 Press **Save**.

MAKE SDG CALLS

- 1 In Contacts or the recent calls list, scroll to or select the group you want.
- 2 Press the PTT Button.

WEB


Find it: Menu  >  **Web** > **Net**

Note: Your service provider may charge you to surf the web or to download data.



GO TO A WEB SITE

- 1 From the home page, select **Go to URL**.
- 2 Press **Edit**.
- 3 Enter the web address and press **Done**.
- 4 Press **Option** and select **accept** to go to the website.

ADD A BOOKMARK

While on a website, press and hold Menu  > **Bookmark Page**. Name the bookmark and select **Save**.


OPEN A BOOKMARK


While on a website, press and hold Menu  > **View Bookmarks**. Highlight a bookmark and press , or press its number on the keypad.

TEXT ENTRY

Your phone provides convenient ways to enter text.

CHANGE CHARACTER INPUT MODE

- 1 When you see a screen where you can enter text, press Menu  to change the character input mode.
- 2 Select one of the following options:

input mode	
Alpha	Press a key one or more times to cycle through the letters and numbers of that key. When you see the character you want, just press another key or wait a second or two to move on.
Word	Predictive text predicts the word you want, with just one keypress per letter. If the prediction is correct, press the Navigation Key right to accept the word. If the prediction is not correct, press and hold the Navigation Key down to see other options. Highlight the correct word and press  to select.
Symbols	Enter symbols.
Numeric	Enter numbers.

input mode

Text Input Settings

Select the desired entry language and Word Prediction features.

Insert

Select an item to be inserted, such as a picture, an audio clip or a voice recording.

Note: Only available when using MMS messaging.

Tip: When entering text, press and hold # to change letter capitalization (**Abc** > **ABC** > **abc**).

4 JAN 2013

CONTACTS


STORE A PHONE NUMBER OR PRIVATE ID

Find it: Menu  >  **Contacts** > **[New Contact]**

- 1 Enter a name (up to 20 characters) for the new contact.
- 2 Select a ringtone.
- 3 Select a type for the contact (**Mobile, DC1, DC2, Work1, Work2, Home, Email1, Email2, Fax, Pager, Talkgroup, Group, Msg Group, IP, or Other**). Choose **Private1** or **Private2** to store a Private ID.
- 4 Enter the number for the contact and press **Save**.

CALL A STORED PHONE NUMBER OR PRIVATE ID

Find it: Menu  >  **Contacts**

- 1 Scroll to the contact.
- 2 If the contact has more than one number, scroll left or right to find the number you want (**Mobile, DC1, Work1, Work2, or Home**).
- 3 For a phone number, press Talk  to begin a call. For a Private ID, Talkgroup ID, or SDG list, press and hold the PTT Button to start a call.


MESSAGING

Find it: Menu  >  **Messages**

You can send an SMS or Multimedia Messaging Service (MMS) message depending on your service provider.


CREATE & SEND MESSAGES

Find it: Menu  >  **Messages** > **[Create Message]**

1 Enter a phone number and press , or press **Search** to select a contact or recent call.

2 Enter your message in the **Message** field.


3 Or add a picture, sound, or quick note:

- Quick notes are short, pre-written phrases. Press **QNotes** to enter a quick note.
- To insert pictures, sounds (audio files), or voice recordings into the body of your message, press Menu  > **Insert** > **Insert Picture, Insert Audio, Insert Video, Capture Picture, Record Voice, or Record Video.**


Note: To remove an item from a message, highlight it and press **Delete**.

- To attach a file to the end of your message, select **....MORE....** > **Attach** > **[New Attach]** > **Browse Pictures, Capture Picture, Browse Audio, Record Voice, Browse Video, Record Video.**

Note: You can only attach pictures and audio files if they're not forward locked or DRM-protected.

Tip: To remove an attachment, select **Attach**. Highlight the attachment to remove, and press Menu  > **Unattach**.

Note: You can't attach or insert files in SMS messages.

- 4 When finished, press .
- 5 To send the message, press **Send**.

RECEIVE MESSAGES

- To view the message, press **Read**.
- To dismiss the message notification, press **Exit**.

To read your messages later, press Menu  > :

 **Messages** > **Inbox**.

MESSAGE GROUPS

You can create a message group to send messages to a group of up to 20 contacts.

Note: Your service provider may not support this feature.

CREATE MESSAGE GROUPS

Find it: Menu  >  **Contacts** > **[New Msg Group]**

- 1 Select **[Add Member]** and select the contacts you want to add to the group.
- 2 When you're finished press **Done**.
- 3 Enter a name for the group in the **Name** field.
Note: If you don't name the group, it will be named **Msg Group** followed by the number of group members. For example, **Msg Group (3)**.
- 4 Press **Save**.

VOICEMAIL

To receive voicemail, you'll need to contact your service provider to set up a voicemail account.

RECEIVING A MESSAGE

To listen to the message, press **Call**.

To dismiss the notification, press **Back**.

To listen to your messages later, press Menu  >



 **Messages** > **Voice Mail**.

PERSONALIZE

RINGTONES

Find it: Menu  >  **Multimedia** > **Ring Tones**

- 1 Make sure **Vibrate All** is set to **Off**.
- 2 Scroll through the list of ringtones and select one to assign. **Vibrate** sets your phone to vibrate instead of making a sound. **Silent** sets your phone to neither vibrate nor make a sound.
- 3 Select the features, such as **Messages**, you want to assign the ringtone to.
- 4 When you're finished press **Done**.

Note:  appears if the phone is set to **Silent**.  appears if the phone is set to **Vibrate All**.

SET TO VIBRATE

You can set your phone to vibrate for all calls and alerts.

Find it: Menu  >  **Multimedia** > **Ring Tones** > **Vibrate All**

Set this option to **On** or **Locked**.

To turn the ringer on when **Vibrate All** is set to **On**, press the volume key up. To turn the ringer on when **Vibrate All** is set to **Locked**, press and hold the volume up key until the phone vibrates, then press the volume key up again.


BACKLIGHT

Set the amount of time the backlight remains on or turn it off to extend battery life.

Find it: Menu  >  **Settings** > **Display/Info** > **Backlight**

WALLPAPER

Find it: Menu  >  **Settings** > **Display/Info** > **Wallpaper**

- 1 Select **Wallpaper**.
- 2 Scroll through the list of pictures and press  to select a picture.

You can set the wallpapers to change automatically by selecting **Auto Cycle**. 4 JAN 2013

MENU LANGUAGE

Find it: Menu  >  **Settings** > **Display/Info** > **Language**

PROFILES

Your phone has different profiles. You can customize ringtones, display settings, call settings, volume, and call filters.



Find it: Menu  >  **Tools** > **Profiles**

CAMERA

TAKE PHOTOS

Find it: 




- 1 Aim the camera lens and press the navigation key up to zoom in or down to zoom out. To change the picture size, press the navigation key left or right.
- 2 Press **Capture** or press  to take the picture.
- 3 To save the picture to memory, press Menu  and select **Save** to store, press **Discard** to delete it, or you can press **Send** to send it in an MMS message.

SHARE

To send the picture you've just taken via Bluetooth, PTT, or MMS message, press Menu  > **Send Via ...**

CAMERA OPTIONS

To set camera options such as **Zoom**, **Picture Quality**, and **Picture Size**, press Menu .


MULTIMEDIA

MY MUSIC



PLAY MUSIC FILES

Find it: Menu  >  **Multimedia** > **My Music**

To play a **Song, Album, Playlist, Genre, or Artist**, highlight it and press **Play**.


To view the contents of an **Album, Playlist, Genre, or Artist**, highlight it and press .

MUSIC PLAYER CONTROLS

Options	
Play/Pause	To play a song press  . To pause a song, press  .
Next/ previous song	Press press the Navigation key right (next) or left (previous).
Fast Forward/ Rewind	Press and hold the Navigation key right (Fast Forward) or left (Rewind).

PLAYLISTS

Find it: Press Menu  >  **Multimedia** > **My Music** > **Playlists** > **[Create New]**

To add a song to the Favorites playlist, highlight it and press Menu  > **Add To Favorites**.