7. Battery (cont'd)

Battery charging status

Туре	Charging in progress	Charging competed	
Travel chargqer cable jack	Red	Green	

The lamp blinks in red

- The charging terminal has a poor contact. Check if the battery is clean and try again.
- The battery or other part is defective. Contact our service center.

The lamp blinks in amber

• The battery is being charged in a too hot or cold place. The lamp turns to red and start charging when the room temperature is returned.

Battery charging time

Туре	Standard battery (950mAh)	
Time	Apprx. 160 minutes	

- . The chaing time is depending on the battery status and the charger.
- The charging time may increased if the rated voltage of the charger is low.

Battery operating time

Туре	Standard hold time	Voice call time	Video call time
Standard battery(950mAh)	Approx. 200	Approx. 240	Approx. 130
	hours	minutes	minutes

- Based on a new battery/Bluetooth mode off/no external memory
- The above service time of a battery pack is measured on the basis of the measurement of cell
 phone battery service time and display standard by SKT. Depends on the usuage, measurement
 may be different from the manual.
- If you use a bluetooth function, the amount of battery consumption will be larger.
- . If you have more call time, it would be more convenient to charge a battery everyday.
- In call time, using NATE, @Playon, WINC, MP3, takes more energy and shorten the operating time.
- . When receiving a call, it takes energy as much as sending a call.
- Hold time becomes shorter in out-of-service areas
- Service time may vary according to change status, temperature (high/low), wave status in the place, background light and light status.

ow battery alarm

- If a battery is almost used up, its ' III ' will flash with a comment of 'Recharge your battery."
- \bullet Even if you press the button while ' $\quad \blacksquare \quad$ ' is flashing, the lamp of the screen and buttons will not be on.
- Charge the battery immediately, the functions of the phone may not work normally.



02
Basic Operation

01 Power On/Off	37
02 Video phone	39
03 Voice phone	45
$\boldsymbol{04}$ Menu from the call history list	51
05 Missed calls	52
06 My Menu settings	52
07 Menu after entering numbers	53

1. Power On/Off



Power On

Press the button around 3 seconds.

The graphic set by the user is displayed, then the phone switches into the standby mode.

Power Off

Press and hold the button around 3 seconds.

A graphic dissapears and the power is turned off.

NOTE

You can download graphics from NATE, and change the setting in 'Main Display' of the 'Display' menu. (Download Wallpaper, see p.94)

2. Video Call

You can make a video call. (Only if the receiver's phone supports the video call service)



Before making a video call

- Call quality can be different depends on a base station.
- Check if the receiver's phone supports video call service.
 If the receiver's phone does not supports the video call service, call may be change to a voice call.
- ◆ Use the stereo earset if you can't hear the receiver's voice because of the noises.
- Depends on the usage preferences, battery consumption increases.



Press the <a>B button on standby screen

→ Move to T LIVE where you can manage all video call functions.

VT Call History

Press the

button on standby screen ▶ Press

Press

- Press to check all, outgoing, incoming, and missed call history.
- After entering the phone number press to check the call info. and press to use various menu functions.

2. Video Call (Cont'd)

You can make a video call. (Only if the receiver's phone supports the video call service)



Video Message Box

When fail to make a video call, you can check a video message, save, and delete in the video message box.

Press
on standby screen ▶ Press

□

Menu description

Video Messages: If he/she fails to receive the video call, you can

check his/her message and delete, connect to MMC, and connect to voice call by pressing

MMC Connection: you can check his/her video message.

MMC Register: Register the user to MMC.

MMC Direct Register: Register direct MMC service.

MMC Cancellation: Cancel the MMC function.

VTC Contents Box

Using the VTC contents box function, you can manage recent text messages.

Press ☐ on standby screen ▶ Press ☐ ☐

 you can set the fuctions such as protect/lock, delete(delete, delete all) by pressing (Left).

Movie/Photo Album

You can manage a photo or a movie file.

Press ☐ on standby screen ▶ Press 45

Select and photo or movie and press to set it as a default movie file.

(You cannot set the file that is in the external memory.)

6 T LIVE Settings

You can set the preferences about a video call.

Press a on standby screen ▶ Press 5 5 5

Menu description

Spk Setting: On/Off the speaker during a video call

To voice: If the receive does not support the video call.

it connects to a voice call

Alert VT call: Informs you if the receiver's phone supports the


video call

Screen Mode Control: Set/release the display mode during a

video call

Making a video call

Enter the phone number ▶ Press 🖪

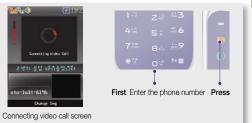

- After conneting with the receiver, you can set the camera lens and speaks through a speaker phone.
- Use the stereo earset if you can't hear the receiver's voice because of the noises.
- → If you press and hold 🔼 you can call directly to the most recent call number.
- It connects to the video call, only if the receiver's phone supports the video call service.
- Press when you end a call.


• • • **4**3

2. Video Call (Cont'd)

You can make a video call. (Only if the rreceiver's phone supports the video call service)

Receiving a Video Call

Press or open the folder when you receive a call

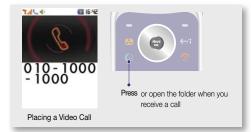

- If you press and hold (Volume key) when receiving a call, hell/vibrate switches
- After conneting with the caller, you can set the camera lens and speaks through a speaker phone.
- Use the stereo earset if you can't hear the caller's voice well because
 of the noises.
- Press when you end a call.

n-Video Call Functions

Button information in-video call



- Call still continues even if you close the folder. (T LIVE Settings, see p.177)

In-call functions

Speakerphone Off	Set speakerphone off/off.			
Mute block the sound to be sent to him/her.				
Live chatting service. In vt chatting press (Left) to use vt call mode, speakerphone off, mute, rechide me, phonebook. Chatting messages are save into Live Box. (Live Box, see p.108)				
Rec_Cap You can capture/record him, or capture/record me and save into your phone.				
Chg_Disp Switch the screen display to main me/him full me/him. Chg_Img Select and send from photo/mowe album and flashcon. Set_Cam Switch the camera between the internal/external camera and use zoom, bright, contast, effects and rotate functions.				
		New Mesage	w Mesage Send SMS (Short message).	
		Send flashcon Send flashcon (moving emoticon).		
Phonebook	Search and manage the phone numbers saved in the phone.			
To Voice	ice Switch to a voice call.			

2. Video Call (Cont'd)

You can make a video call. (Only if the receiver's phone supports the video call service)

n-Video Call Functions

Video chatting

You can send a message in-video call.



- You can write maximum Korean 40 letters, and English 80 letters.
- In-video call, you can use phonebook, turn on/off the speakerphone, mute, record/capture, and change image by pressing

Record/Capture

You can record/capture him/her or yourself and save it to the phone.

Press ☐ (Left) during a call ▶ Select Record/Capture



- When recording the video call, press (Left) to cancel or press (Right) to save it into Movie Album.
- You can find captured photo in Photo Album.
- In-video call, you can't use recorded his/her video as your main image.

3. Voice Call



Before Placing a voice call

- If you press and hold in the standby screen, the last connected number in the 'Call List' is dialed.
- → If 'All Lock' is set in the phone, you must enter the password to place a emergency numbers (111, 112, 113, or 119) or the speed dial number 1 and 9 (Mobile Security).

Placing a Voice Call

1 Placing a call by entering a phone number

Enter a phone number on the standby screen and press ()

- When you start to enter a number, the easy calling function runs to find the matching number from the recent call list. You can select a number with and place a call with .
- *Easy Calling: Easy calling service finds the matching recent call number when entering the phone number.
- You can change the number style pressing (Camera key).
 (Dialing Font, see p.96)

3. Voice Call (Cont'd)

Placing a Voice Call (Cont'd)

2 Placing a call to a number stored in the phonebook

- You can search the numbers in the phonebook to place a call. (Search Number, see p.168)
- If you press after selecting a person, the 'representative number' of the selected person is dialed.

Placing a call with speed dial

Press and hold the last digit of the speed dial number

Example

Speed dial number 17	Press 13 and then press and hold 755
Speed dial number 173	Press 13 and 75 and then press and hold 43

 You can easily place a call with the speed dial number stored in the phonebook. (Edit Speed Dial, see p. 171)

Placing a call with electronic dialing

Enter a phone number ▶ Enter 'P' or 'T' with ♦ , and enter the number to be dialed electronically ▶ Press ♦



- You can have the phone to memorize several numbers according to the voice announcement when you use ARS.
- You can cancel the electronic dialing by pressing $\leftarrow \prime i$ at any time during a call.

Buttons for electronic dialing

00	Р	The numbers entered after 'P' are transmitted only when you press or [Left].
00	T	The numbers entered after 'T' are transmitted automatically in a short while.





Press or open the folder to answer the call

Receiving a Voice Call

For an incoming call, open the folder or press () to receive the call.

- The phone rings or vibrates depending on the setting. In order to switch ring or vibration to mute, press and hold (Volume kev).
- → You can hang up the phone by pressing ...

Note You can download graphics from NATE, and change the setting in 'Main Display' of the 'Display' menu.

You can download graphics from NATE, and change the setting in Twain Display of the Display Ther

Depending on the size of the graphic, it may take some time to loading up.
 (Download Wallpaper, see p.94)

3. Voice Call (Cont'd)

eceiving a Call (Cont'd)

Receiving a call with a stereo earset

Press the stereo earset key to receive the incoming call.

- After the call is finished, press or press and hold the sereo earset key to hang up the call.
- If a call is incoming as the stereo earset is connected, the stereo earset rings regardless of the ring/vibration settings. Once a call is connected, it continues even if you close the folder.

Receiving a call setting

Press ☐ (Left) ▶ Press 🖅 ▶ Press 🗷

 For incoming calls, you can answer the call depending on the mode you have selected.

Menu description

Open the folder: Open the folder to receive calls.

All key : Press any key except to receive calls

Send key : You can receive calls only by pressing (

Auto connect : The call is connected automatically in 3 sec.

in 3 sec. after the ring.

n-Voice Call Functions

You can use various eonvenient functions during a call

Press during a call and select the menu.



New Message

 You can send short message (SMS) only. (New Message, see p.160)

Phonebook

- You can use the phonebook menu during a call.
 (Phonebook menu description, see p.169)
- While you are searching the phonebook, you cannot edit the number or use some of the menu function such as 'call me free'.
- * Call me free The receiver, not the caller, pays the call charge.

Mute

- · You can mute your voice over the phone during a call.
- To release the function, select Release Key Tone.
- When you use the function, is displayed.
- . This function is released automatically if the call is finished.

OTMF Off

- · You can block the key tone during a call.
- . To release the function, select Release Key Tone.
- When you use the function,

 is displayed.
- . This function is released automatically if the call is finished.

6 Send My number

- · You can easily send your number to other's phone during a call.
- Your number is displayed while the phone is sending the number, and after the number is sent, the phone returns to the call mode.

1 Hold All On

Press ☐ (Left) during a call ▶ Press 🚟

- You can hold the call temporary.
- You can also press <a> (Right) button to hold the call.

3. Voice Call (Cont'd)

n-Voice Call Functions (Cont'd)

New Call

- The multiparty or conference service is available.
- you can swap between calls by pressing and when the second call is connected, the first call is automatically placed on hold.
- Place one call on hold and while the active call is on, press and then select Join all to setting up a conference call.
- * If you are not registered multi-call service from SKT, new call service is not available. Contact SKT Customer Center for further information.

Using Speaker

Press 🜚 during a call

- When you use the speaker,

 is displayed. Press

 to release the function.
- When you use the speaker, the microphone must face the user at a distance of not farther than 30 cm
- . This function is released automatically after the call is finished.

Voice in call

ress (Volume key) In-voice call

- · You can adjust the voice in call.
- Placing the second call

Using various ways you can make a multiparty or conference call.

Placing a call from phonebook

① Press ☐ (Left) during a call ▶ Select phonebook ▶ Select the number ▶ Press ۞
② Press ☐ (Multi-Access) during a cal ▶ Select voice/video call ▶ Select phonebook ▶ Select the number ▶ Press ۞

Placing a call from the recent call history

Press (Multi-Access) during a cal ▶ Select voice/video call ▶ Select the recent call number ▶ Select the number ▶ Press (்)

Placing a call using new call menu

Press ■ (Left) during a call ➤ Select New Call from the menu ➤ Enter the number ➤ Press ♦

4. Using Menu from Call History/Time





e-mail function is available only when sender and receiver have registered e-mail.

Menu description

New Message	Send a message.	
@Messenger	Real-time messenger service. (@Messenger, see p.163)	
Cyworld	Connect to the mobile homepage. (NATE mobile homepage, see p.81)	
	Send a e-mail : Send a e-mail to the number you have entered. (e-mail, see p.163)	
Send/Connect	 Voice message: Record and send a voice message to the number you have entered. (The receiver gets the text message for detail) 	
	Call me free: The receiver, not the caller, pays the call charge.	
	Number via message: The receiver, not the caller, pays the call charge.	
Time Info	ne Info Check the call duration.	
New Contact	Save the phone number in the phonebook, if it's not saved in the USIM card.	
Repeated Calls on	alls on Manage all repeated calls.	
Block Number	Block the selected number.	
Delete	Delete all or delete the selected number.	

50 ●●●

5. Missed Call

If you fail to receive a call, following image is displayed on the screen.



- If you press when 'Missed Call' message box is displayed, you can check the list of incoming calls.
- → With the slide closed, press and hold the (Volume key) to check the missed calls
- → To check missed calls from the menu go to 'Phonebook' ► 'Call HistoryTime' ▶ 'Received Calls'.
- ⇒ By pressing , your call will be connecting to missed call number.

6. My Menu Settings

You can register up to 12 frequently used menu in Mv Menu.



Press (2) to select the icon

- on the standby screen to check My Menu. Register or Delete.
- The menu will not be deleted even if you copy to My Menu.

7. Using Menu after entering a number

You can use the following simple function in relation with the phone number.






Enter a phone number on the standby screen ▶ Press — (Left)

Manu description

New message Send a message		
@Messenger	Real-time messenger service (Mobile Messenger, see p.163)	
Cyworld	Connect to the mobile homepage (NATE Mobile Homepage, see p.81)	
Send/Connect	Send a e-mail: Send a e-mail to the number you have entered. (e-mail, see P.163) Voice message: Record and send a voice message to the number you have entered (The receiver gets the text message for detail) Call me free: The receiver, not the caller, pays the call charge.	
Search Number	Search the number from phonebook	
Hide My Number	Hide my phone number to the receiver	
Go to Calendar	Move to the date on the schedule calendar corresponding to the number entered	

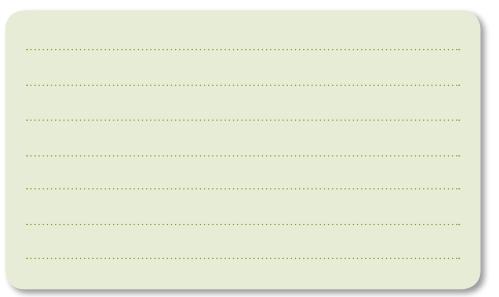



- 01 Entering text mode5602 Using menu when entering text 58

1. Entering text mode



ntering text mode

- Select a mode by pressing (Right) in the text mode.
- → Use 🗣 or 🧣 to move the cursor and enter letters.
- Press to delete a character, press and hold to delete all.

Writing Korean

Writing consonants

- Press a key once to write the first consonant marked on the key. Press the key twice to enter the hard sound of the consonant.

Example

_				
	ᆽ	Press ** once	ᄎ	Press * ₹ and * #
	ᄍ	Press 🕶 twice	⊣	Press 1 → and 🇆 #

Writing vowels

- Enter an initial consonant, a medial vowel and a final consonant in accordance with Korean orthography. If the final consonant does not meet Korean orthography, it is moved to the initial consonant of the next character.
- -Initial consonant: '호' is initial consonant in '홍'
- -Medial vowel: 'ㅗ' is medial vowel in '홍'
- -Final consonant: 'O' is final consonant in '홈'
- To enter a second vowel on a key, press the key twice. (If it's '+ 13'
- To enter a diphthong, press the key in order of the strokes, or enter the basic vowel and press
- Press again to change to basic from diphthong.

Example

ŀ	Press 🚑 3 once.	ŧ	Press ≅3 and ∞# .
+	Press 🐸 3 twice.	‡	Press ≅3 twice and ∞#
Н	Press 2 and 5.	-1	Press three times, or press ands # .

Writing English and numbers

Writing English characters and numbers

- Press the key once, twice and three times in order to write the first, second and the third English character on a key.
- Press in the English mode (upper or lower case) once and twice to enter '@' and '.'.

Example

L	Press 5 % three times.
0	Press
٧	Press 🖽 three times.
E	Press 🛂 twice.
•	Press 13 twice.

Writing numbers

- · Press the number button to write in the number mode.
- Press and hold the number button in any other mode.

2. Using menu when entering text



moticons

Select a menu by pressing (Left) button in the text mode.

- You can select and enter generally used symbols. (^-^, Mail, Genera, Graphics1, Graphics2, Ruled Lines, Measurement Symbols, Circles, Parentheses, Japanese1, Japanese2)
- → Press to select a symbol, and press to scroll pages.
- Press the key of the desired symbol, and then press (OK) to write the symbol.






04

T Service

1 Roaming	6
2 M Service Center	6
3 T Service	6
4 NATE	6
05 W	6
6 Game Box	6
7 Moneta	6
8 Melon	6
9 T MAP	7
0 WINC(Mobile Address)	8
NATE Mobile Homepage	8
2 T Interactive	8

1. Roaming

You can use your own phone abroad without subscribing for any service.

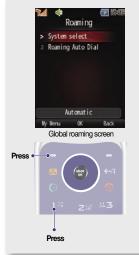

- If you wish to change the setting for the global roaming service, please contact the Customer Center.

 Changing the settings at your own discretion may disable the phone.
- Select the other wireless service provider from the system when a call does not fuction properly.

2 - Salect the other wholess solvice provider from the system when a call does not factor properly.

For international call, press and hold of and insert international telephone code(+).

Select system



- → You can select the roaming service system provider of each country.
- → The default password is '0000'.

Menu description

Auto Select: You can check if mobile phone services are available for such place and it automatically connects to the available service system.

Manual Select: You can select after searching the available roaming services. (If you have selected unavailable roaming service system, you cannot make a call. Select other service or change to place a call.)

Roaming auto dial



- When placing a call from abroad, you don't have to enter the international call access number and national code.
- You can place a call from the number in the phonebook or the call history list.
- The roaming auto dial screen is displayed on the standby screen when you set the roaming auto dial function.

2. M Service Center

You can contact SKT Customer Center to receive various customer support services.



→ You can connect to [NATE] directly by pressing **114 on standby screen.

M Customer Service start-up screen


- You can query bill, view information on supplementary services, service rate and membership, and use the real time service.
- When you select the area, you can get area information, location, and phone number.

60 ●●●

3. T Service

You can subscribe, cancel subscription or use



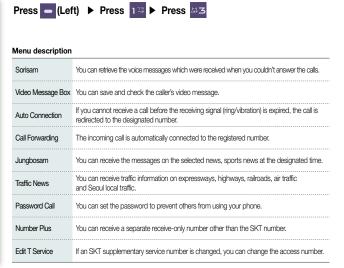

4. NATE

You can access NATE to search information or download various content such as games and ringtones.





Press [OK button] to connect NATE.

Description of NATE button		Description on menu	
(Left)	Move to NATE browser menu	Favorite	You can register and move to frequently accessed web pages.
- (Right)	Move to previous page		requerity accessed web pages.
	Navigate	History	Shows the list of recently accessed sites.
Nitre OK	Press-select/run Press and hold-NATE start up page	Move	You can enter a web page address and move to the site.
← /i	Move to previous page	Tools	Provides you with useful tools you can use for NATE service.
0	End NATE		use for tNATE service.



- Data call rate and information service fee are charged when you use NATE. Visit M customer center or contact SKT customer center.
- If you download content from wireless internet (NATE, june, @Playon, Game Box, etc.) when you have no sufficient free space in the memory, 'lack of memory' message is displayed. You can download the content by executing the memory manager and deleting the content stored in the phone. (Managing Memory, see p.126)
- If the memory is full, you might not be able to use some munu functions on the downloaded content.

5. W

You can enjoy various content such as wireless internet, chatting, real-time TV, i's box, etc...







→ You can go to W menu directly by pressing button standby screen.

obile Web Internet

You can enjoy mobile web surfing with the same screen on the mobile phone as on PC.

- You can search or insert URL address and acess various contents.
- → If you want to zoom in/out the screen press (Volume key).



- · You can download any contents while using internet until the memory gets full,
- · W service screen and content are subject to change depending on the circumstances of the service providers.
- The Mobile Web Internet service does not support payment, internet banking, file opening/execution, file attaching/downloading, music play and Active X control.
- To use the Mobile Web Internet service, you need to subscribe for the plus data rate service. Note that all excessive data service fee can be charged depending on the rate service you select.

e -mail

you can manage your email, image, photo, file attachment by using e-mail feature, (e-mail, see p.163)





You can search numbers in the phone or enter numbers to use the real time messenger service.(Mobile Messenger, see p.163)





You can enjoy various types of content including TV, movie, music, game, sports and ringtone, and download multimedia content using the premium service.





- june service screen and content are subject to change depending on the circumstances of the service providers.
- The default june content provided are not recoverable if you delete them at your own discretion or by mistake.
- · You can check the downloaded june content in the june content box. You can download any june content from the web until the june memory gets full
- · If you fail to download a full content, you can resume downloading.
- . You can receive calls while using the june service. When the call is finished, june screen is displayed.
- . TSM(Memory Manager) is a service that allows you to delete the old contents and download new content when the memory is full.
- . If you download content from wiress internet (NATE, june, @Playon, Game Box etc..) when you have no sufficient free space in the memory. TSM (memory manager) is started. You can download the content by executing the memory manager and deleting the content stored in the phone. (excluding protected iune downloaded content live ringtone content and live screen content)
- · If you download content, an information service fee is charged.

64

You can enjoy various content such as wireless internet, chatting, real-time TV, i's box, etc,..

Real-time TV

You can watch the ground-wave and cable TV.



- Press and set the current channel to the default or select the schedule and time to view the program schedule specifically.
- → Press to select the channel, and press to watch it.
- → You can adjust volume by pressing (Volume key).

** for the real-time TV service. Note that an excessive call rate may be charged if you don't subscribe for SKT's rate system. See the rate system quide or contact SKT Customer Center for further information.

Ps box

 
Saved or captured photos or movies, you can make the movie as UCC and register to the i's box to share with other users.



* You need to register the service first in order to use it, and a call rate and an additional information service fee are charged.

ossi

Tossi is essentially a microblogging service that you can send and share your emotions in a simple form.



** A call rate and an additional information service fee are charged. For more informations and rate quide, see tossi homepage (http://www.tossi.com).

Solution United States Technology

You can manage, save, and play downloaded music contents or MP3 files (june Contents Box, see p.105)



* Contents sill play even if you close the folder.

6. Game Box

You can play 3D games downloaded from the mobile internet or computer.





- After selecting GXG connection icon, press at connect to NATE game site and download many different types of games.
- * If you want to send GXG game using PC, download from GXG homepage (www.gxg.com)and install it.
- Service fee is charged when downloading from the wirless internet. For further information, please contact Customer Center.

7. Moneta

Using USIM card, you can process a payment transaction such as bank, credit card, transportation card, stock services, and etc.





Service

For more information please visit http://chip.moneta.co.kr.

7. Moneta (Cont'd)

Using USIM card, you can process a payment transaction such as bank, credit card, transportation card, stock services, and etc.

Membership & Life

This service is only for SKT member.

-You can download various and convenient informations to your USIM card. (Membership card, retailer, event, membership coupon, IC chip service, etc.)



Preference

By pressing and holding , you can set the button and set the payment card.

Press and hold	Select the function that you want to run when press and
setting	hold the button.
payment card setting	Select the card when you use to pay.

Moneta home

NATE Home

you can process a payment transaction such as bank, credit card, transportation card, stock services, and etc.

MBANK	Use bank services such as financial summary, bill payment, transfer, loans, etc.		
Credit Card	Manage credit card information.		
MSTOCK	Use market rate, and various stock services.		
Transportation	Supports transportation card (T-money) and top quality station informations.		
	SKT member service.		
Membership & Life	(Membership card, retailer, event, membership coupon, IC chip service, etc.)		
Authentication	Use and save authentication in the phone.		
NATE Finanance	Use NATE stock/financial service.		

Connect to NATE home.

8. Melon

With the wired/wireless integrated service provided by Melon, you can search content, streams or downloads MP3 music content.



Melon box

Press ▶ Select Melon

- → You can save, manage and play the music content downloaded from June or Melon.
- → You can select the content you want to play by pressing [Select].
- → You can download the music content as long as the memory capacity allows.
- You can receive a call while playing the music content. The phone returns to the music play mode after the call
- You can control volume with (Volume key) as the content is being played. The phone continues playing music even if you close the slide while the phone is playing music content.
- You can select a section to be repeated by pressing \$\displays \displays \dinfty \dinfty \displays \displays \displays \displays \displays \displays \di
- If you press (Left)[Menu], you can use the multi-tasking function to change settings, to access wireless internet, or to manage text messages while playing music content.
- If you press (Left)[End] while you are connected to wireless internet, the previous screen is displayed.
- Once you purchase content, you can download it with no extra charge for 1 year from My page > List of purchased content, or from Melon (www.melon.com).



8. Melon (cont'd)


With the wired/wireless integrated service provided by Melon, you can search content, streams or downloads MP3 music content.

Melon box



- If you download content from wireless internet (Nate, June, @Playon, GXG, Melon, etc.) when you have no sufficient free space in the memory, the lack of memory message displayed. You can download the content by executing the memory manager and deleting the content stored in the phone.
- You can listen to music content with bluetooth. See bluetooth and the user manual
 of the device. (Bluetooth, see p.127)
- A content service fee and a data service fee are charged if you use Melon service.
 See the rate system guide or contact SKT Oustomer center for further information.

Melon player screen and keys

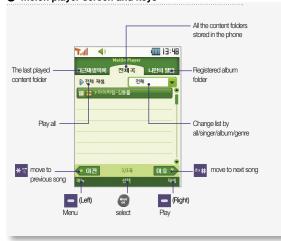

Using menu on the Melon player window				
Delete all list	You can delete the list of content from the last played list.			
Delete all	You can delete all the content except the proctected content.			
Sort	You can change the order of content by genre, title, date of downloading and singer.			
Extend Validity of all content	You can extend the validity of the music content.			
Search	You can search music in Melon or Melon box with keyword or by genre.			
Manage message	You can use e-mail, mobile messenger functions and send/read messages.			
Delete list	You can delete two or more content lists.			
Add to my album	You can save the selected content in My album.			
Delete	You can delete the selected content or all the content (except the protected content).			
View content information	You can view information on the selected content. If you press [(Left) [Menu], you can rename file, set/release protection, delete, access wireless internet or manage message.			
Lyrics	You can download or update lyrics in Melon.			
Wireless Internet	You can search information on selected content in melon.			
Add album	You can add a content album folder to My album.			
Rename album	You can rename the alubum folder in My album.			
Move album	You can move content between albums.			
Add to favorites	You can add an album folder to the favorites list.			
Manage favorites	You can change order or delete the album folder in the favorites list.			

70 • • •

· · · 71