

APPLICANT: MOTOROLA, INC.

FCC ID: IHDT56CF1

**INSTRUCTION MANUAL**

A preliminary draft copy of the Users Manual follows:

# Welcome

---

Welcome to the world of Motorola digital wireless communications! We are pleased that you have chosen the Motorola C331 wireless phone.

**Earpiece**

**Antenna**

**Left Soft Key**

Perform functions identified by left display prompt.

**Right Soft Key**

Perform functions identified by right display prompt.

**Menu Key**

**Send Key**

Send and answer calls, view recent dialed calls list.

**Power/End Key**

Press & hold to power phone on & off.


**Navigation Key**

Scroll through lists, set volume.

**Accessory Connector Port**

Insert charger and phone accessories.

**Microphone**

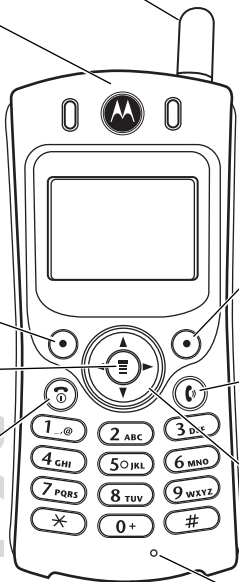

Personal Communications Sector  
600 North U.S. Highway 45  
Libertyville, Illinois 60048

1-800-331-6456 (United States)  
1-888-390-6456 (TTY/TDD United States)  
1-800-461-4575 (Canada)

[www.motorola.com](http://www.motorola.com) (United States)  
[www.motorola.ca](http://www.motorola.ca) (Canada)

MOTOROLA, the Stylized M Logo and all other trademarks indicated as such herein are trademarks of Motorola, Inc. ® Reg. U.S. Pat. & Tm. Off. TrueSync, Sidekick, Starfish, and the Stylized Starfish Logo are registered trademarks of Starfish Software, Inc., a wholly owned independent subsidiary of Motorola, Inc. All other product or service names are the property of their respective owners.

© 2002 Motorola, Inc. All rights reserved.

### **Software Copyright Notice**

The Motorola products described in this manual may include copyrighted Motorola and third party software stored in semiconductor memories or other media. Laws in the United States and other countries preserve for Motorola and third party software providers certain exclusive rights for copyrighted software, such as the exclusive rights to distribute or reproduce the copyrighted software. Accordingly, any copyrighted software contained in the Motorola products may not be modified, reverse-engineered, distributed, or reproduced in any manner to the extent allowed by law. Furthermore, the purchase of the Motorola products shall not be deemed to grant either directly or by implication, estoppel, or otherwise, any license under the copyrights, patents, or patent applications of Motorola or any third party software provider, except for the normal, non-exclusive, royalty-free license to use that arises by operation of law in the sale of a product.

Manual number:

Cover number: 8988485L49-O




 




# Menu Map

## Main Menu

- **Recent Calls**
  - Received Calls
  - Dialed Calls
  - Notepad
  - Call Times
- **Phonebook**
- **Voice Dial**
- **Datebook**
- **Radio**
- **Messages**
  - Create Msg
  - Voicemail
  - Text Msgs
  - Quick Notes
  - Outbox
  - Drafts
- **Ring Styles**
  - Style
  - Style Detail
  - My Tones
- **Shortcuts**
- **Web Sessions**
- **Calculator**
- **Games**
- **Settings**  
(see next page)

**Note:** This is the standard phone menu layout. You or your service provider may have changed the menu layout or changed some feature names. Not all features may be available for all users.

For example, the **Radio** feature on the main menu (left) is displayed only when the optional FM Stereo Radio Headset accessory is plugged into the accessory connector port on your phone (see phone illustration, page 1).

Shortcuts
<b>Change display zoom:</b> Press  , then press and hold 
<b>Lock/unlock keypad:</b> Press  
<b>Display my phone number:</b> Press  
<b>Go to dialed calls list:</b> Press 
<b>Exit menu system:</b> Press 

# Settings Menu



- **Phone Status**
  - My Tel. Number
  - Active Line
  - Battery Meter
  - Other Information
- **Connection**
  - Incoming Call
- **In-Call Setup**
  - In-Call Timer
  - Answer Options
- **Security**
  - Phone Lock
  - Lock Keypad
  - Lock Application
  - Talk Secure
  - Restrict Calls
  - New Passwords

- **Other Settings**
  - Personalize
    - Main Menu
    - Keys
    - Greeting
    - Quick Dial
  - Initial Setup
    - Time and Date
    - Backlight
    - Zoom
    - TTY Setup
    - Scroll
    - Animation
    - Language
    - Battery Save
    - Contrast
    - DTMF
    - Master Reset
    - Master Clear
  - Network
  - Car Settings
  - Headset

PRELIMINARY

# Contents

---

<b>Menu Map</b>	3
<b>About This Guide</b>	10
<b>Safety and General Information</b>	11
<b>Getting Started</b>	18
What's in the Box?	18
Installing the Battery	18
Charging the Battery	19
Turning Your Phone On	20
Making a Call	20
Ending a Call	21
Answering a Call	21
Seeing Your Phone Number	21
<b>About Your Phone</b>	22
Using the Display	22
Zooming In and Out	24
Adjusting Volume	24
Battery Use	25
<b>Making and Answering Calls</b>	27
Redialing a Number	27
Using Caller ID	27
Using Talk Secure	27
Returning Unanswered Calls	28
Calling an Emergency Number	28
Turning Off a Call Alert	29
Canceling an Incoming Call	29
Calling With Speed Dial	30
Calling With One-Touch Dial	30

Calling a Number In a Text Message .....	30
Additional Calling Features .....	31
<b>Using Features While On a Call</b> .....	32
Using Call Waiting .....	32
Making a Three-Way Call .....	32
Additional On-Call Features .....	33
<b>Using the Menu</b> .....	34
Navigating to a Feature .....	34
Selecting a Feature Option .....	35
Entering Feature Information .....	36
<b>Entering Text</b> .....	38
Choosing a Text Mode .....	38
Using Tap Method .....	39
Using Symbol Mode .....	42
Using iTAP™ Software Predictive Text Entry Method	43
<b>Menu Feature Descriptions</b> .....	47
<b>Recent Calls</b> .....	58
Viewing Received Calls or Dialed Calls .....	58
Using the Notepad .....	60
Viewing and Resetting Call Timers .....	60
<b>Phonebook</b> .....	63
Viewing Entry Details .....	63
Storing a Phonebook Entry .....	64
Storing a PIN Code With the Phone Number .....	66
Recording a Voice Name For a Phonebook Entry ...	68
Dialing a Phonebook Entry .....	69
Editing a Phonebook Entry .....	70
Deleting a Phonebook Entry .....	70
Setting the Primary Number for a Phonebook Entry .	71
Checking Phonebook Capacity .....	71
Sorting the Phonebook List .....	72

<b>Datebook</b> .....	74
Week View .....	74
Day View .....	75
Event View .....	75
Adding a Datebook Event .....	76
Changing Event Information .....	76
Copying an Event .....	77
Deleting an Event .....	78
<b>Radio</b> .....	79
Turning the Radio On and Off .....	79
Tuning a Station .....	80
Storing a Preset .....	80
Selecting a Preset .....	80
Sending and Receiving Calls with the Radio On .....	80
<b>Messages—Voicemail</b> .....	82
Storing Your Voicemail Number .....	82
Receiving a Voicemail Message .....	83
Listening to a Voicemail Message .....	83
<b>Messages—Text</b> .....	84
Setting Up the Text Message Inbox .....	84
Receiving a Text Message .....	85
Reading, Locking, or Deleting a Text Message .....	86
Storing Sounds .....	89
Sending a Text Message .....	89
Sending a Quick Note Text Message .....	91
Viewing the Status of Sent Text Messages .....	92
<b>Ring Styles</b> .....	93
Selecting a Ring Style .....	93
Customizing a Ring Style .....	94
Creating Alert Tones .....	95
Setting Reminders .....	102



<b>Shortcuts</b> .....	104
Standard Shortcuts .....	104
Creating a Shortcut .....	104
Using Shortcuts .....	106
<b>Micro-Browser</b> .....	107
Starting a Micro-Browser Session .....	107
Interacting With Web Pages .....	108
<b>Calculator</b> .....	109
Calculating Numbers .....	109
Converting Currency .....	111
<b>Games</b> .....	112
Playing a Game .....	112
Game Options .....	112
Blackjack .....	113
Falling Numbers .....	114
Video Poker .....	115
<b>Adjusting Your Settings</b> .....	117
Reordering Menu Items .....	117
Customizing a Soft Key Function .....	117
TTY Operation .....	118
Hands-Free Use .....	120
<b>Data Calls</b> .....	123
Connecting Your Phone to an External Device .....	123
Sending a Data Call .....	125
Receiving a Data Call .....	126
<b>Security</b> .....	129
Assigning a New Code or Password .....	129
If You Forget a Code or Password .....	130
Locking and Unlocking Your Phone .....	131
Locking and Unlocking Your Keypad .....	132

Restricting Calls .....	132
Activating Talk Secure .....	133
<b>Troubleshooting .....</b>	<b>134</b>
<b>Programming Instructions .....</b>	<b>143</b>
<b>Specific Absorption Rate Data .....</b>	<b>145</b>
<b>Additional Health and Safety Information .....</b>	<b>148</b>
<b>Warranty .....</b>	<b>157</b>
<b>Product Registration .....</b>	<b>165</b>
<b>Export Law Assurances .....</b>	<b>165</b>
<b>Index .....</b>	<b>166</b>
<b>Wireless Phone Safety Tips .....</b>	<b>177</b>

PRELIMINARY

# About This Guide

---

This user guide introduces you to the many features in your Motorola wireless phone.

## Navigating to a Menu Feature

Use the menu system to access your phone's features. This guide shows you how to select a menu feature as follows:

Find the Feature

☰ > Messages  
> Text Msgs

This example shows that you must press ☰, scroll to and select **Messages**, then scroll to and select **Text Msgs**.

## Optional Features



This label identifies an optional network or subscription-dependent feature that may not be offered by all service providers in all geographical areas. Contact your service provider for more information.

## Optional Accessories



This label identifies a feature that requires an optional Motorola Original™ accessory.

# Safety and General Information

---

IMPORTANT INFORMATION ON SAFE AND EFFICIENT OPERATION. READ THIS INFORMATION BEFORE USING YOUR PHONE.

The information provided in this document supersedes the general safety information contained in user guides published prior to July 2000. For information regarding radio use in a hazardous atmosphere please refer to the Factory Mutual (FM) Approval Manual Supplement or Instruction Card, which is included with radio models that offer this capability.

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

## ***RF Operational Characteristics***

Your phone contains a transmitter and a receiver. When it is ON, it receives and transmits radio frequency (RF) energy. The phone operates in the frequency range of 824 MHz to 849 MHz in analog and digital mode and 1850 MHz to 1910 MHz in digital mode.

When you communicate with your phone, the system handling your call controls the power levels at which your phone transmits. The output power level typically may vary over a



range from \_\_\_\_ watts to \_\_\_\_ watts in analog mode and \_\_\_\_ watts to \_\_\_\_ watts in digital mode.

## ***Exposure To Radio Frequency Energy***

Your Motorola phone is designed to comply with the following national and international standards and guidelines regarding exposure of human beings to radio frequency electromagnetic energy:

- United States Federal Communications Commission, Code of Regulations; 47 CFR part 2 sub-part J
- American National Standards Institute (ANSI) / Institute of Electrical and Electronic Engineers (IEEE) C95.1-1992
  - Institute of Electrical and Electronic Engineers (IEEE) C95.1-1999 Edition
  - National Council on Radiation Protection and Measurements (NCRP) of the United States, Report 86, 1986
- International Commission on Non-Ionizing Radiation Protection (ICNIRP) 1998
- Ministry of Health (Canada) Safety Code 6. Limits of Human Exposure to Radiofrequency Electromagnetic Fields in the Frequency Range from 3 kHz to 300 GHz, 1999
- Australian Communications Authority Radiocommunications (Electromagnetic Radiation-Human Exposure) Standard 1999

To assure optimal phone performance and make sure human exposure to radio frequency electromagnetic energy is within

the guidelines set forth in the above standards, always adhere to the following procedures:

## ***Portable Phone Operation and EME Exposure***

### ***Antenna Care***

**Use only the supplied or an approved replacement antenna.** Unauthorized antennas, modifications, or attachments could damage the phone and may violate FCC regulations.

**Do NOT hold the antenna when the phone is in use.** Holding the antenna affects call quality and may cause the phone to operate at a higher power level than needed.

### ***Phone Operation***

When placing or receiving a phone call, hold your phone as you would a wireline telephone. **Speak directly into the microphone.**

### ***Body-Worn Operation***

To maintain compliance with FCC/Health Canada RF exposure guidelines, if you wear a phone on your body when transmitting, always place the phone in a Motorola-supplied or approved clip, holder, holster, case, or body harness for this product. Use of non-Motorola-approved accessories may exceed FCC/Health Canada RF exposure guidelines. If you do not use one of the Motorola-supplied or approved body-worn accessories, and are not using the phone held in the normal use position, **ensure the phone and its antenna are at least one inch (2.5 centimeters) from your body when transmitting.**



## ***Data Operation***

When using any data feature of the phone, with or without an accessory cable, **position the phone and its antenna at least one inch (2.5 centimeters) from your body.**

## ***Approved Accessories***

For a list of approved Motorola accessories, visit our website at [www.mot.com](http://www.mot.com).

## ***Electromagnetic Interference/Compatibility***

**Note:** Nearly every electronic device is susceptible to electromagnetic interference (EMI) if inadequately shielded, designed, or otherwise configured for electromagnetic compatibility.

### ***Facilities***

To avoid electromagnetic interference and/or compatibility conflicts, turn off your phone in any facility where posted notices instruct you to do so. Hospitals or health care facilities may be using equipment that is sensitive to external RF energy.

### ***Aircraft***

When instructed to do so, turn off your phone when on board an aircraft. Any use of a phone must be in accordance with applicable regulations per airline crew instructions.

### ***Medical Devices***

#### ***Pacemakers***

The Advanced Medical Technology Association recommends that a minimum separation of 6 inches (15 centimeters) be

maintained between a handheld wireless phone and a pacemaker. These recommendations are consistent with the independent research by, and recommendations of, the United States Food and Drug Administration.

Persons with pacemakers should:

- ALWAYS keep the phone more than six inches (15 centimeters) from your pacemaker when the phone is turned ON.
- NOT carry the phone in the breast pocket.
- use the ear opposite the pacemaker to minimize the potential for interference.
- turn OFF the phone immediately if you have any reason to suspect that interference is taking place.

## **Hearing Aids**

Some digital wireless phones may interfere with some hearing aids. In the event of such interference, you may want to consult your hearing aid manufacturer to discuss alternatives.

## **Other Medical Devices**

If you use any other personal medical device, consult the manufacturer of your device to determine if it is adequately shielded from RF energy. Your physician may be able to assist you in obtaining this information.

## ***Safety and General Use While Driving***

Check the laws and regulations on the use of phones in the area where you drive. Always obey them.





When using your phone while driving, please:

- give full attention to driving and to the road.
- use hands-free operation, if available.
- pull off the road and park before making or answering a call if driving conditions so require.

## ***Operational Warnings***

### ***For Vehicles With an Air Bag***

Do not place a portable phone in the area over an air bag or in the air bag deployment area. Air bags inflate with great force. If a portable phone is placed in the air bag deployment area and the air bag inflates, the phone may be propelled with great force and cause serious injury to occupants of the vehicle.

### ***Potentially Explosive Atmospheres***

Turn off your phone prior to entering any area with a potentially explosive atmosphere, unless the phone is a model specifically identified as being “Intrinsically Safe.” Do not remove, install, or charge batteries in such areas. Sparks in a potentially explosive atmosphere can cause an explosion or fire resulting in bodily injury or even death.

**Note:** The areas with potentially explosive atmospheres referred to above include fueling areas such as below decks on boats, fuel or chemical transfer or storage facilities, areas where the air contains chemicals or particles, such as grain, dust, or metal powders, and any other area where you would normally be advised to turn off your vehicle engine. Areas with potentially explosive atmospheres are often but not always posted.

## ***Blasting Caps and Areas***

To avoid possible interference with blasting operations, turn OFF your phone when you are near electrical blasting caps, in a blasting area, or in areas posted: "Turn off two-way radio." Obey all signs and instructions.

## ***Operational Cautions***

### ***Antennas***

**Do not use any portable phone that has a damaged antenna.** If a damaged antenna comes into contact with your skin, a minor burn can result.

### ***Batteries***

All batteries can cause property damage and/or bodily injury such as burns if a conductive material such as jewelry, keys, or beaded chains touches exposed terminals. The conductive material may complete an electrical circuit (short circuit) and become quite hot. Exercise care in handling any charged battery, particularly when placing it inside a pocket, purse, or other container with metal objects.

ITC01-101



# Getting Started

---

## What's in the Box?

Your wireless phone typically comes equipped with a battery and a charger. Other accessory options can customize your phone for maximum performance and portability.

To purchase Motorola Original™ accessories, contact the Motorola Customer Call Center at 1-800-331-6456 in the United States or 1-800-461-4575 in Canada.

## Installing the Battery

You must install and charge the battery to use your phone.



Your phone is designed to be used only with Motorola Original batteries and accessories. We recommend that you store batteries in their protective cases when not in use.

### Do This

- 1 Remove the battery from its protective clear plastic case.
- 2 If necessary, slide down the battery door release latch and lift the door off of the phone.
- 3 Insert the battery, printed arrows first, into the top of the battery compartment and push down.
- 4 Replace the battery door.



# Charging the Battery

New batteries are shipped partially charged. Before you can use your phone, you need to install and charge the battery, as indicated by the following instructions. Some batteries perform best after several full charge/discharge cycles.

## Do This

- 1 Plug the travel charger into your phone with the release tab facing up.




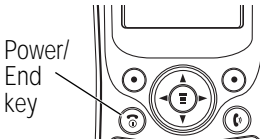

- 2 Plug the other end of the travel charger into the appropriate electrical outlet.
- 3 When your phone indicates that the battery is fully charged (**Charge Complete**), press the release tab and remove the travel charger.

## Notes:


 

- When you charge the battery, the battery level indicator in the upper right corner of the display shows how much of the charging process is complete.
- If the battery charge drops too low, your phone may power off during a call, even when the charger is connected. To avoid this possibility, do not make calls while charging the battery.



# Turning Your Phone On

Do This	To
1 Press and hold 	turn on your phone
 Power/ End key	
2 If necessary, enter your four-digit unlock code and press <b>OK</b> (  )	unlock your phone  The unlock code is originally set to 1234. Your service provider may change this number before you receive your phone.

## Making a Call

Press	To
1 keypad keys	dial the phone number  <b>Tip:</b> If you make a mistake, press <b>DELETE</b> (  ) to delete the last digit, or press and hold <b>DELETE</b> (  ) to clear all digits.
2 	make the call



## Ending a Call

Press



To

end the call

## Answering a Call

When you receive a call, your phone rings and/or vibrates and displays an incoming call message.

Press



To

answer the call

**Tip:** If your phone is locked, you must unlock it to answer the call.

## Seeing Your Phone Number

Press



To


see your phone number





# About Your Phone

See page 1 for a basic phone diagram.

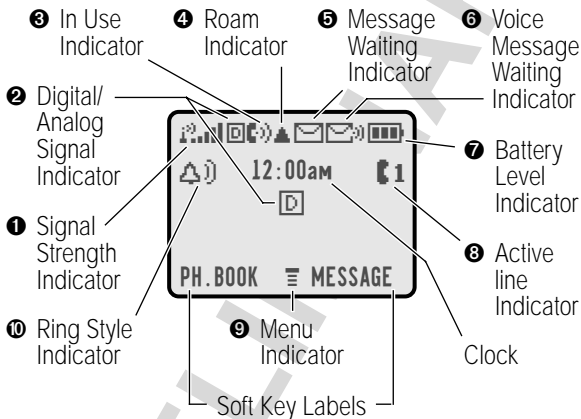
## Using the Display





The *idle display* is the standard display that you see when you are *not* on a call or using the menu.

Labels at the bottom corners of the display show the current soft key functions. A  (menu) indicator at the bottom center of the display indicates that you can press  to enter the main menu.



**1 Signal Strength Indicator** Vertical bars show the strength of the network connection. You cannot make or receive calls when the  (no signal) indicator is displayed.



**2 Digital () or Analog () Signal Indicator** Shows whether you are receiving a digital or analog signal.

**3 In Use Indicator** Shows that a call is in progress.



**4 Roam Indicator** Shows that your phone is seeking or using another network system outside your home network.



**5 Message Waiting Indicator** Appears when you receive a text message.




**6 Voice Message Waiting Indicator** Appears when you receive a voicemail message.

**7 Battery Level Indicator** Vertical bars show the battery charge level. Recharge the battery when you see **Low Battery** and hear the low battery alert.




**8 Active Line Indicator** Shows the current active phone line.


**9 Menu Indicator** Indicates that you can press  to enter the main menu or open a feature sub-menu.







**Ⓜ Ring Style Indicator** Shows the ring style setting.

 = loud ring



 = soft ring

 = vibrate

 = ring and vibrate


 = silent

## Zooming In and Out


Press and release , then press and hold  to zoom in and out on the display. Zoom in to increase text size, zoom out to display more information.


You can also zoom in and out from the menu. See page 54.

## Adjusting Volume

You can adjust your phone's earpiece and ringer volume by using the  key:

When	Adjust
during a call	earpiece speaker volume
phone is idle	ringer volume

Press  (up-arrow) to increase volume

Press  (down-arrow) to decrease volume.



# Battery Use

Battery performance depends on many factors, including your wireless carrier's network configuration; signal strength; the temperature at which you operate your phone; the features and/or settings you select and use; and your voice, data, and other application usage patterns.

## Battery Care

**Caution:** To prevent injuries or burns, do not allow metal objects to contact or short-circuit the battery terminals.

To maximize your battery's performance:

- Always use Motorola Original™ batteries and battery chargers. The phone warranty does not cover damage caused from using non-Motorola batteries and/or battery chargers.
- New batteries or batteries that have been stored for long periods of time may require a longer charge time.
- Maintain the battery at or near room temperature when charging.
- Do not expose batteries to temperatures below -10°C (14°F) or above 45°C (113°F). Always take your phone with you when you leave your vehicle.
- When you do not intend to use a battery for a while, store it uncharged in a cool, dark, dry place, such as a refrigerator.



- Over extended periods of time, batteries gradually wear down and require longer charging times. This is normal. If you charge your battery regularly and notice a decrease in talk time or an increase in charging time, then it is probably time to purchase a new battery.



The rechargeable batteries that power this product must be disposed of properly and may need to be recycled. Refer to your battery's label for battery type. Contact your local recycling center for proper disposal methods. Never dispose of batteries in a fire because they may explode.

## ***Extending Battery Life***

- **Turn off your display backlight**

The backlight uses power. To turn it off, see page 54.

- **Avoid keypad-intense functions**

Activities that require intensive keystroke use (such as playing a game or using messaging) reduce your phone's talk and standby time. Lock the keypad when storing the phone in your purse or pocket to avoid unnecessary keypad and backlight activations. See page 132.





# Making and Answering Calls



For basic instructions on how to make a call, end a call, and answer a call, see pages 20–21.

## Redialing a Number

If you hear an ordinary busy signal:

Press	To
1 	hang up
2 	redial the busy number

## Using Caller ID



*Calling line identification* (caller ID) displays the phone number for incoming calls.

The phone displays the caller's name when the name is stored in your phonebook, or

**Incoming Call** when caller ID information is not available.

## Using Talk Secure


When *talk secure* is activated, your phone always tries to use a high-security connection to prevent others from intercepting your calls. To activate talk secure, see page 133.



If a high-security connection is not available, your phone uses a standard connection and displays **Line Not Secure**.

This message does not appear when caller ID or other information is displayed.

## Returning Unanswered Calls

Your phone keeps a record of your unanswered calls, and displays:

- the  (missed call) indicator
- **X Missed Calls Y Unknown**, where **X** is the total number of missed calls and **Y** is the number of missed calls with no caller ID information


Press	To
1 VIEW (⊙)	see the received calls list
2 	select a call to return
3 	make the call

## Calling an Emergency Number

Your service provider programs one or more emergency phone numbers, such as 911, that you can call under any circumstances, even when your phone is locked.

**Note:** Emergency numbers vary by country. Your phone's preprogrammed emergency number(s) may not work in all locations, and sometimes an emergency call cannot be placed due to network, environmental, or interference issues.



Press	To
1 keypad keys	dial the emergency number
2 	call the emergency number

## Turning Off a Call Alert

You can turn off your phone's incoming call alert before answering the call.

Press	To
either volume key	turn off the alert

## Canceling an Incoming Call

While the phone is ringing or vibrating:



Press	To
 or <b>IGNORE</b> (  )	cancel the incoming call



Depending on your phone settings and/or service subscription, the call may be forwarded to another number, or the caller may hear a busy signal.

## Calling With Speed Dial

Each entry you store in your phonebook is assigned a unique *speed dial* number. To speed dial a phonebook entry:

Press	To
1 keypad keys	enter the speed dial number for the entry you want to call
2 	submit the number
3 	call the entry

## Calling With One-Touch Dial


To call phonebook entries 1 through 9, just press and hold the one-digit speed dial number for one second.



We recommend that you reserve phonebook entry 1 (speed dial number 1) for storing and dialing your voicemail number. In many cases, your service provider has already done this for you. If necessary, see page 64 to store your voicemail number for one-touch dial access.

## Calling a Number In a Text Message





To call a phone number embedded in a text message that you receive:

Press	To
1 	open the <b>Text Msg Menu</b>



Press	To
2 	scroll to <b>Call Back</b>
3 <b>SELECT</b> 	call the number

## Additional Calling Features

While dialing (with digits visible in the display), open the **Dialing Menu** to perform the following tasks:

Press	To
 > <b>Attach Number</b>	attach a number from the phonebook or recent call lists
 > <b>Send Message</b>	open a new text message with the number in the <b>To</b> field

You can also call a number using these features:

Do This	To Call
Press  , scroll to and select <b>Voice Dial</b> , and say the entry's name within two seconds	a phonebook entry using voice dial  To record a voice name, see page 68.
Press  > <b>Recent Calls</b> > <b>Received Calls</b> or <b>Dialed Calls</b> > <i>entry to call</i>	a missed call, or a recent received or dialed call







# Using Features While On a Call

## Using Call Waiting






When you are on a call, an alert tone sounds to indicate that you have received a second call.

Press	To
1 	answer the new call
2 	switch back to the first call

## Making a Three-Way Call



During a call, you can call and connect a third party for a three-way call. You cannot do this if you already have a call on hold.

Press	To
1 keypad keys	dial the third party's number
2 	call the number
3 	connect the two calls
4 	end the entire call

## Additional On-Call Features

Press	To
<b>MUTE</b> (⊙) (if available) or ☰ > <b>Mute</b>	mute the call
<b>SPEAKER</b> (⊙) (if available) or ☰ > <b>Spkrphone On</b>	activate an attached speakerphone
☰ > <b>My Tel. Number</b>	see your phone number
☰ > <b>Send Tones</b>	send a number to the network as DTMF tones, for credit card or password calls  To activate DTMF tones, see the “DTMF” option on page 55.
☰ > <b>Received Calls or Dialed Calls</b>	view recent received or dialed call numbers
☰ > <b>Messages</b>	view or send messages
☰ > <b>Datebook</b>	view datebook entries
☰ > <b>Other Information</b>	view phone specifications
☰ > <b>TTY Setup</b>	switch to TTY mode  For more information, see “Switch to TTY Mode During a Voice Call” on page 119.



# Using the Menu

## Navigating to a Feature

Use these keys to move through the menu system:

 
### Left Soft Key

Perform the function shown in the lower left corner of the display (usually **EXIT** or **BACK**).

### Right Soft Key

Perform the function shown in the lower right corner of the display (usually **SELECT** the highlighted menu item).

### Menu Key

Enter the menu system, or open a sub-menu, when  appears in the bottom center of the display.

### Navigation Key


Scroll through lists, adjust volume.

### Power/End Key

Exit the menu system without making changes, return to the idle display.

### and


Cycle through and set the value of the highlighted menu item.

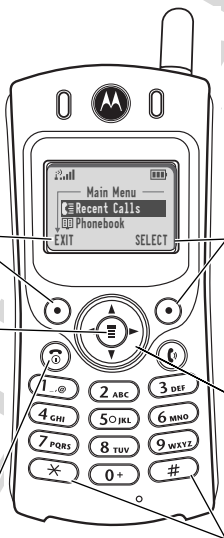

## Selecting a Feature Option

Some features require you to select an item from a list:

Press **BACK** (⊙) to go back to the previous screen.

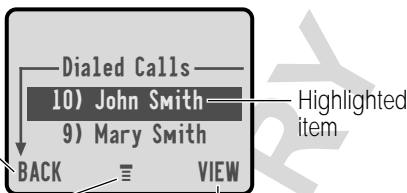

Press (≡) to open the sub-menu.

Press **VIEW** (⊙) to view details of the highlighted item.


- Press (⊙) to scroll up or down to highlight the item you want.
- In a numbered list, press a number key to highlight the item.
- In an alphabetized list, press a key multiple times to cycle through the letters on the key and highlight the closest matching list item.



# Entering Feature Information

Some features require you to enter information:


 
 

Press  to scroll down to additional items.

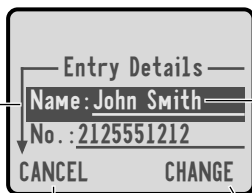

Highlighted item

Press **CANCEL** () to exit without making changes. **DONE** () appears when you enter or edit information.

Press **CHANGE** () to edit the information.

- 
- Enter numbers or text with the keypad.
  - When an item has a list of possible values, press  or  to scroll through and select a value.
  - When an item has a list of possible numeric values, press a number key to set the value.
  - If you enter or edit information and do not want to save your changes, press  to exit without saving.

The message center lets you compose and send text messages. A *flashing cursor* shows where text will appear:

*Flashing cursor* indicates insertion point.



Press **BROWSE** (⊙) to view and insert a name, number, or message from previously stored information.

Press **CANCEL** (⊙) to exit without making changes.

Press (☰) to open the sub-menu.

When you enter text, the flashing cursor changes to a *block cursor*, and the soft key functions change:

*Block cursor* indicates current highlighted character.



Press **OK** (⊙) to accept and store the text.

After two seconds, the block cursor reverts to a flashing cursor and moves to the next position.

Press **DELETE** (⊙) to delete the character to the left of the insertion point.




# Entering Text

---

Multiple text entry methods make it easy for you to enter names, numbers, and messages on your phone.

## Choosing a Text Mode


Press  from any text entry screen to select a text mode:


- |                   |   |
|-------------------|---|
| <b>iTAP</b>       | Let the phone predict each word as you enter it. See page 43.                         |
| <b>Tap Method</b> | Enter letters, numbers, and symbols by pressing a key one or more times. See page 39. |
| <b>Numeric</b>    | Enter numbers only.   |
| <b>Symbol</b>     | Enter symbols only. See page 42.  |
| <b>Browse</b>     | Browse your phonebook or recent call lists to select a name or number.                |

**Note:** The text mode you select remains active until you change it by selecting another mode.

## Using Tap Method

This is the standard mode for entering text on your phone.

Press  from any text entry screen and select the **Tap Method** menu option.

Do This	To
1 Press a number key one or more times	select a letter, number, or symbol shown in the “Character Chart” on page 41
2 Continue pressing number keys	enter the remaining characters
3 Press <b>OK</b> (  )	store the text when you are finished




## General Text Entry Rules

Press a number key repeatedly to cycle through its characters. See “Character Chart” on page 41.


Press a number key as many times as necessary to enter the desired character at flashing cursor location.

Move flashing cursor to the left or right in text message.

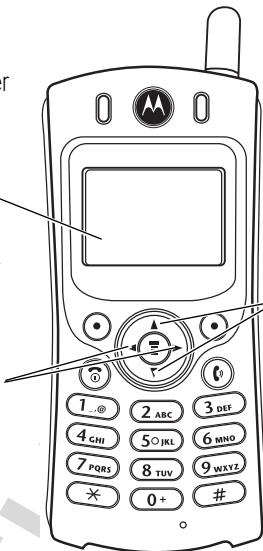


Change letter in block cursor to uppercase or lowercase.

Press and hold a number key to cycle between **tap method** and **numeric mode**.


 
 
 

 
 
 
 
 
- If you do not press a key for two seconds, the character in the block cursor is accepted, and the cursor moves to the next position.
- The first character of every sentence is capitalized. (Press  down to force the character to lowercase while it is highlighted by the block cursor).

- Your phone may support multiple languages. The current language setting determines whether a new message begins on the left or right side of the display.

You can switch languages within a message. Press  to select the text mode and language you want to use.


## Character Chart


 

Use this chart as a guide for entering spaces, letters, numbers, and symbols with the tap method.

	space . 1 ? ! , @ _ & ~ : ; " - ( ) ' ` ¡ ¨ % £ \$ ¥ ¤ €
	a b c 2 á à â ã ç
	d e f 3 é è ê ë
	g h i 4 í î ï
	j k l 5
	m n o 6 ñ ó ô õ
	p q r s 7
	t u v 8 ð ü ú ù û
	w x y z 9
	+ - 0 x * / \ [ ] = > < # §

**Note:** This chart may not reflect the exact character set available on your phone.


 
 
# Using Symbol Mode

Your phone provides an alternate way to enter symbol characters in a message. Press  from any text entry screen and select the **Symbol** menu option.

Do This	To
<b>1</b> Press a number key one time	display its symbol options at the bottom of the display  See "Symbol Chart" on page 42.
<b>2</b> Press  or   or  Press the number key multiple times	highlight the symbol you want
<b>3</b> Press <b>SELECT</b> (  )	enter the symbol at the flashing cursor location

## Symbol Chart

Use this chart as a guide for entering characters in symbol mode.

	space . ? ! , @ _ & ~ : ; " - ( ) ' ` ¡ ¢ % £ \$ ¥ ¤ €
	@ _ \ α β
	/ : ; δ φ

4 GHI	" & ' γ
5 OJL	( ) [ ] { } λ
6 MNO	ı i ~ ω
7 PQRS	< > = π β σ
8 TUV	\$ £ ¥ ¤ € θ
9 WXYZ	# % * ξ ψ
0 +	+ - x * / = > < # §

## Using iTAP™ Software Predictive Text Entry Method

iTAP™ software provides a predictive text entry method that lets you enter a word using one keypress per letter.

Press  from any text entry screen and select the iTAP menu option.

### Enter Words

#### Do This

- 1 Press a number key one time

#### To

enter the first letter of the word


The letters associated with the key are shown at the bottom of the display.



Do This	To
<p><b>2</b> Press number keys (one per letter)</p>	<p>enter the rest of the word</p> <p>Alternative words and letter combinations are shown at the bottom of the display. The word choices are updated with each keypress.</p>
<p><b>3</b> Press <b>*</b> or <b>#</b></p>	<p>highlight the word you want</p>
<p><b>4</b> Press <b>SELECT</b> (⊙)</p>	<p>enter the word at the flashing cursor location</p> <p>A space is automatically inserted after the word.</p>

For example, to spell the word “act,” press **2 ABC** **2 ABC** **8 TVV**.  
 The display shows:

Flashing cursor indicates insertion point.

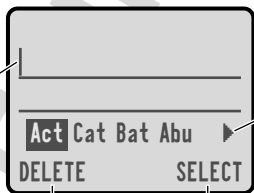

Press **⊕** to scroll and see additional word choices.

Press **DELETE** (⊙) to clear the last letter.

Press **SELECT** (⊙) to insert the highlighted word.

## Enter Novel Words

You may enter a word that is not in the iTAP software dictionary. If the word you want is not displayed:


Do This	To
1 Press <b>DELETE</b> (⊙) one or more times	delete letters until you see a letter combination that matches the start of the word
2 Press (⊗) or (#)	highlight the letter or letter combination
3 Press <b>SELECT</b> (⊙), then press (⊗)	shift the text entry cursor to the left and “lock” the selected word portion
4 Continue to enter letters and highlight letter combinations	spell the word

## Punctuation


Press	To
(0.) or (1.)	enter punctuation or other characters as shown in the “Character Chart” on page 41

## Capitalization

The first word of a sentence is automatically capitalized, with following words in lowercase.



Press	To
	change the words to initial character capitalized, all uppercase characters, or all lowercase characters

## Enter Numbers

Do This	To
1 Enter the first digit and then highlight it	put the iTAP software in number entry mode
2 Press number keys	add digits to the number
3 Press <b>SELECT</b> (  )	enter the number at the flashing cursor location

## Delete Letters and Words

Place the cursor to the right of the text you want to delete, and then do the following:

Do This	To
Press <b>DELETE</b> (  )	delete one letter at a time
Hold <b>DELETE</b> (  )	delete the entire message

# Menu Feature Descriptions

---

This chapter describes all of your phone's features in order of the menu map shown on pages 3–4.

## Main Menu

### RECENT CALLS

#### **Received Calls**

☰ > Recent Calls  
> Received Calls

View a list of recently received calls. See page 58.

#### **Dialed Calls**

☰ > Recent Calls  
> Dialed Calls

View a list of recently dialed calls. See page 58.

#### **Notepad**

☰ > Recent Calls  
> Notepad

Call or store the last number entered on the keypad. See page 60.


#### **Call Times**

☰ > Recent Calls  
> Call Times

View call timers that track time spent on your last call, dialed calls, received calls, all calls since reset, and all calls total. See page 60.





**PHONEBOOK**  > **Phonebook**

Store names and numbers as entries in your phonebook, then call numbers by selecting them from the phonebook list. See page 63.

**VOICE DIAL**  > **Voice Dial**

You can record a voice name for a new or existing phonebook entry. A voice name lets you call the phonebook entry using voice dial

**DATEBOOK**  > **Datebook**

Use the datebook calendar to schedule and review your appointments. See page 74.

**RADIO**  > **Radio**

Listen to FM radio stations with the optional Motorola Original™ FM Stereo Radio Headset accessory. This menu feature is displayed only when the FM Stereo Radio Headset is plugged into the accessory connector port on your phone. See page 79.

**MESSAGES**  > **Messages**

Adjust message settings, view and manage the various types of messages your phone can receive and/or send:

**Create Msg**

Create new text messages. See page 89.

**VoiceMail**

Listen to your recorded voice messages. See page 82.

<b>Text Msgs</b>	Read and manage text messages. See page 84.
<b>Quick Notes</b>	Select and send pre-written messages from the quick notes list. See page 91.
<b>Outbox</b>	View all outgoing text messages, delivered and undelivered.
<b>Drafts</b>	Store and edit text messages that you have written but not sent.

## RING STYLES

### **Style**

☰ > Ring Styles  
> Style

Select the ring style your phone uses to notify you of incoming calls, messages, or other events. See page 93.

### **Style Detail**

☰ > Ring Styles  
> Style Detail

Change details about the current ring style. *Style* represents the name of the ring style. See page 93.

### **My Tones**

☰ > Ring Styles  
> My Tones

Create custom alert tones for your phone. See page 95.

## SHORTCUTS

☰ > Shortcuts

Create keypad shortcuts to menu features. See page 104.



**WEB SESSIONS**☰ > **Web Sessions**

Access Web pages and run Web-based applications. The micro-browser delivers WAP (Wireless Application Protocol) pages from your service provider directly to your phone. See page 107.

**CALCULATOR**☰ > **Calculator**

Use your phone as a calculator or currency converter. See page 109.

**GAMES**☰ > **Games**

Play games on your phone. See page 112.

## Settings Menu

**PHONE STATUS*****My Tel. Number***
 ☰ > **Settings**  
 > **Phone Status**  
 > **My Tel. Number**

View, enter, and edit information about your name and phone number.

***Active Line***
 ☰ > **Settings**  
 > **Phone Status**  
 > **Active Line**

Change the active phone line to send and receive calls from either of the available numbers.

***Battery Meter***
 ☰ > **Settings**  
 > **Phone Status**  
 > **Battery Meter**

View a detailed battery charge meter.



## Other Information

- > Settings
- > Phone Status
- > Other Information



View your phone's feature specifications (if available from the service provider).

## CONNECTION

Connect your phone to a computer or hand-held device to send and receive data calls on the connected device. See page 123.



## Incoming Call

- > Settings
- > Connection
- > Incoming Call

Specify the format for the next incoming call. You can select **Data In Only** or **Normal**. See page 126.

## IN-CALL SETUP

Set the features that are active during a call, such as the in-call timer and call answering options.

## In-Call Timer

- > Settings
- > In-Call Setup
- > In-Call Timer

Adjust call timer **Display** and **Beep** settings. You can set your timer to beep at a selected interval during your calls. (60 seconds is the default.) You can also turn on or off a display timer during calls as follows:

**Time**

Display the elapsed time for the current call.

**Off**

No in-call timer display.



- Answer Options**      ☰ > Settings  
> In-Call Setup  
> Answer Options

Turn call answering options on or off:

- Multi-Key**      Answer by pressing any key.

## SECURITY

- Phone Lock**      ☰ > Settings > Security  
> Phone Lock

Lock and unlock your phone. See page 131.

- Lock Keypad**      ☰ > Settings > Security  
> Lock Keypad

View instructions on how to lock and unlock your keypad. See page 132.

- Lock Application**      ☰ > Settings > Security  
> Lock Application

Lock and unlock specific phone applications (such as phonebook or datebook). When an application is locked, users must enter the unlock code to use the application.

- Talk Secure**      ☰ > Settings > Security  
> Talk Secure

Activate a secure connection to prevent others from intercepting your calls. See pages 27 and 133.

- Restrict Calls**      ☰ > Settings > Security  
> Restrict Calls

Restrict incoming and outgoing calls. See page 132.



## **New Passwords**

☰ > Settings > Security  
> New Passwords

Change your unlock code (originally set to 1234) or your security code (originally set to 000000). See page 129.

## **OTHER SETTINGS**

### **Personalize**

☰ > Settings  
> Other Settings  
> Personalize

Set several personal phone options:

#### **Main Menu**

Change the order of the main menu. See page 117.

#### **Keys**

Change the functions of the soft keys in the idle display. See page 117.

#### **Greeting**

Change the text displayed when you turn on your phone.



### **Initial Setup**

☰ > Settings  
> Other Settings  
> Initial Setup

Set many basic phone options:

#### **Time and Date**

Set the phone's time and date.



**Backlight** Set the amount of time that the display backlight remains on, or turn off the backlight to conserve battery power.

**Zoom** Switch between three lines (**Zoom Out**) and two lines (**Zoom In**) of display text.

**TTY Setup** Set your phone to operate in one of three TTY modes, or return to normal **Voice** mode. See page 118.



**Scroll** Force the cursor to stop or wrap around when it reaches the top or bottom of a list in the display.

**Animation** Turn animation off (to conserve battery power) or on. Animation makes your phone's menus move smoothly as you scroll up and down.

**Language** Set the language for phone menus.

**Battery Save** Adjust the phone's power usage characteristics to conserve power.



## Contrast

Adjust the contrast setting for your display.

## DTMF

Your phone can send a number to the network as dual tone multi-frequency (DTMF) tones. DTMF tones are used to communicate with automated systems that require you to enter a number such as a code, password, or credit card number. Use this option to set DTMF tones on or off.

## Master Reset

Reset all options back to their original factory settings *except* for the unlock code, security code, and lifetime timer.





## Master Clear

Reset all options back to their original factory settings *except* for the unlock code, security code, and lifetime timer, *and* clear all user settings and entries.

**Note:** This option *erases all user-entered information* stored in your phone's memory, including phonebook and datebook entries. Once you erase the information, it cannot be recovered.

## Network

- Ⓜ > Settings
- > Other Settings
- > Network



View and adjust your phone's network settings.

Your service provider registers your phone to a network. You can view information about the current network, change how your phone searches for a network, and activate alerts that indicate when a call is dropped or network registration changes.



## Car Settings

- ⌵ > Settings
- > Other Settings
- > Car Settings



Adjust hands-free car kit settings.

You can set your phone to route calls directly to the car kit when it detects a connection, and automatically answer calls after two rings. See page 120.

**Note:** The use of wireless devices and their accessories may be prohibited or restricted in certain areas. Always obey the laws and regulations on the use of these products.

## Headset

- ⌵ > Settings
- > Other Settings
- > Headset



Set your phone to automatically answer calls after two rings when connected to a headset. See page 120.



# Recent Calls

---



## Viewing Received Calls or Dialed Calls




Your phone keeps a list of the calls you recently received and dialed, even if the calls did not connect. The lists are sorted from newest to oldest entries. The oldest entries are deleted as new ones are added.

**Shortcut:** Press to go directly to the dialed calls list from the idle display.

Find the Feature

> Recent Calls

Press	To
1	scroll to <b>Received Calls</b> or <b>Dialed Calls</b>
2 <b>SELECT</b> (	select the list
3	scroll to an entry
	<b>Note:</b> ✓ means the call connected.

Press	To
4 	call the entry's number
or	
VIEW 	view entry details
or	
	open the <b>Last Calls Menu</b> to perform other procedures as described in the following list

The **Last Calls Menu** includes the following options:

Option	Description
Store	Create a phonebook entry with the number in the <b>No.</b> field.
Delete	Delete the entry.
Delete All	Delete all entries in the list.
Send Message	Open a new text message with the number in the <b>To</b> field.
Add Digits	Add digits after the number.
Attach Number	Attach a number from the phonebook or recent call lists, after the highlighted number.
Send Tones	Send the number to the network as DTMF tones, for credit card or password calls.



## Using the Notepad

Your phone stores the most recent string of digits entered on the keypad in a temporary memory location called the *notepad*. This can be a phone number that you called, or a number that you entered but did not call. To retrieve the number stored in the notepad:

Find the Feature

☰ > Recent Calls  
> Notepad

**Press**

**To**

⓪

call the number

or

☰

open the **Dialing Menu** to attach a number or insert a special character

or

STORE (⓪)

create a phonebook entry with the number in the **No.** field

## Viewing and Resetting Call Timers

*Network connection time* is the elapsed time from the moment you connect to your service provider's network to the moment you end the call by pressing ⓪. This time includes busy signals and ringing.

The amount of network connection time you track on your resettable timer may not equal the amount of time for which you are billed by your service provider. For billing information, please contact your service provider directly.



You can view the following network connection times:


 
Timer	Description
Last Call	Time spent on last dialed or received call. You cannot reset this timer.
Dialed Calls	Time spent on dialed calls since the last time you reset this timer.
Received Calls	Time spent on received calls since the last time you reset this timer.
All Calls	Time spent on dialed and received calls since the last time you reset this timer.
Lifetime	Time spent on all calls on this phone. You cannot reset this timer.





To view a call timer:

Find the Feature

☰ > Recent Calls  
> Call Times

Press	To
1 	scroll to the timer you want\
2 <b>SELECT</b> (  )	view the recorded time

To reset the call timer:

Press	To
1 <b>RESET</b> (  )	reset the time (if available)
2 <b>YES</b> (  )	confirm the reset








# Phonebook

You can store names and phone numbers or email addresses in your phone's electronic phonebook.

To see the names in your phonebook, press **☰** > **Phonebook** from the idle display. Scroll to a name and press **VIEW** (**⊙**) to view details of the phonebook entry as shown below.

## Viewing Entry Details

**Type** indicator identifies number type:

-  Work
-  Home
-  Main
-  Mobile
-  Fax
-  Pager
-  Email

**Voice Name** indicator indicates a recorded voice name

Entry's **Name**


Entry's **phone number** or **email address**

Entry's speed dial number

Return to list

Press **☰** to open the **Phonebook Menu**

Edit entry

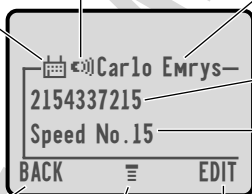

**Note:** When you set a distinctive ringer alert for an entry, the **Ringer ID** setting appears below the speed dial number.



# Storing a Phonebook Entry

A phone number or email address is required for a phonebook entry. All other information is optional.

**Shortcut:** Enter a phone number in the idle display, then press **STORE** (⊙) to create a phonebook entry with the number in the **No.** field. Go directly to step 3 to continue.

## Enter Information

Find the Feature




☰ > Phonebook

☰ > New

Press	To
1 ⊙	scroll to <b>Phone Number</b> or <b>Email Address</b>
2 <b>SELECT</b> (⊙)	select the entry type
3 <b>CHANGE</b> (⊙)	select <b>Name</b>
4 keypad keys	enter a name for the entry
5 <b>OK</b> (⊙)	store the name
6 <b>CHANGE</b> (⊙)	select <b>No.</b> or <b>Email</b>
7 keypad keys	enter the phone number or email address
	<b>Tip:</b> You can store a PIN code with the phone number. See page 66.
8 <b>OK</b> (⊙)	store the phone number or email address

Press	To
9 CHANGE (⊙)	select <b>Type</b>
	<b>Note:</b> This option is not available for email entries.
10 Ⓞ	scroll to the number type
11 SELECT (⊙)	select the number type
12 RECORD (⊙)	record a voice name for the entry, if desired (see page 68)
or	
Go to step 13 if you do not want a voice name	
13 Ⓞ	scroll to <b>Speed No.</b>
	The next available speed dial number is assigned to a new phonebook entry.
14 CHANGE (⊙)	select <b>Speed No.</b> if you want to change it
15 keypad keys	enter a different speed dial number, if desired
16 OK (⊙)	store the speed dial number
17 CHANGE (⊙)	select <b>Ringer ID</b> if you want to assign a distinctive ringer alert for the phone number
	Your phone uses the alert to notify you when you receive a call from this phone number. See page 94.




Press	To
18 	scroll to the alert you want
19 SELECT 	store the ringer ID alert
20 SELECT 	select <b>MORE</b> if you want to create another entry under the same <b>Name</b>

You must use a different **Type** identifier for each number.



## Complete Phonebook Entry

When you finish entering information for a phonebook entry:

Press	To
DONE 	store the entry

## Storing a PIN Code With the Phone Number

You can store a PIN code with the phone number for calls that require additional digits (for example, to make a calling card call, or to retrieve voicemail or answering machine messages). Insert one or more of the following characters in the dialing sequence to ensure that the number dials and connects properly:



Press	To
> Insert Pause	insert a <b>p</b> (pause) character  Your phone dials the preceding digits, waits for the call to connect, then sends the remaining digit(s).
> Insert Wait	insert a <b>w</b> (wait) character  Your phone dials the preceding digits, waits for the call to connect, then prompts you for confirmation before it sends the remaining digit(s).
> Insert 'n'	insert an <b>n</b> (number) character  Your phone prompts you for a number before dialing the call. The number you enter is inserted into the dialing sequence in place of the <b>n</b> character

**Note:** You can store a maximum of 32 digits per number. Each character counts as one digit.









# Recording a Voice Name For a Phonebook Entry

You can record a voice name for a new or existing phonebook entry. A voice name lets you call the phonebook entry using voice dial (see page 69).

**Tip:** Make your recording in a quiet location. Hold the phone about four inches (10 centimeters) from your mouth, and speak directly into the phone in a normal tone of voice.

Find the Feature

 > Phonebook

Do This	To
1 Press 	scroll to the entry
2 Press <b>VIEW</b> (  )	view entry details
3 Press <b>EDIT</b> (  )	edit the entry
4 Press 	scroll to <b>Voice Name</b>
5 Press <b>RECORD</b> (  )	begin recording
6 Press and release <b>RECORD</b> (  ) and say the entry's name (in two seconds)	record the voice name
7 Press and release <b>RECORD</b> (  ) and say the name	confirm the voice name
8 Press <b>DONE</b> (  )	store the voice name



# Dialing a Phonebook Entry

Use one of the following procedures to call a number (or send a text message to an email address) stored in your phonebook.


## Phonebook List

Find the Feature

 > Phonebook

Press	To
1 keypad key letter	jump to entries that begin with that letter (optional)
2 	scroll to the entry
3 	make the call

## Voice Dial

Do This	To
Press <b>V. Dial</b> (  ) and say the entry's name within two seconds)	make the call


 
 
To speed dial a phonebook entry, see page 30. To call an entry with one-touch dial, see page 30.



# Editing a Phonebook Entry

Find the Feature

 > Phonebook



 
 
 
Press	To
1 	scroll to the entry
2 <b>VIEW</b> (  )	view entry details
3 <b>EDIT</b> (  )	edit the entry

Edit the entry as described on pages 64-66.

# Deleting a Phonebook Entry

Find the Feature

 > Phonebook







Press	To
1 	scroll to the entry
2 	open the <b>Phonebook Menu</b>
3 	scroll to <b>Delete</b>
4 <b>SELECT</b> (  )	select <b>Delete</b>
5 <b>YES</b> (  )	confirm the deletion



## Setting the Primary Number for a Phonebook Entry

When you enter multiple phone numbers for the same name, you can set one as the primary number.

Find the Feature  > Phonebook



Press	To
1 	scroll to the entry
2 	open the Phonebook Menu
3 	scroll to Set Primary
4 SELECT (  )	select Set Primary
5 	scroll to the number you want to set as the primary number
6 SELECT (  )	set the primary number

Depending on how the phonebook list is sorted, the primary number is listed first, or is the only number that appears for a phonebook entry. See page 72.

## Checking Phonebook Capacity

You can see how much memory space remains for storing phonebook and datebook entries on your phone.

Find the Feature  > Phonebook

Press	To
1 	open the Phonebook Menu
2 	scroll to Ph Book Capacity





Press	To
3 SELECT (⊙)	select Ph Book Capacity
	Your phone displays the phone memory meter.

## Sorting the Phonebook List

You can sort your phonebook list by speed dial number (the standard), name, email address, or voice name.

**Tip:** The voice name sort is identical to the name sort, except that entries with voice name tags appear first.

Find the Feature      ☰ > Phonebook

Press	To
1 ☰	open the Phonebook Menu
2 ⬆	scroll to Setup
3 SELECT (⊙)	select Setup
4 ⬆	scroll to Sort by
5 CHANGE (⊙)	select Sort by
6 ⬆	scroll to Name, Speed No., Voice Name, or Email
7 SELECT (⊙)	select the sort order

If you select Speed No., Voice Name, or Email, the procedure is complete.



If you select **Name**, you must specify whether you want to view all numbers or just the primary number for each name:

Press	To
<b>8</b> CHANGE (⊙)	change view preference
<b>9</b> Ⓞ	scroll to <b>Primary Contacts</b> or <b>All Contacts</b>
<b>10</b> SELECT (⊙)	select the view preference
<b>11</b> DONE (⊙)	set the view preference

To set an entry's primary phone number, see page 71.



# Datebook

The datebook is a calendar that lets you schedule and organize events such as appointments and meetings. You can set the datebook to send a reminder alarm for specific events.

**Note:** You must set the correct time and date on your phone to use the datebook.


To schedule or review datebook events:

Find the Feature

 > **Datebook**


## Week View

The datebook initially displays a calendar for the week. Lines or filled boxes indicate scheduled events.

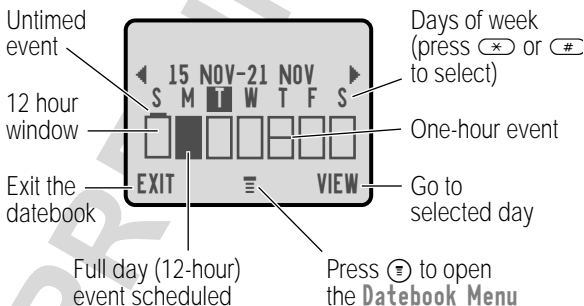


## Day View

Select a day and press **VIEW** (⊙) to see the day's events.

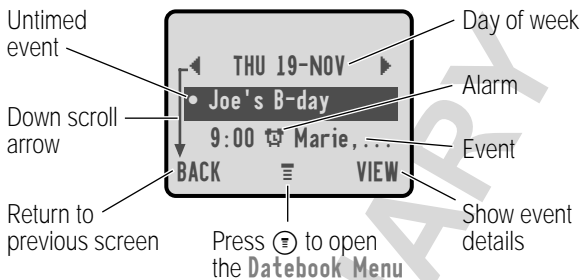

## Event View

Select an event and press **VIEW** (⊙) to see event details.

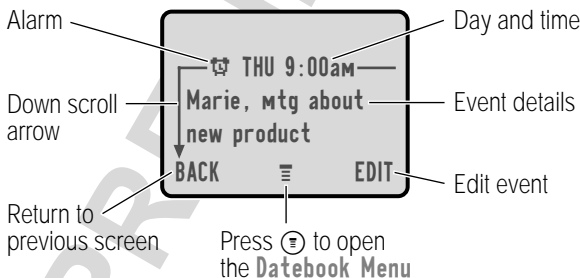

# Adding a Datebook Event

A title is required for a datebook event. All other information is optional.

**Note:** You must create an event to use the reminder alarm.

Find the Feature

☰ > **Datebook** > *day*  
☰ > **New**

Press	To
1 <b>CHANGE</b> (⊙)	select <b>Title</b>
2 keypad keys	enter a title for the event
3 <b>OK</b> (⊙)	store the event title
4 ⊕	scroll to other fields and enter information as necessary
	You can set start time, duration, date, repeat interval, and reminder alarm.
5 <b>DONE</b> (⊙)	store the event






## Changing Event Information

Find the Feature


 










☰ > **Datebook**

Press	To
1 ⊕	scroll to the day
2 <b>VIEW</b> (⊙)	display the day view
3 ⊕	scroll to the event
4 <b>VIEW</b> (⊙)	display the event view
5 <b>EDIT</b> (⊙)	edit the event

Press	To
6 	scroll to the information you want to change
7 <b>CHANGE</b> (  )	edit the information
8 keypad keys	enter new information
9 <b>DONE</b> (  )	store the information

## Copying an Event

Find the Feature  > **Datebook**






 
 
Press	To
1 	scroll to the day
2 <b>VIEW</b> (  )	display the day view
3 	scroll to the event
4 	open the <b>Datebook Menu</b>
5 	scroll to <b>Copy</b>
6 <b>SELECT</b> (  )	copy the event
7 <b>YES</b> (  )	confirm the copy
	Your phone assumes you want to change the date, and displays the <b>Date</b> field.
8 keypad keys	enter date information
9  (  )	move to month, day, and year
10 <b>DONE</b> (  )	save the copy of the event
11 	scroll to and edit event information, if necessary
12 <b>DONE</b> (  )	store the information



# Deleting an Event

Find the Feature

 > **Datebook**

Press	To
1 	scroll to the day
2 <b>VIEW</b> (  )	display the day view
3 	scroll to the event
4 	open the <b>Datebook Menu</b>
5 	scroll to <b>Delete</b>
6 <b>SELECT</b> (  )	select <b>Delete</b>
7 <b>YES</b> (  )	confirm the deletion



# Radio

---



You can use your phone to listen to FM radio stations when the optional Motorola Original™ FM Stereo Radio Headset accessory is plugged into the phone's accessory connector port.

## *Turning the Radio On and Off*

Press	To
Radio (⊙)	turn the radio on and off

---

---

Alternatively, you can use the following procedure:

Press	To
1 ⊙	open the menu
2 ⊙	scroll to Radio
3 On (⊙) or Off (⊙)	turn the radio on or off

---



---

**Note:** The **Radio** menu feature and soft key options appear only when the FM Stereo Radio Headset is plugged into the accessory connector port.






 
## Tuning a Station

Do This	To
Press 	scroll to the next frequency
<b>or</b>	
Press and hold 	scroll to the next available stereo station

---

---



## Storing a Preset

  Do This	To
Press and hold a number key (  to  )	assign its preset number to the tuned station

---

---

## Selecting a Preset

Press	To
a number key (  to  )	tune the station stored at the preset location

---

---

## Sending and Receiving Calls with the Radio On

Your phone rings or vibrates as usual to notify you of an incoming call, message, or other event.

Do This	To
Press <b>IGNORE</b> (⊙)	ignore the call
Press <b>ANSWER</b> (⊙)  <b>or</b> Press the button on the FM Stereo Radio Headset microphone	answer the call  <b>Note:</b> You can use the FM Stereo Radio Headset microphone to converse with the other party during a call

To end the call and resume the FM broadcast:

Do This	To
Press (⊙)	end the call
<b>or</b> Press and hold the button on the FM Stereo Radio Headset microphone	

Turn the radio off before dialing outgoing calls from the phone keypad. You do not have to turn off the radio to dial emergency numbers, or numbers selected from your phonebook or recent call lists.

**Tip:** To dial a recently called number, press (⊙) or the button on the FM Stereo Radio Headset microphone to go to the dialed calls list. For more information, see page 58.



# Messages—Voicemail



You can listen to your voicemail messages by calling your network voicemail phone number. Voicemail messages are stored on the network—not on your phone.

## Storing Your Voicemail Number

Storing your voicemail number on your phone makes it easy for you to listen to new voicemail messages. In many cases, your service provider has already done this for you.

Find the Feature



> Messages




> VoiceMail Setup

Press	To
1 keypad keys	enter your voicemail number
	<b>Tip:</b> You can store your PIN code with the voicemail number. See page 66.
2 OK (⊙)	store the number

Your service provider additionally may store your voicemail number as phonebook entry number 1, so you can use one-touch dial to listen to your voicemail messages. If necessary, see page 64 to store your voicemail number for one-touch dial access.



# Receiving a Voicemail Message

When you receive a voicemail message, your phone displays the  (voice message waiting) indicator and a **New VoiceMail** notification.


Press	To
CALL (☎)	listen to the message

If reminders are turned on, your phone sends a reminder at regular intervals until you close the new message notification, listen to the message, or turn off your phone.

## Listening to a Voicemail Message

Find the Feature  > **Messages** > **VoiceMail**

The phone calls your voicemail number. If no voicemail number is stored, your phone prompts you to store one.

**Shortcut:** If your voicemail number is also stored as phonebook entry number 1, you can press and hold  to listen to your voicemail message(s).



# Messages—Text



Text messages are brief messages that you can send and receive.

Quick notes are pre-written text messages that you can customize and send quickly.

Your text message inbox must be set up *before* you can send and receive messages. The number of messages the inbox can hold depends on the length of the messages, and the number of other messages and drafts stored on your phone.

## Setting Up the Text Message Inbox

**Note:** In many cases, your service provider has already set up the text message inbox for you.

Find the Feature

☰ > Messages

☰ > Text Msg Setup

Press	To
1 CHANGE (⊙)	change the Srvce Center No.
2 keypad keys	enter the phone number for the service that handles your outgoing messages
3 OK (⊙)	store the number
4 CHANGE (⊙)	change the <b>Expire After</b> period



Press	To
5 keypad keys	enter the expiration period—the number of days your network tries to send unreceived messages
6 OK (⊙)	store the expiration period
7 CHANGE (⊙)	change the <b>Cleanup</b> setting
8	scroll to the number of days you want to keep messages in the inbox, or the number of messages you want to keep
9 SELECT (⊙)	select the cleanup setting
10 CHANGE (⊙)	change the <b>SMS Alert</b> setting
11	select whether you want incoming message alerts turned <b>On</b> or <b>Off</b> while you are on a voice call
12 SELECT (⊙)	select the <b>SMS Alert</b> setting
13 DONE (⊙)	save the inbox settings

## Receiving a Text Message

**Note:** Your text message inbox must be set up before you can receive text messages. See page 84.

When you receive a text message, your phone displays the (message waiting) indicator and a **New Message** notification, and gives an alert.

Press	To
READ (⊙)	open the message



If reminders are turned on, your phone sends a reminder at regular intervals until you close the new message notification, read the message, or turn off your phone.

When your phone displays **Memory is Full!**, you must delete some existing messages to receive new messages.











 
 
 

## *Reading, Locking, or Deleting a Text Message*

Messages in the text message inbox are sorted from newest to oldest. The oldest messages are deleted automatically as specified by the inbox cleanup setting (see page 84). If you want to save a message, you should lock it to prevent it from being deleted during cleanup.

Find the Feature

☰ > Messages  
> Text Msgs



Press	To
1 	scroll to the message  The following indicators show message status: <ul style="list-style-type: none"> <li> = unread</li> <li> =unread (with attachment)</li> <li> = unread and urgent</li> <li> = unread and urgent (with attachment)</li> <li> = read</li> <li> = read (with attachment)</li> <li> = read and urgent</li> <li> = read and locked</li> <li> = read and locked (with attachment)</li> </ul>
2 <b>READ</b> 	open the message
3 <b>SAVE</b> 	close the message
<b>or</b>	
<b>REPLY</b> 	compose and send a reply
<b>or</b>	
	open the <b>Text Msg Menu</b> to perform other procedures as described in the following list

The **Text Msg Menu** includes the following options:


Option	Description
<b>Delete</b>	Delete the message.








Option	Description
Call Back	Call the number in the message header or embedded in the message.
Go To	Launch the micro-browser and go to a Web address (URL) embedded in the message.
Forward	Open a copy of the text message, with an empty <b>To</b> field.  <b>Note:</b> You cannot forward sound files embedded in a text message. Only the text is forwarded.
Store Tone	Store the selected sound file.
Play	Play a sound file in the message.
Lock/Unlock	Lock or unlock the message.
Store Number	Create a phonebook entry, with the embedded number in the <b>No.</b> field.
Delete All	Delete all inbox messages.
Create Message	Open a new text message.
Store Address	Create a phonebook entry, with the embedded email address in the <b>Email</b> field.
Setup	Open the text message inbox setup menu.

# Storing Sounds

Text messages that you receive can contain sounds. A sound begins playing when you scroll to or select the  (sound file) indicator in the message.


You can store these embedded sound files on your phone, and use them as alert tones.

Press	To
1 	open the <b>Text Msg Menu</b>
2 	scroll to <b>Store Tone</b>
3 <b>SELECT</b> (  )	select the option
	Your phone adds the sound to the <b>My Tones</b> list.

For more information about using sound files, see pages 94 and 95.

# Sending a Text Message

You can send a text message to one or more recipients. You can manually enter each recipient's phone number or email address, or select numbers/addresses from the phonebook or recent call lists.

**Note:** When you manually enter numbers and/or email addresses, you must insert a space between each entry. Press and hold  until the space appears, then enter the next number or email address.

Find the Feature

 > **Messages**  
> **Create Message**





Press	To
1 CHANGE (⊙)	select <b>To</b>
2 keypad keys	enter one or more phone numbers and/or email addresses
	<b>Tip:</b> Press and hold <b>1.e</b> to insert a space between each number/address that you enter manually.
or	
BROWSE (⊙)	select numbers/addresses from the phonebook or recent call lists
3 OK (⊙)	store the numbers/addresses
4 CHANGE (⊙)	select <b>Msg</b>
5 keypad keys	enter the message
	<b>Note:</b> Message length is limited. As you near the limit, a display counter shows how many characters are left.
6 OK (⊙)	store the message
7 CHANGE (⊙)	select <b>Priority</b>
8	scroll to the priority you want
9 SELECT (⊙)	set the priority
10 CHANGE (⊙)	select <b>Call</b>
11 keypad keys	enter a number for the recipient to call back



Press	To
12 OK (⊙)	store the number
13 CHANGE (⊙)	select <b>Receipt</b>
14	select whether you want the message status to be updated when the recipient opens the message
	<b>Note:</b> Sent messages are stored in your outbox. See page 92.
15 OK (⊙)	store your receipt preference
16 DONE (⊙)	finish the message
17 YES (⊙)	send the message
or	
NO (⊙)	cancel the message or save it in the drafts folder

## Sending a Quick Note Text Message

Quick notes are pre-written messages that you can edit and send quickly (for example, **Meet me at ...**). You can also create and store new quick notes.

Find the Feature

> **Messages**  
> **Quick Notes**

Press	To
1	scroll to the quick note



Press	To
2 READ (⊙)	read the quick note
or	
⊙	open the <b>Quick Note Menu</b> to perform other procedures as described in the following list

The **Quick Note Menu** includes the following options:

Option	Description
New	Create a new quick note.
Edit	Edit the quick note.
Delete	Delete the quick note.
Send	Open a new message with the quick note in the <b>Msg</b> field.

## Viewing the Status of Sent Text Messages

Messages that you send are stored in the outbox.

Find the Feature      ⊙ > **Messages** > **Outbox**


Messages in the outbox are sorted from newest to oldest. The following indicators show message status:


- » = sending in progress
- ✕ = sending failed
- ✉ = delivered
- 📧 = read by recipient


# Ring Styles


---


Your phone rings or vibrates to notify you of an incoming call or other event. This ring or vibration is called an *alert*. You can select one of five different ring styles:

 = loud ring

 = soft ring

 = vibrate

 = ring and vibrate



 = silent

The ring style indicator in the display shows the current ring style (see page 22).

Each ring style contains settings for specific event alerts, ringer ID, and ringer and keypad volume.

## Selecting a Ring Style

Find the Feature  > Ring Styles > Style

Press	To
1 	scroll to the ring style
2 SELECT (  )	select the ring style



# Customizing a Ring Style




 
## Change Style Settings

You can change the alerts that notify you of the following events: incoming calls, text messages, voicemail messages, data calls, fax calls, alarms, and reminders. Any changes you make are saved to the current ring style.

Find the Feature

 > Ring Styles  
> Style Detail

**Note:** *Style* represents the current ring style.

Press	To
1 	scroll to the event
2 CHANGE (  )	select the event
3 	scroll to the alert you want
4 SELECT (  )	select the alert


## Activate and Deactivate Ringer IDs

When ringer IDs are turned on, your phone uses distinctive ringer alerts to notify you of incoming calls or messages from specific entries stored in your phonebook. To assign a ringer ID to a phonebook entry, see page 64.

Find the Feature

 > Ring Styles  
> Style Detail

**Note:** *Style* represents the current ring style.

Press	To
1 	scroll to Ringer IDs

Press	To
2 CHANGE (⊙)	change the ringer IDs setting
3 ⬇️	scroll to On or Off
4 SELECT (⊙)	select the option

## Set Ringer or Keypad Volume

Find the Feature ☰ > Ring Styles  
> Style Detail

**Note:** *Style* represents the current ring style.

Press	To
1 ⬇️	scroll to Ring Volume or Key Volume
2 * or #	scroll to the desired volume
3 OK (⊙)	confirm the new volume

## Creating Alert Tones

You can create and store up to 32 custom alert tones on your phone. The tones appear in the list of available alerts.

### Create a Tone

Find the Feature ☰ > Ring Styles  
> My Tones

Press	To
1 ⬇️	scroll to [New Tone]
2 SELECT (⊙)	select [New Tone]
3 CHANGE (⊙)	select Notes







Press	To
4 keypad keys	enter notes (see page 96)
5 OK (⊙)	store the notes
6 CHANGE (⊙)	select <b>Name</b>
7 keypad keys	enter a name for the tone
8 OK (⊙)	store the name
9 DONE (⊙)	store the tone

## Enter Notes

To create a new tone, use the keypad keys to enter notes. For each note, you must specify the octave (optional), pitch, length, and a length modifier (optional). Press a key multiple times to cycle through its available options and enter the necessary character as described in the following lists.

### Octave

The default setting for a new tone is octave four.

Key	Display	Description
0	*	enter * followed by a number (0 to 8) to set the octave

### Notes and Rests

Key	Display	Description
0	#	sharp
	&	flat

Key	Display	Description
2 ABC	a	note A
	b	note B
	c	note C
3 DEF	d	note D
	e	note E
	f	note F
4 GHI	g	note G
7 PQRS	r	rest

### ***Lengths and Modifiers***

Key	Display	Description
0 +	0	whole note
1 .@	1	half note
2 ABC	2	quarter note
3 DEF	3	eighth note
4 GHI	4	sixteenth note
5 OPL	5	1/32 note
1 .@	.	dotted note
	:	double dotted note
	;	2/3 length note



## Volume Control Characters

Key	Display	Description
	V, +, and -	Set volume level from V1 to V15. Enter V+ or V- to increase or decrease volume one level from current setting.

## Repeat Characters

Key	Display	Description
	(, ), and @	Use parentheses to enclose sequence of notes to be repeated. After the sequence, enter @ followed by digit(s) to set number of repetitions.


## Note Entry Sequence

Do This	Action
1 Set the octave (optional)	Set the octave (*0 to *8) <i>before</i> selecting the note. The octave applies to the note and all following notes until you change it again.
2 Set the note to a sharp or flat, if necessary	Enter a sharp or flat (# or &) <i>before</i> selecting the note.

Do This	Action
3 Select the note (required)	Press a keypad key.
4 Set length (required)	Set the length (0 to 5) <i>after</i> selecting the note. If you do not specify a length, a 2 (quarter note) length is appended to the note.
5 Modify length (optional)	Enter a length modifier ( . , : , or ; ) <i>after</i> you set the length.

 
 
 
 

 
 
 
 
 
 
 
 
 
 
 
 
 
 

 
 

 

 
 


You can perform the following tasks when creating a tone:

Task	Action
Insert a rest	Enter one or more rests (r characters) as needed in the tone sequence. Set the length of the rest (0 to 5) <i>after</i> the rest, just as you would for a note.
Repeat a note sequence	Use ( and ) to group a sequence of notes. After the sequence, enter @ followed by a number to set the number of repetitions.
Adjust volume	Enter V+ or V- to increase or decrease volume one level at the current location in the note sequence.
Listen to a new tone as you compose it	Press  to enter the <b>Compose Menu</b> , and select <b>Play All</b> to play the notes you have entered.

## Example

Press the following keys to create this sequence of notes and rests in octave three: **C** (quarter note), **E flat** (quarter note), **half rest**, and **G** (whole note):





 

Press	To	Display
1      	set octave three	*3
2   	enter note <b>C</b>	c
3    	set length to quarter note	2
4    	enter flat symbol	&
5  	enter note <b>E flat</b>	e
6    	set length to quarter note	2
7 	enter <b>rest</b>	r
8 	set length to half rest	1
9 	enter note <b>G</b>	g
10 	set length to whole note	0

## Play a Tone

Find the Feature

 > Ring Styles  
> My Tones




 



Press	To
1 	scroll to the tone
2 	open the <b>My Tones Menu</b>
3 	scroll to <b>Play</b>
4 <b>SELECT</b> (  )	select <b>Play</b>
5 <b>PLAY</b> (  )	play the tone again
or	
<b>CANCEL</b> (  )	return to my tones list

## Edit a Tone

You cannot edit the predefined alert tones included with your phone. To edit a custom alert tone:

Find the Feature

 > **Ring Styles**  
> **My Tones**

Press	To
1 	scroll to the tone
2 <b>EDIT</b> (  )	open the tone details
3 	scroll to the item you want to edit ( <b>Name</b> or <b>Notes</b> )
4 <b>CHANGE</b> (  )	select the item
5 keypad keys	enter new text or notes
6 <b>OK</b> (  )	store the tone




 
 


## Delete a Tone

You cannot delete the predefined alert tones included with your phone. To delete a custom alert tone:

Find the Feature

☰ > Ring Styles  
> My Tones

Press	To
1 	scroll to the tone
2 	open the My Tones Menu
3 	scroll to Delete
4 SELECT (  )	select Delete
5 YES (  )	confirm the deletion

## Download a Tone

You can download custom alert tones from a text message. See page 89.


 
## Setting Reminders

A reminder is an alert that rings or vibrates at regular intervals to notify you about a voicemail or text message that you have received.

Find the Feature

☰ > Ring Styles  
> Style Detail  
> Reminders

**Note:** *Style* represents the current ring style.

Press	To
1 	scroll to <b>Beep</b> or <b>Vibrate</b> to set the reminder alert type, or <b>Off</b> to turn off all reminders
2 <b>SELECT</b> 	select the reminder alert



PRELIMINARY











# Shortcuts

---

Your phone includes several standard shortcuts. You can create additional shortcuts to frequently used menu items.

## Standard Shortcuts


The following shortcuts are pre-programmed in your phone. You cannot edit or delete these shortcuts.











Do This	To
Press  , then press and hold  (within two seconds)	zoom in/out on your phone display
Press  	lock/unlock your keypad
Press  	see your phone number
Press 	go to the dialed calls list
Press 	exit the menu system

## Creating a Shortcut

You can create a keypad shortcut *plus* an optional voice shortcut to a menu item. A voice shortcut takes you directly to the menu item when you say the shortcut name.

**Tip:** Make your recording in a quiet location. Hold the phone about four inches (10 centimeters) from your mouth, and speak directly into the phone in a normal tone of voice.


Do This	To
1 Press 	enter the menu system

Do This	To
2 Press 	scroll to the menu item
3 Press and hold 	open the shortcut editor
4 Press <b>YES</b> ( 	view shortcut options
5 Press <b>CHANGE</b> ( 	change the keypad shortcut number
<b>or</b>	
Press <b>DONE</b> ( 	select the default keypad shortcut number
<b>or</b>	
Press 	scroll to <b>Voice</b> to assign a voice shortcut
6 Press <b>RECORD</b> ( 	begin recording The phone displays <b>Press Voice Key then say voice shortcut.</b>
7 Press and release <b>RECORD</b> ( 	record the shortcut name and say the shortcut's name (in two seconds)
8 Press and release <b>RECORD</b> ( 	confirm the shortcut name and repeat the name
9 Press <b>DONE</b> ( 	store the shortcut name



# Using Shortcuts


## Use a Keypad Shortcut

Press	To
1 	open the menu
2 <i>the keypad shortcut number</i>	go to the menu item or perform the menu action

## Select a Shortcut From the List

Find the Feature  > *Shortcuts*  
> *the shortcut you want*

## Use a Voice Shortcut

Do This	To
1 Press 	open the menu
2 Press and release the voice key and say the shortcut's name (in two seconds)	go to the menu item or perform the menu action



# Micro-Browser



The micro-browser lets you access Web pages and Web-based applications on your phone. Contact your service provider to set up access, if necessary.



## Starting a Micro-Browser Session

Find the Feature

 > Web Sessions

**Press**

**To**

**1**



scroll to a bookmark, service, or application

**2**




 

 

**SELECT** ()

select the item

If you are unable to establish a network connection with the micro-browser, contact your service provider.



## Interacting With Web Pages



Press	To
	scroll through text, or highlight a selectable item
SELECT (  )	select the highlighted item
	call the highlighted phone number from the micro-browser
keypad keys, followed by OK (  )	enter information Press  to delete one letter at a time if you make a mistake.
	go back to the previous page
	open the <b>Browser Menu</b>



# Calculator

You can use your phone as a calculator and currency converter.


## Calculating Numbers

Press	To
1 number keys	enter a number
2 	highlight a calculator function
3 <b>SELECT</b> (  )	perform the function

Selected function appears here

Press  to highlight a function

Exit the calculator

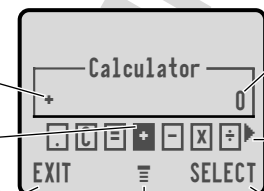

Press  to open the **Calculator Menu**

Entered number

Press  to scroll to other functions

Perform the highlighted function



The calculator can perform the following functions:



Function	Description
.	Insert a decimal point
C	Clear the calculation
CE	Clear entry (replaces C when you enter subsequent values in a calculation)
=	Calculate the result
+	Add
-	Subtract
x	Multiply
÷	Divide
%	Divide the displayed value by 100
±	Change the entry's sign (positive/negative)
\$	Calculate the exchange rate
MS	Store the value in memory (overwrites current stored value)
MC	Clear the value stored in memory
MR	Replace the displayed value with the value stored in memory




# Converting Currency

The currency converter works just like the calculator, but uses the \$ (currency) function:

Find the Feature

 > **Calculator**

 > **Exchange Rate**

Press	To
1 number keys	enter the exchange rate
2 <b>OK</b> (  )	store the exchange rate
3 number keys	enter the amount to convert (amount to multiply by the exchange rate)
4 	highlight the \$ function
5 <b>SELECT</b> (  )	perform the conversion



PRELIMINARY





# Games

You can play games on your phone between phone calls. An incoming call, message, alarm, or alert automatically ends the game.




 
## Playing a Game

Find the Feature

 > Games

Press	To
1 	scroll to a game
2 SELECT (  )	start the game

When the game is over:

Press	To
NEW (  ) or YES (  )	start another session of the same game
BACK (  ) or NO (  )	end the game session

## Game Options

Press  to select the following options during a game:

Option	Description
Game Sounds	Switch game sounds on/off.
New Game	Start a new game session.



Option	Description
Key Configuration	Assign game functions to different keypad keys.
Help	Review the goal of the game. <b>Note:</b> This option is not available for Blackjack.

## Blackjack

In this classic card game, you play against the dealer to see who can get closer to 21 points without going over.

### Rules of the Game

- The first card is dealt to the dealer. The dealer's cards are shown at the top of the display, and your cards are shown at the bottom.
- Face cards count as 10 points. Number cards count as the points shown on their face.
- An ace counts as 11 points, unless that would put you over 21 points. Otherwise, an ace is counted as 1 point. An ace that is originally counted as 11 may later be counted as 1 if it will bring your total under or equal to 21 points.
- An initial deal of an ace and a card with a face value of 10 points counts as exactly 21 points or Blackjack.
- Blackjack automatically wins against any other hand that totals 21 points.
- If you score more than 21 points, you go "bust" or lose.



- If you get five cards without going bust, you win.
- If you and the dealer have the same score, the dealer wins.
- You can ask for a “hit” or another card as long as you do not go bust.
- As long as the dealer’s total is less than 17 points, the dealer must continue to take a hit.

### ***How to Play***

When the game begins, you are dealt two cards.

Press	To
STAY (☉)	see the results of the hand
HIT ME (☉)	request another card

### ***Falling Numbers***


Score points by pressing the corresponding number key for numbers as they “fall” down the display.

### ***Rules of the Game***

- If a number reaches the bottom of the display or if you press an incorrect number key, you score one miss.
- The game is over when you score three misses.
- The game has five levels. When you complete a level, play continues automatically at the next level.
- You earn a bonus if you finish a level without a miss.

## How to Play

When the game begins, numbers start falling from the upper portion of the display. Press the corresponding number key to eliminate a falling number before it reaches the bottom of the display.

Press  to select the following options:

Option	Description
Level	Choose the starting level of play.
Top Scores	View the top five scores.



## Video Poker

Turn 100 credits into 9,999-plus credits by making the best possible poker hands.

### Rules of the Game

- You start a new game with 100 credits. You must bet from 1-10 credits for each hand you play.
- You are dealt five cards face up, and have one opportunity to trade in cards (zero to five) for new ones.
- A winning hand earns credits as listed in the **Awards Table**.
- Your credit total is saved when you exit the game. The next time you play, you start with the number of credits that remain from the previous session.
- The game is over when you lose all of your credits.

## How to Play

Place your initial bet or change your bet (from 1-10 credits) and then:

Press	To
DEAL (⊙)	start a new hand
4 CH	select the card to the left
6 MR	select the card to the right
5 O RL or DISCARD (⊙)	discard selected card
5 O RL or UNDO (⊙)	undo discard (replaces previous option after discard)
DONE (⊙)	remove discarded cards and deal replacements

Press ⊞ to select the following options:

Option	Description
Change Bet	Change bet amount (not available while hand is in play).
Choose Deck	Choose the deck image.
Awards Table	View the list of odds/payouts for each winning hand.

# Adjusting Your Settings


 

 
---

## Reordering Menu Items



You can reorder the items in your phone's main menu.

Find the Feature

- ☰ > Settings
- > Other Settings
- > Personalize
- > Main Menu

Press	To
1 	scroll to a menu item
2 GRAB (  )	grab the menu item
3 	move the item to a new location in the menu
4 INSERT (  )	insert the menu item


 

 
## Customizing a Soft Key Function

You can relabel the soft keys ( and ) to access different menu items from the idle display.

Find the Feature

- ☰ > Settings
- > Other Settings
- > Personalize > Keys



Press	To
1 	scroll to <b>Left</b> or <b>Right</b>
2 <b>CHANGE</b> 	select the key
3 	scroll to the new key function
4 <b>CHANGE</b> 	confirm the new function

## TTY Operation



You can use an optional TTY device with your phone to send and receive calls. You must plug the TTY device into the phone's headset jack and set the phone to operate in one of three TTY modes.

### Notes:





- Use a TSB-121 compliant cable (provided by the TTY manufacturer) to connect the TTY device to your phone.
- For optimal performance, your phone should be at least 12 inches (30 centimeters) away from the TTY device. Placing the phone too close to the TTY device may cause high error rates.

## Set TTY Mode

When you set your phone to a TTY mode, it operates in that mode whenever the TTY device is connected.

Find the Feature

 
-  > **Settings**
- > **Other Settings**
- > **Initial Setup**
- > **TTY Setup**

Press	To
1 	scroll to <b>TTY Setup</b>
2 <b>CHANGE</b> ( 	change the TTY mode
3 	scroll to the TTY mode
4 <b>SELECT</b> ( 	select the TTY mode






The **TTY Setup** menu includes the following options:

Option	Description
<b>TTY</b>	Transmit and receive TTY characters
<b>VCO</b>	Receive TTY characters but transmit by speaking into the microphone
<b>HCO</b>	Transmit TTY characters but receive by listening to the earpiece
<b>Voice</b>	Return to normal voice mode








When your phone is in a TTY mode, the international TTY symbol and the mode setting are shown in the display. You can press **TTYMODE** () to change the mode setting.

### ***Switch to TTY Mode During a Voice Call***

Press	To
1 	open the <b>Call</b> menu
2 	scroll to <b>TTY Setup</b>
3 <b>SELECT</b> ( 	display the <b>TTY Setup</b> menu
4 	scroll to the TTY mode
5 <b>SELECT</b> ( 	select the TTY mode





Press	To
1 	open the <b>Call</b> menu
2 	scroll to <b>TTY Setup</b>
3 <b>SELECT</b> 	display the <b>TTY Setup</b> menu
4 	scroll to the TTY mode
5 <b>SELECT</b> 	select the TTY mode

## Return to Voice Mode

To return to normal voice mode, select **Voice** from the **TTY Setup** menu as described on page 118.

## Hands-Free Use



You can purchase an optional Motorola Original™ hands-free car kit or headset for your phone. These accessories provide alternative ways for you to use your phone without using your hands.


 




**Note:** The use of wireless devices and their accessories may be prohibited or restricted in certain areas. Always obey the laws and regulations on the use of these products.

## Automatic Answer

You can set your phone to automatically answer calls after two rings (four seconds) when connected to a car kit or headset.

Find the Feature

 > **Settings**  
> **Other Settings**



Press	To
1 	scroll to <b>Car Settings</b> or <b>Headset</b>
2 <b>SELECT</b> ( 	select the feature
3 	scroll to <b>Auto Answer</b>
4 <b>CHANGE</b> ( 	select <b>Auto Answer</b>
5 	scroll to <b>On</b> or <b>Off</b>
6 <b>SELECT</b> ( 	confirm the setting

## Automatic Hands-Free

You can set your phone to automatically route calls to a car kit when it detects a connection.

Find the Feature

-  > **Settings**
- > **Other Settings**
- > **Car Settings**
- > **Auto Handsfree**

Press	To
1 	scroll to <b>On</b> or <b>Off</b>
2 <b>SELECT</b> ( 	confirm the setting

## Power-Off Delay

When your phone is connected to a car kit, you can set it to stay on for a period of time after you switch off the ignition. This prevents the phone from draining your vehicle battery, but leaves the phone on long enough that you do not have to re-enter your unlock code when making short stops.





**Note:** This feature may not work with all car ignition switches.

**Caution:** If you select **Continuous**, the phone does not power off when you turn off the ignition. Be careful not to drain your vehicle battery if you select this option.

Find the Feature

- ☰ > Settings
- > Other Settings
- > Car Settings
- > Power-Off Delay

Press	To
1 	scroll to the time delay
2 SELECT 	confirm your selection



## Charger Time

When your phone is connected to a car kit, you can set it to charge itself for a specified time period after you switch off the ignition. This helps ensure that the phone battery gets fully charged while the vehicle is parked.

**Note:** This feature may not work with all car ignition switches.

Find the Feature

- ☰ > Settings
- > Other Settings
- > Car Settings
- > Charger Time

Press	To
1 	scroll to the charge time
2 SELECT 	confirm your selection

# Data Calls

---



A Motorola Original™ data kit lets you transfer data between your phone and a computer or other external device. You can:

- use your phone as a modem to connect to the Internet.
- use your phone to send and receive data calls on your computer or hand-held device.

## Connecting Your Phone to an External Device

Connect your phone to a computer or hand-held device using a serial cable or a USB cable.

**Note:** Not all devices are compatible with serial cable or USB cable connections. Check your external device for specifications.

### ***Set Up a Cable Connection***

Attach a serial cable or Motorola Original USB cable to the phone and external device as follows.

**Note:** Check your computer or hand-held device to determine the type of cable you need.



## Attaching a Serial Cable

Use the interchangeable head on the Motorola Multi-Connect Serial Cable to connect a computer, Palm III device, or Palm V device to your phone.

### Do This

- 1 Plug the serial cable into the detachable head. Make sure that the Motorola logo on the detachable head and the metal shielding on the serial cable plug are both facing you.

---

- 2 With the Motorola logo and the phone both facing you, plug the detachable head into the phone's accessory connector port.

---

- 3 Plug the other end of the cable into the serial interface connection on the external device and tighten the screws.



## Attaching a USB Cable

### Do This

- 4 Plug the end of the cable with the Motorola logo into the phone's accessory connector port. Make sure that the logo and the phone are both facing you.
- 5 Plug the other end—the USB connection—into the USB port on the external device.

## Install the Software

Install the software from the CD-ROM that comes with your Motorola Original data kit. See the data kit's user guide for more information.

## Sending a Data Call

Use this procedure to send data from a connected device, and to synchronize phonebook and datebook information between your phone, computer, and/or hand-held device.

Connect your phone to the device as described on page 123 and do the following:

### Do This

### To

- 1 Check the phone make sure that the phone is connected and powered on





Do This	To
2 Open the application on your computer	place the call through the application (such as dial-up-networking)  <b>Note:</b> You cannot dial data numbers through your phone's keypad. You must dial them through your computer.
3 End the call from the connected device	close the call and connection when the transfer is complete

## Receiving a Data Call

Use this procedure to transfer data to your computer or hand-held device.

### Set Up Your Phone

Find the Feature

☰ > Settings  
> Connection  
> Incoming Call

Do This	To
1 Press CHANGE (⊙)	select <b>Next Call</b>
2 Press ⊕	scroll to <b>Data In Only</b>
3 Press SELECT (⊙)	set the call format
4 Connect your phone to the device	enable the data transfer

**Note:** You cannot answer incoming voice calls when your phone is in data mode. Any voice calls you receive are treated as unanswered calls. To return a voice call, reset your phone to voice mode as described on page 127.

## ***Transfer the Data***

Your phone notifies you when the data call arrives, and transfers the call to the connected device. Use the application running on the device to answer the call.

## ***End the Data Connection***

When the data transfer is complete:

<b>Do This</b>	<b>To</b>
End the call from the connected device	close the connection

## ***Reset Normal Voice Operation***

After making a data call, you must reset your phone to resume normal voice operations. You cannot receive voice calls when your phone is in data mode.

Find the Feature

- ☰ > **Settings**
- > **Connection**
- > **Incoming Call**

<b>Do This</b>	<b>To</b>
<b>1</b> Press <b>CHANGE</b> (⊙)	select <b>Next Call</b>
<b>2</b> Press ⊕	scroll to <b>Normal</b>
<b>3</b> Press <b>SELECT</b> (⊙)	reset your phone





Your phone also reverts to normal voice operations when you turn it off and then turn it back on.



PRELIMINARY

# Security


---

## Assigning a New Code or Password

Your phone's unlock code is originally set to 1234, and the security code is originally set to 000000. Your service provider may reset these numbers before you receive your phone.

If your service provider has *not* reset these numbers, we recommend that you change them to prevent other users from accessing your personal information. The unlock code must contain four digits, and the security code must contain six digits.

### Notes:






- Your service provider may retain your phone's security code for customer service purposes. In this case, you will not be able to use phone features that require you to enter the security code.
- If the unlock code is the only code you can change, the **New Passwords** menu is not available. In this case, change the unlock code by selecting:  > **Settings** > **Security** > **Phone Lock** > **Unlock Code**.

To change a code or password:

Find the Feature

 > **Settings** > **Security**  
> **New Passwords**





Press	To
1 	scroll to the code or password
2 <b>CHANGE</b> ( 	select the code or password
3 keypad keys	enter your old code
4 <b>OK</b> ( 	submit your old code
5 keypad keys	enter the new code
6 <b>OK</b> ( 	assign the new code
7 keypad keys	re-enter the new code
8 <b>OK</b> ( 	confirm the new code

## *If You Forget a Code or Password*

If you forget your security code, contact your service provider.

If you forget your unlock code, try entering 1234 or the last four digits of your phone number. If that does not work, do the following at the **Enter Unlock Code** prompt:

Press	To
1 	go to the unlock code bypass screen
2 keypad keys	enter your security code
3 <b>OK</b> ( 	submit your security code



# Locking and Unlocking Your Phone

You can lock your phone manually or set the phone to lock automatically whenever you turn it off.

To use a locked phone, you must enter the unlock code. A locked phone still rings or vibrates for incoming calls or messages, *but you must unlock it to answer.*

You can make emergency calls on your phone even when it is locked. For more information, see page 28.

## Lock Your Phone Manually

Find the Feature

☰ > Settings > Security  
> Phone Lock  
> Lock Now

Press	To
1 keypad keys	enter your unlock code
2 OK (⊙)	lock the phone

## Set Your Phone to Lock Automatically

You can set your phone to lock every time you turn it off.

Find the Feature

☰ > Settings > Security  
> Phone Lock  
> Automatic Lock > On

Press	To
1 keypad keys	enter your unlock code
2 OK (⊙)	activate automatic lock




## Unlock Your Phone

At the **Enter Unlock Code** prompt:

Press	To
1 keypad keys	enter your unlock code
2 OK (⊙)	unlock your phone

## Locking and Unlocking Your Keypad

You can lock your phone keypad to prevent accidental keypresses (for example, when carrying your phone in a purse or pocket).

Press	To
	lock or unlock your keypad

**Note:** Incoming calls and messages unlock the keypad.

## Restricting Calls

You can stop all incoming and/or outgoing calls, or you can restrict them to the numbers stored in your phonebook.

### Notes:

- You can make emergency calls when outgoing calls are restricted.
- Your phone still receives incoming text messages when incoming calls are restricted.



When you restrict incoming calls to numbers stored in the phonebook, a valid incoming call may be restricted if caller ID information for the call is not available from the network.

Find the Feature

☰ > Settings > Security  
> Restrict Calls

Press	To
1 keypad keys	enter your unlock code
2 OK (⊙)	open the restrict calls menu
3 ⬇️	scroll to <b>Outgoing Calls</b> or <b>Incoming Calls</b>
4 CHANGE (⊙)	select the option
5 CHANGE (⊙)	change the <b>Allow</b> setting
6 ⬆️	scroll to <b>All</b> , <b>None</b> , or <b>Phonebook</b>
7 SELECT (⊙)	select the allowed calls

## Activating Talk Secure

Find the Feature

☰ > Settings > Security  
> Talk Secure

Press	To
1 ⬆️	scroll to <b>Preferred</b> or <b>Off</b>
2 SELECT (⊙)	switch talk secure on or off

Your phone can attempt to send your calls using a high-security connection, to prevent others from intercepting them. For more information, see page 27



# Troubleshooting



Check these questions first if you have problems with your phone. If you need additional help, contact the Motorola Customer Call Center at 1-800-331-6456 (United States) or 1-800-461-4575 (Canada).

Question	Answer
<b>Is your phone set up correctly?</b>	Press  . If you do not see your phone number, contact your service provider.
<b>Is your battery charged? Do you see  in the display?</b>	The battery level indicator should have at least one segment showing (). If it does not, recharge your battery. See page 19.
<b>Does the handset have a signal? Do you see  in the display?</b>	The signal strength indicator should have at least one segment showing (). If it does not, move to an area with a stronger signal to use your phone.
<b>Is the earpiece volume too low?</b>	While on a call, press the upper volume key on the side of your phone.





 
Question	Answer
<b>Is the other party unable to hear you?</b>	Your phone may be muted. Press <b>UNMUTE</b> (⊙) if necessary to unmute the phone.  Also, make sure that your phone's microphone is not blocked by its carrying case or a sticker.
<b>Has the phone been damaged, dropped, or gotten wet?</b>	Dropping your phone, getting it wet, or using a non-Motorola battery or battery charger can damage the phone. The phone's limited warranty does not cover liquid damage or damage caused from using non-Motorola accessories.
<b>Was a non-Motorola battery or battery charger used?</b>	

The following refer to specific problems:

Problem	Solution
<b>My phone was stolen. To whom should I report this?</b>	Report a stolen phone to the police and to your service provider (the company that sends you your monthly wireless service bill).
<b>I forgot my password.</b>	See page 130.





Problem	Solution
<p><b>I pressed the power key, but nothing happened.</b></p>	<p>Be sure to press and hold  (the power key) until the display appears and you hear an alert. This could take several seconds. If nothing happens, check that a charged battery is installed. See page 18.</p>
<p><b>The display says: Enter Unlock Code. How do I unlock my phone?</b></p>	<p>Enter the factory-preset unlock code (1234), or the last four digits of your phone number. If this fails, call your service provider (the company that sends you your monthly wireless service bill).</p>
<p><b>My phone asks for an unlock code when I try to open a feature.</b></p>	<p>The application you want is locked. If you do not know the unlock code, see page 130.</p>
<p><b>My phone does not ring.</b></p>	<p>If you see  or  in the display, then the ringer is turned off. See page 93.</p> <p>Also, the ringer may be set to <b>Silent</b> even though your phone is set to an audible ring style. See page 94.</p>



<b>Problem</b>	<b>Solution</b>
<b>My phone rings even though I selected the Silent (or Vibrate) ring style.</b>	The ringer may be set to play a tone even though your phone is set to a silent ring style. See page 94.
<b>I tried to place a call and heard an alternating high/low tone.</b>	Your call did not reach the wireless system. You may have dialed the number too soon after turning the phone on. Wait until you see the idle display before making a call.
<b>I cannot send/receive calls.</b>	<p>Make sure that you have a phone signal (see the “Signal Strength Indicator” item on page 23). Avoid electrical or radio interference, and obstructions such as bridges, parking garages, or tall buildings.</p> <p>Your phone also may have the <b>Restrict Calls</b> feature turned on. If you know the unlock code, you can change this setting in the security menu (☰ &gt; <b>Settings</b> &gt; <b>Security</b>).</p>



Problem	Solution
<p><b>My phone has poor reception and drops calls.</b></p>	<p>Make sure that your antenna is not bent or damaged.</p> <p>Also, make sure you have a phone signal (see the “Signal Strength Indicator” item on page 23). Stay clear of any obstructions such as bridges, parking garages, or tall buildings.</p>
<p><b>I cannot hear others on my phone.</b></p>	<p>While on a call, press the upper volume key. The display should show the volume increasing.</p> <p>Also, make sure that your phone’s earpiece is not blocked by its carrying case.</p>
<p><b>I cannot open my message inbox.</b></p>	<p>Before you can use text messages, you must set up the message inbox. See page 84.</p>
<p><b>How do I see the calls I sent or received?</b></p>	<p>To see the most recent calls you dialed or received:</p> <ul style="list-style-type: none"> <li>⊞ &gt; Recent Calls</li> <li>&gt; Received Calls</li> <li>or</li> <li>Dialed Calls</li> </ul>



Problem	Solution
<b>My phone will not send voicemail commands, passwords, or other codes.</b>	<p>Your phone sends commands and passwords as DTMF tones. You can set your phone's DTMF tones to be <b>On</b> or <b>Off</b>. If you have trouble sending numbers, check your DTMF setting.</p> <ol style="list-style-type: none"><li data-bbox="373 387 842 550">1 From the idle display, press:<ul style="list-style-type: none"><li data-bbox="467 446 816 550">ⓘ &gt; <b>Settings</b> &gt; <b>Other Settings</b> &gt; <b>Initial Setup</b> &gt; <b>DTMF</b></li></ul></li><li data-bbox="373 572 752 602">2 Press ⌂ to scroll to <b>On</b>.</li><li data-bbox="373 624 829 654">3 Press <b>SELECT</b> (⊙) to select it.</li></ol>
<b>My phone's display is too dark.</b>	<p>Use the <b>Contrast</b> feature to change the level of contrast in your display. See page 55.</p> <p>You can also use the <b>Backlight</b> feature to change the length of time that the display backlight stays on. See page 54.</p>
<b>My battery didn't last as long as I expected. What can I do to extend battery life</b>	<p>Your battery's performance is affected by charge time, feature use, temperature changes, backlight use, and other factors. For tips on extending your battery life, see page 25.</p>



Problem	Solution
<p><b>I am unable to record a voice note, voice name, or voice shortcut.</b></p>	<p>Try moving to a quieter location to make your voice recording. Hold the phone about four inches (10 centimeters) from your mouth, and speak directly into the phone in a normal tone of voice.</p>
<p><b>My TTY device doesn't work with my phone.</b></p>	<p>Your phone must be set to a TTY mode for the phone to detect your TTY device. See page 118.</p>
<p><b>I plugged the data cable into my phone but my phone did not beep. How do I know if the data cable is ready to go?</b></p>	<p>The beep indicates that you are set up correctly. If you did not hear a beep, make sure that both ends of the data cable are connected—the smaller end to your phone and the larger end to your computer.</p> <p>Also, your computer may have deactivated the port to save power. Try opening an application that uses the port, like a fax or dial-up application, to automatically activate the port.</p>



<b>Problem</b>	<b>Solution</b>
<b>My phone beeped when I attached the data cable, but my data applications don't work.</b>	<p>You must be in an area with digital coverage. Check your phone's display for the digital signal indicator (D).</p> <p>Some wireless networks may not support data transmission. If you see the digital indicator, but you are roaming on an unfamiliar network, this may be the case.</p> <p>Also, remember that data transmission usually requires a subscription. Call your service provider for more information.</p>
<b>When sending data with the data cable, why does the computer show a connection rate of 19200 Kbps?</b>	<p>19200 Kbps is the data transfer rate of the connection between your computer and the phone. The rate of the connection between your phone and the network is displayed on your phone, and will be either 14400 or 9600 Kbps.</p>
<b>I can't end my data call by closing the application on my computer. What can I do?</b>	<p>Try pressing Ⓢ on your phone. Or try disconnecting the cable or turning off the phone. If possible, always close the connection through your computer, as these alternative methods may disrupt the application on your computer.</p>



Problem	Solution
<p><b>I launched the micro-browser but the display says:</b>  <b>Service Not Available.</b></p>	<p>You may be in an area without service. If you have wireless service, look in the display for the digital signal indicator (D). If you do not see the indicator, you may be in an area that has only analog service or no service at all. If you see the digital signal indicator, you may be connected to a digital network that does not support Internet access.</p>
<p><b>I launched the micro-browser but the display says:</b>  <b>Data Server Unavailable.</b></p>	<p>Try again in a few minutes. The servers may be temporarily busy.</p>

# Programming Instructions

---

Follow this procedure if you need to program your phone's phone number(s).

**Note:** Programming is normally done by a trained technician at the site of purchase. Users should not make changes other than ones in the following procedure.

Before programming, ask your service provider for your:

- Carrier System ID (a one- to five-digit number)
- 10-digit MIN (Mobile Identification Number)

Press	To
1 <b>#</b> , the Carrier System ID number, <b>#</b> , <b>*</b> , <b>0</b>	enter programming mode
2 <b>0*</b> , <b>0*</b> , <b>0*</b> , <b>0*</b> , <b>0*</b> , <b>0*</b>	enter the security code
(This is the security code that is in the phone when it is shipped from the factory.)	
3 <b>OK</b> ( <b>0</b> )	submit the security code
4 <b>←</b>	scroll to <b>MIN</b>
5 <b>CHANGE</b> ( <b>0</b> )	open the <b>MIN</b> display
6 keypad keys for the 10-digit MIN	enter the new MIN



Press	To
<b>7</b> OK (⊙)	store the new MIN
<b>8</b> DONE (⊙)	exit programming mode

PRELIMINARY

# Specific Absorption Rate Data

---

**This model phone meets the government's requirements for exposure to radio waves.**

Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed limits for exposure to radio frequency (RF) energy set by the U.S. Federal Communications Commission for the United States and by Health Canada for Canada. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age or health.

The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC and by Health Canada is 1.6 W/kg.<sup>1</sup> Tests for SAR are conducted using standard operating positions accepted by the FCC and by Industry Canada with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are

to a wireless base station antenna, the lower the power output.

Before a phone model is available for sale to the public in the U.S. and Canada, it must be tested and certified to the FCC and Industry Canada that it does not exceed the limit established by each government for safe exposure. The tests are performed in positions and locations (e.g., at the ear and worn on the body) reported to the FCC and available for review by Industry Canada. The highest SAR value for this model phone when tested for use at the ear is  $1.51 \text{ W/kg}^2$ , and when worn on the body, as described in this user guide, is  $0.69 \text{ W/kg}^2$  (Body-worn measurements differ among phone models, depending upon available accessories and regulatory requirements). While there may be differences between the SAR levels of various phones and at various positions, they all meet the governmental requirements for safe exposure.

The FCC and Industry Canada have granted an Equipment Authorization for this model phone with all reported SAR levels evaluated as being in compliance with the FCC and Health Canada RF exposure guidelines. SAR information on this model phone is on file with the FCC and can be found under the Display Grant section of:

<http://www.fcc.gov/oet/fccid>

after searching on FCC ID: IHDT56CF1. You may also refer to Motorola's Web site:

<http://www.motorola.com/rfhealth>

Additional information on Specific Absorption Rates (SAR) can be found on the Cellular Telecommunications & Internet Association (CTIA) Web site:

<http://phonefacts.net>

or the Canadian Wireless Telecommunications Association (CWTA) Web site:

<http://www.cwta.ca>

1. In the United States and Canada, the SAR limit for mobile phones used by the public is 1.6 watts/kg (W/kg) averaged over one gram of tissue. The standard incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in measurements.
2. Additional related information includes the Motorola testing protocol, assessment procedure, and measurement uncertainty range for this product.

ITC01-064

PRELIMINARY

**The U.S. Food and Drug  
Administration's Center for  
Devices and Radiological Health  
Consumer Update on Mobile Phones**

---



FDA has been receiving inquiries about the safety of mobile phones, including cellular phones and PCS phones. The following summarizes what is known—and what remains unknown—about whether these products can pose a hazard to health, and what can be done to minimize any potential risk. This information may be used to respond to questions.

***Why the concern?***

Mobile phones emit low levels of radio frequency energy (i.e., radio frequency radiation) in the microwave range while being used. They also emit very low levels of radio frequency energy (RF), considered non-significant, when in the stand-by mode. It is well known that high levels of RF can produce biological damage through heating effects (this is how your microwave oven is able to cook food). However, it is not known whether, to what extent, or through what mechanism, lower levels of RF might cause adverse health effects as well. Although some research has been done to address these questions, no clear picture of the biological effects of this type of radiation has emerged to date. Thus, the available science does not allow us to conclude that mobile phones are absolutely safe, or that they are unsafe. However, the available scientific evidence does not demonstrate any adverse health effects associated with the use of mobile phones.

## ***What kinds of phones are in question?***

Questions have been raised about hand-held mobile phones, the kind that have a built-in antenna that is positioned close to the user's head during normal telephone conversation. These types of mobile phones are of concern because of the short distance between the phone's antenna—the primary source of the RF—and the person's head. The exposure to RF from mobile phones in which the antenna is located at greater distances from the user (on the outside of a car, for example) is drastically lower than that from hand-held phones, because a person's RF exposure decreases rapidly with distance from the source. The safety of so-called “cordless phones,” which have a base unit connected to the telephone wiring in a house and which operate at far lower power levels and frequencies, has not been questioned.

## ***How much evidence is there that hand-held mobile phones might be harmful?***

Briefly, there is not enough evidence to know for sure, either way; however, research efforts are on-going. The existing scientific evidence is conflicting and many of the studies that have been done to date have suffered from flaws in their research methods. Animal experiments investigating the effects of RF exposures characteristic of mobile phones have yielded conflicting results. A few animal studies, however, have suggested that low levels of RF could accelerate the development of cancer in laboratory animals. In one study, mice genetically altered to be predisposed to developing one type of cancer developed more than twice as many such cancers when they were exposed to RF energy compared to controls. There is much uncertainty among scientists about whether results obtained from animal studies apply to the use

of mobile phones. First, it is uncertain how to apply the results obtained in rats and mice to humans. Second, many of the studies that showed increased tumor development used animals that had already been treated with cancer-causing chemicals, and other studies exposed the animals to the RF virtually continuously—up to 22 hours per day.

For the past five years in the United States, the mobile phone industry has supported research into the safety of mobile phones. This research has resulted in two findings in particular that merit additional study:

- 1 In a hospital-based, case-control study, researchers looked for an association between mobile phone use and either glioma (a type of brain cancer) or acoustic neuroma (a benign tumor of the nerve sheath). No statistically significant association was found between mobile phone use and acoustic neuroma. There was also no association between mobile phone use and gliomas when all types of types of gliomas were considered together. It should be noted that the average length of mobile phone exposure in this study was less than three years.

When 20 types of glioma were considered separately, however, an association was found between mobile phone use and one rare type of glioma, neuroepitheliomatous tumors. It is possible with multiple comparisons of the same sample that this association occurred by chance. Moreover, the risk did not increase with how often the mobile phone was used, or the length of the calls. In fact, the risk actually decreased with cumulative hours of mobile phone use. Most cancer causing agents increase risk with increased exposure. An ongoing study of brain

cancers by the National Cancer Institute is expected to bear on the accuracy and repeatability of these results.<sup>1</sup>

- 2 Researchers conducted a large battery of laboratory tests to assess the effects of exposure to mobile phone RF on genetic material. These included tests for several kinds of abnormalities, including mutations, chromosomal aberrations, DNA strand breaks, and structural changes in the genetic material of blood cells called lymphocytes. None of the tests showed any effect of the RF except for the micronucleus assay, which detects structural effects on the genetic material. The cells in this assay showed changes after exposure to simulated cell phone radiation, but only after 24 hours of exposure. It is possible that exposing the test cells to radiation for this long resulted in heating. Since this assay is known to be sensitive to heating, heat alone could have caused the abnormalities to occur. The data already in the literature on the response of the micronucleus assay to RF are conflicting. Thus, follow-up research is necessary.<sup>2</sup>

FDA is currently working with government, industry, and academic groups to ensure the proper follow-up to these industry-funded research findings. Collaboration with the Cellular Telecommunications Industry Association (CTIA) in particular is expected to lead to FDA providing research recommendations and scientific oversight of new CTIA-funded research based on such recommendations.

Two other studies of interest have been reported recently in the literature:

- 1 Two groups of 18 people were exposed to simulated mobile phone signals under laboratory conditions while



they performed cognitive function tests. There were no changes in the subjects' ability to recall words, numbers, or pictures, or in their spatial memory, but they were able to make choices more quickly in one visual test when they were exposed to simulated mobile phone signals. This was the only change noted among more than 20 variables compared.<sup>3</sup>

- 2 In a study of 209 brain tumor cases and 425 matched controls, there was no increased risk of brain tumors associated with mobile phone use. When tumors did exist in certain locations, however, they were more likely to be on the side of the head where the mobile phone was used.

Because this occurred in only a small number of cases, the increased likelihood was too small to be statistically significant.<sup>4</sup>

In summary, we do not have enough information at this point to assure the public that there are, or are not, any low incident health problems associated with use of mobile phones. FDA continues to work with all parties, including other federal agencies and industry, to assure that research is undertaken to provide the necessary answers to the outstanding questions about the safety of mobile phones.

### ***What is known about cases of human cancer that have been reported in users of hand-held mobile phones?***

Some people who have used mobile phones have been diagnosed with brain cancer. But it is important to understand that this type of cancer also occurs among people who have not used mobile phones. In fact, brain cancer occurs in the

U.S. population at a rate of about 6 new cases per 100,000 people each year. At that rate, assuming 80 million users of mobile phones (a number increasing at a rate of about 1 million per month), about 4800 cases of brain cancer would be expected each year among those 80 million people, whether or not they used their phones. Thus it is not possible to tell whether any individual's cancer arose because of the phone, or whether it would have happened anyway. A key question is whether the risk of getting a particular form of cancer is greater among people who use mobile phones than among the rest of the population. One way to answer that question is to compare the usage of mobile phones among people with brain cancer with the use of mobile phones among appropriately matched people without brain cancer. This is called a case-control study. The current case-control study of brain cancers by the National Cancer Institute, as well as the follow-up research to be sponsored by industry, will begin to generate this type of information.

### ***What is FDA's role concerning the safety of mobile phones?***

Under the law, FDA does not review the safety of radiation-emitting consumer products such as mobile phones before marketing, as it does with new drugs or medical devices. However, the agency has authority to take action if mobile phones are shown to emit radiation at a level that is hazardous to the user. In such a case, FDA could require the manufacturers of mobile phones to notify users of the health hazard and to repair, replace or recall the phones so that the hazard no longer exists.

Although the existing scientific data do not justify FDA regulatory actions at this time, FDA has urged the mobile

phone industry to take a number of steps to assure public safety. The agency has recommended that the industry:

- support needed research into possible biological effects of RF of the type emitted by mobile phones
- design mobile phones in a way that minimizes any RF exposure to the user that is not necessary for device function
- cooperate in providing mobile phone users with the best possible information on what is known about possible effects of mobile phone use on human health

At the same time, FDA belongs to an interagency working group of the federal agencies that have responsibility for different aspects of mobile phone safety to ensure a coordinated effort at the federal level. These agencies are:

- National Institute for Occupational Safety and Health
- Environmental Protection Agency
- Federal Communications Commission
- Occupational Health and Safety Administration
- National Telecommunications and Information Administration

The National Institutes of Health also participates in this group.

***In the absence of conclusive information about any possible risk, what can concerned individuals do?***

If there is a risk from these products—and at this point we do not know that there is—it is probably very small. But if people

are concerned about avoiding even potential risks, there are simple steps they can take to do so. For example, time is a key factor in how much exposure a person receives. Those persons who spend long periods of time on their hand-held mobile phones could consider holding lengthy conversations on conventional phones and reserving the hand-held models for shorter conversations or for situations when other types of phones are not available.

People who must conduct extended conversations in their cars every day could switch to a type of mobile phone that places more distance between their bodies and the source of the RF, since the exposure level drops off dramatically with distance. For example, they could switch to:

- a mobile phone in which the antenna is located outside the vehicle
- a hand-held phone with a built-in antenna connected to a different antenna mounted on the outside of the car or built into a separate package
- a headset with a remote antenna to a mobile phone carried at the waist

Again, the scientific data do not demonstrate that mobile phones are harmful. But if people are concerned about the radio frequency energy from these products, taking the simple precautions outlined above can reduce any possible risk.

### ***Where can I find additional information?***

For additional information, see the following Web sites:

**Federal Communications Commission (FCC) RF Safety Program** (select "Information on Human Exposure to RF

Fields from Cellular and PCS Radio Transmitters”):

<http://www.fcc.gov/oet/rfsafety>

**World Health Organization (WHO)** International Commission on Non-Ionizing Radiation Protection (select Qs & As): <http://www.who.int/emf>

**United Kingdom, National Radiological Protection Board:**

<http://www.nrpb.org.uk>

**Cellular Telecommunications Industry Association (CTIA):** <http://www.wow-com.com>

**U.S. Food and Drug Administration (FDA)** Center for Devices and Radiological Health:

<http://www.fda.gov/cdrh/consumer/>

1. Muscat et al. Epidemiological Study of Cellular Telephone Use and Malignant Brain Tumors. In: State of the Science Symposium; 1999 June 20; Long Beach, California.
2. Tice et al. Tests of mobile phone signals for activity in genotoxicity and other laboratory assays. In: Annual Meeting of the Environmental Mutagen Society; March 29, 1999, Washington, D.C.; and personal communication, unpublished results.
3. Preece, AW, Iwi, G, Davies-Smith, A, Wesnes, K, Butler, S, Lim, E, and Varey, A. Effect of a 915-MHz simulated mobile phone signal on cognitive function in man. *Int. J. Radiat. Biol.*, April 8, 1999.
4. Hardell, L, Nasman, A, Pahlson, A, Hallquist, A and Mild, KH. Use of cellular telephones and the risk for brain tumors: a case-control study. *Int. J. Oncol.*, 15: 113-116, 1999.

ITC00-010

# Warranty

---

## **Limited Warranty for Motorola Personal Communications Products and Accessories Purchased in the United States and Canada**

### **I. What This Warranty Covers**

Defects in materials and workmanship in the following new “**Products**” manufactured, sold or certified by Motorola, with which this limited warranty is included in/on the package:

(a) wireless cellular telephones, pagers and two-way radios that operate via “Personal Radio Service” (such as Family Radio Service and General Mobile Radio Service), together with software imbedded in any of these products, and  
(b) subject to the following exceptions, accessories or software sold for use with these products.

- Battery Exception. This limited warranty extends only to batteries in which the fully-charged capacity falls below 80% of rated capacity and batteries that leak;
- Software Exceptions. This limited warranty extends only to physical defects in the media (such as CD-ROM) that tangibly embodies each copy of any software sold and/or certified by Motorola for use with Products. Software that is not tangibly embodied in media and that is purchased separately from Products (such as software that is downloaded from the internet) comes “**as is**” and **without warranty**.

## ***II. What the Period of Coverage Is***

Subject to the following exceptions, one year from the date the Products are purchased by the first end-user:

- 90-Day Warranty Exception. The warranty is for 90 days for: (a) any software tangibly embodied in media or (b) any accessories for two-way radios that are covered by this warranty, as described in Section I, above.
- Limited Lifetime Warranty Exception. The warranty is a limited lifetime warranty for the lifetime of ownership by the first end-user of the following products, **only**: (a) decorative covers, including bezel, PhoneWrap™ or case (any model); and (b) ear buds and boom headsets that transmit mono sound through a wire connection (this does **not** include ear buds or boom headsets that either transmit stereo sound or that are wireless, or both).
- Repair/Replacement Exception. The warranty is for the balance of the original warranty or for 90 days from the date returned and delivered to the first end-user, whichever is longer.

## ***III. Who is Covered***

This warranty extends to you only if you are the first end-user purchaser.

## ***IV. What We Will Do to Correct Warranty Problems***

At no charge to you, we have the option to repair or replace the Products that do not conform to the warranty, or to refund the Products' purchase price. We may use functionally equivalent reconditioned/refurbished/pre-owned or new Products or parts. No software updates are provided.

## ***V. How to Get Warranty Service***

**PLEASE CALL US — DO NOT SHIP:**

### **USA**

**Cellular 1-800-331-6456**

**Paging 1-800-548-9954**

**FRS Radios 1-800-353-2729**

**TTY (Text Telephone)**

**1-888-390-6456**

### **Canada**

**All Products**

**1-800-461-4575**

**TTY (Text Telephone)**

**1-888-390-6456**

Accessories and software—call the number designated for the product with which they are used.

You will receive instructions on how to ship the Products to Motorola or our designated resource. If instructed to ship the Products, you must ship them with freight, duties and insurance prepaid. Regardless of where you are instructed to return the Products, you must include: (a) a copy of your receipt, bill of sale or other comparable proof of purchase; (b) a written description of the problem; (c) the name of your service provider (if this Product requires subscription service); (d) the name and location of the installation facility (if applicable) and, most importantly; (e) your address and telephone number. If requested, you must also return all detachable parts such as antennas, batteries and chargers. **RETAIN YOUR ORIGINAL PROOF OF PURCHASE.**

For Products we ask you ship to us, we will ship repaired or replacement Products at our expense for the freight and insurance, but at your expense for any duties. If additional information is needed, please contact us at the telephone number listed above.



## ***VI. What This Warranty Does Not Cover***

- **Products that are operated in combination with ancillary or peripheral equipment or software not furnished or otherwise certified by Motorola for use with the Products (“ancillary equipment”), or any damage to the Products or ancillary equipment as a result of such use. Among other things, “ancillary equipment” includes batteries, chargers, adaptors, and power supplies not manufactured or supplied by Motorola. Any of these voids the warranty.**
- Someone other than Motorola (or its authorized service centers) tests, adjusts, installs, maintains, alters, modifies or services the Products in any way. Any of these voids the warranty.
- Rechargeable batteries that: (a) are charged by other than the Motorola-approved battery charger specified for charging such batteries; (b) have any broken seals or show evidence of tampering; (c) are used in equipment other than the Product for which they are specified; or (d) are charged and stored at temperatures greater than 60 degrees centigrade. Any of these voids the warranty.
- Products that have: (a) serial numbers or date tags that have been removed, altered or obliterated; (b) board serial numbers that do not match each other, or board serial numbers that do not match the housing; or (c) nonconforming or non-Motorola housings or parts. Any of these voids the warranty.

- Defects or damage that result from: (a) use of the Products in a manner that is not normal or customary; (b) improper operation or misuse; (c) accident or neglect such as dropping the Products onto hard surfaces; (d) contact with water, rain, extreme humidity or heavy perspiration; (e) contact with sand, dirt or the like; or (f) contact with extreme heat, or spills of food or liquid.
- Physical damage to the surface of the Products, including scratches, cracks or other damage to a display screen, lens or other externally exposed parts.
- Failure of Products that is due primarily to any communication service or signal you may subscribe to or use with the Products.
- Coil cords that are stretched or that have any broken modular tabs.
- Leased Products.

Flat-rate repair rates may apply to Products not covered by this warranty. To obtain information about Products needing repairs that are not covered by this warranty, please call the telephone number previously listed. We will provide information on repair availability, rates, methods of payment, where to send the Products, etc.

## ***VII. Some Other Limitations***

**This is Motorola's complete warranty for the Products, and states your exclusive remedies. This warranty is given in lieu of all other express warranties. Implied warranties, including without limitation, the implied warranties of merchantability and fitness for a particular purpose, are given only if specifically required by applicable law. Otherwise, they are specifically excluded.**

**No warranty is made as to coverage, availability, or grade of service provided by the Products, whether through a service provider or otherwise.**

**No warranty is made that the software will meet your requirements or will work in combination with any hardware or applications software products provided by third parties, that the operation of the software products will be uninterrupted or error free, or that all defects in the software products will be corrected.**

**In no event shall Motorola be liable, whether in contract or tort (including negligence) for damages in excess of the purchase price of the Product, or for any indirect, incidental, special or consequential damages of any kind, or loss of revenue or profits, loss of business, loss of information or data, or other financial loss arising out of or in connection with the ability or inability to use the Products, to the full extent these damages may be disclaimed by law.**

## ***VIII. Patent and Software Provisions***

At Motorola's expense, we will defend you, and pay costs and damages that may be finally awarded against you, to the extent that a lawsuit is based on a claim that the Products directly infringe a United States patent. Our obligation is conditioned on: (a) you notifying us promptly in writing when you receive notice of the claim; (b) you giving us sole control of the defense of the suit and all negotiations for its settlement or compromise; and (c) should the Products become, or in Motorola's opinion be likely to become, the subject of a claim of infringement of a United States patent, you permit us, at our option and expense, either to: procure for you the right to continue using the Products; replace or modify them so that they become non-infringing; or grant you a credit for such Products, as depreciated, and accept their return. The depreciation will be an equal amount per year over the lifetime of the Products, as established by Motorola.

Motorola will have no liability to you with respect to any claim of patent infringement that is based upon the combination of the Products or parts furnished under this limited warranty with ancillary equipment, as defined in VI., above.

**This is Motorola's entire liability with respect to infringement of patents by the Products.**

## ***IX. State Law and Other Jurisdiction Rights***

Some states and other jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, or limitation on the length of an implied warranty, so the above limitations or exclusions may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights, which vary from jurisdiction to jurisdiction.

To obtain information on Motorola Personal Communications Products, including warranty service, accessories and optional Extended Warranties on selected Products, please call:

**USA**

**Cellular 1-800-331-6456**

**Paging 1-800-548-9954**

**FRS Radios 1-800-353-2729**

**TTY (Text Telephone)**

**1-888-390-6456**

**Canada**

**All Products**

**1-800-461-4575**

**TTY (Text Telephone)**

**1-888-390-6456**

Accessories and software—call the telephone number designated above for the product with which they are used.

**DO NOT SHIP PRODUCTS TO THESE ADDRESSES —  
INSTEAD PLEASE CALL.**

To correspond with Motorola about Products, please write us at: <http://www.motorola.com> or at:

In the USA:

Motorola, Inc.

600 North U.S. Highway 45

Libertyville, IL 60048

In Canada:

Motorola Canada Limited

5875 Whittle Road

Mississauga, ON L4Z 2H4

ITC01-078

# *Product Registration*

---

Online Product Registration:

<http://www.motorola.com/warranty>

Product registration is an important step toward enjoying your new Motorola product. Registering helps us facilitate warranty service, and permits us to contact you should your product require an update or other service. Registration is for U.S. residents only and is not required for warranty coverage.

Please retain your original dated sales receipt for your records. For warranty service of your Motorola Personal Communications Product you will need to provide a copy of your dated sales receipt to confirm warranty status.

Thank you for choosing a Motorola product.

## *Export Law Assurances*

---

This product is controlled under the export regulations of the United States of America and Canada. The Governments of the United States of America and Canada may restrict the exportation or re-exportation of this product to certain destinations. For further information contact the U.S. Department of Commerce or the Canadian Department of Foreign Affairs and International Trade.

# Index

---

## A

accessories

optional 10, 79, 118,  
120, 123

standard 18

accessory connector port  
1

active line indicator

defined 23

illustration 22

**Add Digits** feature 59

alarm 74, 76

alert

creating 95–102

defined 93

reminders, turning on/off  
102

selecting 94

turning off 29

analog signal indicator

defined 23

illustration 22

animation 54

answering a call 21

antenna 1

application, locking 52

appointments. *See*  
datebook

**Attach Number** feature 31,  
59

## B

backlight 54

battery

car kit charger time 122

charging 19

extending battery life  
25–26, 54

installing 18

level indicator 19, 22,  
23

meter 50

battery save 54

blackjack 113–114

block cursor, defined 37

browse text mode 38

browser. *See*

micro-browser

## C

calculator 109–111

calendar. *See* datebook  
call

adding digits after phone  
number 59

alert, creating 95–102

- alert, selecting 94
- alert, turning off 29
- answer options 52
- answering 21
- call waiting 32
- calling card 66
- canceling 29
- data call 125–128
- datebook, opening 33
- deleting 58–59
- dialed calls list 31, 33, 58–59
- dialing 20
- dialing a recent call 58–59
- emergency number 28
- ending 21
- in-call timer 51
- incoming call type, setting 126–128
- making 20
- message center, accessing 33
- muting 33
- prefix digits, inserting 31
- privacy 27, 133
- received calls list 31, 33, 58–59
- receiving 21
- recent calls 58–59
- restricting 132–??
- ring style, setting 93
- secure connection 27, 133
- speakerphone, activating 33
- storing 58–59
- three-way call 32
- timing 60–62
- unanswered call 28
- voice dial 31
- call timers 60–62
  - resetting 62
  - viewing 62
- call waiting 32
- caller ID 27, 28
- calling card call 66
- calling line identification. See caller ID
- car kit
  - automatic answer 120
  - automatic hands-free 121
  - charger time 122
  - power-off delay 121
- clock 22
- codes
  - changing 129–130
  - default 20
  - if you forget a code/password 130
  - original 129



- computer
  - connecting to phone 123–125
- contrast, display 55
- currency converter 111
- cursor 37
- customizing the menu 117

## D

- data call
  - connecting to external device 123–125
  - incoming call format, setting 126–128
  - receiving 126–127
  - sending 125–126
- date, setting 53
- datebook
  - adding an event 76
  - alarm 76
  - calendar 74
  - changing event information 76
  - copying an event 77
  - day view 75
  - deleting an event 78
  - event reminders, turning on/off 102
  - event view 75
  - reminders 76
  - week view 74
- deleting a call 58–59

- dialed calls list 31, 33, 58–59

- dialing a number 20

### Dialing Menu 60

- digital signal indicator
  - defined 23
  - illustration 22

### display

- animation 54
- backlight 54
- contrast 55
- described 22–24
- greeting 53
- idle display 22
- illustration 22
- language 54
- zoom setting 54
- zooming in/out 24

- drafts folder 49

- DTMF tones 33, 55, 59, 139

## E

### earpiece

- illustration 1
- volume, adjusting 24

### email

- address, storing in phonebook 64–66

- email, sending 69, 89–91

- emergency number 28

- end key
  - functions 21
  - menu functions 34
- ending a call 21
- Enter Unlock Code**
  - message 130, 132
- event alert 94
- exchange rate, calculating 111
- external device
  - connecting to phone 123–125
- F**
- factory settings, resetting 55–56
- falling numbers 114–115
- flashing cursor, defined 37
- FM Stereo Radio Headset 48, 79–81
- G**
- games 112–116
- greeting, display 53
- H**
- hands-free mode
  - automatic answer 120
  - automatic call routing 121
  - charger time 122
  - defined 120
  - power-off delay 121
  - speakerphone,
    - activating 33
- headset
  - automatic answer 120
  - FM Stereo Radio Headset 48, 79–81
- high-security connection 27, 133
- I**
- idle display, defined 22
- in use indicator
  - defined 23
  - illustration 22
- inbox, text message 84–85
- in-call timer 51
- incoming call
  - canceling 29
  - type, setting 126–128
- Incoming Call** message 27
- indicators
  - active line 22, 23
  - battery level 19, 22, 23
  - digital/analog signal 22, 23
  - in use 22, 23
  - loud ring style 24, 93

- menu 22, 23
- message waiting 22,  
23, 85
- missed call 28
- ring and vibrate ring  
style 24, 93
- ring style 22, 24, 93
- roam 22, 23
- signal strength 22, 23
- silent alert 24
- silent ring style 24, 93
- soft ring style 24, 93
- vibrate ring style 24, 93
- voice message waiting  
22, 23, 83
- voice name 63

iTAP software 43–46

## K

### key

- end 21, 34
- left soft key 1, 22, 34,  
117
- lock 52, 132
- menu 1, 10, 23, 34
- navigation 34
- power 20
- power/end 1
- right soft key 1, 22, 34,  
117
- scroll 1
- send 1, 20, 21, 58

- voice 68

keypad

- answering calls 52
- locking and unlocking  
52, 132
- volume, setting 95

## L

language, setting 54

left soft key

- customizing 117
- functions 1, 22, 34

**Line Not Secure** message  
28

lock

- applications 52
- keypad 52, 132
- phone 131–132

lock application feature 52

loud ring style indicator  
24, 93

**Low Battery** message 23

## M

making a call 20

master clear 56

master reset 55

**Memory is Full!** message  
86

### menu

- Browser Menu** 108
- Calculator Menu** 109

- customizing 117
  - Datebook Menu** 74, 75
  - Dialing Menu** 31, 60
  - entering text 36–37, 38–46
  - features 47–57
  - language, setting 54
  - Last Calls Menu** 59
  - lists 35
  - locking applications 52
  - My Tones Menu** 101, 102
  - navigating 10, 34
  - Phonebook Menu** 63
  - Quick Note Menu** 92
  - rearranging features 117
  - scroll feature 54
  - Text Msg Menu** 87–88
  - using features 10, 35–37
  - menu indicator
    - defined 23
    - illustration 22
  - menu key 1, 10, 23, 34
  - message
    - deleting, text 86–88
    - dialing number from 30
    - drafts folder 49
    - inbox setup, text message 84–85
    - locking, text 86–88
    - outbox 49, 92
    - quick note 91–92
    - reading, text 86–88
    - receiving, text 85–86
    - reminders, receiving 83, 86
    - reminders, turning on/off 102
    - sending 31, 89–91
    - sound 89
    - status 92
    - text 84–92
    - voicemail 82–83
  - message waiting indicator
    - defined 23
    - displayed 85
    - illustration 22
  - micro-browser
    - using 107–108
  - microphone 1
  - missed call indicator 28
  - Missed Call** message 28
  - missed call, dialing 31
  - muting a call 33
  - my telephone number 21, 33, 50
  - my tones 95–102
  - My Tones Menu** 101, 102
- ## N
- navigation key 34
  - network settings 56

notepad  
  defined 60  
  entering digits 60  
  retrieving digits 60  
number, viewing your own  
  50  
numeric text mode 38

## O

one-touch dial  
  defined 30  
  using 30  
  voicemail number 30  
optional accessory,  
  defined 10  
optional feature, defined  
  10  
outbox 49, 92

## P

passwords. *See* codes  
pause character 67  
phone  
  active line indicator 23  
  alert, turning off 29  
  answer options 52  
  codes 129–130  
  connecting to external  
    device 123–125  
  erase user-entered  
    information 56

  feature specifications  
    33, 51  
  information 33  
  keypad, locking and  
    unlocking 52,  
    132  
  locking 131–132  
  muting a call 33  
  reset all options 55  
  secure connection 27,  
    133  
  security code 129  
  specifications 33, 51  
  turning on/off 20  
  unlock code 20, 129,  
    130  
  unlocking 20, 131–132  
  voice dial 31  
phone number  
  active line indicator 23  
  active phone line,  
    changing 50  
  adding digits after 59  
  attaching to prefix digits  
    31  
  attaching two numbers  
    59  
  redialing 27  
  seeing your own 21, 33  
  sending text message to  
    31

- storing in phonebook 64–66
  - viewing your own 50
  - voice dial 31
  - phonebook
    - attaching two numbers 59
    - capacity, checking 71
    - deleting an entry 70
    - dialing a number 69
    - editing an entry 70
    - email address 63
    - entry details 63
    - entry name 63
    - number type indicator 63
    - one-touch dial 30
    - phone number 63
    - prefix digits, inserting 31
    - primary number, setting 71
    - ringer ID,
      - activating/deactivating 94–95
    - ringer ID, defined 65, 94
    - ringer ID, setting 65
    - sending an email 69
    - sorting entries 72
    - speed dial number 63, 65
    - speed dial number,
      - defined 30
    - speed dial, using 30
    - storing an entry 64–66
    - voice name entry 68
    - voice name indicator 63
  - PIN code 66
  - power key 20
  - power/end key
    - functions 1
  - predictive text entry 43–46
  - privacy, call 27, 133
- Q**
- quick note 91–92
    - defined 84
- R**
- radio 79–81
  - received calls list 31, 33, 58–59
  - recent calls 58–59
  - redial
    - busy number 27
  - reminders
    - datebook 76
    - defined 102
    - text message 86
    - turning on/off 102
    - voicemail message 83
  - restricting calls 132–??

- right soft key
  - customizing 117
  - functions 1, 22, 34
- ring alert
  - selecting 94
  - turning off 29
- ring and vibrate alert
  - turning off 29
- ring and vibrate ring style indicator 24, 93
- ring style
  - customizing 94–95
  - defined 93
  - indicators 24, 93
  - setting 93
- ring style indicator
  - defined 24, 93
  - illustration 22
- ringer
  - volume, adjusting 24
  - volume, setting 95
- ringer ID
  - activating/deactivating 94–95
  - defined 65, 94
  - listed in phonebook entry 63
  - setting for phonebook entry 65
- roam indicator
  - defined 23
  - illustration 22
- S**
  - scroll feature 54
  - scroll keys 1
  - secure connection 27, 133
  - security code
    - changing 129–130
  - send key 1, 20, 21, 58
  - short message service.
    - See text message
  - shortcuts
    - creating 104–105
    - standard 104
    - using 106
  - signal strength indicator
    - defined 23
    - illustration 22
  - silent alert indicator 24
  - silent ring style indicator 24, 93
  - SMS. See text message
  - soft keys
    - customizing 117
    - functions 22, 34
    - illustration 1
    - labels 22
  - soft ring style indicator 24, 93
  - sound
    - storing 89
  - speakerphone, activating 33
  - speed dial

- changing number 65
- number, defined 30
- sorting phonebook
  - entries by 72
- using 30
- standby time, increasing 26
- storing a call 58–59
- symbol text mode 42–43
- symbols, entering 42–43

## T

- Talk Secure** feature 27, 133
- tap method text entry 39–41
- telephone number, viewing your own 50
- text
  - block cursor 37
  - browse mode 38
  - character chart 41
  - entering from keypad 38–46
  - entry mode, changing 38
  - flashing cursor 37
  - iTAP software predictive text entry 43–46
  - numeric mode 38
  - symbol chart 42
  - symbol mode 42–43

- tap method 39–41
- text message
  - defined 84
  - deleting 86–88
  - dialing number from 30
  - drafts folder 49
  - inbox setup 84–85
  - locking 86–88
  - outbox 49
  - quick note 91–92
  - reading 86–88
  - receiving 85–86
  - reminders 86
  - sending 31, 89–91
  - sound 89
  - status 92
- text mode, changing 38
- three-way call 32
- time, setting 53
- timers 60–62
  - resetting 62
  - viewing 62
- travel charger, using 19
- TTY device 118–120

## U

- unlock
  - keypad 52, 132
  - phone 131–132
- unlock code 130
  - bypassing 130
  - changing 129–130



entering 20, 131, 132

## V

vibrate alert

selecting 94

turning off 29

vibrate ring style

indicator 24, 93

setting 93

video poker 115–116

voice dial

dialing a number 31, 69

recording voice name

68

voice key

recording a voice name

68

voice message waiting

indicator 22, 23, 83

voice name

defined 68

phonebook indicator 63

recording 68

voice shortcut

creating 104–105

defined 104

using 106

voicemail

dialing with one-touch

dial 30

reminders, turning on/off

102

using 82–83

volume

earpiece 24

keypad 95

ringer 24, 95

volume control 24

## W

wait character 67

warranty 157–164

Web pages 107–108

## Z

zoom setting 54

zooming in/out 24



**MOTOROLA**

# Wireless Phone Safety Tips

*“Safety is your most important call!”*


Your Motorola wireless telephone gives you the powerful ability to communicate by voice—almost anywhere, anytime, wherever wireless phone service is available and safe conditions allow. But an important responsibility accompanies the benefits of wireless phones, one that every user must uphold.

When driving a car, driving is your first responsibility. If you find it necessary to use your wireless phone while behind the wheel of a car, practice good common sense and remember the following tips:

- 1 Get to know your Motorola wireless phone and its features such as speed dial and redial.** If available, these features help you to place your call without taking your attention off the road.



- 2 **When available, use a hands-free device.** If possible, add an additional layer of convenience to your wireless phone with one of the many Motorola Original™ hands-free accessories available today.
- 3 **Position your wireless phone within easy reach.** Be able to access your wireless phone without removing your eyes from the road. If you receive an incoming call at an inconvenient time, if possible, let your voice mail answer it for you.
- 4 **Let the person you are speaking with know you are driving; if necessary, suspend the call in heavy traffic or hazardous weather conditions.** Rain, sleet, snow, ice, and even heavy traffic can be hazardous.
- 5 **If you receive an incoming call at an inconvenient time do not take notes or look up phone numbers while driving.** Jotting down a “to do” list or going through your address book takes attention away from your primary responsibility—driving safely.
- 6 **Dial sensibly and assess the traffic; if possible, place calls when you are not moving or before pulling into traffic.** Try to plan calls when your car will be stationary. If you need to make a call while moving, dial only a few numbers, check the road and your mirrors, then continue.
- 7 **Do not engage in stressful or emotional conversations that may be distracting.** Make people you are talking with aware you are driving and suspend conversations which have the potential to divert your attention away from the road.

- 
- 8 **Use your wireless phone to call for help.** Dial 9-1-1 or other local emergency number in the case of fire, traffic accident or medical emergencies.\*
- 9 **Use your wireless phone to help others in emergencies.** If you see an auto accident, crime in progress or other serious emergency where lives are in danger, call 9-1-1 or other local emergency number, as you would want others to do for you.\*
- 10 **Call roadside assistance or a special non-emergency wireless assistance number when necessary.** If you see a broken-down vehicle posing no serious hazard, a broken traffic signal, a minor traffic accident where no one appears injured, or a vehicle you know to be stolen, call roadside assistance or other special non-emergency wireless number.\*
- PRELIMINARY

\* Wherever wireless phone service is available.

Check the laws and regulations on the use of wireless telephones and their accessories in the areas where you drive. Always obey them. The use of these devices may be prohibited or restricted in certain areas.



PRELIMINARY

For more information,  
please call  
1-888-901-SAFE  
or visit the  
CTIA Web site at  
[www.wow-com.com](http://www.wow-com.com)<sup>TM</sup>

ITC00-011

