

APPLICANT: MOTOROLA, INC.

FCC ID: IHDT56EH1

INSTRUCTION MANUAL

A preliminary draft copy of the Users Manual follows:



MOTOROLA

V180
GSM

START HERE >

Welcome

Welcome to the world of Motorola digital wireless communications! We are pleased that you have chosen the Motorola V180 GSM wireless phone.



Motorola, Inc.
Consumer Advocacy Office
1307 East Algonquin Road
Schaumburg, IL 60196
1-800-331-6456 (United States)
1-888-390-6456 (TTY/TDD United States)
1-800-461-4575 (Canada)
www.motorola.com (United States)
www.motorola.ca (Canada)

MOTOROLA and the Stylized M Logo are registered in the US Patent & Trademark Office. Java and all other Java-based marks are trademarks or registered trademarks of Sun Microsystems, Inc. in the U.S. and other countries. All other product or service names are the property of their respective owners.

© Motorola, Inc., 2004

The information contained in Motorola's user's guides is believed to be correct at the time of printing. Motorola reserves the right to change or modify any information or specifications without notice. The contents of Motorola's user's guides are provided "as is." Except as required by applicable law, no warranties of any kind, either express or implied, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose, are made in relation to the accuracy, reliability, or contents of this guide.

Contents

Safety and General Information	6
Getting Started	12
About This Guide	12
Installing the SIM Card	13
Battery Use	13
Installing the Battery	14
Charging the Battery	15
Changing Your Phone's Lens	16
Turning Your Phone On	17
Adjusting Volume	18
Making a Call	19
Answering a Call	19
Viewing Your Phone Number	19
Highlight Features	20
USB Connectivity	20
Sending a Multimedia Message	20
Receiving a Multimedia Message	23
Learning to Use Your Phone	24
Using the Display	24
Using the 5-Way Navigation Key	29
Using Menus	30
Entering Text	33
Using the External Display	43
Using the Handsfree Speaker	44
Changing a Code, PIN, or Password	44
Locking and Unlocking Your Phone	45
If You Forget a Code, PIN, or Password	46
Using the Address Book	47

Setting Up Your Phone	50
Setting the Time and Date	50
Setting a Ring Style	50
Setting a Wallpaper Image	51
Setting a Screen Saver Image	52
Setting Display Color	53
Adjusting the Backlight	53
Setting Display Timeout	54
Calling Features	55
Changing the Active Line	55
Redialing a Number	55
Using Automatic Redial	56
Using Caller ID	56
Canceling an Incoming Call	57
Calling an Emergency Number	57
Dialing International Numbers	58
Viewing Recent Calls	58
Returning an Unanswered Call	60
Using the Notepad	60
Attaching a Number	61
Calling with Speed Dial	61
Calling with 1-Touch Dial	62
Using Voicemail	62
Using Call Waiting	64
Putting a Call On Hold	64
Transferring a Call	65
Phone Features	66
Menu Map	66
Calling Features	68
Messages	68
Instant Messaging	69

Chat	70
Address Book	71
Personalizing Features	74
Menu Features	75
Dialing Features	77
Call Monitoring	78
Handsfree Features	79
Data and Fax Calls	81
Network Features	81
Personal Organizer Features	82
Security	83
News and Entertainment	84
Specific Absorption Rate Data	87
Index	89

Safety and General Information

IMPORTANT INFORMATION ON SAFE AND EFFICIENT OPERATION.
READ THIS INFORMATION BEFORE USING YOUR PHONE.

The information provided in this document supersedes the general safety information in user guides published prior to December 1, 2002.

Exposure To Radio Frequency (RF) Energy

Your phone contains a transmitter and a receiver. When it is ON, it receives and transmits RF energy. When you communicate with your phone, the system handling your call controls the power level at which your phone transmits.

Your Motorola phone is designed to comply with local regulatory requirements in your country concerning exposure of human beings to RF energy.

Operational Precautions

To assure optimal phone performance and make sure human exposure to RF energy is within the guidelines set forth in the relevant standards, always adhere to the following procedures.

External Antenna Care

Use only the supplied or Motorola-approved replacement antenna. Unauthorized antennas, modifications, or attachments could damage the phone.

Do NOT hold the external antenna when the phone is IN USE. Holding the external antenna affects call quality and may cause the phone to operate at a higher power level than needed. In addition, use of unauthorized antennas may result in non-compliance with the local regulatory requirements in your country.

Phone Operation

When placing or receiving a phone call, hold your phone as you would a wireline telephone.

Body-Worn Operation

To maintain compliance with RF energy exposure guidelines, if you wear a phone on your body when transmitting, always place the phone in a Motorola-supplied or approved clip, holder, holster, case, or body harness for this phone, if available. Use of accessories not approved by Motorola may exceed RF energy exposure guidelines. If you do not use one of the body-worn accessories approved or supplied by Motorola, and are not using the phone held in the normal use position, ensure the phone and its antenna are at least 1 inch (2.5 centimeters) from your body when transmitting.

Data Operation

When using any data feature of the phone, with or without an accessory cable, position the phone and its antenna at least 1 inch (2.5 centimeters) from your body.

Approved Accessories

Use of accessories not approved by Motorola, including but not limited to batteries and antenna, may cause your phone to exceed RF energy exposure guidelines. For a list of approved Motorola accessories, visit our website at www.Motorola.com.

RF Energy Interference/Compatibility

Note: Nearly every electronic device is susceptible to RF energy interference from external sources if inadequately shielded, designed, or otherwise configured for RF energy compatibility. In some circumstances your phone may cause interference.

Facilities

Turn off your phone in any facility where posted notices instruct you to do so. These facilities may include hospitals or health care facilities that may be using equipment that is sensitive to external RF energy.

Aircraft

When instructed to do so, turn off your phone when on board an aircraft. Any use of a phone must be in accordance with applicable regulations per airline crew instructions.

Medical Devices

Pacemakers

Pacemaker manufacturers recommend that a minimum separation of 6 inches (15 centimeters) be maintained between a handheld wireless phone and a pacemaker.

Persons with pacemakers should:

- ALWAYS keep the phone more than 6 inches (15 centimeters) from your pacemaker when the phone is turned ON.
- NOT carry the phone in the breast pocket.
- Use the ear opposite the pacemaker to minimize the potential for interference.
- Turn OFF the phone immediately if you have any reason to suspect that interference is taking place.

Hearing Aids

Some digital wireless phones may interfere with some hearing aids. In the event of such interference, you may want to consult your hearing aid manufacturer to discuss alternatives.

Other Medical Devices

If you use any other personal medical device, consult the manufacturer of your device to determine if it is adequately shielded from RF energy. Your physician may be able to assist you in obtaining this information.

Use While Driving

Check the laws and regulations on the use of phones in the area where you drive. Always obey them.

When using your phone while driving, please:

- Give full attention to driving and to the road.
- Use hands-free operation, if available.
- Pull off the road and park before making or answering a call if driving conditions so require.

Responsible driving best practices may be found in the “Wireless Phone Safety Tips” at the end of this manual and at the Motorola website: www.Motorola.com/callsmart.

Operational Warnings

For Vehicles With an Air Bag

Do not place a phone in the area over an air bag or in the air bag deployment area. Air bags inflate with great force. If a phone is placed in the air bag deployment area and the air bag inflates, the phone may be propelled with great force and cause serious injury to occupants of the vehicle.

Potentially Explosive Atmospheres

Turn off your phone prior to entering any area with a potentially explosive atmosphere. Do not remove, install, or charge batteries in such areas. Sparks in a potentially explosive atmosphere can cause an explosion or fire resulting in bodily injury or even death.

Note: The areas with potentially explosive atmospheres referred to above include fueling areas such as below decks on boats, fuel or chemical transfer or storage facilities, areas where the air contains chemicals or particles, such as grain, dust, or metal powders. Areas with potentially explosive atmospheres are often but not always posted.

Blasting Caps and Areas

To avoid possible interference with blasting operations, turn OFF your phone when you are near electrical blasting caps, in a blasting area, or in areas posted “Turn off electronic devices.” Obey all signs and instructions.

Batteries

Batteries can cause property damage and/or bodily injury such as burns if a conductive material such as jewelry, keys, or beaded chains touch exposed terminals. The conductive material may complete an electrical circuit (short circuit) and become quite hot. Exercise care in handling any charged battery, particularly when placing it inside a pocket, purse, or other container with metal objects. **Use only Motorola original batteries and chargers.**

Your battery or phone may contain symbols, defined as follows:

Symbol	Definition
	Important safety information will follow.
	Your battery or phone should not be disposed of in a fire.
	Your battery or phone may require recycling in accordance with local laws. Contact your local regulatory authorities for more information.
	Your battery or phone should not be thrown in the trash.
	Your phone contains an internal lithium ion battery.

Seizures/Blackouts

Some people may be susceptible to epileptic seizures or blackouts when exposed to flashing lights, such as when watching television or playing video games. These seizures or blackouts may occur even if a person never had a previous seizure or blackout.

If you have experienced seizures or blackouts, or if you have a family history of such occurrences, please consult with your doctor before playing video games on your phone or enabling a flashing-lights feature on your phone. (The flashing-light feature is not available on all products.)

Parents should monitor their children's use of video game or other features that incorporate flashing lights on the phones. All persons should discontinue use and consult a doctor if any of the following symptoms occur: convulsion, eye or muscle twitching, loss of awareness, involuntary movements, or disorientation.

To limit the likelihood of such symptoms, please take the following safety precautions:

- Do not play or use a flashing-lights feature if you are tired or need sleep.
- Take a minimum of a 15-minute break hourly.
- Play in a room in which all lights are on.
- Play at the farthest distance possible from the screen.

Repetitive Motion Injuries

When you play games on your phone, you may experience occasional discomfort in your hands, arms, shoulders, neck, or other parts of your body. Follow these instructions to avoid problems such as tendonitis, carpal tunnel syndrome, or other musculoskeletal disorders:

- Take a minimum 15-minute break every hour of game playing.
- If your hands, wrists, or arms become tired or sore while playing, stop and rest for several hours before playing again.
- If you continue to have sore hands, wrists, or arms during or after play, stop playing and see a doctor.

Getting Started



CAUTION: Before using the phone for the first time, read the *Important Safety and Legal Information* included in the gray-edged pages at the back of this guide.

About This Guide

This guide describes the basic features of your Motorola wireless phone.

Optional Features



This label identifies an optional network, SIM card, or subscription-dependent feature that may not be offered by all service providers in all geographical areas. Contact your service provider for more information.

Optional Accessories




This label identifies a feature that requires an optional Motorola Original® accessory.


Installing the SIM Card

Your SIM (Subscriber Identity Module) card contains your phone number, service details, and address book/message memory.

Caution: Do not bend or scratch your SIM card. Avoid exposing your SIM card to static electricity, water, or dirt.

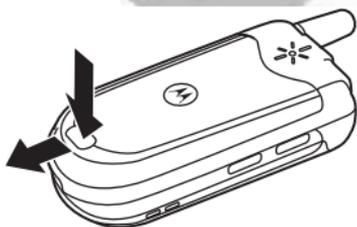

1

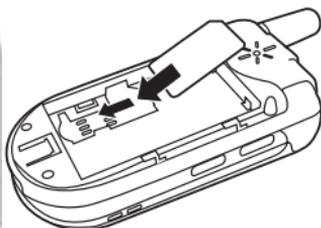

2

Battery Use

Battery performance depends on many factors, including your wireless carrier's network configuration; signal strength; the temperature at which you operate your phone; the features and/or settings you select and use; items attached to your phone's accessory connector; and your voice, data, and other application usage patterns.

Caution: To prevent injuries or burns, do not allow metal objects to contact or short-circuit the battery terminals.

To maximize your battery's performance:

- Always use Motorola Original batteries and battery chargers. The phone warranty does not cover damage



caused from using non-Motorola batteries and/or battery chargers.

- New batteries or batteries that have been stored for a long time may require a longer charge time.
- Maintain the battery at or near room temperature when charging.
- Do not expose batteries to temperatures below -10°C (14°F) or above 45°C (113°F). Always take your phone with you when you leave your vehicle.
- When you do not intend to use a battery for a while, store it uncharged in a cool, dark, dry place, such as a refrigerator.
- Batteries gradually wear down and require longer charging times. This is normal. If you charge your battery regularly and notice a decrease in talk time or an increase in charging time, then it is probably time to purchase a new battery.



The rechargeable batteries that power this phone must be disposed of properly and may need to be recycled. Refer to your battery's label for battery type. Contact your local recycling center for proper disposal methods.


Warning: Never dispose of batteries in a fire because they may explode.

Installing the Battery


Note: If necessary, remove the battery from its protective clear plastic case.




Your phone is designed to use only Motorola Original® batteries and accessories. We recommend that you store batteries in their protective cases when not in use.

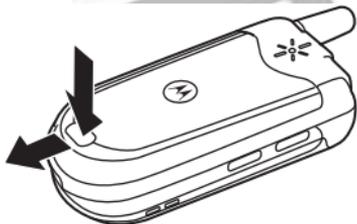

1

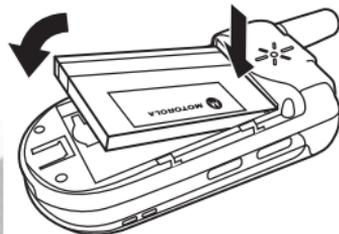

2

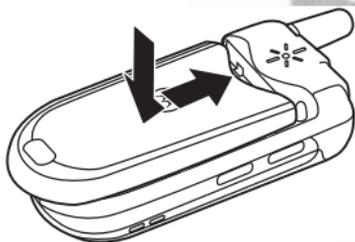


3

Charging the Battery

New batteries are shipped partially charged. Before you can use your phone, you need to install and charge the battery as described below. Some batteries perform best after several full charge/discharge cycles.

Action

- 1 Plug the travel charger into the bottom of your phone.

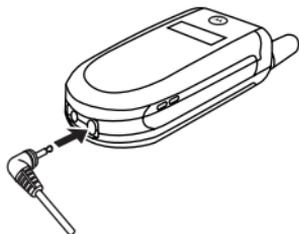

- 2 Plug the other end of the travel charger into the appropriate electrical outlet.
- 3 When your phone indicates **Charge Complete**, remove the travel charger.

Tip: You can safely leave the travel charger connected to your phone after charging is complete. This will not damage the battery.

Changing Your Phone's Lens




Always use Motorola Original® lenses. The phone warranty does not cover damage caused from using non-Motorola accessories.


Your phone has a removable lens that you can replace to change its appearance.

Action

- 1 Use your fingernail to lift the top of the lens and pull it away from the phone.

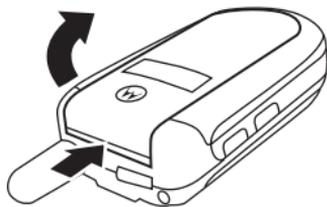


- 2 Insert the tab at the bottom of the new lens into the bottom of the phone flip, then use your thumbs to press along the sides of the lens as you press it into place.

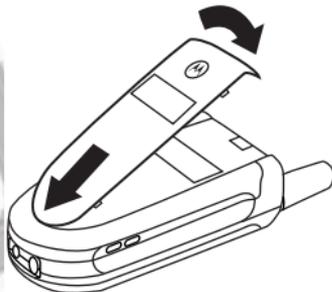

Turning Your Phone On

Action

- 1 Press and hold  for 2 seconds to turn on the phone.

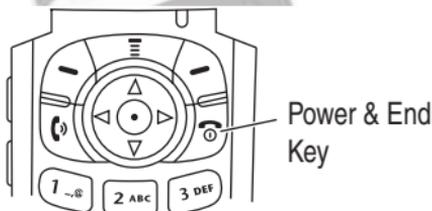

Action

- 2 If necessary, enter your SIM card PIN code and press **OK** (⏏) to unlock the SIM card.

Caution: If you enter an incorrect PIN code 3 times in a row, your SIM card is disabled and your phone displays SIM Blocked.

- 3 If necessary, enter your 4-digit unlock code and press **OK** (⏏) to unlock the phone.


Adjusting Volume

Press the up and down volume keys to:

- increase or decrease earpiece volume during a call
- increase or decrease the ringer volume setting when the home screen is visible

Tip: At the lowest volume setting, press the down volume key once to switch to vibrate alert. Press it again to switch to silent alert. Press the up volume key to switch back to vibrate alert, then ring alert.

- turn off an incoming call alert by setting your ringer volume to **Silent**

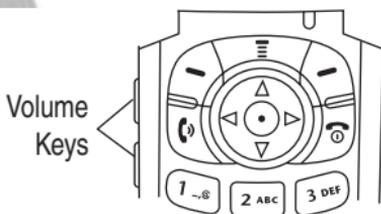

Making a Call

Press	To
1 keypad keys	dial the phone number
2 	make the call
3 	end the call and “hang up” the phone when you are finished



Answering a Call

When you receive a call, your phone rings and/or vibrates and displays an incoming call message.

Press	To
1  or ANSWER ()	answer the call
2 	end the call and “hang up” the phone when you are finished

Viewing Your Phone Number

To view your phone number from the home screen, press  .

While you are on a call, press  > **My Tel. Numbers.**

Highlight Features




You can do much more with your phone than make and receive calls! This section describes some of your phone's highlight features.

USB Connectivity

Your phone features a USB port for quick and easy connection to a PC so you can make data and fax calls (see page 81).

Note: USB data cables and supporting software are sold separately.

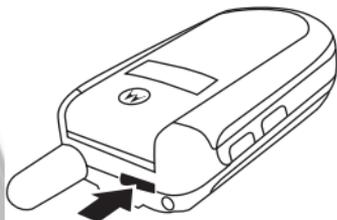

Sending a Multimedia Message



A **Multimedia Messaging Service (MMS)** message contains one or more slides with text and embedded media objects (including pictures, animations, sounds, or voice records). You can send the multimedia message to other wireless phone users, and to email addresses.

Find the Feature



> **Messaging** > **New Message**
> **New Multimedia Msg**

Note: Depending on your service provider, your phone may list the option shown above as **New Picture Msg** rather than **New Multimedia Msg**.



Press	To
1 keypad keys	enter slide text
	Tip: You can press  to open the MMS Menu and select INSERT () to insert a Picture, Voice Record, Sound, Soundtrack, New Page, Quick Note, or Contact Info.
2 OK ()	store the message
3 	scroll to a Send To option: <ul style="list-style-type: none">• Highlight [One Time Entry] to enter one or more phone numbers and/or email addresses.• Highlight [New Address Book Entry] to enter a number/address and add it to the address book.• Or highlight an existing Address Book entry.
4 SELECT ()	select [One Time Entry] or [New Address Book Entry] and enter a number/address. Press DONE () when you are finished.



Press	To
or ADD (⏏)	add an address book entry to the list of recipients. Press OK (⏏) when you are finished.
5 (⌂)	scroll to Subject
6 CHANGE (⏏)	select Subject
7 keypad keys	enter the subject
8 OK (⏏)	store the subject
9 CHANGE (⏏)	select Attachments
10 (⌂)	scroll to Picture or Sounds
11 SELECT (⏏)	select the file type
12 (⌂)	highlight the file you want
13 SELECT (⏏)	attach the file
14 BACK (⏏)	return to the message editor
15 (⌂)	scroll to Receipt
16 CHANGE (⏏)	select Receipt
17 ADD (⏏) or REMOVE (⏏)	activate/deactivate the delivery report
18 DONE (⏏)	return to the message editor



Press

19 SEND (⏏)

To

send the message

or



send the message, view message details, save the message in the drafts folder, or cancel the message



Receiving a Multimedia Message



When you receive an MMS message, your phone displays the  (message waiting) indicator and a **New Message** notification, and sounds an alert.

Press

READ (⏏)

To

open the message

MMS messages that you receive can contain the following media objects:

- Pictures, and animations are displayed as you read the message.
- A sound file begins playing when its slide is displayed.
- Attached files are added to the end of the message. To open the attachment, highlight the file indicator/ filename and press **VIEW** (⏏) (image file type), **PLAY** (⏏) (sound file), or **OPEN** (⏏) (object such as address book or datebook entry, or unknown file type).

Learning to Use Your Phone

See page 1 for a basic phone diagram.

Using the Display

The *home screen* displays when you are **not** on a call or using the menu. You must be in the home screen to dial a phone number.



Left Soft Key Label

Right Soft Key Label

Menu Indicator

Note: Your home screen may look different than the display shown above, depending on your service provider.


The ☰ (menu) indicator indicates that you can press the menu key (☰) to enter the main menu.

Labels at the bottom corners of the display show the current soft key functions. Press the left soft key (☰) or

right soft key (⏏) to perform the function indicated by the left or right soft key label.

Your phone can display an analog or digital clock in the home screen (see page 74).

The following status indicators can display:

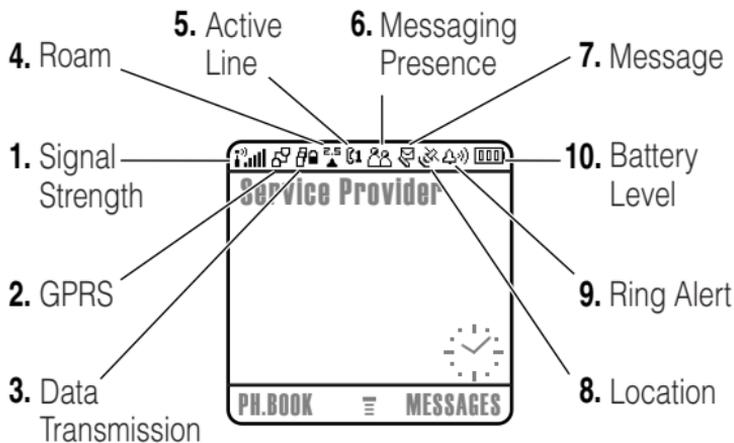

1. Signal Strength Indicator

Vertical bars show the strength of the network connection. You cannot make or receive calls when the (no signal) indicator or (no transmit) indicator displays.

2. GPRS Indicator



Shows that your phone is using a high-speed General Packet Radio Service (GPRS) network connection. GPRS allows faster data transfer speeds. Indicators can include:

 = GPRS PDP context active

 = GPRS packet data available

3. Data Transmission Indicator

Shows connection and data transmission status. Indicators can include:

 = secure packet data transfer

 = insecure packet data transfer

 = secure application connection

 = insecure application connection

 = secure Circuit Switch Data (CSD) call

 = insecure CSD call

4. Roam Indicator



Shows when your phone is seeking or using another network outside your home network. Indicators can include:

 = 2.5G home

 = 2.5G roam

 = 2G home

 = 2G roam

5. Active Line Indicator



Shows  or  to indicate the current active phone line. Other indicators can include:

 = line 1 active, call divert on

 = line 2 active, call divert on

 = alarm activated

6. Messaging Presence Indicator



Shows when Instant Messaging (IM) is active. Indicators can include:

 = IM active

 = available for IM

 = busy

 = invisible to IM

 = available for phone calls

 = offline

Note: Your Instant Messaging feature may have a different name and may display different icons, depending on your service provider.

When a Java application is active, the  (Java midlet) indicator can display in this location.

7. Message Indicator



Displays when you receive a new message. Indicators can include:



 = text message

 = voicemail message

 = IM message

 = active chat session

 = voicemail and text message

When you enter a message, a number in this location shows the number of characters left on the current page (text message), or the message size (multimedia message).



8. Location Indicator



Your phone may be able to send location information to the network during an emergency call. Indicators show when your phone is sending location information:

 = location on

 = location off

9. Ring Style Indicator

Shows the ring style setting.

 = loud ring

 = soft ring

 = vibrate


 = vibrate and ring

 = silent

10. Battery Level Indicator

Vertical bars show the battery charge level. Recharge the battery when **Low Battery** displays and the battery alert sounds.

Using the 5-Way Navigation Key

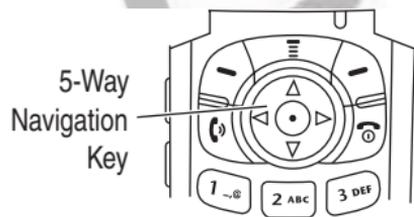


Use the 5-way navigation key (⊙) to scroll up, down, left, or right through the menu system, highlight menu items, change feature settings, and play games.

Press the center select button to select a highlighted menu item.



Using Menus

From the home screen, press  to enter the main menu.

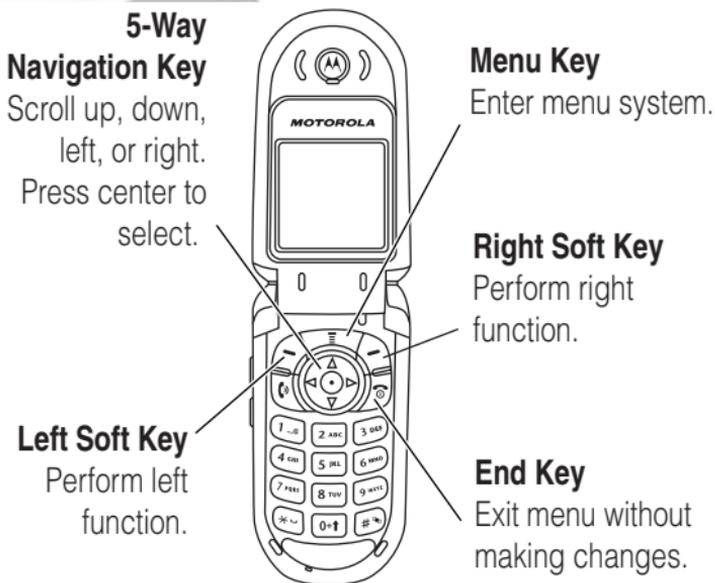

Press  to scroll to and highlight a menu feature icon in the main menu. The following icons represent features that may appear in the main menu, depending on your service provider and service subscription options.

Icon	Feature	Icon	Feature
	Recent Calls		Messaging
	Games		MEdia Net
	MEdia Mail		IM

Icon	Feature	Icon	Feature
	My Media		Address Book
	Settings		

Note: Your Instant Messaging menu icon may be different than the one shown above, depending on your service provider.

Selecting a Menu Feature

To select a menu feature, starting from the home screen:

Find the Feature




> **Recent Calls** > **Dialed Calls**

This example shows that from the home screen, you must press , scroll to and select  **Recent Calls** from the main menu, then scroll to and select **Dialed Calls**. Press  to scroll, and the left/right soft keys to select the functions listed in the bottom left and right corners of the display.



Selecting a Feature Option

Some features require you to select an option from a list:

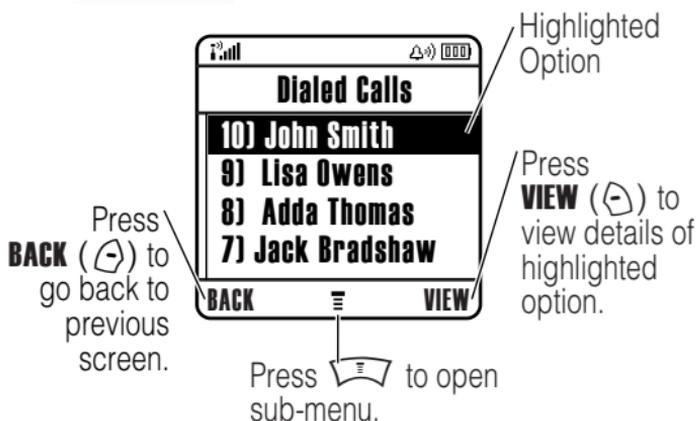

Press  to scroll up or down to highlight the option you want.


- In a numbered list, press a number key to highlight the option.
- In an alphabetized list, press a key repeatedly to cycle through the letters on the key and highlight the closest matching list option.

When an option displays a list of possible values, press  left or right to scroll through and select a value.


When an option displays a list of possible numeric values, press a number key to set the value.

Entering Text

Some features require you to enter information.

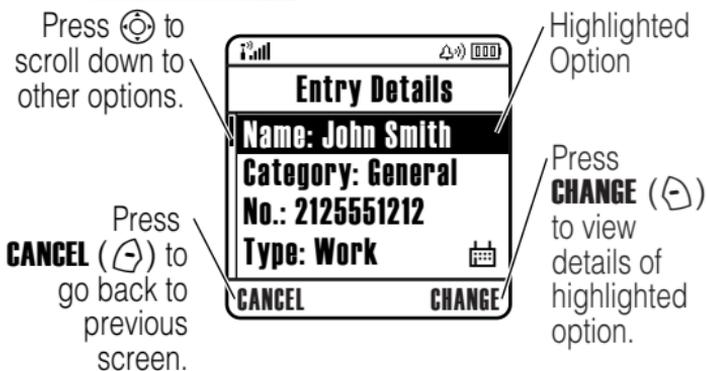

The message center lets you compose and send text messages. A *Character Counter* indicates how many more characters will fit in a message.

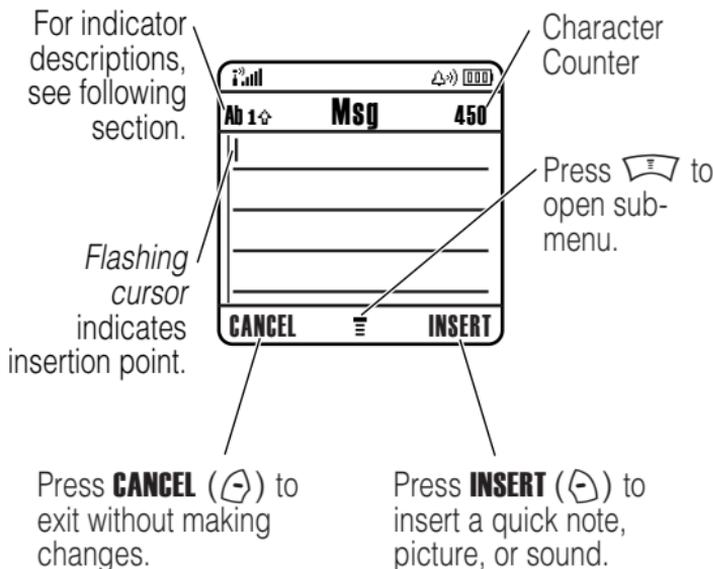

Choosing a Text Entry Mode

Multiple text entry modes make it easy for you to enter names, numbers, and messages. The method you select remains active until you select another method.

Press [Mode icon] in any text entry screen to select one of the following entry modes:

- | | |
|----------------|---|
| Primary | The primary text entry mode (see below to set). |
| Numeric | Enter numbers only (see page 41). |

Symbol	Enter symbols only (see page 42).
Secondary	The secondary text entry mode (see below to set).

Alternatively, you can select a text entry mode in any text entry screen by pressing  > **Entry Mode**.

Setting Up a Text Entry Mode

Press  > **Entry Setup** from any text entry screen. Select **Primary Setup** or **Secondary Setup**, and choose:

ITAP	Let the phone predict each word as you press keys (see page 39).
Tap	Enter letters and numbers by pressing a key one or more times.
Tap Extended	Enter letters, numbers, and symbols by pressing a key one or more times.
None	Hide the Secondary setting (available only for Secondary Setup).

Using Capitalization

Press  in any text entry screen to change text case. The following indicators on your phone's display show capitalization status:

abc = no capital letters

Abc = capitalize next letter only

ABC = all capital letters



Text Entry Mode Indicators

When you select the **Primary** or **Secondary** text entry mode, the following indicators identify the text entry setting:

Primary	Secondary	Description
1	2	Tap, no capital letters
1↑	2↑	Tap, capitalize next letter only
1↑	2↑	Tap, all capital letters
1□	2□	iTAP, no capital letters
1↑□	2↑□	iTAP, capitalize next letter only
1↑□	2↑□	iTAP, all capital letters

The following indicators identify **Numeric** or **Symbol** entry mode:

123 = numeric method @ = symbol method

Using Tap Method

This is the standard method for entering text on your phone.

Tap method cycles through the letters and number of the key you press. Tap Extended method also cycles through additional symbols as shown in the chart on page 38.


Press	To
1 a keypad key 1 or more times	select a letter, number, or symbol
2 keypad keys	enter remaining characters
	Tip: Press  right to accept a word completion, or  to insert a space.
3 OK ()	store the text

In a text entry screen, you can press  to switch entry modes. If **Tap** or **Tap Extended** is not available as the **Primary** or **Secondary** entry mode, see page 35.

When you enter text with **Tap** or **Tap Extended** method, the soft key functions change.

Character displays at insertion point.

Press **DELETE** () to delete character to left of insertion point.

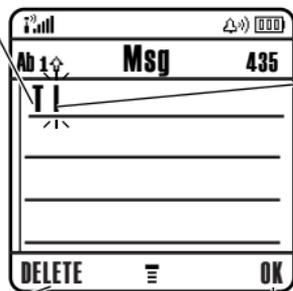

After 2 seconds, character is accepted and cursor moves to next position.

Press **OK** () to accept and store text.



When you enter 3 or more characters in a row, your phone may guess the rest of the word. For example, if you enter **prog** you might see:

Character displays at insertion point.



Press to accept **program**, or press to reject it and enter a space after **prog**.

If you want a different word (such as **progress**), continue pressing keypad keys to enter the remaining characters.

Character Chart

Use this chart as a guide for entering characters with **Tap Extended** method.

	. ? ! , @ ' - _ : ; () & " ~ 1 0 ¿ ¡ % £ \$ ¥ ¤ € + x * / \ [] = > < # §
	a b c 2 á à â ã ç æ
	d e f 3 é è ê ë
	g h i 4 í î ï
	j k l 5
	m n o 6 ñ ó ò ô õ ö
	p q r s 7
	t u v 8 ú û ü
	w x y z 9
	change text case, for capital letters

	enter a space (hold to enter a return)
	change text entry mode (hold for default)

Note: This chart may not reflect the exact character set available on your phone. In an email address or URL editor,  first shows common characters for that editor.

Tap Method Text Entry Rules


- Press a keypad key repeatedly to cycle through its characters.
- Press  left or right to move the flashing cursor to the left or right in a text message.
- The first character of every sentence is capitalized. If necessary, press  down to force the character to lowercase before the cursor moves to the next position.
- If you enter or edit information and do not want to save the changes, press  to exit without saving.

Using iTAP™ Method

iTAP™ software provides a predictive text entry mode that lets you enter a word using one key press per letter. This can be faster than **Tap** method, because your phone combines the keypresses into common words.



For example, if you press    , letter combinations that match your key presses display:

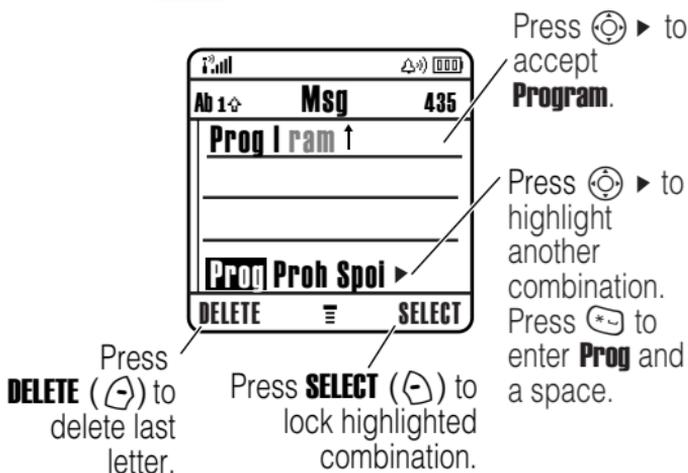

If you want a different word (such as **Progress**), continue pressing keypad keys to enter the remaining characters.

Entering Words

In a text entry screen, you can press  to switch entry modes. An indicator shows which method is active (see page 36). If **ITAP** method is not available as the **Primary** or **Secondary** entry mode, see page 35.

Press	To
1 keypad keys (1 press per letter)	show possible letter combinations at the bottom of the display
2  left or right	highlight the combination you want

Press**3 SELECT** (⏏)**To**

lock a highlighted combination

You can press keypad keys to add more letters to the end of the combination.

or

enter the highlighted combination when it spells a word

A space is automatically inserted after the word.



If you enter a word your phone does not recognize, the phone stores it to use as one of your word options. When you fill memory space for unrecognized words, your phone deletes the oldest words to add new words.

Note: The iTAP method may not be available for all languages.

Using Numeric Method

In a text entry screen, press (⌘) to switch entry modes until the 123 (numeric) indicator displays.

Press keypad keys to enter the numbers you want. When you finish entering numbers, press (⌘) to switch to another entry mode.

Using Symbol Method

In a text entry screen, press  to switch entry modes until the @ (symbol) indicator displays.

Press	To
1 keypad keys (1 press per symbol)	show possible symbol combinations at the bottom of the display
2  left or right	highlight the combination you want
3 SELECT ()	lock a highlighted combination You can press keypad keys to add more symbols to the end of the combination.
or 	enter the highlighted combination

Symbol Chart

Use this chart as a guide for entering characters with symbol method.

	.?! , @ ' - _ : ; () & " ~ 1 0 ÷ ¡ ¢ % £ \$ ¥ ¢ € + x * / \ [] = > < # §
	@ _ \ ß
	/ : ;
	" & '
	() [] { }

	¿ ¡ ~
	< > =
	\$ £ ¥ ¢
	# % *
	+ - x * / = > < # §
	enter a space (hold to enter a return)
	change text entry mode (hold for default)

Note: This chart may not reflect the exact character set available on your phone. In an email address or URL editor,  first shows common characters for that editor.

Deleting Letters and Words

Use the 5-way navigation key to place the cursor to the right of the text you want to delete, then:


Action

Press **DELETE** () to delete 1 letter at a time.

Hold **DELETE** () to delete the entire message.

Using the External Display

When the flip is closed, the external display shows the time. It also displays messages to notify you of incoming phone calls and other events.

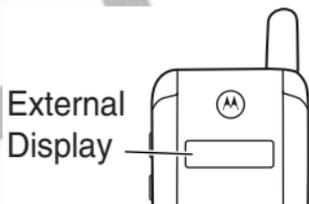

Using the Handsfree Speaker

When you activate your phone's integrated handsfree speaker, you can talk to the other party without holding the phone to your ear.

Press **SPEAKER** (📞) to turn the handsfree speaker on or off while dialing a call or during a call.

When you turn the handsfree speaker on, your phone displays **Speaker On** in the home screen. The handsfree speaker remains on until you press **SPEAKER** (📞) again or turn the phone off.

Note: The handsfree speaker is disabled when you connect your phone to a handsfree car kit or headset accessory.

Changing a Code, PIN, or Password

Your phone's 4-digit unlock code is originally set to 1234, and the 6-digit security code is originally set to 000000. Your service provider may reset these codes before you receive your phone.

If your service provider has not reset these codes, we recommend that you change them to prevent others from accessing your personal information. The unlock code must contain 4 digits, and the security code must contain 6 digits.

You can also reset your SIM card PIN code, PIN2 code, and/or call barring password if necessary.

To change a code or password:



Find the Feature



> **Settings** > **Security**
> **New Passwords**

Locking and Unlocking Your Phone

You can lock your phone manually or set the phone to lock automatically whenever you turn it off.

To use a locked phone, you must enter the unlock code. A locked phone still rings or vibrates for incoming calls or messages, but you must unlock it to answer.

You can make emergency calls on your phone even when it is locked (see page 57).



Locking Your Phone Manually

Find the Feature



> **Settings** > **Security**
> **Phone Lock** > **Lock Now**

Press	To
1 keypad keys	enter your unlock code
2 OK (⏏)	lock the phone

Unlocking Your Phone

Your phone's unlock code is originally set to 1234. Your service provider may reset the unlock code to the last 4 digits of your phone number.

At the **Enter Unlock Code** prompt:



Press	To
1 keypad keys	enter your unlock code
2 OK (↵)	unlock your phone

Setting Your Phone to Lock Automatically

You can set your phone to lock every time you turn it off:

Find the Feature



> **Settings** > **Security**
 > **Phone Lock**
 > **Automatic Lock** > **On**

Press	To
1 keypad keys	enter your unlock code
2 OK (↵)	activate automatic lock

If You Forget a Code, PIN, or Password

Your phone's 4-digit unlock code is originally set to 1234, and the 6-digit security code is originally set to 000000. Your service provider may reset the unlock code to the last 4 digits of your phone number before you receive your phone.

If you forget your unlock code, try entering 1234 or the last 4 digits of your phone number. If that does not work, at the **Enter Unlock Code** prompt:

Press	To
1 	display the unlock code bypass screen
2 keypad keys	enter your security code
3 OK ()	submit your security code

If you forget your security code, SIM card PIN code, PIN2 code, or call barring password, contact your service provider.

Using the Address Book

This section briefly describes basic address book operations. For more information about using the address book, see page 71.

Shortcut: To open your address book from the home screen, press  down.

Storing a Phone Number

Enter a phone number in the home screen, then press **STORE** () to create an address book entry with that number. Fill in the other fields to complete the entry.

Select **MORE** to store another number (for example, a work number) for the same **Name**.

Recording a Voice Name

Note: This option is not available for entries stored on the SIM card.



When creating an address book entry, scroll to **Voice Name** and press **RECORD** (⏺). When you are ready, press **RECORD** (⏺) again and say the entry's name (within 2 seconds). When prompted, press **RECORD** (⏺) and repeat the name. Press **DONE** (⏺) to store the voice name.

Storing a Picture for Caller ID

Note: This option is not available for entries stored on the SIM card.

You can store a picture for an address book entry. The picture displays when you receive calls from the entry.

When creating an address book entry, scroll to **Picture** and press **CHANGE** (⏺). Press (⊙) to select a picture, and press **SELECT** (⏺) to store it for the entry.

Dialing a Number

Press (☰) > **Address Book** > *entry to call* (☑).

Tip: To quickly highlight entries in your **Address Book** list: If your entries are sorted by **Speed No.**, press an entry's speed number to highlight it. For example, press (15) (5.00) for entry number 15. If your entries are sorted by **Name**, **Voice Name**, or **Email**, enter the first letter of the entry's name to highlight it. For example, press (S.H.) (S.H.) for the first entry that starts with "K".

Voice Dialing a Number

Press (☰) > **Settings** > **Office Tools**, press **Dialing Services** > **Voice Dial**, and say the entry's name (within 2 seconds).

Tip: To create a shortcut to **Voice Dial**, press  > **Settings** > **Office Tools** > **Dialing Services**, scroll to **Voice Dial**, and hold the . Your phone prompts you to save the shortcut. To use a shortcut, press  and the shortcut key number.

Sorting Address Book Entries

Press  > **Address Book**, press  > **Setup** > **Sort by**, then select whether you want to sort the address book list by **Name**, **Speed No.**, **Voice Name**, or **Email**.

When sorting by name, you can view **All** numbers or just the **Primary** number for each name. To set the primary number for a name, see page 73.

Viewing Entries By Category

Press  > **Address Book**, press  > **Categories**, then select whether you want to view **All** entries, entries in a predefined category (**Business**, **Personal**, **General**, **VIPs**), or entries in a category you created.

To set the category for an address book entry, see page 72.



Setting Up Your Phone

Setting the Time and Date

Your phone uses the time and date for the **Datebook**. Your phone can synchronize its time and date with the network:

Find the Feature



> **Settings** > **Initial Setup**
> **Time and Date** > **Autoupdate**
> **On**

To set the time and date manually, set **Autoupdate** to **Off** and then set the **Time** and **Date** options:

Find the Feature



> **Settings** > **Initial Setup**
> **Time and Date**
> **Time or Date**

Setting a Ring Style

Your phone rings or vibrates to notify you of an incoming call or other event. This ring or vibration is called an **alert**.

You can select one of five different ring styles. The ring style indicator in the display shows the current ring style (see page 28).

To set a ring style:

Find the Feature



> **Settings** > **Ring Styles**
> **Style**



Press	To
1 	scroll to the ring style
2 SELECT ()	select the ring style

Each ring style contains settings for specific event alerts, ringer ID, and ringer and keypad volume. To change these settings, press  > **Settings** > **Ring Styles** > style **Detail**.

Shortcut: To change your ring volume from the home screen, press  left or right.

Setting a Wallpaper Image

You can set a picture or animation as a wallpaper (background) image in your phone's home screen. The wallpaper image appears as a faint watermark in text and menu displays.

Find the Feature

 > **Settings** > **Personalize**
> **Wallpaper**

Press	To
1 	scroll to Picture
2 CHANGE ()	open the picture viewer
3  up or down	scroll to a picture/animation Scroll to (None) to turn off the wallpaper image.
4 SELECT ()	select the image
5 	scroll to Layout
6 CHANGE ()	change the image layout



Press	To
7 	scroll to Center , Tile , or Fit-to-screen
	Center places the image in the center of the display.
	Tile fills the display with multiple copies of the image.
	Fit-to-screen resizes the image, if necessary, to fit the display.
8 SELECT ()	confirm the layout setting
9 BACK ()	save wallpaper settings

Setting a Screen Saver Image

Set a picture or animation as a screen saver image.

The screen saver image displays when the phone is on and no activity is detected for a specified time. The image shrinks to fill the display, if necessary. An animation repeats for one minute, then the first frame of the animation displays.

Turn off the screen saver to extend battery life.

Find the Feature

 > **Settings** > **Personalize**
> **Screen Saver**

Press	To
1 	scroll to Picture
2 CHANGE ()	open the picture viewer

Press	To
3	scroll to a picture/animation Scroll to (None) to turn off the screen saver image.
4 SELECT ()	select the image
5	scroll to Delay
6 CHANGE ()	set the delay interval
7	scroll to the inactivity interval that starts the screen saver
8 SELECT ()	confirm the delay setting
9 BACK ()	save screen saver settings

Setting Display Color

Select the color palette that your phone uses to display indicators, highlights, and soft key labels.

Find the Feature



> **Settings** > **Personalize**
> **Color Style**

Adjusting the Backlight

Set the amount of time that the display and keypad backlights remain on.

Find the Feature



> **Settings** > **Initial Setup**
> **Backlight**



Setting Display Timeout

Set the display to turn itself off when no activity is detected for a specified time.

Find the Feature



> **Settings** > **Initial Setup**

> **Display Timeout**



Calling Features

For basic instructions on how to make and answer calls, see page 19.

Changing the Active Line



Change the active phone line to make and receive calls from your other phone number.

Note: This feature is available only for dual-line-enabled SIM cards.

Find the Feature



> **Settings** > **Phone Status**
> **Active Line**

The active line indicator in the display shows the currently active phone line (see page 26).

Redialing a Number

Press	To
1 	view the dialed calls list
2 	scroll to the entry you want to call
3 	redial the number



Using Automatic Redial



When you receive a busy signal, your phone displays **Call Failed, Number Busy**.

To redial the phone number:

Press

 or **RETRY** ()

To

activate automatic redial

Your phone redials the number. When the call goes through, your phone rings or vibrates one time, displays **Redial Successful**, and then connects the call.

Using Caller ID

Incoming Calls



Calling line identification (Caller ID) displays the phone number for incoming calls in your phone's display.

The phone displays the caller's name (and picture, if available) when the name is stored in your address book, or **Incoming Call** when caller ID information is not available.

You can also set your phone to play a distinctive ringer ID and/or light ID for specific entries stored in your address book. For more information, see page 72.



Outgoing Calls



You can show or hide your phone number as an ID for the calls that you make.

Find the Feature



> **Settings** > **In-Call Setup**
> **My Caller ID**

You can override the default caller ID setting when you make a call. While dialing (with digits visible in the display):

Press

To



> **Hide ID/Show ID**

hide or show your caller ID for the next call

Canceling an Incoming Call

While the phone is ringing or vibrating:

Press

To

IGNORE (⏏)

cancel the incoming call



Depending on your phone settings and/or service subscription, the call may be diverted to another number or sent directly to your voicemail, or the caller may hear a busy signal.

Calling an Emergency Number

Your service provider programs one or more emergency phone numbers, such as 911, that you can call under any



circumstances, even when your phone is locked or the SIM card is not inserted.

Emergency numbers vary by country. Your phone's preprogrammed emergency number(s) may not work in all locations, and sometimes an emergency call cannot be placed due to network, environmental, or interference issues.

Press	To
1 keypad keys	dial the emergency number
2 	call the emergency number

Dialing International Numbers



Press and hold  to insert the local international access code (+) for the country from which you are calling.

Viewing Recent Calls

Your phone keeps lists of the calls you recently received and dialed, even if the calls did not connect. The lists are sorted from newest to oldest entries. The oldest entries are deleted as new entries are added.

Shortcut: Press  from the home screen to view the dialed calls list.

Find the Feature



> **Recent Calls**



Press	To
1 	scroll to Received Calls or Dialed Calls
2 SELECT ()	select the list
3 	scroll to an entry ✓ means the call connected.
4 	call the entry's number
or	Press and hold  for 2 seconds to send the number as DTMF tones during a call.
VIEW ()	view entry details
or 	open the Last Calls Menu to view the options available for the entry

The **Last Calls Menu** can include the following options:

Option	Description
Store	Create an address book entry with the number in the No. field.
Delete	Delete the entry.
Delete All	Delete all entries in the list.
Hide ID/Show ID	Hide or show your caller ID for the next call.
Send Message	Open a new text message with the number in the To field.



Option	Description
Add Digits	Add digits after the number.
Attach Number	Attach a number from the address book or recent calls lists.
Send Tones	Send the number to the network as DTMF tones. This option displays only during a call.
Talk then Fax	Talk and then send a fax in the same call (see page 81).

Returning an Unanswered Call

When your phone is powered on, it keeps a record of your unanswered calls and displays:

- **X Missed Calls**, where **X** is the number of missed calls

Press	To
1 VIEW (☰)	see the received calls list
2 	select a call to return
3 	make the call

Using the Notepad

The most recent set of digits entered on the keypad are stored in your phone's notepad memory. This can be a phone number that you called, or a number that you entered but did not call. To retrieve the number stored in the notepad:



**Press****To**

call the number

or

open the **Dialing Menu** to attach a number or insert a special character

or

STORE (☺)create an address book entry with the number in the **No.** field

Attaching a Number

While dialing (with digits visible in the display):

Press**To**> **Attach Number**

attach a number from the address book or recent calls lists

Calling with Speed Dial

Each entry you store in your address book is assigned a unique speed dial number.

To see an entry's speed dial number, press  > **Address Book**, scroll to the entry, press **VIEW** (☺).

To speed dial an address book entry:



Press	To
1 keypad keys	enter the speed dial number for the entry you want to call
2 	submit the number
3 	call the entry

Calling with 1-Touch Dial

To call address book entries 1 through 9, press and hold the single-digit speed dial number for one second.

Tip: You must specify which phone number list you want to use with this feature: phone memory address book or SIM card address book (see page 73).

Using Voicemail



Voicemail messages that you receive are stored on the network. To listen to your messages, you must call your voicemail phone number.

Your service provider may include additional information about using this feature.

Listening to Voicemail Messages

Find the Feature



> **Messaging** > **Voicemail**

The phone calls your voicemail phone number. If no voicemail number is stored, your phone prompts you to store a number.

Receiving a Voicemail Message

When you receive a voicemail message, your phone displays the  (voicemail message) indicator and a New Voicemail notification.

Press	To
CALL ()	listen to the message

The phone calls your voicemail phone number. If no voicemail number is stored, your phone prompts you to store a number.

Storing Your Voicemail Number

If necessary, use the following procedure to store your voicemail phone number on your phone. Usually, your service provider has already done this for you.

Find the Feature



> **Messaging**



> **Voicemail Setup**

Press	To
1 keypad keys	enter your voicemail number
2 OK ()	store the number

You cannot store a **p** (pause), **w** (wait), or **n** (number) character in this number. If you want to store a voicemail number with these characters, create an address book entry for it. Then, you can use the entry to call your voicemail.



Using Call Waiting



When you are on a call, an alert tone sounds to indicate that you have received another call.

Press	To
1 	answer the new call
2 SWITCH ()	switch between calls
or	
LINK ()	connect the 2 calls
or	
	end the call on hold
> End Call On Hold	

You must turn on call waiting to use the feature. To turn call waiting on or off:

Find the Feature



> **Settings** > **In-Call Setup**
> **Call Waiting**

Putting a Call On Hold

Press	To
HOLD () (if available)	put the call on hold
or	
	> Hold



Transferring a Call



You can announce that you are transferring an active call to another party, or you can transfer the call without announcing the transfer.

Announce the Call Transfer

Find the Feature  > **Hold**

Press	To
1 keypad keys	dial the number where you are transferring the call
2 	call the number and speak to the person who answers
3 	open the menu
4 	scroll to Transfer
5 SELECT ()	select Transfer
6 OK ()	confirm the transfer

Do Not Announce the Call Transfer

Find the Feature  > **Transfer**

Press	To
1 keypad keys	dial the number where you are transferring the call
2 	transfer the call



Phone Features

Menu Map

Main Menu



Address Book



Recent Calls

- Received Calls
- Dialed Calls
- Notepad
- Call Times
- Data Times
- Data Volumes



Messaging

- New Message
- Message Inbox
- Voicemail
- Browser Msgs
- Info Services
- Quick Notes
- Outbox
- Drafts
- MMS Templates



Games & Apps

MEdia Net

- Browser
- Web Shortcuts
- Stored Pages
- History
- Go To URL
- Browser Setup
- Web Sessions



MEdia Mall

My MEdia

- Themes
- Pictures
- Sounds
- MotoMixer



IM

- Log In
- Offline Convs.
- Offline Settings
- Help



Settings

- (see next page)

* optional features

This is the standard main menu layout. Menu organization and feature names may vary on your phone. Not all features may be available on your phone.



Settings Menu



Office Tools

- SIM Tool Kit Apps *
- Calculator
- Datebook
- Shortcuts
- Alarm Clock
- Chat
- Dialing Services
 - Fixed Dial
 - Quick Dial
 - Service Dial *



Personalize

- Home Screen
- Main Menu
- Color Style
- Greeting
- Wallpaper
- Screen Saver
- Quick Dial



Ring Styles

- Style
- style Detail



Call Divert

- Voice Calls
- Fax Calls
- Data Calls
- Cancel All
- Divert Status



In-Call Setup

- In-Call Timer
- Call Cost
- My Caller ID
- Talk and Fax
- Answer Options
- Call Waiting



Initial Setup

- Time and Date
- 1-Touch Dial
- Display Timeout
- Backlight
- Scroll
- Language
- Contrast
- DTMF
- Master Reset
- Master Clear



Phone Status

- My Tel. Numbers
- Credit Info/Available *
- Active Line *
- Battery Meter
- Other Information



Headset

- Auto Answer
- Voice Dial



Car Settings

- Auto Answer
- Auto Handsfree
- Power-Off Delay
- Charger Time



Network

- New Network
- Network Setup
- Available Networks
- My Network List
- Service Tone
- Call Drop Tone



Security

- Phone Lock
- Lock Application
- Fixed Dial
- Call Barring
- SIM PIN
- New Passwords
- Certificate Mgmt



Java Settings

- Java System
- Delete All Apps
- App Vibration
- App Volume

* optional features



Calling Features

Feature	Description
Conference Call	During a call:  > Hold , dial next number, press  , press LINK ()
Call Diverting	Set up or cancel call diverting:  > Settings > Call Divert
Call Barring	Restrict outgoing or incoming calls:  > Settings > Security > Call Barring



Messages

Feature	Description
Send Text Message	Send a text message:  > Messaging > Create Message > New Short Message
Send Multimedia Message	Send a multimedia message:  > Messaging > Create Message > New Multimedia Msg



Feature	Description
Use MMS Template	<p>Open an MMS template with preloaded media:</p> <p> > Messaging > Create Message > MMS Templates</p> 
Read Message	<p>Read a new text or multimedia message that you have received:</p> <p>Press READ (.</p> 
Store Message Objects	<p>Go to a multimedia message slide, then:</p> <p> > Store</p> 

Instant Messaging

Feature	Description
Log In	<p>Log in to instant messaging:</p> <p> > IM > Log In</p> 
Find Others Online	<p>After you log in:</p> <p>Select Contact List to see a list of other users.</p> 
Start Conversation	<p>Start a conversation:</p> <p>From your Contact List, highlight a name in Online Contacts, press SEND IM (.</p> 



Feature	Description
Open Active Conversation	<p>Open a conversation in progress:</p> <p>From your Contact List, highlight a name in Conversations, press VIEW (☺).</p> 
End Conversation	<p>From the conversation display:</p> <p> > End Conversation</p> 
Log Out	<p>Log out of instant messaging:</p> <p>Select Log Out from the IM Online menu.</p> 

Chat

Feature	Description
Start Chat	<p>Start a new chat session:</p> <p> > Settings > Office Tools > Chat</p> <p> > New Chat</p> 
Receive Chat Request	<p>When you receive a chat request:</p> <p>Press ACCEPT (☺) or IGNORE (☹).</p> 
End Chat	<p>During a chat session:</p> <p> > End Chat</p> 

Address Book

Feature	Description
Create Entry	Create a new address book entry:  > Address Book  > New > Phone Number or Email Address
Create Group Mailing List	Create a group mailing list as an address book entry:  > Address Book  > New > Mailing List
Dial Number	Call a number stored in the address book:  > Address Book , highlight the address book entry, press  to call
Voice Dial Number	Voice dial a number stored in the address book: > Settings > Office Tools > Dialing Services > Voice Dial When prompted, say the entry's name (within 2 seconds).



Feature	Description
Set Ringer ID for Entry	Assign a distinctive ringer alert to an address book entry:  > Address Book > <i>entry</i>  > Edit > Ringer ID > <i>ringer name</i> Note: The Ringer ID option is not available for entries stored on the SIM card.
Set Picture ID for Entry	Assign a picture to display when you receive calls from an entry:  > Address Book > <i>entry</i>  > Edit > Picture > <i>picture</i> Note: The Picture option is not available for entries stored on the SIM card.
Set Category for Entry	Set the category for an address book entry:  > Address Book > <i>entry</i>  > Edit > Category > <i>category name</i> Note: The Category option is not available for entries stored on the SIM card.



Feature	Description
Set Category View	Set an address book category view:  > Address Book  > Categories > category view
Sort Address Book List	Set the order in which address book entries are listed:  > Address Book  > Setup > Sort by > sort order
Set Primary Number	Set the primary number for an address book entry with multiple numbers:  > Address Book , scroll to entry, press  > Set Primary > phone number
1-Touch Dial	Set 1-touch dial to call entries stored in your phone memory address book or the SIM card address book:  > Settings > Initial Setup > 1-Touch Dial



Personalizing Features

Feature	Description
Ring Style	Change the ring alert for an event:  > Settings > Ring Styles > style Detail > event name
Ringer IDs	Activate distinctive ring alerts assigned to address book entries:  > Settings > Ring Styles > style Detail > Ringer IDs
Ring Volume	Set ringer volume:  > Settings > Ring Styles > style Detail > Ring Volume Shortcut: Press  right or left in the home screen.
Keypad Volume	Set keypad keypress volume:  > Settings > Ring Styles > style Detail > Key Volume
Clock View	Display an analog clock or digital time readout in the home screen:  > Settings > Personalize > Home Screen > Clock
Menu View	Display the main menu as graphic icons or as a text-based list:  > Settings > Personalize > Main Menu > View



Feature	Description
Main Menu	Reorder your phone's main menu:  > Settings > Personalize > Main Menu > Reorder
Change Soft Key Labels	Change soft key labels in the home screen  > Settings > Personalize > Home Screen > Home Keys
Shortcuts	Create a shortcut to a menu item: Highlight the menu item, then press and hold  . Select a shortcut:  > Settings > Office Tools > Shortcuts > shortcut name

Menu Features

Feature	Description
Language	Set menu language:  > Settings > Initial Setup > Language



Feature	Description
Master Reset	Reset all options except unlock code, security code, and lifetime timer:  > Settings > Initial Setup > Master Reset
Master Clear	Reset all options except unlock code, security code, and lifetime timer, and clear all user settings and entries except SIM card information:  > Settings > Initial Setup > Master Clear



Dialing Features

Feature	Description
Fixed Dial	<p>When you turn on fixed dialing, you can call only numbers stored in the fixed dial list.</p> <p>Turn fixed dialing on or off:</p> <p> > Settings > Security > Fixed Dial</p> <p>Use the fixed dial list:</p> <p> > Settings > Office Tools > Dialing Services > Fixed Dial</p> 
Service Dial	<p>Dial service phone numbers:</p> <p> > Settings > Office Tools > Dialing Services > Service Dial</p> 



Feature	Description
Quick Dial	<p>Your service provider may program your phone with one or more quick dial numbers, such as the customer service number.</p> <p>Dial preprogrammed phone numbers:</p> <p> > Settings > Office Tools > Dialing Services > Quick Dial</p> 
DTMF Tones	<p>Activate DTMF tones:</p> <p> > Settings > Initial Setup > DTMF</p> <p>Send DTMF tones during a call:</p> <p>Press number keys.</p> <p>Send stored numbers as DTMF tones during a call:</p> <p>Highlight a number in the address book or recent calls lists, then press  > Send Tones.</p>

Call Monitoring

Network connection time is the elapsed time from the moment you connect to your service provider's network to the moment you end the call by pressing . This time includes busy signals and ringing.

The amount of network connection time you track on your resettable timer may not equal the amount of

time for which you are billed by your service provider. For billing information, contact your service provider.

Feature	Description
Call Times	View call timers:  > Recent Calls > Call Times 
In-Call Timer	Display time or cost information during a call:  > Settings > In-Call Setup > In-Call Timer 
Call Cost	View call cost information:  > In-Call Setup > Call Cost 

Handsfree Features

Note: The use of wireless devices and their accessories may be prohibited or restricted in certain areas. Always obey the laws and regulations on the use of these products.



Feature	Description
Auto Answer (car kit or headset)	Automatically answer calls when connected to a car kit or headset:   > Settings > Car Settings or Headset > Auto Answer
Voice Dial (headset)	Enable voice dial with headset send/end key:   > Settings > Headset > Voice Dial
Auto Handsfree (car kit)	Automatically route calls to a car kit when connected:   > Settings > Car Settings > Auto Handsfree
Power-Off Delay (car kit)	Set the phone to stay on for a specified time after the ignition is switched off:   > Settings > Car Settings > Power-Off Delay
Charger Time (car kit)	Charge the phone for a specified time after the ignition is switched off:   > Settings > Car Settings > Charger Time

Data and Fax Calls

Feature	Description
Send Data or Fax	Connect your phone to the device, then place the call through the device application. 
Receive Data or Fax	Connect your phone to the device, then answer the call through the device application. 
Talk Then Fax	Connect your phone to the device, enter the number, press  > Talk Then Fax , then press  to make the call. 

Network Features

Feature	Description
Network Settings	View network information and adjust network settings:  > Settings > Network 



Personal Organizer Features

Feature	Description
Create Datebook Event	Create a new datebook event:  > Settings > Office Tools > Datebook , highlight the day, press the center select button, press  > New
View or Edit Datebook Event	View or edit event details:  > Settings > Office Tools > Datebook , highlight the day, press the center select button, press VIEW ()
Event Reminder	View event reminder: VIEW () Close event reminder: BACK ()
Set Alarm	Set an alarm:  > Settings > Office Tools > Alarm Clock
Turn Off Alarm	Turn off alarm: Press DISABLE () or  . Set 8-minute delay: Press SNOOZE ()



Feature	Description
Calculator	Calculate numbers:  > Settings > Office Tools > Calculator
Currency Converter	Convert currency:  > Settings > Office Tools > Calculator  > Exchange Rate Enter exchange rate, press OK () , enter amount, and select \$ in the bottom of the display.

Security

Managing Security Certificates

Use the **Certificate Mgmt** feature to enable or disable security certificates stored on your phone. Certificates are used to verify the identity and security of Web sites when you download files or share information.

Find the Feature

 > **Settings** > **Security**
 > **Certificate Mgmt**



Other Security Features

Feature	Description
SIM PIN	Lock or unlock the SIM card:  > Settings > Security > SIM PIN Caution: If you enter an incorrect PIN code 3 times in a row, your SIM card is disabled and your phone displays SIM Blocked .
Lock Application	Lock phone applications:  > Settings > Security > Lock Application

News and Entertainment

Feature	Description
Launch Micro-Browser	Start a micro-browser session:  > MEdia Net 
Download Objects from Web Page	Download a picture, sound, or phone theme from a Web page: Highlight the file, press SELECT (⏏), press STORE (⏏). 
Web Sessions	Select or create a Web session:  > Web Access > Web Sessions 



Feature	Description
Apply Phone Theme	Apply a grouped set of image and sound files to your phone:  > My Media > Themes > theme 
Download Game or Application (micro-browser)	Download a Java game or application with the micro-browser:  > Media Net , highlight the application, press SELECT (⏏), press DOWNLOAD (⏏) 
Launch Game or Application	Launch a Java game or application:  > Games & Apps , highlight the application, press SELECT (⏏) 
Manage Pictures	Manage pictures and animations:  > My Media > Pictures 
Manage Sounds	Manage ring tones, sounds that you have composed or downloaded:  > My Media > Sounds



Feature	Description
Edit Sounds with MotoMixer	Edit MIDI-based sound files that you can use with your phone:  > My Media > MotoMixer > [New Mix] or mix file name
Create Ring Tones	Create ring tones that you can use with your phone:  > My Media > Sounds > [New iMelody]



Specific Absorption Rate Data

The model wireless phone meets the government's requirements for exposure to radio waves.

Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission (FCC) of the U.S. Government and by the Canadian regulatory authorities. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age or health.

The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC and by the Canadian regulatory authorities is 1.6 W/kg^1 . Tests for SAR are conducted using standard operating positions accepted by the FCC and by Industry Canada with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station, the lower the power output.

Before a phone model is available for sale to the public in the U.S. and Canada, it must be tested and certified to the FCC and Industry Canada that it does not exceed the limit established by each government for safe exposure. The tests are performed in positions and locations (e.g., at the ear and worn on the body) reported to the FCC and available for review by Industry Canada. The highest SAR value for this model phone when tested for use at the ear is 1.39 W/kg , and when worn on the body, as

described in this user guide, is 0.39 W/kg. (Body-worn measurements differ among phone models, depending upon available accessories and regulatory requirements).²

While there may be differences between the SAR levels of various phones and at various positions, they all meet the governmental requirements for safe exposure. Please note that improvements to this product model could cause differences in the SAR value for later products; in all cases, products are designed to be within the guidelines.

Additional information on Specific Absorption Rates (SAR) can be found on the Cellular Telecommunications & Internet Association (CTIA) Web site:

<http://www.phonefacts.net>

or the Canadian Wireless Telecommunications Association (CWTA) Web site:

<http://www.cwta.ca>

1. In the United States and Canada, the SAR limit for mobile phones used by the public is 1.6 watts/kg (W/kg) averaged over one gram of tissue. The standard incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in measurements.
2. The SAR information includes the Motorola testing protocol, assessment procedure, and measurement uncertainty range for this product.

Index

A

- accessories 12
- accessory connector port 1
- active line indicator 26
- active line, changing 55
- address book
 - attaching 2 numbers 61
 - category for entry 72
 - category view 73
 - dialing a number 71
 - group mailing list 71
 - 1-touch dial 62
 - picture ID 48, 56, 72
 - primary number, setting 73
 - ringer ID 72, 74
 - sorting entries 49, 73
 - speed dial number 61
 - storing an entry 71
 - voice dialing 71
- alarm clock 82
- alert
 - creating 86
 - defined 50
 - setting 18, 50, 74
 - turning off 18
- animation
 - downloading 84

screen saver 52

viewing 85

wallpaper 51

answering a call 19

application, locking and
unlocking 84

automatic redial 56

B

backlight 53

barring calls 68

battery

charging 15

extending battery life 13,
53

installing 14

level indicator 28

browser. *See* micro-browser

C

calculator 83

call

alert, turning off 18

answering 19

barring 68

barring password,
changing 44

- call waiting 64
 - costs 79
 - dialed calls list 58
 - dialing 19
 - diverting 68
 - emergency number 57
 - ending 19
 - handsfree speaker 44
 - hold 64
 - international access code
 - 58
 - making 19
 - received calls list 58
 - receiving 19
 - ring style 18, 50, 74
 - timers 79
 - transferring 65
 - unanswered call 60
 - Call Failed, Number Busy
 - message 56
 - call waiting 64
 - caller ID 56
 - calling line identification.
 - See caller ID
 - category
 - address book entry 72
 - view 73
 - center select button 29
 - character chart 38
 - chat 70
 - clock
 - selecting analog or digital 74
 - setting 50
 - codes
 - changing 44
 - default 44, 46
 - forgetting 46
 - color, setting 53
 - conference call 68
 - customizing the menu 74
- ## D
- data call 81
 - date, setting 50
 - datebook 82
 - dialed calls list 58
 - dialing a number 19, 77, 78
 - display
 - backlight 53
 - color 53
 - description 24
 - home screen 24
 - language 75
 - personalizing 75
 - timeout 54
 - distinctive ringer alert 74
 - diverting calls 68
 - DTMF tones
 - activating 78
 - sending 78

E

- earpiece volume 18
- emergency number 57
- end key 1
- ending a call 19
- Enter Unlock Code
message 45

F

- fax call 81
- 5-way navigation key 1, 29
- fixed dial 77

G

- games 85
- GPRS indicator 25
- groove tunes 86

H

- handsfree speaker 44
- headset jack 1
- hold a call 64
- home keys, personalizing
75
- home screen
 - defined 24
 - selecting clock view 74

I

- IM 69

- incoming call
 - answering 19
 - diverting 68
 - Incoming Call message 56
 - indicators
 - active line 26
 - battery level 28
 - GPRS 25
 - Java midlet 27
 - location 28
 - message 27
 - message waiting 23
 - messaging presence 27
 - ring style 28
 - roam 26
 - signal strength 25
 - text case 36
 - text entry method 28, 36
 - transmission 26
 - voicemail message 28,
63
 - instant messaging. *See* IM
 - international access code
58
 - iTAP software 39
- ## J
- Java applications 85
 - Java midlet indicator 27
 - joystick 1

K

key

- center select button 29
- end 1
- 5-way navigation 1, 29
- left soft key 1, 24, 75
- menu 1
- power 1
- right soft key 1, 24, 75
- send 1
- voice 1
- volume control 1

keypad

- volume, setting 74

L

language, setting 75

left soft key

- functions 1, 24
- personalizing 75

line, changing 55

location indicator 28

lock

- application 84
- phone 45
- SIM card 84

Low Battery message 28

M

making a call 19

master clear 76

master reset 76

menu

- entering text 33
- icons, changing in home screen 75
- icons, converting to text 74
- language, setting 75
- personalizing 75
- rearranging features 75
- using 30
- view, changing 74

menu key 1

message

- chat 70
- MMS template 69
- MMS, defined 20
- multimedia message 68
- reading 69
- text 68, 69

message indicator 27

message waiting indicator 23

messaging presence indicator 27

micro-browser

- browser setup 84
- Java applications 85
- using 84
- Web sessions 84

MMS template 69

MMS. *See* message

MotoMixer 86
multimedia message
 receiving 23
 sending 20, 68
multimedia messaging
 service. *See* message
my telephone number 19

N

network settings 81
notepad 60
number
 viewing your number 19
numbers, entering 41

O

1-touch dial
 setting preference 73
 using 62
optional accessory, defined
 12
optional feature, defined 12

P

passwords. *See* codes
phone
 active line indicator 26
 active line, changing 55
 alert, turning off 18

clear stored information
 76
codes 44
date, setting 50
language, setting 75
locking 45
network settings 81
open to answer 19
reset all options 76
ring style 18, 50, 74
security code 44
time, setting 50
turning on/off 17
unlock code 44
unlocking 18, 45

phone number

active line indicator 26
active line, changing 55
attaching 2 numbers 61
international access code
 58
redialing 55
storing in address book
 71
viewing your number 19

phone theme 85

photo

downloading 84
picture ID 56

picture

downloading 84
screen saver 52

- viewing 85
- wallpaper 51
- picture ID
 - caller ID 56
 - setting 48, 72
- PIN code
 - changing 44
 - entering 84
- PIN2 code, changing 44
- power key 1
- predictive text entry 39
- primary text entry method 34

Q

- quick dial 78

R

- received calls list 58
- recent calls 58
- redial
 - automatic redial 56
 - busy number 55
- right soft key
 - functions 1, 24
 - personalizing 75
- ring style indicators 28
- ring style, setting 18, 50, 74
- ring tone
 - creating 86
 - downloading 84

- editing with MotoMixer 86
- managing 85
- ringer ID
 - setting 72
 - turning on/off 74
- ringer volume, setting 18, 74
- roam indicator 26

S

- Safety
 - introduction 6
 - use while driving 9
- screen saver 52
- secondary text entry method 34
- security code
 - changing 44
 - default 44
- send key 1
- service dial 77
- shortcuts 75
- signal strength indicator 25
- silent alert, setting 18, 50, 74
- SIM Blocked message 18, 84
- SIM card
 - defined 13
 - installing 13
 - locking 84

- PIN code entry 18
- PIN code, changing 44
- PIN2 code, changing 44
- precautions 13
- SIM Blocked message
 - 18, 84
- SIM PIN code
 - changing 44
 - entering 84
- SIM PIN2 code, changing 44
- soft keys
 - functions 24
 - illustration 1
 - personalizing 75
- sound
 - creating 86
 - downloading 84
 - managing 85
- Speaker On message 44
- speakerphone
 - automatic answer 80
- speed dial 61
- standby time, increasing 53
- symbol chart 42
- symbols, entering 42

T

- tap method text entry 36
- telephone number
 - viewing your number 19

- text
 - capitalization, changing 35
 - character chart 38
 - entering 33
 - entry method, selecting 34
 - entry method, setup 35
 - iTAP software predictive text entry 39
 - numeric method 41
 - symbol chart 42
 - symbol method 42
 - tap method 36
- text case indicator 36
- text entry method
 - selecting 34
 - setup 35
- text entry method indicator 28, 36
- theme 85
- time, setting 50
- timers 79
- transfer a call 65
- transmission indicator 26
- travel charger 16

U

- unlock
 - application 84
 - phone 45

unlock code
 bypassing 46
 changing 44
 default 44, 46
 entering 18

V

vibrate alert
 setting 18, 50, 74
 turning off 18
voice dial 71, 80
voice key
 dialing a number 71
 illustration 1
voicemail 62
voicemail message indicator
 28, 63
volume
 earpiece 18
 keypad 74
 ringer 18, 74
volume keys 1

W

wallpaper 51
Web pages 84
Web sessions 84
Welcome 1
U.S. patent Re. 34,976

motorola.com