

APPLICANT: MOTOROLA, INC.

FCC ID: IHDT56EX1

**INSTRUCTION MANUAL**

A preliminary draft copy of the Users Manual follows:



***MOTOROLA***

V260/V265  
CDMA

 
***START HERE >***



 
# Welcome

---



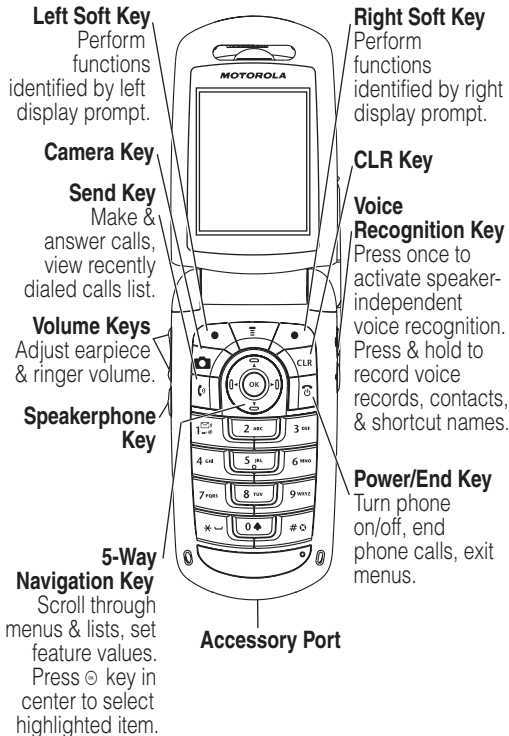

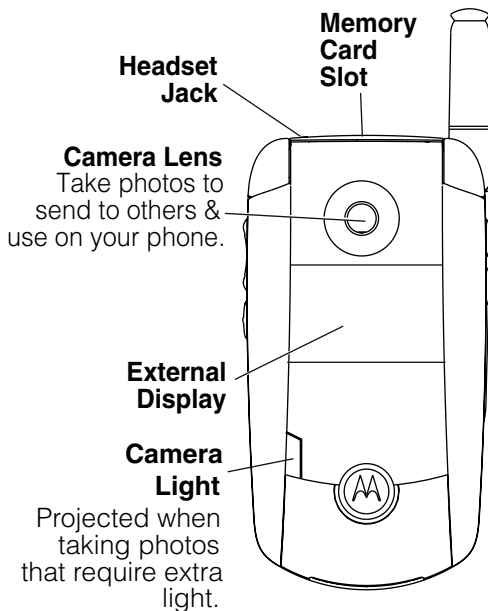

Welcome to the world of Motorola digital wireless communications! We are pleased that you have chosen the Motorola V260/V265 wireless phone.



# Check It Out!



Feature	Description
<b>Take Photo</b>	Press the camera key to activate the camera, point lens at subject, press <b>CAPTURE</b> (📷) to take a photo.
<b>Send Photo</b>	Send the photo to a phone number Press <b>STORE</b> (📷) > <b>Send In Message</b> .

Feature	Description
<b>Send Multimedia Message</b>	Send a multimedia message with pictures, animations, and sounds:  > <b>Messages &gt; Create Message &gt; New Multimedia Msg</b> 
<b>Send Text Message</b>	Send a text message:  > <b>Messages &gt; Create Message &gt; New Short Msg</b> 
<b>Read Multimedia Message</b>	Read a new multimedia message or letter that you have received: Press <b>READ</b> (  ). 

Motorola, Inc.  
Consumer Advocacy Office  
1307 East Algonquin Road  
Schaumburg, IL 60196  
1-800-331-6456 (United States)  
1-888-390-6456 (TTY/TDD United States)  
1-800-461-4575 (Canada)

[www.motorola.com](http://www.motorola.com) (United States)  
[www.motorola.ca](http://www.motorola.ca) (Canada)

MOTOROLA and the Stylized M Logo are registered in the US Patent & Trademark Office. All other product or service names are the property of their respective owners.

© Motorola, Inc. 2004

**Caution:** Changes or modifications made in the radio phone, not expressly approved by Motorola, will void the user's authority to operate the equipment.

### **Software Copyright Notice**

The Motorola products described in this manual may include copyrighted Motorola and third-party software stored in semiconductor memories or other media. Laws in the United States and other countries preserve for Motorola and third-party software providers certain exclusive rights for copyrighted software, such as the exclusive rights to distribute or reproduce the copyrighted software. Accordingly, any copyrighted software contained in the Motorola products may not be modified, reverse-engineered, distributed, or reproduced in any manner to the extent allowed by law. Furthermore, the purchase of the Motorola products shall not be deemed to grant either directly or by implication, estoppel, or otherwise, any license under the copyrights, patents, or patent applications of Motorola or any third-party software provider, except for the normal, non-exclusive, royalty-free license to use that arises by operation of law in the sale of a product.

Manual number:

# Contents

---

<b>Getting Started</b> .....	8
About This Guide .....	8
Battery Use .....	8
Installing the Battery .....	10
Charging the Battery .....	10
Turning On Your Phone .....	11
Adjusting Volume .....	12
Making a Call .....	12
Answering a Call .....	13
Changing the Call Alert .....	13
Viewing Your Phone Number .....	14
<b>Highlight Features</b> .....	15
Taking and Sending a Photo .....	15
Sending a Multimedia Message .....	18
Receiving a Multimedia Message .....	21
TTY Operation .....	21
<b>Learning to Use Your Phone</b> .....	24
Using the Display .....	24
Using the 5-Way Navigation Key .....	27
Using Menus .....	27
Entering Text .....	30
Using the External Display .....	39
Using the Handsfree Speaker .....	41
Changing a Code, PIN, or Password .....	41
Locking and Unlocking Your Phone .....	42
If You Forget a Code, PIN, or Password .....	43



<b>Setting Up Your Phone</b> .....	45
Storing Your Name and Phone Number .....	45
Setting an Alert Style .....	45
Setting Answer Options .....	46
Setting a Wallpaper Image .....	47
Setting a Screen Saver Image .....	48
Setting Display Brightness .....	49
Setting Display Contrast .....	49
Adjusting the Backlight .....	49
Hiding or Showing Location Information .....	49
Conserving Battery Power .....	50
<b>Calling Features</b> .....	51
Changing the Active Line .....	51
Redialing a Number .....	51
Using Automatic Redial .....	51
Turning Off a Call Alert .....	52
Calling an Emergency Number .....	52
Viewing Recent Calls .....	53
Returning an Unanswered Call .....	55
Using the Notepad .....	55
Attaching a Number .....	56
Calling with Speed Dial .....	56
Calling with 1-Touch Dial .....	57
Using Voicemail .....	57
Putting a Call On Hold .....	58
<b>Phone Features</b> .....	59
Main Menu .....	59
Calling Features .....	61
Messages .....	61
Phonebook .....	63
Personalizing Features .....	66

Menu Features . . . . .	73
Dialing Features . . . . .	74
Call Monitoring . . . . .	74
Handsfree Features . . . . .	75
Data and Fax Calls . . . . .	77
Network Features . . . . .	78
Personal Organizer Features . . . . .	78
Security. . . . .	80
News and Entertainment . . . . .	80
<b>Index . . . . .</b>	<b>84</b>

# Getting Started



**CAUTION:** Before using the phone for the first time, read the *Important Safety and Legal Information* included in the gray-edged pages at the back of this guide.

## About This Guide

This guide describes the basic features of your Motorola wireless phone.

### Optional Features



This label identifies an optional network or subscription-dependent feature that may not be offered by all service providers in all geographical areas. Contact your service provider for more information.

### Optional Accessories



This label identifies a feature that requires an optional Motorola Original<sup>®</sup> accessory.

## Battery Use

Battery performance depends on many factors, including your wireless carrier's network configuration; signal

strength; the temperature at which you operate your phone; the features and/or settings you select and use; items attached to the phone's accessory connector port; and your voice, data, and other application usage patterns.

**Caution:** To prevent injuries or burns, do not allow metal objects to contact or short-circuit the battery terminals.

To maximize your battery's performance:

- Always use Motorola Original batteries and battery chargers. The phone warranty does not cover damage caused from using non-Motorola batteries and/or battery chargers.
- New batteries or batteries that have been stored for a long time may require a longer charge time.
- Maintain the battery at or near room temperature when charging.
- Do not expose batteries to temperatures below  $-10^{\circ}\text{C}$  ( $14^{\circ}\text{F}$ ) or above  $45^{\circ}\text{C}$  ( $113^{\circ}\text{F}$ ). Always take your phone with you when you leave your vehicle.
- When you do not intend to use a battery for a while, store it uncharged in a cool, dark, dry place, such as a refrigerator.
- Batteries gradually wear down and require longer charging times. This is normal. If you charge your battery regularly and notice a decrease in talk time or an increase in charging time, then it is probably time to purchase a new battery.





The rechargeable batteries that power this phone must be disposed of properly and may need to be recycled. Refer to your battery's label for battery type. Contact your local recycling center for proper disposal methods.



**Warning:** Never dispose of batteries in a fire because they may explode.

## Installing the Battery

You must install and charge the battery to use your phone.



 
Your phone is designed to use only Motorola Original batteries and accessories. We recommend that you store batteries in their protective cases when not in use.

## Charging the Battery

New batteries are shipped partially charged. Before you can use your phone, you need to install and charge the battery as described below. Some batteries perform best after several full charge/discharge cycles.

### Action

- 1 Plug the travel charger into your phone with the release tab facing up.

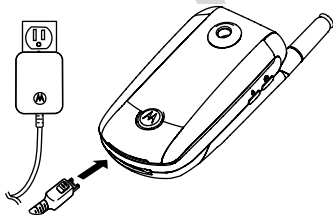



## Action

- 2 Plug the other end of the travel charger into the appropriate electrical outlet.
- 3 When your phone indicates **Charge Complete**, press the release tab and remove the travel charger.

**Tip:** You can safely leave the travel charger connected to the phone after charging is complete. This will **not** damage the battery.

 
**Note:** When you charge the battery, the battery level indicator in the upper right corner of the display shows how much of the charging process is complete. At least 1 segment of the battery level indicator must be visible to ensure full phone functionality while charging.

## Turning On Your Phone

### Action

- 1 Open your phone.
- 2 Press and hold the power key for 3 seconds.

The phone may require several seconds to power on.

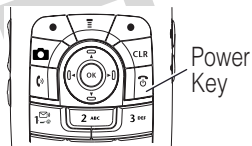

- 3 If necessary, enter your 4-digit unlock code (the last 4 digits of your phone number) and press **OK** (⏏) to unlock the phone.

## Adjusting Volume

 


Press the up or down volume keys to:

- increase or decrease earpiece volume during a call
- increase or decrease the ringer volume setting when the home screen is visible (flip must be open)

**Tip:** At the lowest volume setting, press the down volume key once to switch to vibrate alert. Press it again to switch to silent alert. Press the up volume key to cycle back to vibrate alert, then ring alert.

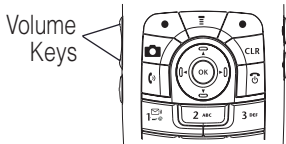

- turn off an incoming call alert





## Making a Call

### Action

 
- 1 Dial the number.

**Tip:** If you make a mistake, press the clear key  to delete the last digit. Press and hold  to clear all digits.

- 2 Press  to make the call.

- 3 Press  to end the call.

Press to send call.

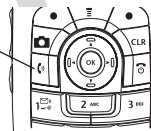

**Tip:** You can also close the flip to end the call.

**Note:** You must dial the phone number from the home screen. See page 24.

## Answering a Call

 
When you receive a call, your phone rings and/or vibrates and displays an incoming call message.



### Action

- 1 Press to answer.
- 2 Press to end the call.

Press to answer.

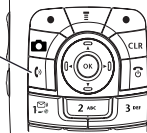

**Tip:** When the phone flip is active, open the phone to answer the call. (To activate, press > **Settings** > **In-Call Setup** > **Answer Options** > **Open to Answer**.)

**Note:** If the phone is locked, you must unlock it to answer the call.

## Changing the Call Alert

### Phone Flip Open

In the home screen, press the down volume key to switch to lower call alert volume, then switch to vibrate and, finally, silent alert. Press the up volume key to cycle back from silent alert to vibrate and then to the lowest alert volume setting.

Volume Keys

 




## Phone Flip Closed



Press the up or down volume key, then press the speakerphone key

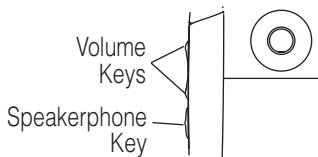


to scroll through the alert styles: **Loud**, **Soft**, **Vibrate**, **Vibe & Ring**, and **Silent**. The alert styles are shown on the external display.

After scrolling to the desired alert style, press the up or down volume key to save the setting and return to the home screen.

## Viewing Your Phone Number

To view your phone number from the home screen, press




While you are on a call, press  > **My Tel. Numbers**.

# Highlight Features

 
You can do much more with your phone than make and receive calls! This section describes some of your phone's highlights.



## Taking and Sending a Photo



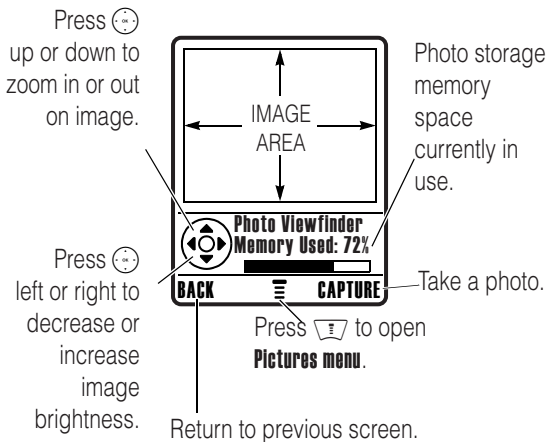 



From the home screen, press the camera key  to activate your phone's camera.

The active viewfinder image appears on your phone's display.



Point the camera lens at the photo subject, then:

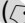

Press	To
1 	take a photo
or <b>CAPTURE</b> 	
2 <b>STORE</b> 	view storage options If you choose to store the photo, continue to step 3.
or <b>ERASE</b> 	delete the photo and return to active viewfinder
3 	scroll to <b>Send in Message</b> , <b>Send to Online Album</b> , <b>Store Only</b> , <b>Apply as Wallpaper</b> , <b>Apply as Screen Saver</b> , or <b>Apply as Phonebook Entry</b> .
4 <b>SELECT</b> 	perform the storage option of your choice

## Taking a Self Portrait

To take a self portrait:

 
### Action

- 1 Close the flip.
- 2 Hold the camera with the lens aimed at yourself.  
Use the external display as a viewfinder.

## Action

- 3 Press the camera key on the side of the phone to capture the photo.


## Pictures Menu Options

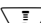When the camera is active, press  to access the **Pictures Menu**. The **Pictures Menu** can include the following options:

Option	Description
<b>Go To Pictures</b>	View pictures and photos stored on your phone.
<b>Auto-Timed Capture</b>	Set a timer for the camera to take a photo.
<b>Delete All</b>	Delete all pictures.
<b>Pictures Setup</b>	Open the setup menu to adjust picture settings.
<b>Switch Storage Device</b>	Save the picture on memory card ( <b>TRI-mmc</b> ), if installed, or on phone memory ( <b>Phone</b> ).
<b>View Free Space</b>	See how much memory remains for storing pictures.
<b>Camera Light</b>	Set a camera light for photos taken in settings with low light.
<b>Adjust Contrast</b>	Increase or decrease contrast.





Option	Description
Image Style	Press  right and left to select <b>Color</b> , <b>Black &amp; White</b> , <b>Antique</b> , or <b>Negative</b> .

## Sending a Multimedia Message










A *Multimedia Messaging Service (MMS)* *multimedia message* contains one or more slides with text and embedded media objects (including photos, pictures, animations, sounds, voice records). You can send the multimedia message to other wireless phone users and to other email addresses.

### Find the Feature




- > Messages
- > Create Message
- > New PIX Messages

Press	To
1 keypad keys, then <b>OK</b> 	enter a phone number
<b>or</b>	
<b>PH.BOOK</b>  ,  , then <b>ADD</b>  and <b>DONE</b> 	open the phonebook, then scroll to and select 1 or more existing phonebook entries
2 keypad keys	enter slide text
3 	open the <b>MMS Menu</b>
4 	scroll to <b>Insert</b>

Press	To
5 <b>SELECT</b> (⏏)	display a list of items you can insert
6 (⏏)	scroll to <b>Picture, Voice Record, Sound, or Quick Note</b>
7 <b>SELECT</b> (⏏)	select the file type
8 (⏏)	highlight the file you want
9 <b>INSERT</b> (⏏)	insert the file  To add another slide to the message, continue to the next step.  To send the message, go to step 15.
10 (☰)	open the <b>MMS Menu</b> to insert a new slide
11 (⏏)	scroll to <b>Insert</b>
12 <b>SELECT</b> (⏏)	display a list of items you can insert
13 (⏏)	scroll to <b>Insert New Page</b>
14 <b>SELECT</b> (⏏)	insert a new slide after the current slide  Repeat steps 2 to 9 to enter contents for the new slide.
15 <b>OK</b> (⏏)	store the message







Press	To
16 keypad keys, then <b>OK</b> (☞)	enter a phone number
or	
<b>PH.BOOK</b> (☞), (⊙), then <b>ADD</b> (☞) and <b>DONE</b> (☞)	open the phonebook, then scroll to and select 1 or more existing phonebook entries
17 (⊙)	scroll to <b>Subject</b>
18 <b>CHANGE</b> (☞)	select <b>Subject</b>
19 keypad keys  or	enter the subject
<b>QK.NOTE</b> (☞), then (⊙) and <b>SELECT</b> (☞)	open the Quick Notes list, then scroll to and select a Quick Note as a subject
20 <b>OK</b> (☞)	store the subject
21 <b>SEND</b> (☞)  or	send the message
	send the message later, view message details, save the message in the drafts folder, or cancel the message

# Receiving a Multimedia Message



When you receive a multimedia message or letter, your phone displays the  (message waiting) indicator and a **New Message** notification, and sounds an alert.






Press	To
<b>READ</b> (  )	open the message

Multimedia messages that you receive can contain different media objects:

- Photos, pictures, and animations are displayed as you read the message.
- A sound file begins playing when its slide is displayed. Use the volume keys to adjust the volume as the sound file plays.

**Note:** In a multimedia letter, you may have to highlight an indicator embedded in the text to play a sound file.

- Attached files are appended to the message. To open the attachment, highlight the file indicator/filename and press **VIEW** () (image file type), **PLAY** () (sound file), or **OPEN** () (vObject such as phonebook or datebook entry, or unknown file type).

## TTY Operation

You can use an optional TTY device with your phone to send and receive calls. You must plug the TTY device into



the phone's headset jack and set the phone to operate in 1 of 3 TTY modes.






**Note:** Use a TSB-121 compliant cable (provided by the TTY manufacturer) to connect the TTY device to your phone.

**Note:** Set the phone to level 4 (middle setting) for proper operation. If you experience a high number of incorrect characters, adjust the volume as needed to minimize the error rate.

**Note:** For optimal performance, your phone should be at least 12 inches (30 centimeters) from the TTY device. Placing the phone too close to the TTY device may cause high error rates.

## Setting TTY Mode

 When you set your phone to a TTY mode, it operates in that mode whenever the TTY device is connected.

Press	To
1  up or down	scroll to the TTY mode
2 <b>SELECT</b> 	select the TTY mode

The **TTY Setup** menu can include the following options:

Press	To
<b>TTY</b>	transmit and receive TTY characters
<b>VCO</b>	receive TTY characters but transmit by speaking into microphone

Press	To
<b>HCO</b>	transmit TTY characters but receive by listening to earpiece
<b>Voice</b>	return to normal voice mode



When your phone is in a TTY mode, the international TTY mode, the international TTY symbol, and the mode setting display during an active TTY call.

### ***Returning to Voice Mode***

To return to normal voice mode, select **Voice** from the **TTY Setup** menu.

 
# Learning to Use Your Phone

---

See page 1 for a basic phone diagram.

## Using the Display


The *home screen* is displayed when you are **not** on a call or using the menu. You must be in the home screen to dial a phone number.

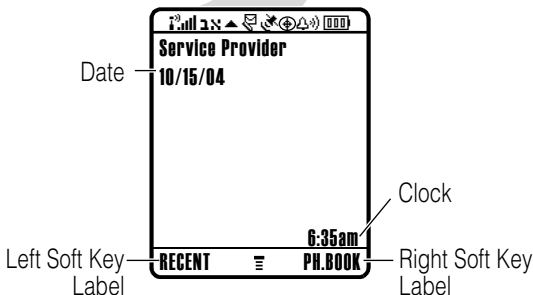

**Note:** Your home screen may look different than the display shown above.

 
The ≡ (menu) indicator indicates that you can press the menu key (☰) to enter the main menu.

Labels at the bottom corners of the display show the current soft key functions. Press the left soft key (☐) or


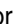 
right soft key (  ) to perform the function indicated by the left or right soft key label.

Your phone can display an analog or digital clock in the home screen (see page 72).

The following status indicators can display:

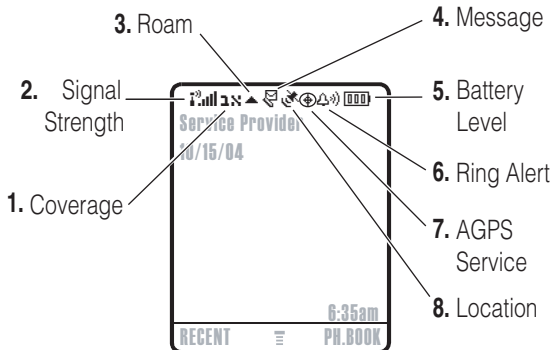

## 1. Coverage Indicator

**2. Signal Strength Indicator** Vertical bars show the strength of the network connection. You cannot make or receive calls when the  (no signal) indicator or  (no transmit) indicator is displayed.





**3. Roam Indicator** Shows when your phone is seeking or using another network outside your home network.




**4. Message Indicator** Displays when you receive a new message. Indicators can include:



 = text message

 = voicemail message


 = voicemail and text message


When you enter a message, a number in this location shows the number of characters left on the current page (text message), or the message size (multimedia message or letter).



**5. Battery Level Indicator** Vertical bars show the battery charge level. Recharge the battery when **Low Battery** displays and the battery alert sounds.


**6. Ring Alert Indicator** Shows the ring alert setting.

 = loud ring

 = soft ring

 = vibrate

 = vibrate and ring

 = silent

**7. AGPS Service Indicator** Indicates when AGPS Service is off (icon is grey), on (icon is white), or on and finding your location (icon is green).



**8. Location Indicator** Your phone may be able to send location information to the network during an emergency call. Indicators show when your phone is sending location information:

 = location on

 
 = location off


# Using the 5-Way Navigation Key







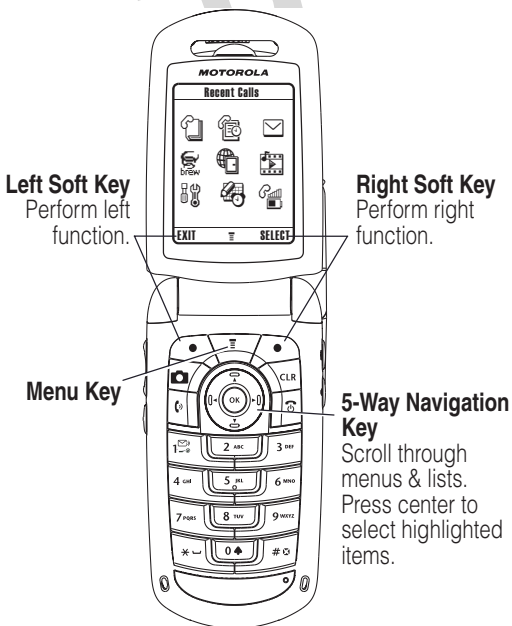


Use the 5-way navigation key (⊙) to scroll up, down, left, or right through the menu system. Press the ⊙ key in the center to select a highlighted menu item.

## Using Menus

From the home screen, press  to enter the main menu.



Press  to scroll to and highlight a menu feature icon in the main menu. The following icons represent features that may appear in the main menu, depending on your service provider and service subscription options.



Menu Icon	Feature	Menu Icon	Feature
	<b>Phonebook</b>		<b>Recent Calls</b>
	<b>Messages</b>		<b>Brew*</b>
	<b>Web Access</b>		<b>Media Gallery</b>
	<b>Settings</b>		<b>Tools</b>
	<b>Phone Status</b>		

\* Optional network/subscription dependent feature

## Selecting a Menu Feature

 
This guide uses the following format to show you how to select a menu feature, starting from the home screen.

**Find the Feature**  > **Recent Calls** > **Dialed Calls**

This example shows that from the home screen, you must press , scroll to and select **Recent Calls** from the main menu, then scroll to and select **Dialed Calls**. Press  to scroll, and the left/right soft keys to select the functions listed in the bottom left and right corners of the display.

## Selecting a Feature Option

Some features require you to select an option from a list:

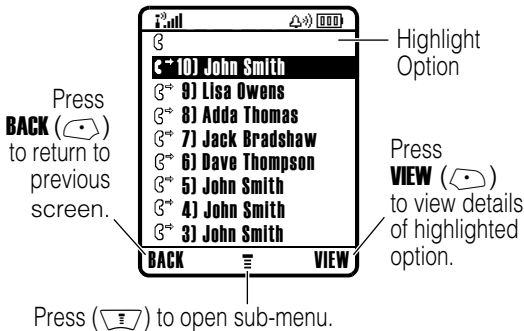

 
- Press (⬆) to scroll up or down to highlight the option you want.
- In a numbered list, press a number key to highlight the option.
- In an alphabetized list, press a key repeatedly to cycle through the letters on the key and highlight the closest matching list option.
- When an option has a list of possible values, press (⬅) left or right to scroll through and select a value.
- When an option has a list of possible numeric values, press a number key to set the value.





# Entering Text

Some features require you to enter information.

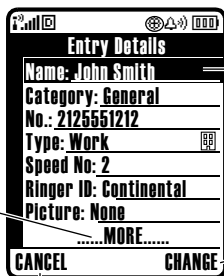

Press to scroll down to other options.

 
Highlighted Option

Press **CHANGE** () to enter or edit information.

Press **CANCEL** () to exit without making changes. **DONE** () displays when you enter or edit information.

The message center lets you compose and send text messages.

For indicator descriptions, see following section.

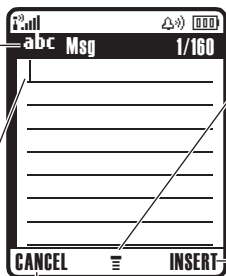

Flashing cursor indicates insertion point.

Press to open sub-menu.

Press **INSERT** () to insert a quick note, picture, or sound.


Press **CANCEL** () to exit without making changes.

## Choosing a Text Entry Method


Multiple text entry methods make it easy for you to enter names, numbers, and messages. The method you select remains active until you select another method.

Press  in any text entry screen to select 1 of the following entry methods:

<b>Primary</b>	The primary text entry method (see below to set).
<b>Numeric</b>	Enter numbers only (see page 37).
<b>Symbol</b>	Enter symbols only (see page 38).
<b>Secondary</b>	The secondary text entry method (see below to set).

Alternatively, you can select a text entry method in any text entry screen by pressing  > **Entry Mode**.

 
## Setting Up a Text Entry Method

Press  > **Entry Setup** from any text entry screen. Select **Primary Setup** or **Secondary Setup**, and choose:

<b>ITAP</b>	Let the phone predict each word as you press keys (see page 36).
<b>Tap</b>	Enter letters and numbers by pressing a key 1 or more times.
<b>Tap Extended</b>	Enter letters, numbers, and symbols by pressing a key 1 or more times.
<b>None</b>	Hide the <b>Secondary</b> setting (only available for <b>Secondary Setup</b> ).



## Using Capitalization

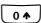Press  in any text entry screen to change text case. The following indicators show capitalization status:




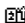 


abc = no capital letters

Abc = capitalize next letter only

ABC = all capital letters

## Text Entry Method Indicators

When you select the **Primary** or **Secondary** text entry method, the following indicators identify the text entry setting:

Primary	Secondary	
1	2	Tap, no capital letters
1↑	2↑	Tap, capitalize next letter only
1↑	2↑	Tap, all capital letters
		iTAP, no capital letters
		iTAP, capitalize next letter only
		iTAP, all capital letters

The following indicators identify **Numeric** or **Symbol** entry method:




123 = numeric method


@ = symbol method

## Using Tap Method

This is the standard method for entering text on your phone.

 
Regular **Tap** method cycles through the letters and numbers of the key you press. **Tap Extended** method also cycles through additional symbols as shown in the “Character Chart” on page 35.

Press	To
1 a keypad key 1 or more times	select a letter, number, or symbol
2 keypad keys	enter remaining characters
	<b>Tip:</b> Press  right to accept a word completion, or  to insert a space.
3 <b>OK</b> 	store the text

 
In a text entry screen, you can press  to switch entry methods. If **Tap** or **Tap Extended** is not available as the **Primary** or **Secondary** entry method, see page 31.



When you enter text with **Tap** or **Tap Extended** method, the soft key functions change.

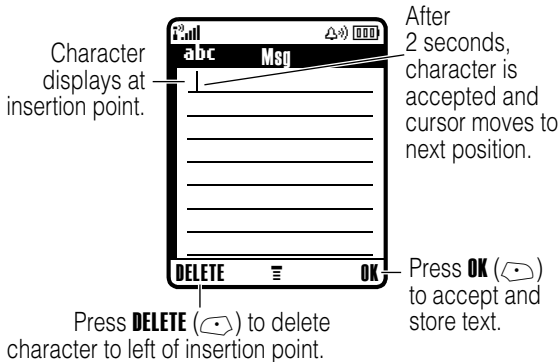


 


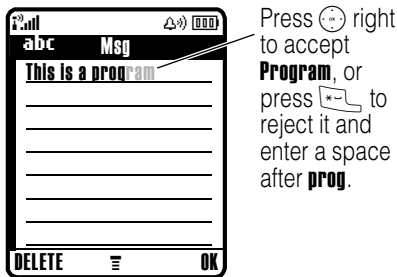 



 


 
When you enter 3 or more characters in a row, your phone may guess the rest of the word. For example, if you enter **prog** you might see:




If you want a different word (such as **progress**), continue pressing keypad keys to enter the remaining characters.



## Character Chart

Use this chart as a guide for entering characters with **Tap Extended** method.

	. ? ! , @ ' - _ : ; ( ) & " ~ 1 0 ; i % £ \$ ¥ ¢ € + x * / \ [ ] = > < # §
	a b c 2
	d e f 3
	g h i 4
	j k l 5
	m n o 6
	p q r s 7
	t u v 8
	w x y z 9
	<i>change text case, for capital letters</i>
	<i>enter a space (hold to enter a return)</i>
	<i>change text entry method (hold for default)</i>


**Note:** This chart may not reflect the exact character set available on your phone. In a URL editor,  first shows common characters for that editor.

### Tap Method Text Entry Rules

- Press a keypad key repeatedly to cycle through its characters.
- Press  left or right to move the flashing cursor to the left or right in a text message.
- The first character of every sentence is capitalized. If necessary, press  down to force the character to



 
lowercase before the cursor moves to the next position.


- If you enter or edit information and do not want to save the changes, press  to exit without saving.



## Using iTAP™ Method


iTAP™ software provides a predictive text entry method that lets you enter a word using 1 keypress per letter. This can be faster than **Tap** method, because your phone combines the key presses into common words.

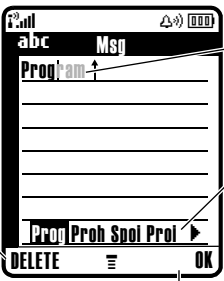
For example, if you press    , letter combinations that match your key presses display:



Press  up to accept **Program**.


Press  right to highlight another combination. Press  to enter **Prog** and a space.

Press **DELETE** () to delete last letter.




Press **SELECT** () to lock highlighted combination.

If you want a different word (such as **Progress**), continue pressing keypad keys to enter the remaining characters.

## Entering Words

In a text entry screen, you can press  to switch entry methods. An indicator tells you which method is active

(see page 32). If **ITAP** method is not available as the **Primary** or **Secondary** entry method, see page 31.

	<b>Press</b>	<b>To</b>
1	keypad keys (1 press per letter)	show possible letter combinations at the bottom of the display
2	 left or right	highlight the combination you want
3	<b>SELECT</b> 	lock a highlighted combination  You can press keypad keys to add more letters to the end of the combination.
	<b>or</b>	
		enter the highlighted combination when it spells a word  A space is automatically inserted after the word.


If you enter a word your phone does not recognize, the phone stores it to use as 1 of your word options. When you fill memory space for unrecognized words, your phone deletes the oldest words to add new words.

## **Using Numeric Method**

In a text entry screen, press  to switch entry methods until the **123** (numeric) indicator displays.








Press keypad keys to enter the numbers you want. When you finish entering numbers, press  to switch to another entry method.


## Using Symbol Method

 
 

 
 

 
 
 

 
In a text entry screen, press  to switch entry methods until the @ (symbol) indicator displays.


Press	To
1 keypad keys (1 press per symbol)	show possible symbol combinations at the bottom of the display
2  left or right	highlight the combination you want
3 <b>SELECT</b> (  )	lock a highlighted combination  You can press keypad keys to add more symbols to the end of the combination.
<b>or</b>	
	enter the highlighted combination

## Symbol Chart

Use this chart as a guide for entering characters with symbol method.



	. ? ! , @ ' - _ : ; ( ) & " ~ 1 0 ; i % £ \$ ¥ ¢ € + x * / \ [ ] = > < # §
---	---

	@ _ \
	/ : ;
	" & '
	( ) [ ] { }
	? ! ~
	< > =
	\$ £ ¥ ¤ €
	# % *
	+ - x * / \ = > < # §
	<i>enter a space (hold to enter a return)</i>
	<i>change text entry method (hold for default)</i>

**Note:** This chart may not reflect the exact character set available on your phone. In a URL editor,  first shows common characters for that editor.

## Deleting Letters and Words

Place the cursor to the right of the text you want to delete, and then:

Action
Press  to delete 1 letter at a time.
Hold  to delete the entire message.

## Using the External Display

When the flip is closed, you can use the external display for the following:

- View time, date, and phone status information.



- Read messages that notify you of incoming calls and other events.
- Use the external display as a viewfinder when you take a self portrait with the phone's camera.
- When you use a Bluetooth headset for voice recognition, view voice-activated dialing commands and other status information.

## Setting Phone Alert Style



	Press	To
1	volume keys	scroll to <b>Style</b>
2	speakerphone key	select an alert style
3	volume keys	return to the home screen

## Return an Unanswered Call

Your phone keeps a record of your unanswered calls and displays **X Missed Calls** in the external display.

 
	Press	To
1	speakerphone key	see the received calls list
2	volume keys	select a call to return
3	speakerphone key	make the call

**Note:** Because the microphone and earpiece are unavailable when the phone is closed, you must use a headset or other handsfree device with this feature.

## **Using the Handsfree Speaker**

When you activate your phone's integrated handsfree speaker, you can talk to the other party without holding the phone to your ear.

Press and hold the speakerphone key to turn the handsfree speaker on or off during a call. A soft audio alert confirms activation/deactivation.

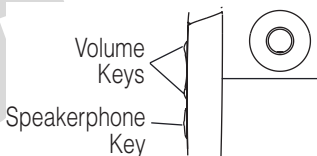

When you turn on the handsfree speaker, your phone displays **Speaker On** in the home screen. The handsfree speaker remains on until you press the speakerphone key again or turn the phone off.

**Note:** The handsfree speaker is disabled when you connect your phone to a handsfree car kit or headset accessory.

## **Changing a Code, PIN, or Password**

Your phone's 4-digit unlock code is originally set to 1234, and the 6-digit security code is originally set to 000000.

Your service provider may reset these codes before you receive your phone.

If your service provider has **not** reset these codes, we recommend that you change them to prevent others from accessing your personal information. The unlock code must contain 4 digits, and the security code must contain 6 digits.

To change a code or password:

**Find the Feature**



> **Settings** > **Security**  
> **New Passwords**

## ***Locking and Unlocking Your Phone***

You can lock your phone manually or set the phone to lock automatically whenever you turn it off.

To use a locked phone, you must enter the unlock code. A locked phone still rings or vibrates for incoming calls or messages, **but you must unlock it to answer.**

You can make emergency calls on your phone even when it is locked (see page 52).

### ***Locking Your Phone Manually***

**Find the Feature**



> **Settings** > **Security**  
> **Phone Lock** > **Lock Now**

<b>Press</b>	<b>To</b>
1 keypad keys	enter your unlock code
2 <b>OK</b> (⏏)	lock the phone

## Unlocking Your Phone

**Tip:** Your phone's unlock code is originally set to 1234. Many service providers reset the unlock code to the last 4 digits of your phone number.

At the **Enter Unlock Code** prompt:

Press	To
1 keypad keys	enter your unlock code
2 <b>OK</b> (⏏)	unlock your phone

## Setting Your Phone to Lock Automatically

You can set your phone to lock every time you turn it off:

### Find the Feature

 > **Settings** > **Security**  
> **Phone Lock**  
> **Automatic Lock** > **On**

Press	To
1 keypad keys	enter your unlock code
2 <b>OK</b> (⏏)	activate automatic lock



## If You Forget a Code, PIN, or Password

**Note:** Your phone's 4-digit unlock code is originally set to 1234, and the 6-digit security code is originally set to 000000. Many service providers reset the unlock code to



the last 4 digits of your phone number before you receive your phone.

If you forget your unlock code, try entering 1234 or the last 4 digits of your phone number. If that does not work, do the following at the **Enter Unlock Code** prompt:

	<b>Press</b>	<b>To</b>
1		display the unlock code bypass screen
2	keypad keys	enter your security code
3	<b>OK</b> (  )	submit your security code

If you forget your security code or call barring password, contact your service provider.

# Setting Up Your Phone

## Storing Your Name and Phone Number



To store or edit your name and phone number information on your phone:

### Find the Feature

 > **Settings** > **Phone Status**  
> **My Tel. Number**

**Shortcut:** Press   from the home screen to edit your name and phone number.

If you do not know your phone number, contact your service provider. To view your phone number from the home screen or during a call, see page 14.

## Setting an Alert Style

Your phone rings or vibrates to notify you of an incoming call or other event. This ring or vibration is called an *alert*.

You can select 1 of 5 different alert styles. The ring alert indicator in the display shows the current alert style (see pages 24 and 26).



To set an alert style:



### Find the Feature

 > **Settings** > **Ring Styles**  
> **Style**





Press	To
1 	scroll to the alert style
2 <b>SELECT</b> (  )	select the alert style

Each alert style contains settings for specific event alerts, ringer ID, and ringer and keypad volume. To change these settings, press  > **Settings** > **Alert Styles** > *Style Detail*  
 > **Settings** > **Ring Styles** > *Style Detail*.





## Setting Answer Options

You can use additional, alternative methods to answer an incoming call.

<b>Multi-key</b>	answer by pressing any key
<b>Open To Answer</b>	answer by opening the flip

To activate or deactivate an answer option:

<b>Find the Feature</b>	 > <b>Settings</b> > <b>In-Call Setup</b> > <b>Answer Options</b>
-------------------------	---

Press	To
1 	scroll to <b>Multi-Key</b> or <b>Open to Answer</b>
2 <b>CHANGE</b> (  )	select the option
3 	scroll to <b>On</b> or <b>Off</b>
4 <b>SELECT</b> (  )	confirm the setting

# Setting a Wallpaper Image

Set a photo, picture, or animation as a wallpaper (background) image in your phone's home screen.

## Find the Feature



> **Settings** > **Personalize**  
> **Wallpaper**

Press	To
1	scroll to <b>Picture</b>
2 <b>CHANGE</b>	open the picture viewer
3  up or down	scroll to a picture/animation Scroll to <b>(None)</b> to turn off the wallpaper image.
4 <b>SELECT</b>	select the image
5	scroll to <b>Layout</b>
6 <b>CHANGE</b>	adjust the image layout
7	scroll to <b>Center</b> , <b>Tile</b> , or <b>Fit-to-screen</b> <b>Center</b> places the image in the center of the display. <b>Tile</b> fills the display with adjacent copies of the image. <b>Fit-to-screen</b> resizes the image, if necessary, to fit the display.
8 <b>SELECT</b>	confirm the layout setting
9 <b>BACK</b>	save wallpaper settings



# Setting a Screen Saver Image

Set a photo, picture, or animation as a screen saver image.

The screen saver image displays when the flip is open and no activity is detected for a specified time period. The image shrinks to fill the display, if necessary. An animation repeats for 1 minute, then the first frame of the animation displays.

**Tip:** Turn off the screen saver to extend battery life.

## Find the Feature



> **Settings** > **Personalize**  
> **Screen Saver**

Press	To
1	scroll to <b>Picture</b>
2 <b>CHANGE</b>	open the picture viewer
3  up or down	scroll to a picture/animation Scroll to <b>(None)</b> to turn off the screen saver image.
4 <b>SELECT</b>	select the image
5	scroll to <b>Delay</b>
6 <b>CHANGE</b>	set the delay interval
7	scroll to the inactivity interval that triggers the screen saver
8 <b>SELECT</b>	confirm the delay setting
9 <b>BACK</b>	save screen saver settings

# Setting Display Brightness

Find the Feature



> Settings > Initial Setup  
> Brightness

# Setting Display Contrast

Find the Feature



> Settings > Initial Setup  
> Contrast

# Adjusting the Backlight

Set the amount of time that the display and keypad backlights remain on, or turn off backlights to extend battery life.

Find the Feature




> Settings > Initial Setup  
> Backlight


# Hiding or Showing Location Information



Your phone can use the *automatic location information* (ALI) feature to tell the network where you are physically located.



When ALI is set to **Location On**, your phone displays the  (ALI on) indicator. Services may use your known location to provide useful information (for example, driving directions, or the location of the nearest bank). Your phone prompts you when the network or a service asks for your location. You can refuse at this point.



When ALI is set to **911 Only**, your phone displays the  (ALI off) indicator, and the phone does not send location information unless you call the emergency phone number (such as 911).

### Find the Feature

 > **Settings** > **Location**

	Press	To
1		scroll to <b>Location On</b> or <b>911 Only</b>
2	<b>SELECT</b> (  )	select the setting

## Conserving Battery Power

Some networks and phones include a battery save setting to extend battery life. When this feature is activated, your phone automatically turns off the keypad backlight when it detects that enough ambient light is available.

### Find the Feature

 > **Settings** > **Initial Setup**  
> **Battery Save**

# Calling Features

For basic instructions on how to make and answer calls, see page 12.

## Changing the Active Line



Change the active phone line to make and receive calls from your other phone number.

### Find the Feature



> Settings > Phone Info  
> Active Line

## Redialing a Number

Press	To
1	view the dialed calls list
2	scroll to the entry you want to call
3	redial the number

## Using Automatic Redial



When you receive a busy signal, your phone displays **Call Failed, Number Busy**.

With automatic redial, your phone automatically redials the number for four minutes. When the call goes through, your phone rings or vibrates one time, displays **Redial Successful**, and then connects the call.



You must turn on automatic redial to use the feature. To turn automatic redial on or off:

### Find the Feature

 > **Settings** > **Initial Setup**  
> **Auto Redial**

When automatic redial is turned off, you can manually activate the feature to redial a phone number. When you hear a fast busy signal and see **Call Failed**:

Press	To
 or <b>RETRY</b> (  )	activate automatic redial

## Turning Off a Call Alert

You can turn off your phone's incoming call alert before answering the call.

Press	To
either volume key	turn off the alert


## Calling an Emergency Number

Your service provider programs 1 or more emergency phone numbers, such as 911, that you can call under any circumstances, even when your phone is locked.

**Note:** Emergency numbers vary by country. Your phone's preprogrammed emergency number(s) may not work in all locations, and sometimes an emergency call cannot be




placed due to network, environmental, or interference issues.

Press	To
1 keypad keys	dial the emergency number
2 	call the emergency number




## Viewing Recent Calls

Your phone keeps lists of the calls you recently received and dialed, even if the calls did not connect. The lists are sorted from newest to oldest entries. The oldest entries are deleted as new entries are added.

**Shortcut:** Press  from the home screen to view the dialed calls list.

### Find the Feature





 > Recent Calls

Press	To
1 	scroll to <b>Received Calls</b> or <b>Dialed Calls</b>
2 <b>SELECT</b> 	select the list
3 	scroll to an entry

**Note:** ✓ means the call connected.






Press	To
4 	call the entry's number
	<b>Tip:</b> Press and hold  for 2 seconds to send the number as DTMF tones during a call.
or	
VIEW 	view entry details
or	
	open the <b>Last Calls Menu</b> to perform various operations on the entry




The **Last Calls Menu** can include the following options:

Option	Description
<b>Store</b>	Create a phonebook entry with the number in the <b>No.</b> field.
<b>Delete</b>	Delete the entry.
<b>Delete All</b>	Delete all entries in the list.
<b>Hide ID/Show ID</b>	Hide or show your caller ID for the next call.
<b>Send Message</b>	Open a new text message with the number in the <b>To</b> field.
<b>Add Digits</b>	Add digits after the number.
<b>Attach Number</b>	Attach a number from the phonebook or recent calls lists.

# Returning an Unanswered Call

Your phone keeps a record of your unanswered calls, and displays:

- the  (missed call) indicator
- **X Missed Calls**, where **X** is the number of missed calls

Press	To
1 <b>VIEW</b> 	see the received calls list
2 	select a call to return
3 	make the call




## Using the Notepad

The most recent set of digits that you enter are stored in your phone's *notepad* memory. This can be a phone number that you called or a number that you entered but did not call. To retrieve the number stored in the notepad:

**Find the Feature**


 > Recent Calls > Notepad



Press	To
	call the number
or	
	open the <b>Dialing Menu</b> to attach a number or insert a special character
or	
<b>STORE</b> (  )	create a phonebook entry with the number in the <b>No.</b> field



## Attaching a Number

While dialing (with digits visible in the display):

Press	To
 > <b>Attach Number</b>	attach a number from the phonebook or recent calls lists

 

## Calling with Speed Dial

Each entry you store in your phonebook is assigned a unique *speed dial* number.

**Tip:** To see an entry's speed dial number, press  > **Phonebook**, scroll to the entry, and press **VIEW** ()



To speed dial a phonebook entry:

Press	To
1 keypad keys	enter the speed dial number for the entry you want to call
2 	submit the number
3 	call the entry

## Calling with 1-Touch Dial

To call phonebook entries 1 through 9, press and hold the single-digit speed dial number for 1 second.

## Using Voicemail



Voicemail messages that you receive are stored on the network. To listen to your messages, you must call your voicemail phone number.


**Note:** Your service provider may include additional information about using this feature.

## Listening to Voicemail Messages

### Find the Feature


 > Messages > VoiceMail  
> CALL


The phone calls your voicemail phone number. If no voicemail number is stored, your phone prompts you to store a number.

**Tip:** Your service provider may also store your voicemail phone number as phonebook entry number 1. If so, you can press and hold  to call your voicemail number.



## Receiving a Voicemail Message

When you receive a voicemail message, your phone displays the  (voicemail message) indicator and a **New VoiceMail** notification.

Press	To
<b>CALL</b> 	listen to the message


The phone calls your voicemail phone number. If no voicemail number is stored, your phone prompts you to store a number.

## Storing Your Voicemail Number

 

If necessary, use the following procedure to store your voicemail phone number on your phone. Usually, your service provider has already done this for you.

### Find the Feature

-  > **Messages**
- > **Message Settings**
- > **VoiceMail No.**

Press	To
<b>1</b> keypad keys	enter your voicemail number
<b>2</b> <b>OK</b> 	store the number

## Putting a Call On Hold

 
Press	To
<b>HOLD</b>  (if available) or	put the call on hold
 > <b>Hold</b>	

# Phone Features

This section helps you locate features on your phone that are not described in detail in this guide.

## Main Menu

This is the standard main menu layout. **Menu organization and feature names may vary on your phone.** Not all features may be available on your phone.

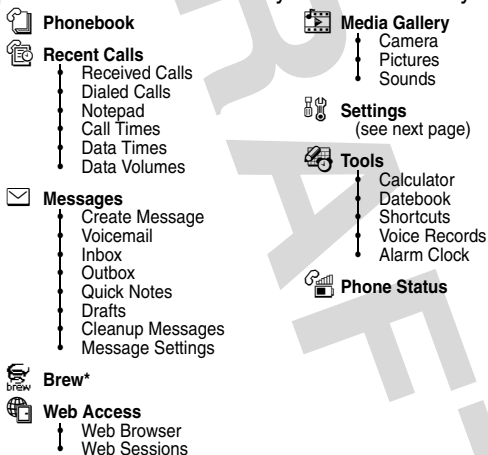

\* Your service provider may use a different name for the Brew feature. Brew is a network dependent feature.



# Settings Menu



## Ring Styles

- Style
- Style Detail



## Personalize

- Home Screen
- Main Menu
- Voice Dial Setup
- Color Style
- Greeting
- Wallpaper
- Screen Saver
- Sound Settings



## In-Call Setup

- In-Call Timer
- Answer Options
- MSG Alert



## Security

- Phone Lock
- Lock Application
- Restrict Calls
- New Passwords



## Initial Setup

- Time and Date
- Speakerphone
- Auto PIN Dial
- Auto Redial
- Backlight
- TTY Setup
- Scroll
- Language
- Battery Save
- Contrast
- Brightness
- DTMF
- Hyphenation
- Master Reset
- Master Clear



## Network



## Car Settings



## Headset

## Location



## Connection

- Incoming Call



## Phone Status

- My Tel. Number
- Active Line
- Battery Meter
- Storage Devices
- Other Information

### Shortcuts

#### Change ringer alert:

Open flip, press down volume key to decrease volume, then switch to vibrate alert, then silent alert. Press up volume key to reset ring alert and increase volume.

#### Display my phone number:

Press (from home screen).









#### Go to dialed calls list:

Press (from home screen).



 

#### Exit menu system:

Press .

# Calling Features
















Feature	Description	
<b>Conference Call</b>	During a call:  > <b>Hold</b> , dial next number, press  , press <b>LINK</b> (  ).	
<b>Restrict Calls</b>	Restrict outgoing or incoming calls:  > <b>Settings</b> > <b>Security</b> > <b>Restrict Calls</b> > <i>unlock_code</i>	
<b>TTY Calls</b>	Set up your phone for use with an optional TTY device:  > <b>Settings</b> > <b>Initial Setup</b> > <b>TTY Setup</b>	



 

# Messages

Feature	Description	
<b>Send Text Message</b>	Send a text message:  > <b>Messages</b> > <b>Create Message</b> > <b>New TXT Msg</b>	
<b>Send Multimedia Message</b>	Send a multimedia message:  > <b>Messages</b> > <b>Create Message</b> > <b>New PIX Msg</b>	




 






Feature	Description
<b>Insert Objects In Text Message</b>	While composing a text message:  > <b>Insert</b> 
<b>Use MMS Template</b>	Open an MMS template with preloaded media:  > <b>Messages</b> > <b>Create Message</b> > <b>PIX Templates</b> 
<b>Read Message</b>	Read a new text or multimedia message that you have received: Press <b>READ</b> (  ). 
<b>Store Message Objects</b>	Go to a multimedia message slide, or highlight an object in a letter, then:  > <b>Store</b> 
<b>Quick Note</b>	Send or create a quick note message:  > <b>Messages</b> > <b>Quick Notes</b> 
<b>Sent Messages</b>	View sent messages:  > <b>Messages</b> > <b>Outbox</b> 
<b>Received Messages</b>	Read received messages:  > <b>Messages</b> > <b>Inbox</b>  <p><b>Tip:</b> Press  to perform various operations on the message.</p>

Feature	Description
<b>Drafts</b>	View messages saved in drafts folder:  > <b>Messages</b> > <b>Drafts</b> 
<b>Cleanup Messages</b>	Delete all messages or only messages from the <b>Outbox</b> or drafts folder:  > <b>Messages</b> > <b>Cleanup Messages</b> 













## Phonebook

Feature	Description
<b>Create Entry</b>	Create a new phonebook entry:  > <b>Phonebook</b>  > <b>New</b> > <b>Phone Number</b>
<b>Create Group Mailing List</b>	Create a group mailing list as a phonebook entry:  > <b>Phonebook</b>  > <b>New</b> > <b>Mailing List</b>
<b>Dial Number</b>	Call a number stored in the phonebook:  > <b>Phonebook</b> , highlight the phonebook entry, press  to call





Feature	Description
<b>Voice Dial Number</b>	Voice dial a number stored in the phonebook: Press and release the voice key, then (within 2 seconds) say: <ul style="list-style-type: none"> <li>• “Name dial” followed by the name of a phonebook entry</li> </ul> <p style="text-align: center;"><b>or</b></p> <ul style="list-style-type: none"> <li>• “Digit dial” followed by the number you wish to call</li> </ul>
<b>Set Ringer ID for Entry</b>	Assign a distinctive ringer alert to a phonebook entry: ☰ > <b>Phonebook</b> > <i>entry</i> ☰ > <b>Edit</b> > <b>Ringer ID</b> > <b>CHANGE</b> > <i>ringer name</i>
<b>Set Picture ID for Entry</b>	Assign a photo or picture to a phonebook entry: ☰ > <b>Phonebook</b> > <i>entry</i> ☰ > <b>Edit</b> > <b>Picture</b> > <b>CHANGE</b>
<b>Set Category for Entry</b>	Set the category for a phonebook entry: ☰ > <b>Phonebook</b> > <i>entry</i> ☰ > <b>Edit</b> > <b>Category</b> > <b>CHANGE</b> > <i>category name</i>
<b>Set Category View</b>	Set a phonebook category view: ☰ > <b>Phonebook</b> ☰ > <b>Categories</b> > <i>category name</i>



Feature	Description
<b>Sort Phonebook List</b>	Set the order in which phonebook entries are listed:  > <b>Phonebook</b>  > <b>Setup</b> > <b>Sort by</b> > <i>sort order</i>
<b>Set Primary Number</b>	Set the primary number for a phonebook entry with multiple numbers:  > <b>Phonebook</b> > <i>entry</i>  > <b>Set Primary</b> > <i>phone number</i>
<b>View Primary or All Numbers</b>	Set to view only primary numbers or all numbers when viewing entries:  > <b>Phonebook</b> > <i>entry</i>  > <b>Setup</b> > <b>View</b> > <b>CHANGE</b> > <b>All Contacts</b> or <b>Primary Contacts</b>
<b>Edit Entry</b>	Edit a phonebook entry:  > <b>Phonebook</b> > <i>entry</i>  > <b>EDIT</b>
<b>Delete Entry</b>	Delete a phonebook entry:  > <b>Phonebook</b> > <i>entry</i>  > <b>Delete</b>
<b>Copy Phonebook Entry</b>	Copy a phonebook entry to another location in phonebook:  > <b>Phonebook</b> > <i>entry</i>  > <b>Copy Entry</b> > <i>location number</i>



Feature	Description
<b>Copy Multiple Phonebook Entries</b>	Copy a phonebook entry to another location in phonebook:  > <b>Phonebook</b> > <i>entry</i>  > <b>Copy Entries</b> > <b>From(start):</b> > <i>location number</i> > <b>From(end):</b> > <i>location number</i> > <b>To(start):</b> > <i>location number</i>

## Personalizing Features

### Using Voice Commands


You can place calls and access some menu options by speaking commands to your phone.

#### To Access Menus

To access your **Messages**, **Settings**, or **Ring Styles** menus:

#### Action

- 1 Press and release the voice button on the right side of the phone.

**Note:** If **Speakerphone** is not already turned on and you want to activate it, press **SPEAKER** (). You can then speak the commands aloud, and hear phone prompts played out loud.

Your phone displays **Say a command**.



## Action

- 2 Say 1 of the following commands:

**Name Dial, Digit Dial, Camera, Voicemail, Redial, Received Calls**

Your phone opens the corresponding menu or performs the corresponding action.

---

## To Place Calls

Advanced Voice Dialing lets you place a call by speaking a phone number.

**Note:** This feature recognizes only 7-digit, 10-digit, and 11-digit numbers. It will **not** dial 3-digit numbers such as 911. To make an emergency call, use the phone keypad to dial and send the number.

## Action

- 1 Press and release the voice button on the right side of the phone.

Your phone displays **Say a command** and plays the same prompt out loud.

---

- 2 Say "Digit Dial."
- 

- 3 When prompted, say the phone number.

If the phone recognizes the number, it dials that number.

If the phone asks you to repeat a number, say it again. If the number is not valid or is not recognized, the phone does not place the call.

---



## Action

If the phone does not recognize the number, it displays a list of up to 3 numbers and asks, “Did you say ...” followed by the first number in the list.

- If the number is correct, say “Yes” to dial that number.

or

- If the number is not correct, say “No” to go to the next number.

or

- To select the number manually, scroll to the correct number on the list and press **SELECT** (⏏).

or

- To exit the list and repeat the number, press the voice button.

If you reach the end of the list without confirming a number, the phone asks if you want to try again. Say “Yes” to say the number again or “No” to exit without placing a call.

---

---

**Tip:** Speak numbers at a normal speed and volume, pronouncing each digit distinctly. Avoid pausing between digits.

### *To Adapt Advanced Voice Dialing to Your Voice*

For most people, Advanced Voice Dialing works well without any initial setup. However, if the phone is



frequently unable to recognize numbers correctly when you use Advanced Voice Dialing, you may be able to improve your results by adapting it to your voice.

**Note:** If the phone is used by several people, reset Advanced Voice Dialing to its original setting before proceeding. This ensures that you are not saving your settings over someone else's.

## Adapting Advanced Voice Dialing to Your Voice

### Find the Feature



> **Settings** > **Personalize**  
> **Voice Dial Setup**

### Action

- 1 Scroll to **Adapt Digits**.
- 2 Press **OK** (OK icon).
- 3 Press **START** (START icon).
- 4 When the phone prompts you to say the 1st digit sequence, wait for the beep and then repeat the digits in a normal tone of voice.
- 5 If the recording sounds acceptable (no mistakes or background noises), say "Yes" or press **OK** (OK icon).

or

If the recording is not acceptable, say "No."  
When prompted to say the digits again, wait for the beep and then record the digits again.  
Repeat this step until you are satisfied with the recording.





## Action

- Repeat the recording process with each set of digits (12 in all) until adaptation is complete. (The phone will say “Adaptation Complete.”)

**Tip:** When adapting Advanced Voice Dialing:

- Choose a quiet place for recording.
- Wait for the beep before you begin to speak.
- Speak at a normal speed and volume, pronouncing each digit distinctly. Avoid pausing between digits.
- If you make a mistake while recording a sequence of digits, or if an unexpected noise spoils the recording, rerecord that sequence.

## To Reset Advanced Voice Dialing

### Find the Feature



> **Settings** > **Personalize**  
> **Voice Dial Setup**

Press	To
1	scroll to <b>Reset Digits</b>
2 <b>OK</b> (	reset Advanced Voice Dialing to the factory default








## Additional Personalizing Features

Feature	Description
<b>Ring Alert</b>	Change the ring alert for an event: > <b>Settings</b> > <b>Ring Styles</b> > <b>Style Detail</b> > <i>event name</i>







Feature	Description
<b>Ringer IDs</b>	Activate distinctive ringer alerts assigned to phonebook entries:  > <b>Settings</b> > <b>Ring Styles</b> > <b>Style Detail</b> > <b>Ringer IDs</b>
<b>Ring Volume</b>	Set ringer volume:  > <b>Settings</b> > <b>Ring Styles</b> > <b>Style Detail</b> > <b>Ring Volume</b>
<b>Keypad Volume</b>	Set keypad keypress volume:  > <b>Settings</b> > <b>Ring Styles</b> > <b>Style Detail</b> > <b>Key Volume</b>
<b>Reminders</b>	Set reminder alerts for picture, text, or voicemail messages you receive:  > <b>Settings</b> > <b>Ring Styles</b> > <b>Style Detail</b> > <b>Reminders</b>
<b>Message Alerts</b>	Set whether or not you are alerted to messages received during a call:  > <b>Settings</b> > <b>In-Call Setup</b> > <b>MSG Alert</b>
<b>Greeting</b>	Change the greeting that appears when you turn on your phone:  > <b>Settings</b> > <b>Personalize</b> > <b>Greeting</b>
<b>Display Text</b>	Set home screen text to be left justified or centered in the display:  > <b>Settings</b> > <b>Personalize</b> > <b>Home Screen</b> > <b>Layout</b>



Feature	Description
<b>Clock View</b>	Display an analog clock or digital time readout in the home screen:  > <b>Settings</b> > <b>Personalize</b> > <b>Home Screen</b> > <b>Clock</b>
<b>Menu View</b>	Display the main menu as graphic icons or as a text-based list:  > <b>Settings</b> > <b>Personalize</b> > <b>Main Menu</b> > <b>View</b>
<b>Main Menu</b>	Reorder your phone's main menu:  > <b>Settings</b> > <b>Personalize</b> > <b>Main Menu</b> > <b>Reorder</b>
<b>Show or Hide Menu Icons</b>	Show or hide menu feature icons in the home screen:  > <b>Settings</b> > <b>Personalize</b> > <b>Home Screen</b> > <b>Home Keys</b> > <b>Icons</b>
<b>Change Soft Keys</b>	Change soft key labels and menu feature icons in the home screen:  > <b>Settings</b> > <b>Personalize</b> > <b>Home Keys Left Soft Key</b> or <b>Right Soft Key</b>
<b>Shortcuts</b>	Create a shortcut to a menu item: Highlight the menu item, then press and hold  .  Select a shortcut:  > <b>Tools</b> > <b>Shortcuts</b> > <i>shortcut name</i>






# Menu Features


Feature	Description
<b>Language</b>	Set menu language:  > <b>Settings</b> > <b>Initial Setup</b> > <b>Language</b>
<b>Scroll</b>	Set the highlight bar to stop or wrap around in menu lists:  > <b>Settings</b> > <b>Initial Setup</b> > <b>Scroll</b>
<b>Master Reset</b>	Reset all options <i>except</i> unlock code, security code, and lifetime timer:  > <b>Settings</b> > <b>Initial Setup</b> > <b>Master Reset</b>
<b>Master Clear</b>	Reset all options <i>except</i> unlock code, security code, and lifetime timer, and clear all user settings and entries:  > <b>Settings</b> > <b>Initial Setup</b> > <b>Master Clear</b>



# Dialing Features

Feature	Description
<b>Auto PIN Dial</b>	Automatically dial an authenticating PIN code for outgoing calls:  > <b>Settings</b> > <b>Initial Setup</b> > <b>Auto PIN Dial</b>
<b>DTMF Tones</b>	Activate DTMF tones:  > <b>Settings</b> > <b>Initial Setup</b> > <b>DTMF</b>  Send DTMF tones during a call: Press number keys.  Send stored numbers as DTMF tones during a call: Highlight a number in the phonebook or recent calls lists, then press  > <b>Send Tones.</b>









## Call Monitoring

**Network connection time** is the elapsed time from the moment you connect to your service provider's network to the moment you end the call by pressing . This time includes busy signals and ringing.

**The amount of network connection time you track on your resettable timer may not equal the amount of time for which you are billed by your service**




provider. For billing information, please contact your service provider directly.






Feature	Description
<b>Call Times</b>	View call timers:  > <b>Recent Calls</b> > <b>Call Times</b> 
<b>In-Call Timer</b>	Display time or cost information during a call:  > <b>Settings</b> > <b>In-Call Setup</b> > <b>In-Call Timer</b> 
<b>Data Times</b>	View data call timers:  > <b>Recent Calls</b> > <b>Data Times</b> 
<b>Data Volumes</b>	View data volume meters:  > <b>Recent Calls</b> > <b>Data Volumes</b> 

## Handsfree Features


**Note:** The use of wireless devices and their accessories may be prohibited or restricted in certain areas. Always obey the laws and regulations on the use of these products.

Feature	Description
<b>Accessory Volume Settings</b> (car kit or headset)	Adjust volume levels of car kit accessory: During an active call, press your phone's up or down volume keys. 




Feature	Description
<b>Speakerphone</b>	Activate a connected external speakerphone during a call: Press the speakerphone button on the left side of the phone.  <b>or</b> Press <b>SPEAKER</b> (📞) (if available).  <b>or</b>  > <b>Spkrphone On</b>
<b>Auto Answer</b> (car kit or headset)	Automatically answer calls when connected to a car kit or headset:  > <b>Settings &gt; Car Settings</b> <b>or Headset &gt; Auto Answer</b>
<b>Voice Dial</b> (headset)	Enable voice dial with headset send/end key:  > <b>Settings &gt; Headset</b> <b>&gt; Voice Dial</b>
<b>Auto Handsfree</b> (car kit)	Automatically route calls to a car kit when connected:  > <b>Settings &gt; Car Settings</b> <b>&gt; Auto Handsfree</b>
<b>Power-Off Delay</b> (car kit)	Set the phone to stay on for a period of time after the ignition is switched off:  > <b>Settings &gt; Car Settings</b> <b>&gt; Power-off Delay</b>



Feature	Description
<b>Charger Time</b> (car kit)	Charge the phone for a period of time after the ignition is switched off:  > <b>Settings</b> > <b>Car Settings</b> > <b>Charger Time</b>



 
## Data and Fax Calls

Feature	Description
<b>Send Data or Fax</b>	Connect your phone to the device, then place the call through the device application.
<b>Receive Data or Fax</b>	Connect your phone to the device, then answer the call through the device application.
<b>Talk Then Fax</b>	Connect your phone to the device, enter the number, press  > <b>Dialing Menu</b> > <b>Talk Then Fax</b> , then press to make the call.







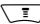


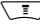 


# Network Features

Feature	Description
<b>Network Settings</b>	View network information and adjust network settings:  > <b>Settings</b> > <b>Network</b>



# Personal Organizer Features

Feature	Description
<b>Add Datebook Event</b>	Add an event to the datebook:  > <b>Tools</b> > <b>Datebook</b> > <i>day</i>  > <b>New</b>
<b>View Datebook Event</b>	View or edit event details:  > <b>Tools</b> > <b>Datebook</b> > <i>day</i> > <i>event name</i>
<b>Event Reminder</b>	View event reminder: <b>VIEW</b> (  )  Dismiss event reminder: <b>EXIT</b> (  )
<b>Copy Datebook Event</b>	Copy a datebook event to date and/or time:  > <b>Tools</b> > <b>Datebook</b> > <i>day</i> > <i>event</i>  > <b>Copy</b>
<b>Set Alarm</b>	Set an alarm:  > <b>Tools</b> > <b>Alarm Clock</b>












Feature	Description
<b>Turn Off Alarm</b>	Turn off alarm: Press <b>DISABLE</b> (⏏) or ⏏.  Set 8-minute delay: Press <b>SNOOZE</b> (⏏).
<b>Create Voice Record</b>	Create a voice record: Press and hold voice key, speak into the phone, release voice key.  <b>Note:</b> Recording phone calls is subject to varying state and federal laws regarding privacy and recording of conversations.
<b>Play Voice Record</b>	Play back a voice record: ⏏ > <b>Tools</b> > <b>Voice Records</b> > <i>voice record</i>
<b>Calculator</b>	Calculate numbers: ⏏ > <b>Tools</b> > <b>Calculator</b>
<b>Currency Converter</b>	Convert currency: ⏏ > <b>Tools</b> > <b>Calculator</b> ⏏ > <b>Exchange Rate</b>  Enter exchange rate, press <b>OK</b> (⏏), enter amount, press ⏏ > <b>Convert Currency.</b>





# Security

Feature	Description
Lock Application	Lock phone applications:  > <b>Settings</b> > <b>Security</b> > <b>Lock Application</b>

# News and Entertainment

Feature	Description
Launch Micro-Browser	Start a micro-browser session:  > <b>Web Access</b> > <b>Launch Mobile Web 2.0</b> 
Web Sessions	Select or create a Web session:  > <b>Web Access</b> > <b>Web Sessions</b> 
Download Game or Application	Download a Brew game or application:  > <b>Brew</b> > <b>Brew Shop</b> , press <b>START</b> (  ) , select category, select application, select pricing option. <b>Note:</b> Your service provider may use a different name for the Brew feature. 
Launch Game or Application	Launch a Brew game or application:  > <b>Brew</b> > <i>application</i> 



Feature	Description
<b>Manage Pictures</b>	Manage pictures and animations:  > <b>Media Gallery</b> > <b>Pictures</b>
<b>Manage Sounds</b>	Manage ring tones, sounds that you have composed or downloaded:  > <b>Media Gallery</b> > <b>Sounds</b>



# ***Specific Absorption Rate Data***

---

## **The model wireless phone meets the government's requirements for exposure to radio waves.**

Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission (FCC) of the U.S. Government and by the Canadian regulatory authorities. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age or health.

The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC and by the Canadian regulatory authorities is 1.6 W/kg.<sup>1</sup> Tests for SAR are conducted using standard operating positions accepted by the FCC and by Industry Canada with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station, the lower the power output.

Before a phone model is available for sale to the public in the U.S. and Canada, it must be tested and certified to the FCC and Industry Canada that it does not exceed the limit established by each government for safe exposure. The tests are performed in positions and locations (e.g., at the ear and worn on the body) reported to the FCC and available for review by Industry Canada. The highest SAR value for this model phone when tested for use at the ear is 1.37 W/kg, and when worn on the body, as

described in this user guide, is 0.65 W/kg. (Body-worn measurements differ among phone models, depending upon available accessories and regulatory requirements).<sup>2</sup>

While there may be differences between the SAR levels of various phones and at various positions, they all meet the governmental requirements for safe exposure. Please note that improvements to this product model could cause differences in the SAR value for later products; in all cases, products are designed to be within the guidelines.

Additional information on Specific Absorption Rates (SAR) can be found on the Cellular Telecommunications & Internet Association (CTIA) Web site:

<http://www.phonefacts.net>

or the Canadian Wireless Telecommunications Association (CWTA) Web site:

<http://www.cwta.ca>

1. In the United States and Canada, the SAR limit for mobile phones used by the public is 1.6 watts/kg (W/kg) averaged over one gram of tissue. The standard incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in measurements.
2. The SAR information includes the Motorola testing protocol, assessment procedure, and measurement uncertainty range for this product.

# Index

---

## A

- accessories 8, 41, 61
- Advanced Voice Dialing 67
- AGPS service indicator 26
- alarm clock 78
- alert
  - defined 45
  - downloading 62
  - setting 12, 40, 45, 70
  - turning off 12, 13, 52

ALI indicators 49

animation

- downloading 62
  - screen saver 48
  - viewing 81
  - wallpaper 47
- answering a call 13, 46
- application, locking and  
unlocking 80
- automatic location  
information  
sending 49
- automatic redial 51

## B

backlight 49

battery

- charging 10
- extending battery life 8,  
48, 49, 50
- installing 10
- level indicator 26
- brightness, setting 49
- browser. See micro-browser

## C

calculator 79

call

- adding digits after phone  
number 54
- Advanced Voice Dialing  
67
- alert, setting 12, 40, 45,  
70
- alert, turning off 12, 13,  
52
- answer options 46
- answering 13
- deleting 53
- dialed calls list 53
- dialing 12
- emergency number 52
- ending 12, 13
- handsfree speaker 41

- hold 58
- making 12
- received calls list 53
- receiving 13
- recent calls 53
- speakerphone 76
- storing 53
- timers 75
- unanswered call 40, 55
- Call Failed, Number Busy message 51
- caller ID 54
- camera
  - taking a photo 2, 15
- capitalization, changing 32
- car kit 75
- character chart 35
- codes
  - changing 41
  - default 11, 42, 43, 44
  - forgetting 43
- conference call 61
- contrast, display 49
- customizing the menu 72

## D

- data call 77
  - timers 75
  - volume meters 75
- datebook 78
- deleting a call 53

- dialed calls list 53
- dialing a number 12
- display
  - backlight 49
  - brightness 49
  - contrast 49
  - greeting 71
  - language 73
  - personalizing 72
- distinctive ringer alert 71
- drafts folder 20, 63
- DTMF tones
  - activating 74
  - sending 54, 74

## E

- earpiece volume 12
- email
  - draft 20
- emergency number 52
- end key 12, 13
- ending a call 12, 13
- Enter Unlock Code message 43, 44
- event alert 70
- external display 39

## F

- fax call 77
- 5-way navigation key 27



flip

- external display 39
- open to answer 13, 46
- screen saver 48

## G

greeting 71

## H

handsfree speaker 41

handsfree use 75

headset

- accessory, using 75
- using with external display 41

Hide ID feature 54

hold a call 58

home screen 24

## I

indicators

- AGPS service 26
- ALI 49
- battery level 26
- location 26
- loud ring alert 26
- message 25
- message waiting 21
- missed call 55
- ring alert 26
- roam 25

signal strength 25

silent alert 26

soft ring alert 26

text case 32

text entry method 26, 32

vibrate alert 26

vibrate and ring alert 26

voicemail message 26,  
58

iTAP software 36

## K

key

end 12, 13

5-way navigation 27

left soft key 25

menu 28

power 11

right soft key 25

send 12, 13, 53

volume control 12

keypad

answering calls 46

volume, setting 71

## L

language, setting 73

left soft key

functions 25

location indicator 26

location, sending to network  
49

lock

application 80

phone 42

Low Battery message 26

## M

making a call 12

master clear 73

master reset 73

menu

entering text 30

icons, converting to text  
72

icons, showing or hiding  
72

language, setting 73

lists 29

navigating 27

personalizing 72

rearranging features 72

scroll 73

using features 29

view, changing 72

wrap around 73

menu key 28

message

alerts 71

cleanup 63

drafts 63

MMS template 62

MMS, defined 18

multimedia message 61

outbox 62

quick note 62

reading 62

receiving 3

reminders, turning on/off  
71

status 62

text 3, 61, 62

message indicator 25

message waiting indicator  
21

micro-browser

browser setup 80  
using 80

Web sessions 80

missed call indicator 55

Missed Calls message 40,  
55

MMS. *See* message  
multimedia message

receiving 21

sending 18, 61

multimedia messaging  
service. *See*  
message

my telephone number 14,  
45, 60

## N

- network settings 78
- notepad 55
- number
  - storing your number 45
  - viewing your number 14, 60
- numbers, entering 37

## O

- 1-touch dial
  - using 57
- open to answer 46
- optional accessory, defined 8
- optional feature, defined 8
- outbox 62

## P

- passwords. *See* codes
- phone
  - alert, setting 12, 40, 45, 70
  - alert, turning off 12, 13, 52
  - answer options 46
  - automatic location
    - information 49
  - clear stored information 73

- codes 41
- flip 13
- keypad, answering calls 46
- language, setting 73
- location 49
- locking 42
- network settings 78
- reset all options 73
- security code 42
- unlock code 42
- unlocking 11, 42, 43, 44
- phone number
  - adding digits after 54
  - attaching 2 numbers 54, 56
  - redialing 51
  - storing in phonebook 63
  - storing your number 45
  - viewing your number 14, 60
- phonebook
  - attaching 2 numbers 54, 56
  - category views 64
  - deleting an entry 65
  - dialing a number 63
  - editing an entry 65
  - entry category 64
  - group mailing list 63
  - 1-touch dial 57

- primary number, setting 65
- ringer ID 64, 71
- sorting entries 65
- speed dial number 56
- storing an entry 63
- voice dialing 64
- photo
  - downloading 62
  - sending 2, 15
  - taking 2, 15
- picture
  - downloading 62
  - screen saver 48
  - viewing 81
  - wallpaper 47
- power key 11
- predictive text entry 36
- primary text entry method 31
- Q**
- quick note 62
- R**
- received calls list 53
- recent calls 53
- redial
  - automatic redial 51
  - busy number 51
- reminders
  - turning on/off 71
- right soft key
  - functions 25
- ring alert
  - setting 12, 13, 40, 45, 70
  - turning off 12, 13, 52
- ring alert indicators 26
- ring tone
  - downloading 62
  - managing 81
- ringer ID
  - setting 64
  - turning on/off 71
- ringer volume, setting 12, 71
- roam indicator 25
- S**
- screen saver 48
- scroll, menu 73
- secondary text entry method 31
- security code
  - changing 41
  - default 42
  - forgetting 44
- send key 12, 13, 53
- shortcuts 60, 72
- Show ID feature 54

- signal strength indicator 25
  - silent alert indicator 26
  - silent alert, setting 12, 40, 45
  - silent ring alert, setting 13
  - soft keys
    - functions 25
  - sound
    - downloading 62
    - managing 81
  - Speaker On message 41
  - speakerphone
    - activating 76
    - automatic answer 76
  - speed dial 56
  - standby time, increasing 48, 49
  - storing a call 53
  - symbol chart 38
  - symbols, entering 38
- T**
- tap method text entry 32
  - telephone number
    - storing your number 45
    - viewing your number 14, 60
  - text 32
    - character chart 35
    - entering 30
    - entry method, selecting 31
    - entry method, setup 31
    - iTAP software predictive text entry 36
    - numeric method 37
    - symbol chart 38
    - symbol method 38
    - tap method 32
    - text case indicator 32
    - text entry method
      - selecting 31
      - setup 31
    - text entry method indicator 26, 32
    - timers 75
    - travel charger 10
    - TTY device 61
- U**
- unlock
    - application 80
    - phone 42
  - unlock code
    - bypassing 43
    - changing 41
    - default 11, 42, 43, 44
    - entering 11, 42, 43
    - forgetting 44

## V

vibrate alert

setting 12, 40, 45, 70

turning off 12, 13, 52

vObject, defined 21

voice dial 64, 76

voice dialing

Advanced Voice Dialing

67

voice key

dialing a number 64

voice record 79

voicemail 57

voicemail message indicator

26, 58

volume

earpiece 12

keypad 71

ringer 12, 71

volume keys 12

## W

wallpaper 47

Web pages 80

Web sessions 80

DRAFT





**motorola.com**