

APPLICANT: MOTOROLA, INC.

FCC ID: IHDT56EV1

**INSTRUCTION MANUAL**

A preliminary draft copy of the Users Manual follows:



***MOTOROLA***

MPx220

GSM

 
***START HERE >***



# Welcome

---

Welcome to the world of Motorola MOTOPro devices. Your Motorola MPx220 wireless phone delivers to you simplified communications, increased productivity and the control to develop a superior mobile experience whether at work, at home, on the road or at play.

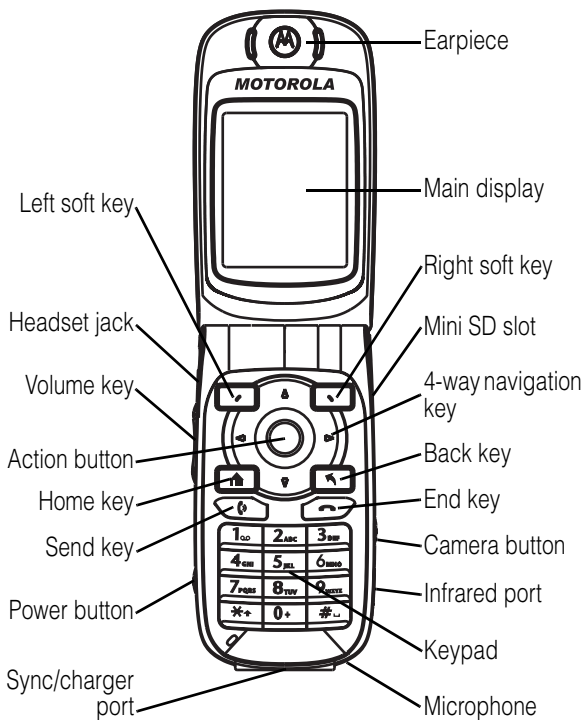

Motorola, Inc.  
Consumer Advocacy Office  
1307 East Algonquin Road  
Schamburg, IL 60196

1-800-331-6456 (United States)  
1-888-390-6456 (TTY/TDD United States)  
1-800-461-4575 (Canada)

www.motorola.com (United States)  
www.motorola.ca (Canada)

MOTOROLA and the Stylized M Logo are registered in the US Patent & Trademark Office. The Bluetooth trademarks are owned by their proprietor and used by Motorola, Inc. under license. Microsoft, Windows, ActiveSync and Windows Media are registered trademarks of Microsoft Corporation; and Windows XP and Windows Mobile are trademarks of Microsoft Corporation. All other product or service names are the property of their respective owners.

© Motorola, Inc. 2004.

**Caution:** Changes or modifications made in the radio phone, not expressly approved by Motorola, will void the user's authority to operate the equipment.


### **Software Copyright Notice**

The Motorola products described in this manual may include copyrighted Motorola and third-party software stored in semiconductor memories or other media. Laws in the United States and other countries preserve for Motorola and third-party software providers certain exclusive rights for copyrighted software, such as the exclusive rights to distribute or reproduce the copyrighted software. Accordingly, any copyrighted software contained in the Motorola products may not be modified, reverse-engineered, distributed, or reproduced in any manner to the extent allowed by law. Furthermore, the purchase of the Motorola products shall not be deemed to grant either directly or by implication, estoppel, or otherwise, any license under the copyrights, patents, or patent applications of Motorola or any third-party software provider, except for the normal, non-exclusive, royalty-free license to use that arises by operation of law in the sale of a product.

Manual number: \_\_\_\_\_

# Menu Map

---

This is the default menu on your Motorola phone. It can be accessed by pressing **Start**  from the Home screen of your phone.

## Main Menu Display

**Note:** This is the standard main menu layout. Menu organization and feature names may vary on your phone. Not all features may be available on your phone.

### Messaging

- Text Messages
- Outlook E-Mail \*
- Media Messages \*

### Contacts

### Calendar

### Internet Explorer \*

### ActiveSync

### Call History

### MSN Messenger \*

### Settings

- Phone \*
- Sounds
- Profiles
- Home Screen
- About
- Accessibility
- Beam
- Bluetooth

- Certificates
- Data Connections
- Date and Time
- Owner Information
- Power Management
- Regional Settings
- Remove Programs
- Security
- Phone Settings

### Camera

### Favorites Manager

### File Manager

### File Viewer

### Game Room

### Media Manager

### MMSSettings \*

### PhotoAlbum

### Pocket MSN \*

\* Optional network, SIM card, or subscription-dependent feature.

# The voice recognition application works only via the phone directly or a wired headset attached to the phone, but not with a Bluetooth® headset.

## Resource Manager

- Task Manager
- Space Manager

## Speed Dial

## Tasks

## Speech Recognition #

## Voice Recorder

## Windows Media

## Accessories

- Calculator
- Camcorder
- Modem Link
- Video Player

## Games


- Jawbreaker
- Solitaire

### Shortcuts



#### Go to dialed calls list:

Press  (in idle).


#### Use Speech Recognition or Voice Recorder:

Press and hold  up or down (in idle).


#### Take photos:

Press **Start**  > **More** > **Camera**, and then press .

#### Open Quick List:

Press and hold  (in idle).

#### Exit menu system:

Press .

# Contents

---

<b>Menu Map</b> .....	3
<b>Safety and General Information</b> .....	9
<b>Getting Started</b> .....	17
What's in the Box? .....	17
About This Guide .....	17
Installing the SIM Card .....	18
Installing the Battery .....	19
Charging the Battery .....	20
Battery Use .....	21
Turning Your Phone On/Off .....	22
Adjusting Volume .....	23
Making a Call .....	23
Answering a Call .....	25
<b>Learning to Use Your Phone</b> .....	26
Using the Internal Display .....	26
Using the External Display .....	28
Using the Home Key .....	29
Using the 4-Way Navigation Key .....	30
Using the Action Button .....	31
Using the Soft Keys .....	31
Using the Back Button .....	33
Using Menus .....	33
Entering Text and Numbers .....	34
Viewing Phone Information .....	38
<b>Setting Up Your Phone</b> .....	39
Setting the Time and Date .....	39
Entering Owner Information .....	39



Configuring Power Management. . . . .	40
<b>Calling Features</b> . . . . .	41
Redialing a Number . . . . .	41
Calling a Contacts Entry . . . . .	41
Making a Call with Voice Dialing . . . . .	44
Making a Call from the Call History List . . . . .	50
Calling a Number in a Message . . . . .	51
Calling an Emergency Number . . . . .	51
Managing Call History . . . . .	52
Calling with Speed Dial . . . . .	53
Using Voicemail . . . . .	55
Using Call Waiting . . . . .	55
Putting a Call on Hold . . . . .	56
Muting a Call . . . . .	57
Turning the Speaker On/Off . . . . .	57
<b>Messages and Chat</b> . . . . .	58
Composing an MMS Message . . . . .	58
Sending Your MMS Message . . . . .	62
Viewing Your MMS Message . . . . .	63
Configuring the MMS Setting . . . . .	64
Configuring an Email Account . . . . .	65
Receiving Email from the Internet . . . . .	67
Composing and Sending an Email/SMS Message . . . . .	70
Importing SMS Messages from Your SIM Card to Messaging . . . . .	75
Opening Email/SMS Messages . . . . .	75
Receiving Meeting Requests . . . . .	79
Viewing Your Message Folders . . . . .	80
Using Message Notifications . . . . .	81
Communicating with MSN® Messenger . . . . .	82
<b>Personalizing Your Phone</b> . . . . .	88
Using Phone Settings . . . . .	88

Using Sound Settings . . . . .	90
Using Profiles . . . . .	91
Changing the Home Screen . . . . .	94
Changing Regional Settings . . . . .	95
Setting Font Size, Time-Out, and Alert Volume . . . . .	95
Using Advanced Phone Settings . . . . .	95
<b>Getting More Out of Your Phone . . . . .</b>	<b>96</b>
Making a Conference Call . . . . .	96
Forwarding Calls . . . . .	97
Barring Calls . . . . .	98
Monitoring Phone Use . . . . .	98
Opening Applications with Speed Dial . . . . .	99
Using Voice Activation . . . . .	100
Making Data Calls . . . . .	104
Synchronizing Information among Devices . . . . .	110
Using a Bluetooth® Connection . . . . .	123
Using Your Phone as a Modem . . . . .	126
Changing the Order of Applications Displayed on the Start List . . . . .	132
Using File Viewer . . . . .	133
Managing Files . . . . .	138
Managing Phone System Resources . . . . .	140
Removing Programs . . . . .	142
<b>Personal Organizer . . . . .</b>	<b>143</b>
Using Contacts . . . . .	143
Using Calendar . . . . .	148
Using Schedule . . . . .	149
Using Tasks . . . . .	152
Using Voice Recorder . . . . .	153
Using Calculator . . . . .	154

<b>Security</b> .....	156
Locking and Unlocking the Keypad .....	156
Locking and Unlocking Your Phone .....	157
Locking and Unlocking Your SIM Card .....	159
<b>News and Entertainment</b> .....	160
Taking Pictures .....	160
Managing Pictures .....	166
Creating Video Clips .....	172
Playing Video Clips .....	174
Using Internet Explorer® .....	177
Using Media Player .....	180
Managing Digital Rights Management (DRM) Content .....	183
Playing Games .....	185
Managing Java .....	188
<b>Troubleshooting</b> .....	191
<b>Specific Absorption Rate Data</b> .....	196
<b>Microsoft End User License Agreement</b> .....	198
<b>Index</b> .....	205

# ***Safety and General Information***

---

IMPORTANT INFORMATION ON SAFE AND EFFICIENT OPERATION.  
READ THIS INFORMATION BEFORE USING YOUR PHONE.

The information provided in this document supersedes the general safety information in user guides published prior to December 1, 2002.

## ***Exposure To Radio Frequency (RF) Energy***

Your phone contains a transmitter and a receiver. When it is ON, it receives and transmits RF energy. When you communicate with your phone, the system handling your call controls the power level at which your phone transmits.

Your Motorola phone is designed to comply with local regulatory requirements in your country concerning exposure of human beings to RF energy.

## ***Operational Precautions***

To assure optimal phone performance and make sure human exposure to RF energy is within the guidelines set forth in the relevant standards, always adhere to the following procedures.

### ***External Antenna Care***

Use only the supplied or Motorola-approved replacement antenna. Unauthorized antennas, modifications, or attachments could damage the phone.

Do NOT hold the external antenna when the phone is IN USE. Holding the external antenna affects call quality and may cause the phone to operate at a higher power level than needed. In addition, use of unauthorized antennas may result in non-compliance with the local regulatory requirements in your country.

## ***Phone Operation***

When placing or receiving a phone call, hold your phone as you would a wireline telephone.

## ***Body-Worn Operation***

To maintain compliance with RF energy exposure guidelines, if you wear a phone on your body when transmitting, always place the phone in a Motorola-supplied or approved clip, holder, holster, case, or body harness for this phone, if available. Use of accessories not approved by Motorola may exceed RF energy exposure guidelines. If you do not use one of the body-worn accessories approved or supplied by Motorola, and are not using the phone held in the normal use position, ensure the phone and its antenna are at least 1 inch (2.5 centimeters) from your body when transmitting.

## ***Data Operation***

When using any data feature of the phone, with or without an accessory cable, position the phone and its antenna at least 1 inch (2.5 centimeters) from your body.

## ***Approved Accessories***

Use of accessories not approved by Motorola, including but not limited to batteries and antenna, may cause your phone to exceed RF energy exposure guidelines. For a list of approved Motorola accessories, visit our website at [www.Motorola.com](http://www.Motorola.com).

## ***RF Energy Interference/Compatibility***

**Note:** Nearly every electronic device is susceptible to RF energy interference from external sources if inadequately shielded, designed, or otherwise configured for RF energy compatibility. In some circumstances your phone may cause interference.

## ***Facilities***

Turn off your phone in any facility where posted notices instruct you to do so. These facilities may include hospitals or health care facilities that may be using equipment that is sensitive to external RF energy.

## ***Aircraft***

When instructed to do so, turn off your phone when on board an aircraft. Any use of a phone must be in accordance with applicable regulations per airline crew instructions.

## ***Medical Devices***

### **Pacemakers**

Pacemaker manufacturers recommend that a minimum separation of 6 inches (15 centimeters) be maintained between a handheld wireless phone and a pacemaker.

Persons with pacemakers should:

- ALWAYS keep the phone more than 6 inches (15 centimeters) from your pacemaker when the phone is turned ON.
- NOT carry the phone in the breast pocket.
- Use the ear opposite the pacemaker to minimize the potential for interference.
- Turn OFF the phone immediately if you have any reason to suspect that interference is taking place.

### **Hearing Aids**

Some digital wireless phones may interfere with some hearing aids. In the event of such interference, you may want to consult your hearing aid manufacturer to discuss alternatives.

### **Other Medical Devices**

If you use any other personal medical device, consult the manufacturer of your device to determine if it is adequately shielded from RF energy. Your physician may be able to assist you in obtaining this information.

## ***Use While Driving***

Check the laws and regulations on the use of phones in the area where you drive. Always obey them.

When using your phone while driving, please:

- Give full attention to driving and to the road.
- Use hands-free operation, if available.
- Pull off the road and park before making or answering a call if driving conditions so require.

Responsible driving best practices may be found in the “Wireless Phone Safety Tips” at the end of this manual and at the Motorola website:

[www.Motorola.com/callsmart](http://www.Motorola.com/callsmart).

## ***Operational Warnings***

### ***For Vehicles With an Air Bag***

Do not place a phone in the area over an air bag or in the air bag deployment area. Air bags inflate with great force. If a phone is placed in the air bag deployment area and the air bag inflates, the phone may be propelled with great force and cause serious injury to occupants of the vehicle.

### ***Potentially Explosive Atmospheres***

Turn off your phone prior to entering any area with a potentially explosive atmosphere, unless it is a phone type especially qualified for use in such areas and certified as “Intrinsically Safe.” Do not remove, install, or charge batteries in such areas. Sparks in a potentially explosive atmosphere can cause an explosion or fire resulting in bodily injury or even death.

**Note:** The areas with potentially explosive atmospheres referred to above include fueling areas such as below decks on boats, fuel or chemical transfer or storage facilities, areas where the air contains chemicals or

particles, such as grain, dust, or metal powders. Areas with potentially explosive atmospheres are often but not always posted.





 
## ***Blasting Caps and Areas***

To avoid possible interference with blasting operations, turn OFF your phone when you are near electrical blasting caps, in a blasting area, or in areas posted “Turn off electronic devices.” Obey all signs and instructions.

## ***Batteries***

Batteries can cause property damage and/or bodily injury such as burns if a conductive material such as jewelry, keys, or beaded chains touch exposed terminals. The conductive material may complete an electrical circuit (short circuit) and become quite hot. Exercise care in handling any charged battery, particularly when placing it inside a pocket, purse, or other container with metal objects. **Use only Motorola original batteries and chargers.**

Your battery or phone may contain symbols, defined as follows:

<b>Symbol</b>	<b>Definition</b>
	Important safety information will follow.
	Your battery or phone should not be disposed of in a fire.
	Your battery or phone may require recycling in accordance with local laws. Contact your local regulatory authorities for more information.
	Your battery or phone should not be thrown in the trash.
	Your phone contains an internal lithium ion battery.



## ***Seizures/Blackouts***

Some people may be susceptible to epileptic seizures or blackouts when exposed to blinking lights, such as when watching television or playing video games. These seizures or blackouts may occur even if a person never had a previous seizure or blackout.

If you have experienced seizures or blackouts, or if you have a family history of such occurrences, please consult with your doctor before playing video games on your phone or enabling a blinking-lights feature on your phone. (The blinking-light feature is not available on all products.)

Parents should monitor their children's use of video game or other features that incorporate blinking lights on the phones. All persons should discontinue use and consult a doctor if any of the following symptoms occur: convulsion, eye or muscle twitching, loss of awareness, involuntary movements, or disorientation.

To limit the likelihood of such symptoms, please take the following safety precautions:

- Do not play or use a blinking-lights feature if you are tired or need sleep.
- Take a minimum of a 15-minute break hourly.
- Play in a room in which all lights are on.
- Play at the farthest distance possible from the screen.

## ***Repetitive Motion Injuries***

When you play games on your phone, you may experience occasional discomfort in your hands, arms, shoulders, neck, or other parts of your body. Follow these instructions to avoid problems such as tendonitis, carpal tunnel syndrome, or other musculoskeletal disorders:

- Take a minimum 15-minute break every hour of game playing.
- If your hands, wrists, or arms become tired or sore while playing, stop and rest for several hours before playing again.

- If you continue to have sore hands, wrists, or arms during or after play, stop playing and see a doctor.

DRAFT

## European Union Directives Conformance Statement



Hereby, Motorola declares that this product is in compliance with

- The essential requirements and other relevant provisions of Directive 1999/5/EC
- All other relevant EU Directives

IMEI: 350034/40/394721/9	
<b>CE0168</b>	
Type: MC2-41H14	Product Approval Number

The above gives an example of a typical Product Approval Number.

You can view your product's Declaration of Conformity (DoC) to Directive 1999/5/EC (the R&TTE Directive) at [www.motorola.com/rtte](http://www.motorola.com/rtte) - to find your DoC, enter the product Approval Number from your product's label in the "Search" bar on the Web site.

# Getting Started

---



## What's in the Box?

Your wireless mobile phone comes with a battery, travel charger, USB data cable, mono headset, companion CD, user manual, product and service user data, and cables\*. You can purchase other accessories to customize your phone for maximum performance and portability.

To purchase Motorola Original™ accessories, contact the Motorola Customer Call Center at 1-800-331-6456 in the United States or 1-800-461-4575 in Canada.

**Note:** Additional accessories may be available depending on product promotions.

\* In-box content may vary by Regions.

## About This Guide

This user guide describes how to use your Motorola phone to its maximum potential.

**Note:** In this user's guide, "Find the Feature" always indicates the feature's position from the Home screen.

## Optional Features



This label identifies an optional network, SIM card, or subscription-dependent feature that may not be offered by all service providers in all geographical areas.

## Optional Accessories



This label identifies a feature that requires an optional Motorola Original™ accessory.

## Installing the SIM Card

 
Your Subscriber Identity Module (SIM) card contains your phone number, service details, and phonebook/message information. It is stored in a recess in the battery compartment.

**Caution:** Do not bend or scratch your SIM card. Avoid exposing your SIM card to static electricity, water, or dirt.

### Action


- 1 If the phone's battery door is already in place, push down the battery door release latch and lift the battery door off the phone.

**Note:** Turn off your phone every time when you remove/insert the SIM card.

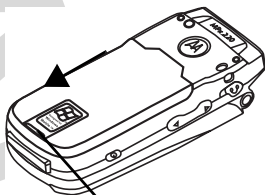


Latch

 - 2 Lift the battery up from the bottom end and remove it from the phone.

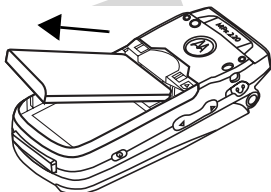

## Action

 - 3 Hold the SIM card with the gold contact side facing down and the cut corner on the bottom right. Slide the SIM card all the way into the SIM card holder.

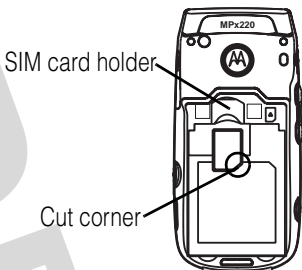

## Installing the Battery

 
You must install and charge the battery to use your phone.



<sup>TM</sup> Your phone is designed to use only Motorola Original<sup>TM</sup> batteries and accessories


## Action

- 1 Insert the battery into the back of the phone, with the contacts on the top end of the battery in alignment with the contacts on the phone. Push the bottom end of the battery into the phone until it clicks into the compartment.

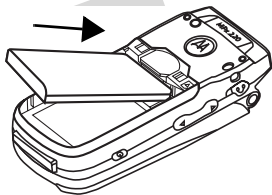

**Action**

 - 2 Place the battery cover back on the phone, aligning the tabs on the cover with the groove on the phone. Slide the battery cover in the direction shown until it locks into place.

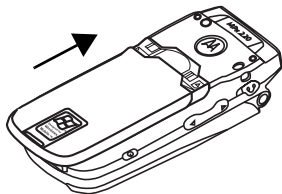


## Charging the Battery

New batteries are partially charged. Before using your phone, charge the battery as described below. Some batteries perform best after several full charge/discharge cycles.

**Action**

- 1 Plug battery charger connector into the sync/charger port.

 **Note:** The connector is keyed and can only be inserted 1 way.

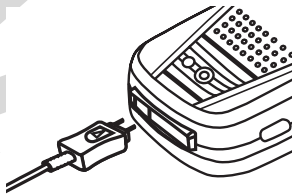

- 2 Plug the other end of the charger into the electrical outlet.

**Notes:**

- When you charge the battery, the battery power level indicator in the external display shows how much of



the charging process is complete. At least 1 segment of the battery power level indicator must be visible to ensure full phone functionality while charging. You can use the phone during the charging process. However, the battery will take longer to fully charge.

- Your phone will indicate a full charge before 24 hours have passed, however, allow your phone to charge for the full 24 hours before 1st use.
- When battery power is low, a low battery message displays. Charge the battery immediately.
- If battery power is completely drained, the phone turns off automatically.
- **The charging indicator may take several minutes before appearing in the external display.**

## **Battery Use**

To maximize your battery's performance:

- Always use Motorola Original™ batteries and battery chargers. The phone warranty does not cover damage caused from using non-Motorola batteries and/or battery chargers.
- Battery life would be shorter than normal if users play games or use phones in low signal strength areas.
- Maintain the battery at or near room temperature when charging.





- Do not expose batteries to temperatures below  $-10^{\circ}\text{C}$  ( $14^{\circ}\text{F}$ ) or above  $45^{\circ}\text{C}$  ( $113^{\circ}\text{F}$ ). Always take your phone with you when you leave your vehicle.
- When you do not intend to use a battery for a while, store it uncharged in a cool, dark, dry place, such as a refrigerator.
- Over time, batteries gradually wear down and require longer charging times. This is normal. If you charge your battery regularly and notice a decrease in talk time or an increase in charging time, then it is probably time to buy a new battery.




The rechargeable batteries that power this phone must be disposed of properly and may need to be recycled. Contact your local recycling center for proper disposal methods. Never dispose of batteries in a fire because they may explode. Refer to your battery's label for battery type.

## ***Turning Your Phone On/Off***

<b>Press</b>	<b>To</b>
<b>Power</b> (⏻)	turn on or off your phone





# Adjusting Volume


Press	To
1  up/down	increase/decrease earpiece volume in idle or during a call <b>Note:</b> You can adjust the volume only when the phone flip is opened.
2 <b>Action</b> (○)	save the setting

**Tip:** When a call is ringing/incoming, press  to mute the ring.


## Making a Call

There are several ways to make a call. The easiest way is to dial a phone number from the Home screen.

Press	To
1 keypad keys	enter the phone number <b>Tip:</b> Press <b>Back</b>  to delete the last digit; press and hold <b>Back</b>  to delete all digits.
2 <b>Send</b> 	make the call
3 <b>End</b> 	end the call










**Tip:** To enter an extension, press and hold  to insert a “P” (pause character); then enter the extension following it.



**Tip:** To make an international call, press and hold  to insert a “+”; then enter the country code, area code (omitting the starting 0), and phone number following it. Some international calls require a 3-second pause in the dialing sequence for the call to process successfully. Follow the steps:

 


**Find the Feature** Start  > **Contacts**




Press	To
1 	scroll to a desired entry
2 <b>Action</b> 	select the entry
3 	scroll to a desired phone number
4 <b>Edit</b> 	edit the phone number
5  left/right	move the cursor between the numbers where you want to insert a 3-second pause
6 <b>Menu</b> 	open the options menu
7 	scroll to <b>Insert Pause</b>
8 <b>Action</b> 	insert a 3-second pause
9 <b>Done</b> 	save the setting

The letter “p” appears where the 3-second pause will occur in the dialing sequence. You can also add a “p” via text entry.

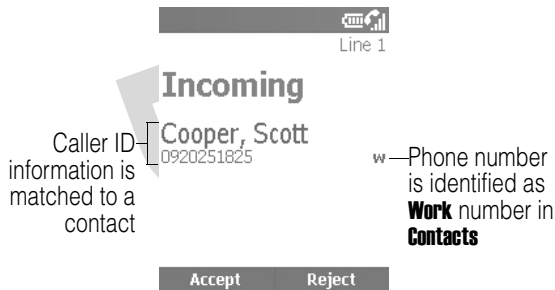
# Answering a Call



When you receive a call, your phone rings and/or vibrates and displays an incoming call message.

Press	To
1 <b>Send</b> 	answer the call
or	
<b>Accept</b> 	
2 <b>End</b> 	end the call


**Tip:** When **Flip Answer** is active, open the flip to answer the call. (To activate, see “Using Advanced Phone Settings” on page 95.)

**Tip:** When **Any key answer** is active, press any of the keys except **End**  to answer the call. (To activate, see “Using Phone Settings” on page 88.)

# Learning to Use Your Phone
 
## Using the Internal Display

The Home screen (shown) is the standard display when you are not on a call or using the menu.

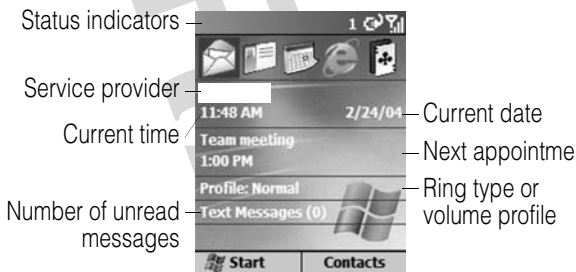











 

 








On the Home screen, you will find:

- The top of the display shows status indicators about your phone's current mode.
- The center of the display shows the Home screen, as well as icons, appointments, other types of information, and messages.
- The bottom of the display shows the soft key commands.

**Note:** The display shown may be different based on the specific Home screen configuration chosen.

 Status indicators display at the top of your phone's internal screen. The following table lists common status indicators and their meanings.

Icon	Meaning	Icon	Meaning
	New email or SMS		GPRS available
	New voicemail		GPRS in use
	New instant message		Roaming
	Voice call active		Sync error
	Data call active		Radio off
	Call forwarding		Ringer off
	Call on hold		Speaker
	Missed call	abc	Multi-Tap text input mode, lowercase
	Battery level	Abc	Multi-Tap text input mode, uppercase
	Low battery	ABC	Multi-Tap text input mode, caps lock
	Battery charging	abc	ITAP text input mode, lowercase
	No battery	Abc	ITAP text input mode, uppercase
	Signal strength	ABC	ITAP text input mode, caps lock
	No signal	123	Numeric input mode



# Using the External Display



The following table lists the icons and their meanings that appear on the external display.

Icon	Meaning	Icon	Meaning
	Signal strength		Battery level
	Call in progress		Battery low
	Data call active		No battery
	No signal		Charging
	Radio off		Ringer off
	You have unread new message(s)		Speaker
	You have missed call(s)		GPRS in use
	Call forwarding		Roaming
	New instant message		

When enabled, the external display shows the incoming photo Caller ID (see “Taking Pictures” on page 160).

Your phone’s display may differ based on the specific external LCD style chosen (see “Using Advanced Phone Settings” on page 95).

# Using the Home Key

Use the Home key to do the following:

- From the Home screen, press and hold **Home** (🏠) to access the **Quick List**, or quickly press and release **Power** (🔴). The **Quick List** displays a list of available profile types and commands, such as turn off your phone, turn on/off the **Flight mode** feature, lock your phone's keypad, and lock your phone.

**Note:** Be aware that when the **Flight mode** feature is turned on, then your phone cannot receive and make a call, including an emergency call. In order to receive and make a call, you must turn off the **Flight mode** feature and re-engage your phone's RF capability. Always obey the instructions of your airline crew.

- Display the Home screen to dial a number.
- The Home screen is your starting place for most tasks. You can easily navigate to any program or setting from this screen. The top of the Home screen displays the last 10 icons you browsed. Just select a program and press **Action** (○) to open the program. You can also press **Start** (📄) to enter the programs on the Start list. The Home screen also displays the current time and date, your next appointment, your current profile, and the number of unread messages in **Messaging**. Select your next appointment and press **Action** (○) to open **Calendar**, and you can see all of your appointments for the day. To view **Messaging**, select the messaging status showing the number of unread





messages you have, and press **Action** (○). To view **Contacts**, press **Contacts** (☰) .

- The Home screen automatically displays when you turn on the phone or leave the phone idle, but you can navigate to it at any time by pressing **Home** (🏠) .
- To change Home screen settings, see “Changing the Home Screen” on page 94.

## Using the 4-Way Navigation Key

Use the 4-Way Navigation key to navigate the menu system, change feature settings and play games.

**Tip:** Down and up are your primary movements within menus and navigation through contacts. Move left and right to change feature settings and edit text.

From the Home screen, press (⦿) to do the following:

- Select a program at the top of the screen, and then press **Action** (○) to open the program.
- Select an item in the center of the Home screen, such as your next appointment, your profile type, or your messaging information, and then press **Action** (○) to open the program or access the settings associated with the item selected.


## Using the Action Button

The Action button confirms your selection. Pressing **Action** (○) is similar to pressing “Enter” on a keyboard. In some cases, confirming your selection accesses a program or setting. You can also press **Action** (○) to check or uncheck a feature.

## Using the Soft Keys

The 2 Soft keys on your phone are located directly below the display screen. Each soft key performs the command displayed immediately above it on the screen. Both soft keys are context sensitive — their function changes according to the phone's status, for example, when in a particular application or making a phone call.

On the Home screen:

Press	To
1 <b>Left soft key</b>  ( <b>Start</b> )	access programs in the Start list

**Tip:** The phone comes pre-installed with programs that you can start using immediately. To install additional programs on your phone, refer to the Motorola MPx220 companion CD that came with the phone.





**Press****To**

2 **Right soft key** 

access the following during normal use:

- **Contacts:** displays to open your contacts list.
  - **Voicemail:** displays to play a received voicemail.
  - **Messages:** displays to read new messages in **Messaging**.
- 



You can also use numbers to navigate quickly to programs and settings on the phone. Press the number on the keypad that corresponds to the number of the program or setting you want. For example, in the Start list, press  to open **Calendar**.

You can also use numbers to select menu options by pressing the number that corresponds to the menu option in descending order. For example, to select **Filter** in the list of **Contacts** menu options, press  .




## Using the Back Button

Press the Back button to navigate to the previous screen, or move the cursor back to delete 1 or more characters in a text field.

 
Press	To
1 <b>Back</b> 	backspace and remove 1 character in a text field
2 <b>Back</b>  for a while	backspace and remove multiple characters in a text field


## Using Menus

On many screens, the Menu soft key is the Right soft key. Press **Menu**  to display a list of options that are relevant to the screen you are viewing. Selecting a menu option will either perform the command or take you to another part of



the user interface where you can perform the command.

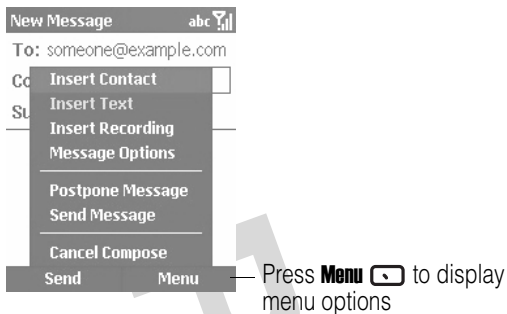


Tip: Press  up to move to the bottom of the menu.

## ***Entering Text and Numbers***

You can enter text and numbers on the phone using the keypad. The phone supports 3 input modes for entering text and numbers: **Multi-Tap**, **ITAP**, and **Numeric**. The **Multi-Tap** and **ITAP** modes are used for entering text, and the **Numeric** mode is used for entering numbers. When you select a field that requires text or numeric entry, the phone automatically defaults to the appropriate input mode. The status indicator on the top of the display shows the input mode you are currently using.

## Changing Input Modes

### Action

Press and hold  until the status indicator for the input mode you want is shown at the top of the display.

---

---

The following table shows the complete list of input mode status indicators.









Indicator	Mode
<u>abc</u>	<b>Multi-Tap</b> text input mode, lower case
<u>Abc</u>	<b>Multi-Tap</b> text input mode, temporarily upper case
<u>ABC</u>	<b>Multi-Tap</b> text input mode, caps lock
<u>abc</u>	<b>ITAP</b> text input mode, lower case
<u>Abc</u>	<b>ITAP</b> text input mode, temporarily upper case
<u>ABC</u>	<b>ITAP</b> text input mode, caps lock
123	<b>Numeric</b> input mode

### Entering Text in Multi-Tap Mode

You can enter a letter in **Multi-Tap** mode by pressing the number key on which the letter appears. To enter the 1st letter on the number key, press the key once. To enter the 2nd letter, press the key twice, and so on. The letter entered remains underlined until you complete the





keypresses and the cursor moves to the next position. For example:

Press	To
1    	enter the letter <b>s</b>
2    	enter the word <b>hat</b>


When you enter letters that are on the same number key, wait until the underline disappears before entering the next letter so that your phone can process the 1st letter. This pause is called the **Multi-Tap** time out, and you can adjust the length of the pause between keypresses.

To change the **Multi-Tap** time out:

**Find the Feature** Start  > **Settings** > **Accessibility**

Press	To
1  left/right	select the time interval you want for the pause between keypresses under <b>Multipress time out</b>
2 <b>Done</b> 	save the setting




## Entering Punctuation in Multi-Tap Mode

Press	To
 repetitively	scroll through common punctuation: .,?!- @:1

## Entering Numbers in Numeric Mode

When you are in **Numeric** mode, press the number(s) you want to enter on the keypad. If a field permits a numerical entry only, such as the **Work** phone field in **Contacts**, the input mode will automatically default to **Numeric** mode. To enter an asterisk (\*) or a hash sign (#), press the corresponding key on the keypad.

## Inserting Symbol

Press	To
1  for a while	open the <b>Pick a symbol</b> list
2 	scroll to a symbol
3 <b>Done</b> 	select and enter the symbol

Tip: You can also press  to select and enter a symbol.


## Using Special Key Functions

The following is a list of the keys and their corresponding functions in input mode.






To enter a space in **Multi-Tap** mode:

Press	To
	enter a space

To start a new line:

Press	To
<b>Action</b> (○)	start a new line

To change among uppercase, lowercase, and caps lock:

Press	To
	change among uppercase, lowercase, and caps lock

**Tip:** In text mode, the 1st letter of a sentence is automatically capitalized.

## **Viewing Phone Information**

Use **About** settings to display information about your phone's operating system, including version numbers, copyright information and available storage.


**Find the Feature**      Start  > **Settings** > **About**

# Setting Up Your Phone

## Setting the Time and Date

Use **Date and Time** settings to change the local time zone and the current date and time, and to set the alarm.


**Find the Feature** Start  > **Settings** > **More**

Press	To
1 	scroll to <b>Date and Time</b>
2 <b>Action</b> (○)	set <b>Date and Time</b> settings

## Entering Owner Information

Use **Owner Information** settings to enter and display personal information, such as your name, phone number, and email address. In the event that you lose your phone and it is found, you can be contacted.

**Find the Feature** Start  > **Settings** > **More**


Press	To
1 	scroll to <b>Owner Information</b>
2 <b>Action</b> (○)	set <b>Owner Information</b> settings



# Configuring Power Management

Use **Power Management** settings to change the backlight and display time-outs, and to check the battery level.

**Find the Feature** Start  > **Settings** > **More**


	Press	To
1		scroll to <b>Power Management</b>
2	<b>Action</b> (○)	set <b>Power Management</b> settings



# Calling Features

 
## Redialing a Number

To redial the last number called from the Home screen:





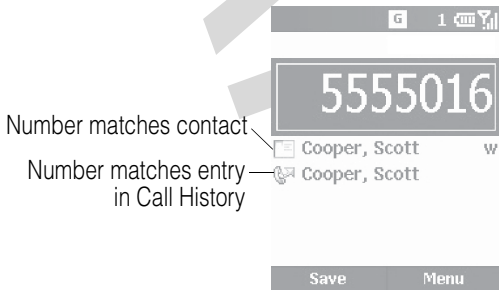


Press	To
Send  twice	place a call to the last dialed number

## Calling a Contacts Entry


As you enter a contact name, the phone searches **Contacts**, **Call History**, **Speed Dial** lists, and the SIM card to find a matching name and number.



## Making a Call from the Home Screen



	Press	To
1	keypad keys	enter the contact name (For example, to call Scott, press      .)
2		select the name from your contacts list
3	<b>Send</b> 	make the call

## Making a Call from Contacts

You can select a person's name from your contacts list and press **Send**  to place the call. If a contact has more than 1 phone number, such as **Work**, **Home**, and **Fax**, the **Work** phone number is set as the default.

### Find the Feature


Start  > **Contacts**



	Press	To
1		scroll to the contact name to call
2	<b>Send</b> 	make the call

**Tip:** If you have a long list of contacts, enter the 1st few letters of a contact's name. Your phone searches the entire contacts list to display the name.







## Changing the Default Number for a Contact

**Find the Feature** Start  > **Contacts**

	<b>Press</b>	<b>To</b>
1		scroll to a desired contact
2	 left/right	change the default number (For example, if you change <b>w</b> to <b>m</b> , the default number changes from <b>Work</b> phone to <b>Mobile</b> phone.)

## Making a Call to a Desired Phone Number

**Find the Feature** Start  > **Contacts**

	<b>Press</b>	<b>To</b>
1		scroll to the contact to call
2	<b>Action</b> 	open the contact
3		scroll to the number you want to call
4	<b>Send</b> 	place the call



# Making a Call with Voice Dialing


You can dial a phone number by speaking a word.

**Note:** The voice recognition application works only via the phone directly or a wired headset attached to the phone, but not with a Bluetooth headset.

## Dialing a Phone Number by Saying the Name Exactly Saved in Contacts


On the Home screen:

### Action

- 1 Press and hold  up to open **Speech Recognition**.
- 2 Wait for the audio and visual cue and begin saying **Voice Dial**.
- 3 Wait for the audio and visual cue and begin saying the name exactly stored in your contacts list.
- 4 If there is only 1 number for this contact, the phone dials the number automatically. If there are multiple numbers, the phone displays the different locations and asks you which 1 to call. Say the name of the location you want to call, for example, **Work**. The phone repeats the location and then dials the number.







## Changing How Voice Dial Works with Names

If you want to review and confirm names before dialing the associated numbers, you must enable **Choice Lists**. After you say a name, your phone prompts you **Did you say** followed by the name that most nearly matches the name you spoke. You can confirm the name by saying **Yes** or pressing **Yes** , or by selecting the correct name from a list of up to 3 names displayed on the screen. **Choice Lists** is disabled by default. To enable it, follow the steps from the Home screen:

### Action

Press and hold  up to open **Speech Recognition**.

	Press	To
1	<b>Settings</b> 	open the settings menu
2		scroll to <b>Choice Lists</b>
3	<b>Action</b> (○)	select <b>Choice Lists</b>
4	<b>Action</b> (○)	select <b>Name dialing</b>
5		scroll to <b>Always On</b>
6	<b>OK</b> 	save the setting










## Adjusting the Name Sensitivity Setting

If the phone seldom recognizes your name commands, follow the steps from the Home screen:

### Action

Press and hold  up to open **Speech Recognition**.

Press	To
1 <b>Settings</b> 	open the settings menu
2 	scroll to <b>Sensitivity</b>
3 <b>Action</b> (○)	select <b>Sensitivity</b>
4 	scroll to <b>Names</b>
5 <b>Action</b> (○)	select <b>Names</b>
6  down	adjust the <b>Names</b> setting toward <b>Reject Less</b>
7 <b>OK</b> 	save the setting

## Changing How Speech Recognition Updates Contacts





When you start **Speech Recognition**, it checks to see if you have added or changed names in your contacts list. If the contacts list has changed, **Speech Recognition** automatically reloads the entire list of names. You can also turn off



automatic update and then update the list manually at your convenience. To turn off automatic update:

## Action

Press and hold  up to open **Speech Recognition**.

Press	To
1 <b>Settings</b> 	open the settings menu
2 	scroll to <b>Contacts Update</b>
3 <b>Action</b> (○)	select <b>Contacts Update</b>
4 <b>Action</b> (○)	select <b>Configure</b>
5 	scroll to <b>Manual</b>
6 <b>OK</b> 	save the setting

## Dialing a Phone Number by Speaking the Number Continuously


You can dial valid 7-digit or 10-digit phone numbers simply by speaking the number continuously, without pausing between the digits.

**Note:** The phone recognizes the digits “one,” “two,” “three,” “four,” “five,” “six,” “seven,” “eight,” “nine,” “zero,” and “oh.” The phone cannot recognize numbers such as “1 eight hundred” for “1 800.” Say “one eight zero zero” instead.



On the Home screen:

## Action

- 1 Press and hold  up to open **Speech Recognition**.
- 2 Wait for the audio and visual cue and begin saying **Voice Dial**.
- 3 Say a valid 7-digit or 10-digit number distinctively, without pausing between digits. Optionally, you can say the 1st digit of the number and the phone displays a list of up to 3 numbers and prompts you **Did you say** followed by the 1st number in the list.
- 4 If the number is correct, say **Yes** to initiate dialing. If the number is not correct, say **No** to hear the next match or select the correct number from the list.

### **Changing How Voice Dial Works with Phone Numbers**






By default, **Choice Lists** for **Digit Dialing** is enabled, which allows you to review and confirm numbers before dialing them. If you disable **Choice Lists**, the phone automatically dials the recognized number, without



requiring you to confirm it. To disable **Choice Lists** from the Home screen:

## Action

Press and hold  up to open **Speech Recognition**.

	Press	To
1	<b>Settings</b> 	open the settings menu
2		scroll to <b>Choice Lists</b>
3	<b>Action</b> (○)	select <b>Choice Lists</b>
4		scroll to <b>Digit Dialing</b>
5	<b>Action</b> (○)	select <b>Digit Dialing</b>
6		scroll to <b>Always On</b>
7	<b>OK</b> 	save the setting

## Customizing Digit Dialing to Your Voice




You can adapt **Digit Dialing** to your personal accent, if necessary. Adaptation involves recording 12 sequences of 4 digits each to teach the system your voice.



On the Home screen:

## Action

Press and hold  up to open **Speech Recognition**.


Press	To
1 <b>Settings</b> 	open the settings menu
2 <b>Action</b> (○)	select <b>Digit Dialing</b>
3 	scroll to <b>Adapt Digits</b>
4 <b>Action</b> (○)	select <b>Adapt Digits</b>
5 <b>OK</b> 	to start recording

**Tip:** Wait for the beep and then repeat the digits of the 1st sequence displayed on the screen. Then follow the instructions on the screen to complete the adaptation.



## Making a Call from the Call History List

The **Call History** list displays the last 25 calls you made, received, or missed. Choose a name or number to call from the list.

**Find the Feature**

**Start**  > **Call History**




Press	To
1 	scroll to the number or entry to call
2 <b>Send</b> 	place the call

## Calling a Number in a Message

When you see an underlined phone number as a hyperlink in a message, you can place a call to the phone number.

After opening a message:

Press	To
1 	scroll to the phone number as a hyperlink
2 <b>Action</b> (○)	place the call


## Calling an Emergency Number

Calls to emergency service numbers can be made under any circumstances, even if you have locked the SIM card and/or the phone.

**Note:** Be aware that when the **Flight mode** feature is turned on, the phone cannot receive and make a call, including an emergency call. In order to receive and make a call, you must turn off the **Flight mode** feature and re-engage the phone's RF capability. Always obey the instructions of your airline crew.



On the Home screen:

Press	To
1 keypad keys	dial your local emergency number
2 <b>Send</b> 	place the call




## Managing Call History

**Call History** displays the last 25 calls you have made, received, and missed. Each entry in **Call History** contains the start time of the call, the duration, the caller's name, if available, and the caller's number. The oldest calls are automatically deleted from the list to make room for new calls.

**Find the Feature**    **Start**  > **Call History**

**Tip:** You can filter **Missed Calls**, **Incoming Calls**, and **Outgoing Calls** by pressing **Menu**  , selecting **Filter**, and selecting the filter you want.




### *Sending an Email from Call History*

Press	To
1 	scroll to a desired entry
2 <b>Menu</b> 	open the options menu
3 	scroll to <b>E-mail</b>



Press	To
4 <b>Action</b> (○)	edit and send an email to the entry's recipient

## ***Creating a New Contact from a Number in Call History***

Press	To
1 	scroll to a desired entry
2 <b>Menu</b> 	open the options menu
3 	scroll to <b>Save to Contacts</b>
4 <b>Action</b> (○)	select <b>Save to Contacts</b>  <b>Note:</b> Make sure <b>&lt;New Item&gt;</b> is highlighted.
5 <b>Action</b> (○)	enter the contact information

## ***Calling with Speed Dial***

You can quickly dial phone numbers by assigning speed dial numbers. Press and hold 1 or 2 keys from the Home screen to make a speed dial call. Choose speed dial entries from 2-99. The speed dial entry 1 is often reserved to set up or dial your voicemail after initial setup.







**Note:** The **Speed Dial** setting is available only for a phone number stored in the phone memory.





To create a speed dial shortcut 1st:

**Find the Feature**      Start  > **Contacts**

	<b>Press</b>	<b>To</b>
1		scroll to a desired contact
2	<b>Action</b> 	open the contact
3		scroll to a desired phone number
4	<b>Menu</b> 	open the options menu
5	<b>Action</b> 	select <b>Add Speed Dial</b>
6	keypad keys	enter the speed dial number under <b>Keypad assignment</b>
7	<b>Done</b> 	save the setting

**Tip:** You can also assign speed dial numbers to Web addresses and email addresses that are stored in **Contacts** of your phone.

To make a speed dial call from the Home screen:

### **Action**

Press and hold the keypad number that you have assigned as a speed dial number. If the keypad assignment has 2 digits, press the 1st digit, then press and hold the 2nd digit.



# Using Voicemail

On the Home screen:

## Action

Press and hold  to automatically call voicemail after initial setup.

---

---

# Using Call Waiting



To answer the incoming call when you are talking on the phone:

## Press

**Accept** 

or

**Send** 

---

---

## To

place the 1st call on hold, and answer the 2nd call

To end the 1st call before answering the incoming call:

## Press

1 **End** 

2 **Accept** 

or

**Send** 

---



---

## To


end the 1st call

answer the 2nd call



**Tip:** If the 2nd call is answered but the caller hangs up, press **Menu**  and select **Unhold** to rejoin the original call. Press **Send**  to change between an active call and a call that is on hold.




To reject the incoming call when you are talking on the phone:

Press	To
<b>Reject</b> 	reject the 2nd call

This will keep your current call in progress, but will reject the **Call Waiting** call.

## Putting a Call on Hold



While a call is in progress, you can hold the call and then reconnect it.

	Press	To
1	<b>Menu</b> 	open the options menu
2		scroll to <b>Hold</b>
3	<b>Action</b> 	place the active call on hold
		<b>Tip:</b> Select <b>Unhold</b> to activate the call on hold.



## Muting a Call



You can mute the microphone for the active call. The other party will not hear anything you say, but you can still hear the other party.


Press	To
1 <b>Menu</b> 	open the options menu
2 	scroll to <b>Mute</b>
3 <b>Action</b> (○)	mute the active call

**Tip:** Select **Unmute** to turn the microphone back on for the active call.

## Turning the Speaker On/Off

You can turn the speaker on or off during a call.

Press	To
1 <b>Menu</b> 	open the options menu
2 	scroll to <b>Speakerphone/ Speakerphone Off</b>
3 <b>Action</b> (○)	turn the speaker on/off

**Tip:** During an incoming or outgoing call, you can toggle between the earpiece and speakerphone by holding down **Send**  .



# Messages and Chat

## Composing an MMS Message







MMS messages are created by combining various slides. Each slide can consist of a photo or video, audio (only when photos are used), and

text.

**Find the Feature**      Start  > **Messaging** > **Media Messages** > **New** 

### Adding a Photo/Video

You can add a still image or video clip to each slide in your MMS message.






	Press	To
1		highlight the <b>Picture/Video</b> area
2	<b>Action</b> 	open <b>My Pictures</b>
3		scroll to a desired photo or video clip
4	<b>Select</b> 	add the photo or video clip






## Adding Text

You can add new text or preset words/phrases to each slide in your MMS message.




### Using Preset Words or Phrases

Press	To
1 	highlight the <b>Text</b> area
2 <b>Action</b> (○)	open the text field
3 <b>Menu</b> 	open the options menu
4 <b>Action</b> (○)	select <b>Insert Canned Text</b>
5 	scroll to a desired phrase
6 <b>Select</b> 	select the phrase
7 <b>Done</b> 	add the phrase

### Editing Preset Words or Phrases

Press	To
1 	highlight the <b>Text</b> area
2 <b>Action</b> (○)	open the text field
3 <b>Menu</b> 	open the options menu
4 <b>Action</b> (○)	select <b>Insert Canned Text</b>
5 	scroll to a desired phrase






Press	To
6 <b>Menu</b> 	open the options menu
7 	scroll to <b>Edit</b>
8 <b>Action</b> (○)	select <b>Edit</b>
9 keypad keys	edit the phrase
10 <b>Save</b> 	save the phrase


## Adding Audio

You can add preset or recorded audio clips to each slide, except when videos are used.

### Using a Preset Audio Clip

Press	To
1 	highlight the <b>Audio</b> area
2 <b>Action</b> (○)	open <b>My Sounds</b>
3 	scroll to a desired audio clip
4 <b>Select</b> 	add the audio clip

### Using a Recorded Audio Clip



Press	To
1 	highlight the <b>Audio</b> area
2 <b>Action</b> (○)	open <b>My Sounds</b>



Press	To
3 <b>Menu</b> 	open the options menu
4 	scroll to <b>Capture Audio</b>
5 <b>Action</b> (○)	select <b>Capture Audio</b>
6 <b>Record</b> 	record your audio clip <b>Tip:</b> Press <b>Stop</b>  to stop recording, if necessary.
7 <b>Play</b> 	play your audio clip
8 <b>Stop</b> 	stop playing your audio clip or confirm your audio clip
9 <b>Done</b> 	add the audio clip

## Managing Slides

You can add, remove, or jump to additional slides in your MMS message.




Press	To
1 <b>Menu</b> 	open the options menu
2 	scroll to <b>Slides</b>
3 <b>Action</b> (○)	select <b>Slides</b>







## Previewing Your MMS Message

You can preview your message before sending it.


	Press	To
1	Menu 	open the options menu
2		scroll to <b>Preview Message</b>
3	Action (O) 	preview your MMS message



## Sending Your MMS Message



	Press	To
1	keypad keys  or  Menu  > Recipients > Add	enter in your recipient's phone number/email address in the <b>To</b> field  or  select a recipient from your contacts list.  <b>Tip:</b> You can add other phone numbers/email addresses/recipients separated by semicolons.
2	 down	highlight the <b>Subject</b> field
3	keypad keys	enter in a subject of your message



Press	To
4 <b>Send</b> 	send your MMS message

## Configuring the Sending Performance

You can customize how your MMS message is going to be sent using the menu options.



Press	To
1 <b>Menu</b> 	open the options menu
2 	scroll to <b>Send Options</b>
3 <b>Action</b> (○)	configure the sending performance

## Viewing Your MMS Message




You can view MMS messages in different message boxes.

**Find the Feature**     **Start**  > **Messaging** > **Media Messages** > **Menu**  > **Folders**

Press	To
1 	scroll to a desired message box
2 <b>Action</b> (○)	select the message box
3 	scroll to a desired message






Press	To
4 <b>Action</b> (○)	select the message
5 <b>Action</b> (○)	view the message

**Tip:** Press  to navigate to other slides if more than one are present.

## Viewing Objects in an MMS Message

You can view objects included in an MMS message.

Press	To
1 	scroll to a desired message box
2 <b>Action</b> (○)	select the message box
3 	scroll to a desired message
4 <b>Action</b> (○)	select the message
5 	scroll to a desired object
6 <b>Action</b> (○)	view the object

## Configuring the MMS Setting



You can save the messages you sent, download new messages automatically, sort messages by different ways, define the maximum size limit for messages that you send and receive, set the number of times you attempt to send your

messages before stopping, and select your type of Internet connection.

**Find the Feature** Start  > More > MMSSettings

**Tip:** You might view and edit your MMSC URL and WAP gateway using the menu options. You will likely never need to change these settings.



## Configuring an Email Account



Before sending and receiving email messages, you may have to complete the email account setup. You can send email messages by synchronizing, or by connecting directly to an email server through your Internet Service Provider (ISP) or a corporate network. Your service provider may have configured email settings for your phone before you received it; otherwise, you must configure your phone to send/receive emails.

**Find the Feature** Start  > Messaging >  
Outlook E-Mail > Menu  > Options  
> Account Setup > Menu  > New

Fill in the blanks with the appropriate information.



**Tip:** Press **Next**  to continue and press **Finish**  to complete the email setup.

Option	Description
Your name	enter in your name
E-mail address	enter in your email address





<b>Option</b>	<b>Description</b>
<b>Automatic setup</b>	If you check this feature, your phone will obtain email settings from the Internet. If you uncheck this feature, continue the following options.
<b>User name</b>	enter in your user name
<b>Password</b>	enter in your password
<b>Domain (if necessary)</b>	enter in your domain name, if necessary
<b>Save password</b>	Check this feature and you need not to enter your password repeatedly before you can send/receive emails.
<b>Server type</b>	select either <b>POP3</b> or <b>IMAP4</b>
<b>Account name</b>	enter in your account name
<b>Network</b>	select <b>The Internet</b>
<b>Incoming mail server</b>	enter in your incoming mail server
<b>Require SSL connection</b>	check this feature, if necessary
<b>Outgoing mail server</b>	enter in your outgoing mail server
<b>Outgoing server requires authentication</b>	check this feature, if necessary

Option	Description
<b>Download the following messages</b>	press  left/right to select features
<b>Connect automatically and check for messages</b>	press  left/right to select a feature

**Note:** You can only have one configurable **Outlook E-Mail** at one time and therefore only synchronize one type of email, either POP3 or desktop. If you choose to synchronize your desktop email, it will wipe out your POP3 settings.

## Receiving Email from the Internet




You can receive email messages through **Inbox** synchronization or by connecting to your email server. You can then view all of your email messages in **Messaging > Outlook E-Mail**. When you connect to the email server or synchronize **Inbox** with your desktop computer, only the first 5 KB of each new message are downloaded by default to your phone. If you are using an IMAP4 or POP3 server, only the first 1 KB of each new message is downloaded by default. Small attachments are downloaded and the original messages remain on the email server or your desktop computer.



**Tip:** For more information about synchronizing **Inbox**, see “Synchronizing Information among Devices” on page 110.

### Find the Feature


Start  > **Messaging** >

**Outlook E-Mail** > **Menu**  > **Send/Receive**




## Receiving Complete Email Messages

You can specify to receive email messages in full, instead of receiving only the first 5 KB set by default. The complete message will be retrieved the next time you synchronize or connect to your email server.

### Find the Feature

Start  > **Messaging** >

**Outlook E-Mail**

Press	To
1 	scroll to a desired email message
2 <b>Menu</b> 	open the options menu
3 	scroll to <b>Mark for Download</b>
4 <b>Action</b> (○)	receive the email message in full

**Tip:** When you delete an email message on your phone, it will also be deleted from the email server the next time you connect.





## Receiving Email Attachments

You can download email attachments to your phone. Attachments display as a list of hyperlinks at the bottom of the email message, and are preceded by an attachment icon. The text of the hyperlink contains the file name followed by the size of the attachment, so that you can determine whether to download the attachment. The attachment icon has 3 states: **Not downloaded**, **Downloaded**, and **Marked for Download**.

**Tip:** On POP3 messages, the attachment size is omitted.

**Find the Feature** Start  > **Messaging** > **Outlook E-Mail**



	Press	To
1		scroll to a message that contains an attachment(s)
2	<b>Action</b> (○)	select the message
3		scroll to a desired attachment
4	<b>Action</b> (○)	receive the attachment

## Viewing a Downloaded Attachment

**Find the Feature** Start  > **Messaging** > **Outlook E-Mail**





	Press	To
1		scroll to a message that contains a downloaded attachment(s)
2	<b>Action</b> (○)	select the message
3		scroll to a desired attachment you downloaded
4	<b>Action</b> (○)	view the attachment

**Note:** You can view attachments only for file types that are supported by your phone, such as .txt, .JPEG, .asf, .asx, .wax, .wm, .wma, .wmv, .wmx, .wvx, .mp3. A third party application must be downloaded to your phone to view attachment in other formats.

## ***Composing and Sending an Email/SMS Message***





There are several ways to edit and send email and SMS messages with your phone. The most common way is from **Messaging** or from **Contacts**.



### ***Composing and Sending an Email/SMS Message from Messaging***

**Find the Feature**

Start  > **Messaging** >  
**Text Messages/Outlook E-Mail** >  
**New** 



Press	To
1 keypad keys	enter in your recipient's (SMS) phone number/email address in the <b>To</b> field
<b>or</b>	<b>or</b>
Menu  > <b>Insert Contact</b>	select a recipient from your contacts list.
	<b>Tip:</b> To add multiple recipients either in <b>To</b> and/or <b>Cc</b> field ( <b>Outlook E-Mail</b> only), separate each with a semicolon by repeatedly pressing  in <b>Multi-Tap</b> mode. Enter in your subject in the <b>Subj</b> field for your email message.
2  down	highlight the body text field
3 keypad keys	enter in your message
4 <b>Send</b> 	send your message





**Tip:** To insert the @ sign in an email address in **Multi-Tap** mode, press  once. Then, when you need to insert the period in the email address, press  again.




## Composing and Sending an Email/SMS Message from Contacts

You can quickly edit and send a message to a contact if you have an email address or SMS number (phone number) included in **Contacts**.

**Find the Feature** Start  > **Contacts**




	<b>Press</b>	<b>To</b>
1		scroll to a desired contact
2	<b>Action</b> (○)	select the contact
3		scroll to a desired email address or (SMS) phone number
4	<b>Action</b> (○)	select the email address or (SMS) phone number  <b>Tip:</b> Skip steps 5-8 if you select a (SMS) phone number for your SMS message.
5		scroll to <b>Text Messages</b> or <b>Outlook E-Mail</b> for your email message
6	<b>Action</b> (○)	select <b>Text Messages</b> or <b>Outlook E-Mail</b>
7	keypad keys	enter in your subject in the <b>Subj</b> field
8	 down	highlight the body text field



Press	To
9 keypad keys	enter in your message
10 <b>Send</b> 	send your message



## ***Requesting a Delivery Receipt for Your Message Before You Send It***

In the body text field:


Press	To
1 <b>Menu</b> 	open the options menu
2 	scroll to <b>Message Options</b>
3 <b>Action</b> (○)	select <b>Message Options</b>
4 <b>Action</b> (○)	check <b>Request message delivery notification</b>
5 <b>Done</b> 	save the setting

## ***Inserting Predefined Text into Your Message***

Save time when composing messages by inserting predefined text into your messages. You can edit the predefined text to create words or phrases that you frequently use in messages. In the body or subject text field:


Press	To
1 <b>Menu</b> 	open the options menu
2 	scroll to <b>Insert Text</b>



Press	To
3 <b>Action</b> (○)	select <b>Insert Text</b>
4 	scroll to a desired preset text
5 <b>Insert</b> (☐)	insert the preset text


## Editing Predefined Text

**Find the Feature** Start (☐) > **Messaging** > **Text Messages/Outlook E-Mail/Media Messages** > **Menu** (☐) > **Options** > **Edit My Text**




Press	To
1 	scroll to a desired preset text to modify
2 keypad keys	edit the text
3 <b>Done</b> (☐)	save the text

## Inserting a Voice Recording into Your Email

Insert a voice recording into an email message when you want to verbally explain information that is contained in the email message. In the body text field:

Press	To
1 <b>Menu</b> (☐)	open the options menu
2 	scroll to <b>Insert Recording</b>



Press	To
3 <b>Record</b> 	start recording
	<b>Tip:</b> Press <b>Stop</b>  to stop recording.
4 <b>Done</b> 	insert the recording

**Note:** You can create only one voice recording at a time. A new voice recording replaces the prior recording.

## Importing SMS Messages from Your SIM Card to Messaging

### Find the Feature

 
**Start**  > **Messaging** > **Text Messages** > **Menu**  > **Options** > **Import SIM Messages**

**Note:** You cannot export messages from your phone to a SIM card. SMS messages are not removed from the SIM card after they are imported to **Messaging** of your phone.

## Opening Email/SMS Messages

Email and SMS messages that are sent to you are stored in **Messaging**. By default, the most recently received messages display at the top of the **Inbox** list. Use the menu options to quickly compose, delete, forward, and reply to messages. You can also customize **Messaging** settings to control the way you send, receive, and view messages.

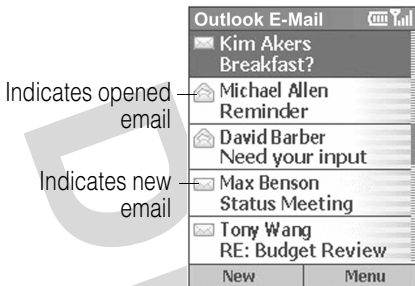

**Find the Feature**

Start > **Messaging** > **Text Messages/Outlook E-Mail**

Press	To
1	scroll to a desired message
2 <b>Action</b>	view the message

**Tip:** If you want to create a contact card for the sender, press **Menu** and select **Save to Contacts**.

**Using Messaging Menu Options****Find the Feature**

Start > **Messaging** > **Text Messages/Outlook E-Mail** > **Menu**

The following table lists **Messaging** menu options and their functions.

Option	Description
<b>Delete</b>	delete the selected message



<b>Option</b>	<b>Description</b>
<b>Reply</b>	reply to an open or selected message
<b>Reply All</b>	reply to the sender and all recipients included in an open or selected message
<b>Forward</b>	forward the selected message
<b>Folders</b>	display all <b>Messaging</b> folders
<b>Switch Accounts</b>	change among <b>Messaging</b> accounts
<b>Move</b>	move the selected message to a desired folder
<b>Mark as Read</b>	change the selected unread message to a read message
<b>Mark as Unread</b>	change the selected read message to an unread message
<b>Mark for Download</b>	retrieve the entire email message from the email server the next time you connect
<b>Options</b>	display a list of <b>Messaging</b> options that you can customize (see below)
<b>Send/Receive</b>	connect to your email server to send and receive messages





## Customizing Messaging Options

You can optimize your phone's **Messaging** by changing the way your messages display and send, specifying how to sort your messages, creating your text phrase and signature, and more.

### Find the Feature

Start  > **Messaging** > **Text Messages/Outlook E-Mail** > **Menu**  > **Options**

The following table lists the **Messaging** options and their functions.

Option	Description
<b>Display</b>	change the message information displayed on the screen
<b>Sending</b>	specify whether you want to include an original copy of the message in your reply, save a copy of your sent messages, or use Unicode for SMS messages
<b>Edit My Text</b>	edit the predefined text that you can insert in messages
<b>Signatures</b>	edit your own signature that you can insert in messages



Option	Description
<b>Account Setup</b>	configure your phone to send and receive email messages (Your service provider or network administrator can provide you with the necessary information to connect to your email server.)
<b>Import SIM Messages</b>	import SMS messages from your SIM card to <b>Messaging &gt; Text Messages</b> (The messages are not removed from the SIM card after they are imported.)



## Receiving Meeting Requests

When you accept a meeting request that arrives in **Messaging**, the meeting immediately appears in **Calendar** on your phone, and a message will be sent back to the meeting organizer the next time you synchronize **Calendar**.

**Tip:** For more information about synchronizing **Calendar**, see “Synchronizing Information among Devices” on page 110.

### Find the Feature

Start  > **Messaging** > **Text Messages/Outlook E-Mail**

Press	To
1 	scroll to a desired meeting request
2 <b>Action</b> (○)	select the meeting request
3 <b>Accept</b> 	accept the meeting request



# Viewing Your Message Folders

Your phone stores messages in the following folders:

Folder	Description
<b>Deleted Items</b>	Deleted messages are stored until you empty this folder.
<b>Drafts</b>	Messages that you save before sending are stored.
<b>Inbox</b>	All received messages arrive by default.
<b>Outbox</b>	Sent email messages are stored until you synchronize or connect to your email server. SMS messages are sent immediately over the network and will appear in your <b>Outbox</b> folder for only a few seconds.
<b>Sent Items</b>	Copies of email messages that you send are stored.



To view your message folder:

## Find the Feature

Start  > **Messaging** > **Text Messages/Outlook E-Mail** > **Menu**   
> **Folders**

## Press


## To

- |   |   |                            |
|---|---|----------------------------|
| 1 |                | scroll to a desired folder |
| 2 | <b>Action</b>  | view the folder            |




**Tip:** If your email account supports folders, you can view multiple folders that reflect the folder structure you have created on your email server. Messages you download from the server will automatically be placed in the appropriate folders on your phone.




## Using Message Notifications

Your phone makes a sound to alert you when new messages arrive. The number of unopened messages displays on the Home screen, depending on your Home screen settings, and an envelope icon  is shown on the top of the display. You are notified in different ways for the types of messages you receive.

**Note:** SMS messages that are sent to you instantly appear in **Messaging > Text Messages**, and are not synchronized. You cannot use them to send or receive attachments.




Message	Description
Email/SMS Message	When you connect to your email server or service provider, you are notified of new email or SMS messages by the closed envelope icon  shown at the top of the display, accompanied by an email or SMS sound alert. You can view new email or SMS messages in <b>Messaging &gt; Outlook E-Mail</b> or <b>Text Messages</b> .



Message	Description
<b>Voicemail Message</b>	You are notified of new voicemail messages by the new voicemail icon  shown at the top of the display. To listen to your new voicemail messages, press <b>Voicemail</b>  , or press and hold  from the Home screen to dial your voicemail service number.

## Modifying a Sound Alert for Notifications

**Find the Feature** Start  > **Settings** > **Sounds**

Press	To
1 	scroll to a desired option to modify
2  left/right	select a new sound
3 <b>Done</b> 	save the setting

## Communicating with MSN<sup>®</sup> Messenger



You can use **MSN Messenger** on your phone to send instant messages. **MSN Messenger** on your phone provides the same chat environment as

**MSN Messenger** on your desktop computer. With the features of this environment you can:

- Send and receive instant messages.
- View the status of others in your messenger contacts list, or change your own status (**Available**, **Busy**, **Out To Lunch**).
- Invite others to a chat conversation.
- Block contacts from seeing your status or sending you messages.

## ***Getting Started with MSN Messenger***

To use **MSN Messenger**, you need a Microsoft.NET<sup>®</sup> Passport account unless you already have a hotmail account. To set up a Microsoft.NET Passport account, go to: <http://www.passport.net>. Once you have this account, you will need:

- To connect to the Internet with a modem or wireless connection on your phone.
- To sign in to **MSN Messenger** using your Microsoft.NET Passport.

## ***Signing In and Out of MSN<sup>®</sup> Messenger***

**Find the Feature**

**Start**  > **MSN Messenger**





**Press**

**To**

1 **Sign In** 

prepare to sign in **MSN Messenger**






	Press	To
2	keypad keys	enter your sign-in name (for example, name_123@hotmail.com) and password
3	Sign In 	sign in <b>MSN Messenger</b>
4	Menu 	open the options menu
5		scroll to <b>Sign out</b>
6	Action (O) 	sign out of <b>MSN Messenger</b>

**Note:** If you do not sign out of **MSN Messenger**, you remain on a data connection, which may result in additional charges from your service provider.

## ***Sending an Instant Message***

After signing into **MSN Messenger**:

	Press	To
1		scroll to the person to whom you want to send an instant message
2	Send 	select the person
3	keypad keys	enter your message
4	Send 	send your message



The menu options when you edit an instant message are described in the following table.

<b>Option</b>	<b>Description</b>
<b>My Text</b>	add common text messages
<b>Invite</b>	invite a contact to an ongoing chat
<b>Chats</b>	see who is already chatting, or change between chats

In the messenger contacts list, there are several menu options for you to use.

<b>Option</b>	<b>Description</b>
<b>Add Contact</b>	create a contact
<b>Delete Contact</b>	delete the selected contact
<b>Block/Unblock</b>	block/unblock the selected contact from seeing your status and sending you messages







## Changing Your Status




Highlight your status and press **Action** (O)

In the messenger contacts list:

	Press	To
1		scroll to your name
2	<b>Action</b> (O)	select your name
3		scroll to a desired status description
4	<b>Action</b> (O)	select the status description

## Changing Your Displayed Name

After signing into **MSN Messenger**:

	Press	To
1	<b>Options</b> 	open the options menu
2	<b>Action</b> (O)	select <b>Passport Account</b>



Press	To
3 keypad keys	enter the name you want others to see when you send instant messages

---

---

**Note:** You must sign into **MSN Messenger** to change your display name. When using **MSN Messenger**, the session will not time out or end unless one of the following occurs:

- User ends instant messenger session.
- User “Accepts” an incoming voice call.
- An outgoing voice call is placed.
- The device is turned off or moves out of range.



# Personalizing Your Phone

---

You can view and change settings to personalize your phone for the way you work. For example, you can change the sounds or use your own sounds for ring tones, notifications and reminders. You can also set up **Call Forwarding** and **Call Waiting**, as well as download your own images to customize the Home screen background.

## Using Phone Settings



Use **Phone** settings to set options for **Call Forwarding**, **Call Waiting**, and **Caller ID**.



**Find the Feature**

**Start**  > **Settings** > **Phone**

The following table lists the **Phone** settings and their functions.

<b>Option</b>	<b>Description</b>
<b>Call Barring</b>	block incoming and/or outgoing calls
<b>Call Forwarding</b>	forward all or selected calls to another number
<b>Call Options</b>	change phone numbers, such as your voicemail and SMS service center, answer incoming calls by pressing any key, use advanced call options
<b>Call Waiting</b>	turn <b>Call Waiting</b> on or off
<b>Caller ID</b>	let your identification be known to all callers, only your contacts, or no callers
<b>Channels</b>	configure cell broadcast
<b>Fixed Dialing</b>	limit your calling area to one or more specific phone numbers and/or area codes
<b>Networks</b>	identify your current network and change your network selection from <b>Automatic</b> to <b>Manual</b>



# Using Sound Settings

**Sounds** settings are used to customize the sounds for ring tones, notifications, and reminders.




**Find the Feature**     **Start**  > **Settings** > **Sounds**

## Using Your Own Sound

### Action

- 1 Locate the sound file on your desktop computer and copy the file. The file format must be .wav or .mid (MIDI type 0).
- 2 Connect the phone to your desktop computer via the USB data cable or infrared.
- 3 Open **ActiveSync**<sup>®</sup> on your desktop computer, click **Explore**, double-click **My Smartphone**, double-click **IPSM**, double-click **Application Data**, double-click **Sounds**, and then paste the sound file into the **Sounds** folder.

**Note:** If a **Sounds** folder does not exist in this directory, create a new one.

- 4 On your phone's Home screen, press **Start**  , select **Settings**, and then select **Sounds**.
- 5 Select the option to customize, press  left/right to select the sound.
- 6 Press **Done**  to save the setting.



# Using Profiles

Use **Profiles** settings to configure how your phone notifies you about an incoming call, an approaching appointment, or an arriving message. You can use **Profiles** to change notifications quickly based on your situation. For example, you may want the phone to ring louder if a client is calling, or you may not want the phone to ring at all, but want to hear calendar reminders. The default profile used with your phone is the **Normal** profile. The name of the current profile displays on the Home screen.



Indicates your current profile

## Find the Feature

Start  > **Settings** > **Profiles**





**Tip:** You also can either assign **Profiles** settings by selecting **Profile: [Type]** from the Home screen, or select a different profile using the **Quick List** by pressing **Power** (⏻) or holding down **Home** (🏠) from the Home screen.

**Note:** When a headset is plugged into the phone, the **Headset** profile is used automatically.

## Modifying a Profile

Find the Feature

Start  > Settings > Profiles

	Press	To
1		scroll to a desired profile
2	<b>Menu</b> 	open the options menu
3	<b>Action</b> (○)	select <b>Edit</b>
4		scroll to a desired option to modify
5	<b>Done</b> 	save the settings

Observe the following from your phone when in the following modes:

Profile	Description
<b>Headset</b>	This can only be activated when a headset is connected to your device. The <b>Headset</b> profile is deactivated when you remove the headset from your device. You cannot select or unselect <b>Headset</b> from the <b>Profile</b> item on the Home screen. It has been placed in the <b>Profiles</b> menu in order to allow you to confirm (via a check mark) that it has been automatically selected upon connecting to the headset.

Profile	Description
<b>Car</b>	This can only be activated when a car kit specifically designed for your phone is connected to your device. The <b>Car</b> profile is deactivated when you remove the car kit from your device. You cannot select or unselect <b>Car</b> from the <b>Profile</b> item on the Home screen. It has been placed in the <b>Profiles</b> menu in order to allow you to confirm (via a check mark) that it has been automatically selected upon connecting to a car kit.
<b>Speakerphone</b>	This is automatically selected by the device while you are in a call and after you have activated the speakerphone. The <b>Speakerphone</b> profile is deactivated when you turn off speakerphone during or just as you are ending a call. You cannot select or unselect <b>Speakerphone</b> from the <b>Profile</b> item on the Home screen. It has been placed in the <b>Profiles</b> menu in order to allow you to confirm (via a check mark) that it has been automatically selected upon turning on the speakerphone.





# Changing the Home Screen

Use **Home Screen** settings to change the Home screen layout, the color scheme, the background image, and the time delay in the idle display.

**Find the Feature** Start  > **Settings** > **Home Screen**

## Customizing the Home Screen with Your Own Image

### Action


- 1 Locate your image file on your desktop computer and copy the image file. The file format must be .gif, .jpg, or .bmp.

**Tip:** For best results, use images with a 176 x 200 screen resolution to fit on your phone's Home screen.



- 2 Connect the phone to your desktop computer via the USB data cable or infrared.

- 3 Open **ActiveSync**<sup>®</sup> on your desktop computer, click **Explore**, double-click **My Smartphone**, double-click **IPSM**, double-click **Application Data**, double-click **Home**, and then paste the image file into the **Home** folder.

**Note:** If a **Home** folder does not exist in this directory, create a new one.

- 4 On your phone's Home screen, press **Start** , select **Settings**, and then select **Home Screen**.

## Action

- 5 Under **Background image**, press  left/right to select your image.
- 6 Press **Done**  to save the setting.

## Changing Regional Settings

Use **Regional Settings** to change the language, date, and time style of the phone, as well as number and currency formatting options.

**Find the Feature** Start  > Settings > More > Regional Settings

## Setting Font Size, Time-Out, and Alert Volume

Use **Accessibility** to configure the system font size, Multi-Tap/confirmation time-out, and in-call alert volume.

**Find the Feature** Start  > Settings > Accessibility

## Using Advanced Phone Settings

Use **Phone Settings** to customize flip answer on/off control, display style, and screen contrast.

**Find the Feature** Start  > Settings > More > More > Phone Settings







# Getting More Out of Your Phone

## Making a Conference Call



You can join together all existing calls to make a conference call, if you have subscribed to this service.




On the Home screen:


	Press	To
1	keypad keys	enter a phone number for the 1st call
2		call the number
3	keypad keys	enter a phone number for the 2nd call
4		call the 2nd number
		<b>Note:</b> The 1st call is automatically put on hold when the 2nd call is active.
5	<b>Menu</b> 	open the options menu
6		scroll to <b>Conference</b>
7	<b>Action</b> (○)	make a conference call

## Making a Call from a Conference Active

You can break 1 call out of a conference and make this call active while the rest of the conference is on hold.

In a conference call:

	Press	To
1	Menu 	open the options menu
2		scroll to <b>Private</b>
3	Action (○)	select <b>Private</b>
4		scroll to a desired call
5	Action (○)	make the call active

**Tip:** Press **End**  to end an active call when multiple parties are connected.

## Forwarding Calls



You can forward all or selected calls to another number.

### Find the Feature

Start  > **Settings** > **Phone** > **Call Forwarding**



# Barring Calls



You can block incoming and/or outgoing calls.

**Find the Feature**

Start > Settings > Phone > Call Barring

## Monitoring Phone Use

**Call Timers** contains the length of your last call, the total number of calls made and received, calls by type (**Incoming**, **Outgoing**, **Roaming**, and **Data**), and a lifetime counter. You can use **Call Timers** to keep track of your calling patterns, to help you choose a calling plan or estimate your monthly billing.



Call Timers	
Last call:	
00:03	
All calls:	
7:52:16	
Incoming calls:	
05:08	
Outgoing calls:	
01:26	
Roaming calls:	
Done	Menu

**Find the Feature**





Start > Call History  
> Menu > View Timers

# Opening Applications with Speed Dial

You can quickly launch applications by assigning speed dial numbers. Press and hold 1 or 2 keys from the Home screen to make a speed dial command. Choose speed dial entries from 2-99. The speed dial entry 1 is often reserved to set up or dial your voicemail after initial setup.

To assign an application a speed dial number:

**Find the Feature**      **Start** 

<b>Press</b>	<b>To</b>
1 	scroll to a desired application
2 <b>Menu</b> 	open the options menu
3 <b>Action</b> (○)	select <b>Add Speed Dial</b>
4  left/right	select a speed dial entry under <b>Keypad assignment</b>
5 <b>Done</b> 	save the setting

To quickly open an application from the Home screen:

## Action

Press and hold the keypad number that you have assigned as a speed dial command. If the keypad assignment has 2 digits, press the 1st digit, then press and hold the 2nd digit.



# Using Voice Activation


You can open an application or contact card by speaking a word.

**Note:** The voice recognition application works only via the phone directly or a wired headset attached to the phone, but not with a Bluetooth headset.

## Opening an Application by Voice

On the Home screen:

### Action


- 1 Press and hold  up to open **Speech Recognition**.
- 2 Say the name of the application you want to open preceded by **Open** (for example, saying “Open Calendar”).



## Customizing the List of Applications That Can Be Opened by Voice

On the Home screen:

### Action



- Press and hold  up to open **Speech Recognition**.

### Press

- 1 **Settings** 

### To


open the settings menu





Press	To
2 	scroll to <b>Application Launcher</b>
3 <b>Action</b> (○)	select <b>Application Launcher</b>
4 	scroll to an application you want to open by voice
5 <b>Action</b> (○)	check the application

### ***Adjusting the Command Sensitivity Setting***

If the phone seldom recognizes your commands, follow the steps from the Home screen:

#### **Action**

Press and hold  up to open **Speech Recognition**.

Press	To
1 <b>Settings</b> 	open the settings menu
2 	scroll to <b>Sensitivity</b>
3 <b>Action</b> (○)	select <b>Sensitivity</b>
4 <b>Action</b> (○)	select <b>Commands</b>
5  down	adjust the <b>Commands</b> setting toward <b>Reject Less</b>
6 <b>OK</b> 	save the setting










## Adjusting the Speed Setting

If you want the phone to initiate your commands faster, follow the steps from the Home screen:

### Action

Press and hold  up to open **Speech Recognition**.


	Press	To
1	<b>Settings</b> 	open the settings menu
2		scroll to <b>Sound</b>
3	<b>Action</b> (○)	select <b>Sound</b>
4		scroll to <b>Name Settings</b>
5	<b>Action</b> (○)	select <b>Name Settings</b>
6	<b>Action</b> (○)	select <b>Speed</b>
7	 up	adjust the <b>Speed</b> setting toward <b>Faster</b>
8	<b>OK</b> 	save the setting

## Viewing Your Contact Card by Voice

**Name Lookup** lets you view any contact card saved in **Contacts** by voice.

On the Home screen:


### Action



- 1 Press and hold  up to open **Speech Recognition**.
- 2 Say **Name Lookup**.
- 3 Say the name exactly saved in your contacts list.

## Changing How Phone Book Works with Your Contact Card




By default, **Name Lookup** automatically retrieves contact information for any name in your contacts list by saying that name. If you want to review and confirm names before retrieving contact information, you must enable **Name Lookup Choice Lists**. Follow the steps from the Home screen:

### Action

Press and hold  up to open **Speech Recognition**.

Press	To
1 <b>Settings</b> 	open the settings menu
2 	scroll to <b>Choice Lists</b>



Press	To
3 Action (○)	select <b>Choice Lists</b>
4 	scroll to <b>Name Lookup</b>
5 Action (○)	select <b>Name Lookup</b>
6 	scroll to <b>Always On</b>
7 OK 	save the setting

## Making Data Calls



Use **Data Connections** settings to set up General Packet Radio Service (GPRS), dial-up, Virtual Private Network (VPN), and proxy

connections so you can connect to the Internet or your corporate network. With a data connection, you can browse the Web, download email, chat using **MSN<sup>®</sup> Messenger** or **IM Chat**, or synchronize wirelessly with the server.

**Note:** Your phone has already been configured to allow you to browse and chat. Contact your IT manager for information on mobile Internet plans, configuring email or wireless synchronizing with the server.

There are 4 main data connections:

Data connection	Description
Internet connection	connect to your Internet service provider

Data connection	Description
<b>Work connection</b>	connect to your work place network
<b>WAP connection</b>	use WAP connection settings
<b>Secure WAP connection</b>	use secure WAP (WAPS) connection settings

## Using Dial-Up Connection

You need to set up a dial-up connection to connect directly to the Internet or your corporate network.

### Creating a Dial-Up Connection to the Internet


On the Home screen:

#### Find the Feature

Start  > Settings  
 > More > Data Connections >  
 Menu  > Edit Connections >  
 Dial-up Connections > Menu  > Add



Fill in the blanks with the appropriate information:

Option	Description
<b>Description</b>	enter a name for the connection
<b>Connects to</b>	press  left/right to select <b>The Internet</b>
<b>Phone number</b>	enter in your phone number
<b>User name</b>	enter in your user name
<b>Password</b>	enter in your password
<b>Domain</b>	enter in your domain name

**Note:** Remember to press **Done**  when you are ready.


## ***Creating a Dial-Up Connection to Your Corporate Network***

On the Home screen:

### **Find the Feature**

**Start**  > **Settings**  
> **More** > **Data Connections** >  
**Menu**  > **Edit Connections** >  
**Dial-up Connections** > **Menu**  > **Add**

Fill in the blanks with the appropriate information:




<b>Option</b>	<b>Description</b>
<b>Description</b>	enter a name for the connection
<b>Connects to</b>	press  left/right to select <b>Work</b>
<b>Phone number</b>	enter in your phone number
<b>User name</b>	enter in your user name
<b>Password</b>	enter in your password
<b>Domain</b>	enter in your domain name

**Note:** Remember to press **Done**  when you are ready.




## Creating VPN Connection

A VPN connection accesses your corporate network by using an existing Internet connection.

On the Home screen:

**Find the Feature**    **Start**  > **Settings**  
> **More** > **Data Connections** >  
**Menu**  > **Edit Connections** >  
**VPN Connections** > **Menu**  > **Add**

Fill in the blanks with the appropriate information:

Option	Description
<b>Description</b>	enter a name for the connection
<b>VPN type</b>	press  left/right to select a VPN type
<b>Server</b>	enter in your server name
<b>Connects from</b>	press  left/right to select <b>The Internet</b>
<b>Connects to</b>	press  left/right to select <b>Work</b>
<b>User name</b>	enter in your user name
<b>Password</b>	enter in your password
<b>Domain</b>	enter in your domain name

**Note:** Remember to press **Done**  when you are ready.



## Creating Proxy Connection


A proxy connection accesses the Internet using an existing connection to your corporate network.

On the Home screen:




### Find the Feature

Start  > **Settings**  
> **More** > **Data Connections** >

**Menu**  > **Edit Connections** >

**Proxy Connections** > **Menu**  > **Add**

Fill in the blanks with the appropriate information:

Option	Description
<b>Description</b>	enter a name for the connection
<b>Connects from</b>	press  left/right to select <b>Work</b>
<b>Connects to</b>	press  left/right to select <b>The Internet</b>
<b>Proxy (name:port)</b>	enter in your proxy server name and port
<b>Type</b>	press  left/right to select a proxy server type <b>Tip:</b> Select <b>Socks4</b> to use <b>MSN<sup>®</sup> Messenger</b> or <b>IM Chat</b> .
<b>User name</b>	enter in your user name

Option	Description
Password	enter in your password

**Note:** Remember to press **Done**  when you are ready.

## Creating GPRS Connection

A GPRS connection accesses the Internet, MMS network, (secure) WAP network, or corporate network by using an access point your service provider provides.

On the Home screen:

### Find the Feature


Start  > Settings

> More > Data Connections >

Menu  > Edit Connections >

GPRS Connections > Menu  > Add

Fill in the blanks with the appropriate information:

Option	Description
Description	enter a name for the connection
Connects to	press  left/right to select a network connection
Access point	enter in your access point
User name	enter in your user name
Password	enter in your password
Primary DNS	enter in your primary DNS
Secondary DNS	enter in your secondary DNS





Option	Description
IP address	enter in your IP address

**Note:** Remember to press **Done**  when you are ready.

## ***Synchronizing Information among Devices***



You can use Microsoft® **ActiveSync** to synchronize information on your desktop computer and/or a Microsoft Exchange Server with the information on your phone. **ActiveSync**® compares your phone's information with the information on the desktop computer and/or the server, and then updates all locations with the most recent information. Connecting to a company server requires assistance from an Information Technology (IT) professional. With **ActiveSync**, you can:

- Keep your Outlook® information up-to-date by synchronizing your phone with your desktop computer.
- Synchronize **Inbox**, **Calendar**, and **Contacts** with a server so that you have the latest information, even when your desktop computer is turned off.
- Copy (rather than synchronize) files between your phone and your desktop computer.
- Control when synchronization occurs by selecting a synchronization schedule.
- Select which information types are synchronized and control how much information is synchronized. For

example, you can choose how many weeks of past appointments to synchronize.

**Tip:** Using **ActiveSync**, you can synchronize information directly with a Microsoft Exchange Server if your computer is running **Microsoft Mobile Information Server 2002** or later. For more information about **ActiveSync**, see **ActiveSync Help** on your desktop computer.

## ***Installing ActiveSync on Your PC***

**ActiveSync** is already installed on your phone. Install **ActiveSync** (3.7.1 or later) using the companion CD included in your box or download from the Microsoft® website (<http://www.microsoft.com>) by entering the word **ActiveSync** in the search dialogue box.

 
## ***Creating a Partnership***

After the installation is complete, the **New Partnership Wizard** helps you set up a partnership between your phone and your desktop computer and/or a server so that you can start synchronizing information and customizing your synchronization settings. Your first synchronization process automatically begins when you finish using the wizard. After the first synchronization, your Outlook information appears on your phone.

**Note:** If you have a firewall on your desktop, the wizard may cause difficulties establishing your partnership with your phone. To prevent synchronization problems, select **Synchronize with Microsoft Mobile Information Server** and/or this desktop computer in the **New Partnership Wizard** only if



your computer is running **Microsoft Mobile Information Server 2002** or later and you know the server name.

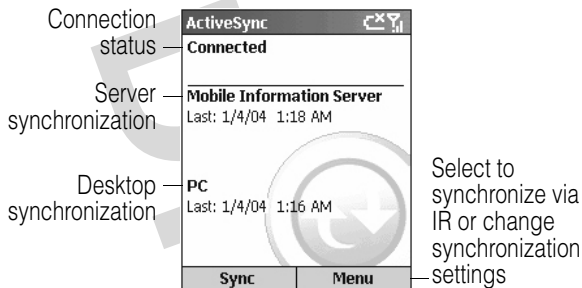

## ***Starting and Stopping Synchronization***

Connect your phone and desktop computer using the infrared port on your phone or using the USB data cable before you begin to synchronize information.

**Find the Feature**      Start > **ActiveSync**




	<b>Press</b>	<b>To</b>
1	<b>Sync</b>	start synchronization
2	<b>Stop</b>	stop synchronization

## ***Setting Up Server ActiveSync***


Before you can synchronize information with a server, you may need to request server configuration information, such as your user name, password, and the name of the Microsoft® Mobile Information Server, either from your

service provider or network administrator. This configuration information may have already been set up on your phone.

**Find the Feature** Start  > **ActiveSync**

<b>Press</b>	<b>To</b>
1 <b>Menu</b> 	open the options menu
2 <b>Action</b> (○)	select <b>Options</b>
3 	scroll to <b>Server Settings</b>
4 <b>Action</b> (○)	select <b>Server Settings</b>
5 	scroll to <b>Connection</b>
6 <b>Action</b> (○)	select <b>Connection</b>

Fill in the blanks with the appropriate information:

<b>Option</b>	<b>Description</b>
<b>User name</b>	enter in your Microsoft Exchange user name
<b>Password</b>	enter in your Microsoft Exchange password
<b>Domain</b>	enter in your Microsoft Exchange Server domain name (if required)
<b>Save password</b>	press  left/right to check this feature so that you need not enter it repeatedly



Option	Description
Server Name	enter in your Microsoft Mobile Information Server name

**Note:** Remember to press **Done**  when you are ready.




## ***Stopping Synchronizing an Information Type with a Server***



You can stop your phone synchronizing an information type with a server. However, to change to synchronizing with your desktop computer instead, you need to change the synchronization settings on the desktop computer. For more information about synchronization, see **ActiveSync**

**Help** on the desktop computer.



**Find the Feature**      **Start**  > **ActiveSync**

	Press	To
1	<b>Menu</b> 	open the options menu
2	<b>Action</b> (○)	select <b>Options</b>
3		scroll to <b>Server Settings</b>
4	<b>Action</b> (○)	select <b>Server Settings</b>
5		scroll to the information type that you no longer want to synchronize with a server, such as <b>Calendar</b> , <b>Contacts</b> , or <b>Inbox</b>
6	<b>Action</b> (○)	select the information type




Press	To
7  left/right	clear the check box next to the information type that you no longer want to synchronize with a server
8 <b>Done</b> 	save the setting

## Synchronizing Remotely

You can synchronize remotely with your computer or server after setting up server **ActiveSync**.




### Synchronizing Remotely with a Desktop Computer

**Find the Feature** Start  > **ActiveSync**

Press	To
1 <b>Menu</b> 	open the options menu
2 <b>Action</b> (○)	select <b>Options</b>
3 	scroll to <b>PC Settings</b>
4 <b>Action</b> (○)	select <b>PC Settings</b>
5 <b>Done</b> 	save the settings



Fill in the blanks with the appropriate information:

Option	Description
<b>Use</b>	press  left/right to select the appropriate computer name
<b>Use mobile schedule to sync with this PC</b>	press  left/right to check this feature if you want to use a synchronization schedule to sync with your PC
<b>Sync with this PC during manual sync</b>	press  left/right to check this feature if you want to sync with your PC manually

**Note:** Remember to press **Done**  when you are ready.


**Tip:** To synchronize remotely with a desktop computer, first turn on the computer.





### ***Synchronizing Remotely with a Server***

You can also set up a connection to synchronize remotely with a server when you first create a partnership between your phone and desktop computer.

#### **Find the Feature**

**Start**  > **ActiveSync**

	Press	To
1	<b>Menu</b> 	open the options menu
2	<b>Action</b> (○)	select <b>Options</b>



Press	To
3 	scroll to <b>Server Settings</b>
4 <b>Action</b> (○)	select <b>Server Settings</b>
5 	scroll to the information type to sync with the server
6 <b>Action</b> (○)	select the information type
7  left/right	check the check box next to the information type
8 <b>Done</b> 	save the settings

## ***Creating a Server Synchronization Schedule***

You can create a server synchronization schedule so that your information is automatically synchronized with the server at specified time intervals.





### ***Creating a Schedule to Sync with a Server When Your Phone Is Connected to a Desktop Computer***

**Find the Feature**      **Start**  > **ActiveSync**

Press	To
1 <b>Menu</b> 	open the options menu
2 <b>Action</b> (○)	select <b>Options</b>
3 	scroll to <b>Server Settings</b>
4 <b>Action</b> (○)	select <b>Server Settings</b>








Press	To
5 	scroll to <b>Connection</b>
6 <b>Action</b> (○)	select <b>Connection</b>
7 <b>Menu</b> 	open the options menu
8 <b>Action</b> (○)	select <b>Rules</b>
9  left/right	select a time interval to sync with your server
10 <b>Done</b> 	save the setting

### *Creating a Schedule to Sync with a Server When Your Phone Is Not Connected to a Desktop Computer (Synchronizing Wirelessly)*



**Find the Feature**    **Start**  > **ActiveSync**

Press	To
1 <b>Menu</b> 	open the options menu
2 <b>Action</b> (○)	select <b>Options</b>
3 <b>Action</b> (○)	select <b>Mobile Schedule</b>
4  left/right	select a length of time
5 <b>Done</b> 	save the settings

## ***Synchronizing Using an Infrared Connection***

You can use an infrared connection to quickly create a direct connection between your phone and another mobile device or desktop computer. This method is ideal for changing between multiple devices, because there are no cables or adapters to change. For more information about synchronizing using an infrared connection, see **ActiveSync Help** on your desktop computer.

**Note:** Align your phone to your personal computer or mobile device when using an infrared connection to synchronize information.

## ***Viewing the Information on ActiveSync Errors***

Whenever **ActiveSync** cannot successfully synchronize your information, an error displays on your phone.

<b>Press</b>	<b>To</b>
<b>Action</b> (○)	display more information about the error that occurred

---

---

**Note:** Some types of errors can interfere with automatic synchronization. If you suspect that a scheduled automatic synchronization has not occurred, you should attempt to manually synchronize your information. Successfully completing manual synchronization resets automatic synchronization.



## ***Exchanging Files between Your Phone and Desktop PC***

With **ActiveSync**, you can exchange files between your phone and desktop PC.

### **Action**

- 1 Connect your phone to your desktop computer.
- 2 On your computer, open **ActiveSync** and click **Explore**. **Windows Explorer** opens the **Mobile Device** window for your phone.
- 3 In **Windows Explorer**, browse to the file that you want to copy to your phone or desktop computer.
- 4 To copy the file to your phone, right-click the file and select **Copy**. Place the cursor in the desired folder for your phone, right-click, and select **Paste**.

or

To copy the file to your desktop computer, right-click the file and select **Copy**. Place the cursor in the desired folder for your desktop computer, right-click, and select **Paste**.

---

---


### ***Beaming Information***






You can use your phone's infrared port to send and receive (beam) calendar appointments and contact cards between your devices and synchronize information with another mobile device or desktop computer that has an infrared port.



## Beaming a Contact Card

### Find the Feature

Start  > **Contacts**

	Press	To
1		scroll to a desired contact to beam
2	<b>Menu</b> 	open the options menu
3		scroll to <b>Beam Contact</b>
4	<b>Action</b> (○)	select <b>Beam Contact</b>
5		scroll to a desired IR device your phone searches in it's range
6	<b>Action</b> (○)	select the device
7	<b>Beam</b> 	beam the contact

**Note:** To beam the contact over IR, align the infrared ports so that they are unobstructed and within close range of each other.






Status information then displays the name of the device your phone is beaming to, and whether the beaming process is pending, done, or failed.



## Beaming an Appointment

Find the Feature

Start  > Calendar

Press	To
1 	scroll to a desired appointment to beam
2 <b>Action</b> (○)	open the appointment
3 <b>Menu</b> 	open the options menu
4 	scroll to <b>Beam Appointment</b>
5 <b>Action</b> (○)	select <b>Beam Appointment</b>
6 	scroll to a desired IR device your phone searches in it's range
7 <b>Action</b> (○)	select the device
8 <b>Beam</b> 	beam the appointment



**Note:** To beam the appointment over IR, align the infrared ports so that they are unobstructed and within close range of each other.

Status information displays the name of the device your phone is beaming to, and whether the beaming process is pending, done, or failed.

## Receiving Beamed Information

### Find the Feature

Start  > Settings > Beam

Press	To
1  left/right	check <b>Receive incoming beams</b>
2 <b>Done</b> 	receive beamed information

**Note:** To receive beamed information over IR, align the infrared ports so that they are unobstructed and within close range of each other.

**Note:** Your phone can receive beamed files of any type, but some files must need to be copied to your desktop computer for viewing.

## Using a Bluetooth® Connection




You can use a Bluetooth connection to quickly create a direct connection between your phone and another Bluetooth-enabled mobile device or desktop computer. This method is ideal for changing between multiple devices, because there are no cables or adapters to change.





## Creating a Partnership from Your Phone with a Bluetooth Device

### Find the Feature

Start  > Settings > Bluetooth  
> Menu  > Devices >  
Menu  > New

Press	To
1 	scroll to the Bluetooth device you want to pair with
2 <b>Add</b> 	select the device
3 keypad keys	enter a PIN on your phone to create the partnership
4 keyboard keys	enter the same PIN on the Bluetooth device
5 <b>Done</b> 	save the setting

**Tip:** You can stop a search if a device is found by pressing **Add**  .

**Note:** When your phone is creating a bond with a device that has headset or handsfree capabilities, you are notified through the dialog boxes to set up that device as your Bluetooth headset or handsfree by pressing **Yes**  . When you are on a call using your Bluetooth headset, you can transfer audio to your phone's earpiece by using the menu options. If you want to transfer audio again to the headset, push the headset hardware button.

## Accepting a Partnership from Your Phone

On a Bluetooth device, you can configure a partnership with your phone.

**Find the Feature**    Start  > **Settings** > **Bluetooth**

### Action

- 1 Under **Bluetooth**, press  left/right to select **Discoverable**. The Bluetooth radio turns on and makes your phone discoverable for 3 minutes.
- 2 On the Bluetooth device, select your phone and attempt to pair with it.
- 3 Enter the same PIN both on your Bluetooth device and on your phone to create the partnership.

The partnership is created. Your phone can now be used as a data modem. The phone automatically becomes a data modem over Bluetooth if a paired device attempts to connect to it.





# Using Your Phone as a Modem



Using **Modem Link**, you can use your phone as an external modem for another device or computer by using an infrared or USB connection.

**Note:** When you connect your phone to your personal computer using a USB data cable, the screens shown and the step-by-step instructions are specific to Windows 2000 users. The screens may vary slightly by the Windows version. If you have a different version of Windows and have any further questions, please contact the computer's respective **Help** menu.

## Installing Motorola a Wireless USB Modem



### Downloading the .inf File to Your PC

You can download the USB driver (**Smartfon.inf**) to your C:\ drive from the Motorola MPx220 companion CD included in your retail box.

### Manually Installing the Device Driver

**Note:** If your computer has automatically added Motorola MPx220 as a new modem device, you can skip the following steps.

#### Action

- 1 Connect your phone to your computer. Your computer may prompt you for the Motorola MPx220 wireless USB modem driver with a **New Hardware Wizard** menu screen. If it does not, proceed to **To Set Up a USB Modem Connection**.

## Action

- 2 If the **Install Wizard** appears, click **Next** from the opening screen of the **Install Wizard** that states **Welcome to the New Found Hardware Wizard**.
- 3 Click on **Search for a suitable driver for my device** (recommended).
- 4 Next click **Specify a Location** and browse to the folder in which you downloaded the driver.
- 5 Click **Next** to allow your computer to automatically search and download the driver file and click **Finish**.
- 6 After installing the modem, disconnect your handset from the computer, and proceed to **To Set Up a USB Modem Connection**. The **Smartphone 2003 Wireless USB Modem** should now be properly listed in the **Device Manager** window.




## Setting Up a Modem Connection



You can specify a type of connection (via USB or infrared) for your phone to link with another device.

### Setting Up a USB Modem Connection

## Action




- 1 Make sure that your phone is not connected to another device.
- 2 On the Home screen, press **Start** , select **More**, select **More**, select **More**, select **Accessories**, and select **Modem Link**.

## Action

- 3 Under **Connection**, press  left/right to select **USB**.
- 4 Press **Menu**  and select **Activate**.
- 5 Now connect your phone to your computer with the USB data cable.

## Setting Up an Infrared Modem Connection

### Action

- 1 On the Home screen, press **Start** , select **More**, select **More**, select **More**, select **Accessories**, and select **Modem Link**.
- 2 Under **Connection**, press  left/right to select **IrCOMM**.
- 3 Press **Menu**  and select **Activate**.
- 4 Now connect your phone to your computer with the infrared port.

## Querying a Modem

A modem query is necessary to establish a PC and modem connection.

**Note:** If the PC and modem connection is not established in approximately 30 seconds, **ActiveSync**<sup>®</sup> will take over the USB port.

### Action

- 1 On your computer, click on **Start > Settings > Control Panel > System > Hardware > Device Manager > Modems**.
- 2 In the **Device Manager** window, double click on **Smartphone 2003 Wireless USB Modem**.
- 3 Select the **Diagnostics** tab and click **Query Modem**. The PC sends AT commands and if the modem replies back without an error, the modem is properly installed.

### *Adding an Initialization String*

Add an extra initialization string to **Modem Properties** (change APN as needed). An extra initialization string is needed on your phone for setting up the GPRS server configuration. Contact your wireless service provider for the APN name, user name, and password.

### Action

- 1 After querying the modem, click the **Advanced** tab in the **Modem Properties** dialogue window.
- 2 Type in your initialization string and change the APN name as needed.
- 3 For network's initialization string use the following: **+CGDCONT=1,"IP","apnname", "",0,0**



## ***Using the Motorola MPx220 Wireless USB Modem for Cable GPRS***

### **Action**

- 1 Activate the USB modem on your handset.
  - 2 Establish a PC and modem connection (modem query or hyper terminal AT commands).
  - 3 Add a dial-up connection using the wireless USB modem.
- 
- 

## ***Adding a New Dial-Up Connection***

### **Action**

- 1 From the **Control Panel** select **Network and Dial-up Connection**.
  - 2 Double click **Make New Connection** then click **Next**.
  - 3 Select **Dial-up to Internet** then click **Next**.
  - 4 From the **Internet Connection Wizard** select **Internet Connection Manually** then click **Next**.
  - 5 Select **Connect Through Phone Line and Modem**.
  - 6 From modem selection, scroll down to **Smartphone 2003 Wireless USB Modem** then click **Next**.
  - 7 Under **Telephone Number** type the codes your network administrator provides and uncheck area codes and dialing rules then click **Next**.
  - 8 Fill in the **User Name** and **Password** and click **Next**.
  - 9 Type in connection name (i.e. Smartphone USB Cable GPRS) and click **Next**.
- 



## Action

- 10 Select **No** then **Next** and click **Finish**.
- 
- 

**Note:** Ensure **Smartphone 2003 Wireless USB Modem** is selected and the hardware features are properly configured before dialing.

## *Doubling Check Settings*

### Action

- 1 Open a newly created dial-up connection.
  - 2 Click **Properties** and verify **Smartphone 2003 Wireless USB Modem** is selected.
  - 3 Click **Configure** and ensure all hardware features are selected as shown above.
  - 4 Click **OK** then **OK**.
  - 5 After clicking **Dial** you should see **Opening, Dialing, Verifying User Name and Password and Registering Your Computer on the Network**. You are GPRS connected when the dial-up dialogue window changes to an icon in your icon tray.
- 
- 

## *Activating the Modem Link*

After setting up your phone and your computer for the first time, in order to initiate the modem session on your device you need to perform the instructions described in each of the 2 sections: “Setting Up a USB Modem Connection” on page 127 if you use a USB data cable, or “Setting Up an Infrared Modem Connection” on page 128 if you use an infrared port.



## Deactivating the Modem Link

### Find the Feature

Start  > More > More > More  
> Accessories > Modem Link  
> Menu  > Deactivate



**Note:** Deactivate the modem link when you are finished using it in order to avoid potential problems when using **ActiveSync**® in the same session.

## Changing the Order of Applications Displayed on the Start List

**Favorites Manager** allows you to select applications from the **Favorites Manager** list and change their positions shown on the Start list.

### Find the Feature

Start  > More > Favorites Manager

	Press	To
1		scroll to a desired application
2	Action (○)	select the application
3	 up/down	move the selected application to a desired position
4	Action (○)	save the setting

# Using File Viewer

**Note:** Whether your phone is equipped with **File Viewer** is subject to your service provider.

**File Viewer** allows you to view the documents attached, locally stored, or stored on your storage card without any file-conversion or loss of content. It supports most common desktop document formats (including PDF, Word, Excel, PowerPoint...) and significant image formats (such as JPEG, GIF, PNG...).

By default, Microsoft ActiveSync converts documents that it recognizes to simpler formats. With **File Viewer**, this is not necessary. Before you synchronize emails or copy files to your phone for the 1st time, you should disable this conversion, or you will not be able to open the email attachments or copied files with **File Viewer**. Go to the ActiveSync® **Tools > Options** on your computer, then to the **Rules** tab, and click on **Conversion Settings**. Uncheck "**Convert files when synchronized, copied or moved**"; then click on **OK** in each dialogue box.

**Tip:** To send emails with attachments, press **Start**  > **More** > **File Manager** > scroll to the file you want to send > press **Menu**  > **Send&Receive** > **Send by E-mail**.

To view a document on your phone:

**Find the Feature**

**Start**  > **More** > **File Viewer**

**Press**

**To**

1








scroll to a desired folder








	Press	To
2	Action (○)	select the folder
3		scroll to a desired folder or file
4	Action (○)	select the folder or file  <b>Tip:</b> Repeat steps 3-4 until your desired file is found.
5	Action (○)	launch the document  zooming mode with  displayed in the bottom right corner of the screen.  <b>Tip:</b> Press <b>Hide Mode</b> to keep  from displaying on the screen.
6	up/right  <b>or</b>  down/left	zoom the selected file in  <b>or</b>  zoom the selected file out  <b>Tip:</b> Press and hold  to continuously magnify or minify the size of the selected document.


Press	To
7 <b>Action</b> (○)	switch to the document scrolling mode with  displayed in the bottom right corner of the screen. <b>Tip:</b> Press <b>Hide Mode</b>  to keep  from displaying on the screen.
8  up/down/ left/right	view the different part of the selected file <b>Tip:</b> Press and hold  to continuously move the page in the desired direction.

The menu options for folders or files are described below.





Option	Description
<b>Document View/Folders</b>	switch between the document you are viewing and the entire file structure. To go to the folder above, tap the <b>Up directory</b> icon  in the corner.
<b>Page</b>	rotate the screen, fit the size of the file to the width of the screen (which may leave blank areas depending on the aspect ratio), or move to the page of the selected document you want to view.

 











Option	Description
<b>Favorites</b>	add the selected document to the Favorites list and it is displayed as a thumbnail image or remove a desired document from the Favorites list by pressing <b>Add/Delete</b>  .
<b>History</b>	display the file(s) you have viewed. Press <b>Action</b> (○) to open files from the History list.
<b>Settings</b>	define how long you want the files stored on the History list or clear the history records immediately. You can also select file types to associate with <b>File Viewer</b> , learn how to use <b>File Viewer</b> and view the details about it.
<b>Close</b>	exit from <b>File Viewer</b> .

You can also use the keypad to zoom pages in or out, view different parts of pages, navigate among pages, rotate pages and fit the size of pages to the width of the screen.


Press	To
	go to the previous page of the selected document.
	scroll the page you are viewing up.
	go to the next page of the selected document.
	scroll the page you are viewing left.

Press	To
	rotate the page you are viewing 90 degrees counterclockwise/clockwise.
	scroll the page you are viewing right.
	go to the 1st page of the selected document.
	scroll the page you are viewing down.
	go to the last page of the selected document.
	fit the size of the page you are viewing to the width of the screen.
	zoom the page you are viewing in.
	zoom the page you are viewing out.



# Managing Files

 **File Manager** is for file and folder management in your phone. It operates in 2 major views, **Tree View** and **List View**.

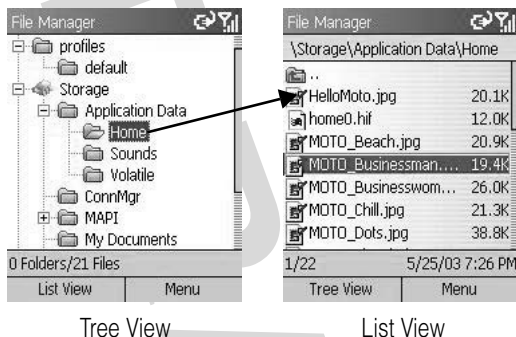

**Find the Feature**



**Start**  **> More > File Manager**

Option	Description
<b>Tree View</b>	displays the entire file structure in your phone's memory. The functions in <b>Tree View</b> primarily focus on folder management (operates similar to Microsoft Windows File Explorer).
<b>List View</b>	displays the details of the selected folder (its sub-folders and files). The functions in <b>List View</b> are basically file-oriented.

## Starting File Manager

There are a variety of key features for **File Manager**:

- Send the selected files via email, infrared beaming, MMS, or Bluetooth radio, and receive files via infrared beaming or Bluetooth radio.
- Delete, move, or copy/paste folders and files.
- Search for files according to portions of filenames and/or text contained in the files.
- View file or folder properties.
- View information about memory utilization, device, storage card, and battery power.
- Sort listed files in a variety of ways (by **Name**, **Size**, **Date of Last Change**, or **Type**, and by **Ascending** or **Descending**).
- Create file shortcuts.

When **File Manager** is initially invoked, it is in **Tree View** by default. To switch to **List View**, press **List View** . If the currently selected folder contains no subfolders, pressing **Action** (○) will also switch to **List View**. If the selected folder in **Tree View** contains subfolders, press **Action** (○) to expand or collapse the tree for that folder. For most functions, you must first select the file or folder you wish to operate on, then press **Menu**  to select the desired command from the menu. Press **Action** (○) to run the selected file.



# Managing Phone System Resources

**Resource Manager** allows you to view and refresh the details of battery power status and phone memory amount. It consists of two features: **Task Manager** and **Space Manager**.

Option	Description
<b>Task Manager</b>	lists all applications currently running on your phone. You can easily activate any currently running application, terminate applications, and refresh the list of running applications.
<b>Space Manager</b>	lists all emails, SMS messages, voice notes, speed dials, and call history stored on your phone's flash memory. You can easily delete any of the files saved on the flash memory and refresh the amount of free flash memory.



## Using Task Manager

**Find the Feature**

Start  > More > More >  
Resource Manager > Menu  >  
Task Manager

The menu options for **Task Manager** are listed below:

Option	Description
<b>Kill</b>	terminate the selected application
<b>Kill All</b>	terminate all running applications
<b>Kill All Except Selected</b>	terminate all running applications except the selected one
<b>Go To</b>	open the selected application
<b>Refresh</b>	refresh the list of running applications

Tip: To exit from **Task Manager**, press **Quit** .

## Using Space Manager

**Find the Feature**      **Start**  > **More** > **More** >  
**Resource Manager** > **Menu**  >  
**Space Manager**

The menu options for **Space Manager** are listed below:

Option	Description
<b>Erase Messages In Inbox...</b>	delete all messages in the selected folder from any of your accounts
<b>Erase Call History</b>	clear call history
<b>Erase Speed Dial</b>	delete all speed dial settings
<b>Erase Voice Notes</b>	delete all voice notes





Option	Description
<b>Erase All</b>	delete all messages, call history, speed dials, and voice notes
<b>Refresh</b>	refresh the free flash memory amount

Tip: To exit from **Space Manager**, press **Quit** .

## Removing Programs

**Remove Programs** settings lets you remove programs installed on your phone, with the exception of core programs that came with the phone, such as **Contacts**, **Calendar**, and **Internet**

**Explorer**<sup>®</sup>. If you accidentally remove a program on the device, you can find it on the companion CD to reinstall.



 
### Find the Feature

**Start**  > **Settings** > **More** > **Remove Programs**

# Personal Organizer


This chapter introduces features on your phone that help you manage and keep track of contacts and appointments, maintain a “things to do” list and use the calculator.

## Using Contacts

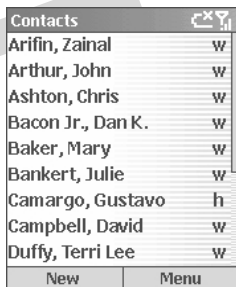

Contacts	
Arifin, Zainal	w
Arthur, John	w
Ashton, Chris	w
Bacon Jr., Dan K.	w
Baker, Mary	w
Bankert, Julie	w
Camargo, Gustavo	h
Campbell, David	w
Duffy, Terri Lee	w
New	Menu

**Find the Feature**      Start  > **Contacts**


**Tip:** You can also access **Contacts** by pressing **Contacts**  on the Home screen.

You can think of **Contacts** as an address book, where you store information about people and businesses you communicate with in contact cards. For example, you can store multiple phone numbers, email, and street addresses, Web pages, and other information on such as a birthday or anniversary date. You can use **Contacts** to dial phone numbers and compose email and SMS messages directly from a contact card.







The contacts list displays the names of your contact cards alphabetically, along with an abbreviation for the default communication method, such as the person's work phone number (**w**) or home phone number (**h**).

**Note:** If the contact card includes a work phone number, your phone will automatically set it as the default number. The contact cards along with the icon  are the entries stored on your SIM card.

The following table shows possible abbreviations and their meanings that might display in your contacts list.

Abbreviation	Description
<b>w</b>	work phone
<b>w2</b>	2nd work phone
<b>h</b>	home phone
<b>h2</b>	2nd home phone
<b>m</b>	mobile phone
<b>pgr</b>	pager
<b>car</b>	car phone
<b>txt</b>	SMS address (SMS phone number)
<b>e</b>	email address
<b>e2</b>	2nd email address
<b>e3</b>	3rd email address
<b>web</b>	web page

## Creating a New Contact

Press	To
1 <b>New</b> 	open an empty contact card
2 keypad keys	enter the appropriate information
3 <b>Done</b> 	save the contact

**Tip:** When you create a new contact on your phone, you can synchronize **Contacts** with your desktop computer or a server to keep your contact information current in all locations.



## Viewing a Contact



Number with a black dot denotes default number

- w** Work number
- m** Mobile number
- e** Email address
- txt** SMS message number

The screenshot shows a contact card for "Cooper, Scott". It lists three phone numbers: "555-5017" (with a black dot), "555-6322", and "555-6322". It also lists an email address "someone@example.com" and an SMS message number "555-6322". The card has "Edit" and "Menu" buttons at the bottom.

Press	To
1 	scroll to a desired contact
2 <b>Action</b> 	view the contact










The following table lists the contact card menu options and their functions.



Option	Description
<b>Add Speed Dial *</b>	create a shortcut to the selected phone number, email address, or Web URL by assigning 1 or 2 numbers as a speed dial
<b>Send Text Message</b>	compose and send SMS message to the selected contact
<b>Save to SIM/ Save to Contacts</b>	copy the selected contact saved in your phone to the SIM card or vice versa
<b>Set as Default</b>	set the selected phone number, email address, or SMS number as the default communication method for the contact
<b>Beam Contact</b>	send the selected contact card to another mobile device or desktop computer using infrared
<b>Delete</b>	remove the selected contact card from the contacts list
<b>Edit</b>	modify information on the selected contact card

\* This feature is available only for the contacts saved in your phone memory.

## ***Sending an Email from a Contact***

<b>Press</b>	<b>To</b>
1 	scroll to a desired contact
2 <b>Action</b> (○)	open the contact
3 	scroll to a desired email address
4 <b>Action</b> (○)	select the email address
5 	scroll to <b>Outlook E-Mail</b>
6 <b>Action</b> (○)	select <b>Outlook E-Mail</b>
7 keypad keys	enter your subject
8  down	go to the body text field
9 keypad keys	edit your message
10 <b>Send</b> 	send the message to the selected contact

## ***Sending an SMS Message from a Contact***

<b>Press</b>	<b>To</b>
1 	scroll to a desired contact
2 <b>Action</b> (○)	open the contact
3 	scroll to the SMS message number





Press	To
4 <b>Action</b> (○)	select the SMS message number
5 keypad keys	edit your message
6 <b>Send</b> (□)	send the message to the selected contact

## Using Calendar

**Calendar** is your phone's scheduling program, where you can create and view appointments, and view your **Calendar** by day, week, or month.

**Find the Feature**      **Start** (□) > **Calendar**


### Creating a New Appointment

Press	To
1 <b>Menu</b> (□)	open the options menu
2 <b>Action</b> (○)	select <b>New</b>
3 keypad keys	edit the appointment
	<b>Tip:</b> Under <b>Reminder</b> , select the amount of time you want the reminder to appear before the appointment.
4 <b>Done</b> (□)	save the appointment

**Tip:** When you create a new appointment on your phone, you can synchronize **Calendar** with your desktop computer or

a server to keep your schedule information current in all locations.

## Viewing an Appointment

Press	To
1 	scroll to a desired appointment
2 <b>Action</b> (○)	display the appointment

## Using Schedule

You can view your schedule in **Calendar** using 3 different views: **Agenda View**, **Week View**, and **Month View**.



**Find the Feature**

Start  > **Calendar**

### Using Agenda View

**Agenda View** is the default view for calendar information. This view displays meetings and appointments scheduled for the current day. The appointments appear in chronological order according to start time.

### Viewing Your Agenda for the Current Day

Press	To
1 <b>Menu</b> 	open the options menu (if you are using the <b>Week View</b> or <b>Month View</b> )
2 	scroll to <b>Agenda View</b>









Press	To
3 <b>Action</b> (○)	select <b>Agenda View</b>


**Tip:** To look at your agenda for previous or approaching dates, press  left/right.



### Viewing Your Agenda for a Specific Date

Press	To
1 <b>Menu</b> 	open the options menu
2 	scroll to <b>Go to Date</b>
3 <b>Action</b> (○)	select <b>Go to Date</b>
4 keypad keys	enter the date you want to view
5 <b>Done</b> 	display the agenda

### Using Week View

The **Week View** shows your schedule for the specified week. This view allows you to get a quick indication of your free and busy time, and allows you to create an appointment at a selected time easily. The **Week View** displays the hours in 1-hour increments by default on the left side of the screen. You can press  up/down to navigate through the hours on the screen.



**Note:** If you press  up/down and leave the **Week View**, the hours last shown will be displayed the next time you return to the **Week View**.

	Press	To
1	Menu 	open the options menu
2		scroll to <b>Week View</b>
3	Action (○)	select <b>Week View</b>

**Tip:** To change settings for **Week View**, press **Menu**  and select **Options**.

## Using Month View

The **Month View** provides an overview of your monthly schedule. Arrow indicators pointing up represent morning appointments, and the arrows pointing down represent afternoon appointments. A hollow box indicates an all-day event. A solid box indicates you have morning and afternoon appointments. If you have morning and afternoon appointments plus an all-day event, a solid box is surrounded by a hollow box.

	Press	To
1	Menu 	open the options menu
2		scroll to <b>Month View</b>
3	Action (○)	select <b>Month View</b>




# Using Tasks

You can use **Tasks** to track a personal or work-related project, assignment, or errand from beginning to completion. A task can occur once or repeatedly. A recurring task can repeat at regular intervals or repeat based on the date you mark the task complete. For example, you might want to pay a bill on the last Friday of every month, or get a haircut when one month has passed since your last haircut. The **Tasks** list shows your “things to do.” An item followed by an exclamation mark indicates high priority and an item with a down arrow is marked as low priority. Overdue tasks display bold and red. Completed tasks display with the corresponding check box selected.

**Find the Feature** Start  > More > More > Tasks

**Note:** If you synchronize **Tasks** with your desktop computer, completed tasks are removed from your phone after synchronization. They are then displayed in gray with a strikethrough on your desktop computer.




## Creating a New Task

Press	To
1  up	select the <b>Enter new task here</b> field
2 keypad keys	enter the task
3 <b>Action</b> (○)	save the task



**Tip:** When you create a new task on your phone, you can synchronize **Tasks** with your desktop computer to keep your tasks list current in both locations. If you create a new task with a reminder on your desktop computer, you can synchronize **Tasks** so that you hear the reminder on your phone.


## Marking a Task as Complete/Incomplete

Press	To
1 	scroll to a desired task
2 <b>Complete</b> 	mark the task as complete
or	or
<b>Activate</b> 	mark the task as incomplete

## Using Voice Recorder

Use **Voice Recorder** to create short voice recordings. Recordings are included in the **All Notes** list and are named consecutively (**Recording1**, **Recording2**, and so on).



**Find the Feature** Start  > More > More > **Voice Recorder**

**Tip:** On the Home screen, press and hold  down to quickly open **Voice Recorder**.



## Creating a Voice Note

### Action



- 1 Hold your phone's microphone near your mouth.
- 2 Press **Record**  to begin recording your voice note.
- 3 Press **Stop**  to stop recording your voice note.

**Note:** The length of time to record a voice note depends on the remaining phone storage.

## Playing a Voice Note

### Press

### To

- 1  scroll to a desired voice note
- 2 **Action**  play the voice note

## Using Calculator

You can use **Calculator** to perform any of the standard operations for which you would normally use a handheld calculator. **Calculator** performs basic arithmetic, such as addition, subtraction, multiplication, and division.

### Find the Feature





**Start**  > **More** > **More** > **More** > **Accessories** > **Calculator**


### Press

### To

- 1 number keys enter numbers



Press	To
2 	select a mathematical symbol
3 	enter a decimal point
4 <b>Clear</b> 	delete the last input
or	
<b>Back</b> 	
5 <b>Action</b> (○)	perform the calculation

**Tip:** You can also press  to display the available mathematical symbols. Press Up for the plus sign (+), Down for the minus sign (-), Left for the division sign (/), and Right for the multiplication sign (x).



# Security

---

Use **Security** settings to turn on phone lock or SIM lock and to set the phone lock password.

## **Locking and Unlocking the Keypad**

The keypad lock turns off the keypad function to prevent accidental keypresses.

### **Locking the Keypad**

On the Home screen:

#### **Action**



Press and hold **End** . The left soft key displays **Unlock**, indicating that the keypad is locked.

---

---

### **Unlocking the Keypad**

On the Home screen:

	<b>Press</b>	<b>To</b>
1	<b>Unlock</b> 	prepare to unlock the keypad
2		unlock the keypad

---

---

**Tip:** You still can receive calls and make emergency calls when the keypad is locked.






# Locking and Unlocking Your Phone

Locking the phone prevents access to personal data. When you turn on this feature, the phone automatically locks after a specified time of inactivity. A screen displays requiring your phone lock password before access is granted.

**Tip:** You still can receive calls and make emergency calls when the phone is locked.


## Locking the Phone

On the Home screen:

Press	To
1 Home  for a while	open the <b>Quick List</b>
2 	scroll to <b>Device lock</b>
3 <b>Action</b> (○)	select <b>Device lock</b>
4  left/right	select a time period the phone is inactive before it automatically locks under <b>Lock phone after</b>
5 keypad keys	enter the password you want to use to access the phone when it is locked under <b>Password</b>







Press	To
6 keypad keys	enter the password again under <b>Confirm password</b>
7 <b>Done</b> 	save the settings

**Tip:** After you select the time delay and create a password, you can quickly lock your phone from the **Quick List**, without having to view these settings.


## Unlocking the Phone

On the Home screen:

Press	To
1 <b>Unlock</b> 	prepare to enter the password
2 keypad keys	enter the password
3 <b>Unlock</b> 	unlock the phone

## Turning Off Phone Lock

**Find the Feature**      **Start**  > **Settings** > **More** > **Security**

Press	To
1 	scroll to <b>Disable Phone Lock</b>
2 <b>Action</b> (○)	turn off phone lock




# Locking and Unlocking Your SIM Card

Locking the SIM card prevents you and others from using your phone until the correct password is entered. You still can make emergency calls when the SIM card is locked.


## Locking the SIM Card

**Find the Feature** Start  > Settings > More > Security > Enable SIM Lock

Press	To
1 keypad keys	enter your PIN1 password
2 Done 	lock your SIM card

## Unlocking the SIM Card

**Find the Feature** Start  > Settings > More > Security > Disable SIM Lock

Press	To
1 keypad keys	enter your PIN1 password
2 Done 	unlock your SIM card



# News and Entertainment





## Taking Pictures

You can capture images and store them in your phone or memory card. There are 3 different modes to capture photos: **Normal**, **Timer**, and **Burst**.









### Using Normal Mode

**Normal** mode is selected as the default when you launch **Camera**.


**Find the Feature**      Start  > **More** > **Camera**

	<b>Press</b>	<b>To</b>
1	 up/down	zoom in/out (when the flip is opened and the internal viewer is used)
2	 left/right	decrease/increase the brightness




Press	To
3 <b>Capture</b>  / <b>Action</b>  / 	take a picture (when the flip is opened and the internal viewer is used)
<b>or</b>	<b>or</b>
	take a picture (when the flip is closed and the external viewer is used)
4 <b>Menu</b> 	open the options menu
5 <b>Action</b> 	select <b>Store in Album</b> and the picture is saved in <b>Start</b>  > <b>More &gt; PhotoAlbum</b>
	<b>Tip:</b> Press <b>Discard</b>  if you do not want to save the current photo.



The menu options before taking pictures are described below.

Option	Description
<b>Mode</b>	switch between <b>Normal</b> , <b>Timer</b> , and <b>Burst</b> modes
<b>Enable/Disable Flash</b>	turn on/off the flash
<b>Settings</b>	open the <b>Camera Settings</b> menu (see below)
<b>Browse Photos</b>	go to <b>Start</b>  > <b>More &gt; PhotoAlbum</b> to view photos




Option	Description
<b>Record Video</b>	go to <b>Start</b>  > <b>More</b> > <b>More</b> > <b>More</b> > <b>Accessories</b> > <b>Camcorder</b> to create video clips

The menu options after taking pictures are described below.

Option	Description
<b>Store in Album</b>	store the photo in <b>Start</b>  > <b>More</b> > <b>PhotoAlbum</b>
<b>Send in Message</b>	open <b>Start</b>  > <b>Messaging</b> > <b>Media Messages</b> with the photo attached
<b>Apply as Wallpaper</b>	set the photo as your wallpaper (Choose either <b>Fit in</b> or <b>Best fit</b> . The former displays the entire photo, which may leave blank areas depending on the aspect ratio. The latter crops the photo and fills it entirely on the screen.)
<b>Attach to Contact</b>	set the photo as Caller ID to the selected contact (The photo displays when you receive the call.)

The **Camera Settings** menu options are described below.

Option	Description
<b>White balance</b>	choose from a variety of presets depending on your shooting conditions
<b>Resolution</b>	select the size of captured photos (The higher the resolution, the more space required to store the image on your phone.)
<b>Storage folder</b>	choose a different folder to store your captured photos by pressing <b>Change</b> 
<b>File size restriction</b>	choose to keep your files under <b>100KB</b> , or place no constraint at all
<b>Max idle time</b>	set the time it takes for the camera to turn off when no action is taken in order to conserve power
<b>Name prefix</b>	enter in a prefix to save as the file name of your captured photos
<b>Time stamp on picture</b>	check this feature to include an overlay of the date on all of your captured photos
<b>Contrast</b>	set the default contrast for the viewer
<b>Hue</b>	set the default hue for the viewer
<b>Saturation</b>	set the default saturation for the viewer








Option	Description
<b>Self-imaging Timer</b>	set the duration of the timer for use when taking delayed photos in <b>Timer</b> mode
<b>Max burst number</b>	set the maximum number of images that can be taken at a time while in <b>Burst</b> mode

## Using Timer Mode

Controls here are almost identical to **Normal** mode.

**Find the Feature**    **Start**  > **More** > **Camera** >  
**Menu**  > **Mode** > **Timer**

Press	To
1 <b>Start</b> 	take a picture  <b>Note:</b> There is a delay before the photo is taken. Your phone will beep for each second of the countdown (which can be adjusted in <b>Menu</b>  > <b>Settings</b> > <b>Self-imaging Timer</b> ).
2 <b>Menu</b> 	open the options menu



Press	To
3 <b>Action</b> (○)	select <b>Store in Album</b> and the picture is saved in <b>Start</b> [ ] > <b>More</b> > <b>PhotoAlbum</b>  <b>Tip:</b> Press <b>Discard</b> [ ] if you do not want to save the current photo.

## Using Burst Mode

**Find the Feature**      **Start** [ ] > **More** > **Camera** > **Menu** [ ] > **Mode** > **Burst**

Press	To
1 <b>Start</b> [ ]	take pictures
2 <b>Stop</b> [ ]	stop taking pictures and the pictures are stored in <b>Start</b> [ ] > <b>More</b> > <b>PhotoAlbum</b>

## Using Self-Shot

You can take a shot of yourself and store it in your phone or memory card.

**Find the Feature**      **Start** [ ] > **More** > **Camera**

Action
1 Close the phone flip and use the external viewer to capture images.
2 Press (Ⓜ) to take your picture.



## Action

- 3 Open the phone flip.
- 4 Press **Menu**  > **Action**  to save the picture in **Start**  > **More** > **PhotoAlbum**.


## Managing Pictures


You can use **PhotoAlbum** to view and edit images on your phone and send them via MMS, email, Bluetooth, or infrared. **PhotoAlbum** consists of 2 different modes: **Album** view and **Single Photo** view.

### Using Album View

This view displays thumbnail images of photos stored in a specific directory.

**Find the Feature**      **Start**  > **More** > **PhotoAlbum**

To open a photo, press the corresponding number. Or, press  to highlight the desired thumbnail and press



 
**Open**  . See “Using Single Photo View” on page 168 for details on viewing single photos.

The menu options for **Album** view are described below.

Option	Description
<b>Take new photo</b>	go to <b>Start</b>  > <b>More</b> > <b>Camera</b> to take photos





Option	Description
<b>Send via</b>	send the current photo via MMS, email, Bluetooth, or infrared
<b>Move</b>	move the current photo to a folder of your choice
<b>Copy</b>	copy the current photo to a folder of your choice
<b>Rename</b>	change the name of the current photo
<b>Delete</b>	remove the current photo
<b>Properties</b>	display the current photo's resolution, date, color depth, etc.
<b>Slide Show</b>	play a slide show of all the photos in the current location
<b>Change Folder</b>	display photos contained in another folder of your choice
<b>Attach to Contact</b>	associate the current photo with a contact of your choice by pressing <b>Attach</b> 
<b>View Photo Contacts</b>	display a list of your contacts and let you detach any associated photos by pressing <b>Detach</b> 
<b>Play Video</b>	go to <b>Start</b>  > <b>More</b> > <b>More</b> > <b>More</b> > <b>Accessories</b> > <b>Video Player</b> to play video clips











## Using Single Photo View

This view displays each photo on the screen.



**Find the Feature** Start  > **More** > **PhotoAlbum**





Press different keys to do the following:

- To open a photo, press the corresponding number. Or, press  to highlight the desired thumbnail and press **Open** .
- Press  up/left to display the previous photo in the current folder (if any) or press  down/right to display the next photo in the current folder (if any).
- Press **Action**  or **Back**  to return to **Album** view.
- Press **Zoom**  to zoom in/out commands. Press **Zoom in**  to magnify; press **Zoom out**  to minify. If your photo does not fit entirely on the display when zooming, press  to scroll.






The menu options for **Single Photo** view are described below.

Option	Description
<b>Rotate Left</b>	rotate your photo 90 degrees to the left
<b>Rotate Right</b>	rotate your photo 90 degrees to the right






Option	Description
<b>Crop</b>	isolate a specific area of the photo (A crop box will appear, everything outside of the box will be removed. You can adjust the position and size of the box using the following 2 menu options.)
> <b>Move</b>	press  to move the crop box (Press <b>Action</b>  to toggle between <b>Move</b> and <b>Resize</b> for ease of use.)
> <b>Resize</b>	press  to resize the crop box (Press Up/Down to decrease/increase height; press Left/Right to make it narrower/wider. Press <b>Crop It</b>  when you are ready.)
<b>Add Text</b>	add additional lines of text to your photo using the following 5 menu options
> <b>Edit text</b>	modify the current line
> <b>Delete text</b>	remove the current line
> <b>Change color</b>	change the color of the current line
> <b>Font size</b>	change the size of the current line
> <b>Switch</b>	switch to the previous or next line of text to edit it



Option	Description
<b>Add Clip Art</b>	add a variety of fun and unusual images to your photo (The following 5 menu options are related to this feature.)
> <b>Resize</b>	press  to resize the clip art (Press Up/Left to make it smaller; press Down/Right to make it larger.)
> <b>Reposition</b>	press  to move the clip art around your photo (This is the default selection.)
> <b>Rotate</b>	press  up/left to rotate the clip art to the left; press  down/right to rotate the clip art to the right
> <b>Switch</b>	switch between different pieces of clip art you added
> <b>Remove</b>	remove the current piece of clip art
<b>Add Frame</b>	add a comical frame around your photo (The following 7 menu options are related to this feature.)
> <b>Reposition</b>	press  to move your photo within the frame (This is the default selection.)










Option	Description
> <b>Resize</b>	press  to resize the photo (Press Up/Left to make it smaller; press Down/Right to make it larger.)
> <b>Rotate</b>	press  up/left to rotate the photo to the left; press  down/right to rotate the photo to the right
> <b>Flip horizontal</b>	create a mirror image of your photo over the horizontal axis
> <b>Flip vertical</b>	create a mirror image of your photo over the vertical axis
> <b>Crop</b>	isolate a specific area of the photo (A crop box will appear, everything outside of the box will be removed. You can adjust the position and size of the box using the 2 menu options: <b>Move</b> and <b>Resize</b> .)
> <b>Change frame</b>	select a different template
<b>Previous Photo</b>	display the previous photo in the current location
<b>Next Photo</b>	display the next photo in the current location

# Creating Video Clips

You can record video clips with or without audio and store them in your phone or memory card.

## Find the Feature

**Start**  > **More** > **More** > **More** > **Accessories** > **Camcorder**

Press	To
1  left/right	decrease/increase camera brightness level
2 <b>Record</b> 	record a video clip
3 <b>Pause</b> 	pause recording <b>Tip:</b> Press <b>Action</b> (○) to toggle between the <b>Record</b> and <b>Pause</b> states.
4 <b>Stop</b> 	stop recording
5 <b>Save</b> 	save your recording in <b>Start</b>  > <b>More</b> > <b>More</b> > <b>More</b> > <b>Accessories</b> > <b>Video Player</b> <b>Note:</b> If you do not make a selection within 3 seconds after stopping the recording, the recorded clip is automatically saved. Or press <b>Delete</b>  to delete your recording.



The menu options for **Camcorder** are described below.

Option	Description
<b>Video player</b>	launch <b>Camcorder</b>
<b>Image viewer</b>	launch <b>PhotoAlbum</b>
<b>Take Photo</b>	launch <b>Camera</b>
<b>Settings</b>	open the <b>Camcorder Settings</b> menu (see below)
<b>Audio</b>	turn on/off audio capture
<b>About</b>	open the <b>About</b> dialog
<b>Exit</b>	exit from <b>Camcorder</b>

The **Camcorder Settings** menu options are described below.

Option	Description
<b>Clip storage</b>	select storage location of the recorded clips ( <b>Camcorder</b> at startup determines <b>Storage card</b> as storage location if it is inserted. If no storage card is detected the value for <b>Clip storage</b> is changed to <b>Phone memory</b> .)
<b>Contrast</b>	adjust the recording contrast value
<b>Brightness</b>	adjust the recording brightness value
<b>Record quality</b>	switch among preset quality settings
<b>Audio</b>	turn on/off audio capture
<b>Max clip size</b>	specify maximum file size for a video clip
<b>Clip name</b>	select the default file name for the clip







Option	Description
<b>Title</b>	enter in the title of the clip
<b>Author</b>	enter in the author name of the clip
<b>Copyright</b>	enter in the copyright info of the clip
<b>Rating</b>	enter in the clip rating
<b>Description</b>	enter in the clip description

## Playing Video Clips





You can play the recorded clips directly from your phone or memory card. You can also simultaneously download and play streaming clips from a Web site.


**Tip:** For best results and performance, store clips on the storage card instead of the phone memory.

### Viewing a Clip Stored on Your Phone Or Memory Card

#### Find the Feature


Start  > More > More > More > Accessories > Video Player

Press	To
1 	scroll to a desired clip
2 <b>Play</b> 	play the clip
	<b>Tip:</b> Press <b>Pause</b>  to pause playing; press <b>Stop</b>  to stop playing.

**Tip:** While the clip is playing, press and hold  left/right to reposition forward/backward in the clip. A single movement to the left or right position will reposition the clip to the end or beginning of the clip.

The menu options for **Video Player** are described below.



Option	Description
<b>Play/Pause</b>	play/pause a clip from the list
<b>Open URL</b>	edit a URL to link with
<b>Camera</b>	launch <b>Camcorder</b>
<b>File &gt; Rename/Delete/Move to storage card</b>	rename a clip/delete a clip/move a clip to the memory card
<b>Send via MMS</b>	send an MMS message with a clip attached
<b>Properties</b>	display a clip info
<b>Options &gt; Media Buffer</b>	control the amount of data that is stored before playback begins (Increasing the media buffer may improve the consistency of your viewing experience, but will increase the time before the media playback starts.)
<b>Options &gt; Menu  &gt; Clear Cache</b>	clear the last download clip from your phone's cache memory
<b>About</b>	open the <b>About</b> dialog






## Viewing a Live Stream from a Web Site




### Find the Feature

Start  > Internet Explorer >

Menu  > Address Bar

Press	To
1 keypad keys	enter the Web address
2 <b>Go</b> 	connect to the Web address
3 	scroll to a desired stream
4 <b>Action</b> (○)	play the stream

**Tip:** You can play a stream/clip directly from a link in email. Once you select the link and press **Action** (○), **Video Player** will start playing the stream/clip. While the clip is playing, press and hold  left/right to reposition forward/backward in the clip. A single movement to the left or right position will reposition the clip to the end or beginning of the clip.

The related menu options are described below.

Option	Description
<b>Play</b>	play a clip you paused
<b>Pause</b>	pause a clip or stop a stream that is playing (This option is not available for live streaming.)




Option	Description
<b>Clips</b>	display a list of clips stored on your phone or memory card
<b>Save</b>	save a clip to your phone or memory card (This option is not available for live streaming.)
<b>Options &gt; Media Buffer</b>	see above (This option is not available for live streaming.)

## Using Internet Explorer®



Using **Internet Explorer**, you can browse the Web on your phone. **Internet Explorer** supports Wireless Application Protocol (WAP), Hypertext Markup Language (HTML), and compact Hypertext Markup Language (cHTML). It also supports images and sounds, but does not support frames on a Web page. With **Internet Explorer**, the Favorites list is displayed as the main screen instead of a home page. You can add your own favorites to this list for quick access to Web sites you frequently visit.

**Find the Feature**      **Start**  > **Internet Explorer**

**Tip:** While you are connected to the Internet, to change between **Internet Explorer** and other programs on your phone, press **Home**  . This will not close your Internet connection.

## Viewing a Favorite



Press	To
1	scroll to a desired favorite
2 Go	connect to the favorite

## Returning to the Previous Web Page

Press	To
Back	go to the previous Web page in the same session


## Disconnecting from the Internet

Press	To
End	disconnect from the Internet

Use the menu options to do the following:

Option	Description
Address Bar	edit a Web address and link to it by pressing Go
Address Bar > View History	press Go  to view a list of the most recently-visited Web pages
Refresh	update the Web pages you visited



Option	Description
<b>Add Favorite</b>	add a Web page to your Favorites list (Enter a name for the Web site as you want it to appear on the Favorites list. Press <b>Add</b>  when you are ready.)
<b>Favorites</b>	open the Favorites list
<b>Layout</b>	specify how Web pages display
<b>Properties</b>	view the Web page info
<b>Add Folder</b>	create a new folder in your Favorites list
<b>Edit</b>	edit the current favorite/folder
<b>Delete</b>	delete the current favorite/folder
<b>Options &gt; General</b>	change the way Web pages are downloaded and displayed (You can omit displaying images, turn off sound, request a warning before moving from secure Web pages to insecure Web pages, allow cookies, or change the language.)
<b>Options &gt; Connections</b>	change your network connection
<b>Options &gt; Memory</b>	clear your temporary Internet files, cookies, and Web history

# Using Media Player







Using **Windows Media**® 9.0 or later, you can play media audio and video files and MP3 audio files stored on your phone or memory card.

## Find the Feature

Start  > More > More  
> Windows Media

## Playing a Media File on Your Phone

On the **Local Content** screen:

	Press	To
1		scroll to a desired file
2	<b>Play</b> 	play the file
3	 left	skip to the beginning of the current file
4	 left twice	skip to the beginning of the previous file
5	 right	skip to the next file
6	 up/down	increase/decrease the volume

**Tip:** To access the **Local Content** screen, press **Playlist**  .

The related menu options are described below.




Option	Description
<b>Local Content</b>	display the <b>Local Content</b> playlist
<b>Favorites</b>	display the <b>Favorites</b> playlist
<b>Open URL</b>	play a streaming media file on a network
<b>Properties</b>	display information about the selected file
<b>Settings</b>	adjust the volume and specify various playback options (For example, to play files randomly, check <b>Shuffle</b> ; to play files repeatedly, check <b>Repeat</b> ; and to stop playback while using another program, check <b>Background play</b> .)
<b>Delete</b>	delete the selected file



## Playing a Streaming Media File on a Network




On the **Local Content** screen:

Press	To
1 <b>Menu</b> 	open the options menu
2 	scroll to <b>Open URL</b>
3 <b>Action</b> 	select <b>Open URL</b>
4 keypad keys	edit the URL





Press	To
5 Play 	connect and play the streaming media file

The following table lists the menu options that are available when you play a file.

Option	Description
<b>Play/Pause</b>	play/pause the current file
<b>Next</b>	skip to the next file on the current playlist
<b>Previous</b>	skip to the beginning of the current file (If no file is playing, this option skips to the previous file on the current playlist.)
<b>Full Screen</b>	play the current file in full screen
<b>Open URL</b>	play a streaming media file on a network
<b>Properties</b>	display information about the current file that is playing
<b>Settings</b>	adjust the volume and specify various playback options
<b>Add to Favorites</b>	add the current file to the <b>Favorites</b> playlist

# Managing Digital Rights Management (DRM) Content


**Media Manager** allows you to maintain digital rights management (DRM) associated with your media content including images, video clips, audio files and ring tones.

Some digital media content from the Internet, CD tracks, and videos have associated licenses that protect them from being unlawfully distributed or shared. Licenses are managed and created using DRM, which is the technology for securing content and managing the rights for its access.

To ensure that the license is copied with the content, use the Portable Device (or Copy to CD or Device) feature in Windows Media Player 9.0 or later on your desktop computer to copy content to your phone. For more information about copying content to your phone, see the Windows Media Player Help on your desktop computer.



**Find the Feature**      Start  > More > Media Manager

To manage DRM content for a specific media type, follow the steps below:

Press	To
1 	scroll to a desired media type
2 <b>Action</b> (○)	select the media type





Press	To
3 	scroll to a desired DRM-protected content  <b>Note:</b> You are presented with each file is marked with an icon that gives you a quick overview on the rights status associated with each media object. There are 6 different status markers: <ul style="list-style-type: none"> <li>• Not a DRM object</li> <li>• Valid rights</li> <li>• Expired/renewable rights</li> <li>• Pending rights</li> <li>• Rights that are about to expire</li> <li>• Expired/non-renewable rights</li> </ul>
4 <b>Menu</b> 	open the options menu

Once you find the content you are searching for, you are prompted with a context-sensitive menu that provides you with multiple management options.

Option	Description
<b>Send As...</b>	transfer a file to another remote device using either the Bluetooth wireless protocol or IR



Option	Description
<b>Renew Rights</b>	launch <b>Internet Explorer</b> and direct you to a URL address where you can renew the rights for a media object
<b>Show Rights</b>	provide more specific details concerning the rights for a media object
<b>Delete File</b>	delete a DRM-protected file and all the licenses associated with it <b>Note:</b> If a non-DRM file is selected for deletion, only the file itself will be removed.
<b>Set as Ring Tone</b>	specify the selected media file as the default ring tone for your phone <b>Note:</b> This option is available only for <b>Ringtones</b> .



## Playing Games


**Caution:** A very small percentage of individuals may experience epileptic seizures when exposed to certain light patterns or flashing lights. If you experience any of the following symptoms while playing a video game—dizziness, altered vision, eye or muscle twitches, loss of awareness, disorientation, any involuntary movement, or convulsions—**IMMEDIATELY** discontinue use and consult your physician before resuming play.

## Playing Jawbreaker


The object of **Jawbreaker** is to have balls (more than 1) in the same color deleted from the screen. The fewer balls you leave behind, the more scores you get.

**Find the Feature** Start  > **More** > **More** > **More** > **Games** > **Jawbreaker**

Press	To
1 	highlight the ball which is the same color as the ball(s) around
2 <b>Action</b> (  ) twice	delete the balls from the screen

**Tip:** To start a new game, press **New**  .

The related menu options are described below.

Option	Description
<b>Undo</b>	undo the balls you just deleted
<b>New Game</b>	start a new game
<b>Statistics</b>	select a style to display the related records (Press <b>Reset</b>  to clear the records of the selected style.)
<b>Options</b>	turn on/off the play sounds and guest mode, and select a style and color
<b>About</b>	open the <b>About</b> dialog



## Playing Solitaire

The object of **Solitaire** is to use all the cards in the deck to build up 4 suit stacks in ascending order, beginning with the aces. You win the game when all cards are on the suit stacks.






**Find the Feature** Start  > More > More > More  
> Games > Solitaire

### Action

1 Press the number or character above the card stack displaying the card you want to move, and press the number or character above the card stack to which you want to move the card.

2 Move any aces on the 7 stacks to the 4 card spaces at the top of the screen, and then make any other available plays.

**Tip:** Press  up to move a card to one of the 4 card stacks on the upper right corner of the screen if it belongs there. For example, if you have an ace displayed in one of the 7 stacks, press the number above the ace, and then press  up. The card that is faced up on the deck is always available for play.

3 When you have made all available plays, press **Draw**  to turn over cards.

# Managing Java



You can play the preset or downloaded Java games and configure Java settings on your phone.



**Find the Feature**

**Start**  **> More > Game Room**






## Playing a Java Game



	<b>Press</b>	<b>To</b>
1		scroll to a desired Java game
2	<b>Action</b> 	play the Java game

## Downloading a Java Game




You can download Java games from the Internet you are surfing on.

	<b>Press</b>	<b>To</b>
1	<b>Download</b> 	open the Favorites list
2		scroll to a desired favorite
	<b>or</b>	<b>or</b>
	<b>Menu</b>  <b>&gt; Address Bar</b>	enter a Web address
3	<b>Go</b> 	connect to the Web page
4		scroll to a desired Java game

Press	To
5 <b>Install</b> 	install the Java game on your phone  <b>Tip:</b> Press <b>Action</b> (○) to run the Java game. To terminate the running Java game, press <b>End</b>  .



The menu options for a Java game are described below.

Option	Description
<b>Remove</b>	delete a Java game except the preset ones
<b>Rename</b>	rename a Java game
<b>Update</b>	update a Java game using the stored information, such as the URL
<b>Options</b>	select required settings (by highlighting a feature > pressing <b>Action</b> (○) > scrolling to a desired option > pressing <b>Action</b> (○)) for a Mobile Information Device application (MIDlet) of a Java game and press <b>Save</b>  when done (Changes to permission settings for a MIDlet in a multi-MIDlet suite will affect the settings for the whole suite.)
<b>Info</b>	display the size of a Java game, version number, vendor, domain and URL from which it was downloaded





Option	Description
Java Info	<p>display the following:</p> <ul style="list-style-type: none"><li>• <b>Connected Limited Device Configuration (CLDC) version number</b></li><li>• <b>Mobile Information Device Profile (MIDP) version number</b></li><li>• <b>Heapsize</b></li><li>• <b>SD Card free space</b></li><li>• <b>Phone storage free space</b></li><li>• <b>JSRs</b></li></ul> <p><b>Note:</b> The heapsize does not reflect the memory installed, but the actual Jbed FastDAC heapsize setting.</p>
Java Settings	sort Java games and turn the backlight on or off
Exit	exit from <b>Game Room</b>

# Troubleshooting

Check these questions first if your phone does not seem to work properly. If you need additional help, contact the Motorola Customer Call Center at 1-800-331-6456 (USA) or 1-800-461-4575 (Canada).

Question	Answer
<b>Cannot turn on the phone?</b>	<ul style="list-style-type: none"><li>• Is the battery empty?</li><li>• Is the battery properly installed?</li><li>• Are the contacts on battery and phone clean? If the contacts appear to be soiled, contact your dealer to clean them.</li></ul>
<b>Your voice cannot be heard.</b>	Have you already turned on the in-call <b>Mute</b> function? Turn it off if necessary.
<b>Cannot use certain call functions?</b>	To use certain advanced call functions (such as <b>Call Forwarding</b> and <b>Call Barring</b> ), you may need to subscribe these services to your operator first.
<b>There are noises during a phone call.</b>	Avoid using the phone near a microwave oven, speaker or TV. Their interference has adverse effect to call quality.







Question	Answer
<p>Unable to make/receive calls?</p>	<ul style="list-style-type: none"> <li>• Is the reception of network signal in good condition? Move to an open space, or a place closer to window.</li> <li>• Is network setup properly? If necessary, try to select your network manually.</li> <li>• Have you already activated the <b>Fixed Dialing</b>, <b>Call Forwarding</b>, and <b>Call Barring</b> functions? If yes, deactivate them temporarily.</li> <li>• Are you using your phone with other SIM cards when the <b>Enable SIM Lock</b> function has been activated? Deactivate the function if necessary.</li> <li>• Check to make sure <b>Flight mode</b> is off.</li> </ul>
<p>Cannot connect to the Internet?</p>	<ul style="list-style-type: none"> <li>• Have you subscribed the Internet (WAP) service to your operator?</li> <li>• Did you enter correct setting parameters (such as APN and IP addresses) in WAP profile setup?</li> </ul>

Question	Answer
<p><b>The battery cannot be charged.</b></p>	<ul style="list-style-type: none"> <li>• Is the battery charger correctly plugged into the battery charger socket on the phone?</li> <li>• Is the power cord of the charger damaged?</li> <li>• Is the battery very old? Replace with a new battery and try again.</li> <li>• If the battery is “deeply discharged” and you plug in a charger, the phone will not display that it is charging. After charging for approximately 15 minutes, disconnect then reconnect the charger to the phone. It will then properly display that it is charging.</li> </ul>
<p><b>Cannot synchronize device with PC?</b></p>	<p>Check the following Web site for several possible solutions:  <a href="http://support.microsoft.com">http://support.microsoft.com</a></p>
<p><b>USB won't connect while using ActiveSync®.</b></p>	<p>Upgrade to the latest version of ActiveSync. Use version 3.7.1 or higher from Microsoft® downloads, available at <a href="http://www.microsoft.com/downloads">http://www.microsoft.com/downloads</a>.</p>





Question	Answer
<p>The standby and talk time is apparently shorter than ever.</p>	<ul style="list-style-type: none"> <li>• Your phone consumes more power when signal reception is poor. Try to move to a better location when you use the phone.</li> <li>• Are you using a new battery? It takes several charge and discharge cycles for the battery to reach its original capacity.</li> <li>• Is the battery very old? Replace it with a new one.</li> <li>• Are you using the phone in very high or low temperature environment? The efficiency of a battery can be effected by ambient temperature.</li> </ul>
<p>Phone appears to operate slowly.</p>	<p>Check the free memory. Go to <b>Start</b>  &gt; <b>Settings</b> &gt; <b>About</b>. It is recommended to have at least 1.5 to 2 MB of free memory storage on your phone. Remember to delete or transfer (to mini SD or computer) old messages and pictures.</p>

Question	Answer
<p><b>Home Screen Layout error message appears.</b></p>	<p>If the Home screen appears white or another color, the Home screen layout may not be selected. An error message <b>Cannot find Home Screen Layout</b> may also appear. To correct this, you need to reselect the Home screen. Go to <b>Start</b>  &gt; <b>Settings</b> &gt; <b>Home Screen</b> and select a Home screen layout.</p>
<p><b>I'm having issues with my email or I can't connect to the GPRS/WAP server.</b></p>	<ul style="list-style-type: none"> <li>• Check your GPRS data connection settings (see “Creating GPRS Connection” on page 109).</li> <li>• Try browsing the Web or your provider's Web site.</li> <li>• Check your email setting: user name, password, server name, and server type (see “Configuring an Email Account” on page 65).</li> <li>• Try connecting to your email server.</li> </ul>



## ***Specific Absorption Rate Data***

---

### ***The model MPx220 GSM wireless phone meets the government's requirements for exposure to radio waves.***

Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission (FCC) of the U.S. Government and by the Canadian regulatory authorities. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age or health.

The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC and by the Canadian regulatory authorities is 1.6 W/kg.<sup>1</sup> Tests for SAR are conducted using standard operating positions accepted by the FCC and by Industry Canada with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station, the lower the power output.

Before a phone model is available for sale to the public in the U.S. and Canada, it must be tested and certified to the FCC and Industry Canada that it does not exceed the limit established by each government for safe exposure. The tests are performed in positions and locations (e.g., at the ear and worn on the body) reported to the FCC and available for review by Industry Canada. The highest SAR value for this model phone when tested for use at the ear is 0.75 W/kg, and when worn on the body, as

described in this user guide, is 0.88 W/kg. The SAR value for this product in its data transmission mode (body-worn use) is 0.56 W/kg. (Body-worn measurements differ among phone models, depending upon available accessories and regulatory requirements).<sup>2</sup>

While there may be differences between the SAR levels of various phones and at various positions, they all meet the governmental requirements for safe exposure. Please note that improvements to this product model could cause differences in the SAR value for later products; in all cases, products are designed to be within the guidelines.

Additional information on Specific Absorption Rates (SAR) can be found on the Cellular Telecommunications & Internet Association (CTIA) Web site:

<http://www.phonefacts.net>

or the Canadian Wireless Telecommunications Association (CWTA) Web site:

<http://www.cwta.ca>

1. In the United States and Canada, the SAR limit for mobile phones used by the public is 1.6 watts/kg (W/kg) averaged over one gram of tissue. The standard incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in measurements.
2. The SAR information includes the Motorola testing protocol, assessment procedure, and measurement uncertainty range for this product.



# **Microsoft End User License Agreement**

---

You have acquired a device (“DEVICE”) that includes software licensed by Motorola, Inc. (“Motorola”) from Microsoft Licensing Inc. or its affiliates (“Microsoft”), for use in connection with wireless network services provided under separate agreement between you and a wireless telecommunications provider (“Mobile Operator”). Those installed software products of Microsoft origin, as well as associated media, printed materials, and “online” or electronic documentation (“SOFTWARE”) are protected by international intellectual property laws and treaties. SOFTWARE includes software already installed on the DEVICE (“DEVICE Software”) and Microsoft software contained on any CD-ROM disk accompanying the DEVICE (“Desktop Software”).

The SOFTWARE is licensed, not sold. All rights reserved.

IF YOU DO NOT AGREE TO THIS END USER LICENSE AGREEMENT (“EULA”), DO NOT USE THE DEVICE OR COPY THE SOFTWARE. INSTEAD, PROMPTLY CONTACT MOTOROLA FOR INSTRUCTIONS ON RETURN OF THE UNUSED DEVICE(S) FOR A REFUND. ANY USE OF THE SOFTWARE, INCLUDING BUT NOT LIMITED TO USE ON THE DEVICE, WILL CONSTITUTE YOUR AGREEMENT TO THIS EULA (OR RATIFICATION OF ANY PREVIOUS CONSENT).

1. GRANT OF SOFTWARE LICENSE. This EULA grants you the following license:

1.1. DEVICE Software. You may use the DEVICE Software as installed on the DEVICE (including as installed on removable media installed in the DEVICE). All or certain portions of the DEVICE Software may be inoperable if a proper account is not established or maintained with an appropriate Mobile Operator, or if the Mobile Operator’s network facilities are not operating or configured to operate with the DEVICE software.

1.2. Desktop Software. Desktop Software is included with your DEVICE, and you may install and use the Microsoft ActiveSync® 3.7.1 component on one (1) or more computers to exchange information with one (1) or more computing devices that contain a compatible version of the Microsoft Windows® for Smartphone 2003 Software. For other software component(s) contained in the Desktop Software, you may install and use such components only in accordance with the terms of the printed or online end user license agreement(s) provided with such component(s). In the absence of an end user license agreement for particular component(s) of the Desktop Software, you may install and use only one (1) copy of such component(s) on the DEVICE or a single computer with which you use the DEVICE.

1.3. Back-up Copy. If Motorola has not included a back-up copy of the DEVICE Software with the DEVICE, you may make a single back-up copy of the DEVICE Software. You may use the back-up copy solely for archival purposes.

1.4. Microsoft Windows® 2003. If Microsoft Outlook® 2002 is included with your Device, the following terms apply to your use of Microsoft Outlook® 2002: (i) regardless of the information contained in "Software Installation and Use" section of the online EULA you may install one (1) copy of Microsoft Outlook® 2002 on one (1) computer to use, exchange data, share data, access and interact with the DEVICE, and (ii) the EULA for Microsoft Outlook® 2002 is between Motorola and the end user - not between the PC manufacturer and end user.

2. Speech/Handwriting Recognition. If the Software includes speech and or handwriting recognition component(s), you should understand that speech and handwriting recognition are inherently statistical processes; that recognition errors are inherent in the processes; that it is your responsibility to provide for handling such errors and to monitor the recognition processes and correct any errors. Neither Motorola nor its suppliers shall be liable for any damages arising out of errors in the speech and handwriting recognition processes.

3. Limitations on Reverse Engineering, Decompilation and Disassembly. You may not reverse engineer, decompile, or disassemble the SOFTWARE, except and only to the extent that such activity is expressly permitted by applicable law notwithstanding this limitation.
4. Single DEVICE. The Device Software is licensed with the DEVICE as a single integrated product. The DEVICE Software may only be used as part of the DEVICE, notwithstanding any installation of the DEVICE Software on removable media.
5. Single EULA. The package for the DEVICE may contain multiple versions of this EULA, such as multiple translations and/or multiple media versions (e.g., in the user documentation and in the software). Even if you receive multiple versions of the EULA, you are licensed to use only one (1) copy of the DEVICE Software.
6. Rental. You may not rent or lease the SOFTWARE.
7. Software Transfer. You may not permanently transfer any of your rights under this EULA with regard to the DEVICE Software or Desktop Software, except as permitted by the applicable Mobile Operator. In the event that the Mobile Operator permits such transfer, you may permanently transfer all of your rights under this EULA only as part of a sale or transfer of the DEVICE, provided you retain no copies, you transfer all of the SOFTWARE (including all component parts, the media and printed materials, any upgrades or backup copies, this EULA and, if applicable, the Certificate(s) of Authenticity), and the recipient agrees to the terms of this EULA. If the Software is an upgrade, any transfer must include all prior versions of the SOFTWARE.
8. Termination. Without prejudice to any other rights, Motorola or Microsoft may terminate this EULA if you fail to comply with the terms and conditions of this EULA. In such event, you must destroy all copies of the SOFTWARE and all of its component parts.
9. Security Updates. The SOFTWARE may include digital rights management technology. If SOFTWARE does contain digital rights management technology, content providers are using the digital rights

management technology (“Microsoft DRM”) contained in the SOFTWARE to protect the integrity of their content (“Secure Content”) so that their intellectual property, including copyright, in such content is not misappropriated. Owners of such Secure Content (“Secure Content Owners”) may, from time to time, request Microsoft, Microsoft Corporation or their subsidiaries to provide security related updates to the Microsoft DRM components of the SOFTWARE (“Security Updates”) that may affect your ability to copy, display and/or play Secure Content through Microsoft software or third party applications that utilize Microsoft DRM. You therefore agree that, if you elect to download a license from the Internet which enables your use of Secure Content, Microsoft Corporation or their subsidiaries may, in conjunction with such license, also download onto your DEVICE such Security Updates that a Secure Content Owner has requested that Microsoft, Microsoft Corporation or their subsidiaries distribute. Microsoft, Microsoft Corporation or their subsidiaries will not retrieve any personally identifiable information, or any other information, from your DEVICE by downloading such Security Updates.

10. Consent to Use of Data. You agree that Microsoft, Microsoft Corporation and their affiliates may collect and use technical information gathered in any manner as part of product support services related to the SOFTWARE. Microsoft, Microsoft Corporation and their affiliates may use this information solely to improve their products or to provide customized services or technologies to you. Microsoft, Microsoft Corporation and their affiliates may disclose this information to others, but not in a form that personally identifies you.

11. Internet Gaming/Update Features. If the SOFTWARE provides, and you choose to utilize, the Internet gaming or update features within the SOFTWARE, it is necessary to use certain computer system, hardware, and software information to implement the features. By using these features, you explicitly authorize Microsoft, Microsoft Corporation and/or their designated agent to use this information solely to improve their products or to provide customized services or technologies to you. Microsoft or Microsoft Corporation may disclose this information to others, but not in a form that personally identifies you.

12. Internet-Based Services Components. The SOFTWARE may contain components that enable and facilitate the use of certain Internet-based services. You acknowledge and agree that Microsoft Corporation or their affiliates may automatically check the version of the SOFTWARE and/or its components that you are utilizing and may provide upgrades or supplements to the SOFTWARE that may be automatically downloaded to your Device.

13. Links to Third Party Sites. The SOFTWARE may provide you with the ability to link to third party sites through the use of the SOFTWARE. The third party sites are NOT under the control of Motorola, Microsoft, Microsoft Corporation or their affiliates. Neither Motorola, Microsoft nor Microsoft Corporation nor their affiliates are responsible for (i) the contents of any third party sites, any links contained in third sites, or any changes or updates to third party sites, or (ii) webcasting or any other form of transmission received from any third party sites. If the SOFTWARE provides links to third party sites, those links are provided to you only as a convenience, and the inclusion of any link does not imply an endorsement of the third party site by Motorola, Microsoft, Microsoft Corporation or their affiliates.

14. Additional Software/Services. The SOFTWARE may permit Motorola, Microsoft, Microsoft Corporation or their affiliates to provide or make available to you SOFTWARE updates, supplements, add-on components, or Internet-based services components of the SOFTWARE after the date you obtain your initial copy of the SOFTWARE ("Supplemental Components").

14.1. If Motorola provides or makes available to you Supplemental Components and no other EULA terms are provided along with the Supplemental Components, then the terms of this EULA shall apply.

14.2. If Microsoft, Microsoft Corporation or their affiliates make available Supplemental Components, and no other EULA terms are provided, then the terms of this EULA shall apply, except that the Microsoft, Microsoft Corporation or affiliate entity providing the Supplemental Component(s) shall be the licensor of the Supplemental Component(s).

14.3. Motorola, Microsoft, Microsoft Corporation and their affiliates reserve the right to discontinue any Internet-based services provided to you or made available to you through the use of the SOFTWARE.

#### 15. UPGRADES AND RECOVERY MEDIA.

15.1. DEVICE Software. If the DEVICE Software is provided by Motorola separate from the DEVICE on media such as a ROM chip, CD ROM disk(s) or via web download or other means, and is labeled “For Upgrade Purposes Only” or “For Recovery Purposes Only”, you may install one copy of such DEVICE Software on the DEVICE as a replacement copy for the existing DEVICE Software and use it in accordance with the Grant of Software License section of this EULA.

15.2. Desktop Software. If any Desktop Software component(s) is provided by Motorola separate from the DEVICE on CD ROM disk(s) or via web download or other means, and labeled “For Upgrade Purposes Only” or “For Recovery Purposes Only”, you may (i) install and use one copy of such component(s) on the computer(s) you use to exchange data with the DEVICE as a replacement copy for the existing Desktop Software component(s).

16. COPYRIGHT. All title and intellectual property rights in and to the SOFTWARE (including but not limited to any images, photographs, animations, video, audio, music, text and “applets”, incorporated into the SOFTWARE), the accompanying printed materials, and any copies of the SOFTWARE, are owned by Microsoft or its suppliers (including Microsoft Corporation). You may not copy the printed materials accompanying the SOFTWARE. All title and intellectual property rights in and to the content which may be accessed through use of the SOFTWARE is the property of the respective content owner and may be protected by applicable copyright or other intellectual property laws and treaties. This EULA grants you no rights to use such content. All rights not specifically granted under this EULA are reserved by Microsoft and its suppliers (including Microsoft Corporation).

17. EXPORT RESTRICTIONS. You acknowledge that SOFTWARE is subject to U.S. export jurisdiction. You agree to comply with all applicable

international and national laws that apply to the SOFTWARE, including the U.S. Export Administration Regulations, as well as end-user, end-use and destination restrictions issued by U.S. and other governments. For additional information, see <http://www.microsoft.com/exporting/>.

18. **PRODUCT SUPPORT.** Product support for the SOFTWARE is NOT provided by Microsoft, its parent corporation, Microsoft Corporation, or their affiliates or subsidiaries.

19. **NO LIABILITY FOR CERTAIN DAMAGES.** EXCEPT AS PROHIBITED BY LAW, MICROSOFT SHALL HAVE NO LIABILITY FOR ANY INDIRECT, SPECIAL, CONSEQUENTIAL OR INCIDENTAL DAMAGES ARISING FROM OR IN CONNECTION WITH THE USE OR PERFORMANCE OF THE SOFTWARE. THIS LIMITATION SHALL APPLY EVEN IF ANY REMEDY FAILS OF ITS ESSENTIAL PURPOSE.

20. **FOR APPLICABLE LIMITED WARRANTIES AND SPECIAL PROVISIONS PERTAINING TO YOUR PARTICULAR JURISDICTION, PLEASE REFER TO YOUR WARRANTY BOOKLET INCLUDED WITH THIS PACKAGE OR PROVIDED WITH THE SOFTWARE PRINTED MATERIALS.**

# Index

---

## A

- a 123
- About 38
- Accessibility 95
- accessories 17, 18
- ActiveSync 110
  - Installing 111
- answering a call 25

## B

- battery
  - charging 20
  - extending battery life 21
  - installing 19
  - level indicator 20, 21, 22
- Beaming Information 120
- block cursor 157

## C

- Calculator 154
- Calendar 148
  - Schedule 149
- Call 50
- call
  - answering 25
  - dialing 23
  - ending 96, 97

making 23

receiving 25

- Call Barring 89
- Call Forwarding 89
- Call Options 89
- Call Waiting 55
- Caller ID 25, 28, 89, 162
- Calling with Speed Dial 53
- Camcorder 172
- Camera 160
- Channels 89
- Contact cards 145
- Contacts 143
- Contacts list 143

## D

- Data Connection 104
- Data Connections
  - Dial-up connection 105
  - Proxy connection 108
  - VPN connection 107
- Date and Time 39
- dialing a number 23
- Digital 183
- Display 28
  - External display 28
  - Main display 28
- display



description 26  
idle display 33  
idle display, defined 26

## E

Emergency calls 51  
end key 96, 97  
ending 25  
ending a call 96, 97

## F

Favorites Manager 132,  
133

File Manager 138

Fixed Dialing 89

flip

activating 25

## H

Home Screen 94

Customizing 94

## I

idle display 26

idle display, defined 33

indicators

battery level 20, 21, 22

Input modes 34, 35

Multipress mode 35

Numeric mode 37

Internal Display 26

Internet Explorer 177

iTAP modes 34

## J

Java 188

Jawbreaker 186

## K

key

end 96, 97

send 23, 25, 42, 96, 97

Keypad

Locking 38

Unlocking 156

## L

Lock 38

lock

phone 159

Locking the keypad 38

Locking the SIM card 159

## M

making a call 23

Media 180

Media Player 180, 183

menu

navigating 33

Messaging 58, 70

MMSSettings 65

Modem Link 126, 127, 128

MSN Messenger 82  
Multi-Tap Mode 35

## **N**

Networks 89

## **O**

optional accessory, defined  
18  
optional feature, defined 17  
Owner Information 39

## **P**

Phone 88  
phone  
flip 25  
locking 159  
turning on/off 22  
unlocking 159  
Phone Settings 95  
PhotoAlbum 166  
Player 174  
Power Management 40  
Profiles 91  
Viewing 91

## **Q**

Quick List 29, 33

## **R**

Regional Settings 95

Remove Programs 142  
Resource Manager 140

## **S**

Security 156  
send key 23, 25, 42, 96, 97  
Shortcuts  
Viewing 101, 102, 103  
shortcuts 4  
SIM card  
defined 18  
installing 18  
Locking 159  
precautions 18  
Unlocking 159  
Solitaire 187  
Sounds 90  
Customizing 90  
Displaying 90  
Space Manager 140  
Speed dials 54, 99  
standard display 26

## **T**

Taking 160  
Task Manager 140  
Tasks 152  
text  
block cursor 157  
travel charger 20, 165

## **U**

unlock

    phone 159

Using Phone Settings 88

## **V**

Voice Notes 153

Voice Recorder 153

Voice Signal 44, 100

VoiceSignal 48

## **W**

Windows Media 180

DRAFT



**motorola.com**