



 
MOTOMANUAL

RAZR V3c
CDMA
English


hellomoto.com

Welcome

We are pleased that you have chosen the Motorola RAZR V3c wireless phone.

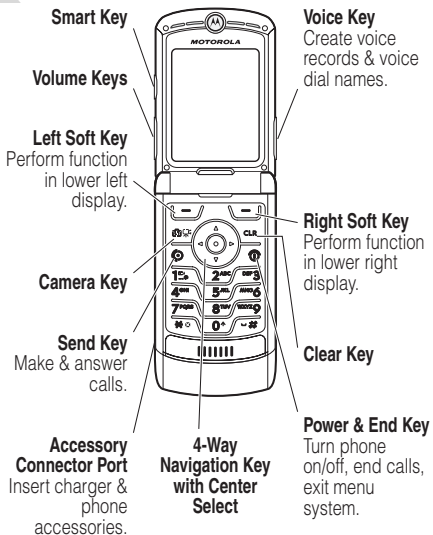

Check It Out!

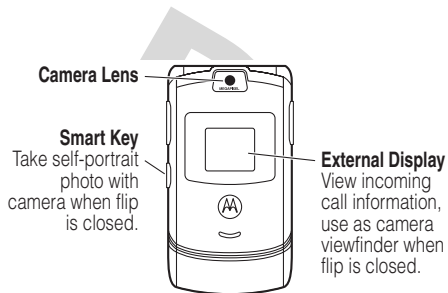 

Features

Download Picture

Press **OK** (•◊•) left to open **GET PIX & FLIX**.



Scroll down to **Get New PIX** and press **OK** (•◊•). With **Get New** highlighted, press **OK** (•◊•) to connect with **Get It Now**.

Normal airtime and/or carrier usage charges apply.

Download V CAST Video

Press **OK** (•◊•) left to open **GET PIX & FLIX**.





Scroll to **Get V CAST Video** and press **OK** (•◊•).



Normal airtime and/or carrier usage charges apply.

Features

Take Photo

Open the phone, press the camera key  to activate the camera, point lens at subject and press **TAKE** () to take a photo.

Send Photo

After you press **TAKE** () to take a photo:
Press **SEND** () to save the photo and go to the **CREATE PIX MESSAGE** screen.

Send Picture Message

Send a picture message with pictures, animations, or sounds:

MENU () ▶  **Messaging**
▼ **New Pix Msg**



Features

Send Text Message

Send a text message:

MENU () ▶  **Messaging**
▼ **New Txt Msg**



Read Message

Read a new message that you have received:

MENU () ▶  **Messaging** ▼ **Inbox**
▼ *message* ▼ **Open** ()



Motorola, Inc.
Consumer Advocacy Office
1307 East Algonquin Road
Schaumburg, IL 60196

1-800-331-6456 (United States)
1-888-390-6456 (TTY/TDD United States for hearing
impaired)
1-800-461-4575 (Canada)

www.motorola.com (United States)
www.motorola.ca (Canada)

MOTOROLA and the Stylized M Logo are registered in
the US Patent & Trademark Office.

The Bluetooth trademarks are owned by their proprietor
and used by Motorola, Inc. under license.

All other product or service names are the property of
their respective owners.

© Motorola, Inc. 2005

Certain mobile phone features are dependent on the
capabilities and settings of your service provider's
network. Additionally, certain features may not be
activated by your service provider, and/or the provider's
network settings may limit the feature's functionality.

Always contact your service provider about feature
availability and functionality. All features, functionality,
and other product specifications, as well as the
information contained in this user's guide are based
upon the latest available information and are believed to
be accurate at the time of printing. Motorola reserves
the right to change or modify any information or
specifications without notice or obligation.

Manual number: 6809496A71-O

Contents

Getting Started	7	Taking and Sending a Photo	15	Entering Text	30
About This Guide	7	Sending a Picture Message	17	Using the Handsfree Speaker	36
Installing the Battery	8	Receiving a Picture Message	18	Using the External Display	37
Battery Tips	8	Bluetooth Connections	19	Turning On Airplane Mode	37
Charging the Battery	9	Synchronize Data	21	Changing a Code, PIN, or Password	38
Turning On Your Phone	10	TTY Operation	22	Locking and Unlocking Your Keypad	38
Adjusting Volume	10	Learning to Use Your Phone	24	Locking and Unlocking Your Phone	38
Making a Call	10	Using the Display	24	If You Forget a Code, PIN, or Password	39
Answering a Call	11	Using the 5-Way Navigation Key	27		
Changing the Call Alert	11	Using Menus	27		
Viewing Your Phone Number	12				
Highlight Features	13				
Recording and Playing Video Clips	13				

Setting Up Your Phone	40	Using Automatic Redial	46	Personalizing Features	58
Setting Time and Date	40	Silencing a Call Alert	47	Menu Features	61
Setting Call Sounds and Alert Styles	40	Calling an Emergency Number	47	Dialing Features	63
Setting Answer Options	41	Using AGPS During an Emergency Call	48	Call Monitoring	63
Setting a Wallpaper Image	42	Viewing Recent Calls	49	Handsfree Features	64
Setting a Screen Saver Image	42	Returning an Unanswered Call	50	Bluetooth® Wireless Connections	65
Adjusting the Backlight	43	Attaching a Number	50	Data and Fax Calls	66
Hiding or Showing Location Information	43	Calling with Speed Dial	50	Network Features	67
Conserving Battery Power	45	Calling with 1-Touch Dial	51	Personal Organizer Features	68
Calling Features	46	Using Voicemail	51	Security	69
Changing the Active Line	46	Phone Features	52	News and Entertainment	69
Redialing a Number	46	Main Menu	52	Service & Repairs	71
		Calling Features	54	Specific Absorption Rate Data	72
		Messages	54	Index	74
		Contacts	56		

Getting Started

CAUTION: Before using the phone for the first time, read the *Important Safety and Legal Information* included in the gray-edged pages at the back of this guide.

About This Guide

This guide describes the basic features of your Motorola wireless phone.

geographical areas. Contact your service provider for more information.

Optional Features



 
 
 
 
This label identifies an optional network or subscription-dependent feature that may not be offered by all service providers in all

Optional Accessories



This label identifies a feature that requires an optional Motorola Original™ accessory.

Installing the Battery

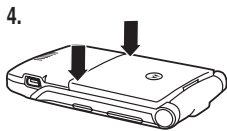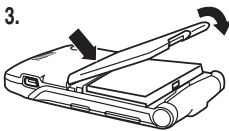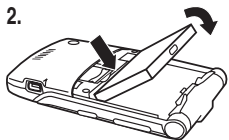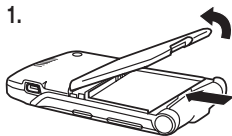

Battery Tips

Battery life depends on the network, signal strength, temperature, features, and accessories you use.

Always use Motorola Original™ batteries and chargers. The warranty does not cover damage caused by non-Motorola batteries and/or chargers.



New batteries or batteries stored for a long time may take more time to charge.

When charging your battery, keep it near room temperature.

When storing your battery, keep it uncharged in a cool, dark, dry place, such as a refrigerator.

Never expose batteries to temperatures below -10°C (14°F) or above 45°C (113°F).

Always take your phone with you when you leave your vehicle.

It is normal for batteries to gradually wear down and require longer charging times. If you notice a change in your battery life, it is probably time to purchase a new battery.



Contact your local recycling center for proper battery disposal.

Warning: Never dispose of batteries in a fire because they may explode.

 
Before using your phone, read the battery safety information in the “Safety and General Information” section included in this guide.

Charging the Battery

New batteries are shipped partially charged. Before you can use your phone, you need to install and charge the battery as described

below. Some batteries perform best after several full charge/discharge cycles.

- 1 Insert the charger into the USB connector on your phone as shown.
- 2 Plug the other end of the charger into the appropriate electrical outlet.
- 3 When your phone indicates **Charge Complete**, remove the charger.

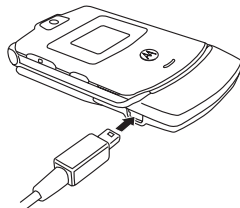

Tip: You can safely leave the charger connected to the phone after charging is complete. This will **not** damage the battery.

Note: When you charge the battery, the battery level indicator in the upper right corner of the display shows how much of the charging process is complete. At least 1

segment of the battery level indicator must be visible to ensure full phone functionality while charging.

Turning On Your Phone

- 1 Open your phone.
- 2 Press and hold the power key for 3 seconds.

The phone may require several seconds to power on.

 


- 3 If necessary, enter your 4-digit unlock code (the last 4 digits of your phone number) and press the **OK** key to unlock the phone.

Adjusting Volume

Press the up or down volume keys to:

- increase or decrease earpiece volume during a call
- increase or decrease ringer volume setting when the home screen is visible (phone must not be in a call and flip must be open)
- silence an incoming call alert

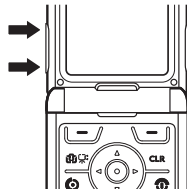

Making a Call

- 1 Dial the number.

Tip: If you make a mistake, press the clear key **CLR** to delete the last digit. Press and hold **CLR** to clear all digits.

2 Press  to make the call.

3 Press  to end the call.

Tip: Closing the flip also ends the call unless you are using the speakerphone feature (see page 36).


Note: You must dial the phone number from the home screen. See page 24.

Answering a Call

When you receive a call, your phone rings and/or vibrates and displays an incoming call message.

1 Press  to answer.

2 Press  to end the call.

 
Tip: You can set the phone to answer calls when you open the flip. (To activate, press **MENU** (•••) ▶  **SETTINGS & TOOLS** ▼ **Call Settings** ▼ **In-Call Setup** ▼ **Answer Options** ▼ **Open to Answer.**)

Note: If the phone is locked, you must first enter your 4-digit unlock code to answer the call.

Changing the Call Alert


Phone Flip Open

In the home screen, press the down volume key to switch to lower call alert volume, then switch to vibrate and, finally, silent alert. Press the up volume key to cycle back from silent alert to vibrate and then to the lowest alert volume setting.

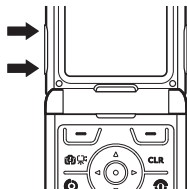

Phone Flip Closed

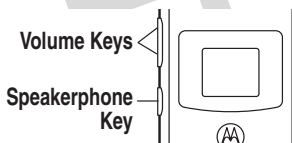 

Press the up or down volume key, then press the speakerphone



key to scroll through the alert styles: **Loud**, **Soft**, **Vibrate**, **Vibe & Ring**, and **Silent**. The alert styles are shown on the external display.

After scrolling to the desired alert style, press the up or down volume key to save the setting and return to the home screen.

Viewing Your Phone Number

To view your phone number from the home screen, press  .

While you are on a call, press the **Options** key, then select **My Tel. Numbers**.

Highlight Features

You can do much more with your phone than make and receive calls! This section describes some of your phone's highlights.


Recording and Playing Video Clips

You can record a video clip with your phone, and send it to other wireless phone users in a multimedia message.


Recording a Video Clip

To activate your phone's video camera:

- 1 Press **⬅️** left to open the **GET PIX & FLIX** menu.
- 2 Scroll to **Take FLIX** and press **OK (⬆️)**.

Tip: You can also activate the video camera viewfinder by pressing and holding the camera key .

The active viewfinder image appears on your display.

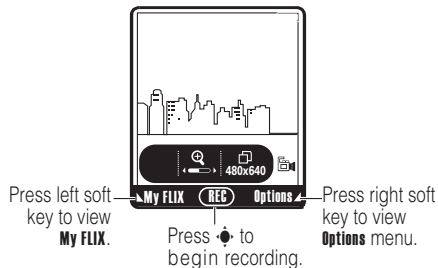 

Point the camera lens at the video subject, then:

- 1 Press **REC (⬆️)** to begin recording.

Press **◂◃** up and down to zoom in and out. Press **◂◃** left and right to control brightness.

Press the **Pause** key to temporarily stop recording, then the **Resume** key to continue.

- 2 Press **Stop** (**⬛**) to stop recording.
- 3 Press the **Save** key to save the video.

or

Press **SEND** (**⬛**) to save the video and go to the **CREATE PIX MESSAGE** screen.

or

Press the **Erase** key to delete the photo and return to active viewfinder.

Adjusting Video Recording Settings

When the video camera is active, press **Options** to open the **OPTIONS** menu, which can include the following options:

Option
Brightness Adjust image brightness.
White Balance Adjust for different lighting.
Duration Specify standard lengths of video clips of 5, 10, or 15 seconds.
Color Effects Select Normal , Sepia , Black & White , or Negative .

Playing a Video Clip


To play a video clip stored on your phone:

- 1 Press **◂** left to open the **GET PIX & FLIX** menu.
- 2 Scroll to **My FLIX** and press **OK (◂)**.
- 3 Scroll to the clip you want to view and press **PLAY (◂)**.


Press the **Mute** key while the video clip is playing to mute the video clip sound.

Press **Mute** again to turn sound on again.

Taking and Sending a Photo

From the home screen, press the camera key  to activate your phone's camera.

The active viewfinder image appears on your phone's display.

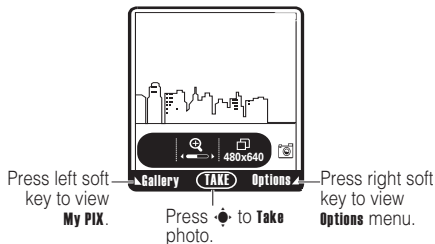 

Point the camera lens at the photo subject, then:

- 1 Press **TAKE (◂)** to take a photo.
Press **◂** up and down to zoom in and out. Press **◂** left and right to increase and decrease brightness.
- 2 Press the **Save** key to save the photo.
or
Press **SEND (◂)** to save the photo and go to the **Create Pix Msg** screen.
or

Press the **Erase** key to delete the photo and return to active viewfinder.

Adjusting Camera Settings

When the camera is active, press **Options** to open the **OPTIONS** menu, which can include the following options:

Option
Resolution Set resolution to High (1280x1024) , Medium (640x480) , Low (320x240) , or Thumbnail (160x120) .
Self timer Set a timer for the camera to take a photo.
Brightness Adjust image brightness.
White Balance Adjust for different lighting.

Option
Image Quality Select Fine , Normal , or Economy .
Shutter Sound Activate a tone that plays when you take a photo.
Color Effects Select Normal , Sepia , Black & White , or Negative .
Multishot
Fun Frame Go to Fun Frames to select an amusing frame for your photo.

Sending a Picture Message



A *picture message* contains embedded media objects (possibly including photos, pictures, animations, sounds, voice records). You can send a picture message to other Verizon Wireless picture messaging-capable phones and to other email addresses.

Find the Feature MENU (•◉•) ▶ MESSAGING
▼ New Pix Msg

1 Press keypad keys, then **OK** (•◉•), to enter a phone number.

or

Press **Add** ▼ **Contacts**, then **OK** (•◉•). For each **Contacts** entry you want to add, highlight the

entry and press **OK** (•◉•). Press **Done** when finished adding **Contacts** entries.

or

Press **Add** ▼ **Recent Calls**, then **OK** (•◉•). For each call you want to add, highlight the entry and press **OK** (•◉•). Press **Done** when finished adding entries from **Recent Calls**.

- 2** Scroll to **Text**.
- 3** Press keypad keys to enter message text.
- 4** Scroll to **Pix** and press the **Gallery** key.
- 5** Scroll to highlight a picture to insert, and press **OK** (•◉•).
- 6** Scroll to **Sound** and press the **Sounds** key.
- 7** Scroll to highlight a sound to insert, and press **OK** (•◉•).
- 8** Scroll to **Subject**.

9 Press keypad keys, then **OK** (•◉•), to enter the message subject.

or

Press **Options**, scroll to **Add Quick Text**, then press **OK** (•◉•), to select a **Quick Text** item as the message subject.

10 Press **SEND** (•◉•) to send the message.

or

Press **Options** to send the message later, save the message in the drafts folder, set priority, or specify how long the message is valid for delivery.

Receiving a Picture Message




When you receive a picture message, your phone displays the

☑ (message waiting) indicator and a **New Message** notification, and sounds an alert.

Open the flip and select to view the message immediately or to save it in your **Inbox** for viewing later.

To view messages in your **Inbox**:

Find the Feature MENU (•◉•) ▶  **MESSAGING**
▼ **Inbox**

- 1 Scroll to the desired message.
- 2 Press **Open** to open the message. Your phone first displays the picture, then the message.

Picture messages that you receive can contain different media objects:

- Photos, pictures, and animations are displayed as you read the message.
- A sound file begins playing when its slide is displayed. Use the volume keys

to adjust the volume as the sound file plays.

- Attached files are appended to the message. To open the attachment, highlight the file indicator/filename and press **VIEW** (image file type), **PLAY** (sound file), or **OPEN** (vObject such as a **Contacts** or datebook entry, or unknown file type).

Bluetooth Connections

Your phone supports Bluetooth® connections. You can connect your phone to a Bluetooth headset or car kit, or connect to another device to exchange and synchronize files.

Your phone currently supports the following Bluetooth profiles:

- headset (optional Motorola Original™ accessory)

- Handsfree Car Kit (optional Motorola Original accessory)

For more information about Bluetooth wireless connections supported by this device, go to FAQs

www.verizonwireless.com/bluetooth.

For information on vehicle compatibility, go to www.verizonwireless.com/bluetoothchart to view the Bluetooth compatibility chart.

Note: The phone does not support Bluetooth (OBEX) profiles or dial-up networking.

Note: All multimedia (video player, audio player, shutter tones, VCAST) will play from the speakerphone when your phone is connected to another Bluetooth device.

Turn Bluetooth Power On or Off

Find the Feature MENU (•◉•) ▶  SETTINGS & TOOLS
 ▼ Connections ▼ Bluetooth
 ▼ Setup ▼ Power ▼ On

Note: To extend battery life, use the above procedure and set Bluetooth power to **Off** when not in use. If you turn Bluetooth power **Off**, your phone will not connect to accessories until you turn Bluetooth power **On** and reconnect to the accessories.

Pairing with a Headset, Handsfree Device, or PC

Before you try to connect to another Bluetooth device, make sure your phone's Bluetooth power is **On** and the device is in *pairing mode* (see the user guide for the device you



are attempting to pair with). You cannot perform pairing while your phone is connected to another device.

To pair your phone to a headset accessory, handsfree car kit, or PC that supports Bluetooth wireless connections:


Find the Feature MENU (•◉•) ▶  SETTINGS & TOOLS
 ▼ Connections ▼ Bluetooth
 ▼ Handsfree
 ▼ [Look For Devices]

Your phone displays a list of device(s) located within range of the phone. If your phone is already connected to a device, your phone lists that device and identifies it with a ✓ (in-use indicator). Once a connection is established with a device, no other device can connect to your phone until the currently connected device is disconnected.

- 1 Highlight a device in the list of devices your phone found.

- 2 Press the **Select** key to connect the device.
- 3 If the device requests permission to bond with your phone, select **YES** and enter the device PIN code to create a secure connection with the device.

Note: The default PIN code is 0000.

When the connection is made, the  (Bluetooth) indicator or a **Bluetooth** message displays in the home screen.

Tip: For specific information about an accessory, refer to the instructions that came with it.

Synchronize Data

Use a Bluetooth wireless connection or a USB cable connection to transfer and synchronize data between your phone and a PC.



To transfer data between your phone and PC, you must install the Motorola Mobile PhoneTools software included with the Motorola Original™ data kit. See the data kit user's guide for more information.

Motorola Mobile PhoneTools software is designed to synchronize with basic features of many popular Personal Information Management (PIM) software and hardware products. Use Motorola Mobile PhoneTools software to synchronize data between your phone and PC.

To synchronize data between your phone and PC, select the **Sync** option from the Motorola Mobile PhoneTools software running on the PC. See the Mobile PhoneTools user's guide for more information.

TTY Operation


You can use an optional TTY device with your phone to send and receive calls. You must plug the TTY device into the phone's headset jack and set the phone to operate in 1 of 3 TTY modes.

Note: Use a TSB-121 compliant cable (provided by the TTY manufacturer) to connect the TTY device to your phone.

Note: Set the phone to level 4 (middle setting) for proper operation. If you experience a high number of incorrect characters, adjust the volume as needed to minimize the error rate.

Note: For optimal performance, your phone should be at least 12 inches (30 centimeters) from the TTY device. Placing the phone too close to the TTY device may cause high error rates.

Setting TTY Mode

 When you set your phone to a TTY mode, it operates in that mode whenever the TTY device is connected.

Find the Feature MENU (•••) ▶  SETTINGS & TOOLS
▼ Initial Setup ▼ TTY Setup

TTY Mode can include the following options:

Option
Voice Return to standard voice mode.
TTY Transmit and receive TTY characters.
VCO Receive TTY characters but transmit by speaking into microphone.

Option
HCO Transmit TTY characters but receive by listening to earpiece.

When your phone is in a TTY mode, the international TTY mode, the international TTY symbol, and the mode setting display during an active TTY call.

Returning to Voice Mode

 
To return to standard voice mode, select **Voice** from the **TTY Setup** menu.

Learning to Use Your Phone


See page 1 for a basic phone diagram.

Using the Display

The *home screen* is displayed when you are **not** on a call or using the menu. You must be in the home screen to dial a phone number.

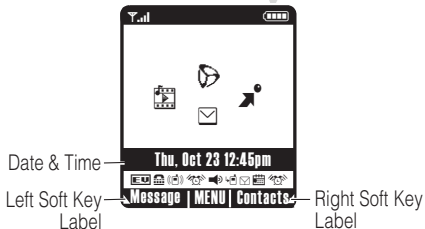


Note: Your home screen may look different than the display shown above.

 The **MENU** label in the bottom center of the display shows that you can press the  key to enter the main menu.




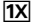

Labels at the bottom corners of the display show the current soft key functions. Press the left or right soft key to perform the function indicated by the left or right soft key label.

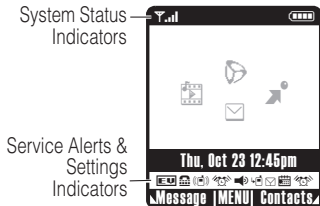





Your phone displays indicators in 2 areas:







Indicators are described below.


System Status Indicators


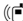





Alert/Indicator
 Signal Strength Indicator Vertical bars show the strength of the network connection.
 Roaming Indicator Indicates phone is in digital coverage area.
 1x-EVDO Indicator Indicates phone is in 1x-EVDO coverage area (necessary for VCAST services).
 1X Indicator Indicates phone is in 1x-RTT coverage area.
 SSL Indicator Indicates application verification is via SSL during a download session.



Alert/Indicator
 Voice Privacy Indicator Indicates Voice Privacy is set to On and is enabled during active call.
 Data Call, Tethered, or Embedded WAP/BREW Application Indicator Shows during data call, tethered mode, or WAP/BREW application.
 Dormant Indicates phone is dormant and PPP session is active.
 No Service Indicator Phone is in area with no service coverage.
 TTY Indicator Phone is in TTY mode.
 Voice Call Indicator Shows during an active voice call.

Alert/Indicator
 E911 Indicator Indicates E911 is set to On .
 Location On Indicator Indicates Location is set to On .
 Keypad Lock Indicator Indicates keypad lock is set to On .
 Battery Level Indicator Shows battery charge level. The more bars, the greater the charge.



System Alerts and Settings Indicators

Alert/Indicator
 All Sounds Off Indicates Master Volume is set to Off .


Alert/Indicator
 Alarm Only Indicates Master Volume is set to Alarm Only .
 Vibrate On Indicates Master Volume is set to Vibrate On .
 Sound On, Vibrate On Indicates Master Volume is set to Sound On and Vibrate On .
 Speakerphone Indicates speakerphone is on.
 Missed Call Indicates a missed call.
 Message Indicator Shows when you receive a new message.
 Calendar Appointment Shows number of calendar appointments.


Alert/Indicator	
 Voicemail	Shows number of voicemail messages received.
 Alarm On	Shows when an alarm has been set.


Using the 5-Way Navigation Key

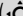 Use the 5-way navigation key () to scroll up, down, left, or right through the menu system. Press the center key () to select a highlighted menu item.



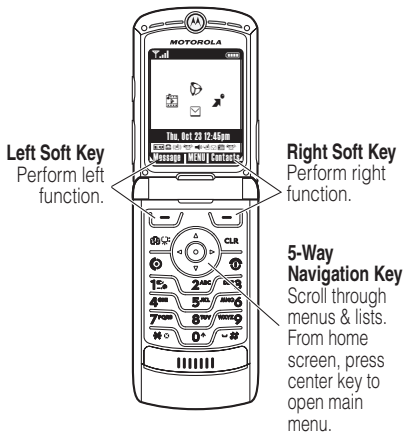


Using Menus

From the home screen, press **MENU** () to enter the main menu.



Press  to scroll down to a menu feature icon in the main menu. The following icons represent features that may appear in the


main menu, depending on your service provider and service subscription options.


Menu Features	
 GET IT NOW*	 MESSAGING
 CONTACTS	 RECENT CALLS
 SETTINGS & TOOLS	

* Optional network/subscription dependent feature

Menu Shortcuts

Your phone displays 4 menu icons in the middle of the home screen.

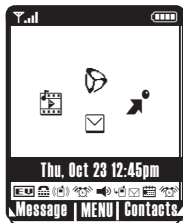 




Press  left, right, up, or down to open the menu represented by the icon you select. You can change the menu icons that appear in the home screen, or set your phone not to display icons in the home screen (see “Show or Hide Menu Icons” on page 61).

Selecting a Menu Option

This guide uses the following format to show you how to select a menu feature, starting from the home screen.

 
Find the Feature MENU ()   RECENT CALLS
▼ Dialed

This example shows that from the home screen, you must press **MENU** (), scroll across to **RECENT CALLS** on the main menu, then scroll down to and select **Dialed**. Press  to scroll across and down, and the center select key  to select a menu option.

Tip: From the main menu, you can quickly select a menu feature by pressing the number key associated with that feature. For example, from the **SETTINGS & TOOLS** menu, press **[4]** to select **Display**.

Selecting a Feature Option


When you select certain features, your phone displays a list of items or options that you can select. For example, when you view the dialed calls list, you can select an entry and perform additional tasks on that entry:

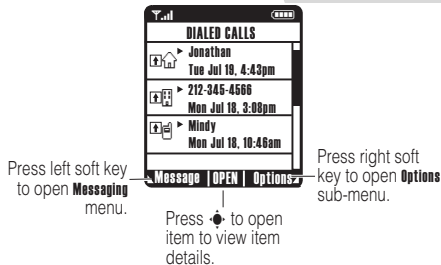


- Press **[DIAL]** to scroll up or down to highlight the option you want.
- In a numbered list, press a number key to highlight the option.
- In an alphabetized list, press a key repeatedly to cycle through the letters on the key and highlight the closest matching list option
- When an option has a list of possible values, press **[DIAL]** left or right to scroll through and select a value.
- When an option has a list of possible numeric values, press a number key to set the value.

Entering Text

 Some features require you to enter information. The following is a sample of a screen for **Contacts** entry information.

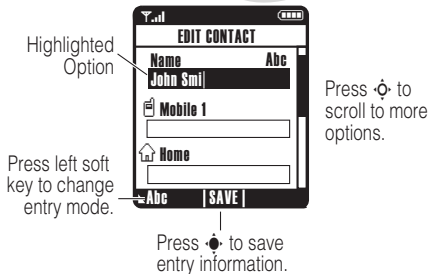

 The message center lets you compose and send text messages.

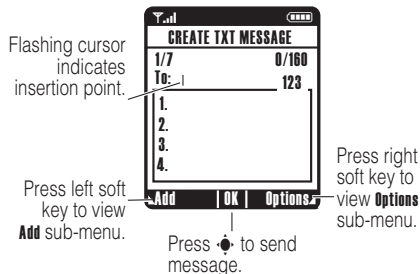

Choosing a Text Entry Mode

Multiple text entry mode make it easy for you to enter names, numbers, and messages. The mode you select remains active until you select another mode.

Press the left soft key in any text entry screen to select 1 of the following entry modes:

iTAP English	Let the phone predict each word (in English) as you press keys.
iTAP Spanish	Let the phone predict each word (in Spanish) as you press keys.
Abc	Enter letters and numbers by pressing a key 1 or more times, 1st character in in uppercase.
ABC	Enter letters and numbers by pressing a key 1 or more times, all characters in in uppercase.
123	Enter numbers only.
Symbols	Enter symbols.

Capitalization and Numbers

Press **⊗** in any text entry screen to cycle through entry methods:

abc = no capital letters	123 = all numbers
ABC = all capital letters	Abc = capitalize next letter only
iTAP = predictive text entry	

Using Tap Mode

From a text entry screen, specify Tap mode by pressing the **Abc** key, then selecting **Abc** or **ABC**.

This is the standard method for entering text on your phone. Regular Tap mode cycles through the letters and numbers of the key you press, as shown in the “Character Chart” on page 33.

 
1 Press a keypad key 1 or more times to select a letter, number, or symbol.

2 Enter the remaining characters.

Tip: Press  right to accept a word completion, or  to insert a space.

3 Press the **OK** key to store the text.

When you enter text with Tap mode, the soft key functions change.

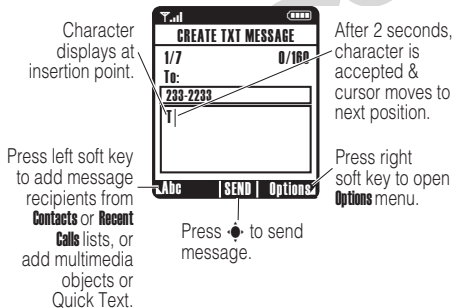

When you enter 3 or more characters in a row, your phone may guess the rest of the word. For example, if you enter **prog**, you might see:



Press  up to accept **program**, or press clear key  to reject it & enter a space after **prog**.

If you want a different word (such as **progress**), continue pressing keypad keys to enter the remaining characters.

Character Chart

Use this chart as a guide for entering characters with Tap mode .

Keys/Characters	
1 . @ ? ! - , & : _ / ; 1	2 a b c 2
3 d e f 3	4 g h i 4
5 j k l 5	6 m n o 6
7 p q r s 7	8 t u v 8
9 w x y z 9	0 <i>change text case, for capital letters</i>

Keys/Characters

✕

change text entry method (hold for default)

#




enter space

Note: This chart shows lowercase letters, which are produced in ABC mode. Select ABC mode to produce the capitalized versions of the letters shown.

Note: This chart may not reflect the exact character set available on your phone. In a URL editor, **1** first shows common characters for that editor.

Tap Mode Text Entry Rules

- Press a keypad key repeatedly to cycle through its characters.





- Press  left or right to move the flashing cursor to the left or right in a text message.
- The first character of every sentence is capitalized. If necessary, press  down to force the character to lowercase before the cursor moves to the next position.
- If you enter or edit information and do not want to save the changes, press  to exit without saving.

Using iTAP Mode

From a text entry screen, specify iTap mode by pressing the **Abc** key, then selecting **iTAP English** or **iTAP Spanish**.

iTAP software provides a predictive text entry method that lets you enter a word using 1 key press per letter. This can be faster than Tap

mode, because your phone combines the key presses into common words.

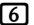For example, if you press    , you see the letters **Program**. If you want a different word (such as **Progress**), continue pressing keypad keys to enter the remaining characters.

Entering Words

- 1 Press keypad keys (1 press per letter) to show possible letter combinations at the bottom of the display.
- 2 Scroll left or right to highlight the combination you want.
- 3 Press the **SELECT** key to lock a highlighted combination. You can press keypad keys to add more letters to the end of the combination.

or

Press **↶** up to enter the highlighted combination when it spells a word. A space is automatically inserted after the word.

If you enter a word your phone does not recognize, the phone stores it to use as 1 of your word options. When you fill memory space for unrecognized words, your phone deletes the oldest words to add new words.

Using Numeric Mode

From a text entry screen, specify Numeric mode by pressing the **Abc** key, then selecting **123**.

Press keypad keys to enter the numbers you want. When you finish entering numbers, press **✕** to switch to another entry method.

Using Symbol Mode

From a text entry screen, specify Symbols mode by pressing the **Abc** key, then selecting **Symbols**.

Scroll to the desired symbol on the **SYMBOLS** screen, then press **OK** (**↵**) to select it.

Press the **Next** key on the **SYMBOLS** screen to page down to the next set of symbols, and press the **Prev** key to page up to the previous set.

Deleting Letters and Words

Place the cursor to the right of the text you want to delete, and then:

- Press **CLR** to delete 1 letter at a time.
- Hold **CLR** to delete the entire message.

Using the Handsfree Speaker

 
Note: You must open your phone's flip to activate the speakerphone.

Your phone's integrated handsfree speaker allows you to talk to another party without holding the phone to your ear.

Turning Handsfree Speaker On/Off

To activate the speakerphone during a call, press and hold the speakerphone key.

You will see **Spkrphone On**, and the speakerphone indicator , and hear a soft audio alert.

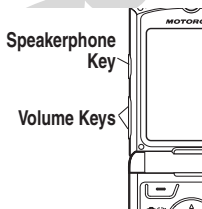


To end the call, press and hold the speakerphone key again. You will see **Call Ended** and hear a soft audio alert.

You can set your phone so that the speakerphone remains on until you press the speakerphone key again or turn off the phone.


You can also set your phone to turn off the speakerphone automatically after 20 seconds of inactivity:

Find the Feature MENU (•◉) ▶  **SETTINGS & TOOLS**
▼ Initial Setup ▼ Speakerphone
▼ 20 sec timeout

Note: Closing the flip while using the speakerphone does not end the call. To end the call, press  (with the flip open).

Note: The handsfree speaker is disabled when you connect your phone to a handsfree car kit or headset accessory.

Using Handsfree Speaker with Flip Closed

- 1 Open your phone's flip.
- 2 Press and hold the speakerphone key to turn on the speakerphone.
- 3 Enter the number you wish to call and press .
- 4 When the call is connected, close the flip, and continue your conversation.
- 5 To end the call, press and hold the speakerphone key. You will see **Call Ended** and hear a soft audio alert.

Using the External Display

When the flip is closed, you can use the external display for the following:

- View time, date, and phone status information.
- View message notifications.

Turning On Airplane Mode

Note: Consult airline staff about the use of **Airplane Mode** in flight. Turn off your phone whenever instructed to do so by airline staff.

Airplane Mode allows you to disable your phone's radio frequency functions and still use other applications (such as the calculator or datebook functions). This may enable you to use these applications while on an airplane.

Find the Feature

MENU () ▶  SETTINGS & TOOLS
▼ Airplane Mode

Changing a Code, PIN, or Password

Your phone's 4-digit unlock code is originally set to the last 4 digits of your phone number, and the 6-digit security code is originally set to 000000. Your service provider may reset these codes before you receive your phone.

If your service provider has **not** reset these codes, we recommend that you change them to prevent others from accessing your personal information. The unlock code must contain 4 digits, and the security code must contain 6 digits.

To change a code or password:

Find the Feature MENU (•◉•) ▶  **SETTINGS & TOOLS**
 ▼ System ▼ Security
 ▼ New Passwords

Select the type of code you wish to change, enter the old code when prompted, then enter the new code.

Locking and Unlocking Your Keypad

You can lock your phone's keypad to prevent accidental key presses.

Press   to lock/unlock the keypad.

Locking and Unlocking Your Phone


You can lock your phone manually or set the phone to lock automatically whenever you turn it off.

To use a locked phone, you must enter the unlock code. A locked phone still rings or

vibrates for incoming calls or messages, **but you must unlock it to answer.**

You can make emergency calls on your phone even when it is locked (see page 47).

Locking Your Phone

- Find the Feature** MENU (•◉•) ▶  **SETTINGS & TOOLS**
- ▼ System ▼ Security
 - ▼ Phone Lock
 - ▼ Lock Now or Automatic Lock

Both **Phone Lock** options require you to enter the unlock code before completing your selection.

Unlocking Your Phone

At the **Enter Unlock Code** prompt, enter your unlock code and press **OK** (•◉•) to unlock your phone.

If You Forget a Code, PIN, or Password

Note: Your phone's 4-digit unlock code is originally set to the last 4 digits of your phone number, and the 6-digit security code is originally set to 000000.

If you forget your security code, contact your service provider.

Setting Up Your Phone

Setting Time and Date

Find the
Feature

MENU (•◉•) ▶  SETTINGS & TOOLS
▼ Initial Setup ▼ Time and Date

Setting Call Sounds and Alert Styles

Your phone rings and/or vibrates to notify you of an incoming call or to signal certain other events.

Setting Call Sounds

Find the
Feature

MENU (•◉•) ▶  SETTINGS & TOOLS
▼ Sounds Setting ▼ Ringstyles

- 1 If necessary, set **Style:** to **Master Volume:** Scroll to **Style:** and press **Change**, then scroll to **Master Volume** and press **Select**.
- 2 Scroll to **Master Volume Detail** and press **Change**.
- 3 Scroll to **Calls** and press **Change** to select it.
- 4 Scroll to the desired detail setting and press **Select**.

Note: Your phone plays a sample of each highlighted setting as you scroll through the settings.

If you set **Call Vibrate** to **On**, the phone vibrates to indicate an incoming call. (If you also set **Calls** to a sound, the phone vibrates **and** rings to indicate an incoming call.)

Setting Alerts

Your phone includes alerts for **Calls**, **Inbox**, **Voicemail**, **Alarms**, **Data Calls**, **Fax Calls**, and **Reminders**.

You can specify a detailed setting for each type of alert:

Find the Feature MENU (•◉•) ▶  **SETTINGS & TOOLS**
▼ Sounds Setting ▼ Ringstyles

- 1 If necessary, set **Style:** to **Master Volume:**
Scroll to **Style:** and press **Change**, then scroll to **Master Volume** and press **Select**.
- 2 Scroll to **Master Volume Detail** and press **Change**.
- 3 Scroll to the desired alert type and press **Change**.
- 4 Scroll to the desired detail setting and press **Select**.


Note: Your phone plays a sample of each highlighted setting as you scroll through the settings.

Setting Answer Options

You can use these alternative methods to answer an incoming call.

Multi-key	answer by pressing any key
Open To Answer	answer by opening the flip

To activate or deactivate an answer option:

Find the Feature MENU (•◉•) ▶  **SETTINGS & TOOLS**
▼ Call Settings ▼ In-Call Setup
▼ Answer Options

Setting a Wallpaper Image

Set a photo, picture, or animation as a wallpaper (background) image in your phone's home screen.

Find the Feature

MENU (•◉•) ▶  SETTINGS & TOOLS
▼ Display ▼ Wallpaper

To select a picture to use as wallpaper:

- 1 Highlight **Picture** and press the **Change** key to view available pictures.
- 2 Scroll to the picture you want, and press **OK** (•◉•).

To change how your wallpaper is displayed:

- 1 Highlight **Layout** and press the **Change** key.
- 2 Scroll to **Center**, **Tile**, or **Fit-to-screen**, and press the **Select** key.

Setting a Screen Saver Image

Set a photo, picture, or animation as a screen saver image.

The screen saver image displays when the flip is open and no activity is detected for a specified time period. The image shrinks to fill the display, if necessary. An animation repeats for 1 minute, then the first frame of the animation displays.

Tip: Turn off the screen saver to extend battery life.

Find the Feature

MENU (•◉•) ▶  SETTINGS & TOOLS
▼ Display ▼ Screen Saver

Adjusting the Backlight


Set the amount of time that the display and keypad backlights remain on, or turn off backlights to extend battery life.

Find the Feature MENU (•◉•) ▶  **SETTINGS & TOOLS**
▼ Initial Setup ▼ Backlight


Hiding or Showing Location Information




Your phone can use the *automatic location information* (ALI) feature to tell the network where you are physically located.

When ALI is set to **Location On**, your phone displays the  (ALI on) indicator. Services may use your known location to provide useful information (for example, driving directions, or the location of the nearest

bank). Your phone prompts you when the network or a service asks for your location. You can refuse at this point.

When ALI is set to **911 Only**, your phone displays the  (ALI off) indicator, and the phone does not send location information unless you call the emergency phone number (such as 911).

Find the Feature MENU (•◉•) ▶  **SETTINGS & TOOLS**
▼ System ▼ Location

- 1 When prompted, enter the location code.
- 2 Scroll to **Location On** or **E911 Only**.
- 3 Press **OK** (•◉•) to select the setting.

Limitations of AGPS

Sometimes adequate signals from multiple satellites are unavailable, usually because your AGPS phone's antenna cannot establish a view of a wide area of open sky. In these

cases, the AGPS feature **will not work**. Such situations include, but are not limited to, the following:

- in underground locations
- inside of buildings, trains, or other covered vehicles
- under any other metal or concrete roof or structure
- between tall buildings or under dense tree cover
- near a powerful radio or television tower
- when your AGPS antenna is covered (for example, by your hand or other object) or facing the ground
- when there are temperature extremes outside the operating limits of the phone

Even where location information can be calculated in such situations, it may take more time than usual, and your location estimate may not be as accurate.

Even where adequate signals from multiple satellites are available, your AGPS feature will provide only an approximate location, often within 150 feet (45 meters) but sometimes much farther from your actual location.

The satellites used by your phone's AGPS feature are controlled by the U.S. government and are subject to changes implemented in accordance with the Department of Defense AGPS user policy and the Federal Radio Navigation Plan. These changes may affect the performance of your phone's AGPS feature.

Conserving Battery Power

Your phone includes an ambient light sensor and battery save setting to extend battery life. When this feature is activated, it automatically turns off the keypad backlight when it detects that enough ambient light is available. Inhibiting or covering the sensor can cause intermittent backlighting.

Find the Feature

MENU (•◉•) ▶  SETTINGS & TOOLS
▼ Initial Setup ▼ Battery Save

Calling Features

For basic instructions on how to make and answer calls, see page 10.

Changing the Active Line



Change the active phone line to make and receive calls from your other phone number.

Find the Feature

MENU (•) ▶ SETTINGS & TOOLS
▼ System ▼ Device Info
▼ Active Line

Redialing a Number

1 Press to view the dialed calls list.

- 2 Scroll to the entry you want to call.
- 3 Press to redial the number.

Using Automatic Redial




When you receive a busy signal, your phone displays **Call Failed, Number Busy**.

With automatic redial, your phone automatically redials the number for 4 minutes. When the call goes through, your phone rings or vibrates 1 time, displays **Redial Successful**, and then connects the call.

You must turn on automatic redial to use the feature. To turn automatic redial on or off:

Find the Feature MENU (•••) ▶  SETTINGS & TOOLS
▼ Initial Setup ▼ Auto Redial

When automatic redial is turned off, you can manually activate the feature to redial a phone number. When you hear a fast busy signal and see **Call Failed**:

Press  or the **RETRY** key to activate automatic redial.

Silencing a Call Alert


You can silence the alert for an incoming call before answering the call.

Press the volume key up or down to silence the alert for the incoming call.

Calling an Emergency Number

Your service provider programs 1 or more emergency phone numbers, such as 911, that you can call under any circumstances, even when your phone is locked.

Note: Emergency numbers vary by country. Your phone's preprogrammed emergency number(s) may not work in all locations, and sometimes an emergency call cannot be placed due to network, environmental, or interference issues.

- 1 Enter the emergency number.
- 2 Press  to call the emergency number.

Using AGPS During an Emergency Call



When you make an emergency call, your phone's assisted-Global Positioning System (AGPS) feature can calculate your approximate

location and help emergency service personnel find you.

Notes:

- This feature can work only if the emergency response center can receive and process location information. If you are concerned about whether your local emergency response center can receive AGPS location information, contact your local authorities.
- In order for the AGPS feature to work when making emergency calls, the

service must be turned on. See page 43.

For best results, you should be located where your phone's antenna can establish a clear view of the open sky. This allows your phone to access AGPS satellite signals. Even under good conditions, it may take 30 seconds or more to determine your approximate location. This time increases and the accuracy of the results decreases with reduced access to satellite signals.


If your phone does not have adequate access to AGPS satellite signals, the location of the nearest cell tower in contact with your phone is automatically provided to the emergency response center.



Because of the limitations of the AGPS feature, always provide your best knowledge of your location to the emergency response center, just as you would when using a phone without AGPS capabilities. Also, remain on

the phone for as long as the emergency response center instructs you.


Viewing Recent Calls

Your phone keeps lists of the calls you recently received and dialed, even if the calls did not connect. The lists are sorted from newest to oldest entries. The oldest entries are deleted as new entries are added.

Shortcut: Press  from the home screen to view the **All Calls** list.

Find the Feature MENU () ▶  RECENT CALLS

- 1 Scroll to **Missed, Received, Dialed, or All**.
- 2 Press **OK** () to select the list.
- 3 Scroll to an entry.

- 4 Press  to call the entry's number.
or

Press the **Message** key to send a message to the entry's number.

or

Press **OPEN** () to view entry details.

or

Press the **Options** key to open the **Options** menu to perform various operations on the entry.


The **Options** menu can include the following options:


Option
Save
Create a Contacts entry with the number in the No. field.

Option
Erase Delete the selected entry (if the entry has not been locked).
Erase All Delete all unlocked entries.
View Timers Go to the View Timers screen.


Returning an Unanswered Call

Your phone keeps a record of your unanswered calls, and displays:

- the  (missed call) indicator
- **X Missed Calls**, where **X** is the number of missed calls

- 1 Press the **VIEW** key to see the received calls list.
- 2 Scroll to the call you want to return.
- 3 Press  to make the call.

Attaching a Number



While dialing (with digits visible in the display), press **Options** () , then scroll to and select **Attach Number**, attach a number from **Contacts** or the recent calls list.

Calling with Speed Dial

Each entry you store in **Contacts** is assigned a unique *speed dial* number.

Tip: To see an entry's speed dial number, press **MENU** () ▶  **CONTACTS** ▼ **Contact List**, scroll to the entry, and press **View**.

To speed dial a **Contacts** entry:

- 1 Enter the speed dial number for the entry you want to call.
- 2 Press  to submit the number.
- 3 Press  to call the entry.

Calling with 1-Touch Dial

To call **Contacts** entries 1 through 9, press and hold the single-digit speed dial number for 1 second.

Using Voicemail




Voicemail messages that you receive are stored on the network. To listen to your messages, you must call your voicemail phone number.

Note: Your service provider may include additional information about using this feature.

Listening to Voicemail Messages

Find the Feature

MENU () >  MESSAGING
▼ VoiceMail

Press  (send key) to call your voicemail phone number.

If no voicemail number is stored, your phone prompts you to store a number.

Phone Features

This section helps you locate features on your phone that were not described earlier in this guide.

Main Menu

This is the standard main menu layout. **Menu organization and feature names may vary on your phone.** Not all features may be available on your phone.



GET IT NOW*

- Get Tunes & Tones
- Get Pix & Flix
- Get Fun & Games
- Get News & Info
- Get Going



MESSAGING

- New Txt Msg
- New Pix Msg
- Inbox
- Sent
- Drafts
- Voicemail



CONTACTS

- New Contact
- Contact List
- Groups
- Speed Dials



RECENT CALLS

- Missed
- Received
- Dialed
- All
- View Timers



SETTINGS & TOOLS

(see next page)

Settings & Tools Menu

Tools

- Calendar
- Alarm Clock
- World Clock
- Notepad
- Calculator

Sounds Setting

- Ringstyles
- Talking Phone Settings

Airplane Mode

Display

- Wallpaper
- Screen Saver
- Display Themes
- Greeting
- Home Screen

System

- System Select
- Device Info
- Location
- Security

Call Settings

- In-Call Setup
- Car Settings
- Headset

Initial Setup

- Time and Date
- SpeakerPhone
- Auto PIN Dial
- Auto Redial
- Display Timeout
- Backlight
- TTY Setup
- Scroll
- Language
- Battery Save
- DTMF
- Hyphenation
- Master Reset
- Master Clear

Connections

- Active Calls
- Bluetooth

Calling Features

Features

Auto PIN Dial

Some networks require an authenticating PIN code to allow outgoing calls. Use this feature to automatically dial your PIN code.

MENU (•◂◃•) ▶  SETTINGS & TOOLS
▼ Initial Setup ▼ Auto PIN Dial

Messages

Features

Send Text Message

Send a text message:

MENU (•◂◃•) ▶  MESSAGING
▼ New Txt Msg

Press the **Options** key to perform various operations on the message.



Features

Send Multimedia Message

MENU (•◂◃•) ▶  MESSAGING
▼ New Pix Msg



Enter the message address and press **OK** (•◂◃•), then:

To insert a picture, scroll to **Pix** and press the **Gallery** key.

To insert a sound, scroll to **Sound** and press the **Sounds** key.

Store Message Objects

Go to a picture message slide, then press the **Options** key.

Select **Save Picture** or **Save Sound**



Features

View Sent Messages

View sent messages:

MENU (•◉•) ▶  **MESSAGING** ▼ **Sent**
▼ *sent message*, then press **Open** (•◉•)

Press the **Options** key to perform various operations on the message.



Read Received Messages

Read received messages:

MENU (•◉•) ▶  **MESSAGING** ▼ **Inbox**
▼ *received message*, then press **Open** (•◉•)

Press the **Options** key to perform various operations on the message.



Features

Drafts

View messages saved in drafts folder:

MENU (•◉•) ▶  **MESSAGING** ▼ **Drafts**
▼ *draft message*

To edit the message, press **EDIT** (•◉•).

To delete the message, press the **Erase** key.

Press the **Options** key to perform various operations on the message.



Erase Messages

Delete all messages or only messages from the **Outbox** or **Drafts** folder:

MENU (•◉•) ▶  **MESSAGING**, then press the **Options** key, scroll to **Erase Inbox**, **Erase Drafts**, **Erase Sent**, or **Erase All**, and press **OK** (•◉•)



Contacts

Features
Create Entry Create a new Contacts entry: MENU (⬅️) ▶️ 📁 CONTACTS ▾ New Contact
View Contact MENU (⬅️) ▶️ 📁 CONTACTS ▾ Contact List ▾ <i>entry</i> ▾ View
Create Group List Create a group list as a Contacts entry: MENU (⬅️) ▶️ 📁 CONTACTS ▾ Groups You can add entries to or delete entries from a group list. Use a preset group name or create your own name. When you send a message to a group list, the message goes to all Contacts entries in that group.

Features
Dial Number Call a number stored in Contacts : MENU (⬅️) ▶️ 📁 CONTACTS ▾ Contact List ▾ <i>entry</i> Press 📞 to call.
Edit Entry Edit a Contacts entry: MENU (⬅️) ▶️ 📁 CONTACTS ▾ Contact List ▾ <i>entry</i> ▾ Edit
Set Speed Dial Number Assign a speed dial number to a Contacts entry: MENU (⬅️) ▶️ 📁 CONTACTS ▾ Contact List ▾ <i>entry</i> ▾ Edit Scroll to the number to be assigned a speed dial number. Press the Options key, then scroll to Set Speed Dial and press OK (⬅️).

Features

Set Default Number for Entry

Set the default number for a **Contacts** entry with multiple numbers:

MENU (•◂•) ▶  **CONTACTS** ▼ **Contact List**
▼ *entry* ▼ **Edit**

Scroll to the number to be set as the default number. Press the **Options** key, then scroll to **Set As Default** and press **OK** (•◂•).

Assign Ringtone to Entry

Assign a distinctive ringtone to a **Contacts** entry:

MENU (•◂•) ▶  **CONTACTS** ▼ **Contact List**
▼ *entry* ▼ **Edit**

Scroll to **Ringtone**. Press the **Set key** to go to the **TUNES & TONES** menu.

Scroll to the desired ringtone and press **OK** (•◂•).

Features

Create New Ringtone

Create a recording that you can assign as a ringtone for an entry:

MENU (•◂•) ▶  **CONTACTS** ▼ **Contact List**
▼ *entry* ▼ **Edit**

Scroll to **Ringtone**. Press the **Set** key to go to the **TUNES & TONES** menu.

Select **Record New** and follow the prompts to create a recording that is stored with your other ringtones.

Download Ringtone

MENU (•◂•) ▶  **CONTACTS** ▼ **Contact List**
▼ *entry* ▼ **Edit**

Scroll to **Ringtone**. Press the **Set** key to go to the **TUNES & TONES** menu.

Select **Get New** and then proceed to download and save a ringtone.

Features

Erase Entry

Erase a **Contacts** entry: MENU (•◉•)

▶  **CONTACTS** ▼ **Contact List** ▼ *entry*

Press the **Options** key, then scroll to **Erase** and press **OK** (•◉•).

Personalizing Features

Using Voice Commands

You can place calls and perform other tasks by speaking commands to your phone.

- 1 Press and release the voice button on the right side of the phone.

Your phone displays and speaks **Say a command**, followed by a list of voice commands.

- 2 Say one of the commands listed in the table in the next section.

Your phone performs the corresponding action.

Voice Commands

Voice Commands

Call *Name* or

Place a call to:

- a phone number you speak
- or**
- a **Contacts** entry whose *Name* you speak

Voice Commands

Send Picture *Name or #*

Send a multimedia message to:

- a phone number you speak
- or**
- a **Contacts** entry whose *Name* you speak

(See page 15 for instructions on sending a picture in a message.)

Send Text *Name or #*

Send a text message to:

- a phone number you speak
- or**
- a **Contacts** entry whose *Name* you speak

Voice Commands

Lookup *Name*

Look up a **Contacts** entry by speaking the entry's *Name*.

Go To *App*

Use a voice shortcut to access the phone *App* (application) you specify:

Vicemail, Camera, Redial, Received Calls

Tip: When speaking the name of a **Contacts** entry, you must say the name exactly as it is listed in the entry. For example, to call the mobile number for a **Contacts** entry named Bill Smith, you would say "Call Bill Smith mobile." (If the entry included only one number for Bill Smith, you would simply say "Call Bill Smith.")

Tip: Speak numbers at a normal speed and volume, pronouncing each digit distinctly. Avoid pausing between digits.


Voice Service Setup

You can modify several voice command settings:

- 1 Press and release the voice button on the right side of the phone.
- 2 Press the **Settings** key.
- 3 Scroll to **Choice Lists**, **Sensitivity**, **Digit Dialing**, or **Sound**, and press the **Select** key.

To access **Help** information for the setting you selected, press the **Help** key.

Tip: You can also access the same voice command settings by pressing

MENU (•◉•) ▶  **SETTINGS & TOOLS**

- ▼ **Talking Phone Settings** ▼ **Ringstyles** ▼ **Keypad Digits** or
- ▼ **Contact List Entries**.

More Personalizing Features

Features

Call & Key Volumes

MENU (•◉•) ▶  **SETTINGS & TOOLS**

- ▼ **Sounds Setting** ▼ **Ringstyles**

Tip: If necessary, set **Style:** to **Master Volume:** Scroll to **Style:** and press the **Change** key, then scroll to **Master Volume** and press the **Select** key.





With **Style:** set to **Master Volume**, scroll to **Master Volume Detail** and press the **Change** key, then scroll to **Ring Volume** or **Key Volume**.

Message Alerts




Set whether or not you are alerted to messages received during a call:

MENU (•◉•) ▶  **SETTINGS & TOOLS**

- ▼ **Call Settings** ▼ **In-Call Setup** ▼ **MSG Alert**

Features	
<h3>Greeting</h3> <p>Change the greeting that appears when you turn on your phone:</p> <p>MENU (•◉•) ▶  SETTINGS & TOOLS ▼ Display ▼ Greeting</p>	
<h3>Screen Saver</h3> <p>Set a photo, picture, or animation as a screen saver image:</p> <p>MENU (•◉•) ▶  SETTINGS & TOOLS ▼ Display ▼ Screen Saver</p>	
<h3>Clock View</h3> <p>Display an analog clock or digital time readout in the home screen:</p> <p>MENU (•◉•) ▶  SETTINGS & TOOLS ▼ Display ▼ Home Screen ▼ Clock</p>	

Menu Features

Features
<h3>Menu Language</h3> <p>MENU (•◉•) ▶  SETTINGS & TOOLS ▼ Initial Setup ▼ Language</p>
<h3>Show or Hide Menu Icons</h3> <p>Show or hide menu feature icons in the home screen:</p> <p>MENU (•◉•) ▶  SETTINGS & TOOLS ▼ Display ▼ Home Screen ▼ Home Keys ▼ Icons</p>
<h3>Change Menu</h3> <p>Change the menu feature icons in the home screen:</p> <p>MENU (•◉•) ▶  SETTINGS & TOOLS ▼ Display ▼ Home Screen ▼ Home Keys</p>

Features

Create Banner

Create a heading to display on your phone's home screen:

MENU (•◉•) ▶  SETTINGS & TOOLS ▼ Display
▼ Home Screen ▼ Banner

Master Reset

Reset all options except unlock code, security code, and lifetime timer:

MENU (•◉•) ▶  SETTINGS & TOOLS ▼ Initial Setup
▼ Master Reset

To reset all options, you need to enter the **Security Code** (000000).

Features

Master Clear


Reset all options except unlock code, security code, and lifetime timer, and clear all user settings and entries:

Warning: This option erases all user-entered information stored in your phone memory, including phonebook entries and downloaded files. Once you erase the information, it cannot be recovered. It resets all options to their factory settings except for the unlock code, security code, and lifetime timer.


MENU (•◉•) ▶  SETTINGS & TOOLS ▼ Initial Setup
▼ Master Clear

To reset all options, you need to enter the **Security Code** (000000).

Dialing Features




Features
DTMF Tones
Activate DTMF tones:
MENU (•◂•) ▶  SETTINGS & TOOLS ▼ Initial Setup ▼ DTMF Tones
Send DTMF tones during a call: Press number keys.

Call Monitoring

Network connection time is the elapsed time from the moment you connect to your service provider's network to the moment you end the call by pressing . This time includes busy signals and ringing.

The amount of network connection time you track on your resettable timer may not

equal the amount of time for which you are billed by your service provider. For billing information, please contact your service provider directly.

Features
View Call Times
MENU (•◂•) ▶  RECENT CALLS ▼ View Timers
Scroll to Last Call, All Calls, Received Calls, Dialed Calls, or Lifetime Calls , and press OK (•◂•).
View Roaming Times
MENU (•◂•) ▶  RECENT CALLS ▼ View Timers ▼ Roaming
Set In-Call Timer
MENU (•◂•) ▶  SETTINGS & TOOLS ▼ Call Settings ▼ In-Call Setup ▼ In-Call Timer



Features

View Data Volumes

MENU (•◂◃•) ▶ ☎ RECENT CALLS

▼ View Timers

Scroll to **Transmit Kilobytes**, **Received Kilobytes**, **Total Kilobytes**, or **Lifetime Data**, and press **OK** (•◂◃•).



Reset Timer

MENU (•◂◃•) ▶ ☎ RECENT CALLS

▼ View Timers

Scroll to the desired timer and press the **Reset** key.



View Last Reset

MENU (•◂◃•) ▶ ☎ RECENT CALLS

▼ View Timers ▼ Last Reset



certain areas. Always obey the laws and regulations on the use of these products.

Features

Accessory Volume Settings (car kit or headset)





Adjust volume of headsets or car kit accessories that are enabled for Bluetooth connections:





During an active call, press your phone's up or down volume key.

Handsfree Features

Note: The use of wireless devices and their accessories may be prohibited or restricted in

Bluetooth® Wireless Connections

Features	
Make Phone Visible to Other Device	
Allow an unknown Bluetooth device to discover your phone:	
MENU (•◉•) ▶  SETTINGS & TOOLS ▼ Connections ▼ Bluetooth ▼ Setup ▼ Find Me	
Connect to Recognized Device	
Connect to a recognized handsfree device:	
MENU (•◉•) ▶  SETTINGS & TOOLS ▼ Connections ▼ Bluetooth ▼ Handsfree ▼ <i>device_name</i>	
where <i>device_name</i> is the name of the device to which you want to connect.	

Features	
Connect to a Handsfree Device During a Call	
Switch to a headset or car kit during a call:	
MENU (•◉•) ▶ Use Bluetooth	
Note: You cannot switch to a headset or car kit if you are already connected to a Bluetooth device.	
Disconnect from Device	
Highlight the device name and press the DROP key.	
Edit Device Properties	
Edit the properties of a recognized device:	
MENU (•◉•) ▶  SETTINGS & TOOLS ▼ Connections ▼ Bluetooth ▼ Device History ▼ Edit	

Features

Set Bluetooth Power Permanently On

Set **Bluetooth Power** to be on whenever your phone is on:

MENU (•◉•) ▶  **SETTINGS & TOOLS** ▼ **Connections**
▼ **Bluetooth** ▼ **Setup** ▼ **Power** ▼ **On**



Set Bluetooth Options

Set your phone's Bluetooth options:

MENU (•◉•) ▶  **SETTINGS & TOOLS** ▼ **Connections**
▼ **Bluetooth** ▼ **Setup**



Data and Fax Calls

Features

Data Settings

Specify call type for next call:

MENU (•◉•) ▶  **SETTINGS & TOOLS** ▼ **Connections**
▼ **Active Calls**

Select **Normal**, **Data In Only**, or **Fax In Only**.

Send Data or Fax

Connect your phone to the device, then place the call through the device application.









Receive Data or Fax

Connect your phone to the device, then answer the call through the device application.



Network Features

Features	
Network Settings	
View network information and adjust network settings:	
MENU (•◉•) ▶  SETTINGS & TOOLS	
▼ System ▼ System Select	
to and select Current Network or Set Mode .	
Set Service Tones	
Set phone to beep each time the network registration status changes:	
MENU (•◉•) ▶  SETTINGS & TOOLS ▼ System	
▼ System Select ▼ Service Tone	

Features	
Set Call Drop Alerts	
Set phone to emit an alert tone whenever the network drops a call. (Because digital networks are so quiet, the call drop alert may be your only indication that a call has been dropped.)	
MENU (•◉•) ▶  SETTINGS & TOOLS ▼ System	
▼ System Select ▼ Call Drop Tone	

Personal Organizer Features

Features

Add Calendar Appointment

Add an event to the calendar:

MENU (•◉•) ▶  SETTINGS & TOOLS ▼ Tools
▼ Calendar

Press the **Add** key, then enter new event information.

View Calendar Appointment

MENU (•◉•) ▶  SETTINGS & TOOLS ▼ Tools
▼ Calendar

Scroll to the date of the scheduled appointment, press **OK** (•◉•), then press **OK** (•◉•) again to view appointment details.

Features

Set Alarm

Set an alarm:

MENU (•◉•) ▶  SETTINGS & TOOLS ▼ Tools
▼ Alarm Clock

Turn Off Alarm

Turn off alarm:

Press the **Off** key or .

Calculator

Calculate numbers:

MENU (•◉•) ▶  SETTINGS & TOOLS ▼ Tools
▼ Calculator

Security

Features

Change Unlock & Security Codes

MENU (•◉•) ▶  SETTINGS & TOOLS ▼ System
▼ Security ▼ New Passwords ▼ Unlock Code or
Security Code

News and Entertainment

Features

Launch Game or Application

Launch a **Get It Now** game or
application:

MENU (•◉•) ▶  GET IT NOW ▼ *application*



Features

Download Game or Application

Download a **Get It Now** game or
application:

MENU (•◉•) ▶  GET IT NOW

Select category, application, and pricing
option. Normal airtime and/or carrier usage
charges apply.



Manage Pictures

From the idle display, press ◉ left to select **GET PIX & FLIX**. Scroll to **My PIX** and press **OK (•◉•)** to view a list of pictures.

To view a picture, scroll to the picture title
and press **VIEW (•◉•)**.

To access the **OPTIONS** menu for **MY PIX**, press
the **Options** key. Scroll to and select the
desired option: **Set As**, **Rename**, **Lock**, **Erase**, **Erase
All**, or **PIX Info**.



Features

Manage Video Clips

From the idle display, press  left to select **GET PIX & FLIX**. Scroll to **My FLIX** and press **OK** () to view a list of pictures.

To play a video clip, scroll to the video clip title and press **PLAY** ()

To access the **OPTIONS** menu for **MY PIX**, press the **Options** key. Scroll to and select the desired option: **Send, To PIX Place, Get New, Rename, Lock, Erase, Erase All, Flix Info**.



Web Sessions

Select or create a Web session:
From the idle display, press  up to select **OPENWAVE**.



Service & Repairs

If you have questions or need assistance, we're here to help. Go to www.motorola.com/consumer/support, where you can select from a number of customer care options. You can also contact the Motorola Customer Support Center at 1-800-331-6456 (United States), 1-888-390-6456 (TTY/TDD United States for hearing impaired), or 1-800-461-4575 (Canada).

Specific Absorption Rate Data

The model wireless phone meets the government's requirements for exposure to radio waves.

Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission (FCC) of the U.S. Government and by the Canadian regulatory authorities. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age or health.

The exposure standard for wireless mobile phones employs a unit of measurement known as the

Specific Absorption Rate, or SAR. The SAR limit set by the FCC and by the Canadian regulatory authorities is 1.6 W/kg.¹ Tests for SAR are conducted using standard operating positions accepted by the FCC and by Industry Canada with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station, the lower the power output.

Before a phone model is available for sale to the public in the U.S. and Canada, it must be tested and certified to the FCC and Industry Canada that it does not exceed the limit established by each government

for safe exposure. The tests are performed in positions and locations (e.g., at the ear and worn on the body) reported to the FCC and available for review by Industry Canada. The highest SAR value for this model phone when tested for use at the ear is **1.14 W/kg**, and when worn on the body, as described in this user guide, is **1.56 W/kg**. (Body-worn measurements differ among phone models, depending upon available accessories and regulatory requirements).²

While there may be differences between the SAR levels of various phones and at various positions, they all meet the governmental requirements for safe exposure. Please note that improvements to this product model could cause differences in the SAR value for later products; in all cases, products are designed to be within the guidelines.

Additional information on Specific Absorption Rates (SAR) can be found on the Cellular Telecommunications & Internet Association (CTIA) Web site:

<http://www.phonefacts.net>

or the Canadian Wireless Telecommunications Association (CWTA) Web site:

<http://www.cwta.ca>

1. In the United States and Canada, the SAR limit for mobile phones used by the public is 1.6 watts/kg (W/kg) averaged over one gram of tissue. The standard incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in measurements.
2. The SAR information includes the Motorola testing protocol, assessment procedure, and measurement uncertainty range for this product.

Index

1-touch dial
 using 51
1X indicator 25

A

accessories 7
alarm clock 68
alarm on indicator 27
alarm only indicator 26
alert
 downloading 54
 setting 40
 turning off 10, 11, 47
ALI indicators 43
all sound off indicator 26
animation
 downloading 54
 screen saver 42

 viewing 69
 wallpaper 42
answering a call 11, 41
automatic location
 information
 sending 43
automatic redial 46

B

battery 8
 charging 9
 extending battery life 42,
 45
 installing 8
battery level indicator 26

C

calculator 68

calendar 68
 view appointment 68
calendar appointment
 indicator 26
call
 alert, setting 40
 alert, turning off 10, 11,
 47
 answer options 41
 answering 11
 deleting 49
 dialed calls list 49
 dialing 11
 emergency number 47
 ending 11
 handsfree speaker 36
 making 11
 received calls list 49

- receiving 11
- recent calls 49
- storing 49
- unanswered call 50
- Call Failed, Number Busy message 46
- camera 13
 - taking a photo 3, 15
- character chart 33
- codes
 - changing 38
 - default 10, 38, 39
 - forgetting 39
- Contacts
 - 1-touch dial 51
 - attaching 2 numbers 50
 - dialing a number 56
 - editing an entry 56
 - ringtone 57
 - speed dial number 50
 - storing an entry 56

D

- data call 66
 - volume meters 64
- data call/tethered/embedded WAP/BREW indicator 25
- deleting a call 49
- dialed calls list 49
- dialing a number 11
- digital indicator 25
- display
 - greeting 61
- dormant indicator 25
- drafts folder 55
- DTMF tones
 - activating 63
 - sending 63

E

- E911 indicator 26
- earpiece volume 10

- emergency number 47
- end key 11
- ending a call 11
- Enter Unlock Code message 39
- external display 37

F

- fax call 66
- 5-way navigation key 27
- flip
 - external display 37
 - open to answer 11

G

- greeting 61

H

- handsfree speaker 36
- home screen 24

I

indicators

1X 25

alarm on 27

alarm only 26

ALI 43

all sounds off 26

battery level 26

calendar appointment 26

data

 call/tethered/embedded WAP/BREW 25

digital 25

dormant 25

E911 26

keypad lock 26

location on 26

message 26

message waiting 18

missed call 50

missed calls 26

no service 25

roaming 25

signal strength 25

sound on & vibrate on 26

speakerphone 26

SSL 25

TTY 25

vibrate on 26

voice call 25

voice privacy 25

voicemail 27

K

key

end 11

5-way navigation 27

left soft key 24

menu 28

power 10

right soft key 24

send 11, 49

volume control 10

keypad lock indicator 26

L

left soft key

 functions 24

location on indicator 26

location, sending to network 43

lock

 phone 38

M

making a call 11

menu

 entering text 30

 lists 29

 navigating 27

 using features 29

menu key 28

message

 drafts 55

erase 55
outbox 55
reading 55
receiving 3
status 55
text 3, 54
message indicator 26
message waiting indicator
18
missed call indicator 50
missed calls indicator 26
Missed Calls message 50
my telephone number 12

N

network settings 67
no service indicator 25
number
viewing your number 12

O

optional accessory, defined
7
optional feature, defined 7
outbox 55

P

passwords. *See* codes
phone
alert, setting 40
alert, turning off 10, 11,
47
answer options 41
automatic location
information 43
codes 38
flip 11
location 43
locking 38
network settings 67
security code 38

unlock code 38
unlocking 10, 38
phone number
attaching 2 numbers 50
redialing 46
storing in Contacts 56
viewing your number 12
photo
downloading 54
sending 3, 15
taking 3, 15
picture
downloading 54
screen saver 42
viewing 69
wallpaper 42
picture message
receiving 18
sending 17
power key 10

R

- received calls list 49
- recent calls 49
- redial
 - automatic redial 46
 - busy number 46
- right soft key
 - functions 24
- ring alert
 - setting 11, 40
 - turning off 10, 11, 47
- ringer volume, setting 10
- ringtone
 - downloading 54
- roaming indicator 25

S

- screen saver 42
- security code
 - changing 38
 - default 38

- forgetting 39
- send key 11, 49
- signal strength indicator 25
- silent alert, setting 40
- silent ring alert, setting 11
- soft keys
 - functions 24
- sound
 - downloading 54
 - sound on & vibrate on indicator 26
- Speaker On message 36
- speakerphone indicator 26
- speed dial 50
- SSL indicator 25
- standby time, increasing 42
- storing a call 49

T

- telephone number
 - viewing your number 12
- text

- character chart 33
- entering 30
- entry mode, selecting 30
- text entry mode
 - selecting 30
- TTY indicator 25

U

- unlock
 - phone 38
- unlock code
 - bypassing 39
 - changing 38
 - default 10, 38, 39
 - entering 10

V

- vibrate alert
 - setting 40
 - turning off 10, 11, 47
- vibrate on indicator 26

video clip 13
vObject, defined 19
voice call indicator 25
voice privacy indicator 25
voicemail 51
voicemail indicator 27
volume
 earpiece 10
 ringer 10
volume keys 10

W

wallpaper 42