

APPLICANT: MOTOROLA, INC.

FCC ID: IHDT56GA1

INSTRUCTION MANUAL

A preliminary draft copy of the Users Manual follows:



 
MOTOMANUAL

V195
GSM

motorola.com

HELLOMOTO

Introducing your new Motorola V195 GSM wireless phone. Here's a quick anatomy lesson.

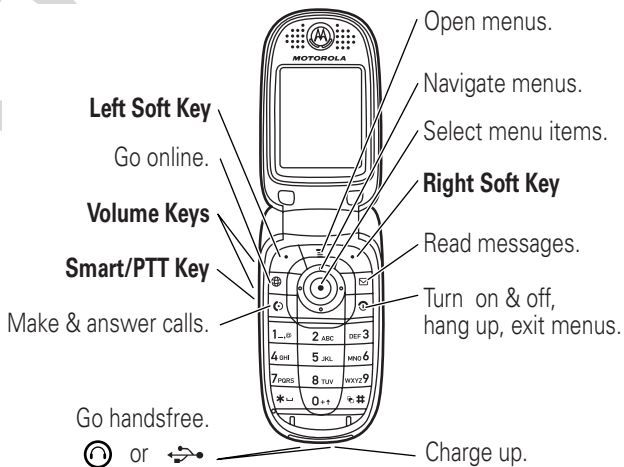

Motorola, Inc.
Consumer Advocacy Office
1307 East Algonquin Road
Schaumburg, IL 60196

www.hellomoto.com

1-800-331-6456 (United States)

1-888-390-6456 (TTY/TDD United States for hearing impaired)

1-800-461-4575 (Canada)

Certain mobile phone features are dependent on the capabilities and settings of your service provider's network. Additionally, certain features may not be activated by your service provider, and/or the provider's network settings may limit the feature's functionality. Always contact your service provider about feature availability and functionality. All features, functionality, and other product specifications, as well as the information contained in this user's guide are based upon the latest available information and are believed to be accurate

at the time of printing. Motorola reserves the right to change or modify any information or specifications without notice or obligation.

MOTOROLA and the Stylized M Logo are registered in the US Patent & Trademark Office. All other product or service names are the property of their respective owners. The Bluetooth trademarks are owned by their proprietor and used by Motorola, Inc. under license. Java and all other Java-based marks are trademarks or registered trademarks of Sun Microsystems, Inc. in the U.S. and other countries.

© Motorola, Inc., 2006.

Caution: Changes or modifications made in the radio phone, not expressly approved by Motorola, will void the user's authority to operate the equipment.

Manual Number:

contents

menu map	5	Bluetooth™ wireless	18	answer options	36
Use and Care	7	basics	23	calls	37
essentials	8	display	23	turn off a call alert	37
about this guide	8	text entry	26	recent calls	37
SIM card	9	volume	30	redial	38
battery	9	navigation key	31	return a call	39
turn it on & off	13	external display	31	caller ID	39
make a call	13	handsfree speaker	31	emergency calls	39
answer a call	13	codes & passwords	31	voicemail	40
store a phone number	13	lock & unlock phone	32	other features	41
call a stored phone	14	customize	33	advanced calling	41
number	14	ring style	33	phonebook	45
your phone number	14	ring & event lights	34	messages	50
main attractions	15	time & date	34	instant messaging	52
play videos	15	wallpaper	35	chat	53
multimedia messages	16	screen saver	35	personalizing	54
cable connections	17	display appearance	35	call times & costs	57

handsfree	58
data & fax calls	59
network	60
personal organizer	60
security	62
fun & games	62
service and repairs	65
SAR Data	66
EU Conformance	68
Safety Information	70
Warranty	76
Hearing Aid Compatibility	82
WHO Information	84
Product Registration	84
Export Law Assurances	85
Wireless: The New Recyclable	85

Smart Practices While Driving	86
index	88

menu map

main menu



Phonebook



Recent Calls

- Received Calls
- Dialed Calls
- Notepad
- Call Times *
- Call Cost *
- Data Times *
- Data Volumes *



Messages

- Create Message
- Message Inbox
- Voicemail
- Browser Msgs
- Info Services *
- Quick Notes
- Outbox
- Drafts
- MMS Templates



Tools

- SIM Tool Kit Apps *
- Voice Message
- Calculator
- Datebook
- Shortcuts
- Alarm Clock
- Chat *
- Dialing Services
 - Fixed Dial *
 - Quick Dial
 - Voice Dial



Games & Apps



Web Access *

- Browser
- Web Shortcuts
- Stored Pages
- History
- Go To URL
- Browser Setup
- Web Sessions *



Multimedia

- Pictures
- Sounds
- Videos *



IM *

- Log In
- Offline Convs.
- IM Account
- Offline Settings
- Help



Settings

- (see next page)

* optional features

This is the standard main menu layout. **Your phone's menu may be different.**

settings menu



Personalize

- Home Screen
- Main Menu
- Color Style
- Greeting
- Wallpaper
- Screen Saver



Ring Styles

- Style
- style Detail
- Ring Lights
- Event Lights



Sync *



Call Forward *

- Voice Calls
- Fax Calls
- Data Calls
- Cancel All
- Forward Status



In-Call Setup

- In-Call Timer
- Call Cost Setup *
- My Caller ID
- Talk and Fax
- Answer Options
- Call Waiting



Initial Setup

- Time and Date
- 1-Touch Dial
- Display Timeout
- Backlight
- TTY Setup *
- Scroll
- Language
- Contrast
- DTMF
- Master Reset
- Master Clear



Phone Status

- My Tel. Numbers
- Credit Info/Available *
- Active Line *
- Battery Meter
- Other Information



Headset

- Auto Answer
- Voice Dial



Car Settings

- Auto Answer
- Auto Handsfree
- Power-Off Delay
- Charger Time



Network

- New Network
- Network Setup
- Available Networks
- My Network List *
- Service Tone *
- Network Jingle *
- Call Drop Tone



Security

- Phone Lock
- Lock Application
- Fixed Dial *
- Restrict Calls *
- Call Barring *
- SIM PIN
- New Passwords
- Certificate Mgmt *



Java™ Settings

- Java System
- Delete All Apps
- App Vibration
- App Volume
- App Priority *
- App Backlight
- Set Standby App *
- DNS IP *

* optional features

Use and Care

To care for your Motorola phone, please keep it away from:



liquids of any kind

Don't expose your phone to water, rain, extreme humidity, sweat, or other moisture.



dust and dirt

Don't expose your phone to dust, dirt, sand, food, or other inappropriate materials.



extreme heat or cold

Avoid temperatures below -10°C/14°F or above 45°C/113°F.



cleaning solutions

To clean your phone, use only a dry soft cloth. Don't use alcohol or other cleaning solutions.



microwaves

Don't try to dry your phone in a microwave oven.



the ground

Don't drop your phone.


essentials


CAUTION: Before using the phone for the first time, read the *Important Safety and Legal Information* included in the gray-edged pages at the back of this guide.



about this guide

This guide shows how to locate a menu feature as follows:

Find it:  >  **Recent Calls** > **Dialed Calls**

This example shows that, from the home screen, you press the *menu key*  to open

the menu. Scroll to and select  **Recent Calls**, then scroll to and select **Dialed Calls**.

Press the *navigation key*  to scroll to a menu feature. Press the *center key*  to select the highlighted menu feature.

symbols



This means a feature is network/subsription dependent and may not be available in all areas. Contact your service provider for more information.



 
This means a feature requires an optional accessory.

SIM card


Caution: Don't bend or scratch your SIM card. Keep it away from static electricity, water, and dirt.

Your *Subscriber Identity Module* (SIM) card contains personal information like your phone number and phonebook entries.


1

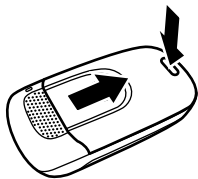


2

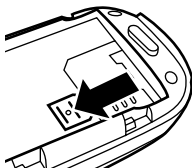 

3

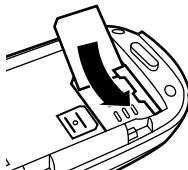 

4

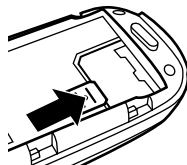 


battery

battery installation


1



 2

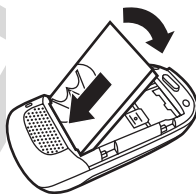


3

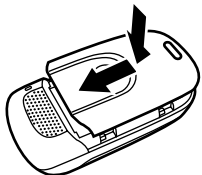 

battery charging

New batteries are not fully charged. Plug the battery charger into your phone and an electrical outlet.

 Your phone might take several seconds to start charging the battery. Your display shows **Charge Complete** when finished.

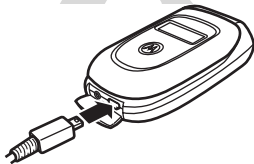

Tip: Relax, you can't overcharge your battery. It will perform best after you fully charge and discharge it a few times.

Your phone has a light just below the external display that can pulse when you charge your battery. To turn this light on or off, see page 34.

You can charge your battery by connecting a cable from your phone's mini-USB port to a USB port on a computer. Both your phone and the computer must be turned on, and your computer must have the correct software drivers installed. Cables and software drivers are available in Motorola Original data kits, sold separately.



battery tips

Battery life depends on the network, signal strength, temperature, features, and accessories you use.

- Always use Motorola Original batteries and chargers. The warranty does not cover damage caused by non-Motorola batteries and/or chargers.



- New batteries or batteries stored for a long time may take more time to charge.
- When charging your battery, keep it near room temperature.

When storing your battery, keep it uncharged in a cool, dark, dry place.

- Never expose batteries to temperatures below -10°C (14°F) or above 45°C (113°F). Always take your

phone with you when you leave your vehicle.

- It is normal for batteries to gradually wear down and require longer charging times. If you notice a change in your battery life, it is probably time to purchase a new battery.



Contact your local recycling center for proper battery disposal.

Warning: Never dispose of batteries in a fire because they may explode.

Before using your phone, read the battery safety information in the “Safety and General Information” section included in the gray-edged pages at the back of this guide.

battery tips

Battery life depends on the network, signal strength, temperature, features, and accessories you use.

- Always use Motorola Original batteries and chargers. The warranty does not cover damage caused by non-Motorola batteries and/or chargers.
- New batteries or batteries stored for a long time may take more time to charge.
- When charging your battery, keep it near room temperature.
- When storing your battery, keep it uncharged in a cool, dark, dry place, such as a refrigerator.



- Never expose batteries to temperatures below -10°C (14°F) or above 45°C (113°F). Always take your phone with you when you leave your vehicle.
- It is normal for batteries to gradually wear down and require longer charging times. If you notice a change in your battery life, it is probably time to purchase a new battery.




Contact your local recycling center for proper battery disposal.

Warning: Never dispose of batteries in a fire because they may explode.


Before using your phone, read the battery safety information in the “Safety and General Information” section included in the gray-edged pages at the back of this guide.

turn it on & off


Caution: Some phones ask for your SIM card PIN code when you turn them on. If you enter an incorrect PIN code 3 times in a row, your SIM card is disabled and your display shows **SIM Blocked**. Contact your service provider.


To turn on your phone, press and hold  for a few seconds or until the display turns on. If prompted, enter your 6-digit SIM card PIN code and/or 4-digit unlock code.




To turn off your phone, press and hold  for 2 seconds.


make a call

Enter a phone number and press  to make a call.

To “hang up,” close the flip or press .

answer a call


When your phone rings and/or vibrates, just open the flip or press  to answer.

To “hang up,” close the flip or press .

store a phone number

You can store a phone number in your **Phonebook**:

- 1 Enter a phone number in the home screen.
- 2 Press the **Store** key.

- 3 Enter a name and other details for the phone number. To select a highlighted item, press the *center key* .



Note: You can store a phonebook entry on your phone or on your SIM card. In the entry, select **Store To** and choose **Phone** or **SIM**. Entries stored on the SIM card can only include name and number details.

- 4 Press the **Done** key to store the number.

To edit or delete a **Phonebook** entry, see page 45.

To store an email address, press 
>  **Phonebook**, then press
 > **New** > **Email Address**

call a stored phone number



Find it:  >  **Phonebook**

- 1 Scroll to the phonebook entry.



Shortcut: In the phonebook, press keypad keys to enter the first letters of an entry name, then press the **Search** key to jump to the entry.

- 2 Press  to call the entry.

your phone number

From the home screen, press   to see your number.

Tip: Want to see your phone number while you're on a call? Press  > **My Tel. Numbers**.

You can edit the name and phone number stored on your SIM card. From the home screen, press  , select an entry, press the **View** key, and press the **Edit** key. If you don't know your phone number, contact your service provider.



main attractions

You can do much more with your phone than make and receive calls!

play videos

 
Find it:  >  **Multimedia** > **Videos**
> *video name*



The video clip plays:

Press S
up to pause or
play the video.

Press S
down to stop
the video.

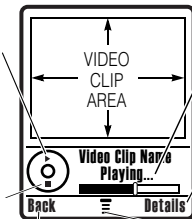

Status

View video
details.

Press  to
open **Videos**
Menu.

Return to previous
screen.

To download a video with the micro-browser, see page 63. You can also attach videos to multimedia messages.

multimedia messages

To create a group mailing list, see page 49.
For more message features, see page 50.


send a multimedia message


A *Multimedia Messaging Service* (MMS) message contains pages with text and media objects (including pictures, animations, or sounds). You can send the multimedia message to other MMS-capable phones, and to email addresses.



Find it:  > **Create Message** > **New Multimedia Msg**


- 1 Press keypad keys to enter text on the page (for details about text entry, see page 26).


To insert a **picture, sound, or other object** on the page, press  > **Insert**. Select the file type and the file.

To insert **another page** in the message, enter text or objects on the current page and press  > **Insert** > **New Page**. You can enter more text and objects on the new page.


- 2 When you finish the message, press the **Send To** key.

- 3 Choose one or more people for **Send To**:


To select a **phonebook entry**, scroll to the entry and press the *center key* . Repeat to add other phonebook entries.

To **enter** a new number or email address, scroll to **[New Number]** or **[New Email Address]** and press the *center key* .

- 4 To **send** the message, press the **Send** key.

Before you send a message, press  to choose **Save to Drafts**, **Abort Message**, or open **Message Options** (such as message **Subject** or **CC** addresses).

receive a multimedia message

When you receive a multimedia message or letter, your phone plays an alert and the display shows **New Message** with a message indicator such as .

Press the **Read** key to open the message.

If a multimedia message contains media objects:

- Photos, pictures, and animations show as you read the message.
- A sound file plays when its slide shows. Use the volume keys to adjust the sound volume.

 
Note: In a multimedia letter, you may have to scroll to an indicator in the text to play a sound file.

- Attached files are added to the end of the message. To open an attachment,

scroll to the file indicator/filename and press the **View** key (image), **Play** key (sound), or **Open** key (phonebook vCard, datebook vCalendar entry, or unknown file type).

cable connections

 Your phone has a mini-USB port so you can connect it to a computer to transfer data.

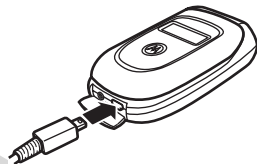

You can use data cables and supporting software on your computer to:

- Synchronize phonebook and datebook information between your phone and a computer or hand-held device.

- Use your phone as a modem to connect to the Internet.
- Use your phone to send and receive data calls from your computer or handheld device.

Note: Motorola Original USB data cables and supporting software are sold separately. Check your computer or hand-held device to determine the type of cable you need. To **transfer data** between your phone and computer, you must install the software included with the Motorola Original data kit. See the data kit user's guide for more information. To make **data and fax calls** through a connected computer, see page 59.



Bluetooth™ wireless

Your phone supports Bluetooth wireless connections. You can connect your phone with a Bluetooth headset or car kit to make handsfree calls. You can connect your phone with a phone or computer that supports Bluetooth connections to exchange files.

Note: The use of wireless phones while driving may cause distraction. Discontinue a call if you can't concentrate on driving. Additionally, the use of wireless devices and their accessories may be prohibited or restricted in certain areas. Always obey the laws and regulations on the use of these products.

Note: Your phone's Bluetooth features and Bluetooth Class 1 power levels are not allowed for outdoor operation in France. To avoid unlawful interference with radio

signals, do not use the Bluetooth features in France unless you are indoors.

For maximum Bluetooth security, you should always connect Bluetooth devices in a safe, private environment.

turn Bluetooth power on or off


Note: To extend battery life, use this procedure to set Bluetooth power to **Off** when not in use. Your phone will not connect to devices until you set Bluetooth power back to **On** and connect your phone with the device again.


use a headset or handsfree car kit

Before you try to connect your phone with a handsfree device, make sure the device is **on** and **ready** in *pairing* or *bonding* mode (see the user's guide for the device). You can

connect your phone with only one device at a time.

Your phone lists the devices it finds within range.

- 1 Scroll to a device in the list and press the *center key* .
- 2 Press the **Yes** or **OK** key to connect to the device.
- 3 If necessary, enter the device passkey (such as **0000**) and press the **OK** key.

When your phone is connected, the Bluetooth indicator  shows in the home screen.

Shortcut: When Bluetooth power is on, your phone can automatically connect to a handsfree device you have used before. Just turn on the device or move it near the phone.

Tip: We can't see the device you're holding. For specific information about a device, refer to the instructions that came with it.


copy files to another device

You can copy a media file, phonebook entry, datebook event, or Web shortcut from your phone to a computer or other device.




Note: You can't copy some copyrighted objects.

Before you try to copy files to another device, make sure the device is **on** and **ready** in *discoverable* mode (see the user's guide for the device).


- 1 On your phone, scroll to the object that you want to copy to the other device.
- 2 Press , then select:

- **Copy** for media files.
- **Share Phonebook Entry** for phonebook entries.
- **Send** for datebook events.

- 3 Select a recognized device name, or **[Look For Devices]** to search for the device where you want to copy the file.

Note: Once you connect your phone to a Bluetooth device, that device can start similar Bluetooth connections with your phone. Your display shows the Bluetooth indicator  at the top when there is a Bluetooth connection. To change a device's **Access** setting, see page 22.

receive files from another device






Before you try to receive files from another device, make sure your phone's Bluetooth power is **on** (see page 19). 

- 1 Place your phone near the device, and send the file from the device.
- 2 Press the **Accept** key on your phone to accept the file from the other device.

Your phone notifies you when file transfer is complete. If necessary, press the **Save** key to save the file.

advanced Bluetooth features


A device is *recognized* after you connect to it once (see page 19).

features	
make phone visible to other device	Allow a Bluetooth device to discover your phone: 
connect to recognized device	Connect your phone to a recognized handsfree device: 
drop connection with headset or handsfree device	Scroll to the device name and press the Drop key. 
switch to headset or handsfree device during call	During a call, press  > Use Bluetooth to switch to a recognized headset or car kit. 

features


move multimedia object to device

Caution: Moving an object **deletes** the original object from your phone.

Scroll to the object, press  > **Move**, select the device name.



copy multimedia object to device

Scroll to the object, press  > **Copy**, select the device name.



features

edit device properties


Scroll to the device name and press the **Edit** key.

Note: The **Access** setting can restrict how this device connects to your phone. You can choose **Automatic** (always connects), **Always Ask** (asks you before connecting), **Just Once**, or **Never**.

 
basics



See page 1 for a basic phone diagram.



display

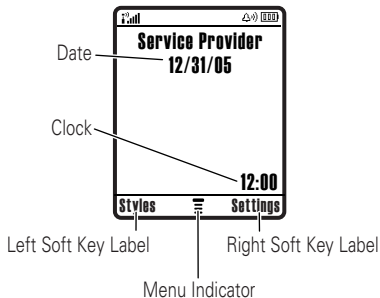The *home screen* shows when you turn on the phone. To dial a number from the home screen, press number keys and .

Note: Your home screen may look different from the one below, depending on your service provider.

 




The *Menu Indicator*  shows that you can press  to open the menu. *Soft Key Labels* show the current soft key functions. For soft key locations, see page 1.



Your home screen might show headlines from your service provider at the bottom. To change this headline view, press  >  **Settings** > **Personalize** > **Home Screen** > **Headlines**.

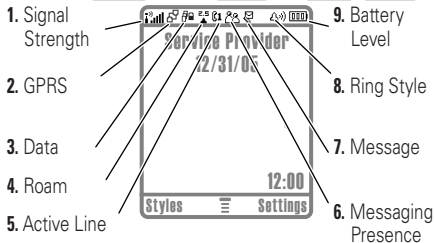

Status indicators can show at the top of the home screen:




1 Signal Strength Indicator – Vertical bars show the strength of the network connection. You can't make or receive calls when  or  shows.

 
2 GPRS Indicator – Shows when your phone is using a high-speed *General Packet Radio Service* (GPRS) network connection. Indicators show PDP context active  or packet data available .




3 Data Indicator – Shows connection status.




 = secure packet data transfer

 = unsecure packet data transfer

 = secure application connection

 = unsecure application connection

 = secure *Circuit Switch Data* (CSD) call

 = unsecure CSD call

 = Bluetooth™ connection is active

4 Roam Indicator – Shows when your phone is seeking or using a network outside your home network. Indicators can include:



= 2G home

= 2G roam

= 2.5G home

= 2.5G roam

5 Active Line Indicator – Shows to indicate an active call, or to indicate when call forwarding is on. Indicators for dual-line-enabled SIM cards can include:



= line 1 active

= line 1 active, call forward on

= line 2 active

= line 2 active, call forward on

6 Messaging Presence Indicator – Shows when Instant Messaging (IM) is active. Indicators can include:



= IM active

= available for IM

= busy

= invisible to IM

= available for phone calls

= offline

When a Java™ application is active, can show here.

7 Message Indicator – Shows when you receive a new message. Indicators can include:



= text message

= voicemail message

= voicemail & text message

☒ = IM message ☑ = active chat session

8 Ring Style Indicator – Shows the ring style setting.

🔔 = loud ring 🔔📢 = vibrate then ring

🔔📢 = soft ring 🔔📢 = silent

🔔📢 = vibrate

 
9 Battery Level Indicator – Vertical bars show the battery charge level. Recharge the battery when your phone shows **Low Battery**.

text entry

Some features let you enter text.

For indicator descriptions, see following section.


Flashing cursor indicates insertion point.

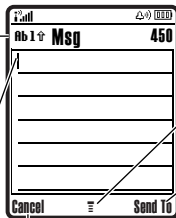





Press  to open sub-menu.

After you enter text, press the **Send To** key to enter recipients.


Press the **Cancel** key to exit without making changes.

Press  in a text entry view to select an entry mode:





entry modes	
 or 1	Your Primary text entry mode can be set to any iTAP®  or tap 1 mode.
 or 2	Your Secondary text entry mode can be set to any iTAP  or tap 2 mode, or set to None if you don't want a secondary entry mode.
12	Numeric mode enters numbers only.
@	Symbol mode enters symbols only.

To set your primary and secondary text entry modes, press  > **Entry Setup** in a text entry view and select **Primary Setup** or **Secondary Setup**.

Tip: WANT TO SHOUT YOUR MESSAGE?

 
Press  in a text entry view to change text case to all capital letters (**AB**), no capitals (**ab**), or next letter capital (**Ab**).

iTAP® mode

Press  in a text entry view to switch to iTAP mode. If you don't see  or , press  > **Entry Setup** to set iTAP mode as your primary or secondary text entry mode.

iTAP mode lets you enter words using one keypress per letter. The iTAP software combines your keypresses into common words, and predicts each word as you enter it.

For example, if you press **7 7 6 4**, your display shows:

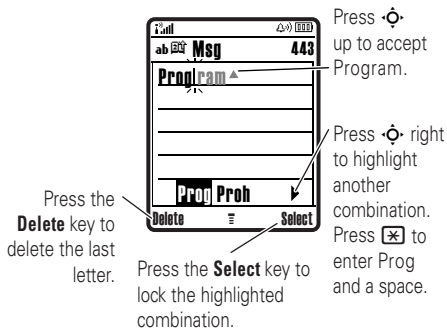

- If you want a different word (such as **Progress**), continue pressing keypad keys to enter the remaining letters.
- To enter numbers quickly, press and hold a number key to temporarily switch to numeric mode. Press the

number keys to enter the numbers you want. Enter a space to change back to iTAP mode.

- Press **1** to enter punctuation or other characters.

 
tap mode

Press **#** in a text entry view to switch to tap mode. If you don't see **Ab 1** or **Ab 2**, press **☰** > **Entry Setup** to set tap mode as your primary or secondary text entry mode.

To enter text in tap mode, press a keypad key repeatedly to cycle through the letters and number on the key. Repeat this step to enter each letter.

For example, if you press **8** one time, your display shows:

Character displays at insertion point.

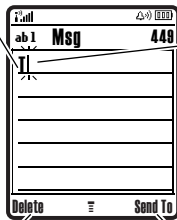

After 2 seconds, character is accepted and cursor moves to next position.

 
Press the **Delete** key to delete character to left of insertion point

After you enter text, press the **Send To** key to enter recipients.

When you enter three or more characters in a row, your phone may guess the rest of the

word. For example, if you enter **prog** your display might show:

Character displays at insertion point.

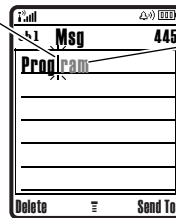

Press **↵** right to accept Program, or press **✖** to reject it and enter a space after Prog.

- The first character of every sentence is capitalized. If necessary, press **↵** down to change the character to lowercase before the cursor moves to the next position.
- Press **↵** to move the flashing cursor to enter or edit message text.
- If you don't want to save your text or text edits, press **⏏** to exit without saving.

- *Tap extended* mode cycles through additional special characters and symbols as you repeatedly press a keypad key.

numeric mode

Press **#** in a text entry view until you see **12**. Press the number keys to enter the numbers you want.

 
symbol mode

Press **#** in a text entry view until you see **@**. Press a keypad key to show its symbols at the bottom of the display. Scroll to the symbol you want, then press the *center key* **◆**.

volume



Press the volume keys to:

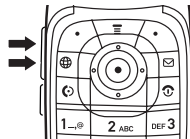
- turn off an incoming call alert
- change the earpiece volume during calls
- change the ringer volume from the home screen



Tip: Sometimes silence really is golden. That's why you can quickly set your ringer to **Vibrate** or **Silent** by holding the down volume key in the home screen.

navigation key

 Press the *navigation key*  up, down, left, or right to scroll to items in the display. When you scroll to something, press the *center key*  to select it.



external display

When your phone is closed, the external display shows the time and indicates phone status, incoming calls, and other events. For a list of phone status indicators, see page 24.

handsfree speaker

You can use your phone's handsfree speaker to make calls without holding the phone to your ear.

During a call, press the **Speaker** key to turn the handsfree speaker on. Your display shows **Spkrphone On** until you turn it off or end the call.

Note: The handsfree speaker won't work when your phone is connected to a handsfree car kit or headset.


codes & passwords

Your phone's 4-digit **unlock code** is originally set to **1234**. The 6-digit **security code** is originally set to **000000**. If your service provider didn't change these codes, you should change them:

Find it:  >  **Settings** > **Security**
> **New Passwords**

You can also change your **SIM PIN** password.

If you forget your unlock code: At the **Enter Unlock Code** prompt, try entering 1234 or the



last four digits of your phone number. If that doesn't work, press  and enter your 6-digit security code instead.

If you forget other codes: If you forget your security code, SIM PIN code, or PIN2 code, contact your service provider.

lock & unlock phone

You can lock your phone to keep others from using it. To lock or unlock your phone, you need the 4-digit unlock code.

To **manually lock** your phone:

Press  >  **Settings** > **Security** > **Phone Lock** > **Lock Now**.

To **automatically lock** your phone whenever you turn it off: Press  >  **Settings** > **Security** > **Phone Lock** > **Automatic Lock** > **On**.

Note: You can make emergency calls on a locked phone (see page 39). A locked phone still rings or vibrates for incoming calls or messages, **but you need to unlock it to answer**.

customize

ring style

Each ring style profile uses a different set of sounds or vibrations for incoming calls and other events. Here are the profiles you can choose:



Loud



Vibrate



Silent



Soft



Vibe then Ring

The ring style profile's indicator shows at the top of your home screen. To choose your profile:

Find it:  >  **Ring Styles** > **Style:** *style name*


Shortcut: In the home screen, press the volume keys up or down to quickly change your ring style profile.

change alerts in a ring style

You can change the alerts for incoming calls and other events. Your changes are saved in the current ring style profile.

Find it:  >  **Ring Styles** > *style* **Detail**

Note: *Style* represents the current ring style. You can't set an alert for the **Silent** ring style setting.

- 1 Scroll to **Calls** (or **Line 1** or **Line 2** for dual-line phones), then press the **Change** key to change it.
- 2 Scroll to the alert you want, then press the *center key* .
- 3 Press the **Back** key to save the alert setting.

Tip: If you want a ring that sets you apart, you can use an MP3 sound file. To download files, see page 63.



ring & event lights

Your phone has a light just below the external display that can pulse for incoming calls or messages, or while you charge your battery.



To set the light for your **incoming calls**, press  >  **Settings** > **Ring Styles** > **Ring Lights**.



You can also turn the ring light on or off for calls from phonebook entries in a **Category** (see page 48).

To set the light for your **incoming messages and battery charging**, press  >  **Settings** > **Ring Styles** > **Event Lights**.




time & date

Your phone needs the time and date for the datebook.

To **synchronize** the time and date with the network: Press  >  **Settings** > **Initial Setup** > **Time and Date** > **Autoupdate** > **On**. 

To **manually** set the time and date, turn off **Autoupdate**, then: Press  >  **Settings** > **Initial Setup** > **Time and Date** > *time or date*.


To choose an **analog or digital** clock for your home screen, press  >  **Settings** > **Personalize** > **Home Screen** > **Display** > **Clock**.

Note: If your home screen shows headlines from your service provider, it uses a digital clock. To choose an analog clock, you must turn off the headlines. Press  >  **Settings** > **Personalize** > **Home Screen** > **Headlines** > **Off**. 

wallpaper

Set a photo, picture, or animation as a wallpaper (background) image in your home screen.

Find it:  >  **Settings** > **Personalize** > **Wallpaper**

options	
Picture	Press  up or down to select a picture, or select None for no wallpaper.
Layout	Select Center to center the image in the display, Tile to repeat the image across the display, or Fit-to-screen to stretch the image across the display.


screen saver

Set a photo, picture, or animation as a screen saver. The screen saver shows when the flip

is open and no activity is detected for a specified time.



Tip: This feature helps save your screen, but not your battery. To extend battery life, turn off the screen saver.

Find it:  >  **Settings** > **Personalize** > **Screen Saver**

options	
Picture	Press  up or down to select a picture or animation, or select None for no screen saver.
Delay	Select the length of inactivity before the screen saver shows.

display appearance

To choose the **colors** that your phone uses for indicators, highlights, and soft key labels:

Press  >  **Settings** > **Personalize** > **Color Style**.

To save battery life, your keypad **backlight** turns off when you're not using your phone. The backlight turns back on when you open the flip or press any key. To set how long your phone waits before the backlight turns off:

Press  >  **Settings** > **Initial Setup** > **Backlight**.

Note: To turn the backlight on or off for Java™ applications, press  >  **Settings** > **Java Settings** > **App Backlight**.

To save battery life, the **display** can turn off when you're not using your phone. The display turns back on when you open the flip or press any key. To set how long your phone waits before the display turns off:

Press  >  **Settings** > **Initial Setup** > **Display Timeout**.

answer options

You can use different ways to answer an incoming call. To turn on or turn off an answer option:

Find it:  >  **Settings** > **In-Call Setup** > **Answer Options**

options	
Multi-Key	Answer by pressing any key.
Open to Answer	Answer by opening the flip.

calls


To make and answer calls, see page 13.

turn off a call alert

You can press the volume keys to turn off a call alert before answering the call.




recent calls

Your phone keeps lists of incoming and outgoing calls, even for calls that didn't connect. The most recent calls are listed first. The oldest calls are deleted as new calls are added.

Shortcut: Press  from the home screen to see a list of recent calls.


Find it:  >  **Recent Calls**
> **Received Calls** or **Dialed Calls**

Scroll to a call. A ✓ next to a call means the call connected.



- To call the number, press .
- To see call details (like time and date), press the *center key* .
- To see the **Last Calls Menu**, press . This menu can include:



options	
Store	Create a phonebook entry with the number in the No. field. Store does not appear if the number is already stored.

options	
Delete	Delete the entry.
Delete All	Delete all entries in the list.
Hide ID / Show ID	Hide or show your caller ID for the next call.
Send Message	Open a new text message with the number in the To field.
Add Digits	Add digits after the number.
Attach Number	Attach a number from the phonebook or recent calls lists.
Send Tones	Send the number to the network as DTMF tones. This option shows only during a call.

options	
Talk then Fax	Talk and then send a fax in the same call (see page 59). 


redial

- 1 Press  from the home screen to see a list of recent calls.
- 2 Scroll to the entry you want to call, then press .

If you hear a **busy signal** and you see **Call Failed**, you can press  or the **Retry**  key to redial the number. When the call goes through, your phone rings or vibrates one time, shows **Redial Successful**, and connects the call.

return a call

Your phone keeps a record of your unanswered calls, and shows **X Missed Calls**, where **X** is the number of missed calls.

- 1 Press the **View** key to see the received calls list.
- 2 Scroll to the call you want to return, then press .


caller ID

Calling line identification (caller ID) shows the phone number for an incoming call in your external and internal displays.

Your phone shows the caller's name and picture when they're stored in your

phonebook, or **Incoming Call** when caller ID information isn't available.

You can set your phone to play a different ringer ID for an entry stored in your phonebook (see page 47).

To show or hide **your phone number** from the next person you call, enter the phone number and press  > **Hide ID/Show ID**.


emergency calls

Your service provider programs one or more emergency phone numbers, such as 911 or 112, that you can call under any circumstances, even when your phone is locked or the SIM card is not inserted.

Note: Emergency numbers vary by country. Your phone's preprogrammed emergency number(s) may not work in all locations, and sometimes an emergency call cannot be



placed due to network, environmental, or interference issues.

- 1 Press the keypad keys to dial the emergency number.
- 2 Press  to call the emergency number.

voicemail

Your network stores the voicemail messages you receive. To listen to your messages, call your voicemail number.



Note: Your service provider may include additional information about using this feature.

When you **receive** a voicemail message, your phone shows the voicemail message indicator  and **New Voicemail**. Press the **Call** key to listen to the message.

To **check** voicemail messages:

40 calls







Find it: > Voicemail








Your phone may prompt you to store your voicemail phone number. If you don't know your voicemail number, contact your service provider.

Note: You can't store a **p** (pause), **w** (wait), or **n** (number) character in this number. If you want to store a voicemail number with these characters, create a phonebook entry for it. Then, you can use the entry to call your voicemail.

other features

advanced calling

features
1-touch dial
To call phonebook entries 1 through 9, press and hold the single-digit speed dial number for one second.
You can set 1-touch dial to call the entries in your phone's memory phonebook, your SIM card's phonebook, or your Fixed Dial list: Press  >  Settings > Initial Setup > 1-Touch Dial > Phone , SIM , or Fixed Dial . 
To add a new phonebook entry, see page 13. To edit the Speed No. for a phonebook entry, press  >  Phonebook , scroll to the entry, and press  > Edit .



features
speed dial
Speed dial a phonebook entry: Enter the speed dial number, press  , then press  .
To add a phonebook entry, see page 13.
Tip: If you forget Aunt Mildred's speed dial number, press  >  Phonebook , scroll to her entry, and press the <i>center key</i>  .
attach a phone number 
Dial an area code or prefix for a phonebook number, then:  > Attach Number

features

notepad

The last number you entered is stored in the *notepad*. You can use the notepad to “jot down” a number during a call for later use. To see the notepad:


Press  >  **Recent Calls** > **Notepad**.

- To call the number, press .
- To create a phonebook entry with the number in the **No.** field, press the **Store** key.
- To open the **Dialing Menu** to attach a number or insert a special character, press .


features

international calls



If your phone service includes international dialing, press and hold  to insert your local international access code (indicated by +). Then, press the keypad keys to dial the country code and phone number.

hold a call

Press  > **Hold** to put all active calls on hold.

mute a call

Press  > **Mute** to put all active calls on mute.


features



call waiting



When you're on a call, you'll hear an alert if you receive a second call.

Press  to answer the new call.

- To switch between calls, press the **Switch** key.
- To connect the two calls, press the **Link** key.
- To end the call on hold, press  > **End Call On Hold**.


To turn the call waiting feature on or off, press  >  **Settings** > **In-Call Setup** > **Call Waiting** > **On** or **Off**.

features

conference call



During a call:

Dial next number, press , press the **Link** key.

transfer a call



During a call:

 > **Transfer**, dial transfer number, press 

call forwarding



Set up or cancel call forwarding:

 >  **Settings** > **Call Forward**

restrict calls



Restrict outgoing or incoming calls:

 >  **Settings** > **Security** > **Restrict Calls**

features

call barring



Restrict outgoing or incoming calls:

 >  **Settings** > **Security** > **Call Barring**

TTY calls



Set up your phone for use with an optional TTY device:

 >  **Settings** > **Initial Setup** > **TTY Setup**

change phone line



If you have a dual-line-enabled SIM card, you can change your line to make and receive calls from your other phone number.

 >  **Settings** > **Phone Status** > **Active Line**

The active line indicator shows the active phone line (see page 25).



features

fixed dial



When you turn on fixed dialing, you can call only numbers stored in the fixed dial list.

Turn fixed dialing on or off:

 >  **Settings** > **Security** > **Fixed Dial**

Use the fixed dial list:

 >  **Tools** > **Dialing Services** > **Fixed Dial**

quick dial



Dial preprogrammed phone numbers:


 >  **Tools** > **Dialing Services** > **Quick Dial**

features

DTMF tones

Activate DTMF tones:

 >  **Settings** > **Initial Setup** > **DTMF**




To send DTMF tones during a call, just press number keys or scroll to a number in the phonebook or recent calls lists and press  > **Send Tones**.

phonebook

features

edit or delete a phonebook entry

Edit a number stored in the phonebook:

 >  **Phonebook**, scroll to the phonebook entry, and press . You can select **Edit**, **Delete**, or other options.

Shortcut: In the phonebook, press keypad keys to enter the first letters of an entry name, then press the **Search** key to jump to the entry.

features

record voice name for a phonebook entry

When creating a phonebook entry, scroll to **Voice Name** and press the **Record** key. Press the **Record** key again and say the entry's name (within 2 seconds). When prompted, press the **Record** key and repeat the name.

Note: The **Voice Name** option isn't available in entries stored on the SIM card.



features

voice dial a phonebook entry

Voice dial a number stored in the phonebook:

 >  **Tools** > **Dialing Services** > **Voice Dial**

When prompted, say the entry's voice name (within 2 seconds).

Tip: If you use **Voice Dial** a lot, you can create a shortcut to it. Scroll to **Voice Dial**, then press and hold . To use the shortcut, press  and the shortcut key number.

features

set ringer ID for a phonebook entry



Assign a ring alert (ringer ID) to an entry:

 >  **Phonebook** > *entry*, then press

 > **Edit** > **Ringer ID** > *ringer name*



Note: The **Ringer ID** option isn't available in entries stored on the SIM card.


Activate ringer IDs:

 >  **Ring Styles** > *style* **Detail** > **Ringer IDs**

set picture ID for a phonebook entry

Assign a photo or picture to show when you receive a call from an entry:

 >  **Phonebook** > *entry*, then press

 > **Edit** > **Picture** > *picture name*

Note: The **Picture** option isn't available in entries stored on the SIM card.

features



set picture ID view for phonebook

Show entries as a text list, or with picture caller ID photos:

 >  **Phonebook**, then press

 > **Setup** > **View by** > *view name*

set category for a phonebook entry

 >  **Phonebook** > *entry*, then press

 > **Edit** > **Category** > *category name*

Note: The **Category** option isn't available in entries stored on the SIM card.

set category view for phonebook

 >  **Phonebook**, then press





 > **Categories** > *category name*

You can show **All** entries, entries in a predefined category (**Business**, **Personal**, **General**, **VIPs**), or entries in a category you create.

features

set light ID for phonebook category

Turn on or off the ring light for calls from entries in a category:

-  >  **Phonebook**, then press
-  > **Categories**, scroll to the category, press
-  > **Edit** > **Light ID**




For more about ring lights, see page 34.

Note: The **Category** option isn't available in entries stored on the SIM card.


features

set primary number or address for a phonebook entry

Set the primary number for an entry with multiple numbers:

-  >  **Phonebook**, scroll to the entry, press
-  > **Set Primary** > *number or address*

Note: The **Set Primary** option isn't available in entries stored on the SIM card.

Tip: In **Primary** number view mode, you can still peek at other numbers stored for the same name. Scroll to the name and press  left or right to see the other numbers.

features

create group mailing list

You can put several phonebook entries in a group mailing list, then send a message to the list. To create a list:

 >  **Phonebook**, then press

 > **New** > **Mailing List**

You can select the list name as an address for multimedia messages.

Note: A **Mailing List** cannot include entries stored on the SIM card.

features

sort phonebook list

Set the order in which entries are listed:

 >  **Phonebook**, then press


 > **Setup** > **Sort by** > *sort order*

You can sort the phonebook list by **Name**, **Speed No.**, **Voice Name**, or **Email**. When sorting by name, you can see **All** numbers or just the **Primary** number for each name.

copy one phonebook entry

Copy an entry from the phone to the SIM card, or from the SIM card to the phone:

 >  **Phonebook**, scroll to the entry, press

 > **Copy** > **Entries** > **To**

features

send phonebook entry to another device

Send a phonebook entry to another phone, computer, or device:

-  >  **Phonebook**, scroll to the entry, press
-  > **Share Phonebook Entry**

For more information about copying files to another device, see page 20.

messages

For basic multimedia message features, see page 16.

features

send text message

-  > **Create Message** > **New Short Msg**



features

send voice message

-  > **Create Message** > **New Voice Msg**

To record the voice message, press the **Record** key, speak, then press the **Stop** key. Your phone inserts the voice recording into a message and lets you enter email addresses or phone numbers to receive the message.



use a multimedia template

Open a multimedia message with preloaded animations:







-  > **Create Message** > **MMS Templates**




features

read and manage messages


 > **Message Inbox**

Icons next to each message indicate if it is read  or unread . Icons can also indicate if the message is locked , urgent , or low priority , or if it has an attachment .

To see message options like **Reply**, **Forward**, **Lock**, or **Delete**, scroll to a message and press .

store message objects


Go to a multimedia message page, or scroll to an object in a message, then:

 > **Store**

features

store text messages on your SIM card

To store incoming text messages on your SIM card, press:

  > **Inbox Setup** > **Text Msg Setup** > **Store To** > **SIM**

browser messages

Read messages received by your micro-browser:

 > **Browser Msgs**

info services

Read subscription-based information services messages:

 > **Info Services**

instant messaging

features	
log in	
> IM > Log In	
add contacts	
After you log in: Select Contact List > Add Contact and enter the contact's IM ID and nickname.	
find others online	
After you log in: Select Contact List to see a list of others online.	
start conversation	
From your Contact List , scroll to a name in Online Contacts , press the Send IM key.	

features	
open active conversation	
From your Contact List , scroll to a name in Conversations , press the View key.	
end conversation	
From the conversation view: > End Conversation	
log out	
Select Log Out from the IM Online menu.	
create or change IM accounts	
> IM > IM Account Select an IM account, or select New to create a new IM account.	

features

log in automatically




 >  **IM** > **Offline Settings**

Turn on **Auto-Login** to start the IM login whenever you select  > **IM**. Turn on **Power-On Login** to start the IM login whenever you turn on your phone.


hide your online status



When you log in, other users can see you are **Online**. To change your status in IM, press  > **My Status** > **Away** or **Invisible**.

block contacts




To block instant messages from a contact, scroll to the contact in the **Contact List** and press  > **Block Contact**. You must be online to block a contact. Blocked contacts will not appear in your **Contact List**.

features

set alerts for contacts



When a special contact comes online, your phone can ring or vibrate. Scroll to the contact in the **Contact List** and press  > **Set Online Alert**.

set IM ring style



Select a ring or vibration for new IM messages and contact alerts.

 >  **Ring Styles** > *style* **Detail** > **IM**

chat

features

start chat



 >  **Tools** > **Chat**, then press  > **New Chat**

features

receive chat request


Press the **Accept** key or the **Ignore** key.



end chat

During a chat session:



 > End Chat

personalizing

features

language



Set menu language:

 >  Settings > Initial Setup > Language

features

scroll

Set the scroll bar to **Up/Down** or **Wrap Around** in menu lists:

 >  Settings > Initial Setup > Scroll

activate ringer IDs

Activate ringer IDs assigned to phonebook entries and categories:

 >  Settings > Ring Styles > *style Detail*
> Ringer IDs

ring volume

 >  Settings > Ring Styles > *style Detail*
> Ring Volume

keypad volume

 >  Settings > Ring Styles > *style Detail*
> Key Volume

features

reminders

Set reminder alerts for messages that you receive:

 >  **Settings** > **Ring Styles** > *style* **Detail**
> **Reminders**

headline view



If your home screen shows scrolling headlines from your service provider, you can turn them on or off:

 >  **Settings** > **Personalize** > **Home Screen**
> **Headlines** > **On** or **Off**

In the **Home Screen** menu, you can also add or change headline channels.

features

menu view

Show the main menu as graphic icons or as a text-based list:

 >  **Settings** > **Personalize** > **Main Menu**
> **View**

main menu

Reorder your phone's main menu:

 >  **Settings** > **Personalize** > **Main Menu**
> **Reorder**

features

show/hide menu icons


Show or hide menu feature icons in the home screen:

 >  **Settings** > **Personalize** > **Home Screen** > **Home Keys** > **Icons**

Note: This option is not available if your home screen shows scrolling headlines from your service provider.

change home keys

Change the features for the soft keys and navigation key in the home screen:


 >  **Settings** > **Personalize** > **Home Screen** > **Home Keys**

Note: This option is not available if your home screen shows scrolling headlines from your service provider.


features

shortcuts

Create a shortcut to a menu item:

Scroll to the menu item, then press and hold .

Use a shortcut:

Press , then press the shortcut number.

master reset

Reset all options **except** unlock code, security code, and lifetime timer:

 >  **Settings** > **Initial Setup** > **Master Reset**


features

master clear

Caution: Master clear **erases all information you have entered** (including phonebook and datebook entries) **and content you have downloaded** (including photos and sounds) stored in your phone's memory. After you erase the information, you can't recover it.

 >  **Settings** > **Initial Setup** > **Master Clear**

call times & costs

Network connection time is the elapsed time from the moment you connect to your service provider's network to the moment you end the call by pressing . This time includes busy signals and ringing.

The amount of network connection time you track on your resettable timer may not equal the amount of time for which you are billed by your service provider. For billing information, contact your service provider.

features

call times

Show call timers:

 >  **Recent Calls** > **Call Times**

in-call timer

Show time or cost information during a call:

 >  **Settings** > **In-Call Setup** > **In-Call Timer**

call cost

Show call cost trackers:

 >  **Recent Calls** > **Call Cost**


handsfree

Note: The use of wireless phones while driving may cause distraction. Discontinue a call if you can't concentrate on driving. Additionally, the use of wireless devices and their accessories may be prohibited or restricted in certain areas. Always obey the laws and regulations on the use of these products.

features

speakerphone

Activate the speakerphone during a call:

Press the **Speaker** key (if available, or  > **Spkrphone On**).

features



auto answer (car kit or headset)

Automatically answer calls when connected to a car kit or headset:

 >  **Settings** > **Car Settings** or **Headset** > **Auto Answer**

voice dial (headset)







Enable voice dial with headset send/end key:

 >  **Settings** > **Headset** > **Voice Dial**

auto handsfree (car kit)






Automatically route calls to a car kit when connected:

 >  **Settings** > **Car Settings** > **Auto Handsfree**

features
<p>power-off delay (car kit) </p> <p>Set the phone to stay on for a specified time after the ignition is switched off:</p> <p> >  Settings > Car Settings > Power-Off Delay</p>
<p>charger time (car kit) </p> <p>Charge the phone for a specified time after the ignition is switched off:</p> <p> >  Settings > Car Settings > Charger Time</p>

data & fax calls

To connect your phone with a USB cable, see page 17.



features
<p>send data or fax </p> <p>Connect your phone to the device, then place the call through the device application.</p>
<p>receive data or fax </p> <p>Connect your phone to the device, then answer the call through the device application.</p>
<p>talk then fax </p> <p>Connect your phone to the device, enter fax number, press  > Talk then Fax, then press  to make the call.</p>

features

using sync



You can call an Internet server and synchronize your phonebook and datebook entries with the server.

To **set up** an Internet sync partner, press  >  **Settings** > **Sync** > **[New Entry]**. Enter the server details, including **Server URL** (you can omit **http://**) and **Data Path** (the folder below the URL where your data is stored).

To **synchronize files** with a partner you set up, select the partner from the list in  >  **Settings** > **Sync**.

network

features

network settings



See network information and adjust network settings:

 >  **Settings** > **Network**

personal organizer

features


set alarm

 >  **Tools** > **Alarm Clock**

features

turn off alarm

When an alarm happens:

To turn off the alarm, press the **Disable** key or . To set an 8 minute delay, press the **Snooze** key.

Note: The **Snooze** key is available only if the phone is already powered on when the alarm sounds.

add new datebook event

 >  **Tools** > **Datebook**, scroll to the day, press , press  > **New**

see datebook event

See or edit event details:

 >  **Tools** > **Datebook**, scroll to the day, press , press the **View** key

features

event reminder

When an event reminder happens:

To see reminder details, press the **View** key.
To close the reminder, press the **Exit** key.

send datebook event to another device

Send a datebook event to another phone, computer, or device:

 >  **Tools** > **Datebook**, scroll to the day, press , scroll to the event, press  > **Send**

calculator

 >  **Tools** > **Calculator**

features

currency converter

 >  Tools > Calculator, then press

 > Exchange Rate

Enter exchange rate, press the **OK** key, enter amount, and press  > **Convert Currency**.



security

features

SIM PIN

Caution: If you enter an incorrect PIN code 3 times in a row, your SIM card is disabled and your display shows **SIM Blocked**.

Lock or unlock the SIM card:

 >  Settings > Security > SIM PIN

features

lock feature

 >  Settings > Security > Lock Application

manage certificates













Enable or disable Internet access certificates stored on your phone:




 >  Settings > Security > Certificate Mgmt

Certificates are used to verify the identity and security of Web sites when you download files or share information.

fun & games

Note: A lock () icon next to a picture, sound, or other object means that you cannot send or copy it.


features
<p>view, delete, or manage pictures </p> <p>Manage photos, pictures, and animations:</p> <p> >  Multimedia > Pictures</p>
<p>view, delete, or manage video clips</p> <p> >  Multimedia > Videos</p>
<p>hear, delete, or manage sounds</p> <p>Manage ring tones and music that you have downloaded or composed:</p> <p> >  Multimedia > Sounds</p>
<p>create ring tones</p> <p>Create ring tones that you can use with your phone:</p> <p> >  Multimedia > Sounds > [New iMelody]</p>

features
<p>start micro-browser </p> <p>Just press .</p>
<p>download objects from Web page </p> <p>Download a picture, sound, or other object from a Web page:</p> <p>Press , go to the page that links to the file, scroll to the link, and select it.</p> <p>Note: Normal airtime and/or carrier usage charges apply.</p>
<p>Web sessions </p> <p>A <i>Web Session</i> stores settings that your phone uses to access the Internet. To select or create a Web session:</p> <p> >  Web Access > Web Sessions</p>

features

download game or application




You can download a Java™ game or application the same way you download pictures or other objects:

Press , go to the page that links to the file, scroll to the link, and select it.

Note: Normal airtime and/or carrier usage charges apply.

start game or application

Start a Java™ game or application:

 >  **Games & Apps**, scroll to the game or application, press the *center key* .

service and repairs

If you have questions or need assistance, we're here to help.

Go to www.motorola.com/consumer/support, where you can select from a number of customer care options. You can also contact the Motorola Customer Support Center at 1-800-331-6456 (United States), 1-888-390-6456 (TTY/TDD United States for hearing impaired), or 1-800-461-4575 (Canada).

Specific Absorption Rate Data

This model wireless phone meets the government's requirements for exposure to radio waves.

Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission (FCC) of the U.S. Government and by the Canadian regulatory authorities. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age or health.

The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC and by the Canadian regulatory authorities is 1.6 W/kg.¹ Tests for SAR are conducted using standard operating positions accepted by the FCC and by Industry Canada with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station, the lower the power output.

Before a phone model is available for sale to the public in the U.S. and Canada, it must be tested and certified to the FCC and Industry Canada that it does not exceed the limit established by each government for safe exposure. The tests are performed in positions and locations (e.g., at the ear and worn on the body) reported to the FCC and available for review by Industry Canada. The highest SAR value for this model phone when tested for use at the ear is 1.6 W/kg, and when worn on the body, as described in this user guide, is 0.38 W/kg. The SAR value for this product in its data transmission mode (body-worn use) is 0.25 W/kg. (Body-worn measurements differ among phone models, depending upon available accessories and regulatory requirements).²

While there may be differences between the SAR levels of various phones and at various positions, they all meet the governmental requirements for safe exposure. Please note that improvements to this product model could cause differences in the SAR

value for later products; in all cases, products are designed to be within the guidelines.

Additional information on Specific Absorption Rates (SAR) can be found on the Cellular Telecommunications & Internet Association (CTIA) Web site:

<http://www.phonefacts.net>

or the Canadian Wireless Telecommunications Association (CWTA) Web site:

<http://www.cwta.ca>

1. In the United States and Canada, the SAR limit for mobile phones used by the public is 1.6 watts/kg (W/kg) averaged over one gram of tissue. The standard incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in measurements.
2. The SAR information includes the Motorola testing protocol, assessment procedure, and measurement uncertainty range for this product.

European Union Directives Conformance Statement



Hereby, Motorola declares that this product is in compliance with

- The essential requirements and other relevant provisions of Directive 1999/5/EC
- All other relevant EU Directives



The above gives an example of a typical Product Approval Number.

You can view your product's Declaration of Conformity (DoC) to Directive 1999/5/EC (to R&TTE Directive) at www.motorola.com/rtte. To find your DoC, enter the product Approval Number from your product's label in the "Search" bar on the web site.



MOTOROLA

Important Safety and Legal Information

Safety and General Information

This section contains important information on the safe and efficient operation of your mobile device. Read this information before using your mobile device.*

Exposure To Radio Frequency (RF) Energy

Your mobile device contains a transmitter and receiver. When it is ON, it receives and transmits RF energy. When you communicate with your mobile device, the system handling your call controls the power level at which your mobile device transmits.

* The information provided in this document supersedes the general safety information in user's guides published prior to September 1, 2005.

Your Motorola mobile device is designed to comply with local regulatory requirements in your country concerning exposure of human beings to RF energy.

Operational Precautions

For optimal mobile device performance and to be sure that human exposure to RF energy does not exceed the guidelines set forth in the relevant standards, always follow these instructions and precautions.

External Antenna Care

If your mobile device has an external antenna, use only a Motorola-supplied or approved replacement antenna. Use of unauthorized antennas, modifications, or attachments could damage the mobile device and/or may result in your device not

complying with local regulatory requirements in your country.

DO NOT hold the external antenna when the mobile device is IN USE. Holding the external antenna affects call quality and may cause the mobile device to operate at a higher power level than needed.

Product Operation

When placing or receiving a phone call, hold your mobile device just like you would a landline phone.

If you wear the mobile device on your body, always place the mobile device in a Motorola-supplied or approved clip, holder, holster, case, or body harness. If you do not use a body-worn accessory supplied or approved by Motorola, keep the mobile device and its antenna at least 2.5 centimeters (1 inch) from your body when transmitting.

When using any data feature of the mobile device, with or without an accessory cable, position the mobile device and its antenna at least 2.5 centimeters (1 inch) from your body.

Using accessories not supplied or approved by Motorola may cause your mobile device to exceed RF energy exposure guidelines. For a list of Motorola-supplied or approved accessories, visit our website at www.motorola.com.

RF Energy Interference/Compatibility

Nearly every electronic device is subject to RF energy interference from external sources if inadequately shielded, designed, or otherwise configured for RF energy compatibility. In some circumstances your mobile device may cause interference with other devices.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Follow Instructions to Avoid Interference Problems

Turn off your mobile device in any location where posted notices instruct you to do so. These locations include hospitals or health care facilities that may be using equipment that is sensitive to external RF energy.

In an aircraft, turn off your mobile device whenever instructed to do so by airline staff. If your mobile device offers an airplane mode or similar feature, consult airline staff about using it in flight.

Pacemakers

If you have a pacemaker, consult your physician before using this device.

Persons with pacemakers should observe the following precautions:

- ALWAYS keep the mobile device more than 20 centimeters (8 inches) from your

pacemaker when the mobile device is turned ON.

- DO NOT carry the mobile device in the breast pocket.
- Use the ear opposite the pacemaker to minimize the potential for interference.
- Turn OFF the mobile device immediately if you have any reason to suspect that interference is taking place.

Hearing Aids

Some digital mobile devices may interfere with some hearing aids. In the event of such interference, you may want to consult your hearing aid manufacturer or physician to discuss alternatives.

Other Medical Devices

If you use any other personal medical device, consult your physician or the manufacturer of your device to determine if it is adequately shielded from RF energy.

Driving Precautions

Check the laws and regulations on the use of mobile devices in the area where you drive. Always obey them.

When using your mobile device while driving, please:

- Give full attention to driving and to the road. Using a mobile device may be distracting. Discontinue a call if you can't concentrate on driving.
- Use handsfree operation, if available.
- Pull off the road and park before making or answering a call if driving conditions so require.

Responsible driving practices can be found in the "Smart Practices While Driving" section at the end of this guide and/or at the Motorola website:

www.motorola.com/callsmart.

Operational Warnings

Obey all posted signs when using mobile devices in public areas, such as health care facilities or blasting areas.

Automobile Air Bags

Do not place a mobile device in the air bag deployment area.

Potentially Explosive Atmospheres

Areas with potentially explosive atmospheres are often but not always posted, and can include fueling areas such as below decks on boats, fuel or chemical transfer or storage facilities, or areas where the air contains chemicals or particles, such as grain, dust, or metal powders.

When you are in such an area, turn off your mobile device, and do not remove, install, or charge batteries. In such areas, sparks can occur and cause an explosion or fire.

Damaged Products





 
If your mobile device or battery has been submerged in water, punctured, or subjected to a severe fall, do not use it until you take it to a Motorola Authorized Service Center. Do not attempt to dry it with an external heat source, such as a microwave oven.

Batteries and Chargers

If jewelry, keys, beaded chains, or other conductive materials touch exposed battery terminals, this could complete an electrical circuit (short circuit), become very hot, and could cause damage or injury. Be careful when handling a charged battery, particularly when placing it inside a pocket, purse, or other container with metal objects. **Use only Motorola Original™ batteries and chargers.**

Caution: To avoid risk of personal injury, do not dispose of your battery in a fire.

Your battery, charger, or mobile device may contain symbols, defined as follows:

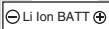Symbol	Definition
	Important safety information follows.
	Do not dispose of your battery or mobile device in a fire.
	Your battery or mobile device may require recycling in accordance with local laws. Contact your local regulatory authorities for more information.
	Do not throw your battery or mobile device in the trash.
	Your mobile device contains an internal lithium ion battery.

Choking Hazards

Your mobile device or its accessories may include detachable parts, which may present a choking

hazard to small children. Keep your mobile device and its accessories away from small children.

Glass Parts

Some parts of your mobile device may be made of glass. This glass could break if the product is dropped on a hard surface or receives a substantial impact. If glass breaks, do not touch or attempt to remove. Stop using your mobile device until the glass is replaced by a qualified service center.

Seizures/Blackouts

Some people may be susceptible to epileptic seizures or blackouts when exposed to flashing lights, such as when playing video games. These may occur even if a person has never had a previous seizure or blackout.

If you have experienced seizures or blackouts, or if you have a family history of such occurrences, please consult with your physician before playing video

games or enabling a flashing-lights feature (if available) on your mobile device.

Discontinue use and consult a physician if any of the following symptoms occur: convulsion, eye or muscle twitching, loss of awareness, involuntary movements, or disorientation. It is always a good idea to hold the screen away from your eyes, leave the lights on in the room, take a 15-minute break every hour, and stop use if you are very tired.

Repetitive Motion

When you repetitively perform actions such as pressing keys or entering finger-written characters, you may experience occasional discomfort in your hands, arms, shoulders, neck, or other parts of your body. If you continue to have discomfort during or after such use, stop use and see a physician.

Motorola Limited Warranty for the United States and Canada

What Does this Warranty Cover?

Subject to the exclusions contained below, Motorola, Inc. warrants its telephones, pagers, messaging devices, and consumer and professional two-way radios (excluding commercial, government or industrial radios) that operate via Family Radio Service or General Mobile Radio Service, Motorola-branded or certified accessories sold for use with these Products ("Accessories") and Motorola software contained on CD-ROMs or other tangible media and sold for use with these Products ("Software") to be free from defects in materials and

workmanship under normal consumer usage for the period(s) outlined below. This limited warranty is a consumer's exclusive remedy, and applies as follows to new Motorola Products, Accessories and Software purchased by consumers in the United States or Canada, which are accompanied by this written warranty:

Products and Accessories

Products Covered	Length of Coverage
Products and Accessories as defined above, unless otherwise provided for below.	One (1) year from the date of purchase by the first consumer purchaser of the product unless otherwise provided for below.
Decorative Accessories and Cases. Decorative covers, bezels, PhoneWrap™ covers and cases.	Limited lifetime warranty for the lifetime of ownership by the first consumer purchaser of the product.

Products Covered	Length of Coverage
Monaural Headsets. Ear buds and boom headsets that transmit mono sound through a wired connection.	Limited lifetime warranty for the lifetime of ownership by the first consumer purchaser of the product.
Consumer and Professional Two-Way Radio Accessories.	Ninety (90) days from the date of purchase by the first consumer purchaser of the product.
Products and Accessories that are Repaired or Replaced.	The balance of the original warranty or for ninety (90) days from the date returned to the consumer, whichever is longer.

Exclusions

Normal Wear and Tear. Periodic maintenance, repair and replacement of parts due to normal wear and tear are excluded from coverage.

Batteries. Only batteries whose fully charged capacity falls below 80% of their rated capacity and batteries that leak are covered by this limited warranty.

Abuse & Misuse. Defects or damage that result from: (a) improper operation, storage, misuse or abuse, accident or neglect, such as physical damage (cracks, scratches, etc.) to the surface of the product resulting from misuse; (b) contact with liquid, water, rain, extreme humidity or heavy perspiration, sand, dirt or the like, extreme heat, or food; (c) use of the Products or Accessories for commercial purposes or subjecting the Product or Accessory to abnormal usage or conditions; or (d) other acts which are not the fault of Motorola, are excluded from coverage.

Use of Non-Motorola Products and Accessories. Defects or damage that result from

the use of Non-Motorola branded or certified Products, Accessories, Software or other peripheral equipment are excluded from coverage.

Unauthorized Service or Modification. Defects or damages resulting from service, testing, adjustment, installation, maintenance, alteration, or modification in any way by someone other than Motorola, or its authorized service centers, are excluded from coverage.

Altered Products. Products or Accessories with (a) serial numbers or date tags that have been removed, altered or obliterated; (b) broken seals or that show evidence of tampering; (c) mismatched board serial numbers; or (d) nonconforming or non-Motorola housings, or parts, are excluded from coverage.

Communication Services. Defects, damages, or the failure of Products, Accessories or Software due to any communication service or signal you may subscribe to or use with the Products Accessories or Software is excluded from coverage.

Software

Products Covered	Length of Coverage
Software. Applies only to physical defects in the media that embodies the copy of the software (e.g. CD-ROM, or floppy disk).	Ninety (90) days from the date of purchase.

Exclusions

Software Embodied in Physical Media. No warranty is made that the software will meet your requirements or will work in combination with any hardware or software applications provided by third parties, that the operation of the software products will be uninterrupted or error free, or that all defects in the software products will be corrected.

Software NOT Embodied in Physical Media. Software that is not embodied in physical media (e.g. software that is downloaded from the internet), is provided “as is” and without warranty.

Who Is Covered?

This warranty extends only to the first consumer purchaser, and is not transferable.

What Will Motorola Do?

Motorola, at its option, will at no charge repair, replace or refund the purchase price of any Products, Accessories or Software that does not conform to this warranty. We may use functionally equivalent reconditioned/refurbished/pre-owned or new Products, Accessories or parts. No data, software or applications added to your Product, Accessory or Software, including but not limited to personal contacts, games and ringer tones, will be reinstalled. To avoid losing such data, software and applications please create a back up prior to requesting service.

How to Obtain Warranty Service or Other Information

USA	Phones 1-800-331-6456 Pagers 1-800-548-9954 Two-Way Radios and Messaging Devices 1-800-353-2729
Canada	All Products 1-800-461-4575
TTY	1-888-390-6456
For Accessories and Software , please call the telephone number designated above for the product with which they are used.	

You will receive instructions on how to ship the Products, Accessories or Software, at your expense, to a Motorola Authorized Repair Center. To obtain service, you must include: (a) a copy of your receipt, bill of sale or other comparable proof of purchase; (b) a written description of the problem; (c) the name of your service provider, if applicable; (d) the name and location of the installation facility (if applicable) and, most importantly; (e) your address and telephone number.

What Other Limitations Are There?

ANY IMPLIED WARRANTIES, INCLUDING WITHOUT LIMITATION THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED TO THE DURATION OF THIS LIMITED WARRANTY, OTHERWISE THE REPAIR, REPLACEMENT, OR REFUND AS PROVIDED UNDER THIS EXPRESS

LIMITED WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER, AND IS PROVIDED IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED. IN NO EVENT SHALL MOTOROLA BE LIABLE, WHETHER IN CONTRACT OR TORT (INCLUDING NEGLIGENCE) FOR DAMAGES IN EXCESS OF THE PURCHASE PRICE OF THE PRODUCT, ACCESSORY OR SOFTWARE, OR FOR ANY INDIRECT, INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES OF ANY KIND, OR LOSS OF REVENUE OR PROFITS, LOSS OF BUSINESS, LOSS OF INFORMATION OR DATA, SOFTWARE OR APPLICATIONS OR OTHER FINANCIAL LOSS ARISING OUT OF OR IN CONNECTION WITH THE ABILITY OR INABILITY TO USE THE PRODUCTS, ACCESSORIES OR SOFTWARE TO THE FULL EXTENT THESE DAMAGES MAY BE DISCLAIMED BY LAW.

Some states and jurisdictions do not allow the limitation or exclusion of incidental or consequential damages, or limitation on the length of an implied warranty, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights,

and you may also have other rights that vary from state to state or from one jurisdiction to another.

Laws in the United States and other countries preserve for Motorola certain exclusive rights for copyrighted Motorola software such as the exclusive rights to reproduce and distribute copies of the Motorola software. Motorola software may only be copied into, used in, and redistributed with, the Products associated with such Motorola software. No other use, including without limitation disassembly of such Motorola software or exercise of the exclusive rights reserved for Motorola, is permitted.

Hearing Aid Compatibility with Mobile Phones

Some Motorola phones are measured for compatibility with hearing aids. If the box for your particular model has “Rated for Hearing Aids” printed on it, the following explanation applies.

When some mobile phones are used near some hearing devices (hearing aids and cochlear implants), users may detect a buzzing, humming, or whining noise. Some hearing devices are more immune than others to this interference noise, and phones also vary in the amount of interference they generate.

The wireless telephone industry has developed ratings for some of their mobile phones, to assist hearing device users in finding phones that may be compatible with their hearing devices. Not all phones have been rated. Phones that are rated have the rating on their box or a label on the box.

The ratings are not guarantees. Results will vary depending on the user’s hearing device and hearing loss. If your hearing device happens to be vulnerable to interference, you may not be able to use a rated phone successfully. Trying out the phone with your hearing device is the best way to evaluate it for your personal needs.

M-Ratings: Phones rated M3 or M4 meet FCC requirements and are likely to generate less interference to hearing devices than phones that are not labeled. M4 is the better/higher of the two ratings.

T-Ratings: Phones rated T3 or T4 meet FCC requirements and are likely to be more usable with a hearing device’s telecoil (“T Switch” or “Telephone Switch”) than unrated phones. T4 is the better/higher of the two ratings. (Note that not all hearing devices have telecoils in them.)

Hearing devices may also be measured for immunity to this type of interference. Your hearing device manufacturer or hearing health professional may help you find results for your hearing device. The more immune your hearing aid is, the less likely you are to experience interference noise from mobile phones.

DRAFT

Information from the World Health Organization

Present scientific information does not indicate the need for any special precautions for the use of mobile phones. If you are concerned, you may want to limit your own or your children's RF exposure by limiting the length of calls or by using handsfree

devices to keep mobile phones away from your head and body.

Source: WHO Fact Sheet 193

Further information:

<http://www.who.int./peh-emf>

Product Registration

Online Product Registration:

<http://www.motorola.com/warranty>

Product registration is an important step toward enjoying your new Motorola product. Registering helps us facilitate warranty service, and permits us to contact you should your product require an update or other service. Registration is for U.S. residents only and is not required for warranty coverage.

Please retain your original dated sales receipt for your records. For warranty service of your Motorola Personal Communications Product you will need to provide a copy of your dated sales receipt to confirm warranty status.

Thank you for choosing a Motorola product.

Export Law Assurances

This product is controlled under the export regulations of the United States of America and Canada. The Governments of the United States of America and Canada may restrict the exportation or

re-exportation of this product to certain destinations. For further information contact the U.S. Department of Commerce or the Canadian Department of Foreign Affairs and International Trade.

Wireless: The New Recyclable

Your wireless phone can be recycled. Recycling your wireless phone reduces the amount of waste disposed in landfills and allows recycled materials to be incorporated into new products.

The Cellular Telecommunications Industry Association (CTIA) and its members encourage consumers to recycle their phones and have taken steps to promote the collection and environmentally sound recycling of end-of-life wireless devices.

As a wireless phone user, you have an important role in ensuring that this phone is recycled properly. When it comes time to give this phone up or trade it in for a new one, please remember that the phone, the charger, and many of its accessories can be recycled. It's easy. To learn more about CTIA's Recycling Program for Used Wireless Devices, please visit us at <http://promo.motorola.com/recycle/phones/whyrecycle.html>

Smart Practices While Driving

Drive Safe, Call Smart SM

Check the laws and regulations on the use of mobile devices and their accessories in the areas where you drive. Always obey them. The use of these devices may be prohibited or restricted in certain areas. Contact www.motorola.com/callsmart for more information.

Your mobile device lets you communicate by voice and data—almost anywhere, anytime, wherever wireless service is available and safe conditions allow. When driving a car, driving is your first responsibility. If you choose to use your mobile device while driving, remember the following tips:

- **Get to know your Motorola mobile device and its features such as speed dial and redial.** If available, these features

help you to place your call without taking your attention off the road.

- **When available, use a handsfree device.** If possible, add an additional layer of convenience to your mobile device with one of the many Motorola Original™ handsfree accessories available today.
- **Position your mobile device within easy reach.** Be able to access your mobile device without removing your eyes from the road. If you receive an incoming call at an inconvenient time, if possible, let your voice mail answer it for you.
- **Let the person you are speaking with know you are driving; if necessary, suspend the call in heavy traffic or hazardous weather conditions.** Rain,

sleet, snow, ice, and even heavy traffic can be hazardous.

- **Do not take notes or look up phone numbers while driving.** Jotting down a “to do” list or going through your address book takes attention away from your primary responsibility—driving safely.
- **Dial sensibly and assess the traffic; if possible, place calls when your car is not moving or before pulling into traffic.** If you must make a call while moving, dial only a few numbers, check the road and your mirrors, then continue.
- **Do not engage in stressful or emotional conversations that may be distracting.** Make people you are talking with aware you are driving and suspend conversations that can divert your attention away from the road.
- **Use your mobile device to call for help.** Dial 911 or other local emergency number in

the case of fire, traffic accident, or medical emergencies.*

- **Use your mobile device to help others in emergencies.** If you see an auto accident, crime in progress, or other serious emergency where lives are in danger, call 911 or other local emergency number, as you would want others to do for you.*
- **Call roadside assistance or a special non-emergency wireless assistance number when necessary.** If you see a broken-down vehicle posing no serious hazard, a broken traffic signal, a minor traffic accident where no one appears injured, or a vehicle you know to be stolen, call roadside assistance or other special non-emergency wireless number.*

* Wherever wireless phone service is available.

index

A

accessories 8, 58
accessory connector port 1
active line indicator 25
active line, changing 44
alarm clock 60, 61
alert
 lights 34
 set 30, 33
 turn off 30, 37
animation 63
answer a call 13, 36
attach a number 38, 41

B

backlight 36
battery 9, 10

 extending battery life 11
battery indicator 26
battery life, extending 12,
 19, 35, 36
Bluetooth connection
 datebook entry, sending
 61
 description 18
 phonebook entries,
 sending 50
 restricting access 22
browser messages 51
browser. See micro-browser

C

cables 17
calculator 61

call
 answer 13, 36
 end 13
 make 13
call barring 44
call forward indicator 25
call forwarding 43
call timers 57
call waiting 43
caller ID 38, 39, 47
car kit 58
center key 1, 31
center select key 8
certificate management 62
chat 53
clock 34
codes 31, 32

color 35
conference call 43
copy files 20
costs, tracking 57

D

data call 59
data indicator 24
date, setting 34
datebook 61
dial a phone number 13, 44
dialed calls 37
display 1, 23, 35, 55
download media objects 51,
63
drafts folder 16
DTMF tones 38, 45

E

earpiece volume 30
emergency number 39

end a call 13
end key 1, 13
Enter Unlock Code message
31
event lights 34
export regulations 85
external display 31

F

fax call 38, 59
fixed dial 44
flip 13, 36
forward calls 43

G

games 64
GPRS indicator 24
group mailing list 49

H

handsfree speaker 31
headlines 24, 55
headset 58
headset jack 1
hearing aid compatibility 82
hold a call 42
home screen 1, 23, 55, 56

I

IM 52
IM indicators 25
in-call indicator 25
Incoming Call message 39
information services 51
instant messaging. See IM
international access code 42
iTAP text entry mode 27

J

Java applications 64

Java indicator 25

K

keypad 36, 54

L

language 54

light 34

light ID 48

linking. See Bluetooth
connection

lock

application 62

phone 32

SIM card 62

Low Battery message 26

M

make a call 13

master clear 57

master reset 56

menu 1, 8, 54, 55

menu icons 55, 56

menu indicator 23

message 50, 51

message indicator 17, 25

message reminders 55

micro-browser 51, 63, 64

Missed Calls message 39

MMS, defined 16

MP3 sound files 34

multimedia message 16, 50,
51

music 63

mute a call 42

N

navigation key 1, 8, 31

network settings 60

notepad 42

number. See phone number

numeric entry mode 30

O

object exchange 20

1-touch dial 41

open to answer 36

optional accessory 8

optional feature 8

P

pairing. See Bluetooth
connection

passwords. See codes

personalize 54

phone number 14, 44

phonebook 38, 41, 45

photo 63

picture 63

picture ID 39, 47
PIN code 13, 31, 62
PIN2 code 31
power key 1, 13
product registration 84

Q

quick dial 44

R

received calls 37
recent calls 37
recycling 85
redial 38
reminders 55
restrict calls 43
return a call 39
ring lights 34
ring style indicator 26
ring style, setting 30, 33
ring tone 63

ringer ID 39, 47, 54
ringer volume 30, 54
roam indicator 25

S

safety information 70
safety tips 86
screen saver 35
security code 31
send key 1, 13
shortcuts 56
signal strength indicator 24
SIM 51
SIM Blocked message 13,
62
SIM card 9, 13, 31, 62
soft keys 1, 23, 56
speakerphone 58
speed dial 41
store your number 14
symbol entry mode 30

synchronizing 60

T

tap text entry mode 28
telephone number. See
 phone number
text entry 26
text message 50, 51
time, setting 34
timers 57
transfer a call 43
TTY device 44
turn on/off 13

U

unlock
 application 62
 phone 13, 31, 32
 SIM card 62
unlock code 31, 32
USB cables 17

V

video clip 63

videos 15

voice dial 46, 58

voice message 50

voice name, recording 46

voicemail 40

voicemail message indicator

25, 40

volume 30, 54

U.S. patent Re. 34,976

W

wallpaper 35

warranty 76

Web pages 63

Web sessions 63

WHO information 84

Y

your phone number 14