
 



## To make a video call

Press .

### Note

- You can also press  several times on the Phonebook list.
- Press  on the Phonebook list, or select an email address on the Phonebook detail screen and press , to create and send email with the selected email address as a destination.

## Filter by Category

You can display only phonebook entries saved in a specified category to find an entry.

**1** Phonebook list (P98) ▶  [Function] ▶ "Filter by" ▶ "Category"

**2** Select a category ▶  [Select]

The Phonebook list with only members of the specified category opens.

**3** Select a Phonebook entry ▶ 


The phone number entry screen opens with the phone number entered.

**4** 

## To make a video call

Press .

### Note

- You can also press  several times on the Phonebook list.

## Viewing a Phonebook Entry

- You can change the display format of the Phonebook list from "Setup" on the Function menu. →P102


**1** 

**1** A phone number for video calls

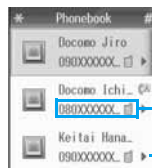 
**2** The first phone number and type

If no phone number is saved, saved mail address and type icon, URL and URL icon, or postal address and type icon will be displayed.

**3** Appears if more than one item is saved

Press  to switch the displayed item.

**2** Select a Contact ▶ 



Phonebook list screen (Picture)



Phonebook list screen (List)



Phonebook detail screen

## ■ Operations from the Phonebook list

Select a Phonebook entry and press / to make a call, send mail or visit a site. Perform operations as follows:

**Contacts:** The phone number entry screen opens with the phone number entered.

**Email Address:** The send message screen opens with the address entered.

**URL:** Connects to a URL.

- If a Phonebook entry is displayed with \$★\$, use to change the display

## ■ Operations from the Phonebook detail screen

Select a phone number and press / . The phone number entry screen opens with the phone number entered. Select an Email or URL and press / to make a video call to Internet video call. (Checking the specifications)

Select a phone number, Email, or URL and press to open a screen of the following items:

"Call": Makes a voice call to the selected phone number.

"Video Call": Makes a video call to the selected phone number/mail address.

"Send Message": Create and send a new message to the selected phone number/Email as an address. →P172

"Connect": Connects to the selected URL.

"Store as Bookmark": Save the selected URL in Bookmarks.

## The Function Menu on the Phonebook List/Phonebook Detail Screen

Default	View:(Checking the specifications)
---------	------------------------------------

### 1 Phonebook list (P98)/Phonebook detail screen (P98)

#### [Function] Perform the following operations

##### Search

Search for a Phonebook entry. →P97

##### Send Message

Create and send a message with the phone number or Email of the currently selected/displayed entry as an address. →P172

##### Caller ID

Sets send/hide Caller ID to the phone number of the entry currently selected/displayed.

"Show ID"/"Hide ID"

##### Multi Number

Makes a call by selecting an additional phone number of the currently selected/displayed entry. →P251

##### Browse URL

Connects to the URL saved in the currently displayed/selected Contact.

##### Create New

Go to Step 2 in "Saving in Phone Contacts" (P91)/Step 1 "Saving in UIM Contacts" (P93).

##### Edit Contact

Edit the selected/displayed Contact. Go to Step 2 in "Saving in Phone Contacts" (P91)/Step 1 "Saving in UIM Contacts" (P93).

##### Add to Speed Dial

Save the phone number of the currently selected/displayed entry as a speed dial.

Select a dial number [Select]

##### Remove Speed Dial

Cancel the phone number of the currently selected/displayed entry as a speed dial.

##### View

Select a type of Phonebook (Phone or UIM) to be displayed on the Phonebook list.

**Phone & UIM Card** : Displays all Phonebook entries.

**UIM Card** : Displays entries only in the UIM phonebook.

**Phone Contacts** : Displays entries only in the Handset phonebook.

---

### Filter by

Sets the displaying method of the Phonebook list.

**All Contacts** : Displays all Phonebook entries. This option appears only when "View" is set to "Phone & UIM".

**All Phone Contacts** : Displays all entries in the Handset phonebook. This option appears only when "View" is set to "Phone Contacts".

**All UIM Contacts** : Displays all entries in the UIM phonebook. This option appears only when "View" is set to "UIM".

**Email** : Displays only entries with an Email address. →P97

**Category** : Displays entries only in the specified category. →P98

---

### Insert in Message

Create and send a message with the name and phone number or Email of the currently selected/displayed entry as an address. →P172

---

### Send Contact

Sends the currently selected/displayed entry as a vCard file using Bluetooth. →P239

---

### Delete Number

Deletes a selected phone number.

---

### Delete Email

Deletes a selected Email address.

---

### Delete URL

Deletes a selected URL.

---

### Delete Postal Address

Deletes a selected postal address.

---

### Delete Contact

Deletes the selected/displayed entry.

---

### Print

Prints the currently selected/displayed entry using a Bluetooth printer. →P240

---

### Select Multiple to

Select more than one Phonebook entry and perform various operations. For steps to select multiple entries, see "Selecting and Deleting More than One Phonebook Entry" (P101).

**Send Message** : Specify more than one mail destination. Selecting destinations opens the Compose Message screen with addresses entered.

**Delete** : Deletes multiple phonebook entries at once.

**Copy to UIM Card** : Copies multiple phone contacts to the UIM phonebook at once.

**Copy UIM to Phone** : Copies multiple UIM contacts to the Handset phonebook at once.

**Print** : Prints multiple phonebook entries to a Bluetooth printer at once. →P240

---

### Manage Contacts

**Speed Dial** : Check, save or delete the Speed dial. →P103

**Edit Categories** : Sets categories to the Handset phonebook. →P95

**Edit UIM Categories** : Sets categories to the UIM phonebook. →P95


**Phone Capacity** : Checks the available memory on the handset phonebook. →P103

**UIM Capacity** : Checks the available memory on the UIM phonebook. →P103

---

### Copy to UIM Card

Copies the handset contacts to the UIM phonebook.

▶  [Yes]

---

### Copy to Phone

Copies the UIM contacts to the handset phonebook.

---

### Edit Before Call

The phone number entry screen opens with the phone number of the currently selected/displayed entry. →P54

---

### Setup

Set a display format (View by) of the Phonebook list or specify the default storage location when you save a Contact. →P102

### Secret Code

Save the secret code.

Enter the unlock code ▶ Enter the secret code ▶  [Save]

### Send Tones

Sends the phone number of the currently displayed/selected entry as push signals (DTMF). (Checking the specifications)

## Note

#### View

- If "UIM" is selected, \$★\$ is displayed on the Phonebook list.

#### Delete phone number/Delete email address/Delete URL/Delete postal address

- If you have saved more than one phone number, email address, URL or postal address and delete the first one, the second and subsequent ones will be moved up and saved.

#### Secret code

- If you select a phone number or email address saved with the secret code and display the function menu on the Phonebook detail screen, "\*" appears next to the item name of the "Secret code".

## Deleting Contacts

### Deleting One Contact

- 1 Phonebook list (P98)/Phonebook detail screen (P98) ▶  [Function] ▶ "Delete Contact"

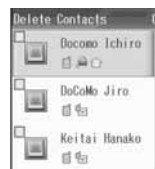 
Deletes the selected/displayed entry.

- For deleting from the Phonebook list, select an entry then delete it.

### Select and Delete More Than One Contact at a Time.

- If either of the handset phonebook or UIM phonebook is displayed, entries are deleted from the displayed Phonebook.

- 1 Phonebook list (P98) ▶  [Function] ▶ "Select Multiple to" ▶ "Delete"



Multiple selection screen

- 2 Select a Phonebook entry ▶  ▶  [Complete]

- Select all Phonebook entries and press  [Complete].

- 3  [Yes]

## The Function Menu on the Multiple Selection Screen

Default View by: (Checking the specifications)

### 1 Multiple selection screen (P101) [Function] Perform the following operations

#### Search

Search for a Phonebook entry. →P96

#### Select All

Selects all Phonebook entries.

#### Unselect All

Cancels the selection of all.

#### View Selected

A list of selected Phonebook entries opens.

#### View by

Set a view of the Phonebook list.

▶ "Picture"/"List"

#### Cancel

Cancels the operation.

### Note

#### View by

- When "View" is set to "UIM Card", select "1-Line" or "2-Line".

## Setup

### Setting Details of the Phonebook

Default View by: List Default Storage: Phone

You can set a display format (View by) of the Phonebook list or specify the default storage location when you save a Contact.

- When "View" is set to "UIM Card", the Display format is set to "View By 1-Line" by default.

### 1 Phonebook list (P98)/Phonebook detail screen (P98) [Function] Perform the following operations

#### View by

▶ "Picture"/"List"

#### Default Storage

Set the saving destination displayed in "Store To" in advance when the Create Contact screen opens.

▶ "Phone"/"UIM Card"  [Yes]

- If "Phone" is selected, setup of default storage completes.

 
### Note

#### View by

- When "View" is set to "UIM Card", select "1-Line" or "2-Line".

## Checking the Phonebook Capacity and Utilization

You can check the available memory space on the phone and the UIM.

- 1 **Phonebook list (P98)/Phonebook detail screen (P98)** ▶  [Function] ▶ "Manage Contacts" ▶ "Phone Capacity"/"UIM Capacity"


## Making a Call Using Speed Dial

You can quickly make a call only by pressing a dial key from 1 to 7 to dial the phone number assigned to the key.

- You need to assign a phone number to a dial key in advance.

- 1 **Press a dial key from  to  (for 1+ seconds)**  
The corresponding speed dial phone number is dialed.

 
### ■ To View the assigned phone numbers

On the Phonebook detail screen (P98), press  [Function] ▶ select "Manage Contacts" ▶ "Speed Dial". The Speed Dial Entries screen (P103) opens and you can check the phone number assigned to each dial key.

## Assigning a Phone Number to a Dial Key

You can assign a phone number from a contact to make Speed dial calls.

 
- A contact that does not have a phone number cannot be saved in Speed dial.

- 1 **Phonebook list (P98)/Phonebook detail screen (P98)** ▶  [Function] ▶ "Add to Speed Dial"

 
- Select a Contact before performing steps on the Phonebook list.

Screen to be inserted

 
Speed Dial Entries screen

- 2 **Select a dial number** ▶  [Select] (Checking the specifications)

- If a dial number already saved is selected

The confirmation to overwrite appears. Press  [Yes] to overwrite.

## The Function Menu on the Speed Dial Entries Screen

- 1 **Speed Dial Entries screen (P103)** ▶  [Function] ▶ Perform the following operations

---

**Assign Contact**

Assign a phone number to a speed dial number.

▶ **Select a Contact** ▶  **[Select]**

---

**Change Contact**

Change the assigned phone number.

▶ **Select a Contact** ▶  **[Select]**

---

**Remove Contact**

Cancels the phone number assignment.

---

**Clear All**

Deletes all assigned phone numbers.

▶  **[Yes]**

---

## Specifying a Contact to Use as a Speed Dial

Default

Phone Memory

(Checking the specifications)

- 1  ▶ \$★\$ (Settings) ▶ "General Settings" ▶ "Speed Dial" ▶ "Phone Memory"

# Tone/Screen/Light Settings

## Tone Settings

Selecting Ring Styles<Style> .....	106
Changing the Ringer ID and Volume.....	107
Vibrating Instead of Ringtone or Alarm<Vibrate> .....	108
Setting a Push Tone Signal (DTMF)<DTMF> .....	109
Sounding a Ringtone Only from the Headset<Ringer Function>.....	110
Muting Handset Tones<Manner Mode> .....	110
Changing Manner Mode<Mode> .....	110

## Screen/Light Settings

Changing the Display of the Stand-by Display<Wallpaper> .....	112
Changing the Appearance of the Main Menu<Main Menu> .....	113
Setting a Skin<Skin> .....	113
Displaying a Wake-up Message<Greeting>.....	114
Launching the Screen Saver<Screen Saver>.....	114
Setting Ring Lights<Ring Lights>.....	114
Setting Event Lights<Event Lights> .....	115
Displaying Date & Time on the Talking Screen<Date and Time> .....	115
Setting the Clock Format<Home Screen> .....	115
Setting Time Duration before Display is Turned Off<Display Timeout> .....	116
Setting the Backlight Lighting Duration<Backlight> .....	116
Setting Scrolling of the Screen<Scroll> .....	116
Setting the Text Marquee Speed<Text Marquee>.....	117
Adjusting the Display Brightness<Brightness> .....	117



## Selecting Ring Styles

Default

Loud

By changing the Sound Profile, you can change the ringtone, alarm tone, ring volume and keypad sound volume at once.

- You can change the pre-set tones or volumes. →P107

### 1 ▶ \$★\$ (Settings) ▶ "Sound Profiles" ▶ "Style"



Style screen

### 2 "Loud"/"Soft"/"Vibe&Ring"

- To not Sound**  
Select "Silent".

#### Note

- After a Profile is selected, one of the following icons appears at the top of the screen:  
\$★\$ (Loud) \$★\$ (Soft) \$★\$ (Vibe&Ring) \$★\$ (Silent)
- When "Vibe&Ring" is selected, the handset vibrates at the same time as the ringer ID sounds.

#### Settings for each profile

The following table shows the pre-set function: (Checking the specifications)

Item	Style			
	Loud	Soft	Vibe&Ring	Silent
Ring Volume	7	4	7	—
Calls	(Checking the specifications)	(Checking the specifications)	(Checking the specifications)	—
Messages	(Checking the specifications)	(Checking the specifications)	(Checking the specifications)	—
Ans Mach	(Checking the specifications)	(Checking the specifications)	(Checking the specifications)	—
Calendar Alarm	(Checking the specifications)	(Checking the specifications)	(Checking the specifications)	Silent
Data Calls	(Checking the specifications)	(Checking the specifications)	(Checking the specifications)	—
Ringer IDs	On	On	On	—
Key Volume	2	2	7	—
Reminders	Beep	Beep	Beep	Vibrate

# Changing the Ringer ID and Volume

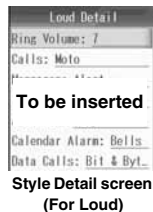 
Default See "Settings for Each Profile" (P106)

You can change various tones set to Profiles. You can also set the Ringer ID saved for a Contact to silent.

- Set "Style" to "Loud"/"Soft"/"Vibe&Ring"/"Silent" in advance.
- When "Style" is set to "Silent", you can change only "Calendar Alarm" and "Reminders".

## 1 \$★\$ (Settings) "Sound Profiles" "(Style name) Detail"

- The Style name set under "Style" is displayed in "(Style)".



## 2 Perform the following operations

### Ring Volume

The volume can be adjusted in eight levels from 0 to 7.

▶ Use  to adjust the volume ▶  [OK]

### Calls

Change the ringer ID for incoming calls. Go to Step 3.

### Messages

Change the ringer ID for incoming mail. Go to Step 3.

### Ans Mach

Change the ringer ID that sounds when a message is recorded in Voicemail. Go to Step 3.

### Calendar Alarm

Change the alarm tone that sounds at a Datebook alarm time. Go to Step 3.

### Data Calls

Change the ringer ID for incoming data. Go to Step 3.

Set whether to sound the ringer ID saved for a contact. (Checking the specifications)

▶ "On"/"Off"

### Ringer IDs

Set whether to sound the ringtone registered in the Phonebook entry. (Checking the specifications)

▶ "On"/"Off"

### Key Volume

Adjust the volume of the keypad sound. The volume can be adjusted in 8 levels from 0 to 7.

▶ Use  to adjust the volume ▶  [OK]

### Reminders

(Checking the specifications)

**Beep** : Sounds the beep tone.

**Vibrate** : Vibrates the handset.

**Off** : No action is taken.

## 3 Select a folder Select a ringtone or melody

**Note**

- The ring volume or keypad sound volume can also be entered using dial keys.
- If you set a video/i-motion movie as a ringtone, the graphics and sound are played when a call/message arrives (Chakumotion).
- Some i-motion movies, such as an i-motion movie without audio, cannot be set as the ringtone. (Checking the specifications)

**Call Ringtone**

- If an i-motion movie with a video and sound is set as the ringtone, even if the caller is saved in the Phonebook, the Picture ID is not displayed and the i-motion movie with sound is played. However, if the i-motion movie has only sound, the Picture ID is displayed. (Checking the specifications)

**Reminders**

- When "Style" is set to "Silent", "Beep" cannot be set.

**■ Ringtones, Melodies and Alarm Tones (Pre-installed)**

Ambient	Urban	Funky break
Nocturne	Bossa	Wa
Flowers	Interlude	Space ping pong
Soaring High	Hellomoto	Moving up
Solar	Midnight	Katana
Beats	Ringer	Hello
Vapor	Alert	Cyberspace
Fusion	Bells	Watermark
Ultra Violet	Standard	Got a mail
Grooving	Triads	Morning wave
Digital	Provincial	Big Mama

**Vibrate**

**Vibrating Instead of Ringtone or Alarm**

Default    Style: Loud

You can set the handset to vibrate when a call or mail arrives or at a Datebook alarm time instead of a ringtone or alarm tone.

- You can change the pre-set vibration pattern. →P109

**1**                **"Sound Profiles" ▶ "Style"**



Style screen

**2**    **"Vibrate"**

**Note**

- \$★\$ appears at the top of the screen when Vibration is set.

## Setting a Vibration Pattern

Default

Calls: Vibe Dot    Message Alert: Vibe Dot    Voicemail: Vibe Pulse  
Calendar Alarm: Vibe Dot Dash    Data Calls: Vibe Dot Dash

You can set a vibration pattern for events such as when a call or mail arrives, or at a Datebook alarm time.

- Set "Style" to "Vibrate" in advance.

 
### 1 Sound/Vibration setting screen (P106) ▶ "Vibrate Detail"

- Calls** : Change the vibration pattern for an incoming call.  
**Message Alert** : Change the vibration pattern for incoming mail.  
**Voicemail** : Change the vibration pattern when a message is recorded in Voicemail.  
**Calendar Alarm** : Change the vibration pattern for a Datebook alarm time.  
**Data Calls** : Change the vibration pattern for incoming data.  
**Reminders** : (Checking the specifications)

### 2 Select an event ▶ [Change]

- Silent** : The handset does not vibrate.  
**Vibe Dash** : (Checking the specifications)  
**Vibe Dot** : (Checking the specifications)  
**Vibe Dot Dash** : (Checking the specifications)  
**Vibe Dot Dash** : (Checking the specifications)  
**Vibe Pulse** : (Checking the specifications)

### 3 Select a vibration pattern ▶ [Select]

- When "Reminders" is selected, select "Vibrate" or "Off", then press  [Select].
- When a vibration pattern is selected, the handset vibrates in the selected pattern.

## DTMF

### Setting a Push Tone Signal (DTMF)

Default

Long

You can change the length of a push signal (DTMF). You can also set it not to sound.

### 1 ▶ \$★\$ (Settings) ▶ "General Settings" ▶ "DTMF" ▶ Select length ▶ [Select]

- When "Off" is selected, push signals (DTMF) will not be sent even if a dial key is pressed.

## Ringer Function

## Sounding a Ringtone Only from the Headset

Default	Headset & Speaker
---------	-------------------

You can set the device to sound a ringer ID while the miniUSB stereo headset M01 (optional) is connected to the handset.

1    **"Headset"**  **"Ringer Function"**  **Select a device**  **[Select]**

**Speaker Only** : The ringtone sounds only from the speaker.

**Headset Only** : The ringtone sounds only from the headset.

**Headset & Speaker** : The ringtone sounds from both speaker and headset.

## Note

- Do not tie the cable of a miniUSB stereo headset M01 (optional) around the handset.

## Manner Mode

 
## Muting Handset Tones

Turn off the tones that sound from the handset so as not to disturb others.

- There are 3 types of Manner Mode: "Silent", "Manner Mode" and "Original Manner Mode". Select the one that fits your usage. →P110

1  **(for 1+ seconds)**

 **To cancel Manner mode**

Press  (1+ seconds) on the wallpaper screen.

## Note

- \$★\$ appears at the top of the screen when Manner mode is set.
- A notification appears when you try to play a melody, video clip with sounds, or i-motion while Manner mode is set. (Checking the specifications)
- Even when Manner mode is set, the camera shutter tone sounds. (Checking the specifications)

## Mode

## Changing Manner Mode

Default	Silent
---------	--------

Select actions of Manner mode from "Silent", "Manner mode" or "Original manner mode".

- You can change the actions of Original manner mode. →P111

1   **"Personalize"**  **"Manner Mode"**  **Select a mode**  **[Select]**

## ■ Action in Each Mode

(Checking the specifications)

	Silent	Manner Mode	Original Manner Mode*1
Ring Volume (for Calls, Text Message, Voicemail or Data Calls)	(Checking the specifications)	(Checking the specifications)	In accord with the settings in "Ring Volume"
Vibrate*2	(Checking the specifications)	(Checking the specifications)	In accord with the settings in "Calls", "Chat mail", "Messages", "Voicemail", "Alarm", or "Data Calls"
Alarm Volume	(Checking the specifications)	(Checking the specifications)	In accord with the settings in "Ring Volume"
Datebook Alarm Volume	(Checking the specifications)	(Checking the specifications)	In accord with the settings in "Ring Volume"
Reminders	(Checking the specifications)	(Checking the specifications)	In accord with the settings in "Reminders"
Ringer IDs	(Checking the specifications)	(Checking the specifications)	In accord with the settings in "Ringer ID"
Response Hold Volume	(Checking the specifications)	(Checking the specifications)	(Checking the specifications)
Call Hold Volume	(Checking the specifications)	(Checking the specifications)	(Checking the specifications)
Key Volume	(Checking the specifications)	(Checking the specifications)	In accord with the settings in "Key Volume"
Low Battery Alert	(Checking the specifications)	(Checking the specifications)	In accord with the settings in "Low Battery Alert"
Microphone Sensitivity	(Checking the specifications)	(Checking the specifications)	In accord with the settings in "Microphone Sensitivity"

\*1: Indicates the items in "Original Manner Detail".

\*2: The handset vibrates for incoming calls, chat mail or mail, when a message is recorded in Voicemail, at an Alarm or Datebook alarm time, and for incoming data.

## Setting Actions in Original Manner Mode

Default	Ring Volume: 0   Calls: (Checking the specifications)   Chat mail: (Checking the specifications) Text Messages: (Checking the specifications)   Voicemail: (Checking the specifications) Alarms: (Checking the specifications)   Data Calls: (Checking the specifications) Ringer IDs: Off   Key Volume: 0   Reminders: Beep   Low Battery Alert: Off   Microphone Sensitivity: On
---------	---

You can change the actions of Original manner mode.

- 





**"Personalize" ▶ "Manner Mode" ▶ "Original Manner Detail"**


 
Screen to be inserted

Original Manner Detail screen

- Perform the following operations**

### Ring Volume

The volume can be adjusted in 8 levels from 0 to 7.

▶ Use  to adjust the volume ▶  [OK]

**Calls**

Change the vibration pattern for an incoming call. Go to Step 3. (Checking the specifications)

**Chat mail**

Change the vibration pattern for incoming chat-mail. Go to Step 3. (Checking the specifications)

**Message Alert**

Change the vibration pattern for incoming mail. Go to Step 3. (Checking the specifications)

**Voicemail**

Change the vibration pattern when a message is recorded in Voicemail. Go to Step 3. (Checking the specifications)

**Calendar Alarm**

Change the vibration pattern for an Alarm or Datebook alarm time. Go to Step 3. (Checking the specifications)

**Data Calls**

Change the vibration pattern for incoming data. Go to Step 3. (Checking the specifications)


 
**Ringer IDs**

Set whether to sound the ringtone saved in a Phonebook entry. (Checking the specifications)

▶ "On"/"Off"

**Key Volume**

Adjust the volume of the keypad sound. The volume can be adjusted in 8 levels from 0 to 7.

▶ Use  to adjust the volume ▶  [OK]

**Reminders**

(Checking the specifications)

**Beep** : Sounds the beep tone.

**Vibrate** : Vibrates the handset.

**Off** : No action is taken.

**Low Battery Alarm**

Set whether to sound the Low battery alarm.

▶ "On"/"Off"

**Mic Sensitivity**

Set whether to increase the microphone sensitivity so that the other party can hear a low voice better.

▶ "On"/"Off"

### 3 Select a vibration pattern ▶ [Select] (Checking the specifications)

- Vibration patterns → P109

**Note**

- The ring volume or keypad sound volume can also be entered using dial keys.

**Wallpaper**

## Changing the Display of the Stand-by Display

Default

Picture: (Checking the specifications)

Layout: Fit-to-screen

Calendar: Off

### 1 ▶ \$★\$ (Settings) ▶ "Personalize" ▶ "Wallpaper" ▶ Perform the following operations

**Picture**

Change the image to be displayed on the Standby screen.

▶ Select a folder ▶  ▶ Select an image ▶ 

### Layout

Adjust the position of the image set in "Picture".

**Center** : Places the image at the center of the screen.

**Tile** : Tiles the image.

**Fit-to-screen** : Enlarges/shrinks the image to fit to the screen.

### Calendar

Set whether to display a Calendar on the wallpaper screen.

▶ "On"/"Off"

## Note

### Pictures

- For pre-installed wallpaper, see "Default Settings". →P288
- When an i-appli standby screen is set, the i-appli standby screen takes precedence. →P196
- If an animation GIF is set for a standby screen, the following operations are available while the standby screen is displayed:  
(Checking the specifications) (Checking the specifications)

## Main Menu

# Changing the Appearance of the Main Menu

Default View: Icons

You can change the Main menu items to be displayed as Icons or in a list. You can also change the order of items.

1. **▶ \$★\$ (Settings) ▶ "Personalize" ▶ "Main Menu" ▶ Perform the following operations**

### View

▶ "Icons"/"List"



Displayed as icons



Displayed as list

### Reorder

▶ Use to select a function ▶ [Grab] ▶ Use to move the function to a new position ▶ [Insert] ▶ [Complete]

## Skin

# Setting a Skin

Default Moto

You can change the screen design of the FOMA handset. (Checking the specifications)

1. **▶ \$★\$ (Settings) ▶ "Personalize" ▶ "Skin" ▶ Select a skin**  
▶ [Select]



## Greeting

## Displaying a Wake-up Message

You can display a greeting after the Wake-up screen opens when you turn the handset power on.

- 1 ▶ \$★\$ (Settings) ▶ "Personalize" ▶ "Greeting" ▶ Enter a message

- Up to 32 full-/half-pitch characters can be entered.

## Screen Saver

## Launching the Screen Saver

Default | Picture: (Checking the specifications) | Delay: 1 minute

You can set to launch a screen saver if no operation is performed for a specific time.

- 1 ▶ \$★\$ (Settings) ▶ "Personalize" ▶ "Screen Saver" ▶ Perform the following operations

**Picture**

You can change the screen saver image.

Select a folder ▶ ▶ Select an image ▶

**Delay**

Sets the duration before the screen saver launches.

▶ Select a time ▶ [Select]

- If you select "Off", the screen saver does not start.

**Note**

- The screen saver does not start if the set time is shorter than the time set in "Display Timeout". (Checking the specifications)

## Ring Lights

## Setting Ring Lights

Default | None

You can set the incoming call lamp to blink when a call or mail arrives. (Checking the specifications)

- 1 ▶ \$★\$ (Settings) ▶ "Sound Profiles" ▶ "Ring Lights" ▶ "(None)"/"<Lights>"

## Event Lights

## Setting Event Lights

Default On

You can set the incoming call lamp to blink at an alarm or Datebook alarm time.  
(Checking the specifications)

- 1  ▶ \$\$\$ (Settings) ▶ "Sound Profiles" ▶ "Event Lights" ▶ "On"/"Off"

## Date and Time

## Displaying Date &amp; Time on the Talking Screen

Default Show Date: On Show Time: On

You can set the date and time in Talking screen for voice calls.

- 1  ▶ \$\$\$ (Settings) ▶ "In-Call Setup" ▶ "Date and Time" ▶ "Show Date"/"Show Time" ▶ "On"/"Off"

## Home Screen

## Setting the Clock Format

Default Clock: Digital Date: On Layout: Center

You can change the appearance of the clock, or position of the clock or date on the Standby screen. You can also set to not display the clock or date.

- 1  ▶ \$\$\$ (Settings) ▶ "Personalize" ▶ "Home Screen" ▶  
Perform the following operations

**Clock**

**Digital** : A digital clock is displayed.

**Analog** : An analog clock is displayed.

**Off** : A clock is not displayed.

**Date**

Set whether to display the date.

▶ "On"/"Off"

**Layout**

Set the position of the clock and date.

▶ "Left Justified"/"Centered"

**Note****Clock**

- "Analog" cannot be set when "Calendar" for "Wallpaper" is set to "On".

## Display Timeout

## Setting Time Duration before Display is Turned Off

Default 2 minutes

You can set to turn off the display to save power if no operation is performed during the set time.

- 1 ▶ \$★\$ (Settings) ▶ "General Settings" ▶ "Display Timeout" ▶ Select a time duration before the display is turned off [Select]

- The display does not turn off if you select "Off".

## Backlight

## Setting the Backlight Lighting Duration

Default 10 seconds

You can set to turn off the display lighting to save power if no operation is performed during the set time.

- 1 ▶ \$★\$ (Settings) ▶ "General Settings" ▶ "Backlight" ▶ Select time [Select]

- The display remains lit if you select "Continuous".

## Note

- Even if you set this option to "Continuous", the display is turned off after the time set in "Display Timeout" elapses. (Checking the specifications)

## Scroll

## Setting Scrolling of the Screen

Default Wrap Around

You can set the movement of the cursor on the screen with listed items such as Function menu.

- 1 ▶ \$★\$ (Settings) ▶ "General Settings" ▶ "Scroll"

**Up/Down** : The cursor does not move when is pressed if the cursor is at the top item, or when is pressed if the cursor is at the bottom item.


 
**Wrap Around** : Moves the cursor to the bottom or top when is pressed if the cursor is at the top or bottom item.

- 2 Select a scrolling method [Select]

## Setting the Text Marquee Speed

Default	Slow
---------	------

The FOMA handset scrolls a partially hidden name such as Function menu item. You can set the scrolling speed.

**1**  ▶ **\$★\$ (Settings)** ▶ **"General Settings"** ▶ **"Text Marquee"**  
▶ **Select a speed** ▶  **[Change]**

- When an item is selected, the item name is scrolled at the selected speed.
- The item name does not scroll when it is highlighted if you select "Off".

## Brightness

### Adjusting the Display Brightness

Default	3
---------	---

You can set the brightness of the screen in 6 levels.

**1**  ▶ **\$★\$ (Settings)** ▶ **"General Settings"** ▶ **"Brightness"** ▶  
Use  to adjust the brightness ▶  **[OK]**



# Security Settings

## Passwords

Passwords .....	120
Changing Passwords<New Passwords> .....	121
Setting UIM PIN<UIM PIN> .....	122
Unlocking a Blocked UIM .....	122

## Restricting the Handset Operations

Locking Function .....	123
Locking the Handset to Prevent Use by Others<Phone Lock> .....	123
Disabling Making/Receiving Calls/Messages<Self Mode> .....	124
Disabling Phonebook or Datebook Viewing<Lock Application> .....	124
Restricting Dialing<Dialing Restriction> .....	125
Preventing Sidekey Operations<Sidekey Lock> .....	126

## Restricting a Call/Mail/Data Transfer

Viewing Information with Secret Set<Secret Data> .....	126
Rejecting Calls from a Specified Number.....	126
Rejecting a Call without Caller ID<Reject Call> .....	127
Muting the Ringtone of a Call Made from a Caller Not Saved in Contacts <Ring Delay> .....	127
Rejecting Calls from a Caller Not Saved in the Phonebook <Not in Phonebook> .....	128

## Other "Security Settings"

Other Security Settings .....	129
-------------------------------	-----

## Passwords

Some functions of the FOMA handset require a password. In addition to the Security Code, there are the Network Security Code and the i-mode Password. These passwords help you utilize your handset.

### Warning about Passwords

- Avoid setting a password using your birthday, a part of your phone number, your address or room number, 1111 or 1234, that can be easily guessed by others. Be sure to write down the set passwords and store them in a separate location.
- Do not reveal your passwords to others. DoCoMo is not responsible for damage caused by misuse of your security codes by others.
- DoCoMo will never ask you for your passwords.
- If you forget your passwords, you need to bring an ID (driver's license, etc.), the handset and the UIM to a DoCoMo shop. For details, contact a "DoCoMo Information Center" on the back of this manual.

## Security Code

**The Security Code is a 6-digit number that is required when:**

- Selecting "Security" - Viewing all data in "My Personal Information"
- Performing "Master Reset" - Performing "Master Clear"
- Performing "Software Update" - Deleting all stored items

**The Security Code is set to "000000" by default, however, you can change the code yourself. →P121**

- If you forget the Security Code, you need to bring the handset, the UIM and an ID (driver's license, etc.) to a DoCoMo shop.

\*: If you cannot prove you are the registered subscriber, DoCoMo may not be able to accept your request to reset the handset.

## Unlock Code

**The Unlock Code is a 4-digit number that is required when:**

- Setting/canceling "Phone Lock" - Setting/canceling "Lock Application"

**The Unlock Code is set to "0000" by default, however, you can change the code yourself. →P121**

## Network Security Code

**The Network Security Code is a 4-digit number that is required to use network services and is set to the number you selected at subscription. You can change the code yourself. If you have "My DoCoMo ID/Password" for "My DoCoMo", the comprehensive support site for PCs, you can change the Network Security Code by visiting the site from your PC. You can change the Network Security Code yourself by accessing "各種手続き (Procedures)" on the DoCoMo e-site using i-mode.**

- For information on accessing "My DoCoMo" and the "DoCoMo e-Site", see the back of this manual.

## i-mode Password

The 4-digit i-mode Password is required to assign or delete function to/from MyMenu, subscribe to or cancel Message Services or fee-based i-mode services.

(Some other information service providers may set passwords for their sites.)

The i-mode Password is set to "0000" by default, however, you can change it yourself.

Access "iMenu" → "オプション設定 (Function)" → "iモードパスワード変更 (Change i-mode Password)" if you use i-mode.

- If you forget your i-mode Password, you need to bring the handset, the UIM and an ID (driver's license, etc.) to a DoCoMo shop.

## UIM PIN/UIM PIN2

You can assign 2 PIN numbers to the UIM, UIM PIN and UIM PIN2. These codes are set to "0000" by default, however, you can change them yourself. →P122

The UIM PIN is a 4-8 digit number (code) required to identify the user every time the UIM is inserted into the handset or the handset power is turned on in order to prevent unauthorized use. The UIM PIN entry is required to make or receive calls, and operate the handset.

The UIM PIN2 is a 4-8 digit number used to reset outgoing call charges, incoming call charges (if any) and the total of both, to reset total call charges, to set the maximum limit for call charges, to set the currency, or to use or apply for User certificates.

- Use the UIM PIN and UIM PIN2 you set previously if you purchase a new handset but keep the same UIM.

## PIN Unblock Code

The PIN Unblock Code is a 8-digit number to unlock the UIM PIN or UIM PIN2. →P122

You are not able to change it.

- The UIM will be locked if an incorrect PIN Unblock Code is entered 10 times in a row.

## New Passwords

### Changing Passwords

Default	Unlock Code: 0000	Security Code: 000000
---------	-------------------	-----------------------

You can change the Unlock Code or Security Code yourself.

- 1  ▶  ▶ **\$★\$ (Settings)** ▶ **"Security"** ▶ **Enter the Security Code** ▶ **"New Passwords"**
- 2 **"Unlock Code"/"Security Code"** ▶ **Enter the current Unlock Code/Security Code**  
The New Unlock Code entry screen / new Security Code entry screen opens.
- 3 **Enter a new Unlock Code (4-digit)/Security Code (6-digit)**  
The New Unlock Code re-entry screen / new Security Code re-entry screen opens.
- 4 **Enter the Unlock Code/Security Code entered in Step 3**



## UIM PIN

## Setting UIM PIN

Default Off

You can set to require the UIM PIN each time the handset power is turned on.

- 1  ▶ \$★\$ (Settings) ▶ "Security" ▶ Enter the Security Code ▶ "UIM PIN" ▶ "On"/"Off" ▶ Enter UIM PIN

## Changing UIM PIN/UIM PIN2


## Changing UIM PIN

Default 0000

(Checking the specifications)

 
## Changing UIM PIN2

Default 0000

- 1  ▶ \$★\$ (Settings) ▶ "Security" ▶ Enter the Security Code ▶ "New Passwords"
- 2 "UIM PIN2" ▶ Enter the current UIM PIN2  
The new UIM PIN2 entry screen opens.
- 3 Enter the new UIM PIN2 (4-8 digit)  
The new UIM PIN2 re-entry screen opens.
- 4 Enter the UIM PIN2 entered in Step 3

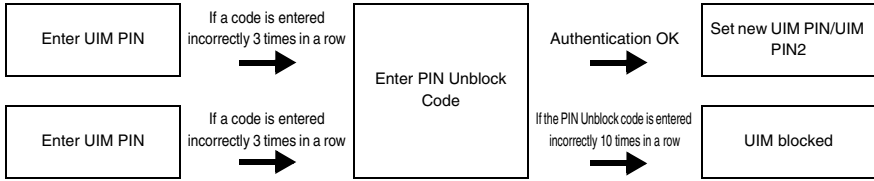 
## Unlocking a Blocked UIM

- The PIN Unblock code is written on the FOMA subscription application form (customer's copy).
- You need to set new UIM PIN/UIM PIN2 codes after unlocking UIM PIN.

- 1  [Unlock] ▶ Enter the PIN Unblock code (8-digit)  
The new UIM PIN/UIM PIN2 code entry screen opens.
- 2 Enter the new UIM PIN/UIM PIN2 code (4-8 digit)  
The re-entry screen for confirmation opens.
- 3 Enter the UIM PIN/UIM PIN2 entered in Step 2

### ■ PIN Unblock Code

The PIN Unblock Code is required when an incorrect UIM PIN/UIM PIN2 is entered 3 times in a row. The UIM will be locked if an incorrect PIN Unblock Code is entered 10 times in a row.



- If you forget the PIN Unblock Code or the card is locked, you need to bring the FOMA handset, the UIM, and an ID (driver's license, etc.) to a DoCoMo shop.

## Locking Function

Lock Option	Description	Reference
Phone Lock	Lock the handset to prevent unauthorized use. You can set to lock the handset automatically.	P123
Self Mode	You can disable all communication functions including calls, Email, or i-mode. You can set to display a confirmation whether to set Self Mode when the handset power is turned on.	P124
Lock Application	You can specify and lock function.	P124
Dialing Restriction	You can disable the key buttons to not allow others to make or send unauthorized calls or Email.	P125

### Phone Lock

## Locking the Handset to Prevent Use by Others

Default    Automatic Lock: Off

You can lock your handset and disable its use unless the Unlock Code is entered. There are 2 function for Phone Lock: the handset is locked immediately and the handset is automatically locked when the power is turned on. (Checking the specifications)

### Locking the Phone Immediately

- 1 **(Settings)** **"Security"** **Enter the Security Code** **"Phone Lock"**



Phone Lock screen

- 2 **"Lock Now"** **Enter the unlock code**

The Phone Lock screen opens and Phone Lock is set.

- When Phone Lock is set, the unlock code entry screen is displayed.

## Activating Phone Lock at Power Up

### 1 The Phone Lock screen (P123) ▶ "Automatic Lock" ▶ "On"/"Off" ▶ Enter the unlock code

Automatic Lock is set.

- The Automatic Lock setting completes if you select "Off".

#### ■ To cancel Phone Lock

Enter the unlock code.

- If an incorrect unlock code is entered 5 times in a row, the FOMA handset is automatically turned off. If you turn the power on and enter the correct unlock code, Phone Lock will be canceled.

## Self Mode

### Disabling Making/Receiving Calls/Messages

Default    Self Mode: Off    Prompt At Power Up: Off

You can stop sending/receiving signals and disable all communication function such as calls, Email, i-mode, packet communication, 64K data communication, Bluetooth communication, and Infrared communication.

### 1 ▶ \$★\$ (Settings) ▶ "Self Mode" ▶ Perform the following operations

#### Self Mode

Set/Cancel Self Mode.


▶ "On"/"Off"

#### Prompt At Power Up

You can set to display a confirmation whether to set Self Mode when the handset power is turned on.

▶ "On"/"Off"

#### Note

- \$★\$ appears at the top of the screen when Self Mode is set.
- You can also set/release Self Mode by pressing  (for 1+ seconds) on the wallpaper screen.
- Self Mode cannot be set while using some other functions such as during a call.
- Email or Message R/F arriving when Self Mode is set is stored at the i-mode center.

## Lock Application

### Disabling Phonebook or Datebook Viewing

Default    Off

You can lock function specified in "Lock Application Setup" and disable use unless the Unlock Code is entered.

### 1 ▶ \$★\$ (Settings) ▶ "Security" ▶ Enter the Security Code ▶ "Lock Application" ▶ Enter the Unlock Code ▶ "On"/"Off"

## Note

- \$★\$ appears at the top of the screen when Lock Application is set.

## Lock Application Setup

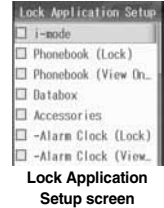 
### Selecting Functions to be Disabled with Lock Application

Default

No applications are selected

You can specify which function that become unavailable using "Lock Application" unless the Unlock Code is entered.

**1** ● ▶ \$★\$ (Settings) ▶ "Security" ▶ Enter the Security Code ▶ "Lock Application Setup" ▶ Enter the Unlock Code



**2** Select an option ▶ ●

- Repeat Step 2 to specify another option.

**3** ☰ [Complete]

## Note

- Sub items are indicated with a leading "-". For example, "Calculator" is a sub item of "Tools" and is preceded with "-". When specifying an option to lock, selecting an item that has sub items, such as "Accessories", automatically selects its sub items.
- Where 2 function are available for the same functions, i.e., "Phonebook (Lock)" and "Phonebook (View Only)", you can select only one of them.
- The following operations are available by pressing [Function] on the Lock Application Setup screen:
  - Select "Search" to find a Contact. →P97
  - Select "Select All"/"Unselect All" to select or deselect all function.
  - Select "Cancel" to cancel the operation.

## Dialing Restriction

### Restricting Dialing

Default

Off

You can restrict from making calls by pressing dial keys and only allow calls made from Contacts and Dialed Calls. (Checking the specifications)

**1** ● ▶ \$★\$ (Settings) ▶ "Security" ▶ Enter the Security Code ▶ "Dialing Restriction" ▶ "On"/"Off"

## Note

- \$★\$ appears at the top of the screen when Dialing Restriction is set.
- You cannot even send Email by entering an address using the dial keys. (Checking the specifications)

**Sidekey Lock**

**Preventing Sidekey Operations**

Default Off

You can set to lock the sidekeys (Ⓛ, Ⓡ, Ⓞ and Ⓢ) of the handset when your handset is closed.

- 1 ▶ \$★\$ (Settings) ▶ "Security" ▶ Enter the Security Code ▶ "Sidekey Lock" ▶ "On"/"Off"

**Note**

- Pressing (for 1+ seconds) when the FOMA handset is folded cancels the Sidekey Lock.

**Checking the Shortcut Operation of the Sidekey Lock**

You can view the Shortcut operation to unlock the Sidekey Lock.

- 1 ▶ \$★\$ (Settings) ▶ "Security" ▶ Enter the Security Code ▶ "Sidekey Shortcut"

The shortcut explanation screen opens.

**Secret Data**

**Viewing Information with Secret Set**

Default Hide

You can view a hidden Contact saved as Secret by setting Secret Data.

- 1 ▶ \$★\$ (Settings) ▶ "Security" ▶ Enter the Security Code ▶ "Secret Data" ▶ "Show"/"Hide" ▶ [OK]

**Note**

- \$★\$ appears at the top of the screen when Secret Data is set to "Show".

**Rejecting Calls from a Specified Number**

You can set to reject calls from the specific callers stored in Contacts. You can set this option when storing or editing a Contact.




- 1 **Create Contact screen (P91)/Edit Contacts screen** ▶ "Reject" ▶ "Yes" ▶ [Complete]

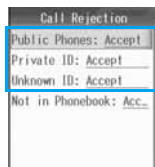 
Storing/editing a Contact completes.

## Rejecting a Call without Caller ID

Default    Public Phones: Accept    Private ID: Accept    Unknown ID: Accept

You can set whether to accept or reject calls without Caller ID depending on the reason for no Caller ID.

**1**                **(Settings)**        **"In-Call Setup"**        **"Call Rejection"**



Call Rejection screen

**2**    **Perform the following operations**

### Public Phones

Set an option for calls made from public phones.

▶ **"Accept"/"Reject"**

### Private ID

Set an option for calls made without the Caller ID because the caller chose not to send Caller ID.

▶ **"Accept"/"Reject"**

### Unknown ID

Set an option for calls made from overseas or from a general phone via forwarding services, from which Caller ID cannot be sent. (Caller ID may be sent depending on the carrier.)

▶ **"Accept"/"Reject"**

### Note


- The handset does not start incoming call actions for a rejected incoming call, and the call is recorded in Missed Calls. The caller hears a busy signal. (Checking the specifications)
- Calls are rejected even when the Voicemail or Call Forwarding service is activated. However, if Ringing Time is set to 0 seconds, each service launches. (Checking the specifications)
- i-mode mail or SMS are received regardless of rejection settings. (Checking the specifications)

## Ring Delay

### Muting the Ringtone of a Call Made from a Caller Not Saved in Contacts

Default    Ring Delay: 0 seconds    Show in Call Logs: Yes

You can set to not start ring action such as sounding a ringtone when a call arrives from a caller not saved in Contacts or without Caller ID. This option is convenient to prevent nuisance calls such as "One ring calls" that disconnect after a short ringing time. (Checking the specifications)

**1**                **(Settings)**        **"In-Call Setup"**        **"Ring Delay"**    **Perform the following operations**

### Ring Delay

Set an interval from when a call arrives until the ring action starts.

Use  to enter the time     [OK]

---

### Show in Call Logs

Set whether to show the call that was terminated within the Ring Delay time in Missed Calls.

▶ "Yes"/"No"

---

### Note

#### Ring Delay

- If the Ring Delay is set longer than the ring time for the Voicemail or Call Forwarding service, each service launches before the ring action starts. (Checking the specifications)
- If the Ring Delay is set longer than the response time of "Answering Machine", the Answering Machine starts without the ring action.
- The time also can be entered using dial keys.

### Not in Phonebook

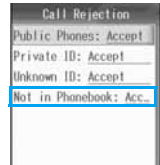 
## Rejecting Calls from a Caller Not Saved in the Phonebook

Default    Accept

You can set to reject calls from a caller not saved in Contacts or without Caller ID. (Checking the specifications)

- This function is available only when the caller sends Caller ID.
- It is recommended that you set the Caller ID Display Request service and "Reject Call" concurrently.

**1**     ▶ \$★\$ (Settings) ▶ "In-Call Setup" ▶ "Call Rejection"



Call Rejection screen

**2**    "Not in Phonebook" ▶ "Accept"/"Reject"

### Note

- The handset does not start incoming call actions for a rejected incoming call, and the call is recorded in Missed Calls. The caller hears a busy signal. (Checking the specifications)
  - Calls are rejected even when Voicemail or Call Forwarding service is activated. However, if Ringing Time is set to 0 seconds, each service launches. (Checking the specifications)
  - i-mode mail or SMS is received regardless of rejection settings. (Checking the specifications)
-

## Other Security Settings

In addition to the security functions described in this chapter, the following functions and services are available.

Purpose	Function/Service	Reference
To upload or check safety messages using i-mode in case of disaster.	"i-mode BBS for disaster" service	For details, refer to the "i-mode Operation Guide".
To change Email address	Change Mail Address	
View an Email address if you forget it	Confirm Mail Address	
To receive Email only from a specified domain	Domain ID Receive	
To receive/reject Email from a specified address.	Address ID Receive/Address ID Reject	
To receive/reject Email via i-mode only	Receive only i-mode Mail/Reject only i-mode Mail	
To reject incoming i-mode mail in excess of 200 a day from an i-mode phone	Restrict i-mode Spam	
To reject unsolicited mail	Reject Unsolicited Ad Mail	
To reject SMS	Set/view Reject SMS	
To check the Email setting status	Confirm Settings	
To restrict incoming Email size	Limit Mail Size	
To temporarily disable Email functions	Suspend Mail	
To use an Electronic authentication service to perform safe and reliable data communication (for FirstPass sites only)	FirstPass	
To select and download Email	Receive option	P176
To register the phone number of a nuisance caller to reject calls from that number	Nuisance Call Barring Service	P249
To ask a caller to show Caller ID	Caller ID Request Service	P249
To update software on the handset when necessary	Software Update	P318
To protect the handset from harmful data	Scanning Function	P323





# Camera

<b>Before Using the Camera .....</b>	<b>132</b>
<b>Capturing Still Images&lt;Still Image Capture&gt; .....</b>	<b>135</b>
<b>Capturing Videos&lt;Record Video&gt; .....</b>	<b>136</b>
<b>Changing the Capturing Settings.....</b>	<b>136</b>
<b>Changing the Camera Settings&lt;Camera Setup&gt; .....</b>	<b>138</b>
<b>Using the Barcode Reader&lt;Barcode Reader&gt; .....</b>	<b>139</b>

## Before Using the Camera

### Notes for Capturing Images

- The camera employs high precision technology, but some pixels or lines may seem brighter or darker than others. Also, when capturing in places with insufficient lighting, noise, seen as white lines, increases. This is normal.
- Clean the lens with a soft cloth before capturing. If the lens is stained with fingerprints or oil, the captured image may appear out of focus or blurred.
- Do not leave the handset in a warm place or under a direct sunlight for a long period. The captured image or video may deteriorate.
- If you capture under a fluorescent light, mercury lamp or sodium lamp flickering at high speed, flickering such as stripes may appear. The color tone of still images or videos may vary depending on the shutter speed.
- Do not expose the lens to direct sunlight for a long period and do not capture at the sun or bright lamp directly. The image may become discolored or the camera may fail.
- Do not cover the lens with your fingers, hair or the handset strap when capturing.
- Capturing a fast moving object may result in an image slightly distorted from the image displayed on the screen at the time of capturing, or the image may be blurred.
- When the battery level is low, you may not be able to save captured still images or videos.
- Captured still images or videos may differ from the actual subjects in brightness or color tone.
- Even in Manner Mode, the shutter tone sounds at a fixed volume. The shutter tone sounds from the speaker even when a headset is connected to the handset (Checking the specifications).

#### ■ Notice

The stored content may be lost due to the handset failure or repair. DoCoMo is not responsible for lost data. It is recommended that you keep saved content from the handset on a microSD memory card. You can connect the handset to a PC using data link software and a FOMA USB cable (optional) and save data to the PC.

### Copyrights and Portrait Rights

**You have no right to copy, modify, or distribute any contents to which a third party holds a copyright such as text, images, music, or software downloaded from Web sites on the Internet, or recorded using this product, without permission from the copyright holder except when the copy or quote is for personal use allowed under Copyright Law. Note that capturing and recording live performances or exhibitions even for personal use may be prohibited. Refrain from taking portraits or other persons and distributing such portraits over the Internet without their consent, as this may violate their portrait rights.**



Please respect the privacy of individuals around you when capturing and sending photos using a camera-equipped mobile phone.

## Save Format of Still Images/Videos (Checking the Specifications)

	Still Image File		Video File
<b>File Format</b>	JPEG		MP4 (Mobile MP4)
<b>Resolution</b>	External Camera	Wallpaper (240×320) VGA (480×640) 1.3M (1024×1280) 2.0M (1200×1600)	QCIF (176×144) CIF (352×288)
	Internal Camera	QCIF (176×144) Sub-QCIF (128×96)	
<b>Encoding</b>	—		Graphics: (Checking the Specifications) Audio: (Checking the Specifications)
<b>File Extension</b>	.jpg		.3gp
<b>File Name</b>	(Checking the specifications)		(Checking the specifications)
<b>Maximum File Size</b>	XX Kbytes		500 Kbytes

## Number of Pictures Which Can Be Saved on the Handset or a microSD Memory Card

The following tables show the approximate number of pictures which can be saved:

### ■ Still Images (External Camera)

Resolution	Quality	Number of Pictures	
		M702iG (Handset)	microSD Memory Card*
Standby (240×320)	Good	Approx. XX	Approx. XX
	Better	Approx. XX	Approx. XX
	Best	Approx. XX	Approx. XX
VGA (480×640)	Good	Approx. XX	Approx. XX
	Better	Approx. XX	Approx. XX
	Best	Approx. XX	Approx. XX
1.3M (1024×1280)	Good	Approx. XX	Approx. XX
	Better	Approx. XX	Approx. XX
	Best	Approx. XX	Approx. XX
2.0M (1200×1600)	Good	Approx. XX	Approx. XX
	Better	Approx. XX	Approx. XX
	Best	Approx. XX	Approx. XX

\*: Using the included XX Mbyte microSD memory card (free sample).

### ■ Still Image (Internal Camera)

Resolution	Quality	Number of Pictures	
		M702iG (Handset)	microSD Memory Card*
QCIF (176×144)	Good	Approx. XX	Approx. XX
	Better	Approx. XX	Approx. XX
	Best	Approx. XX	Approx. XX
Sub-QCIF (128×96)	Good	Approx. XX	Approx. XX
	Better	Approx. XX	Approx. XX
	Best	Approx. XX	Approx. XX

\*: Using the included XX Mbyte microSD memory card (free sample).

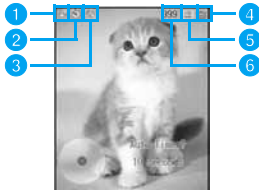 
## Video (Checking the Specifications)

Quality	Video Length	Number of Pictures	
		M702iG	microSD Memory Card*
Good	i-mode (small)	Approx. XX	Approx. XX
	i-mode (large)	Approx. XX	Approx. XX
	Maximum	Approx. XX	Approx. XX
Better	i-mode (small)	Approx. XX	Approx. XX
	i-mode (large)	Approx. XX	Approx. XX
	Maximum	Approx. XX	Approx. XX
Best	i-mode (small)	Approx. XX	Approx. XX
	i-mode (large)	Approx. XX	Approx. XX
	Maximum	Approx. XX	Approx. XX

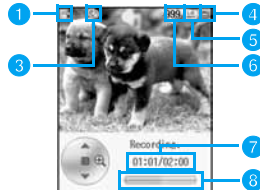 
\*: Using the included XX Mbyte microSD memory card (free sample).

## Capturing Screen Components

The meanings of icons appearing on the Photo/Video capture screen are as follows:



Camera capture screen



Video capturing screen

- 1 Camera mode →P135, P136
  - \$★\$ Camera
  - \$★\$ Video camera
- 2 Auto-Timed Capture →P138
  - \$★\$ Auto Timer ON
- 3 Light →P135, P136
  - \$★\$ Light On
  - \$★\$ Light Off
- 4 Switch Storage Device →P139
  - \$★\$ Phone
  - \$★\$ microSD
- 5 Resolution →P138 (Still images), P138 (Videos)
  - \$★\$ Standby (240x320)
  - \$★\$ VGA (480x640)
  - \$★\$ 1.3M (1024x1280)
  - \$★\$ 2.0M (1200x1600)
  - \$★\$ QCIF (176x144)
  - \$★\$ Sub-QCIF (128x96)
- 6 Number of remaining images
- 7 Elapsed Capturing time/Maximum capturing time
  - \$★\$ Displays the Elapsed Capturing time/Maximum capturing time
- 8 Capturing progress bar
  - \$★\$ Displays the elapsed capturing time in bar

\*: Number of remaining images depends on the setting conditions for capturing.

## Capturing Still Images

- Captured still images are stored in the "Camera" folder under "My Pictures" in "Databox" on the handset by default. To change the saving destination to the microSD memory card, access "Location" (P139).

### 1 (Accessories) "Camera"



Still image capture screen

### 2 Frame the shot

- [Send]: Send a captured still image using Email, Infrared, communication or Bluetooth. →P172, P223, P238

Screen to be inserted

Still image capture completion screen

### 3 After capturing

Captured images are saved and the Capturing screen returns.

- : A captured image will not be saved and returns to the Shooting screen.

#### ■ Key operation while ready for capturing

Key	Description
	Start Capturing
	Light On/Off (Only when shooting with the External camera)
	Internal/External View
	Display keys for Zoom, Lighting Control and Brightness
	Select values for Zoom, Lighting Conditions, and Brightness

#### ■ To capture with the handset folded (Checking the specifications)

If the handset is folded while ready for capturing, the capture screen opens on the sub-display. Captured images are saved automatically.

- :Set the image zoom ratio. (Checking the specifications)
- :Start shooting.

## The Function Menu on the Still image Capture Screen

Default Light: Light Off

### 1 Still image capture screen (P135) [Function] Perform the following operations

#### Go to Pictures

View images saved in "Databox". (Checking the specifications)

#### Switch

Switches to Video Mode or Barcode Reader.

"Go to Movie Mode"/"Barcode Reader"

#### Internal View/External View

You can switch the camera between internal and external views.

#### Light On/Light Off

You can turn the flash on/off.

#### Auto-Timed Capture

Set the number of seconds from the time the shutter is pressed until the capturing time. →P138

#### Camera Setup

Sets the camera. "Setting the Camera". →P138

#### Switch Storage Device

Set the saving destination of the image. →P139

#### Free Space

Check the free space on the handset or the microSD memory card.

## The Function Menu on the Still Image Capture Completion Screen

### 1 Still image Capture completion screen (P135) [Function] Perform the following operations

#### Store Only

Saves a captured still image.

#### Discard

Deletes a captured still image.

#### Apply As

Sets the captured still image for the Wallpaper or a Contact.

**Wallpaper** : Sets as Wallpaper.

**Screen Saver** : Sets as Screen Saver.

**Contact** : Sets to a Contact. Go to Step 2 in "Saving Contacts to the Phonebook from Received Calls or Dialed Calls" (P94).

**Camera Off Image** : Sets to an alternative image of a video phone.

#### Edit

Edits a captured still image. →P207

## Capturing Videos

 

- Captured videos are stored in the "Camera" folder under "i-motion" in "Databox" on the handset by default. To change the saving destination to the microSD memory card, access "Switch Storage Device" (P139).

### 1 "Video Camera"



Video capture screen


### 2 Frame the shot

-  [Stop]: Terminates capturing.
-  [Cancel]: Stops capturing without saving the captured video.



Video capturing screen



 


### 3 Exit capturing

-  [Send]: Sends a captured video using Email, Infrared communication, or Bluetooth. →P172, P223, P238

### 4

Captured videos are saved and returns to the Capturing screen.

#### ■ Key operation while ready for capturing or while capturing

Key	Description
	Start/Pause Capturing
	Light On/Off (Only when shooting with the external camera)
	Internal/External View (Only in shooting standby mode)
	Display keys for Zoom, Lighting Control and Brightness
	Select values for Zoom, Lighting Conditions, and Brightness

## The Function Menu on the Video Capture Screen

Default Light: Light Off

### 1 Video capture screen (P136) [Function] ▶ Perform the following operations

#### Go to Videos

View images saved in "Databox". (Checking the specifications)

#### Switch

Switches to Photo Mode or Barcode Reader.

▶ "Go to Photo Mode"/"Barcode Reader"

#### Internal View/External View

You can switch the camera between internal and external views.

#### Light On/Light Off

You can turn the flash on or off.

#### Video Camera Setup

Sets the Video camera. "Setting the Camera". →P138

#### Switch Storage Device

Set the saving destination of the image. →P139

#### Free Space

Check the free space on the handset or the microSD memory card.

## Function Menu on the Video Capturing Completion Screen

### 1 Video capturing completion screen (P136) [Function] ▶ Perform the following operations

#### Store Only

Saves a captured video.

#### Discard

Deletes a captured video.

#### Preview

Plays a captured video.

#### Edit

Edits a captured video. →P210

## Changing the Capturing Settings

Set the Camera matching with the ambient conditions.

## Using Zoom

Default    Still Image/Video: 1x

Use the control key displayed on the capture screen to set Zoom.

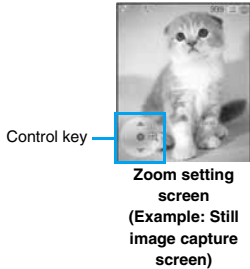 
### ■ Maximum zoom ratios for resolutions (External camera)

Camera Mode	Resolution	Max. Ratio
Still image	Wallpaper (240×320)	Approx. XX
	VGA (480×640)	Approx. XX
	1.3M (1024×1280)	Approx. XX
	2.0M (1200×1600)	Approx. XX
Video	QCIF (176×144)	Approx. XX
	CIF (352×288)	Approx. XX

### ■ Maximum zoom ratios for resolutions (Internal camera)

Camera Mode	Resolution	Max. Ratio
Still image	QCIF (176×144)	Approx. XX
	Sub-QCIF (128×96)	Approx. XX
Video	QCIF (176×144)	Approx. XX
	CIF (352×288)	Approx. XX

**1** Still image capture screen (P135)/Video capture screen (P136) ▶ Use to adjust Zoom ▶ Use to select a zoom ratio



## Setting Lighting Conditions

Default    Still Image/Video: Automatic

You can adjust the coloring of the image to a natural color tone with light source in captured places. Use the operation key displayed on the capture screen to set Lighting Conditions.

**1** Still image capture screen (P135)/Video capture screen (P136) ▶ Use to adjust Lighting Conditions ▶ Use to select the following the items

- Automatic**  
: The camera automatically adjusts the natural color tones to match with the lighting conditions.
- Sunny**  
: Suitable for shooting outdoor in sunny weather.
- Indoor (Home)**  
: Suitable for shooting under incandescent lighting.
- Indoor (Office)**  
: Suitable for shooting under florescent lighting.
- Night**  
: Suitable for shooting night views.

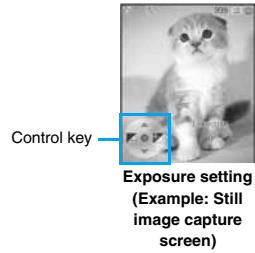 


## Adjusting Brightness

Default    Still Image/Video: 0

Adjust the brightness (exposure) of the image. The Brightness can be set from -2~0~+2. Use the operation key displayed on the capture screen to set Brightness.

**1** Still image capture screen (P135)/Video capture screen (P136) ▶ Use to adjust Exposure ▶ Use to select a brightness correction value



## Switching between the Internal and External cameras

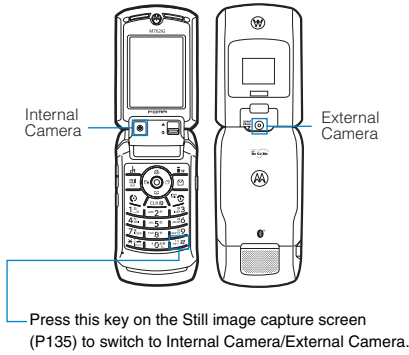 
Default    Still Image/Video: External View

You can switch between the In and Out cameras according to the subject.

**1** Still image capture screen (P135) ▶ [Function] ▶ "Internal View"/"External View"



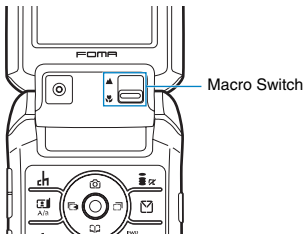 
## Location of External View



## Capturing Close-up

Press the macro mode switch to \$★\$ when capturing close to an object or using the Barcode Reader.

- You can capture a subject from a distance of about 10 cm away using (Macro).



### Note

- When switching lenses, slide the switch all the way. If you stop the switch in the middle, the lens will not be switched.

## Setting the Auto Timer

Set the number of seconds from the time the shutter is pressed until the capturing time.

- The Auto Timer is not available for video capturing.

**Still image capture screen (P135)** **[Function]** ▶ **"Auto-Timed Capture"**

## 2 "5 seconds"/"10 seconds"

The set duration (\$★\$) is displayed on the capture screen.

- [Cancel]: Cancels the Auto Timer.



Auto-Timed capture screen

## 3 [Start]

The auto timer starts and shoots after the set number of seconds elapses.

- [Capture]: Starts capturing.
- [Cancel]: Cancels the timer.

## Camera Setup

### Changing the Camera Settings

You can specify the saving destination of captured images, the shutter sound, the resolution, image quality, etc.

### Setting the Camera

Default	Resolution (External/Internal View): Standby (240 x 320)/QCIF (176 x 144) Quality: Better Shutter Tone: Click Mirror: Off
---------	---

**Still image capture screen (P135)** **[Function]** ▶ **"Camera Setup"** ▶ **Select from the following items** **[Change]**

### Resolution

Sets the resolution.

- For resolutions, see "Number of Pictures which can be Saved on the Phone or a microSD Memory Card" (P133).

▶ **Select a resolution** **[Select]**

### Quality

Sets the image quality.

▶ **"Good"/"Better"/"Best"**

### Shutter Tone

Select the tone to sound when the shutter is pressed.

▶ **Select a Shutter Tone** **[Select]**

 

 

### Mirror

The image displayed on the finder will be reversed when you are using the internal camera.

▶ **"Off"/"On"**


## Setting Video Capturing

Default	Auto Repeat:Off Full Screen:Left (90 CCW) Video Quality:Better Video Length:i-mode (Large) Resolution (External/Internal View):QCIF (176x144) Recording Sound:Off Mirror:Off
---------	--

**1** Video capture screen (P136)  [Function]  "Video Camera Setup"  Select from among the following items  [Change]


### Auto Repeat

(Checking the specifications)

 "On"/"Off"

### Full Screen

(Checking the specifications)

 "Left (90 CCW)"/"Right (90 CW)"

### Video Quality

Sets the image quality.

 "Good"/"Better"/"Best"

### Video Length

Set a duration of video capturing. (Checking the specifications)

 "MMS"/"Maximum"

### Resolution

Sets the resolution.

- For resolutions, see "Number of Pictures which can be Saved on the Phone or a microSD Memory Card" (P133).

 Select a resolution  [Select]

### Recording Sound

- Set whether to record sound when capturing videos.

 "Off"/"On"

### Mirror

 
 
The image displayed on the finder will be reversed when you are using the Internal camera.

 "Off"/"On"

 
Set the Saving Destination of the Image/Video.

Default Still Image/Video: Phone

Set the saving destination of the captured image either to the handset or the microSD memory card.

**1** Still image capture screen (P135)/Video capture screen (P136)  [Function]  "Switch Storage Device"

## 2 "MicroSD"/"Phone"

 [Details] : Display the storage location as "microSD" or "Phone".

### Barcode Reader

## Using the Barcode Reader

You can scan information embedded in a JAN code or QR code using the handset camera. You can create i-mode mail or connect to the Internet using the scanned information. You can also save or play the scanned information, image or melody.

- Up to XX split QR codes can be scanned.
- UP to 5 pieces of scanned information can be saved.

#### ■ JAN codes

The JAN code is a barcode representing numbers using vertical bars in different thickness and spaces. 8-digits (JAN8) or 13-digit (JAN13) barcode can be scanned.

- The scanned information is saved on the Barcode reader screen as "XXXXX.jan" data.
- The scanned result of the following JAN code is "4942857113276".



#### ■ QR codes

The QR code is one of the 2 dimensional codes that expresses text including Kanji, Kana or pictographs in the vertical and horizontal patterns. Some QR codes have an image or melody embedded, and there are split QR codes where several images contain one larger piece of information.

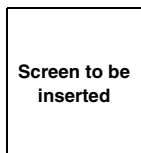 
- The scanned information is saved on the Barcode reader screen as "XXXXX.qr" data.
- The scanned result of the following JAN code is "株式会社NTTドコモ".



## Scanning Codes

- Set the close-up button of the camera to \$★\$ before using the Barcode Reader. →P138
- Scan a code from a distance of about 10 cm away.

### 1 ●▶ \$★\$ (Accessories) ▶ "Barcode Reader"



Barcode Reader screen

### 2 Start Scan

- [Light On]: Turn On/Off the light.



Scanning start screen

### 3 ●

Scan the code. When scanning completes, a tone sounds and the Scanned result screen opens.

- [Cancel]: Cancels the scanning.
- If the code cannot be scanned within 30 seconds, the FOMA handset returns to the Scanning start screen after a message appears.



Scanned result screen (Example: An image was scanned.)

### 4 Select data to scan ▶ ●

The screen to display/play/save the scanned data appears. Go to Step 3 in "Using Saved Data" (P140).

#### ■ To scan split QR codes

- ① Performs Steps 1 to 3 of "Scanning Codes" (P140)
  - ② After the message "Scan Next Barcode" appears, scans the next code
  - ③ Repeats Steps ② and ③
- If a split code could not be scanned, a confirmation whether to end the Barcode Reader appears. Press [No] to return to the Scanning code screen.

## Note

- Barcodes other than JAN Codes and QR Codes and 2 dimensional codes cannot be scanned.
- Barcodes may not be correctly scanned because of scar, smudge, damage, printing quality or reflection of lights.
- Some codes may not be scanned depending on the type or size.

## Using Saved Data (Checking the specifications)

### 1 Barcode Reader screen (P140) ▶ Select data ▶ ●

### 2 Select "View" ▶ ●

The Scanned result screen (P140) opens.

**Delete:** Deletes the selected data. Press [Yes].

### 3 Select data ▶ ●▶ Perform the following operations

- Displayed items vary depending on the type of data.

#### View

Displays an image.

- If the data is not saved, the image is displayed after the data is saved. Press [Yes].

#### Play

Plays a melody.

- If the data is not saved, the melody is played after the data is saved. Press [Yes].

#### Store as Bookmark

Saves the URL in Bookmarks. ●▶ [Yes].

#### URL

Saves the underlined URL to a bookmark or Contact, or make a call using the Web To function.

#### Internet

Connects to the Internet. Press [Yes].

#### Phone Number

Saves the underlined phone number to a Contact or create i-mode mail using the Mail To function.

#### Email


Saves the underlined mail address to a Contact or create i-mode mail using the Mail To function.

#### Create Message

The Compose message screen opens. Press [Yes].

---

### Create Contact

Saves the name, phone number etc. to a Phonebook. Press  [Yes].

**Create New** : Save to a Phonebook selecting "Phone" or "UIM".

**Add to Contact** : Add items to an existing Contact.

---

### Voice Call

Makes a voice call to the selected phone number.

---

### Video Call

Makes a video call to the selected phone number.

---

### Run i-appli

Starts an i-appli. Press  [Yes].

---

### Delete\*

Deletes scanned images or melodies.

---

### Copy

Copies selected URL, phone number or address. →P265

---

### Copy All

Copies all items on the Scanned result screen. →P265

---

### Save

Saves the scanned data.

---

## Note

#### Create Email

- If the address has invalid characters, nothing is entered in the address.

 

#### Making a Voice Call/Video Call

- Valid characters are numbers and symbols (#, \*, +, and -). If the phone number contains characters other than these, the call cannot be made.

#### Run i-appli

- To launch an i-appli from scanned data, set "Start from Barcode" to "Yes". →P195

#### Save

- No more scanned data can be saved if 5 have already been saved. Press  [OK] ▶ Select scanned data ▶  if a message whether to delete the oldest data appears.
-

# i-mode/i-motion

i-mode .....	144
Displaying the i-mode Menu<i-mode Menu> .....	147

## Accessing Sites

Accessing Sites .....	148
Navigating and Performing Operations on Web Sites .....	149
Opening Web Site<Internet Connection> .....	150
Saving Entries in MyMenu<MyMenu> .....	151
Changing i-mode Password<Change i-mode Password> .....	151
Saving Web Site Addresses or Sites for Quick Access<Bookmarks> .....	151
Saving the Contents of a Web Site<Screen Memo> .....	153

## Downloading Images or Melodies from Sites

Saving Images from a Site or Message<Save Image> .....	155
Downloading Melodies from a Site<Melody> .....	155
Downloading Templates from a Site (checking the specifications) <Download Templates> .....	156
Downloading Dictionaries from a Site (checking the specifications) <Download Dictionaries> .....	156
Downloading Chara-den from a Site (checking the specifications) <Download Chara-den> .....	156

## Useful Functions of i-mode

Using Phone To/Mail To/Web To/i-appli To Functions <Phone To/Mail To/Web To/i-appli To Function> .....	157
---	-----

## Configuring i-mode Settings

Configuring i-mode Settings<i-mode Setting> .....	157
---	-----

## **Using Message Service**

- When Receiving Messages<Receiving Messages> ..... 159**
- Displaying Messages in the Message Box<Message R/Message F>..... 160**

## **Using Certificates**

- Operating SSL Certificates<SSL Certificate> ..... 161**
- Configuring FirstPass Settings<User Certificate Operation> ..... 161**
- Changing the Certificate Center Host  
<Connect to Certificate Center Host> ..... 162**

## **Using i-motion**

- i-motion..... 162**
- Downloading i-motion Movies from Sites  
<Download i-motion movies> ..... 163**

## i-mode

**i-mode is a service that makes use of the display of the i-mode FOMA handset (i-mode handset) to enable you to use online services such as site (program) access, Internet access and i-mode mail.**

### ■ Site (Program) access

You can use various types of online services offered by information providers (IP), such as weather forecasts and news by selecting i Menu from the i-mode menu. You can also download games or wallpaper.

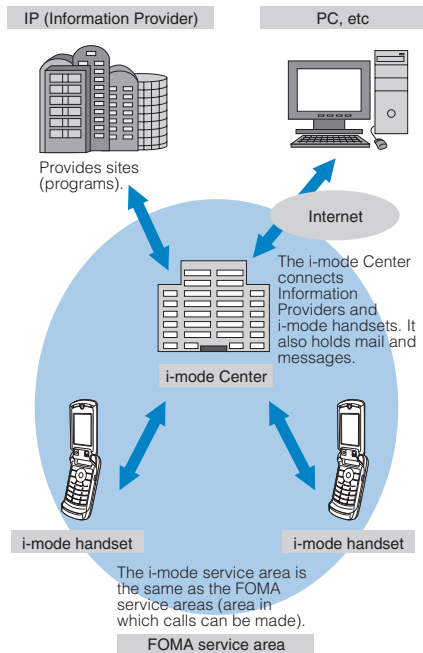 
### ■ Internet

Directly entering a URL to an i-mode handset allows you to view various i-mode Web sites.

### ■ i-mode mail

You can exchange messages of up to 5,000 full-pitch characters with i-mode handsets or with anyone who has an Email address on the Internet. Deco mail, still images or videos can also be exchanged.

## How the Service Works



## Note

- i-mode is a fee-based service requiring a separate subscription. For details on subscription, contact the "DoCoMo Information Center" on the back of this manual.
- Once you subscribe to the FOMA service, you can use all services from that day.
- If you switch the subscription from the mova service (with i-mode subscription) to the FOMA service, the MyMenu contents will be transferred. All of the "MyMenu" contents may not be transferred to FOMA depending on the sites. You may need to register again. For sites that allow transferring "MyMenu", check "News & Help" under the i-menu.
- i-mode fees are based on the amount of exchanged data (number of packets). This manual does not include information on fees. For information on fees, refer to the "i-mode Operation Guide" that was provided when you subscribed to i-mode.
- The i-mode service contents are subject to change. For details, refer to the latest "i-mode Operation Guide".

## Site (Program) Access

**You can access sites with simple key operations to use various online services offered by information providers (IP). These online services include inquiring on bank account balances, transferring money, purchasing tickets, viewing news, looking up in dictionaries, and downloading ring melodies.**

## Opening Sites

**After you connect to the i-mode Center, the i Menu opens. From this menu, you can access sites (programs) or the "Weekly i Guide".**

- Accessing Sites →P150

Screen to be inserted

### i Menu

① マイメニュー (MyMenu)	Frequently accessed sites can be saved for quick connection. →P151 Fee based sites in i Menu will be saved automatically. Up to 45 sites can be saved.
② 週間 i ガイド (Weekly i Guide)	The latest information about new or recommended sites is provided every day from Monday to Friday.
③ メニューリスト (Menu List)	All sites by genre and region are listed. Select and connect to a site from this list.
④ とくするメニュー (Tokusuru Menu)	Weekly updates on interesting PR campaigns, premiums and discount coupons, etc. are provided. (Sponsored by D2 Communications)

5 エリア (i Area)	Easy-to-use information on the area you are currently located, such as weather forecast, maps and town information is provided.
6 かんたん検索 (Easy Search)	Sites can be quickly searched using a keyword from a category such as "games" or "wallpaper". i-appli Search: Menu for introducing i-appli by subject categories, such as free i-appli or games. Convenient-site Search: A Menu that introduces sites picked from the menu list that is convenient for daily use, by usage category.
7 マイボックス (MyBox)	MyBox is a membership service that allows you quickly access the saved sites or shops.
8 オプション 設定 (Function)	i-mode mail settings or the i-mode password can be changed.
9 お知らせ ヘルプ (News & Help)	Information from DoCoMo and instructions and rules for using i-mode are provided.
■ 料金とお申込 (Billing & Subscriptions)	You can check or pay your bill, change your subscription items, or subscribe to additional services.
ENGLISH	You can switch the i Menu to English.

 
- Setting screens only provide examples. Some screens may appear differently depending on the settings.

### Note

- Some sites require fees to use their information (i-mode pay sites).
- Some services offered by information providers (IP) may require a separate subscription.
- Packet communication is not charged except during communication with the i-mode center even if \$★\$ is flashing.
- If you subscribe to the Dual Network service, the i Menu screen appears differently.

## Other Convenient Services

### ■ i-Channel

i-Channel is a service that DoCoMo or information providers (IP) use to distribute graphical information such as news or weather forecasts to i-mode handsets. Information is periodically received and tickers flow on the wallpaper screen for the latest information. You can press  to show a Channel List. In addition, you can obtain more detailed information by selecting a channel you want to see from the Channel List.

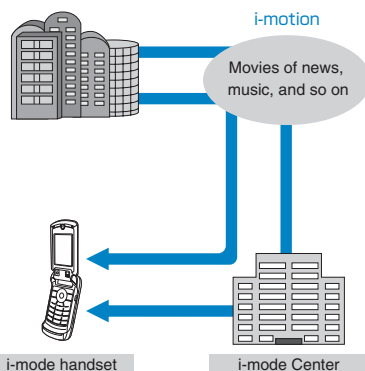 
- Compatible devices - Available on the i-Channel compatible handset.  
For details, refer to the "i-mode Operation Guide".

### ■ i-motion

You can download images or sounds from i-mode sites to play or use as Wallpaper.

- Downloading i-motion Files →P163
- Playing back i-motion Sounds →P208
- Automatically Playing i-motion Files →P164

#### IP (Information Provider)



### ■ Chaku-motion/Chaku-Uta

You can download an i-motion file from an i-mode site to your i-mode handset to use it as a ringtone or Picture ID. In addition to melodies, you can use the singing voice of your favorite singer as a ringtone. However, you cannot set some incompatible i-motion files as Chaku-motion. Setting Chaku-motion →P108

- "Chaku-Uta" is a registered trademark of Sony Music Entertainment Inc.

### ■ i-appli

i-appli downloaded from various sites allow you to use your i-mode handset in many new, convenient ways. For example, you can download various games to your i-mode handset, or a stock market i-appli for automatically checking stock prices periodically. You can scroll a map smoothly because only the data you need is downloaded with a map i-appli.

- Downloading an i-appli →P193
- Launching an i-appli →P195
- Launching an i-appli Automatically →P195

### ■ i-appli Standby screen

On the i-appli Standby screen, you can use an i-appli as the Standby display, or to receive mails, or make calls. You can set the stand-by display to display the latest news or weather forecast, or have your favorite character notify you of new mails or alarms.

- Setting the i-appli Standby Screen →P192



## ■ i-appli DX

You can make even greater use of an i-appli. For example, you can link the i-mode handset data (mail and call logs, Contacts, etc.) to i-appli DX to create mail messages with your favorite animation character, to have the animation announce the names of callers, or to update real-time information such as stock prices or sport events.

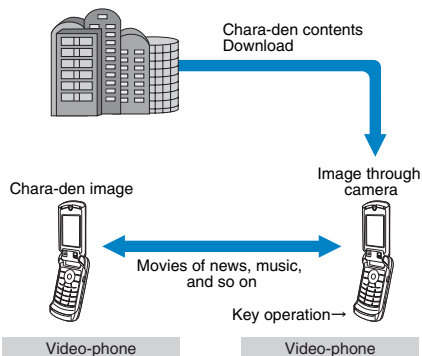 
- i-appli DX →P192

## ■ Chara-den

During a video call, you can send an animation character to the other party's video call handset instead of your own image, and make the character move using key operations. You can download an animation character and set it as Wallpaper or attach it to Email. However, you cannot send a still image or video file which has been restricted from being attached to Email or output from the handset.

- Downloading Chara-den →P156
- Viewing Chara-den →P213
- Setting Chara-den →P85
- Operating Chara-den →P213

IP (Information Provider)



## ■ Infrared communications

You can exchange Contacts, Email, and bookmarks with another mobile phone or PC with infrared capability.\*

An i-appli enables you to connect to another device with infrared capability and provides for a wider variety of usage. For example, you can use the handset with an i-appli as a TV remote controller or as a membership card.

\*: You may not be able to exchange data with some devices even when they have the infrared capability.

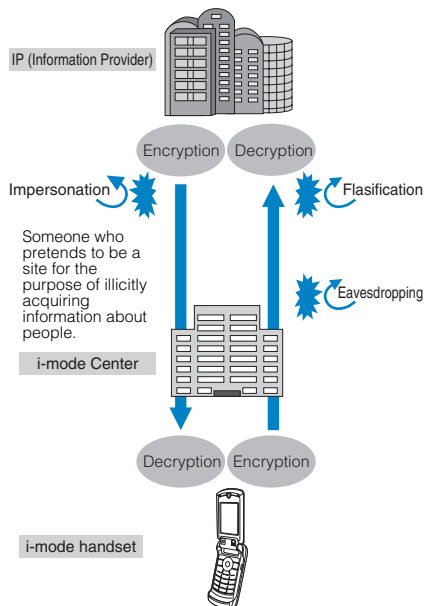 
- Switching to Infrared Mode →P223

## ■ SSL communication

SSL employs authentication and encryption technology to protect privacy and make data communication more secure. SSL pages use data encryption to prevent eavesdropping or identity theft, and file overwriting to make exchange of personal data including your credit card numbers or addresses more secure. There

are 2 types of SSL communication: One displays an SSL site (SSL page) using the CA certificates on the handset without any special operations and the other one displays an SSL site using the user certificate downloaded from the FirstPass center. Depending on the site, different certificates are used.

- Using the SSL Certificate Stored in the i-mode Handset →P161
- Using the User Certificate of the FirstPass Center →P161



## ■ UIM restrictions

Some melodies, still images, and i-motion movies may be restricted from use when a UIM other than the one used for obtaining these files is used in the handset.

If a different UIM is inserted or a UIM is not inserted, obtained files cannot be played or displayed.

- The restrictions do not apply to still images or videos captured with the Camera or files transferred from a PC to the handset.
- Ringtones or Wallpaper settings assigned to handset functions will revert to defaults.

## ■ i-melody

You can download the latest melodies into the i-mode handset to use them as ringtones. →P155

## ■ i-animation

You can download your favorite animation to the i-mode handset and display it as Wallpaper or Picture ID. →P155

## ■ Flash®

Flash is an animation technology using images and sounds. With Flash movies, you can use various kinds of animations and enhanced sites.

You can also download images of Flash movies to the i-mode handset and use them as Wallpaper. Some Flash movies can browse the handset data including:

- Battery level, Signal strength, Date and Time, Ring Volume, Language, and Handset model information.

### ■ Message service

The Message Service delivers required information (messages) automatically to your i-mode handset. There are 2 types of Message Service: Message R (Message Request) and Message F (Message Free).

<b>Message R (Request)</b>	Subscribe to sites that provide Message Service to have information automatically delivered to your handset.
<b>Message F (Free)</b>	Messages are delivered without charges for packet communication.

- Receiving messages via the Message Service →P159
- The default setting for Message F (Free) is "Receive" if you subscribed to i-mode at the same time as you newly registered the FOMA handset on October 1, 2004 or later. You need to change the setting to "Not Receive" to stop receiving Messages F.
  - If the above case does not fit to you, you need to set the option to receive before receiving Messages F. The option is set to "Not Receive" as default.
- Messages R/F are stored at the i-mode center while your handset is turned off or out of the service area.
- Messages R/F are stored at the i-mode center as follows: If there are too many messages or messages that are held too long, the oldest messages will be overwritten first.

Message Type	Maximum Messages to be Stored	Maximum Storing Duration
Message R	300	72 hours
Message F	300	72 hours

- You can download Messages R/F from the i-mode center using "Check new message". →P159

### ■ News delivery service

DoCoMo distributes information such as news and weather forecasts to i-mode handsets using the Message R (Request) function. The News Delivery Service is a fee-based service requiring a separate subscription. After your new subscription has been processed, this service is automatically saved to MyMenu, enabling you to access the same information from MyMenu.

- Message R Screen Components →P160

### ■ i-mode password

The i-mode password is required to save/cancel MyMenu items, to subscribe to i-mode fee-based sites, or to configure i-mode mail settings. The password is set to "0000" by default. Change it to a 4-digit number of your own choice.

Do not reveal your i-mode password to others.

- Changing the i-mode password →P151

## Internet

### You can access Web sites that support i-mode by entering the Internet Web site address (URL).

- Viewing Web sites →P150
- Web sites that do not support i-mode may not be displayed correctly. Web sites that support i-mode are sites created using tags designed for i-mode.
- Web sites may appear differently from the way they appear on a PC.
- It may not be possible to open a Web site that has a URL of more than 256 half-pitch characters.

### ■ Before using i-mode

- Contents of sites (programs) and Web sites are generally protected by copyright law. Data, such as text and images you download to the i-mode handset from sites or Web sites, can be used for personal entertainment but cannot be used, in whole or in part, as is or after modification, for sale or redistribution, without the consent of the copyright holders.
- The contents saved on the i-mode handset (mail, Message R/F, Screen Memos, i-appli, and i-motion movies) and saved Bookmarks, etc. may be lost due to handset failure, repair or other mishandling. It is recommended that you make a copy of important data and keep it in a separate place. DoCoMo is not responsible for lost data.
- When an i-mode handset is repaired or replaced, DoCoMo does not restore all information downloaded via i-mode, i-appli or i-motion due to copyright law protections. If you insert another UIM or turn the handset power on without the UIM, depending on the model of the handset, still images, videos, melodies, Email attachments (still images, videos or melodies), screen memos or Messages R/F cannot be viewed or played.
- When the data with UIM restrictions is set as Wallpaper or a ringtone, the setting will revert to its default if a different UIM is inserted or the handset power is turned on without a UIM. Inserting the UIM used when the data was originally downloaded, will restore the settings.

## i-mode Menu

### Displaying the i-mode Menu

You can use i-mode functions from the i-mode Menu.



## 2 Select from the following items

### iMenu

Connects to the i-mode center. →P148

### Bookmark

Press [Enter] [Cancel] to cancel visiting a site while downloading a page. →P151

### Go to location

Enter a URL to connect to the Internet. →P150

### Screen Memo

Open the Screen Memo folder list. →P153

### Last URL

Opens the last accessed i-mode site or Web site. →P150

### MessageR

Opens a list of Message R. →P160

### MessageF

Opens a list of Message F. →P160

### Check new message

Checks whether i-mode mail or MessagesR/F are stored at the i-mode center. →P159

### i-mode setting

Configure the handset function regarding i-mode. →P157

### SWAP

Access another application from the i-mode menu. →P226

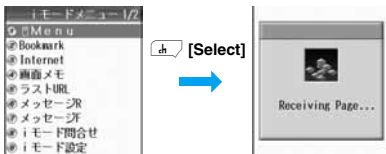 
## Accessing Sites

You can use a variety of services offered by information providers (IP).

- Services vary depending on the information provider. Some sites require a separate subscription.

### 1 i-mode menu screen (P147) ▶ "iMenu"

- \$\*\$ flashes during i-mode communication.
- Press [Enter] [Cancel] to cancel visiting a site while downloading a page.



## 2 Select an item (linked page) ▶ ●

- [Enter] [Return]: Returns to the previous screen.
- [End Call]: Terminates i-mode.

### Note

- When a number appears in front of a linked item, press the corresponding dial number to visit the site. However, some sites may not be connected. (Checking the specifications)

### Function Menu on the Site Display Screen

1 On the open page ▶ [Function] ▶ Perform the following operations

### iMenu

Opens iMenu.

### Register bookmark

Save the URL of the open page as a Bookmark. Go to Step 2 in "Saving Bookmarks" (P151).

### Bookmark list

Opens the Bookmark folder list. →P152

### Screen memo

Save the displayed page to the Screen Memo. Go to Step 2 in "Saving Screen Memos" (P153).

### Save image

Save images contained in the displayed page. Go to Step 3 in "Saving Images from a Site or Message" (P155).

### Go to location

Enter a URL or select one from the Bookmark Log to access a Web site. →P150

### View/Copy URL

Displays the URL of the open page.

- [Enter] [OK]: Returns to the i-mode menu screen.
- [Enter] [Copy]: Copies the URL. Up to 256 half-pitch characters can be copied.

### Compose message

Creates i-mode mail with the URL of the open page pasted in the message text. (Checking the specifications) Go to Step 3 in "Creating and Sending i-mode Mail" (P172).

### Compose SMS

Creates SMS (short message) with the URL of the open page pasted in the message text. Go to Step 2 in "Creating and Sending SMS" (P187).

### Save in Phonebook

Save the phone number or mail address highlighted on the open page to a Contact. Go to Step 2 in "Saving in Phone Contacts" (P94).

### Image display

Set whether to display images contained on the open page.

▶ "Display"/"Not display"

### Reload

If the open page is updated, the contents of site are updated.

### View certificate

If the opened page supports SSL, the contents of the SSL Certificate is displayed.

## Retry

Play an animation or a Flash movie contained in the displayed page from the beginning.

## Sound effect

Set whether to play sound effects for a Flash movie. →P158

## Convert char. code

If characters do not display correctly, try changing to another character encoding. (Checking the specifications)

## SWAP

Starts another function. (Checking the specifications)

### Note

#### Image display

- When this option is set to "Display", images contained on the page are displayed, however, the setting will not be retained. If you wish to view images on every page, set "Image Display" on the i-mode menu screen (P147)
  - ▶ "i-mode setting" ▶ "Image display".

#### ■ To acquire an SSL page

The following screen opens when you access an SSL site. After acquisition is completed, the SSL page opens and \$★\$ is displayed.

#### ■ To return to a normal site

The SSL communication complete conformation screen opens when you return to a non-SSL site. Select "Yes" to return to a normal site, and \$★\$ disappears.

Screen to be inserted

SSL establishing screen

### Note

- If the SSL Certificate has already expired, or a site does not support SSL, a message "This site is not certified. Do you connect?" may appear. If you select "Yes (Checking the specifications)", the page opens. However, your personal information (credit card number or contact address) may not be sent safely.

## Changing to iMenu in English

The iMenu can be displayed in English.

### i-mode menu ▶ iMenu ▶ English

iMenu is English will be displayed.

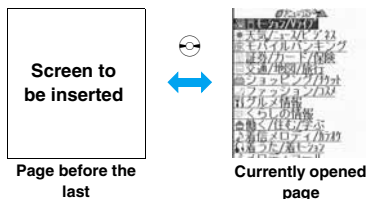 
- To change back to the Japanese display, select "日本語 (Japanese)" and press [Select]. (Checking the specifications)

## Navigating and Performing Operations on Web Sites

This section describes basic operations on Web sites.

### Going Back to the Previous Page/ Going to the Next Page

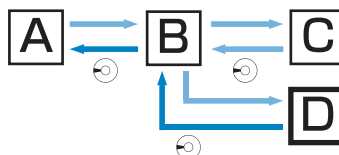 
- Press to open the previous page / press to open the next page



#### ■ Moving through pages

Pressing consecutively goes back to pages previously opened. However, if you open the previous page by pressing (going back to Page "B" from Page "C") and open another page (Page "D"), pressing twice on the current page (Page "D") does not open Page "C". Pages open in order of Page "D" → Page "B" → Page "A".

- Example: Pages are displayed in the order of Screen "A" → "B" → "C" → "B" → "D"

 



- ...The order of the page to open
- ...The order when the previous page from the display "D" has been opened

## Selecting Links or Items

You may need to perform operations using the following items while connected to i-mode. For details, refer to the "i-mode Operation Guide".

Item	Sample Icon	Description
Radio button	\$★\$: (Not selected)	You can select only one choice.
	\$★\$: (Selected)	

Item	Sample Icon	Description
Check box	\$★\$: (Not selected)	You can select more than one choice.
	\$★\$: (Selected)	
Text box	\$★\$	Enter text. Select a text box and press  to open the text entry screen. (Checking the specifications)
Pull down menu	\$★\$	Select an item from a list of choices. Select a pull down menu item and press  to open the list of choices. (Checking the specifications)

## Flash Movies

The FOMA handset supports Flash, an animation technology using images and sounds. You can access sites that provide various kind of animations using the handset. You can also download a Flash movie and set it as Wallpaper.

### Note

 
- Some Flash movies can use data saved on your handset. To allow Flash movies to use the data, set "Use registrated data" to "Use".
- Some Flash movies play sound effects. To not sound, set "Sound effect" to "Not play".
- If you play a Flash movie with vibration set, the handset vibrates regardless of the "Vibrate" setting on the handset.
- Flash movies are not displayed if "Image display" is set to "Not display".
- The sound effects of the Flash movie set as Wallpaper do not sound.
- You may not be able to save an entire image even if you perform a save operation or save as Screen Memo depending on the Flash movie.

### Last URL

## Open the Most Recently Accessed Web Site

Each time you open a Web site, the URL of the page is stored in "Last URL". You can re-connect to the most recently accessed page using "Last URL".

### 1 i-mode menu screen (P147) ▶ "Last URL"

-  [Function]: "Copy"/"Delete" the Last URL.

### 2

## Internet Connection

### Opening Web Site

You can access a Web site by entering its URL. A URL consists of half-pitch alphanumeric characters and symbols.

- On the open page, select  [Function] ▶ "Go to location", then go to Step 2.

### 1 i-mode menu screen (P147) ▶ "Go to location"

The Web site opens.

### 2 "<New entry>" ▶ Enter a URL ▶


- Up to 256 half-pitch characters can be entered.

### Note

- Web sites that do not support i-mode may not be displayed correctly.
- Some Web sites may not be displayed correctly.

## Accessing a Web Site Using the Bookmark Log

Up to 8 previously entered URLs are stored in the Bookmark Log (Checking the specifications). You can access a Web site by using Bookmark Log.

- To use the Bookmark Log to access a Web site, select  [Function] ▶ "Go to location", then go to Step 2.

### 1 i-mode menu screen (P147) ▶ "Go to location"

The Web site opens.

### 2 Select a URL ▶

### Note

 

- If more than 8 URLs are entered, the oldest URLs will be overwritten. (Checking the specifications)
- A directly entered URL is recorded as another URL even if the same URL has already been recorded. (Checking the specifications)

## The Function Menu on the Internet Screen

### 1 Internet screen (P150) ▶ Select a Bookmark Log entry ▶ [Function] ▶ Perform the following operations

## View/Copy URL

Connect to the selected URL.

-  [Connect]: Connects to the Displayed URL.
-  [Copy]: Copies a URL. Up to 256 half-pitch characters can be copied.

## Register bookmark

Save the URL as a Bookmark. Go to Step 2 in "Saving Bookmarks" (P151).

 
 
## Save in Phonebook

Save the selected URL in a Contact. Go to Step 2 in "Saving Contacts to the Phonebook from Received Calls or Dialed Calls" (P94).

## Delete

▶ Select from the following items ▶ ★★\$

 
**Delete** : Deletes the selected URL. Select ★★\$ [Yes].

**Delete multiple** : Select and delete more than one URL. Select a URL ▶  ▶  [Execute] ▶ Select ★★\$ [Yes].

**Delete all** : Deletes all saved URLs. Enter the Security Code ▶ Select ★★\$ [Yes].

## Note

### Delete multiple



- Press  [Detail] on the Delete selected screen to view the URL to delete.

## MyMenu

# Saving Entries in MyMenu

Frequently accessed sites can be saved in MyMenu for quick connection.

- Up to 45 entries can be saved in MyMenu.
- Some sites cannot be saved in MyMenu.
- Save Web sites in Bookmarks. →P151

- 1 Visit the site ▶ "MyMenu"
- 2 Select the i-mode password ▶  ▶ Enter the i-mode password ▶  ▶ "Confirm"

- The entered i-mode password is masked by asterisks "\*\*\*\*".
- i-mode Password →P147

## Note

- When you subscribe to a fee-based site on the menu list, the site is automatically saved in MyMenu.



## Accessing a Site from MyMenu

- 1 i-mode menu screen (P147) ▶ "MyMenu" ▶  ▶ Select a site

## Change i-mode Password

# Changing i-mode Password

"i-mode Password" (4-digit) is required to subscribe to and unsubscribe from Message Services or fee-based i-mode sites, or configure Email settings. The password is set to "0000" by default. Change it to a number of your own choice. Do not reveal your i-mode password to others.

- 1 i-mode menu screen (P147) ▶ "iMenu" ▶ "English" ▶ "Function" ▶ "Change i-mode Password"
- 2 Select the "Current Password" box ▶  ▶ Enter the i-mode password (4-digit)
- 3 Select the "New Password" box ▶  ▶ Enter the new i-mode password (4-digit)
- 4 "Select"

## Note

- If you forget the i-mode password, you need to bring an ID such as your driver's license to a DoCoMo shop to have the i-mode password reset to "0000".

## Bookmarks

# Saving Web Site Addresses or Sites for Quick Access

Save frequently accessed sites or Web sites in Bookmarks to display the page quickly.

- Saved Bookmarks can be renamed or managed by sorting them into folders. →P152

## Saving Bookmarks

- Up to 100 page URLs can be saved in Bookmarks for all folders.
- Up to 256 half-pitch characters can be saved for each URL Bookmark.

 
- 1 On a page ▶  [Function] ▶ "Register bookmark"

  - If there are no user-defined folders, the page is saved in the "Main folder".

- 2 Select a folder ▶  [Select]

  - If there is already the same URL saved, a confirmation to overwrite appears. Select ★★\$ [Yes].

## Accessing Web Sites or Sites from Bookmarks

- On a page, select  [Function] ▶ "Bookmark list", then go to Step 2.

### 1 i-mode menu screen (P147) ▶ "Bookmark"



Bookmark folder list

### 2 Select a folder ▶



Bookmark list

### 3 Select a Bookmark to view ▶

#### The Function Menu on the Bookmark Folder List

### 1 Bookmark folder list (P152) ▶ [Function] ▶ Perform the following operations

#### Create folder

Creates a new folder. Up to 8 new folders can be created.

- ▶ Enter a folder name




#### Edit folder name

Edit the selected folder name.

- ▶ Edit a folder name

#### Sort folders

Reorder folders.

- ▶ Select a folder ▶  [Select] ▶ Select a destination folder ▶  [Define]
-  [Return]: Go back to the previous operation.

#### Delete folder

Deletes the selected folder.

- Enter the Security Code ▶ Select **\$\*\$** [Yes].

#### Bookmark log

Lists Bookmarks saved in the selected folders. (Checking the specifications)

#### Send all entries

Sends all Bookmarks saved in a folder via Infrared communication. Go to Step 2 in "Sending All Data" (P224).

## Note

#### Create folder

- A new folder with no name entered cannot be created.

#### Sort folders/Delete folder

 

- The pre-installed "Main folder" cannot be sorted or deleted.

## Function Menu on the Bookmark List

### 1 Bookmark list (P152) ▶ Select a Bookmark ▶ [Function] ▶ Perform the following operations

#### View/Copy URL

Connect to the selected URL.

-  [Connect]: Connect to the Displayed URL.
-  [Copy]: Copy the URL. Up to 256 half-pitch characters can be copied.

 




#### Edit title

Edit the name of the Bookmark title.

- ▶ Edit a Bookmark name

#### Move to folder

Move the selected Bookmark to another folder.

- Move** : Move the selected URL. Select a destination folder ▶ Press  [Select] ▶ **\$\*\$** [Yes].
- Move multiple** : Select and move more than one Bookmark. Select a bookmark ▶  ▶  [Execute] ▶ Select a destination folder ▶ Press  [Select].
- Move all** : Move all Bookmarks in the folder. Select a destination folder ▶ Press  [Select] ▶ **\$\*\$** [Yes].

#### Compose message

Create i-mode mail with the URL of the selected Bookmark in the message text. Go to Step 2 in "Creating and Sending i-mode Mail" (P172).

#### Save in Phonebook

Save the URL of the selected Bookmark with a Contact. Go to Step 2 in "Saving in Phone Contacts" (P94). (checking the specifications)



#### Send data

**Infrared** : Send 1 file using Infrared communication.

**Bluetooth** : Send via Bluetooth. Go to Step 2 in "Registering and Connecting a Bluetooth Device" (P239).

#### Delete

**Delete** : Delete the selected Bookmark. Press **\$\*\$** [Yes].

**Delete multiple** : Select and delete more than one Bookmark. Select Bookmarks ▶ Press  ▶  [Execute] ▶ **\$\*\$** [Yes].

**Delete all** : Delete all Bookmarks in the folder. Enter the Security Code ▶ Select **\$\*\$** [Yes].

## Note

### Delete multiple

- Press [Detail] on the Delete selected screen to view the URL of the Bookmark to delete.

## Screen Memo

# Saving the Contents of a Web Site

You can save an opened page as a Screen Memo. Saved Screen Memos can be opened without connecting to i-mode.

## Saving Screen Memos

- Up to 100 Screen Memos can be saved. However, the number of savable Screen Memos may be fewer if the pages are large.
- Up to about 1000 Kbytes per memo can be saved.

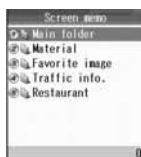 
**1** On a page [Function] ▶ "Screen memo"

**2** Select a folder [Select]

- If the maximum number of Screen Memos has already been saved, delete unnecessary data then save. Select a Screen Memo ▶ Press ▶ [Execute] ▶ [Yes].

## Viewing Screen Memos

**1** i-mode menu screen (P147) ▶ "Screen memo"



Screen Memo folder list

**2** Select a folder



Screen Memo List

**3** Select a Screen

Screen to be inserted

Screen Memo detail screen

## Note

- The information saved in Screen Memo is as of the time it was saved. The memo may not contain the latest information.
- If the saved page does not have a title, it is displayed as "No title" in the Screen Memo list.

## Function Menu on the Screen Memo Folder List

**1** Screen Memo folder list (P153) [Function] ▶ Perform the following operations

### Create folder

Create a new folder. Up to 8 new folders can be created.

▶ Enter a folder name

### Edit folder name

Edit the selected folder name.

▶ Edit a folder name

### Sort folders

Reorder folders.

▶ Select a folder [Select] ▶ Select a destination location [Define]

- [Return]: Go back to the previous operation.

### Delete folder

Delete a folder.

Enter the Security Code ▶ [Yes]

### Screen memo log

List Screen memos in the selected folder. (checking the specifications)

## Note

### Create folder

- A new folder with no name entered cannot be created.



## Function Menu on the Screen Memo List Screen

### Screen Memo list (P153) ▶ Select a Screen Memo ▶ [Function] ▶ Perform the following operations

#### Edit title

Edit the name of the Screen Memo.

▶ Edit a Screen Memo name

#### Protect/release

Protect or release the selected Screen memo.

**Release** : Release the selected Screen memo.

**Release all** : Release all Screen memos.

#### Move to folder

Move the selected Screen Memo to another folder.

**Move** : Move the selected Screen Memo. Select a destination folder ▶ Press [Function] [Select] ▶ \$★\$ [Yes].

**Move multiple** : Select and move more than one Screen Memo. Select a Screen Memo ▶ [Function] ▶ [Execute] ▶ Select a destination folder ▶ Press [Function] [Select].

**Delete all** : Move all Screen Memos in the folder. Select a destination folder ▶ Press [Function] [Select] ▶ \$★\$ [Yes].

#### Sort

Sort Screen Memos.

#### Svg date (new→O)

: Screen Memos are rearranged with newest ones at the top.

#### Svg date (old→n)

: Screen Memos are rearranged with the oldest one at the top.

**Title (asc.)** : Screen Memos are rearranged by title. (checking the specifications)

**Title (des.)** : Screen Memos are rearranged by title. (checking the specifications)

#### Prot/unprot order

: Screen Memos are rearranged by protected → unprotected. (Checking the specifications)

#### Unprot/prot order

: Screen Memos are rearranged by unprotected → protected. (Checking the specifications)

#### View/Copy URL

Display the URL of the Screen memo.

- [Function] [OK]: The Screen Memo list returns.
- [Function] [Copy]: Copy the URL. Up to 256 half-pitch characters can be copied.

#### File property

Display the title, stored date and time, size and URL of the Screen Memo.

#### Delete

**Delete** : Delete the selected Screen Memo. Press \$★\$ [Yes].

**Delete multiple** : Select and delete more than one Screen Memo. Select a Screen Memo ▶ Press [Function] [Execute] ▶ \$★\$ [Yes].

**Delete all** : Delete all Screen Memos in the folder. Enter the Security Code ▶ Press \$★\$ [Yes].

### Note

#### Protect/Release

- Up to 50 Screen Memos can be protected. The number of Screen Memos that can be protected may vary depending on the data.

#### Delete/Delete multiple/Delete all

- Protected Screen Memos cannot be deleted. Unprotect Screen Memo(s) before deleting them.

#### Delete Several

- Press [Function] [Detail] on the Delete selected screen to view the properties of the Screen memo.

## Function Menu on the Screen Memo Detail Screen

### Screen Memo detail screen (P153) ▶

### [Function] ▶ Perform the following operations

#### Edit title

Edit the name of the displayed Screen Memo.

▶ Edit a Screen Memo name

#### Protect/Release

Protect or release the displayed Screen memo.

#### File property

Display the title, stored date and time, size and URL of the Screen Memo.

#### Delete

Delete Screen Memos. Press \$★\$ [Yes].

#### Register bookmark

Save the URL of the Screen Memo in Bookmarks. Go to Step 2 "Saving Bookmark" (P151).

#### Bookmark list

Open the Bookmark list. →P152

#### Save image

Save images contained in the Screen Memo. Go to Step 3 in "Saving Images from a Site or Message" (P155).

#### View/Copy URL

Display the URL of the Screen memo.

- [Function] [OK]: The Screen Memo detail screen returns.
- [Function] [Copy]: Copy the URL. Up to 256 half-pitch characters can be copied.

## Compose message

Create i-mode mail with an Email address on the Screen Memo as the destination. Go to Step 2 in "Creating and Sending i-mode Mail" (P172).

## Save in Phonebook

Save a mail address in the Screen Memo to the Phonebook. Go to Step 2 in "Saving Contacts to the Phonebook from Received Calls or Dialed Calls" (P94).

## View certificate

Display the SSL Certificate of the Screen Memo.

## Retry

Play an animation or a Flash movie contained in the Screen Memo from the beginning.

## Sound effect

Set whether to play sound effects of the Flash movie contained in the Screen Memo. →P158

## Convert char. code

If characters do not display correctly, try changing to another character encoding.

### Note

#### Protect/Release

- Up to 50 Screen Memos can be protected. The number of Screen Memos that can be protected may vary depending on the data.

#### Delete

- Protected Screen Memos cannot be deleted. Release Screen Memo(s) before deleting.

## Save Image

# Saving Images from a Site or Message

**You can save images contained in the site, Messages R/F or Screen Memo to the handset.**

- Images will be saved in "i-mode/Other" folder in "My Pictures" of the "Databox". (checking the specifications)
- While the Screen memo detail screen (P153) or Messages R/F detail screen (P160) is open, select an image and go to Step 2.

**1** While accessing a site/displaying mail, message image ▶  [Function] ▶ Save image

**2**  [Save] ▶ \$★\$ [Yes]

### Note

- Images cannot be saved if "Image display" is set to "Not display".
- Some images saved on the handset may not be displayed even if they can be displayed at the site.

## Notice

The stored content may be lost due to the handset failure or repair. DoCoMo is not responsible for lost data. It is recommended that you keep saved content from the handset on a microSD memory card. You can connect the handset to a PC using data link software and a FOMA USB cable (optional) and save the data to the PC.

## Melody

# Downloading Melodies from a Site

- Melodies will be saved in "i-mode/Other" folder in "Melody" of the "Databox". (checking the specifications)

**1** While accessing a site ▶ Select a melody



Screen to be inserted

Downloading Data screen

**2** Perform the following operations

### Play

Play a melody.  
Operations during melody playback →P214

### Save

Save a melody. Press \$★\$ [Yes].

### Setup

Configure the melody after saving it. (Checking the specifications)

### File Details

Display information about the melody.

### Return

Return to the previous screen. (Checking the specifications)

### Note

- Download may not possible depending on the site.
- Some downloaded melodies may not play correctly.
- Some downloaded melodies may have a section to be played already specified. These melodies will be played in their entirety under playback, however, as a melody set for a Ringer ID only the specified part is played.

**Notice**

The stored content may be lost due to the handset failure or repair. DoCoMo is not responsible for lost data. It is recommended that you keep saved content from the handset on a microSD memory card. You can connect the handset to a PC using data link software and a FOMA USB cable (optional) and save the data to the PC.

**Download Templates**

## Downloading Templates from a Site (checking the specifications)

- Templates will be saved in "i-mode/Other" folder in "My Pictures" of the "Databox". (Checking the specifications)

### 1 While accessing a site ▶ Select a template ▶

Screen to be inserted

Downloading data screen

### 2 Perform the following operations

**Play**

Play a melody.

Operations during melody playback

**Save**

Save a melody. Press \$★\$ [Yes].

**Setup**

Configure the melody after saving it. (Checking the specifications)

**File Details**

Display information about the melody.

**Return**

Return to the previous screen. (Checking the specifications)

**Download Dictionaries**

## Downloading Dictionaries from a Site (checking the specifications)

- Up to 10 dictionaries can be saved. However, only 5 can be used, concurrently.

### 1 While accessing a site ▶ Select a dictionary ▶

Screen to be inserted

Downloading Data screen

### 2 Perform the following operations

**Play**

Display the dictionary data.

**Save**

Save the dictionary data. Press \$★\$ [Yes].

**Setup**

Configure the dictionary data after saving it. (Checking the specifications)

**File Details**

Display information about the dictionary data.

**Return**

Return to the previous screen. (Checking the specifications)

**Download Chara-den**

## Downloading Chara-den from a Site (checking the specifications)

### 1 While accessing a site ▶ Select a Chara-den ▶

Screen to be inserted

Downloading Data screen

### 2 Perform the following operations

**Play**

Play Chara-den.

**Save**

Save Chara-den. Press \$★\$ [Yes].

**Apply as Camera Off image**

Set the Chara-den as the alternate image for video calls after saving it.

**File Details**

Display information about the Chara-den.