

## Return

Return to the previous screen. (Checking the specifications)

### Phone To/Mail To/Web To/i-appli To Function

## Using Phone To/Mail To/ Web To/i-appli To Functions

If a site page or mail has a highlighted phone number, Email address, URL, you can use these to open a Web site, to make a call, or send Email with a simple operation.

- Phone To, AV Phone To, Mail To, or Web To in mail sent from a PC may not work.

### Phone To/AV Phone To Function

- The Phone To function for video calls is called the AV Phone To function.

#### 1 Select a phone number ▶

Screen to be inserted

Calling Method Selection screen

#### 2 "Voice Call"/"Video Call"/"Chara-den image" ▶

- When selecting "Chara-den image", select an image to be sent to the other party during the video call.

### Mail To Function

You can send mail to an Email address highlighted on a site page or mail.

#### 1 Select an Email address ▶

- Go to Step 3 in "Creating and sending i-mode Mail" (P172).

### Web To Function

Access a URL highlighted on a site page or mail.

#### 1 Select a URL ▶

### i-appli To function

You can start i-appli from a URL highlighted on a site or in i-mode mail.

#### 1 Select i-appli information ▶ (Checking the specifications)

## Note

### Phone to/AV Phone to Function

- The Phone to/AV Phone to function may not be available depending on the site.
- The Phone to/AV Phone to function can be used when the sender or destination of mail is a phone number.
- The Phone to function may be available using an item with a phone number saved even if the number is other than the numeric string that expresses a phone number.

### Mail to Function

- The Mail to function may not be available depending on the site.
- Correct the Email address before sending Email if necessary.
- The Mail to function may be available using a highlighted item other than an Email address.

### Web To Function

- The Web to function may not be available depending on the site.
- Display of a URL varies depending on a site.
- The Web to function is available using a highlighted item other than a URL.

### i-mode Setting

 
## Configuring i-mode Settings

Default

Font size: Standard  
 Scroll: 1 line  
 Image display: Display  
 Use registered data: Use  
 Sound effect: Play

Set i-mode or Message R/F function.

#### 1 i-mode menu screen (P147) ▶ "i-mode setting"

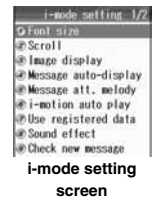

#### 2 Perform the following operations

##### Font size

Set the font size in the message text on a site, Screen Memo or Messages R/F.

▶ "i-mode"/"Message" ▶ "Large"/"Standard"/"Small"

##### Scroll

• Set the number of lines when scrolling in the message text on a site, Screen Memo or Messages R/F.

▶ "1 line" / "3 line" / "5 line" / "1/2 page" / "1 page"

Continued on the next page ●●●

### Image display

Set whether to display images or Flash movies contained on the site page or Screen Memo.

▶ "Display"/"Not display"

### Message auto-display

Set to automatically display Messages R/F. →P159

### Message att. melody

Set whether automatically play a melody when Messages R/F are opened. →P159

### i-motion auto play

Set whether to automatically play an i-motion movie when the i-motion movie is downloaded from a site or Email. →P164

### Use registered data

When a Flash movie is displayed while a site or Screen Memo is displayed, information saved on the handset may be used. Set this option whether to use the information on the phone is used.

▶ "Use"/"Not use"

### Sound effect

Set whether to use sound effects when a Flash movie is played while a site or Screen Memo is displayed.

▶ "Play"/"Not play"

### Check new message

Select items to check (Email and/or Messages R/F) when checking new message at the i-mode center. →P184

### Connection timeout

Set the time until the connection is automatically terminated if no response was returned due to network traffic. →P158

### Host setting

Set an APN (Access Point Name) when you use services other than i-mode (DoCoMo). i-mode becomes unavailable when you connect to an APN other than DoCoMo. →P158

### Certificate Center host

Set the address to download a User Certificate. →P162

### Certificate

View the content of the SSL Certificate or set valid or invalid. →P161

### Client certificate

Perform steps from applying for the issuance of User Certificate to downloading it. →P161

### Check i-mode setting

View the i-mode setting configuration.

### Reset i-mode

Restore all settings to their defaults.

▶ Enter the Security Code

## Note

#### Image display

- Images may not be displayed correctly even this option is set to "Display". In that case, \$★\$ appears.

#### Use registered data

- When this option is set to "Use", the battery level, signal strength, Date & Time, Ring Volume, Language, and handset model information may be sent to information providers (IP) via the Internet, and a third party may intercept the information.

#### Sound effect

- Even if "Play" is set, Sound Effects may not be used depending on the Flash movie.

#### Reset i-mode

- The access point set in "Host setting" will not be changed by resetting.

### Connection timeout

## Setting the Connection Timeout

Default	60 seconds
---------	------------

Set the time until the connection is automatically terminated if no response was returned due to network traffic.

1 i-mode setting screen (P157) ▶  
"Connection timeout"

2 "60 seconds" / "90 seconds" / "Unlimited (no setting)"

- If "Unlimited use(no setting)" is selected, the connection will not be automatically cancelled.

## Note

- Even if this option is set to "Unlimited use(no setting)", the connection attempt may be terminated because of the signal strength.
- "Connection timeout" cannot be set during i-mode communication.

### Host setting

## Changing the Access Point from i-mode

Default	i-mode
---------	--------

If you use the i-mode service of DoCoMo, do not change the access point.

Set an APN (Access Point Name) when you use services other than i-mode (DoCoMo). i-mode and i-mode mail become unavailable when you connect to an APN other than DoCoMo.

### Storing Access Points

1 i-mode setting screen (P157) ▶ "Host setting"

- 2** Select "<Unregistered>" ▶  [Edit] ▶ Enter the Security Code ▶ Select from the following items ▶  [Change]

#### Host name

Enter an access point name.

#### Host number

Enter the number of the access point.

#### Host address1

Enter the access point address.

#### Host address2


Enter the access point address2.

- 3**  [Complete]


### Changing/Deleting a Host

- 1** i-mode setting screen (P157) ▶ "Host setting"


**To delete an access point**

Select an access point to delete ▶ Press  [Delete] ▶ \$\*\$.

**To edit an access point**

Select an access point to change. Press .

#### Note

- "Host setting" cannot be set during i-mode communication.
- Pake-Hodai is not applied to packet communication with an APN other than "i-mode".
- When an access point is changed, the ticker of the i-Channel does not appear. When the information is updated or you download the latest information by pressing , the Ticker will be turned on automatically.

### Receiving Messages

## When Receiving Messages

When the handset is in the service area, Messages R and F are sent automatically from the i-mode center. When Messages R/F arrive, the display, ringtone or vibration notifies you of new messages.

- Up to XXX Messages R and F can be saved to the handset. However, the number of savable messages varies depending on the message size.

### Viewing New Messages

Among the arrived Messages R/F, the newest message is displayed automatically.

- When "Message auto-display" is set to "Not auto display", received Messages R/F are not displayed.

- You can change the message types to be displayed automatically or set priorities in "Message auto-display". →P159

## 1 When Messages R/F arrive, they are received automatically

- \$\*\$(Yellow) flashes for Message R and \$\*\$(Yellow) for Message F.
- After messages are received, the reception result of Messages R/F is displayed.
- If no operation is performed for about 15 seconds, the previous screen returns.

### Message auto-display

## Displaying Messages Automatically

Default	Message R Preferred
---------	---------------------

Set how to automatically display Messages R or Messages F.

- 1** i-mode setting screen (P157) ▶ "Message auto-display" ▶ Perform the following operations

**MessageR preferred** : When Message R and F are received at the same time, Message R are displayed automatically.

**MessagesR only** : Only Message R are automatically displayed.

**MessageF preferred** : When Message R and F are received at the same time, Message F are displayed automatically.

**MessageF only** : Only Message F are automatically displayed.

**Not auto display** : Messages are not displayed automatically.

## Playing a Melody When a Message is Opened

Default	Auto play
---------	-----------

Set whether to automatically play melodies when Messages R/F are opened.

- 1** i-mode setting screen (P157) ▶ "Message attached melody" ▶ "Auto play"/"Not auto play"

### Check new message

## Checking Whether Messages have Arrived

Messages that were not received because the handset was out of the service area are stored at the i-mode center. Checking new messages downloads the stored messages.

- You cannot check new messages when the handset is out of the service area.
- Set what to check (mail and Messages R/F) in "Check New Message Setting" (P184).

## 1 ▶ "Check new message"

The number of received i-mode mail and Messages R/F is displayed.

## 2 Select "MessageR"/"MessageF"


- The number of Messages R/F that can be saved at the i-mode center and how long they will be retained if not delivered. →P147

### Message R/Message F

## Displaying Messages in the Message Box

When Messages R/F arrive from the i-mode center, \$★\$ or \$★\$ appears at the top of the screen.

## 1 i-mode menu screen (P147) ▶ "Message R"/"MessageF"

-  [Sort]: Sort the message list by "Reception date (New to Old)"/"Reception date (Old to New)"/"Subject (ascending)"/"Subject (descending)".

Screen to be inserted

Message R List

## 2 Select a message ▶

Screen to be inserted

Message R Display screen

### ■ Screen components of the Message list / Display screen

The following icons appear on the Messages R/F screen.

Icons	Description
\$★\$/\$★\$	Unread Messages R/F
\$★\$/\$★\$	Read Messages R/F
\$★\$	Messages R/F with a file attached or pasted
\$★\$	Messages R/F with an image attached
\$★\$	Messages R/F with a melody pasted or attached
\$★\$	Protected Messages R/F

### Function Menu on the Messages R/F List Screen

## 1 Message R/F list screen (P160) ▶

### [Function] ▶ Perform the following operations

#### Protect/Release

Protect or release the selected MessageR/F.

**Release** : Release the selected Messages R/F.

**Release all** : Release all Messages R/F.

#### Search (usual)/Search (search state)

Set search key to find a message.

**Search Unread** : Search only for unread messages and open a list.

**Search Read** : Search only for read messages and open a list.

**Search Protected** : Search only for protected messages and open a list.



**Search Attached** : Search only for messages with attachments and open a list.

**Re-Search** : Search again.

**Release search** : Cancel search.

#### Delete

**Delete** : Delete the selected message.  
Press \$★\$ [Yes].

**Delete multiple** : Select and delete more than 1 message.  
Select messages ▶ Press   [Execute] ▶ \$★\$ [Yes].

#### Delete all/Delete all searched message items

Delete all messages on the message list, or delete all found messages using "Search". Enter the Security Code ▶ Press \$★\$ [Yes].

### Note


#### Protect

- Up to 75 messages can be locked.

#### Delete/Delete multiple/Delete All/Delete all searched message items

- Locked messages cannot be deleted.

#### Delete multiple

- Press  [Detail] on the Delete selected screen to view the message.

### Function Menu on the View Messages R/F Screen

## 1 View Messages R/F screen (P160) ▶

### [Function] ▶ Perform the following operations

#### Protect/Release

Protect or release the displayed Message R/F.

## Save image

Save images contained in the message. Go to Step 2 in "Saving Images from a Site or Message" (P155).

## Check attachment

List files attached to the message.

- [Save]: Save a selected file.

### ▶ [Function] ▶ Perform the following operations

**Set** : Save the selected file, then configure the file. (checking the specifications)

**File property** : Display the file information.

**Delete** : Delete the selected file.

## Reload image

Re-download a file that failed to be acquired.

## Save Phonebook

Save a highlighted mail address from the message to the Phonebook. Go to Step 2 in "Saving Contacts to the Phonebook from Received Calls or Dialed Calls" (P94).

## Delete

Delete the message. Press \$★\$ [Yes].

- Items displayed on the function menu vary depending on the displayed message.

## Note

### Protect

- Up to 75 messages can be locked.

### Check attachment

- Select an image or melody on the View attachment screen to display or play it.

### Reload image

- Images may not be displayed even after re-downloading.

### Delete

- Locked messages cannot be deleted.

## SSL Certificate

# Operating SSL Certificates

Default Validate All

View the content of the SSL Certificate or set valid or invalid.

## 1 i-mode setting screen (P157) ▶ "Certificate"



Certificate screen

## 2 Select a certificate to enable ▶ ●

- [Detail]: Check the selected certificate.

## 3 [Complete]

## Note

- If an SSL certificate is set to "Invalid", the associated SSL will no longer open.

## ■ Certificates used for SSL communication certificate

Issued by an authentication company and saved on the handset by default.

### DoCoMo Certificate

Required to connect to the FirstPass center or FirstPass sites and saved on the UIM (green).

### User Certificate

Downloaded from the FirstPass center by selecting "Client certificate" under "i-mode setting" in i-mode Menu. Saved in the UIM (green).

## User Certificate Operation

# Configuring FirstPass Settings

 
The user certificate proves that you have subscribed the FOMA service. The downloaded User Certificate is saved on the UIM and is used at sites that require a Client Certificate.

## Connecting to the FirstPass Center

Perform steps from applying for the issuance of User Certificate to downloading it.

- You can request the FirstPass center to issue a User Certificate and then download the certificate.
- The UIM (blue) does not work.
- You need to set the date and time before connecting to the FirstPass Center. → P50
- Screens or steps at the FirstPass Center may be changed.

## 1 i-mode setting screen (P157) ▶ "Client Certificate"

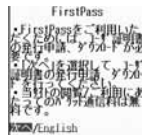

Client Certificate screen

## 2 (Checking the specifications)

 
## 3 (Checking the specifications)

Continued on the next page ●●

- **Before using FirstPass for the first time**  
(Checking the specifications)
- **To invalidate the certificate**  
(Checking the specifications)

- 4 (Checking the specifications)**
- 5 (Checking the specifications)**  
(Checking the specifications)

### Function Menu on the Client Certificate Screen

- 1 Client Certificate screen (P161)**  **[Function]** ▶ **Perform the following operations**

#### View certificate

Display the certificate obtained via SSL communication.

#### Convert char. code

If characters do not display correctly, try changing to another character encoding.

#### Note

- Packet communication charges do not apply for the connection to the FirstPass Center.
- Be sure to download the Client Certificate after requesting the issuance of new Client Certificate or Renewed Certificate. A Client Certificate you have not requested for issuance cannot be downloaded.
- After a Client Certificate is invalidated, the FirstPass site that requires the Client Certificate can no longer be accessed.

### Connect to Certificate Center Host


## Changing the Certificate Center Host

Default DoCoMo

**You usually do not need to change the settings.**

Set the address to download a Client Certificate.

- 1 i-mode setting screen (P157)** ▶ **"Certificate Center host"**

-  [Delete]: Delete the selected center host address. The security code entry is required to delete.

- 2 Perform the following operations**

#### DoCoMo

Set DoCoMo as the access point.

#### Unregistered

Save a new center, or edit a configured center.

▶   [Edit] ▶ **Enter the Security Code**

**Center name** : Enter a Center name.

**Center address** : Enter the Center address.

- 3**  **[Complete]**

#### ■ Using FirstPass

- FirstPass is DoCoMo's electronic authentication service. By using FirstPass, client authentication is enabled, whereby the site and the FOMA handset exchange certificates, check the other party's certificate and perform mutual authentication.
- When requesting issuance of a User Certificate, carefully read "the FirstPass Rules on Use" on the screen, agree to this, and make the request.
- UIM PIN2 is required to use the User Certificate. Once the UIM PIN2 is entered, all subsequent operations will be deemed to be complete by you. Be careful not to let others use your UIM PIN or UIM PIN2.
- If the UIM is lost or stolen, the "DoCoMo Information Center" on the back of this manual can revoke your User Certificate.
- DoCoMo bears no obligation or responsibility regarding to the sites and information provided by FirstPass sites. Solve any problems you may have directly with the FirstPass site.
- DoCoMo and authentication companies do not guarantee security when you use FirstPass and SLL. You should use them at your own discretion.
- FirstPass can be used over the Internet using the handset or the handset connected with a PC. You need to install the FirstPass PC Software from the included CD-ROM on the PC.

## i-motion

**i-motion is composed of video and sound files or music files. You can obtain them for use on the FOMA handset from i-motion compatible sites. You can set an i-motion as a ringer ID. → P107**

i-motion Types

There are 2 types of i-motion movies. This FOMA handset handles only the standard type i-motion movie. However, streaming type i-motion movies cannot be downloaded.

**Standard**

Up to 500 Kbytes of i-motion can be saved on the handset.

- There are 2 forms standard type.
  - ① Playback is possible after downloading
  - ② Playback is possible while downloading
- \*: Some standard type i-motion movies cannot be saved.

**Streaming type (this FOMA handset does not support this type.)**

This type of i-motion movie cannot be saved on the handset. Play back while downloading an i-motion movie. Up to 2 Mbytes of i-motion can be played. The data is deleted after playback. The data will be downloaded for each playback.

**Note**

- i-motion movies that can be downloaded and played are in MP4 (Mobile MP4) format. i-motion movies in ASF format cannot be downloaded or played.

 
Download i-motion movies

**Downloading i-motion Movies from Sites**

**1 While a site is displayed ▶ Select an i-motion movie ▶**

After the i-motion movie is downloaded, the i-motion movie player appears. When an i-motion movie has been obtained, the i-motion player is displayed.

- Operation during playback → P209
- If "i-motion auto play" is set to "Auto play", the i-motion movie is automatically played back after downloaded.

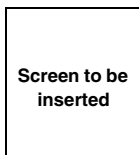

Screen to be inserted

i-motion Movie Player

**2**

Play the i-motion movie.

The Function Menu after an i-motion Movie Download Completes

**1 After an i-motion movie is downloaded ▶**  
 [Function] ▶ Perform the following operations

**Play**

Play the downloaded i-motion movie.

**Save**

Save the downloaded i-motion movie. Press  [Yes].

**Properties**

Display the title, file size and playback restrictions, etc. of the downloaded i-motion movie.

**Next Page** : Display the next page of the file information.

**Restrict File** : Set a file with "No File Restrictions" to "With File Restrictions".

**Exit**

Terminate the i-motion movie playback and save the data.

▶ After a message to end the i-motion movie player appears ▶  [Yes]

**Note**

- Depending on the connected site or i-motion movie, the i-motion movie may not be downloaded, or played during the download.
- Some i-motion movies have playback restrictions. If an i-motion movie has restrictions for the number of playbacks, playback period or playback expiration, \$★\$ is displayed. An i-motion movie with playback period restrictions cannot be played back prior to or after the restriction period.
- Some downloaded i-motion movies may not play correctly.
- If there is not enough free space on the handset, a confirmation to delete files appears.  [Yes] ▶ Select an i-motion movie ▶ Press  [Delete].

 
**Notice**

Stored content may be lost due to the handset failure or repair. DoCoMo is not responsible for lost data. It is recommended that you keep saved content from the handset on a microSD memory card. You can connect the handset to a PC using data link software and a FOMA USB cable (optional) and save the data to the PC.

**When a Link is Set in a Ticker**

When a ticker is set in an i-motion movie, the ticker is displayed during playback. You can use the PhoneTo, AV Phone To, Mail To or Web To function by selecting a phone number, mail address or URL in the ticker.

**1 Select a phone number, mail address or URL in the ticker**

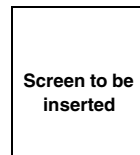

Screen to be inserted

Ticker display screen

2

A confirmation whether to end the i-motion movie player appears.

3  [Yes]

#### i Motion Auto Play

Setting Whether to Play an i-Motion Movie Automatically

Default

Auto play

Set whether to automatically play an i-motion movie when the i-motion movie is downloaded from a site or Email.

1 i-mode setting screen (P157) ▶  
"i-motion auto play " ▶ "Auto play"/"Not auto play"





# Mail

Mail Functions of FOMA Handset .....	168
What is i-mode Mail? .....	168
Displaying Mail Menu<Mail Menu>.....	172

## Creating i-mode Mail/Deco-Mail

Creating and Sending i-mode Mail<Creating/sending i-mode mail> .....	172
Creating and Sending Deco-mail<Deco-mail> .....	174
Creating Deco-mail Using Template<Template>.....	175
Attaching a File<File attachment> .....	175

## Receiving/Operating i-mode Mail

When i-mode Mail is Received<Automatic reception of mail> .....	176
Selecting and Receiving i-mode Mail<Receive option>.....	176
Checking for i-mode Mails<Check new message>.....	177
Replying to i-mode Mail<Replying i-mode Mail> .....	177
Forwarding i-mode Mail to Another Destination <Forwarding i-mode Mail> .....	177
Registering Mail Address to Phonebook.....	178
Replaying/Saving Melody from i-mode Mail<Save Melody> .....	178
Displaying/Saving Image of Image Mail<Receiving Image Mail> .....	178
Replaying/Saving i-motion from i-motion Mail.....	178

## Operating Mail Box

Displaying Mails in Outbox/Inbox/Unsentbox <Outbox/Inbox/Unsentbox> .....	178
--	-----

## Configuring Mail Settings

Setting FOMA Handset Mail Functions<Mail setting>.....	184
--	-----

## Using Chat Mail

Chat Mail .....	186
Creating and Sending Chat Mail<Creating/sending chatmail>.....	186

## Using SMS (Short Message)

Creating and Sending SMS (Short Message) <Creating/Sending SMS> .....	187
Automatically Receiving SMS (Short Message)<Receiving SMS>.....	188
Checking for SMS (Short Message)<Check New SMS> .....	189
Configuring SMS (Short Message) Settings<SMS Settings> .....	189

 
## Mail Functions of FOMA Handset

FOMA handset provides 2 mail functions: **i-mode mail and SMS.**

- Using i-mode mail requires i-mode subscription.
- Using SMS requires no i-mode subscription.


### Sending and Receiving Mail

#### FOMA handset → FOMA handset

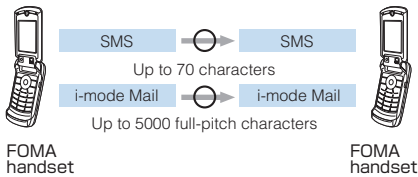

#### FOMA Handset → i-mode Service

 
**SMS sent from FOMA handset is received by mova service i-mode handset as i-mode mail.**

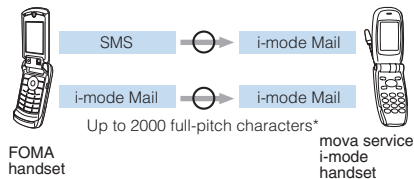

\*: If "Report request" is set to "ON", SMS cannot be sent to mova.

#### mova service i-mode handset → FOMA handset

 **Short mail\* sent from mova service i-mode handset can be received by FOMA handset as SMS.**

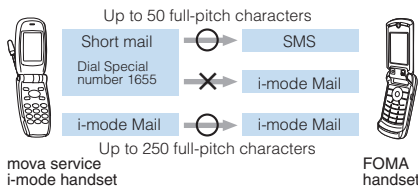

\*: Short mail is a service that allows to send and receive text messages between DoCoMo mobile phones.

## What is i-mode Mail?

Upon subscription to i-mode, you can send and receive messages via internet as well as between i-mode handsets (including mova handsets). The default mail address specified at i-mode subscription is as given below.

#### When you have newly subscribed to i-mode

 
A combination of random alphanumeric characters is succeeded by @. After subscription to i-mode, check your mail address.

Example: abc1234 ... 789xyz@docomo.ne.jp

#### Checking your mail address

iMenu" → "ENGLISH" → "Function" → "Mail Settings" → "Confirm Mail Address"

- Between i-mode handsets (including mova handsets), mails can be sent and received using only the address preceding @.
- When sending mails from PC, etc. to FOMA handset, use the whole address containing @docomo.ne.jp.

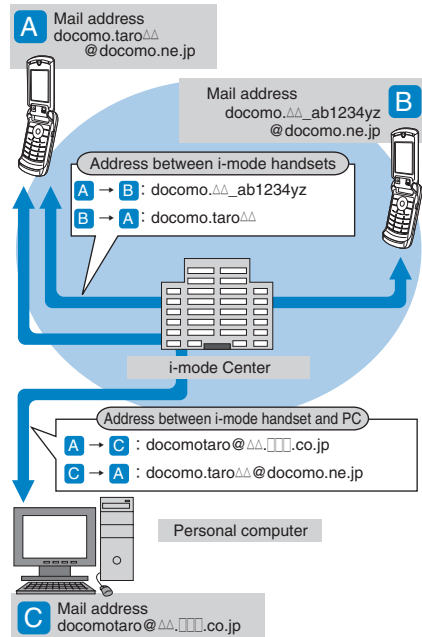

#### Receive option

You can check subjects of i-mode mails stored in i-mode Center and select ones to be received or deleted without reception from the i-mode Center. →P176

## Mail Setting

You can make various settings as described below.

### ■ Setting procedure

☰ → "iMenu" → "Function" → "Mail Settings"  
→ [Each Setting]

- For details, refer to "i-mode User's Manual".

### ■ Changing your mail address [Mail Address (Change Mail Address)]

You can change characters preceding mark @ in a mail address, e.g.,  
"docomo.△△\_ab1234yz@docomo.ne.jp".

### ■ Confirm Mail Address [Mail Address (Confirm Mail Address)]

You can confirm the current mail address.

### ■ Registering secret code [Mail Address (Other Settings) → Register a Secret Code]

When using a mail address of format "mobile phone number@docomo.ne.jp", you can register 4-digit secret code in addition to the mail address. Because mails with no secret code attached are not received, you can avoid receiving unnecessary i-mode messages.

### ■ Resetting mail address [Mail Address (Other Settings) → Reset Mail Address]

You can set your mail address to "mobile phone number@docomo.ne.jp".

### ■ Spam Mail Prevention

You can restrict reception of messages by setting mail reception/rejection in one of the procedures given below.

- ① Reject/Receive Mail Settings [Receiving Mail (Spam Mail Prevention) → Reject/Receive Mail Settings]
  - You can receive mails from one of carriers selected from au, Vodafone, DoCoMo, TU-KA and WILLCOM.
  - You can receive mails from the specified domain address of those sent from the carriers other than the above.  
(You can reject mail pretending to use a mobile phone or PHS domain from the Internet.)
- ② SMS Rejection Settings [Receiving Mail (Spam Mail Prevention) → SMS Rejection Settings]
  - You can restrict incoming SMS by selecting one from "Reject All SMS", "Reject Anonymous SMS", "Reject International SMS", and "Reject Anonymous and International SMS". You can also view the current settings.
- ③ Restricting reception of mails from mass i-mode mail senders [Receiving Mail (Other Settings) → Reject Mass i-mode Mail Senders]
  - You reject 201st and subsequent i-mode mails sent from one i-mode handset (including mova handset) a day. "Reject" is set by default, so you do not have to change the settings to reject messages sent from mass mail senders.
- ④ Reject Unsolicited Ad Mail [Receiving Mail (Other Settings) → Reject Unsolicited Ad Mail]
  - You reject reception of mails with "Reject Unsolicited Ad Mail" description added to a mail subject which are sent unilaterally for advertisement and/or promotion without agreement of the receiver.

"Reject" is set by default, so you do not have to change the settings to reject such messages. (Senders are obligated by law to give description Unsolicited Ad Mail (6 full-pitch characters) to the beginning of the mail subject field.

### ■ Limiting mail size [Receiving Mail (Limit Mail Size)]

You can limit i-mode mails to be received with the predetermined size.

### ■ Confirm Settings [Receiving Mail (Confirm Settings)]

You can check the current settings of mail reception/rejection and others.

### ■ Suspending mail function [Suspend Mail]

You can suspend the mail function in the i-mode Center when it is not necessary.

### ■ Number of characters that can be sent/received

The number of characters that can be sent/received in i-mode mail is as listed below.

Items	Full-pitch characters (kanji characters, hiragana characters, pictographs, etc.)	Hal-pitch characters (alphabetic characters, numerals, katakana characters, etc.)
Subject	15 characters	30 characters
Destination	—	50 characters
Text	5000 characters	10000 characters

\*: The number of characters that can be sent/received will be reduced when a file such as melody, image, i-motion is attached or the text is decorated.

### Note

- Up to 5000 full-pitch characters (10000 bytes) can be sent/received in i-mode mail text, but the number of characters that can be sent/received is reduced depending on the data size of an attached file.
- When i-mode mail text exceeds the number of characters that can be received, "n" or "/" is inserted in the end of the text and the excessive part is automatically deleted.
- When sending i-mode mail to a mova handset, the text can contain up to 2000 full-pitch characters. In addition, i-shot or i-motion mail is sent as a mail containing URL and other attachment files are deleted.
- When the number of characters in a subject exceeds the allowable limit for reception, excessive characters are deleted.
- Do not use half-pitch katakana or pictographs except in mails sent or received between i-mode handsets (including mova handsets). Such characters, if any, used for other terminals may not be displayed correctly on the receiver side.

### When i-mode Mail Cannot Be Received

**i-mode mail delivered to i-mode Center will be immediately sent to your i-mode handset. Note that, however, when your i-mode handset is turned off or out of the service area, the i-mode mail is stored in i-mode Center. i-mode mail stored in i-mode Center is sent up to 3 times with a predetermined interval. In addition, Receive Option can also be used to select and receive i-mode mail stored in i-mode Center.**

- The maximum number of i-mode mails and storage period in i-mode Center are as listed below.

	Maximum number of mails stored	Maximum storage period
i-mode mails	207 to 1000 mails	720 hours

- Expired i-mode mails are automatically deleted.
- The maximum number of stored mail varies depending on the i-mode mail data sizes. When the maximum number of stored mails is exceeded, \$★\$ appears on the i-mode handset. At this time, i-mode Center does not receive an i-mode mail and returns it to the sender with an error message. Note that with Receive Option "ON", \$★\$ does not appear even when the maximum number of stored mails is exceeded.
- You can receive i-mode mails stored in i-mode Center by "Check new message" or "Receive Option" settings. In addition, when a new i-mode mail is delivered, you can receive it together with other i-mode mails and Message R/F stored.
- When i-mode mail stored in i-mode Center is received, it is deleted from i-mode Center.
- i-mode message with an excessive size may not be accepted by i-mode Center.

### Other Convenient Functions

#### File attached mail

##### Melody attached mail

You can send/receive a melody file downloaded from a site or Web site through mail attachment. Note that, however, a melody file whose mail attachment or output from FOMA handset is prohibited cannot be sent.

Sending →P175 Receiving →P176

 
##### Image attached mail

You can send/receive a still image file downloaded from a site or Web site through i-mode mail attachment. Note that, however, a still image file whose mail attachment or output from FOMA handset is prohibited cannot be sent. Sending →P175 Receiving →P176

#### i-shot

You can send/receive a still image shot with a terminal with Camera function to/from i-mode handsets (including mova handsets), PCs or mobile phones of other carriers. It is sent to the receiver as a mail of attachment file format or that containing URL (or icon) for image viewing with an image storage period described. When URL is sent, the image can be acquired by selecting the URL.

A mail text sent to an i-mode handset of mova service can contain up to 184 full-pitch characters (369 bytes). When 2 or more files are attached, they are deleted and only the mail text is sent. Sending →P175 Receiving →P176

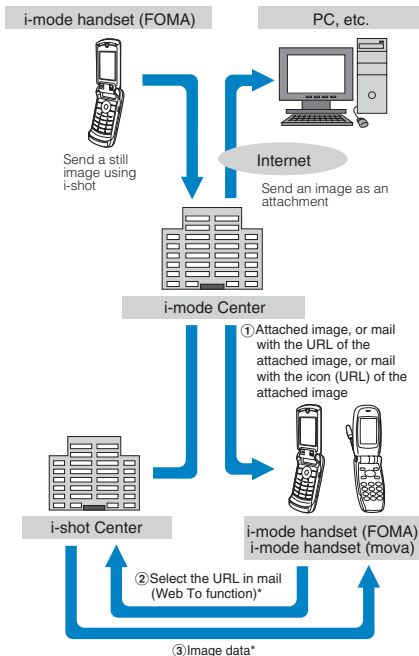

\*: When a mail containing URL of an attached image is received

- The image is stored in i-shot Center a maximum 10 days and automatically deleted after expiration.
- i-mode handset can send a still image of up to 500K bytes. When a message attached with an image exceeding 20K bytes is sent to an i-mode handset, it acquires an image with its size automatically reduced.

#### i-motion Mail

 
**You can send/receive videos shot with an i-motion mail compatible handset or those acquired from sites to/from i-motion mail compatible handsets, PCs or mobile phones of other carriers. Note that, however, a video file cannot be sent if its mail attachment or output from FOMA handset is prohibited cannot be**

sent.

### Sending →P172 Receiving →P178

#### ■ Service scheme

- A video file attached to i-motion mail is sent to and stored in i-motion mail Center. If it is for a PC, etc., it is directly sent as an attachment file. When it is received by an i-motion mail compatible handset, a video can be acquired by selecting URL indicated in the message text.
- When a video file attached to i-motion mail is sent to a handset incompatible with i-motion mail, it is received as a mail containing URL with i-motion converted to continuous still images. The receiver can acquire the continuous images by selecting the indicated URL.

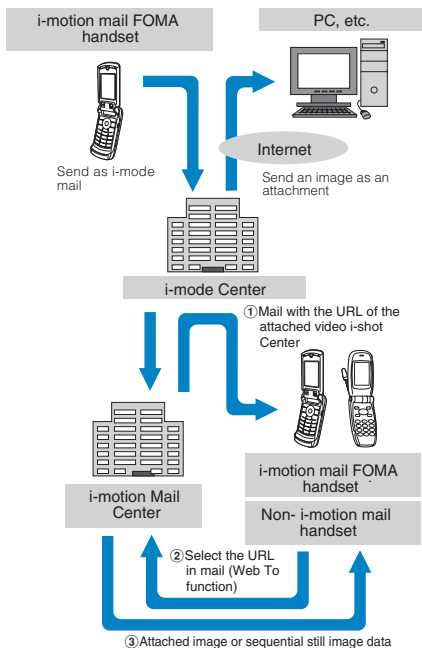

- Video is stored in i-motion mail Center for up to 10 days and automatically deleted after expiration.
- An i-motion compatible handset can receive video of a maximum 500K bytes. The size of the received video is automatically converted so that it matches the screen of the i-motion mail compatible handset.

#### ■ Deco-mail

You can create and send or receive enjoyable i-mode mail edited in a decorative manner such as changing the font size and/or background color or pasting an image in the text. Note that, a decorated mail received from a PC may not appear exactly in the same way as on the PC, because some decorations are not available on i-mode handsets. When a Deco-mail is sent to an incompatible handset, it is received as a mail containing URL. The receiver can view the Deco-mail by selecting the indicated URL. Editing/Sending →P174

- Applicable models: Available on Deco-mail compatible handsets. For details, refer to "i-mode User's Manual".

#### ■ Simultaneous mail sending

Same i-mode mail can be sent to multiple (up to 5) addresses at a time. →P173

- The communication fee is the same as that for sending one i-mode mail. Note that the communication fee will increase for the information size of added destinations.

#### ■ CC or BCC sending/receiving

Similarly to PC, TO, CC and/or BCC can be selected as destinations. Note that mail with no TO destinations cannot be sent. →P173

#### ■ Chat mail

Mail can be exchanged in a similar manners as chatting with multiple parties. →P186

- The communication fee for exchanging chat mail with multiple parties is the same as that for simultaneous mail sending.

#### ■ i-appli attached mail

You can activate i-appli from URL (link) pasted to received i-mode mail. →P157

### SMS (Short Message)

You can send/receive text messages using only the mobile phone numbers without subscription to i-mode.

### Sending →P187 Receiving →P188 Checking →P189

#### ■ SMS (Short Message) destination

SMS destination is "subscribed mobile phone number".

- For destinations used for sending/receiving SMS to/from overseas carriers other than DoCoMo, see DoCoMo's web site.

#### ■ Number of characters that can be sent/received

The number of characters that can be sent/received in SMS is as listed below.

Destination	21 characters (including "+")	
SMS text entry settings	Full-pitch character entry (70 characters)	Half-pitch alphanumeric entry (160 characters)

#### ■ When SMS (Short Message) cannot be received

SMS delivered to SMS Center will be immediately sent to your FOMA handset. Note that, however, when your FOMA handset is OFF or out of the service area, the SMS is stored in SMS Center.

#### Note

- The maximum storage period of SMS in SMS Center is 72 hours. The sender can specify the storage period. →P184
- SMS expired is automatically deleted.
- SMS stored in SMS Center can be received by SMS inquiry. →P189

- When SMS stored in SMS Center is received, it is deleted from SMS Center.

## Mail Menu

# Displaying Mail Menu

 Perform the following operations



Mail Menu screen

### Inbox

Display an Inbox list screen. →P178

### Outbox

Display an Outbox list screen. →P179

### Unsentbox

Display an Unsentbox list screen. →P179

### Compose message

Create a new i-mode mail. →P172

### Compose SMS message

Create new SMS (Short Message). →P187

### ChatMail

Display chat mail screen. →P186

- When you use chat mail for the first time, the member setup screen appears. →P186

### Deco-mail template

Display Decorated mail template screen. →P175

### Swap

Call up another function from mail menu. →P226

### Check new message

Receive i-mode mail stored in i-mode Center by i-mode check. →P177

### Check SMS

Receive SMS stored in SMS Center by SMS check. →P189

### Receive option

You can check subjects of i-mode mails stored in i-mode Center and select ones to be received or deleted without reception from the i-mode Center. →P176

### Message setting

Set the mail function. →P184

## Creating/sending i-mode mail

# Creating and Sending i-mode Mail

 
- To send with attached file → "Attaching a File" (P175)

## 1 Mail Menu screen (P172) ▶ "Compose message"



Compose message screen

## 2 Select the ★★\$ (Receiver) field ▶ ● ▶ Enter the receiver


- Enter up to 50 half-pitch characters.
- After the address is entered, a new ★★\$ (Receiver) field is added automatically allowing you to send more than 1 recipient.  
Up to 5 addresses can be entered.
- You can select and enter an address from the Phonebook or call logs. Press  [Function]. →P173

## 3 Select the ★★\$ (Subject) field ▶ ● ▶ Enter subject ▶ ●

 - Up to 15 full-pitch or 30 half-pitch characters can be entered.

## 4 Select the ★★\$ (Message) field ▶ ● ▶ Enter text ▶ ●

- Up to 5000 full-pitch or 10000 half-pitch characters can be entered.
- To decorate mail →P174

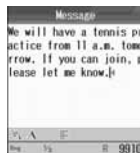

Message entry screen

## 5 [Send]

### Note


- Characters may not be sent correctly to the receiver depending on the signal wave conditions.
- Do not use half-pitch katakana and pictographs except for mail exchanged between i-mode handsets. These characters may not be displayed correctly.
- The secret code is added automatically when the mail whose address is set with the secret code is sent. However, the address of the sent mail does not display the secret code.
- If there is not enough free space, or if the maximum number of mail to be saved is exceeded, i-mode mail cannot be created. Delete unnecessary i-mode mail or SMS from folders in the Outbox. →P180
- Even if i-mode mail is sent successfully, an error message indicating the mail could not be sent may appear depending on signal conditions.



- If the number of sent mail saved on the FOMA handset exceeds the maximum allowed, the oldest sent mail will be overwritten first. (Checking the specifications). However, protected mail will not be overwritten.

## Function Menu on Compose message Screen

### Compose message screen (P172)

[Function]  Perform the following operations

#### Send

Send mail.

#### Save

Save mail being created or edited in Unsentbox. Press **\$★\$** [Yes].

#### Select Template

Read a template to create Deco-mail. Press  [Yes].

#### Change to To

The addresses of recipients. The mail addresses entered in the To fields will be shown to other recipients.

#### Change Cc

The addresses of carbon copy recipients. You can specify additional addresses to send a copy of the same mail to other recipients in addition to the direct recipients. The mail addresses entered in the Cc field will be shown to other recipients.

- The mail address may not be displayed depending on the recipient's handset, device or mail software.

#### Change to Bcc

The addresses of blind carbon copy recipients. You can specify addresses of people to receive copies but whose identity will not be shown to other recipients. The mail addresses entered in the Bcc field will not be shown to other recipients.

#### Delete Receiver

Delete a selected destination. Press **\$★\$** [Yes].

#### Quote Phonebook

Select a destination from a phone book.

#### Quote Received Address

Select a destination from received mail history.

#### Quote Sent Address

Select a destination from sent mail history.

#### Quote Sending Group

Select a destination from a sent group.

#### Quote Profile

Display a profile screen. A destination from the profile.

#### Enter the Security Code

#### Direct Input

Directly enter a destination.

## Note

### Save

- Mail which **\$★\$** (Receiver), **\$★\$** (Subject) or **\$★\$** (Message) is not entered or with no attachment cannot be saved.

## Function Menu on Message Entry Screen

### Message entry screen (P172)

"Message"   [Function] 

Perform the following operations

#### Decorate mail

Display a palette. →P174

#### Reset decoration

Cancel all of decoration.

#### Template

Use a template to create Deco-mail.

#### Copy

Select and copy characters in text. →P265

#### Cut

Select and cut characters in text. →P265

#### Paste

Paste copied or cut characters to text. →P265

#### Undo

Restore character entry, deletion, paste, decoration, etc. to the previous state.

#### Import

Quote characters from signature, phone book or local phone information (profile) and enter them to text.

**Signature** : Select and enter a signature.

**Phonebook** : Select mail address and/or phone number from phone book and enter them to text.

**Owner Information** : Select mail address and/or phone number from local phone information (profile) and enter them to text.

#### Common phrases

Select and enter a fixed phrase to text.

#### Entry Mode

Switch the entry mode. →P260

#### Entry Setup

Set conversion prediction function and character entry.

**Japanese Prediction** : Set "J Matching" and "J Next Word". →P263

**English setting** : Set the English entry mode, "E Matching" and "E Next Word". →P263

**Cursor timeout** : Set the automatic cursor function. →P263

**Pitch mode** : Switch between full-/half-pitch mode. →P263

**Default** : Change default character entry mode. →P263

## English functions

Set English character entry function. "Turn on"/"Turn off" (Checking the specifications)

### Preview

Display preview screen of text being edited.

- [OK]: Display text edit screen.
- [Save]: Save as Deco-mail template.

## Deco-mail

# Creating and Sending Deco-mail

 
You can create your own designer mail by adding decorations such as changing font size, font color or background color, or inserting images when you edit i-mode mail messages.

## 1 Perform Steps 1 to 3 in "Creating and Sending i-mode Mail" (P172)

## 2 Select the \$\*\$ (Message) field

[Function] "Decorate mail"

- Decorating operations → P174

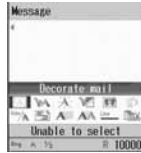

Palette display screen

## 3 [Close]

- To view set Deco-mail

[Function] Select "Preview"

- Cancel the set Decoration

[Function] Select "Reset decorate"

## 4 [Send]

### Note

 
- When Deco-mail is sent to or received from a handset other than Deco-mail compatible i-mode handsets, decorations may not be displayed correctly.

## Decorating Operations

Decorate characters using the palette.  
You can decorate entered characters or select decoration before entering characters.

### ■ Enter characters then decorate them

Select "tennis" from the message and decorate the word.

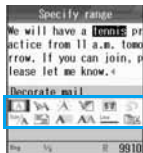

### ■ Select decoration then enter characters

Select decoration from the palette and apply it to characters to be entered after the cursor.

In the screen on the right, the characters to be entered after "a tennis" will be decorated.



## Palette

The following table describes operations for decorating mail using the palette:



Palette display screen

[Message]/ [Decorate]	Each press of the key toggles between message entry and mail decoration.
[Close]	Close the palette.

\*: "Unable to select" is displayed next to any decoration that cannot be set.

## 1 Select decoration

### \$\*\$ (Edit decoration)

Specify the range of text to decorate.

Move the cursor to the front of the character to be selected [Start]

- [Select All]: You can select all sentences.

Move the cursor to the back of the character to be selected [End]

- [Return]: Returns to the previous operation. (Checking the specifications)
- [Cancel]: You can cancel the selection. (Checking the specifications)

### \$\*\$ (Font color)

Set a color of characters.

Select color Enter characters

### \$\*\$ (Blink)

Make characters flashing.

Move the cursor to the starting point of flashing [Begin blink]

Enter characters [End blink]

### \$\*\$ (Background color)

Set a background color of mail text.

Select color

### \$\*\$ (Insert image)

Insert an image saved in "My Pictures" to mail text.

### \$\*\$ (Undo)

Restores a set decoration to previous setting.

### \$\*\$ (Font size)

Set a font size.

Select from "Large"/"Standard"/"Small"

### \$\$\$ (Word alignment)

Set a position to enter characters or insert an image.

- ▶ Select from "Left"/"Center"/"Right" ▶ ●

### \$\$\$ (Ticker)

Set a ticker to the text.

- ▶ Move the cursor to the starting point of the ticker ▶ ●

[Begin ticker]

- ▶ Enter characters ▶ ● [End ticker]

### \$\$\$ (Swing)

Set swing to text.

- ▶ Move the cursor to the starting point of the swing ▶ ●

[Begin swing]

- ▶ Enter characters ▶ ● [End swing]

### \$\$\$ (Insert line)

Insert a line in mail text.

### \$\$\$ (Copy/Cut/Paste)(Checking the specifications)

Select characters, images or lines and copy, cut or paste them.

#### ■ Select characters to be copied or cut

See "\$\*\$(Edit decoration)".

#### ■ Pasting characters

- ▶ Select copied/cut characters ▶ \$\$\$

- ▶ Select inserting position ▶ \$\$\$

### Note

#### Edit Decoration / Copy / Cut

- When characters with "Ticker" or "Swing" set are selected and "Copy" or "Cut" is carried out, the settings for "Ticker" or "Swing" are not affected.

### Template

## Creating Deco-mail Using Template

Templates are form data for Deco-mail with decorations such as the font size and image insertion already set. In addition to templates preinstalled, you can use those downloaded from sites.

- Templates preinstalled →P288

- 1 Message entry screen (P172) ▶ [Function] ▶ "Select template"

 
- 2 Select a template ▶ ●

The selected template is inserted in the message text.

## Creating/Editing a Template

Create original templates or edit saved templates.

- 1 The Mail Menu screen (P172) ▶ "Deco-mail template"

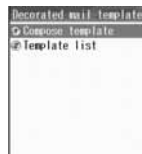

Decorated mail template screen

### Compose template

Create a new template.

- ▶ [Function] ▶ "Decorate"
- Basic decorating operations →P174

### Template list

Edit templates saved in the "Databox".

- ▶ Select decoration ▶ ● ▶ (Checking the specifications)

### File attachment

## Attaching a File

You can send i-mode mail attached with images or melodies.

#### ■ File that can be attached

File type	Maximum number of attached files
Melody	Total of 10 <sup>*1</sup>
Image of 10000 bytes or smaller (JPEG or GIF)	
Image over 10000 bytes (JPEG)	One of either <sup>*2</sup>
Video/i-motion Movie	

\*1: The total data size including melodies, images and text of these 10 files should not exceed 5000 full-pitch characters (10000 bytes). The number of files that can be attached differ depending on their data sizes.

\*2: One of image or video/i-motion of up to ● Kbytes can be attached. It is counted as one, besides melodies and images of 10000 bytes or less.

- A file prohibited to be attached to mail or to be output from FOMA handset cannot be attached.
- When a JPEG format image or i-motion exceeding 10000 bytes is attached, the number of characters that can be entered to text is reduced by 100 full-pitch characters (200 half-pitch characters). When decoration is made, it is reduced by 200 full-pitch characters (400 half-pitch characters).
- Up to 11 files can be attached to mail. It is reduced depending on the file sizes.

## 1 Compose message screen (P172) ▶ \$★\$ (Attach) ▶ [OK] ▶ Perform the following operations

### Attach image

Select a file from those saved in "My Pictures".

### Attach i-motion

Select a file from those saved in "i-motion".

### Attach melody

Select a file from those saved in "Melody".

### Snap photo

Shoot and attach a still image.

▶ Shoot a still image ▶ [OK] [Insert]

[Discard] [Re-shoot a still image.]

### Shoot movie

Shoot and attach a video.

▶ Shoot a video ▶ [OK] [Insert]

[Discard] [Re-shoot a video.]

### microSD

Select a file from those saved in microSD memory card.

## Deleting/Changing an Attached File

You can delete, change, replay or confirm information of an attached file.

### 1 Select an attached file ▶ [OK]

**Play/Display** : Replay/display a selected file.

**Change** : Change a selected file.

**File properties**

: Display information about a selected file.

**Delete** : Delete a selected file. Press [OK] [Yes].

## Automatic reception of mail

 
### When i-mode Mail is Received

When FOMA handset is in a service area, i-mode mail is automatically sent from i-mode Center.

1 When i-mode mail is received, \$★\$ goes flashing and "Receiving messages..." appears.

When reception has completed, the reception result appears on the screen.

- Returns to the Standby screen if no operation is performed for 30 seconds.

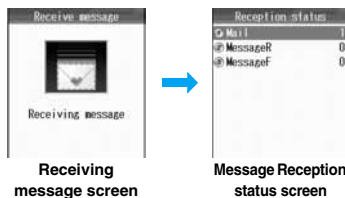

## 2 "Mail"

Display an Inbox list screen.

### Note

 
- When new i-mode mail is delivered, other i-mode mail and/or Message R/F stored in i-mode Center are received at the same time.
- i-mode mail allows to receive melodies and/or still images as attached files. Incompatible attached files are automatically deleted in i-mode Center.
- When Receive Option for i-mode mail has been set, sent i-mode mail is stored in i-mode Center. You can confirm a subject, etc. of i-mode mail stored in Center and select and receive it. →P176
- When received mails exceed the limit, they are overwritten from the oldest ones. Note that unread or protected mails are not overwritten.

## Displaying New i-mode Mail Received

### 1 Message Reception status screen (P176)

▶ "Mail" ▶ Select a folder ▶ [OK]

### 2 Select mail to be displayed ▶ [OK] [Select]

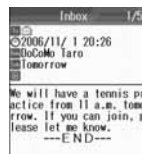

Inbox detail screen

## Receive option

### Selecting and Receiving i-mode Mail

You can confirm a subject, etc. of i-mode mail stored in i-mode Center and select mail to be received or delete it in i-mode Center before reception.

- To use Receive Option, set "Receive Option" to "On" in advance. Note that when it is "On", i-mode mail cannot be automatically received. →P184

## 1 Mail Menu screen (P172) ▶ "Receive option"

Subsequently, perform the operations in "i-mode User's Manual".

### Note

- Receive option can also be carried out from "iMenu". Select "iMenu"→"English"→"Menu List"→"Receive option".
- Even with Receive option set to "On", all mails are received when "Check new message" is used. When you do not want to receive mails, delete "Mail" from the inquiry items. →P184

### Check new message

## Checking for i-mode Mails

**i-mode mails, if any, that could not be received because FOMA handset was out of the service area or for other reasons are stored in i-mode Center. You can receive stored i-mode mails by checking to i-mode Center.**

- You cannot inquire from out of the service area.

## 1 Mail Menu screen (P172) ▶ "Check new message"

When check has completed, the mail reception result appears on the screen.

### Note

- When new i-mode mail is delivered, other i-mode mail and/or Message R/F stored in i-mode Center are received at the same time.
- When received mails exceed the limit, they are overwritten from the oldest ones. Note that unread or protected mails are not overwritten.

### Replying i-mode Mail

## Replying to i-mode Mail

You can reply to i-mode mail sender. Replying can be made by entering new text or quoting the text of received i-mode mail.

## 1 Received mail list screen (P179)/Inbox detail screen (P179) ▶ [Function]


### ■ Replying by quoting received mail text

Select "Reply with quotation".

- When the mail has been sent to multiple receivers simultaneously, you can select "Sender" or "All".

### ■ Not quoting received mail text

Select "Reply".

- You can reply to mail also by pressing  [Reply] on Inbox detail screen.
- When the mail has been sent to multiple receivers simultaneously, you can select "Sender" or "All".

## 2 Entering subject and text ▶

- "Re:" is added to a subject.
- When replying by quoting, ">" is added to the beginning of quoted text.
- Editing subject and text → "Creating and sending i-mode mail" (P172).

## 3 [Send]

### Note

- When the storage capacity of Outbox has been exceeded, replying cannot be made. Delete mails saved in Outbox before replying.
- You cannot send i-mode mail in self mode.
- The reply to received Deco-mail with quotation has original decoration and images entered in the message text. However, restricted images and highlighted URLs will not be quoted.

### Forwarding i-mode Mail

## Forwarding i-mode Mail to Another Destination

You can forward received i-mode mail to another party.

## 1 Received mail list screen (P179)/Inbox detail screen (P179) ▶ [Function] ▶ "Forward"

## 2 Enter destination ▶

- "Fw:" is added to a subject.
- Editing destination and text → "Creating and sending i-mode mail (P172)"

 
## 3 [Send]

### Note

- When a file whose mail attachment or output from FOMA handset is prohibited has been attached or pasted to i-mode mail forwarded, such file and information are deleted.
- When the storage capacity of Outbox has been exceeded, forwarding cannot be made. Delete mails saved in Outbox before forwarding.
- The forwarded Deco-mail has original decoration and images entered in the message text. However, restricted images and highlighted URLs will not be forwarded.

## Registering Mail Address to Phonebook

You can register sender's mail address, phone number and URL contained in text of received mail to phonebook.

- Inbox detail screen (P179) ▶ Select mail address, phone number and/or URL to be registered in phonebook ▶  [Function] ▶ "Save in Phonebook"

### 2 Register to phonebook

Go to Step 2 in "Saving Contacts to the Phonebook from Received Calls or Dialed Calls" (P94).

 
### Save Melody

## Replaying/Saving Melody from i-mode Mail

### Playing Melody

- Inbox detail screen (P179) ▶ Select attached or pasted melody ▶ 


### Saving Melody

- Inbox detail screen (P179) ▶  [Function] ▶ "Check attachment"

List files attached to received mail.

Screen to be inserted

 Attached file list screen

- Select a melody file to be saved ▶  [Save]

### Receiving Image Mail

## Displaying/Saving Image of Image Mail


### Displaying an Image

- Inbox detail screen (P179) ▶ Select an attached image ▶ 

### Note

- An image larger than the display size is reduced for display. Note that, however, an image that is too large may not be displayed. (Checking the specifications)
 
### Saving an Image





- Inbox detail screen (P179) ▶  [Function] ▶ "Check attachment"

List files attached to received mail.

- Select an image file to be saved ▶  [Save]




## Replaying/Saving i-motion from i-motion Mail

Select URL contained in i-motion mail received, acquire i-motion stored in i-motion mail Center and save it.

- Inbox Detail Screen (P179) ▶ Select URL ▶  ▶  ▶  ▶  [Yes]

Acquisition of i-motion starts.

- When "i-motion auto playing setting" has been set to "Auto replay", i-motion is automatically replayed after acquisition.

- "Save" ▶  ▶  ▶  [Yes] (Checking the specifications)

### Outbox/Inbox/Unsentbox

## Displaying Mails in Outbox/Inbox/Unsentbox

### Displaying Mails in Inbox

Up to ●●● mail items including i-mode mails and SMS can be saved.

- The number of items that can be saved varies depending on their data sizes.

## 1 Mail Menu screen (P179) ▶ "Inbox"



Inbox list screen

## 2 Select a folder ▶ ●

 
- ◂: Display the previous or next page when there are 2 or more pages.
- [Sort]: Sort mail by selecting keys such as received date and time, subject or sender. →P180



Received mail list screen

## 3 Select a mail ▶ ●

- ◂: Scroll the screen.
- ◃: Display the previous or next mail.
- [Reply]: Reply to the sender and/or receivers of simultaneous mail sending. →P172, P187

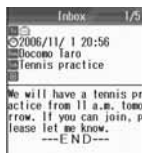

Inbox detail screen

## Displaying Outbox Mails

Up to ●●● mail items including i-mode mails and SMS can be saved.

- The number of items that can be saved varies depending on their data sizes.

## 1 Mail Menu screen (P172) ▶ "Outbox"



Outbox list screen

## 2 Select folder ▶ ●

 
- ◂: Display the previous or next page when there are 2 or more pages.
- [Sort by]: Sort mail by selecting keys such as sent date and time, subject or sender. →P180



Sent mail list screen

## 3 Select mail ▶ ●

- ◂: Scroll the screen.
- ◃: Display the previous or next mail.
- [Edit]: Display Compose message or SMS creation screen. →P172, P187

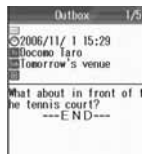

Sent mail detail screen

## Displaying Mails in Unsentbox

Mails created but not sent are saved. Up to ●●● mail items including i-mode mails and SMS can be saved.

- The number of items that can be saved varies depending on their data sizes.

 
## 1 Mail Menu screen (P172) ▶ "Unsentbox"



Unsentbox list screen

## 2 Select folder ▶ ●


- ◂: Display the previous or next page when there are 2 or more pages.
- [Sort]: Sort mail by selecting keys such as saved date and time, subject or sender. →P180

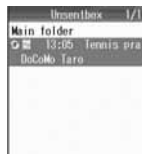

Unsent mail list screen

## 3 Select mail ▶ ●

 - ◂: Scroll the screen.
- ◃: Display the previous or next mail.
- [Edit]: Display Compose message or SMS creation screen. →P172, P187

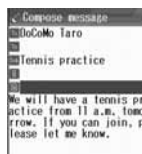


Unsent mail detail screen

## Note

 - To display contents of a folder with mail security set, enter the Security code.

## Sorting Mail in Inbox/Outbox/Unsentbox List Screen

Sort mail by specifying keys such as chronological or reverse chronological order. (Checking the specifications)

**Inbox list screen (P179)/Outbox list screen (P179)/Unsentbox list screen (P179)** ▶  [Sort]

**Received date (new>old)/Sent date (new>old)/Saved date (new>old)**

Sort mail in chronological order of received, sent or saved date.

**Received date (old>new)/Sent date (old>new)/Saved date (old>new)**

Sort mail in reverse chronological order of received, sent or saved date.

**Subject (ascending order)**

Sort mail in ascending order of subject.

**Subject (descending order)**

Sort mail in descending order of subject.

**Sender (ascending order)**

Sort mail in ascending order of sender.

**Sender (descending order)**

Sort mail in descending order of sender.

### Notice

Saved contents may be lost by failure, repair or other handling of FOMA handset. DoCoMo is not liable to such loss and recommends you to store contents saved in FOMA handset to microSD memory card. They can be stored in a PC, if available, using data link software and FOMA USB connection cable (optional).

## Reading Box List/Mail List/Mail Detail Screen

## Icons on Inbox/Outbox/Unsentbox List Screen

 
Icons	Description
\$★\$	Folder containing unread mails/SMS
\$★\$	Folder containing no unread mails/SMS

Icons	Description
\$★\$	Folder with security set
\$★\$	Created folder containing unread mails/SMS
\$★\$	Created folder containing no unread mails/SMS
\$★\$	Mail-linked i-appli folder

## Icons on Received/Sent/Unsent Mail List Screen

Icons	Description
\$★\$	Unread mail
\$★\$	Read mail
\$★\$	Unread SMS
\$★\$	Read SMS
\$★\$	Protected mail
\$★\$	Replied mail
\$★\$	Forwarded mail
\$★\$	Mail with acquired image attached
\$★\$	Mail with acquired melody attached
\$★\$	Mail with not acquired image attached
\$★\$	Mail with not acquired melody attached
\$★\$	SMS saved in UIM

## Function Menu on Inbox/Outbox List Screen

**Received mail list screen (P179)/Outbox list screen (P179)** ▶  [Function] ▶  
**Perform the following operations**

### Create folder

Create a folder.

▶ **Enter folder name**

### Edit folder name

Edit a selected folder name.

▶ **Enter folder name**


### Auto sort

Set conditions for automatically saving mails in specified folders. →P185

### Sort folders

Sort folders.

▶ **Select a folder to be sorted** ▶  [Select] ▶ **Select location to move the folder** ▶  [Define] ▶  [Complete]

-  [Return]: Go back to the previous operation.

### Set security/Release security

Set or release security to the selected folder. Setting security requires the security code entry to view the contents of the folder.

▶ **Enter the Security Code**



### Delete folder

Delete a selected folder.

### Mail list

Display contents of a selected folder.

### Delete All Messages

Delete all mail in Inbox/Outbox.

▶ Enter the Security Code

### Send all entries

Send all received mails by Bluetooth. (Checking the specifications)

## Note

#### Sort folders/Delete folder

- Folders registered by default cannot be sorted or deleted.

#### Delete folder

- A folder containing protected mails cannot be deleted.
- When there is mail-linked i-appli, the folder for i-appli cannot be deleted.

#### Delete All Messages

- Protected mails or SMS saved in UIM are not deleted. For a folder with security set, a confirmation message appears asking whether to delete it. Press [ch] [Yes] to delete the folder.

## Function Menu on Received Mail List Screen

**Received mail list screen (P179) ▶ Select mail ▶ [ch] [Function] ▶ Perform the following operations**

### Reply

Reply to mail. →P177

### Reply w/quotation

Reply to received mail quoting its contents.

### Forward

Forward mail. →P177

### Search

Search for received mail under set conditions.

**Search unread** : Search for only unread mails.

**Search read** : Search for only read mails.

**Search protected** : Search for only protected mails.

**Search attached** : Search for only mails with file attached.

**Re-search\*** : Search again.

**Release search\*** : Cancel searching state.

### Protect/Release

Protect or release the selected mail.

**Release** : Release the selected mail.

**Release all** : Release all mail.

### Move to folder

Move a selected folder.

▶ Select a move destination ▶ [ch] [Select] ▶ [ch] [Yes]

### Switch display

Select information to be displayed on received mail list screen.

▶ "Date/Subject/Sender"/"Date/Sender"/"Subject/Sender"

### Check address

Display addresses of the sender and simultaneous receivers of a selected mail.

- [ch] [Detail]: Display detail screen of a selected address.

**Create message** : Reply to a selected address/phone number. →P177, P187

**Save in Phonebook** : Register a selected address/phone number for phonebook. →P178

**Auto sort** : Set to automatically save a selected address/phone number to a specified folder under specified conditions. →P185

**Register sending group** : Register a selected address to a send group. →P185

**Copy E-mail** : Copy a selected address/phone number.

### Send

Send a selected mail via Infrared communication.

### UIM

Copy or move a selected SMS to UIM/FOMA phone.

**Move to UIM** : Move SMS to UIM. Press [ch] [Yes].

**Copy to UIM** : Copy SMS to UIM. Press [ch] [Yes].

**Move to Phone** : Move SMS to the phone. Press [ch] [Yes].

**Copy to Phone** : Copy SMS to the phone. Press [ch] [Yes].

### Delete

**Delete** : Delete a selected mail. Press [ch] [Yes].

**Delete multiple** : Select and delete 2 or more mails. Select mails to be deleted ▶ [ch] [Execute] ▶ Press \$\* \$ [Yes].

**Delete all** : Delete all messages in the folder, or delete all messages found using "Search". Enter the Security Code ▶ Press \$\* \$ [Yes].

## Note

#### Delete

- Protected mails cannot be deleted.

#### Protect

- Up to ●● mails can be protected.

## Function Menu on Inbox Detail Screen

**Inbox Detail screen (P179) ▶ [ch] [Function] ▶ Perform the following operations**

### Reply

Reply to mail. →P177

Continued on the next page ●●

**Reply w/quotation**

Reply to received mail quoting its contents.

**Forward**

Forward a mail →P177

**Protect/Release**

Protect or release the displayed mail.

**Scroll**

Set a number of lines to be scrolled. →P184

**Font size**

Set a font size. →P184

**Save to template**

Save Deco-mail as a template. (Checking the specifications)

**Move to folder**

Move the displayed mail to another folder.

▶ **Select a move destination** ▶ [Select] ▶ [Yes]

**Check address**

Display addresses of the sender and simultaneous receivers of a displayed mail.

- ▶ [Detail]: Display detail screen of a selected address.

**Compose message** : Reply to a selected address/phone number. →P177, P187

**Save in Phonebook** : Register a selected address/phone number to phonebook. →P178

**Auto sort** : Set to automatically save a selected address/phone number to a specified folder under specified conditions. →P185

**Check image**

Save images contained in the displayed mail. Select an image then go to Step 2 in "Saving Images from a Site or Message" (P155).

**Check Attachment**

List files attached to a displayed mail.

- ▶ [Save]: Save the selected file.

**Attached file list screen** ▶ [Function]

**Set up** : Display a setup screen after saving a file. (Checking the specifications)

**File Properties** : Display information of a selected file.

**Delete** : Delete a selected file.

**Send**

Send a displayed mail via Infrared communication.

**UIM**

Copy or move a selected SMS to UIM/FOMA phone.

**Move to UIM** : Move SMS to UIM. Press [Yes].

**Copy to UIM** : Copy SMS to UIM. Press [Yes].

**Move to Phone** : Move SMS to the phone. Press [Yes].

**Copy to Phone** : Copy SMS to the phone. Press [Yes].

**Delete**

Delete a displayed mail.

**Save in Phonebook**

Register a selected mail address/phone number to phonebook. →P178

**View URL**

Display URL of pasted to mail text. (Checking the specifications)

- ▶ [Copy]: Copy URL.

**Note****Save to template**

- A large-size still image file or melody file attached to Deco-mail is deleted when saving the mail.

**Delete**

- Protected mails cannot be deleted.

**Protect**

- Up to ●● mails can be protected. (Checking the specifications)

**Function Menu on Sent Mail Detail Screen**

**Sent mail Detail screen (P179)** ▶ **Select a mail** ▶ [Function] ▶ **Perform the following operations**

**Edit**

Edit and send a sent mail. →P172, P186

**Search**

Search sent mail under set conditions.

**Search protected** : Search only protected mails.

**Search attached** : Search only mails with file attached.

**Re-search** : Search again.

**Release search** : Cancel searching state.

**Protect/Release**

Protect or release the selected mail.

**Release** : Release the selected mail.

**Release all** : Release all mail.

**Move to folder**

Move a folder.

**Move** : Move a selected folder. Select a move destination ▶ [Select] ▶ Press [Yes].

**Move multiple** : Select and move 2 or more mails. Select mails to be moved ▶ [Execute] ▶ Select \$\*\$ [Yes].

**Move all** : Delete all messages in the folder, or delete all messages found using "Search". Enter the Security Code ▶ Press \$\*\$ [Yes].

**Switch display**

Select information to be displayed on sent mail list screen.

▶ "Date/Subj./Sender"/"Date/Sender"/"Subject/Sender"

## Check address

Display addresses of the sender and simultaneous receivers of a selected mail.

- [Detail]: Display detail screen of a selected address.

## Compose message (Compose SMS)

: Reply to a selected address/phone number. →P177, P187

**Save in Phonebook** : Register a selected address/phone number to phonebook. →P178

**Auto sort** : Set to automatically save a selected address/phone number to a specified folder under specified conditions. →P185

## Register sending group

: Register a selected address to a send group. →P185

## Copy E-mail · Copy phone No.

: Copy a selected address/phone number.

## Send

Send a selected mail via Infrared communication.

## UIM

Copy or move a selected SMS to UIM/FOMA phone.

**Move to UIM** : Move SMS to UIM. Press [Yes].

**Copy to UIM** : Copy SMS to UIM. Press [Yes].

**Move to Phone** : Move SMS to the phone. Press [Yes].

**Copy to Phone** : Copy SMS to the phone. Press [Yes].

## Delete

Delete a sent mail.

**Delete** : Delete a selected mail. Press [Yes].

**Delete multiple** : Select and delete 2 or more mails. Select mails to be deleted [Execute] Select \$★\$ [Yes].

**Delete all** : Delete all messages in the folder, or delete all messages found using "Search". Enter the Security Code Press \$★\$ [Yes].

## Note

### Delete

- Protected mails cannot be deleted.

### Protect

- Up to ●● mails can be protected. (Checking the specifications)

## Function Menu on Sent Mail List Screen

**Sent mail display screen (P179)** **[Function]** **Perform the following operations**

## Copy

Copy contents of a displayed sent mail.

**Address** : Copy a destination. When there are simultaneous receiver addresses, copy destinations from sent mail address confirmation screen.

**Subject** : Copy a subject.

**Message** : Select and copy contents of text. →P264

## Protect/Release

Protect or release the displayed mail.

## Scroll

Set a number of lines to be scrolled. →P184

## Font size

Set a font size. →P184

## Save to template

Save Deco-mail as a template. (Checking the specifications)

## Move to folder

Move the displayed mail to another folder.

**Select a move destination** **[Select]** **[Yes]**

## Check address

Display addresses of the sender and simultaneous receivers of a displayed mail.

- [Details]: Display detail screen of a selected address.

## Compose message (Compose SMS)

: Send mail or SMS to a selected address/phone number. →P177, P187

**Save in Phonebook** : Register a selected address/phone number to phonebook. →P178

**Auto sort** : Set to automatically save a selected address/phone number to a specified folder under specified conditions. →P185

**Register sending group** : Register a selected address to a send group. →P185

## Copy E-mail · Copy phone No.

: Copy a selected address/phone number.

## Check image

Save images contained in the displayed mail. Select an image then go to Step 2 in "Saving Images from a Site or Message" (P155).

## Check Attachment

List files attached to a displayed mail.

- [Save]: Save a selected file.

**Attached file list screen** **[Function]**

**Set** : Display a setup screen after saving a file. (Checking the specifications)

**File Properties** : Display information of a selected file.

**Delete** : Delete a selected file.

## Send

Send a displayed mail via Infrared communication.

**UIM**

Copy or move a selected SMS to UIM/FOMA phone.

**Move to UIM** : Move SMS to UIM. Press [Yes].

**Copy to UIM** : Copy SMS to UIM. Press [Yes].

**Move to Phone** : Move SMS to the phone. Press [Yes].

**Copy to Phone** : Copy SMS to the phone. Press [Yes].

**Save in Phonebook**

Register a selected mail address/phone number to phonebook.  
→P178

**Delete**

Delete a displayed mail.

- Items displayed on the function menu vary depending on the displayed mail.

**Note****Protect**

- Up to ●● mails can be protected. (Checking the specifications)

**Save to template**

- A large-size still image file or melody file attached to Deco-mail is deleted when saving the mail.

 
**Delete**

- Protected mails cannot be deleted.

**Mail setting****Setting FOMA Handset Mail Functions**

Default	<p><b>Check new message:</b> Checked All (Checking the specifications)</p> <p><b>Receive attachment:</b> Image and Melody</p> <p><b>Receive option:</b> OFF</p> <p><b>Melody auto play:</b> Auto Play</p> <p><b>Receive preference:</b> Prefer receive notice</p> <p><b>Font size:</b> Standard</p> <p><b>Scroll:</b> 1-line</p>
---------	--

Set the mail and SMS functions.

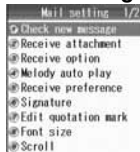**Mail Menu screen (P172) ▶ "Mail setting"**

Mail setting screen

**2** [Select] ▶ **Perform the following operations****Check new message**

Set items to be checked for "Check new message".

▶ **Select the items to be checked** ▶ [Select]

**Receive attachment**

Set attachment files to be acquired when receiving mail, Message R/F, etc.

**Image and Melody** : Acquire images and melodies.

**Image** : Acquire only images.

**Melody** : Acquire only melodies.

**Not receive** : Acquires no attachment files.

**Receive option**

Set whether to set Receive Option.

**ON** : Do not automatically receive mails.

**OFF** : Automatically receive mails.

**Melody auto play**

Set whether to automatically replay a melody attached or pasted to a mail received and displayed.

▶ **"Auto Play"/"Not auto play"**

**Receive preference**

Set whether to display a receiving or reception result screen of a mail or Message R/F received during FOMA handset operation.

**Prefer receive notice** : Displays the Receiving screen and Received result screen.

**Prefer user operation** : Gives priority to the operation of the FOMA handset without displaying the Receiving screen and Received result screen.

**Signature**

Set a signature to be inserted to mail text. →P185

**Edit quotation mark**

Set a symbol indicating quotation from a received mail used for replying by quoting.

▶ **Enter quotation mark**

**Font size**

Set a font size for text on mail display screen.

▶ **"Large"/"Standard"/"Small"**

**Scroll**

Set a number of lines to be scrolled when is pressed on a mail detail or mail creation screen.

**1-line** : Scroll 1 line.

**3-line** : Scroll 3 lines.

**5-line** : Scroll 5 lines.

**1/2-page** : Scroll 1/2 page.

**1-page** : Scroll 1 page.

**Register sending group**

Register a mail address of a group. You can send a mail simultaneously to multiple members registered in the group.

→P185

**SMS report request**

Set whether to request for SMS delivery notification for SMS sent. →P189

**SMS message validity**

Set duration SMS is preserved in SMS Center. →P189

**SMS Center**

Set SMS Center access point. →P189

## Mail status request

Confirm the mail settings. After confirming, press [OK].

## Reset mail

Reset the mail settings to the Default.

▶ Enter the Security Code ▶ [Yes]

## Note

### Receive attachment

- Even when "Image and Melody" or "Image" has been set, a large-size still image file cannot be acquired.

 
## Auto sort

### Sorting Sent/Received Mails Automatically to Folders

Set conditions for automatically saving mails in specified folders.

## 1 Inbox list screen (P179)/Outbox list screen (P179) ▶ [Function] ▶ "Auto sort"

- [Delete]: Delete the set sort condition by "delete this"/"delete all".

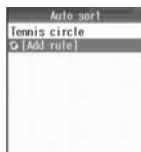

Auto sort setting screen

## 2 "Add rule" ▶ Perform the following operations

### Sender address · Receiver address

Set mail address as a sort keys.

▶ Select the following item ▶ \$★\$▶ After setting ▶ [Complete]

**Quote phonebook** : Select and set from a phonebook.

**Quote rcvd adrs** : Select and set from received mail history.

**Quote sent adrs** : Select and set from sent mail history.

**Quote sending grp** : Select and set a group from send groups.

**Quote profile** : Select and set from a profile.

**Direct input** : Directly enter and set a mail address.

### Subject

Set a mail subject as a condition.

▶ Enter a subject ▶ [Complete]

### All inbox messages · All outbox messages

Sort all received/sent mails to a selected folder. Press [Complete].

## ■ Changing sort conditions

When a set sort condition is selected from automatic sort setup screen (P185) and is pressed, a screen for confirming condition change appears.

Select [Yes] to change a sort condition.

## Note

- When the same condition has been set for another folder, a message for confirming the change appears. When [Yes] is selected, the condition set for another folder is cancelled and set for a selected folder.

## Signature

### Add a Signature to Mail

Default Off

Edit and set a signature to be inserted to mail text.

## 1 Mail setting screen (P184) ▶ "Signature"

### ■ Changing signature title

Select "Signature 1"/  
"Signature 2"/"Signature 3"  
▶ [Title] ▶ Enter a title

### ■ Registering and editing signature text

Select "Signature 1"/  
"Signature 2"/"Signature 3"  
▶ ▶ Enter signature text  
• Entering characters →P260



Signature setting screen

## 2 \$★\$

### Register Sending Group

#### Registering a Destination to a Mail Group

 
Register a mail address of a group. Up to 5 mail address can be registered for a group. You can send a mail simultaneously to multiple members registered in the group.

## 1 Mail setting screen (P184) ▶ "Register sending group"



Sending group list screen

## 2 Select a group ▶

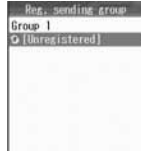

Register sending group screen

## 3 "[Unregistered]" ▶ Perform the following operations

### Quote phonebook

Select and register a mail address from a phonebook.

### Quote received group

Select and register a mail address from a received mail history.

### Quote sending group

Select and register a mail address from a sent mail history.

### Quote profile

Select and register a mail address from a profile.

### Direct input

Directly enter a mail address.

## 4 [Complete]

### Function Menu on Send Group List Screen

## 1 Send group list screen (P185) ▶ Select a group ▶ [Function] ▶ Perform the following operations

### Edit group name

Edit/changes a group name.

▶ Enter a group name

### Delete

Delete all addresses saved for a selected group. Select [Delete] [Yes].

### Deleting an address saved in a category

## 1 Send category registration screen (P186) ▶ [Delete]

### Delete

Delete the selected address. Press [Delete] [Yes].

### Delete all

Delete all addresses registered in a category.

▶ Enter the Security Code ▶ [OK]

## Chat Mail

Chat mail allows you to exchange mail among multiple parties on a single screen.

### Chat Mail Screen (Checking the specifications)

Chat mail history

Screen to be inserted

Latest chat mail

Chatmail screen

### Creating/sending chatmail

## Creating and Sending Chat Mail

To use chat mail, you have to register other parties' mail addresses as chat members in advance. →P187

- When "Receive option" is "ON", you cannot use chat mail. Set "Receive option" to "OFF".
- Select ★★\$ (Subject) "ChatMail" on the Received mail list screen (P179) to launch Chat mail and reply to mail arriving from a member.

## 1 Mail Menu screen (P172) ▶ "ChatMail"



Chatmail screen

## 2 ▶ Enter characters ▶ (Checking the specifications)

Entered characters are highlighted.

 
- Up to 250 full-pitch or 500 half-pitch characters can be entered.



Chatmail text entry screen

### 3 [Send] [Send]

A sent chat mail appears in the top of the display.

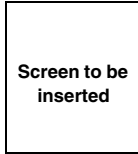

Screen after sending chatmail

### 4 Receive chatmail

### 5 [ch] [Function] ▶ "End Chatmail" ▶ \$★\$ [Yes]

Chat mail ends.

#### Note

- Communication fee for exchanging chatmail with multiple parties is the same as that for sending one mail. Note that the communication fee will increase for the information size of added destinations.

#### Function Menu on Chat Mail Screen

### 1 Chat mail screen (P186) ▶ [ch] [Function] ▶ Perform the following operations

#### Send

Send chat mail.

#### Renewal

Receive chat mail.

#### Check recent rcver

Confirm destination of the latest mail.

- [ch] [Set]: Set a member again. Put \$★\$ on an address to be set as a chat member and press [ch] [Complete].

#### Member setting

Set a chat member.

#### Delete chatmail

Delete a chat mail. Press \$★\$ [Yes].

#### Quit chatmail

End chat mail.

#### Change font size

Change a font size used for chat mail to "Standard character"/"Small character".

#### Setting chat members

#### Setting Chat Members

To perform Chat Mail, you need to register mail addresses to chat members in advance.

- Up to 5 chat members can be saved.
- When performing Chat Mail, from the Mail Menu screen (P172) → select "ChatMail".

### 1 Chat mail screen (P186) ▶ [ch] [Function] ▶ "Member setting"



Member setting screen

### 2 [ch] [Function] ▶ Perform the following operations

#### Register new entry

Specify the name and mail address for a new chat member.

**Search a phonebook** : Select from a Contact.

**Direct entry** : Directly enter the mail address and name.

**History of sent mails** : Select from sent addresses.

#### History of received mails

: Select from received addresses.

**Group reference** : Select from sent groups.

#### Edit

Specify a nickname and font color.

**Nickname** : Enter a nickname.

**Address** : Edit the address of a member.

**Font Color** : Select a font color for a member from 30 colors.

#### Delete

**Delete One** : Delete the selected member. Press \$★\$ [Yes].

**Delete All** : Delete all registered carriers available. Press \$★\$ [Yes].

### 3 [Send] [Complete]

#### Creating/Sending SMS

## Creating and Sending SMS (Short Message)

#### Create and send SMS.

- You can send and receive SMS to/from parties of overseas carriers other than DoCoMo. See DoCoMo's web site for countries and overseas carriers available.

### 1 Mail Menu screen (P172) ▶ "Compose SMS message"



Compose SMS message screen

## 2 Select ★★\$ (Receiver) Enter a phone number

Enter a phone number.

- Select and enter from a phonebook, received mail address history, sent mail address history or profile. →P186

 
 
## 3 Select ★★\$ (text) Enter text

## 4 [Send]

### Note

- For a destination of an overseas carrier other than DoCoMo, enter in the order of "+", "Country Code" and "receiver's mobile phone number". For the mobile phone number, omit leading "0", if exist. Numbers may be entered in the order of "010", "Country Code" and "receiver's mobile phone number" (to reply to overseas SMS received, enter "010").
- Characters may not be sent correctly to the receiver depending on the signal wave conditions.
- When sent mails saved in FOMA handset exceed the limit, they are overwritten from the oldest ones. Note that protected mails are not overwritten.
- You cannot reply to SMS sent with Private ID or Unknown ID or from a public phone.

### Function Menu on SMS Creation Screen

- 1 **SMS creation screen (P187)** 
  - [Function]  Perform the following operations

#### Send

Send SMS.

#### Save

Save SMS being created or edited in Unsentbox.

#### SMS report request

Set whether to request for SMS delivery notification for SMS sent. →P189

#### Message validity

Set a period a sent SMS is stored in SMS Center.

- When "0 day" is selected, sent SMS is not stored in SMS Center. →P189

#### Quote phonebook

Select a destination from phonebook.

#### Quote rcvd adrs

Select a destination from received mail history.

#### Quote sent adrs

Select a destination from sent mail history.

#### Quote sending grp

Select a destination from a sent group.

#### Quote profile

Select a destination from the profile.

- ◆Enter the Security Code

### Direct input

Directly enter a destination.

### Receiving SMS

## Automatically Receiving SMS (Short Message)

When FOMA handset is in a service area, SMS is automatically received.

Up to ●●● items including i-mode mails and SMS can be saved.

### 1 When SMS is received, ★★\$ goes flashing and "Retrieving Message..." appears

When reception has completed, the reception result appears on the screen.

- Returns to the Stand-by screen if no operation is performed for 30 seconds.



Message Reception status screen

### Note

 
- When new SMS is delivered, other i-mode mail and/or Message R/F stored in i-mode Center are received at the same time.
- When received mails exceed the limit, they are overwritten from the oldest ones. Note that unread or protected mails are not overwritten.

### Displaying New SMS Received

### 1 Message Reception status screen (P188)

- ◆ "Mail"  Select a folder

### 2 Select SMS to be displayed [Select]

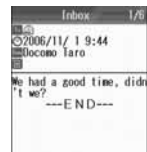

Inbox detail screen



## Checking for SMS (Short Message)

SMS, if any, that could not be received because FOMA handset was out of the service area or for other reasons are stored in SMS Center. You can receive stored SMS by checking to SMS Center.

- You cannot check from out of the service area.

### Mail menu screen (P172) ▶ "Check SMS"

When check has completed, the mail reception result appears on the screen.

#### Note

- When new SMS is delivered, other i-mode mail and/or Message R/F stored in i-mode Center are received at the same time.
- When received mails exceed the limit, they are overwritten from the oldest ones. Note that unread or protected mails are not overwritten.

### SMS Settings

## Configuring SMS (Short Message) Settings

### SMS Report Request

Default	OFF
---------	-----

Set whether to request an SMS delivery report after sending SMS. If this option is set to "ON", a message indicating that the SMS has been delivered to the recipient will be sent to you.

### Mail setting screen (P184) ▶ "SMS report request" ▶ "ON"/"OFF"

### SMS message validity

Default	For 3 days
---------	------------

Set the duration that a sent SMS can be kept undelivered at the SMS center. When "For 0 day" is set, SMS will not be kept undelivered at the SMS center.

### Mail setting screen (P184) ▶ "Message validity" ▶ "For 0 day"/"For 1 day"/"For 2 days"/"For 3 days"

### SMS Center

Default	DoCoMo
---------	--------

Set the SMS center address.

You usually do not need to change this setting.

### Mail setting screen (P184) ▶ "SMS Center"

**DoCoMo**: Set DoCoMo as SMS Center address.

**Others**: Enter the address.

#### Note

- To set "Type of Number" to "International", enter "+" at the beginning of the address. If the address contains "\*" or "#", "International" cannot be set.



 
# i-appli

<b>What is i-appli? .....</b>	<b>192</b>
<b>Downloading i-appli from Site .....</b>	<b>193</b>
<b>Activating i-appli .....</b>	<b>194</b>
<b>Automatically Starting i-appli&lt;Auto-Start&gt; .....</b>	<b>195</b>
<b>Setting the i-appli Standby Screen&lt;Stand-by&gt; .....</b>	<b>196</b>
<b>Managing i-appli&lt;i-appli Settings&gt;.....</b>	<b>197</b>
<b>Using Various Functions of i-appli.....</b>	<b>197</b>

## What is i-appli?

By downloading i-appli from site, i-mode compatible FOMA handset (hereinafter, referred to as i-mode handset) can be made more convenient. For example, you can enjoy various games downloaded to i-mode handset and automatically check price by downloading i-appli for stock price information. In addition, map i-appli downloads only necessary data, allowing smooth scrolling. Some i-appli allows to directly register data to phonebook or schedule or link with Databox for saving and acquiring images.

IP (Information Provider)

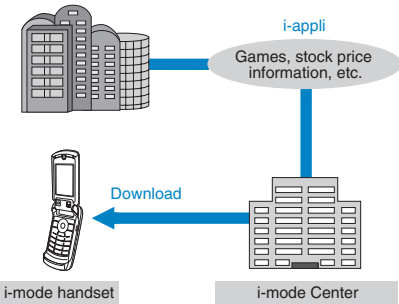

- Downloading i-appli →P193
- Activating i-appli →P194
- Automatically activating i-appli →P195

### Note

- Some i-appli may use a serial No. of i-mode handset phone/UII.
- Some i-appli may perform communications during execution. You can set to disable communications. →P196

### Using registered data

Some i-appli software may be able to refer to, register or operate your i-mode handset registration data (phonebook, bookmark, schedule, images). Following operations are enabled using registration data:

- Phonebook registration
- Bookmark registration
- Schedule registration
- Image acquisition from Databox
- Image saving to Databox
- Melody saving to Databox

## What is i-appliDX?

With i-appliDX, you can use i-appli more conveniently in such manners as to create mail with your favorite character screen or let you notified of the sender of received mail with a character's comment by linking with i-mode handset information (such as mail text, sent/received mail history, redial, phonebook data) or to update necessary information such as stock price or promote real-time progression of games by linking with mail.

### Using registered data

Some i-appliDX software may be able to refer to, register or operate registration data such as mails, sent mail history, received mail history, ring alert, in addition to registration data available to ordinary i-appli (phonebook, bookmark, schedule and images).

Following operations are enabled using registration data:

- Phonebook registration
- Phonebook referencing
- Icon information
- Bookmark registration
- Schedule registration
- Using mail menu
- Using Compose message screen
- Referencing latest sent mail history
- Referencing latest received mail history
- Referencing latest unread mail
- Saving ring alert
- Changing ring alert (phone, mail, message)
- Image acquisition from Databox
- Image saving to Databox
- Changing screen settings (the stand-by display, incoming/outgoing calls, mail send/reception, Message R/F reception)

### Note

- i-appliDX may perform communications regardless of software communication settings to confirm software validity. The communications count and timings differ from software.

## What is Mail-linked i-appli?

**Mail-linked i-appli, a kind of i-appliDX, allows you to use i-appli more conveniently in such manners to update in real-time the information such as stock price and progression of games by exchanging information with i-mode mail.**

- Mails used with mail-linked i-appli may not be displayed correctly.

## Other Convenient Functions

### i-appli Standby screen

You can receive mails and make calls using i-appli as the stand-by display. You can make the

stand-by display more convenient by setting latest news or whether information on the wallpaper screen or letting your favorite character inform you of mail reception and alarms. →P196

- This function is available with i-appli compatible with the i-appli Standby screen.

### ■ Automatically starting i-appli

You can automatically start software at a specified time, date or day of week. Some software can be automatically started at a time interval predefined in the software. →P195

### ■ Using camera

You can use i-mode handset Camera from i-appli.

- This function is available with i-appli compatible with Camera function.

### ■ Infrared communication

You can communicate with a device installed with Infrared communication function using the software. →P223

- This function is available with i-appli compatible with Infrared communication function.
- Depending on the other party's device, communications of some data may be disabled even with Infrared communication function installed.

### ■ Infrared remote control

You can operate various device from i-appli such as household electrical appliances compatible with infrared remote control. →P195

For example, "Gガイド番組表リモコン (G-Guide Program List Remote Controller)" registered by default can be used as a remote TV controller linked with TV program. →P195

- This function is available with i-appli compatible with infrared remote control function. The other party's device must have related software.

## Downloading i-appli from Site

You can download software from a site and save it to FOMA handset.

- You can register ●● to up to ●●● software items downloaded (the number of items that can be saved may be reduced depending on the software date size).

### 1 Display a site containing i-appli ▶ Select software ▶



-  [Cancel]: Cancel downloading.

### 2 After downloading has completed ▶ [OK]

#### ■ When software setup screen appears

Set "Set stand-by", "Network set" and "Stand-by net".

Each setting can also be performed from "Permissions". →P195, P196

-  [Change]: Change the settings.
-  [Complete]: Complete the settings.

### 3 [Yes]

The downloaded software starts.

### ■ Downloading mail-linked i-appli

The folder for i-appli mail is automatically created in the inbox/outbox list if you download mail-linked i-appli. The folder name will be the title for the downloaded mail-linked i-appli, which cannot be changed.

- If there are ● folders for i-appli mail in the inbox/outbox list, mail-linked i-appli cannot be downloaded.
- If mail security is activated, you need to enter the Security Code for download. (Checking the specifications)

### ■ Re-downloading mail-linked i-appli

 
If you attempt to re-download mail-linked i-appli with only the folder for i-appli mail left, you can use the existing folder for i-appli. If you do not want to use the existing folder for i-appli mail, delete the folder and create a new one for i-appli mail. You cannot download mail-linked i-appli without creating a new folder. (Checking the specifications)

### Note

- At downloading, the conformation screen might appear asking whether to send the "serial number of your mobile phone/UIIM". Select "Yes" to start downloading. In this case, the "serial number of your mobile phone/UIIM" is sent to the ISP (Internet Service Provider) over the Internet, so could be deciphered by third parties. However, your phone number, address, age, and gender are not notified to the ISP (Internet Service Provider) or others by this operation.
- At downloading, the confirmation screen might appear asking whether to use the phone-information data (stored data and serial number of your mobile phone/UIIM). Select "Download" to start downloading. Select "Details" to check the details of the phone-information data you want to use.
- If you attempt to re-download the software that was downloaded with a different UIIM, the confirmation message appears asking whether to overwrite it. Select "Yes" to display the screen to check the version and size of the software. Select "Download" to download.
- If download of i-appli fails due to the conditions of the radio waves, etc., the i-appli is not saved in you FOMA handset.
- You cannot download if the maximum number of software is saved or there is not enough memory space available. Download after deleting the saved software.
- Some software automatically carries out transmission after downloaded. You can change the settings in "Network set" of "Permissions" not to automatically carry out transmission. →P195

# Activating i-appli

## 1 ● ▶ \$\$\$ (i-appli)

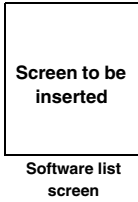

## 2 Select software ▶ ●

- ▶: Terminate the software. Select "Resume" or "End".

### ■ Icons on software list screen

Icons	Description
\$\$\$	i-appli
\$\$\$	i-appliDX
\$\$\$	Mail-linked i-appli
\$\$\$	i-appli that can be set on the wallpaper screen
\$\$\$	i-appliDX that can be set on the wallpaper screen
\$\$\$	Mail-linked i-appli that can be set on the wallpaper screen
\$\$\$	i-appli set on the wallpaper screen
\$\$\$	i-appliDX set on the wallpaper screen
\$\$\$	Mail-linked i-appli set on the wallpaper screen
\$\$\$	i-appli/i-appliDX/mail-linked i-appli with automatic start set
\$\$\$	i-appli/i-appliDX/mail-linked i-appli downloaded from SSL site

### Note

- At i-appli launch, the confirmation screen might appear asking whether to upgrade the software to the latest one. Select "Yes" or "No".
- You cannot start up software downloaded using a different UIM.
- Some i-appli DX software automatically does communication to confirm the validity even if "Network set" is set to "Not". Communication frequencies and timing vary depending on the software.
- If communication frequencies are extremely many within a certain period of time during i-appli launch, the confirmation screen appears asking whether to continue communication. Press [Continue] to continue communication. Press [End] to end the i-appli.

## Function Menu on Software List Screen

**1 Software list screen(P194) ▶ Select software ▶ [Function] ▶ Perform the following operations**

### Upgrade

Upgrade the software. Press [Yes].

### Delete

Delete software. →P196

### Auto-start

Set the auto start method and auto start date and time for the selected software. →P195

### Stand-by

Set selected software on the i-appli Standby screen. →P196

### Software Info

Display selected software information such as name, version, size.

### Permissions

Set communications and/or i-appli To function for selected software. →P196

### Note

#### Upgrade

- At version upgrade, the conformation screen might appear asking whether to send the "serial number of your mobile phone/UIM". Select "Yes" to start downloading. In this case, the "serial number of your mobile phone/UIM" is sent to the ISP (Internet Service Provider) over the Internet, so could be deciphered by third parties. However, your phone number, address, age, and gender are not notified to the ISP (Internet Service Provider) or others by this operation.

## Software Preinstalled

**(Checking the specifications)**

## i Pictograph Mail

**(Checking the specifications)**

## Ope it out

**(Checking the specifications)**

## Hungry Fish

**(Checking the specifications)**

## Guide Program List Remote Controller

This is a convenient application which combines a TV program list and a TV remote controller, and is free of monthly usage charges.

You can obtain TV program information for any time slot, from anywhere and at anytime. You can acquire information on a program title, program description, start and end times and the G-code for your local TV station.

 
When you find a program of interest, you can send mail, using the "Recommendation Mail" function, with the program title and broadcast schedule to your friends. You can also control your TV remotely (some models cannot be controlled).

- When using this application for the first time, you need to configure the settings and agree to the license agreement.
- Separate packet communication charges apply.
- For details, refer to the "i-mode Operation Guide".

### ■ Infrared Remote Controller

You can use the FOMA handset as a remote controller of infrared remote controlled devices. An i-appli sends remote control signals using the infrared port.

- In order to use a remote controlled device, you need to download software that is designed for the device. Key operations for remote control vary depending on the software.
- Some devices may not be controlled.
- Depending on the controlled device or ambient brightness, communications may not be possible.
- When Self-mode is set, the infrared remote controller cannot be used.
- Point the infrared port of the FOMA handset directly in front of the device's infrared sensor to operate.

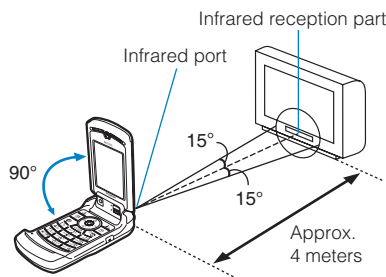

### Software Settings

#### Setting i-appli Operating Conditions

Default	<p>Network set: Yes          Stand-by net: Yes          Start from browser: Yes          Start from mailer: Yes          Start from IR: Yes          Start from Barcode: Yes          Change ring/image: Yes          Phbook/Dials acc.: Yes (Checking all the specifications)</p>
---------	--

Set operating conditions for each software. You can set to make communications automatically while software is active or whether to start i-appli via infrared communications.

**On software list (P194) ▶ Select software**  
**▶ "Permissions" ▶ Select the following items ▶ [Change]**

#### Network set

Set whether to make communications while software is active.

▶ "Yes"/"No"/"Once"

#### Stand-by net

Set whether to make communications while the i-appli Standby screen is active.

▶ "Yes"/"No"

#### Start from browser

Set whether to start software from site.

▶ "Yes"/"No"

#### Start from mailer

Set whether to start software from a mail.

▶ "Yes"/"No"

#### Start from IR

Set whether to start software via infrared communications.

▶ "Yes"/"No"

#### Start from Barcode

Set whether to start software from barcode reader.

▶ "Yes"/"No"

#### Change ring/image

Set whether to allow, when software is started, to automatically change an image and/or melody set for ring alert or on the wallpaper screen.

**Yes** : Automatically change ring alert and/or the stand-by display settings. To let display a confirmation screen for each change, successively select [Change] [Yes].

**No** : Do not automatically change the settings.

#### Phbook/Dials acc.

Set whether to allow to reference the phonebook and reception history when software is started.

▶ "Yes" ▶ "No"

### Auto-Start

## Automatically Starting i-appli

There are 2 types in automatic start:

- Automatic start by software function
- Automatic start by FOMA handset settings

### Setting whether to Automatically Start

Set whether to allow automatic start of software

**On** ▶ **Off** ▶ **Settings** ▶ **"i-appli Settings"** ▶ **"Auto-start"** ▶ [Change]

**On** : Permit Auto-start.

**Off** : Do not permit Auto-start.

## Setting Start Date/Time

### Validating Automatic Start Date/Time Set in Software

Default    Off (Checking the specifications)

When automatic start previously set for software is allowed, the software automatically starts at the date/time set in the software.

- 1 Software list screen (P194) ▶ Select software ▶ [Function] ▶ "Auto-start"
- 2 "Permissions" ▶ [Edit] ▶ "On"/"Off" ▶ [Complete]

### Setting Software Start Date/Time on FOMA Handset

Default    Off (Checking the specifications)

Set to automatically start software at the set date/time.

- 1 Software list screen (P194) ▶ Select software ▶ [Function] ▶ "Auto-start"
- 2 "User" ▶ [Edit]
  - Off : Do not set Auto-start.
  - Once : Set to start only once.
  - Daily : Set to start every day.
  - Weekly : Set to start every week.
  - Monthly : Set to start every month.
  - Yearly : Set to start every year.

### 3 Perform the following operations

#### User

Select a repeating pattern of Auto-start using .

#### Day

Set the date. Press [Change].

▶ Use to select "Year", "Month" or "Day" field ▶ Select a number using ▶ [OK]

#### Day

Set a day of the week using .

#### Time

Set the time. Press [Change].

#### Software

▶ Use to select "Hour", "Minute" or "am/pm" field ▶ Select a number using ▶ [OK]

### 4 [Complete]

#### Note

- 10 minutes before or after an automatic start time set for other software cannot be set.

- Software is not started at a automatic start time if other software is active at that time. An i-appli start failure icon appears in the top of the display. To delete the icon, press ▶ (i-appli) ▶ [Detail]. Note that the start failure history is not deleted. →P197

### Stand-by

## Setting the i-appli Standby Screen

- 1 Software list screen (P194) ▶ Select software ▶ [Function] ▶ "Stand-by" ▶ "ON/OFF"

#### Note

- Only one software item can be set on the i-appli Standby screen.
- Some software may not be set on the i-appli Standby screen.
- Site connection from the i-appli Standby screen is disabled.
- When software for communication is set on the i-appli Standby screen, it may not function correctly for some signal conditions.
- When "Stand-by net" is set to "Not", timely information may not be provided.

### Starting the i-appli Standby Screen

Activate software set on the i-appli Standby screen.

#### 1 On the opened i-appli Standby screen

▶ ▶ [Yes]

#### ■ Exiting active i-appli

Press .

- Resume: Return to software running screen.(Checking the specifications)
- End: Return to the i-appli Standby screen.(Checking the specifications)
- Remove from stand-by: Cancel the i-appli Standby screen.(Checking the specifications)

#### Note

- Some software may allow to return to the i-appli Standby screen state by key operations while the i-appli Standby screen is ON. Note that the i-appli Standby screen cannot be restored while other menu function is active.

### Deleting i-appli

- 1 Software list screen (P194) ▶ Select software ▶ [Function] ▶ "Delete" ▶ Perform the following operations



## Delete One

You can delete the selected software. Press [Yes].

## Delete Several

You can select and delete multiple software programs. Select software to delete ▶ Press [OK] ▶ [Yes]

## Delete All

You can delete all the software saved.

▶ Enter the Security Code ▶ [Yes]

### i-appli Settings

## Managing i-appli

Default	Sort by: Name Auto-start: On Softw. info display: Off Light: Phone Settings Vibrate: Phone Settings (Checking all the specifications)
---------	--

You can set up/manage the software saved in the FOMA handset.

- ▶ ▶ (Settings) ▶ "i-appli Settings" ▶ Select the following items [Change]

### Sort by

Sort software items displayed on software list screen.

- Name** : Sort software items by name.(Checking the specifications)
- Size** : Sort software items in an descending order of size.(Checking the specifications)
- Downloaded Time** : Sort software items by download date.
- Access Time** : Sort software items by date of use.

### Auto-start

Set whether to automatically start software. →P195

### Softw. info display

Set whether to display software information when downloading the software.

▶ "On"/"Off"

### Lights

Set lighting used while software is active.

▶ "Light Phone Settings"/"Software Settings"

### Vibrate

Set vibrator operation type used while software is active.

▶ "Phone Settings"/"Software Settings"

### Start failure history

Display a log of software failures to auto-start.

- [Function]: You can copy or delete the entries of Start failure history. ▶ Select "Clear All"/"Copy All Text".

### Abnormal exit history

Display a log of abnormal termination of the i-appli Standby screen.

- [Function]: You can copy or delete entries of the Abnormal exit history. ▶ Select "Clear All"/"Copy All Text".

## Security error history

Display a log of errors of software terminated due to a security error.

- [Function]: You can copy or delete the entries of Security error history. ▶ Select "Clear All"/"Copy All Text".

## Trace output

Display the trace information of the software.

- [Function]: You can copy or delete the contents of the trace information. ▶ Select "Clear All"/"Copy All Text".

### Note

#### Trace output

- Trace information does not appear if it does not exist.

## Using Various Functions of i-appli

You can connect to a site and use FOMA function while i-appli is active.

- For some i-appli, operations may be different or disabled.

### Starting up Other Software from i-appli

You can start up software saved in the FOMA handset during i-appli launch.

- Select a running i-appli [Yes]  
The software list screen is displayed.
- Select that the software [Yes]

### Displaying Site i-appli from Site

- You have to download related i-appli in advance.

- Select URL during i-appli launch ▶ [OK]  
Software exits and site appears.

### Using Barcode Reader from i-appli

- You have to download related i-appli in advance.

- Start barcode reader from i-appli (Checking the specifications)  
A screen appears indicating that the read data will be used and saved by i-appli.
- Read code



 
# i-Channel

---

What is i-Channel?.....	200
Using i-Channel.....	201
Setting i-Channel<i-Channel Setting>.....	201

## What is i-Channel?

This is a service provided by DoCoMo or IP (Information Service Provider) to deliver news and/or weather information as graphical information to handsets compatible with i-Channel.

Information is periodically received and latest information is displayed as ticker on the wallpaper screen; in addition, it can also be displayed in a channel list by pressing . Moreover, rich detail information can be acquired by selecting favorite channels from a channel list.

 
- For precautions and details of using i-Channel, see "i-mode User's Manual".

Before subscribing to the service



1


After the service subscription procedures have been completed

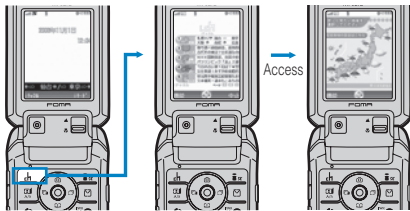

2

3

4

- Screens shown are images. They differ from actual ones.
  - When you have not subscribed to i-Channel
  - After you have subscribed to i-Channel, ticker appears on the wallpaper screen at a timing information is received or channel list is displayed.
  - A channel list is displayed by pressing . You can view in list format information, etc. given in ticker of each channel.
  - You can view detail information screen of each channel by selecting it.

### Channel

There are 2 types of channels: "Basic Channel" and "Favorite Channel".

 
"Basic Channel" is channel provided by DoCoMo. Because it is registered by default, it is immediately available upon subscription to

i-Channel. Packet communication fee charged for automatic update of information delivered for "Basic Channel" is contained in i-Channel service fee.

"Favorite Channel" is provided by IP (Information Service Provider) other than DoCoMo and available when you register a favorite one. Packet communication fee charged for automatic update of information delivered for "Favorite Channel" is not contained in i-Channel service fee.

Information that can be displayed as ticker on the wallpaper screen is only that of "Basic Channel".

IP (Information Provider)

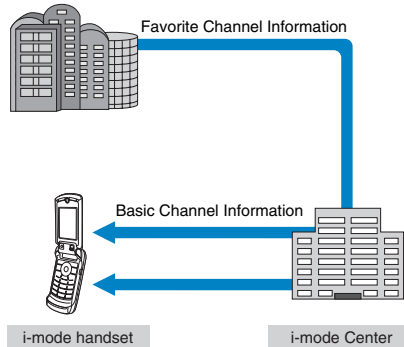

- i-Channel is a chargeable service requiring subscription (i-mode contract is necessary for subscription).
- Operations →P201
- Applicable models: 701i, 902i, 702i Series, P851i


### Note

 - Some "Favorite Channel" may require information fee for using.
- Some "Favorite Channel" may require separate subscription to IP (Information Service Provider) that provides information for use.
- Both "Basic Channel" and "Favorite Channel" require packet communication fee for viewing detail information from a channel list besides i-Channel service fee.

### Trial Service

When you use an i-Channel compatible handset and have subscribed to i-mode, but not to i-Channel for the subscriber line using the i-Channel compatible handset, you can use "Basic Channel" for a predetermined period of time without service fee. Note that you will be charged packet communication fee for viewing detail information from a channel list.

Trial service will be started automatically in principle when a predetermined period of time has elapsed after inserting UIM and starting to

use i-Channel compatible handset. When it is not started automatically, press  to start it. Trial service can be used only once for one subscriber line. Trial service will be terminated automatically when a predetermined period of time has elapsed after the start. For the procedure to terminate it halfway, see "i-mode User's Manual".


- For precautions and details of using the trial service, see "i-mode User's Manual".

## Using i-Channel

 When you have subscribed to i-Channel, information automatically appears as ticker on the wallpaper screen upon reception of information.

- To automatically display ticker, set "Ticker display set" to "ON". →P201
- When "Phone Lock" or "UIM PIN" is On, no ticker appears on the wallpaper screen even with "Ticker display set" set to "ON". Enter Handset Security Code to display ticker. (Checking the specifications)
- The ticker cannot be displayed when an i-appli Standby screen is set.

1

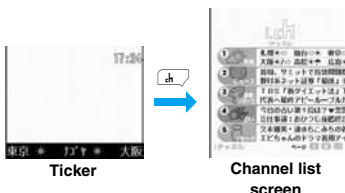



2

### Select a channel item

  The site is connected and detail information appears.

- : The channel list screen returns.

### Note

- Even when information is received, no ring alert or vibrator operates. In addition, reception lamp does not go ON or flashing. (Checking the specifications)
- Information may not be received when the FOMA handset is turned off, or when the signal reception is weak such as while out of the service area. In this case, select a channel for non-subscribers that appears by pressing  to receive information. The ticker on the Standby screen will show the information automatically. Also, information may not be received using the default settings. In this case, press  to receive information. The ticker on the Standby screen will show the information automatically.
- Depending on the operating conditions, information may be received at the timing a channel list is displayed.

- If you change the connection destination in "Host setting" of "i-mode setting", the connection destination of i-Channel is also changed. (Normally, you do not need to change the settings).
- A message to the effect of failure of channel information acquisition may appear in the following cases:
  - When i-Channel connection destination has been changed
  - When the handset has been initialized
  - When UIM has been replaced

### i-Channel Setting

## Setting i-Channel

Default	Ticker display set: ON Ticker speed set: Usually Ticker display: Font Color (Green)/ Background Color (Black)
---------	--

You can set whether to display ticker on the wallpaper screen or set the ticker display style.

### 1 Channel list screen (P201) [Function] Perform the following operations

#### Ticker display set

Set whether to display channel information in the ticker style on the wallpaper screen.

- ▶ "ON"/"OFF"

 
#### Ticker speed set


Set the ticker moving rate.

- ▶ "Low speed"/"Usually"/"High speed"

#### Ticker display

Set font color and/or background color of ticker.

 **Font Color** : Select a font color or "Default"  [Select].

**Background Color** : Select a background color or "Default"  [Select].

#### Swap

Call up another function such as phonebook or mail. →P226

### Note

#### Telop display

- When "Default" is selected, the default color is used.

# Data Display, Edit, Management/Music Playback

Databox.....	204
<b>Still Images</b>	
Displaying Images<Picture Viewer> .....	204
Editing Still Images<Edit Still Images>.....	207
<b>Video Clips/i-motion</b>	
Playing Videos/i-motion Movies<Video/i-motion Player> .....	208
Editing Videos/i-motion Movies<Edit Videos/i-motion Movies> .....	210
Using Albums<Picture Albums/i-motion Movie Album>.....	211
<b>Chara-den</b>	
What is Chara-den?<Chara-den> .....	213
<b>Melody</b>	
Playing Melodies<Melody Player> .....	214
Creating a Playlist<Playlist> .....	216
<b>Voice Notes</b>	
Using Voice Notes<Voice Notes> .....	218
<b>microSD Memory Card</b>	
microSD Memory Cards .....	221
Inserting/Removing a Memory Card .....	221
Structure of Folders on the Memory Card.....	222
Using a Memory Card.....	222
Reading and Writing to a Memory Card .....	222

---

## **Exchanging Data via Infrared Communication/Cable Connection**

<b>Infrared Communication&lt;Infrared Communication&gt;</b> .....	<b>223</b>
<b>Exchanging Data One Piece at a Time&lt;Ir data/IrDA link&gt;</b> .....	<b>223</b>
<b>Exchanging All Data&lt;Send All/Receive All&gt;</b> .....	<b>224</b>

## Databox

The Databox contains the items and folders shown in the following table. Data obtained from sites or i-mode mail are saved in folders according to their respective types.

My Pictures	
Pictures (All)	All still images saved in My Pictures
Camera	Still images captured by the Camera
i-mode/Other	Still images obtained from sites, via Email or data communications
Pre-installed	Still images provided by default
Picture Albums	Most Viewed
	User-created picture albums
i-motion	
i-motion (All)	All videos/i-motion movies saved in the i-motion folder
Camera	Videos captured by the Video Camera
i-mode/Other	Videos obtained from sites, via Email or data communications
Pre-installed	Videos provided by default
i-motion Albums	Most Viewed
	User-created i-motion albums
Melody	
Melody (All)	All melodies saved in Melody
i-mode/Other	Melodies obtained from sites, via Email or data communications
Pre-installed	Melodies provided by default
Playlists	Most Played
	User-created playlists
Artists	Lists per artists
Albums	Lists per albums
Genres	Lists per genre
Composers	Lists per composers
Chara-den	
Chara-den (All)	All Chara-den saved in Chara-den
i-mode/Other	Chara-den obtained from sites, via Email or data communications
Pre-installed	Chara-den provided by default
Animations	
Animations (All)	All Flash movies saved in Animation

i-mode/Other	Flash movies obtained from sites, via Email or data communications
Pre-installed	Flash movies provided by default
Voice Notes	
Voice Notes (All)	All Voice Notes saved in Voice Notes
My Notes	User-created categories

### ■ Notice

Stored content may be lost due to the handset failure, repair or mishandling. DoCoMo is not responsible for lost data. It is recommended that you keep saved content from the FOMA handset on a microSD memory card. You can connect the handset to a PC using data link software and a FOMA USB cable (optional) and save the data to the PC.

### Function Menu on the Databox

**Perform the following operations**

#### Now Playing/Hide

Show or hide the Playback screen for the melody played in background. →P214

#### Rename microSD

Specify a name to the initialized microSD memory card.

#### Format microSD

Format the microSD memory card.

#### Free Space

Display the free space on the handset or the microSD memory card.

### Picture Viewer

## Displaying Images

You can display still images you have captured, or obtained from sites or i-mode mail.

### ■ Available file formats

<b>File Format*</b>	JPEG, GIF, Flash
<b>Pixels</b>	1024 x 1280 dots or fewer
<b>File Size</b>	XXX Kbytes
<b>File Extension</b>	jpg, gif

\*: Even if a file is in a compatible file format, it may not display, depending on the file.



**1** (Databox) ▶ "My Pictures/ Animations"



My Pictures screen

**2** Select a folder ▶




Screen to be inserted

Image file list

**3** Select a file ▶



Still image display screen

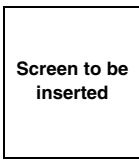 

Screen to be inserted

Flash playback screen

**Operations on the Image display screen**

Button/Key	Description
	Display the previous/next file
	Display the full screen (press  to restore the previous screen)
	Display a slide show of files in the folder
	Create i-mode mail with the file attached Go to Step 2 in "Creating and Sending i-mode Mail" (P172).

**Operations on the Flash movie playback Screen**

Button/Key	Description
	Display the previous/next file
	Increase/decrease the volume

**Icons Displayed on the image file list**

Icon	Description
\$★\$	Files saved on the handset
\$★\$	Files saved on the memory card

Function Menu on the My Pictures Screen

**1** My Pictures screen (P205) ▶ [Function] ▶ Perform the following operations

**Now Playing/Hide**

Show or hide the Playback screen for the melody played in background. →P216

**Create New**

Start the Camera.

▶ "Picture"

**Pictures Setup**

Specify how to display files in the folder. →P206

Function Menu on the My Picture Screen

**1** My Picture screen (P205) ▶ Select a file ▶ [Function] ▶ Perform the following operations

**Now Playing/Hide**

Show or hide the Playback screen for the melody played in background. →P216

**View**

Display the selected file.

**Play**

Play a Flash movie.

**Add To Album**

Add the selected file to an Album.

**Edit**

Edit the selected file. →P207

**Create New**

Start the Camera.

▶ "Pictures"

**Filter by**

Change the saving destination of the selected file. (Checking the specifications)

▶ "Storage Location"

**All** : Save the file to both the handset and memory card.

**Phone Memory** : Save the file to the handset.

**microSD** : Save the file to the memory card.

**Send**

**in Email** : Create i-mode mail with the file attached.  
Go to Step 2 in "Creating and Sending i-mode Mail" (P172).

**to IrDA** : Send one file using Infrared communication.

**to Bluetooth** : Send via Bluetooth. Go to Step 2 in "Registering and Connecting Bluetooth Device" (P239).

**Apply As**

Set the selected file as Wallpaper or Screen Saver.

**Wallpaper** : Set as Wallpaper.

**Screen Saver** : Set as the Screen Saver.

**Phonebook Entry** : Set to a Contact. Go to Step 2 in "Saving Contacts to the Phonebook from Received Calls or Dialed Calls" (P95).

**Camera Off Image** : Set the file as the alternate image for video calls.

**Manage**

Rename, delete, move or copy the selected file.

**Rename** : Change the name of the file.

**Delete** : Delete the selected file.

**Move** : Move the selected file to the handset or the memory card.

**Copy** : Copy the selected file to the handset or the memory card.

**Select Multiple to**

**Add To Album**: Select more than one file and add to an Album. Select a file to delete ► Press [Complete] ► [Yes].

**Delete** : Select multiple files and move to the other folders, etc.

**Move** : Select and move more than one file to another folder. Go to Step 3 in "Selecting and Moving/Copying Multiple Files".

**Copy** : Select and copy more than one file to another folder. Select a file to copy ► [Execute] ► Select a copying destination folder ► Press [Select].

**Details**

Display the file size, resolution and file format, etc. of the selected file.

► Scroll with [Function]

**Restrict File** : Restrict the file.

**Copy All Text** : Copy the file information.

**Pictures Setup**

Set the display method of the selected file. →P206

**Function Menu on the Image Display Screen**

**Image display screen (P205)** ►   
**[Function]** ► Perform the following operations

**View Full Screen**

Display an image to the whole screen.

- : Cancels the full-screen display.

**Add to Album**

Select a file and add to an Album.

**Create New**

Start the Camera.

► "Picture"

**Send**

**In Email** : Create i-mode mail with the file attached. Go to Step 2 in "Creating and Sending i-mode Mail" (P172).

**to IrDA** : Send one file using Infrared communication.

**to Bluetooth** : Send via Bluetooth. Go to Step 2 in "Registering and Connecting a Bluetooth Device" (P239).

**Apply As**

Set the displayed file as Wallpaper or Screen Saver.

**Wallpaper** : Set as Wallpaper.

**Screen Saver** : Set as the Screen Saver.

**Phonebook Entry** : Set to a Contact. Go to Step 2 in "Saving Contacts to the Phonebook from Received Calls or Dialed Calls" (P95).

**Camera Off Image**: Set the file as the alternate image for video calls.

**Manage**

Rename, delete, move or copy the displayed file.

**Rename**: Change the name of the file.

**Delete** : Delete the displayed file.

**Move** : Move the displayed file to the handset or the memory card.

**Copy** : Copy the displayed file to the handset or the memory card.

**Zoom**

**Fit-to-screen** : Display an image to the whole screen.

**50%** : Enlarge and display the file by 50%.

**75%** : Enlarge and display the file by 75%.

**Original Size** : Restore the original size of the enlarged image.

**Properties**

Display the file size, resolution and file format, etc. of the selected file.

► Scroll with [Function]

**Restrict File** : Restrict the file.

**Copy All Text** : Copy the file information.

**Video Quality**

Set the quality of the displayed Flash.

► "Good"/"Better"/"Best"

**Replay**

Play a Flash movie.

**Setting the Image Display**

Default	Auto Repeat: OFF Slide Interval: 4 seconds Full-Screen: Left (90 CCW)
---------	---

Set the display method for an image.

## 1 Image file list (P205) ▶ Select a file

▶ [Function] ▶ "Pictures Setup"



Pictures Setup screen

## 2 Select from the following items ▶ [Change]

### Auto Repeat

(Checking the specifications)

- ▶ "On"/"Off"

### Slide Interval

Set the interval for a slide show between 1 - 999 seconds.

- ▶ **Enter a number of seconds**
- [Function]: Edit the entered characters (number of seconds).

### Full Screen

Set the angle of the image to be displayed to full screen.

- ▶ "Left (90 CCW)"/"Right (90 CW)"

## Edit Still Images

### Editing Still Images

You can edit still images. Edited images are saved in "(Checking the specifications)".

- Only JPEG files can be edited. However, you may not be able to edit some files.

 
## 1 Image file list (P205)/Image file list in an Album (P211) ▶ Select a file ▶ [Function] ▶ "Edit" ▶ "Edit Picture"

The Edit Brightness screen opens.

## 2 Use to select the value for Brightness

▶ [Apply]

- The Brightness value can be selected from -3 - 0 - +3.

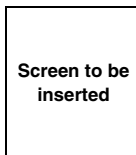

Edit image screen

## 3 Use to select from the following editing items

### Contrast

Set contrast of the image.

- ▶ Use to select the value ▶ [Apply]
- Select the contrast from -3 - 0 - +3.

### Blur/Sharpen

Set the sharpness of the image.

- ▶ Use to select the value ▶ [Apply]
- Select Blur/Sharp from -3 - 0 - +3.

### Mirror

Set the direction for mirroring the image. Set an option and press [Apply].

**None Selected:** Mirroring is not set. (Checking the specifications)

**Horizontal** : Invert the image horizontally.

**Vertical** : Invert the image vertically.

### Rotation

Set an angle to rotate an image.

- ▶ "0 Degrees"/"90 Degrees"/"180 Degrees"/"270 Degrees"
- ▶ [Apply]

### Borders

Add a frame to an image.

- ▶ "border1\_filename"/"border2\_filename"/"None Selected" ▶ [Apply]

### Image Style

Set special effects for an image. Set an option and press [Apply].

**None Selected** : No image effect is set. (Checking the specifications)

**Black&White** : Change the image into black and white.

**Negative** : Change the image into negative.

**Sepia** : Change the image into sepia tone.

**Solarize** : Invert the image horizontally.

**Reddish** : Emphasize red.

**Bluish** : Emphasize blue.

**Greenish** : Emphasize green.

## 4 [Save] (Checking the specifications)

### Function Menu on the Edit Image Screen

## 1 Image edit screen (P207) ▶ [Function] ▶ Perform the following operations

### Exit

End editing. (Checking the specifications)

### Save As

Save the edited image as a new file.

- ▶ **Set the following items** ▶ [Complete]

**File Name** : Enter a file name.

**Storage Location** : Select a location from "Phone"/"Memory Card".

### Save

Save an edited image.

### Undo

Restore the original image.

**Crop**

Trim away a fixed part of an image to a determined size.

- : Moves up or down. (Checking the specifications)
- [Function]: Select a cropping size or edit text to be added to an image. (Checking the specifications)

▶ "3.5x5"/"4x6"/"5x7"/"8x10"/

"8 1/4x11 3/4" (A4)"/"Manual" ▶ [Apply]

Screen to be inserted

Cropping screen

**Resize**

Change the size of the image.

- [Cancel]: Cancel resizing the image.

▶ Select a size ▶ ▶ [Yes] (Checking the specifications)

**Add Graphic**

Add a graphic to an image.

▶ Select a graphic ▶ [Select]

**Add Text**

Add text to an image.

▶ Set the following items ▶ [Complete]

**Text** : Enter text to add to the image.

**Font Size** : Select a font size from "Large"/"Standard"/"Small".

**Text Color** : Select a text color from 9 colors.

Screen to be inserted

Adding text screen

**Note****Borders/Crop/Add Graphic/Add Text**

- "Borders", "Crop", "Add Graphic" and "Add Text" cannot be set for an image of 120 x 160 dots or smaller.

**Resize**

- You cannot "Resize" an image to a larger size than the original image.

**Add Text**

- "Add Text" cannot be set for an image of 640 x 480 dots or larger.

**Video/i-motion Player****Playing Videos/i-motion Movies**

 
You can play video clips you have captured, or i-motion movies obtained from sites or i-mode mail.

**Available file formats**


<b>File Format*</b>	MP4 (Mobile MP4)
<b>Encoding Method</b>	MP4 file Graphics: (Checking the specifications) Audio: (Checking the specifications)

<b>File Extension</b>	mp4 and 3gp
-----------------------	-------------


\*: Even if a file is in a compatible file format, it may not play, depending on the file.

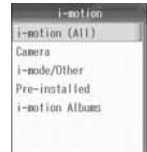**1** ▶ (Databox) ▶ "i-motion"

 
i-motion screen

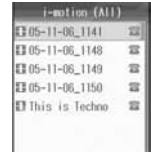**2** Select a folder ▶ 

 i-motion file list

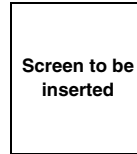**3** Select a file ▶ 

 i-motion playback screen

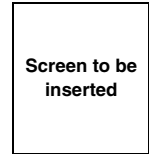

i-motion with ticker screen

**When the ticker has highlighted text**

Select the highlighted area to use the Web To or Mail To function. Select the highlighted area ▶ Press

▶ [Yes].

**Operations on the i-motion playback screen**

Button/Key	Description
	Pause/Play
	Fast Forward/Rewind

**Operations on the i-motion with ticker screen**

Button/Key	Description
	Pause/Play
(while a ticker is selected)	Perform Phone To, AV Phone To, Web To or Mail To function

**Function Menu on the i-motion Screen****1** i-motion screen (P208) ▶ [Function] ▶ Perform the following operations**Now Playing/Hide**

Show or hide the Playback screen for the melody played in background. →P216

## Create New


Start the Video Camera.

▶ "i-motion"

## i-motion Setup

Set the playback method of the selected file. →P210

### Function Menu on the i-motion File List

**i-motion file list (P208) ▶ Select a file**  
▶  [Function] ▶ Perform the following operations

## Now Playing/Hide

Show or hide the Playback screen for the melody played in background. →P216

## Play

Play the selected file.

## Add to Album

Add the selected file to an Album.

## Edit

Edit the selected file. →P210

## Create New

Start the Video Camera.

▶ "i-motion"

## Filter by

Change the saving destination of the selected file. (Checking the specifications)

▶ "Storage Location" ▶ Select from the following items

**All** : Save the file to both the handset and memory card.

**Phone Memory** : Save the file to the handset.

**microSD** : Save the file to the memory card.

## Send

**In Email** : Create i-mode mail with the file attached. Go to Step 2 in "Creating and Sending i-mode Mail" (P172).

**to IrDA** : Send one file using Infrared communication.

**to Bluetooth** : Send via Bluetooth. Go to Step 2 in "Registering and Connecting a Bluetooth Device" (P239).

## Apply As

Set the selected file as a Screen Saver or ringtone.

**Screen Saver** : Set as the Screen Saver.

**Incoming Call Alert** : Set as a ringtone.

**Alarm** : Set as an alarm tone.

## Manage

Rename, delete, move or copy the selected file.

**Rename** : Change the name of the file.


 
 
**Delete** : Delete the selected file.


 
 
**Move** : Move the selected file to the handset or the memory card.


 

**Copy** : Copy the selected file to the handset or the memory card.

## Select Multiple to

**Add to Album** : Select more than one file and add to an Album.

**Delete** : Select and delete more than one file. Select a file to delete ▶ Press   [Complete] ▶  \$★\$ [Yes].

**Move** : Select and move more than one file to another folder. Select a file to move ▶   [Complete] ▶ Select a destination folder ▶ Press  [Select].

**Copy** : Select and copy more than one file to another folder. Select a file to copy ▶   [Execute] ▶ Select a copying destination folder ▶ Press  [Select].

## Details

Display the file name, size and author, etc. of the selected file.

▶ **Scroll with**   [Function]

 
**Restrict File** : Restrict the file.

**Copy All Text** : Copy the file information.

## i-motion Setup

Set the playback method of the selected file. →P210

### Function Menu on the i-motion Playback Screen

**i-motion playback screen (P208) ▶  [Function] ▶ Perform the following operations**

## Edit

Edit the i-motion that is in playback. →P210

## Add to Album

Select a file and add to an Album.

## Create New

Start the Video Camera.

▶ "Video"

## Send

**In Email** : Create i-mode mail with the file attached. Go to Step 2 in "Creating and Sending i-mode Mail" (P172).

**to IrDA** : Send one file using Infrared communication.

**to Bluetooth** : Send via Bluetooth. Go to Step 2 in "Registering and Connecting a Bluetooth Device" (P239).

## Apply As

Set the file in playback as a Screen Saver or ringtone.

**Screen Saver** : Set as the Screen Saver.

**Incoming Call Alert** : Set as a ringtone.

**Alarm** : Set as an alarm tone.

**Video Call Alert** : Set as the video call ringtone.

**Video Call Message** : (Checking the specifications)

**Email Message Alert** : Set as an Email ringtone.

**R/F Message Alert** : Set as a ringtone for Messages R/F.

**Calendar Alarm** : Set as an alarm tone for a Datebook event.

**Manage**

Delete, move or copy the file in playback.

**Delete:** Delete the file in playback.

**Move :** Move the file in playback to the handset or the memory card.

**Copy :** Copy the file in playback to the handset or the memory card.

**Details**

Display the file name, size and author, etc. of the file in playback.

▶ **Scroll with**   **[Function]**

**Restrict File :** Restrict the file.

**Copy All Text :** Copy the file information.

**Movies Setup**

 
Set the playback method of the file in playback. →P210

### Setting Videos/i-motion Movies Playback Method

Default


Auto Repeat: Off  
Fit-to-screen: Left (90 CCW)

Set the playback method for i-motion movies.

- i-motion file list (P208) / i-motion playback screen (P208)** ▶  **[Function]** ▶ "i-motion Setup"/"Movies Setup"



 i-motion setup screen

- Select from the following items ▶  **[Change]**

**Auto Repeat**

(Checking the specifications)

▶ "On"/"Off"

**Full Screen**

Set the angle of the image to be displayed to full screen.

▶ "Left (90 CCW)"/"Right (90 CW)"

 
**Edit Videos/i-motion Movies**

### Editing Videos/i-motion Movies

You can edit videos/i-motion movies. Edited videos/i-motion movies are saved in "(Checking the specifications)".

- Some files may not be edited.

### Opening the Videos/i-motion Movies Edit Screen


 
- i-motion file list (P208) / i-motion playback screen (P208)** ▶  **[Function]** ▶ "Edit"

Screen to be inserted

Video/i-motion movie edit screen

### Cropping a Video

You can crop a part of a video image while playing back a video/i-motion movie.

- Video/i-motion movie edit screen (P210)**  
▶ "Extract clip"  
•  : Play a video/i-motion movie
- Specify a starting point for cropping  
▶  **[Select]**

Screen to be inserted

Cropping screen


 
- Specify a cropping action ▶  **[Select]**

Screen to be inserted

- Specify an ending point ▶  **[Yes]**

### Cropping a Part of a Video as a Still Image

You can crop a still image from a video/i-motion movie.

- Video/i-motion movie edit screen (P210)**  
▶ "Extract still"
- Select an image to crop ▶ 
-  **[Save]**

 
 
## Compressing Video Files

- 1** Video/i-motion movie edit screen (P210)
  - ▶ "Compress"
- 2** "i-mode Mail (Small)"/"i-mode Mail (Large)"

## Deleting Sounds or Graphics from Videos

- 1** Video/i-motion movie edit screen (P210)
  - ▶ "Delete track"
- 2** "Video track"/"Audio track"/"Ticker"


## Recording Sounds to Videos (Checking the specifications)

- 1** Video/i-motion movie edit screen (P210)
  - ▶ "Record audio"
- 2** "Record new track"/"Use existing audio file"
  - **To record new audio**  
The original audio of the video/i-motion movie will be deleted. Press  [Yes] to select "Record new track".
- 3**  [Save]

## Picture Albums/i-motion Movie Album

 
### Using Albums

You can save captured still images/videos or files in My Pictures/i-motion in an Album and manage them.

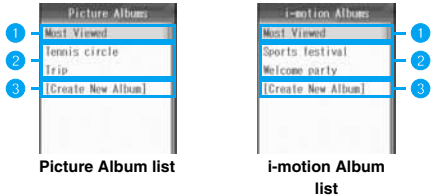

- 1 Most Viewed**  
The Album with files that are most viewed (20 files).
- 2 User-defined Albums**  
The created Album name is displayed.
- 3 Create New Album**  
Create a new Album.

## Function Menu on the Album List

 - 1** Picture Album list (P211)/i-motion Album list (P211)
  - ▶  [Function] ▶ Perform the following operations

**Now Playing/Hide**  
Show or hide the Playback screen for the melody played in background. →P216

**View**  
Display the images in the selected Album.

**Play**  
Play the i-motion movies in the selected Album.

**Create New**  
Start the Camera/Video Camera and create a new Album.  
**Picture** : Start Camera.  
**i-motion File** : Start the Video Camera.  
**Album** : Creates a new Album. →P211

**Manage**  
Delete, move or copy the file in playback.  
**Rename** : Change the name of the Album.  
**Remove** : Deletes the selected Album.

**Pictures Setup**  
Specify how to display files in an Album. →P206

**i-motion Setup**  
Specify how to play files in an Album. →P208


## Saving Images to an Album

 - 1** Picture Album list (P211)/i-motion Album list (P211)
  - ▶ "[Create New Album]"




Folder selection screen  
(Example: Picture Album)

- 2** Select a folder ▶  [Open]
- 3** Select a file to save in an Album

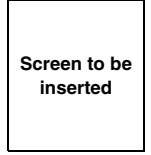

 
Screen to be inserted  
Example: Add picture screen

- Select  [Function] ▶ "Select All" to select all files in the folder at once.

## 4 [Complete] ▶ Enter an album name
 
### Displaying Images in an Album

#### 1 Picture Album list (P211)/i-motion Album list (P211) ▶ Select an Album

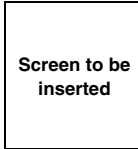

File list in a Picture Album



File list in an i-motion Album

#### 2 Select a file

##### ■ Icons displayed on the file list in an album

Icon	Description
\$★\$	Files saved on the handset
\$★\$	Files saved on the memory card
\$★\$	Select a file to save in an Album.

### Function Menu on the File List of an Album

#### 1 File list in an i-motion Album (P211)/File list in an i-motion Album (P211) [Function] ▶ Perform the following operations

##### Now Playing/Hide

Show or hide the Playback screen for the melody played in background. →P216

##### View

Display the selected image.

##### Replay

Plays the selected i-motion movie.

##### Edit Picture

Edit the selected image. →P207

##### Edit

Edit the selected i-motion movie. →P210

##### Create New

Start the Camera/Video Camera.

▶ "Pictures"/"Video Camera"

### Sort by

Change the saving destination of the selected file. (Checking the specifications)

**All** : Save the file to both the handset and memory card.

**Phone Memory** : Save the file to the handset.

**Memory Card** : Save the file to the memory card.

### Send

**In Email** : Create i-mode mail with the file attached. Go to Step 2 in "Creating and Sending i-mode Mail" (P172).

**to IrDA** : Send one file using Infrared communication.

**to Bluetooth** : Send via Bluetooth. Go to Step 2 in "Registering and Connecting a Bluetooth Device" (P239).

### Apply As

Set the selected file as Wallpaper or Screen Saver.

**Wallpaper** : Set as Wallpaper.

**Screen Saver** : Set as the Screen Saver.

**Incoming Call Alert** : Set as a ringtone.

**Phonebook Entry** : Set to a Contact. Go to Step 2 in "Saving Contacts to the Phonebook from Received Calls or Dialed Calls" (P94).


 
**Camera Off Image** : Set the file as the alternate image for video calls.

**Alarms** : Set as an alarm tone.

### Manage

Delete or sort the selected file.

**Remove** : Delete files.



**Reorder** : Rearrange files. Select a file  [Move] ▶ Select a destination ▶ Press  [Insert].

### Select Multiple to

**Add More Pictures** : Select a file to save in an Album.

**Add i-motion** : Select a file to save in an Album.

**Remove** : Select and delete more than one file.

Select a file to delete ▶ Press   [Complete] ▶ \$★\$ [Yes].

### Details

Display the file size and file format, etc. of the selected file.

▶ Scroll with   [Function]

**Restrict File** : Restrict the file.

**Copy All Text** : Copy the file information.

### Pictures Setup

Set the display method of the selected file. →P206

### i-motion Setup

Set the playback method of the selected file. →P210

- Items displayed on the function menu vary depending on the selected files and settings on the handset.



# What is Chara-den?

Chara-den is an animation character representing you (an avatar) that can be sent to the other party as an alternate image instead of your own image during a video call.

## ■ Chara-den registered by default



DJ



 
ブンブン (Dimo)  
©BVIg

## ■ Pre-installed Chara-den

Key	DJ	Dimo
1	Happy (Laugh)	Sadness
2	Angry	Anger
3	Cry (Sad)	Surprise
4	Shock (Surprise)	In love
5	Thank you	Let's eat
6	I'm sorry	Sorry
7	Bye bye	Sleep
8	Yes (OK)	Lonely
9	No (No way)	Hot spring

## Displaying/Controlling Chara-den

### 1 ●▶ \$★\$ (Databox) ▶ "Chara-den"

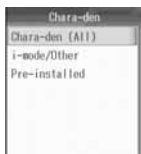

Chara-den screen

### 2 Select a folder ▶ ●



Chara-den list

### 3 Select Chara-den ▶ ●

- ◀▶: Display the previous/next file
- 🔍: Enlarge the image/Restore the original size

Screen to be inserted

Chara-den playback screen

## Function Menu on the Chara-den List

### 1 Chara-den list (P213) ▶ Select a Chara-den ▶ [Function] ▶ Perform the following operations

#### Now Playing/Hide

Show or hide the Playback screen for the melody played in background. →P216

#### Play

Play the selected Chara-den.

#### Apply As

Set the selected Chara-den as the alternate image for the videocall or to a Contact.

**Camera Off Image** : Set as the alternate image for the videocall.

**Phonebook Entry** : Set to a Contact. Go to Step 2 in "Saving Contacts to the Phonebook from Received Calls or Dialed Calls" (P94).

#### Manage

Rename or delete the selected Chara-den.

**Edit title** : Change the name of the Chara-den.

**Remove** : Delete the selected Chara-den.

#### Select Multiple to

Select and delete more than one Chara-den. Select Chara-den to delete ▶ Press [Complete] ▶ \$★\$

#### Details

Display the file size and file format, etc. of the selected Chara-den.

▶ Scroll with [Function]

**Restrict File** : Apply the restriction to files.

**Copy All Text** : Copy the file information.

## Function Menu on the Chara-den Playback Screen

### 1 Chara-den playback screen (P213) ▶ [Function] ▶ Perform the following operations

**Enter V-Phone No.**

Make a video call using the Chara-den in playback as the alternate image.

**Enter Number** : Make a call by entering a phone number directly. →P80

**Phonebook** : Make a call by searching the phonebook. →P97

**Received Calls** : Make a call by searching through Received Calls. →P67

**Dialed Calls** : Make a call by searching through Dialed Calls. →P56

**Set Chara-den**

Set the selected Chara-den as the alternate image for video calls.

**Detail Info**

Display the file size and file format, etc. of the Chara-den in playback.

- [Function]: Copy the content of the detailed information screen. Select "Copy All Text".

**Delete**

Delete the Chara-den in playback.

**Change Size**

Change the display size of the Chara-den in playback. (Checking the specifications)

- : Enlarge the image/Restore the original size

**Chara-den Function****▶ "Change Action"**

Switches the character action mode.

**Partial Action Mode** : The character uses a part of the body to express actions.

**Full Action Mode** : The character uses the whole body to express actions.

**▶ "Action List"**

Lists all actions assigned to operation keys.

- Select an action ▶ Press [Select] to make the character show the selected action.

 
 
**Melody Player****Playing Melodies**

You can play pre-installed melodies or melodies downloaded from sites.

**■ Available File Formats**

<b>File Format*</b>	SMF, MFI
<b>File Extension</b>	mid, mld, midi


\*: Even a file in a compatible file format may not play depending on the file.

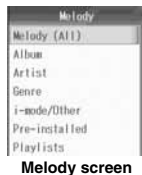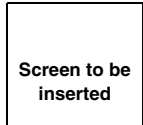**1** (Databox) ▶ "Melody"**Melody screen****2** Select a folder ▶ **Melody file list****3** Select a file ▶ **Screen to be inserted****Melody playback screen****■ Operations on the Melody playback screen**

Button/Key	Description
	Pause/Play
	Play the previous/next file
	Adjust the volume

**■ Playing a melody with the FOMA handset folded(Checking the specifications)**

 If you fold the FOMA handset during melody playback, the artist name and song title are displayed on the Sub-display.

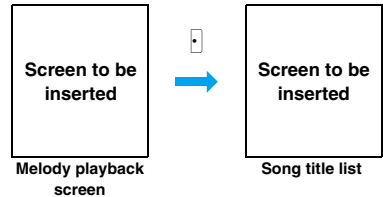**■ Sub-display****Melody playback screen****Song title list****■ Key operation on the Melody playback screen**


Key	Description
	Open the Song title list
(press for X second or longer)	Stop melody playback
	Adjust the volume

**■ Key operation on the Song title list**

 - The Song title list returns to the Melody playback screen after five seconds.

Key	Description
	Pause/Play
(press for X second or longer)	Stop melody playback
	Adjust the volume
	Display the previous/next song title in the list

## Function Menu on the Melody Screen

**Melody screen (P214)**  **[Function]**  
**▶ Perform the following operations**


### Now Playing/Hide

 Show or hide the Playback screen for the melody played in background. →P216

### Melody Setup

Set the playback method and sound quality of the melodies in the selected folder. →P216

## Function Menu on the Melody File List

**Melody file list (P214)** **▶ Select a file**  
 **[Function]** **▶ Perform the following operations**

### Now Playing/Hide

Show or hide the Playback screen for the melody played in background. →P216

### Play

Play the selected melody.

### Add To Playlist

Add the selected file to a Playlist.

### Filter by

Change the saving destination of the selected melody.  
 (Checking the specifications)

**All** : Save the file to both the handset and memory card.

**Phone Memory** : Save the file to the handset.

**microSD** : Save the file to the memory card.

### Send

**In Email** : Create i-mode mail with the file attached. Go to Step 3 in "Creating and Sending i-mode Mail" (P172).

**to IrDA** : Send 1 file using Infrared communication.

**to Bluetooth** : Send via Bluetooth. Go to Step 2 in "Registering and Connecting a Bluetooth Device" (P239).

### Apply As

Set the selected melody as a ring tone or to a Contact.

**Incoming Call Alert** : Set as a ringtone.

**Phonebook Entry** : Set to a Contact. Go to Step 2 in "Saving Contacts to the Phonebook from Received Calls or Dialed Calls" (P94).

**Alarm** : Set as an alarm tone.

### Manage

Rename, delete, move or copy the selected melody.

**Edit title** : Change the title of the selected melody.


**Remove** : Delete the selected melody.

 

**Move** : Move the selected melody to the handset or the memory card.


 
**Copy** : Copy the selected melody to the handset or the memory card.

### Select Multiple to

**Add to Playlist** : Select more than 1 melody and add to a Playlist.

**Delete** : Select and delete more than 1 melody. Select melodies to delete **▶** Press  **[Complete]** **▶** **\$★\$** [Yes].

**Move** : Select and move more than 1 melody to another folder. Select melodies to move **▶**  **[Complete]** **▶** Select a destination folder **▶** Press  [Select].

**Copy** : Select and copy more than 1 melody to another folder. Select melodies to copy **▶**  **[Execute]** **▶** Select a copying destination folder **▶** Press  [Select].

### Details

Display the name and size, etc. of the selected melody.

**▶ Scroll with**   **[Function]**

 
**Restrict File** : Apply the restriction to files.

**Copy All Text** : Copy the file information.

### Melody Setup

Set the playback method and sound quality of the selected melody. →P216

## Function Menu on the Melody Playback Screen

**Melody playback screen (P214)**  **[Function]** **▶ Perform the following operations**

### Add To Playlist

Add the melody in playback to a Playlist.

### Send

**In Email** : Create i-mode mail with the file attached. Go to Step 3 in "Creating and Sending i-mode Mail" (P172).

**to IrDA** : Send 1 file using Infrared communication.

**to Bluetooth** : Send via Bluetooth. Go to Step 2 in "Registering and Connecting a Bluetooth Device" (P239).

### Apply As

Set the melody in playback as the alternate image or to a Contact.

**Incoming Call Alert** : Set as a ringtone.

**Phonebook Entry** : Set to a Contact. Go to Step 2 in "Saving Contacts to the Phonebook from Received Calls or Dialed Calls" (P94).

### Manage

Reorder, delete, move or copy the melody in playback.

**Reorder** : Rearrange melodies. Select a melody ▶ [Fn] [Move] ▶ Select a destination ▶ Press [Fn] [Insert] ▶ [Fn] [Complete].

**Delete** : Delete the melody in playback.

**Move** : Move the melody in playback to the handset or the memory card.

**Copy** : Copy the melody in playback to the handset or the memory card.

**Remove** : (Checking the specifications)

### File Details

Display the name and size, etc. of the melody in playback.

▶ Scroll with [Fn] [Function]

**Restrict File** : Apply the restriction to files.

**Copy All Text** : Copy the file information.

### Melody Setup

Set the playback method and sound quality of the melody in playback. →P216

### Hide

Return to the stand-by display. (Checking the specifications)

## Using Another Function while Playing a Melody

You can call up and use another option while playing a melody.

■ Functions available during the background playback (Checking the specifications)

Function	

**Melody playback screen (P214)** ▶ [Fn] [Function] ▶ "Hide"

Close the Melody playback screen and display the stand-by display. The melody in playback is played in background.

■ To return to the melody playback screen You can display the Melody playback screen from the function menu of each screen.

- ▶ [Fn] [Function] ▶ Select "Now Playing"

## Setting the Playback Method and Sound Quality of Melodies

Default

Auto Repeat: Off Equalizer: On  
Spatial Audio: (Checking the specifications)  
Bass Boost: (Checking the specifications)

Set the playback method and sound quality of the melody.

**1 Melody screen (P214)/Melody file list (P214)/Melody playback screen (P214)** ▶ [Fn] [Function] ▶ "Melody Setup"



Melody Setup screen

**2 Select from the following items** ▶ [Fn] [Change]

### Auto Repeat

(Checking the specifications)

▶ "On"/"Off" ▶ [Fn] [Select]

### Equalizer

▶ "On"/"Off" ▶ [Fn] [Select]

### Spatial Audio

▶ "On"/"Off" ▶ [Fn] [Select]

### Bass Boost

▶ "On"/"Off" ▶ [Fn] [Select]

## Playlist

### Creating a Playlist

You can create a Playlist for your favorite melodies.

**1 Melody screen (P214)** ▶ "Playlists"

Screen to be inserted

Playlist screen

### 1 Most Played

Files played many times (●●files) are automatically saved in the Playlist.

## 2 User-defined Playlists

The created Playlist name is displayed.

 
 
## 3 Create New Playlist


Create a new Playlist.

2 "[Create New Playlist]" 

3 Select a folder  [Open]

4 Select a melody to save in the Playlist

 - Select  [Function]  "Select All" to select all melodies in the folder at once.

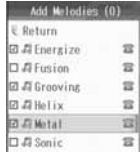

Add melody screen

5  [Complete]  Enter a Playlist name

### Function Menu on the Playlist Screen

1 Playlist (P216)  [Function]  Perform the following operations

#### Now Playing/Hide

Show or hide the Playback screen for the melody played in background. →P216

#### Play

Play a melody.

#### Create New

Creates a new Playlist.

#### Manage

Delete or rename Playlists.

**Rename** : Change the title of the selected Playlist.

**Delete** : Deletes the selected Playlist.



#### Melody Setup

Set the playback method and sound quality of the melody in playback. →P216

### Editing Playlists

You can change the content of the created Playlists by deleting or adding melodies.


### Adding Melodies

 
 
1 Playlist screen (P216)  Select a Playlist 



Playlist list



2 "Add More Melodies" 

3 Select a melody 


- Select  [Function]  "Select All" to select all melodies in the folder at once.

4  [Complete]




### Deleting Melodies

1 Playlist list (P216)  Select a Playlist 

2 Select a melody  [Function]  "Manage"  "Delete"

- To select and delete more than one melody  
Press  [Function] and go to Step 3 in "Selecting and Deleting Multiple Files".

### Function Menu on the Playlist List

1 Playlist list (P217)  Select a Playlist   Perform the following operations

#### Now Playing/Hide

Show or hide the Playback screen for the melody played in background. →P216

#### Play

Play a melody.

#### Filter by

Change the saving destination of the selected melody. (Checking the specifications)

#### "Storage Location"

**All** : Save the file to both the handset and memory card.

**Phone Memory** : Save the file to the handset.

**microSD** : Save the file to the memory card.